Pioneer sound.vision.soul

Service Manual

ORDER NO.
ARP3099

PROJECTION MONITOR RECEIVER

PRO-720HD
PRO-620HD
PRO-520HD

THIS MANUAL IS APPLICABLE TO THE FOLLOWING MODEL(S) AND TYPE(S).

Type	Model			Power Requirement	Remarks
	PRO-720HD	PRO-620HD	PRO-520HD		
KUXC/CA	○	○	○	AC120V	

● **This service manual should be used together with the following manual(s):**

Model No.	Order No.	Remarks
PRO-720HD PRO-620HD PRO-520HD	ARP3095	SAFTY INFORMATION, EXPLODED VIEWS AND PARTS LIST, BLOCK DIAGRAM AND SCHEMATIC DIAGRAM, PCB CONNECTION DIAGRAM, PCB PARTS LIST

CONTENTS

6. ADJUSTMENT 184
7. GENERAL INFORMATION 207
  7.1. DIAGNOSIS 207
    7.1.1 DIAGNOSIS METHOD 207
    7.1.2 DISASSEMBLY 212
    7.1.3 WIRING DIAGRAM 214
  7.2 IC 216
  7.3 EXPLANATION 239
8. PANEL FACILITIES AND SPECIFICATIONS 252

PIONEER CORPORATION 4-1, Meguro 1-chome, Meguro-ku, Tokyo 153-8654, Japan
PIONEER ELECTRONICS (USA) INC. P.O. Box 1760, Long Beach, CA 90801-1760, U.S.A.
PIONEER EUROPE NV Haven 1087, Keetberglaan 1, 9120 Melsele, Belgium
PIONEER ELECTRONICS ASIACENTRE PTE. LTD. 253 Alexandra Road, #04-01, Singapore 159936

© PIONEER CORPORATION 2001

T – ZZY SEPT. 2001 Printed in Japan

6. ADJUSTMENT

6.1 INTRODUCTION

• IMPORTANT

When replacement of the following assemblies are required during repairs, be sure to replace the EEPROMs with the mounted ones in order to retain the adjustment data of the unit and to facilitate adjustment after the replacement of the assemblies.

Name of Assy	EEPROM	Main Contents of Memory
SIGNAL Assy	IC2454 [24LC32(I)P]	Adjustment data, such as W/B and color data, in FACTORY mode User data set on the MENU
DIGITAL CONV. Assy	IC1410 [24LC128P]	Convergence adjustment data
	IC1656 [24LC08B(I)P]	Convergence offset data

Notes:

- Even if the EEPROMs are replaced, adjustment may be necessary, depending on the part or assembly to be replaced. For details, see page 186.
- Even if the EEPROMs are replaced, if the EEPROMs are damaged or if their data have been changed from the adjustment data, the status before the failure will not be restored. Check the status of the unit after replacement of the EEPROMs, and readjust if necessary.

6.2 JIGS AND MEASURING INSTRUMENTS

Remote control unit AXD1458	⊖ Screwdriver	⊖ Adjustment screwdriver	 Color bar generator
 D. DC Voltmeter	 LD Player	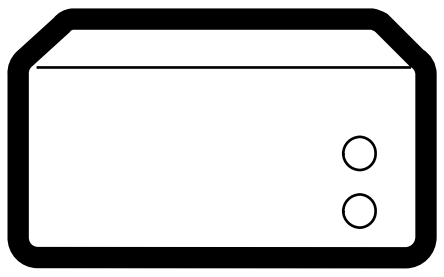 Monoscope	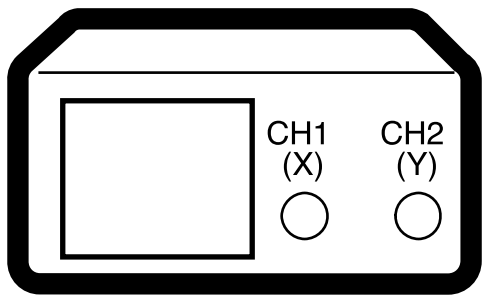 Dual-trace oscilloscope
 Frequency counter	For HD Signal generator		

6.3 ADJUSTMENT LOCATION AND ITEMS

■ Assembly Adjustment Location

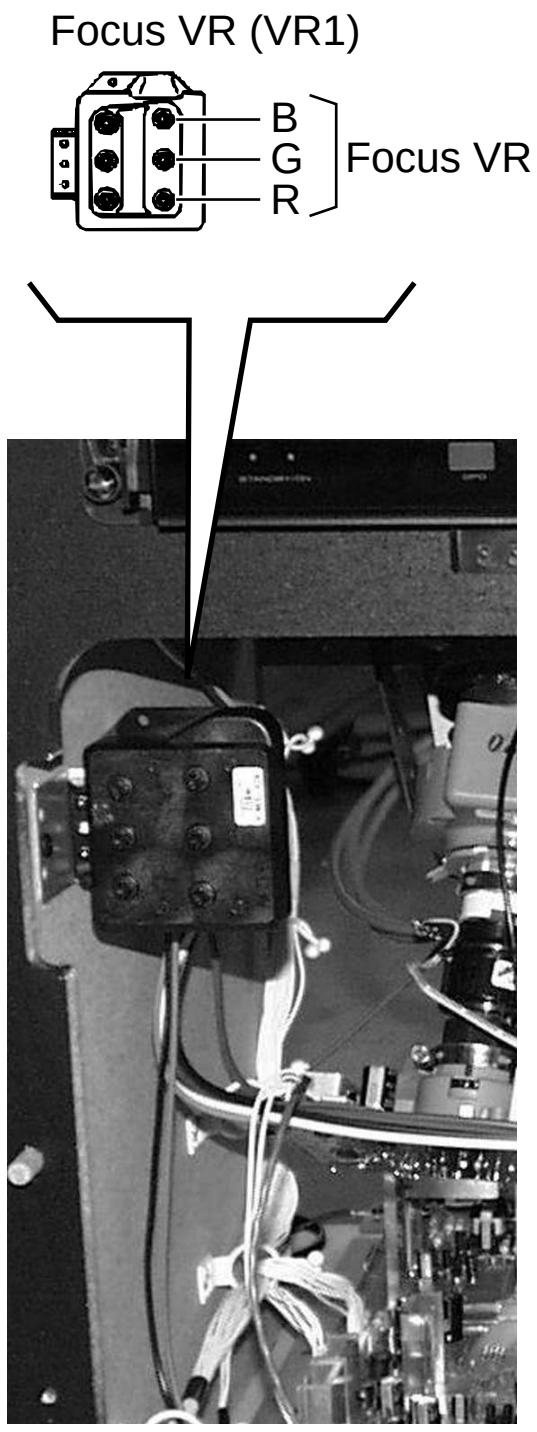
Focus VR (VR1)
B
G
R
Focus VR

Front View

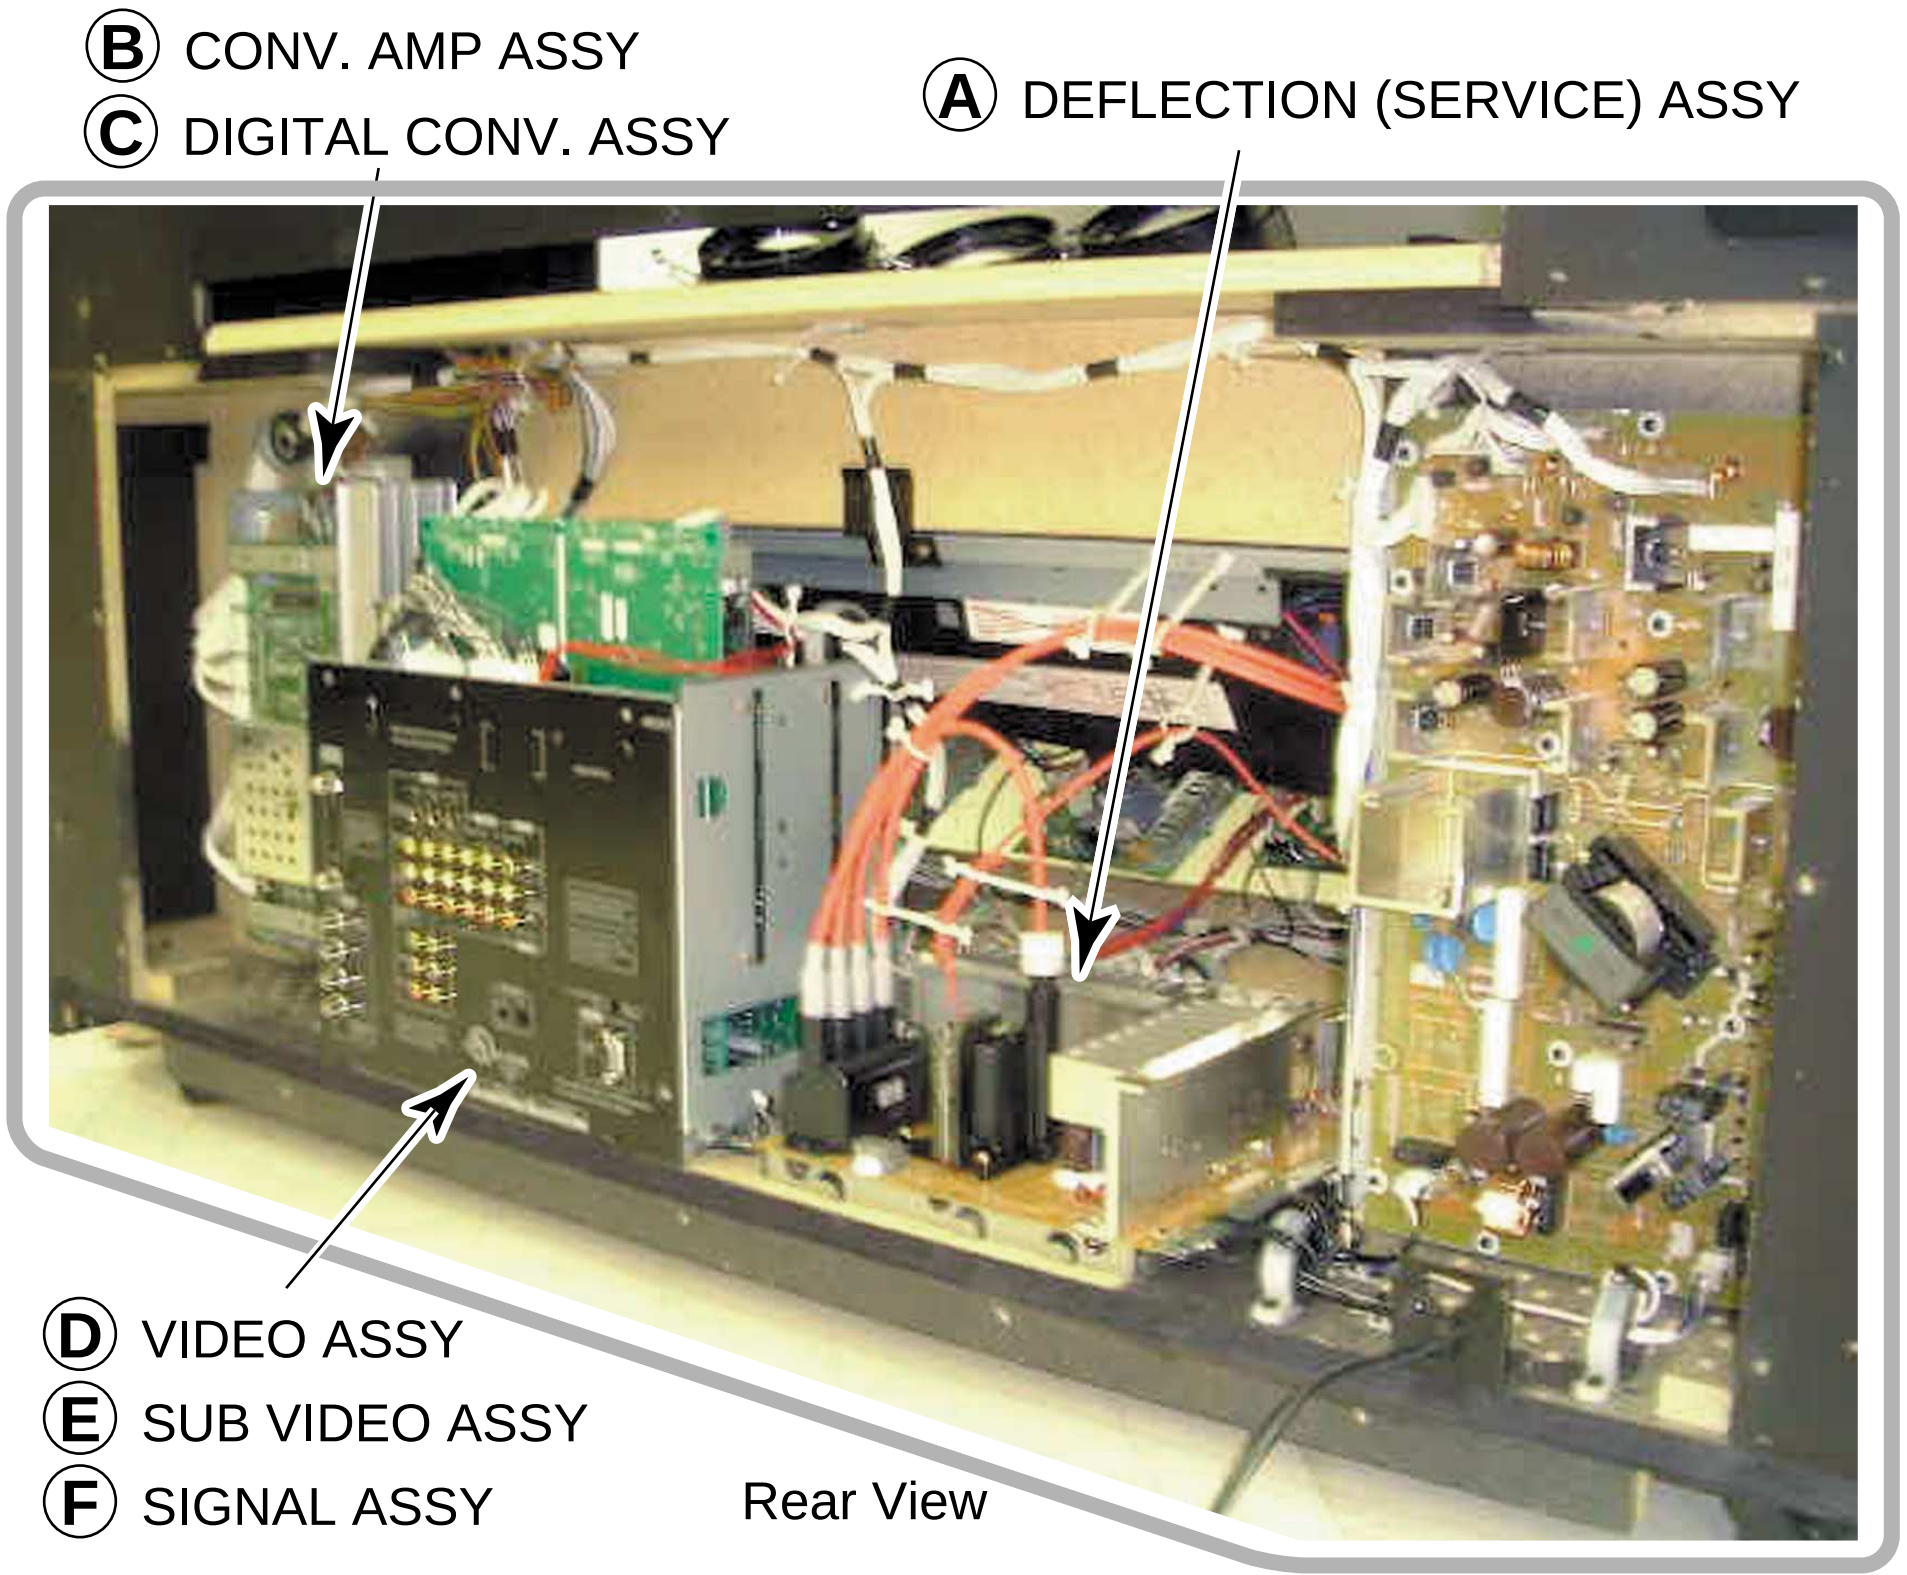
Ⓑ CONV. AMP ASSY
Ⓒ DIGITAL CONV. ASSY
Ⓐ DEFLECTION (SERVICE) ASSY
Ⓓ VIDEO ASSY
Ⓔ SUB VIDEO ASSY
Ⓕ SIGNAL ASSY

Rear View

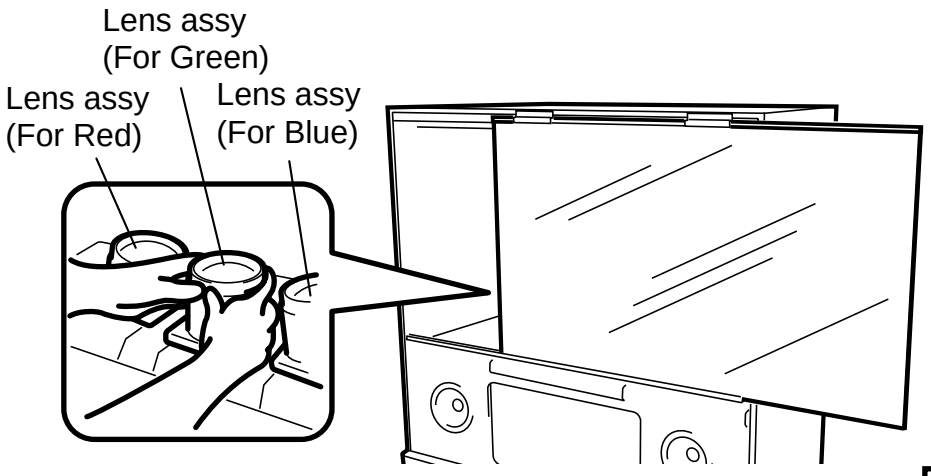
Lens assy
(For Green)
Lens assy
(For Red)
Lens assy
(For Blue)

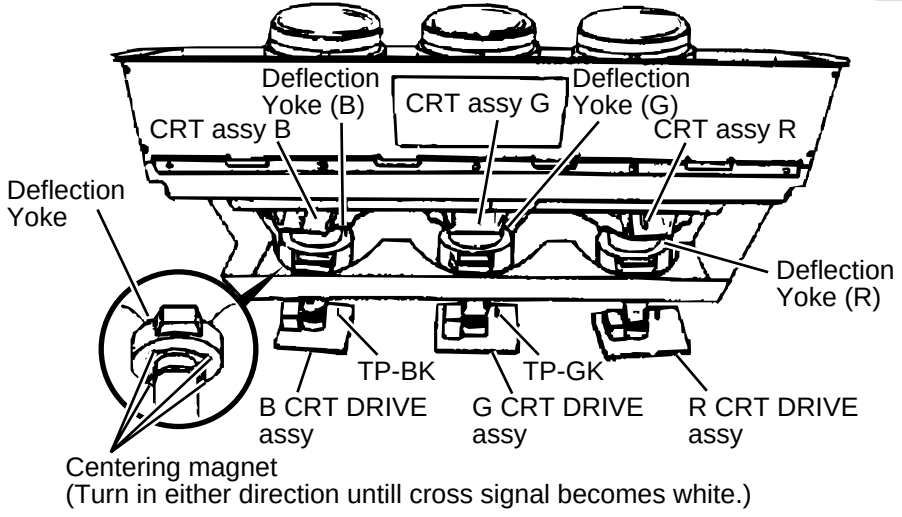
Deflection
Yoke (B)
CRT assy G
Deflection
Yoke (G)
CRT assy B
CRT assy R
Deflection
Yoke
Deflection
Yoke (R)
TP-BK
TP-GK
B CRT DRIVE
assy
G CRT DRIVE
assy
R CRT DRIVE
assy
Centering magnet
(Turn in either direction untill cross signal becomes white.)

■ Adjustment Items

- ❶ Brightness Adjustment
- ❷ Deflection Yoke Adjustment
- ❸ Focus Adjustment
- ❹ Test-cross Position Check
- ❺ Screen Size Adjustment
- ❻ Convergence Adjustment
- ❼ White Balance Adjustment
- ❽ Panel Adjustment
- ❾ Panel Adjustment for DTV

MEASURING METHOD

Disconnect the FBT anode cable as shown below.
Measure at the point where the cable enters the FBT.

Caution : Take extra precaution when measuring the voltage. High voltage are also present in surrounding circuit boards. (CRT assy, POWER SUPPLY assy)

SERVICEMAN WARNING
Before removing the anode cable, turn off the power, unplug the AC plug and let the unit discharge for more than 1 minut.

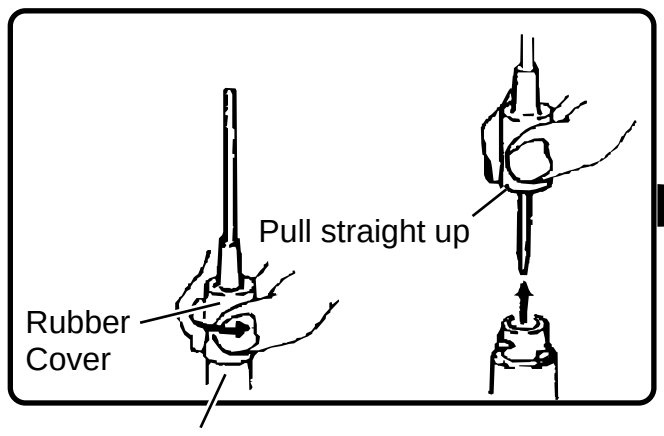
Pull straight up
Rubber
Cover

Holding the rubber cover firmly, turn counterclockwise and check that the lock has been disengaged.

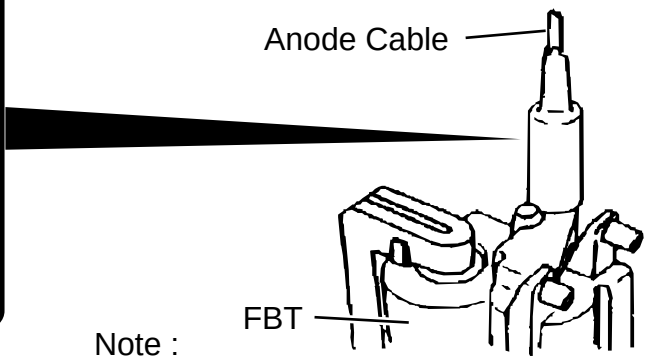
Anode Cable
FBT

Note :
When reconnecting the cable, proceed in the reverse order. After reconnecting, tug on the cable to check that it is secure.

■ Assembly Adjustment Location Guide

If POWER SUPPLY ASSY	is repaired or replaced	No adjustment is required
If DEFLECTION SERVICE ASSY	is repaired or replaced	❶ Brightness Adjustment (*2) ❸ Focus Adjustment (VR1: FOCUS VR) (*2) ❺ Screen Size Adjustment (*2) ❻ Convergence Adjustment (*2) ❼ White Balance Adjustment (*2)
If CONV. AMP ASSY	is repaired or replaced	❺ Screen Size Adjustment (*2) ❻ Convergence Adjustment (*2)
If R, G or B CRT DRIVE ASSY	is repaired or replaced	❶ Brightness Adjustment (*1) ❼ White Balance Adjustment (Composite STD :*1, Others :*2)
If DIGITAL CONV. ASSY	is repaired or replaced	❸ Focus Adjustment (*2) ❹ Test-cross Position Check (*2) ❺ Screen Size Adjustment (*2) ❻ Convergence Adjustment (*2)
If VIDEO ASSY	is repaired or replaced	❶ Brightness Adjustment (*2) ❼ White Balance Adjustment (Composite STD : *1, Others :*2) ❽ Panel Adjustment (*1) ❾ Panel Adjustment for DTV (*1)
If SIGNAL ASSY	is repaired or replaced	❼ White Balance Adjustment (*2)
If SUB VIDEO ASSY	is repaired or replaced	❹ Test-cross Position Check (*2) ❼ White Balance Adjustment (*2)
If AV I/O ASSY	is repaired or replaced	No adjustment is required
If CRT ASSY (R, G or B)	is repaired or replaced	❶ Brightness Adjustment (*1) ❷ Deflection Yoke Adjustment (*1) ❸ Focus Adjustment (Lens : *2, VR1 Focus VR :*1) ❻ Convergence Adjustment (*2) ❼ White Balance Adjustment (Composite STD : *1, Others :*2)
If LENS ASSY (R, G or B)	is repaired or replaced	❸ Focus Adjustment (Lens : *1, VR1 Focus VR :*2) ❻ Convergence Adjustment (*2)
If MIRROR and SCREEN	is repaired or replaced	❻ Convergence Adjustment (*2)
If OTHER ASSY	is repaired or replaced	No adjustment is required

Note :
*1: Readjustment necessary
*2: Turn on the power and confirm the screen. When adjustment deviates, it is readjusted if necessary.

- When the EEPROMs are replaced, check the status of the unit.
- If any IC of the EEPROM is damaged, readjustment of all the items is necessary.

- The necessary adjustment items differ, depending on the assembly or optical part replaced. Check and readjust the adjustment items corresponding to the replaced assembly or part, following adjustment procedures 1 to 9.
  Example: When the DIGITAL CONV. Assy is replaced, perform the following:
  3. Focus check/adjustment → 4. Test-cross position check/adjustment → 5. Screen size check/adjustment
  → 6. Convergence check/adjustment

6.4 FACTORY ADJ MODE

■ Factory Adjustment Mode

Start .... Start adjusting

1st FAC ...... Select 1st FACTORY ADJ mode, then adjust.

Select 1st FACTORY ADJ Mode Selecting the mode for adjustment operations.

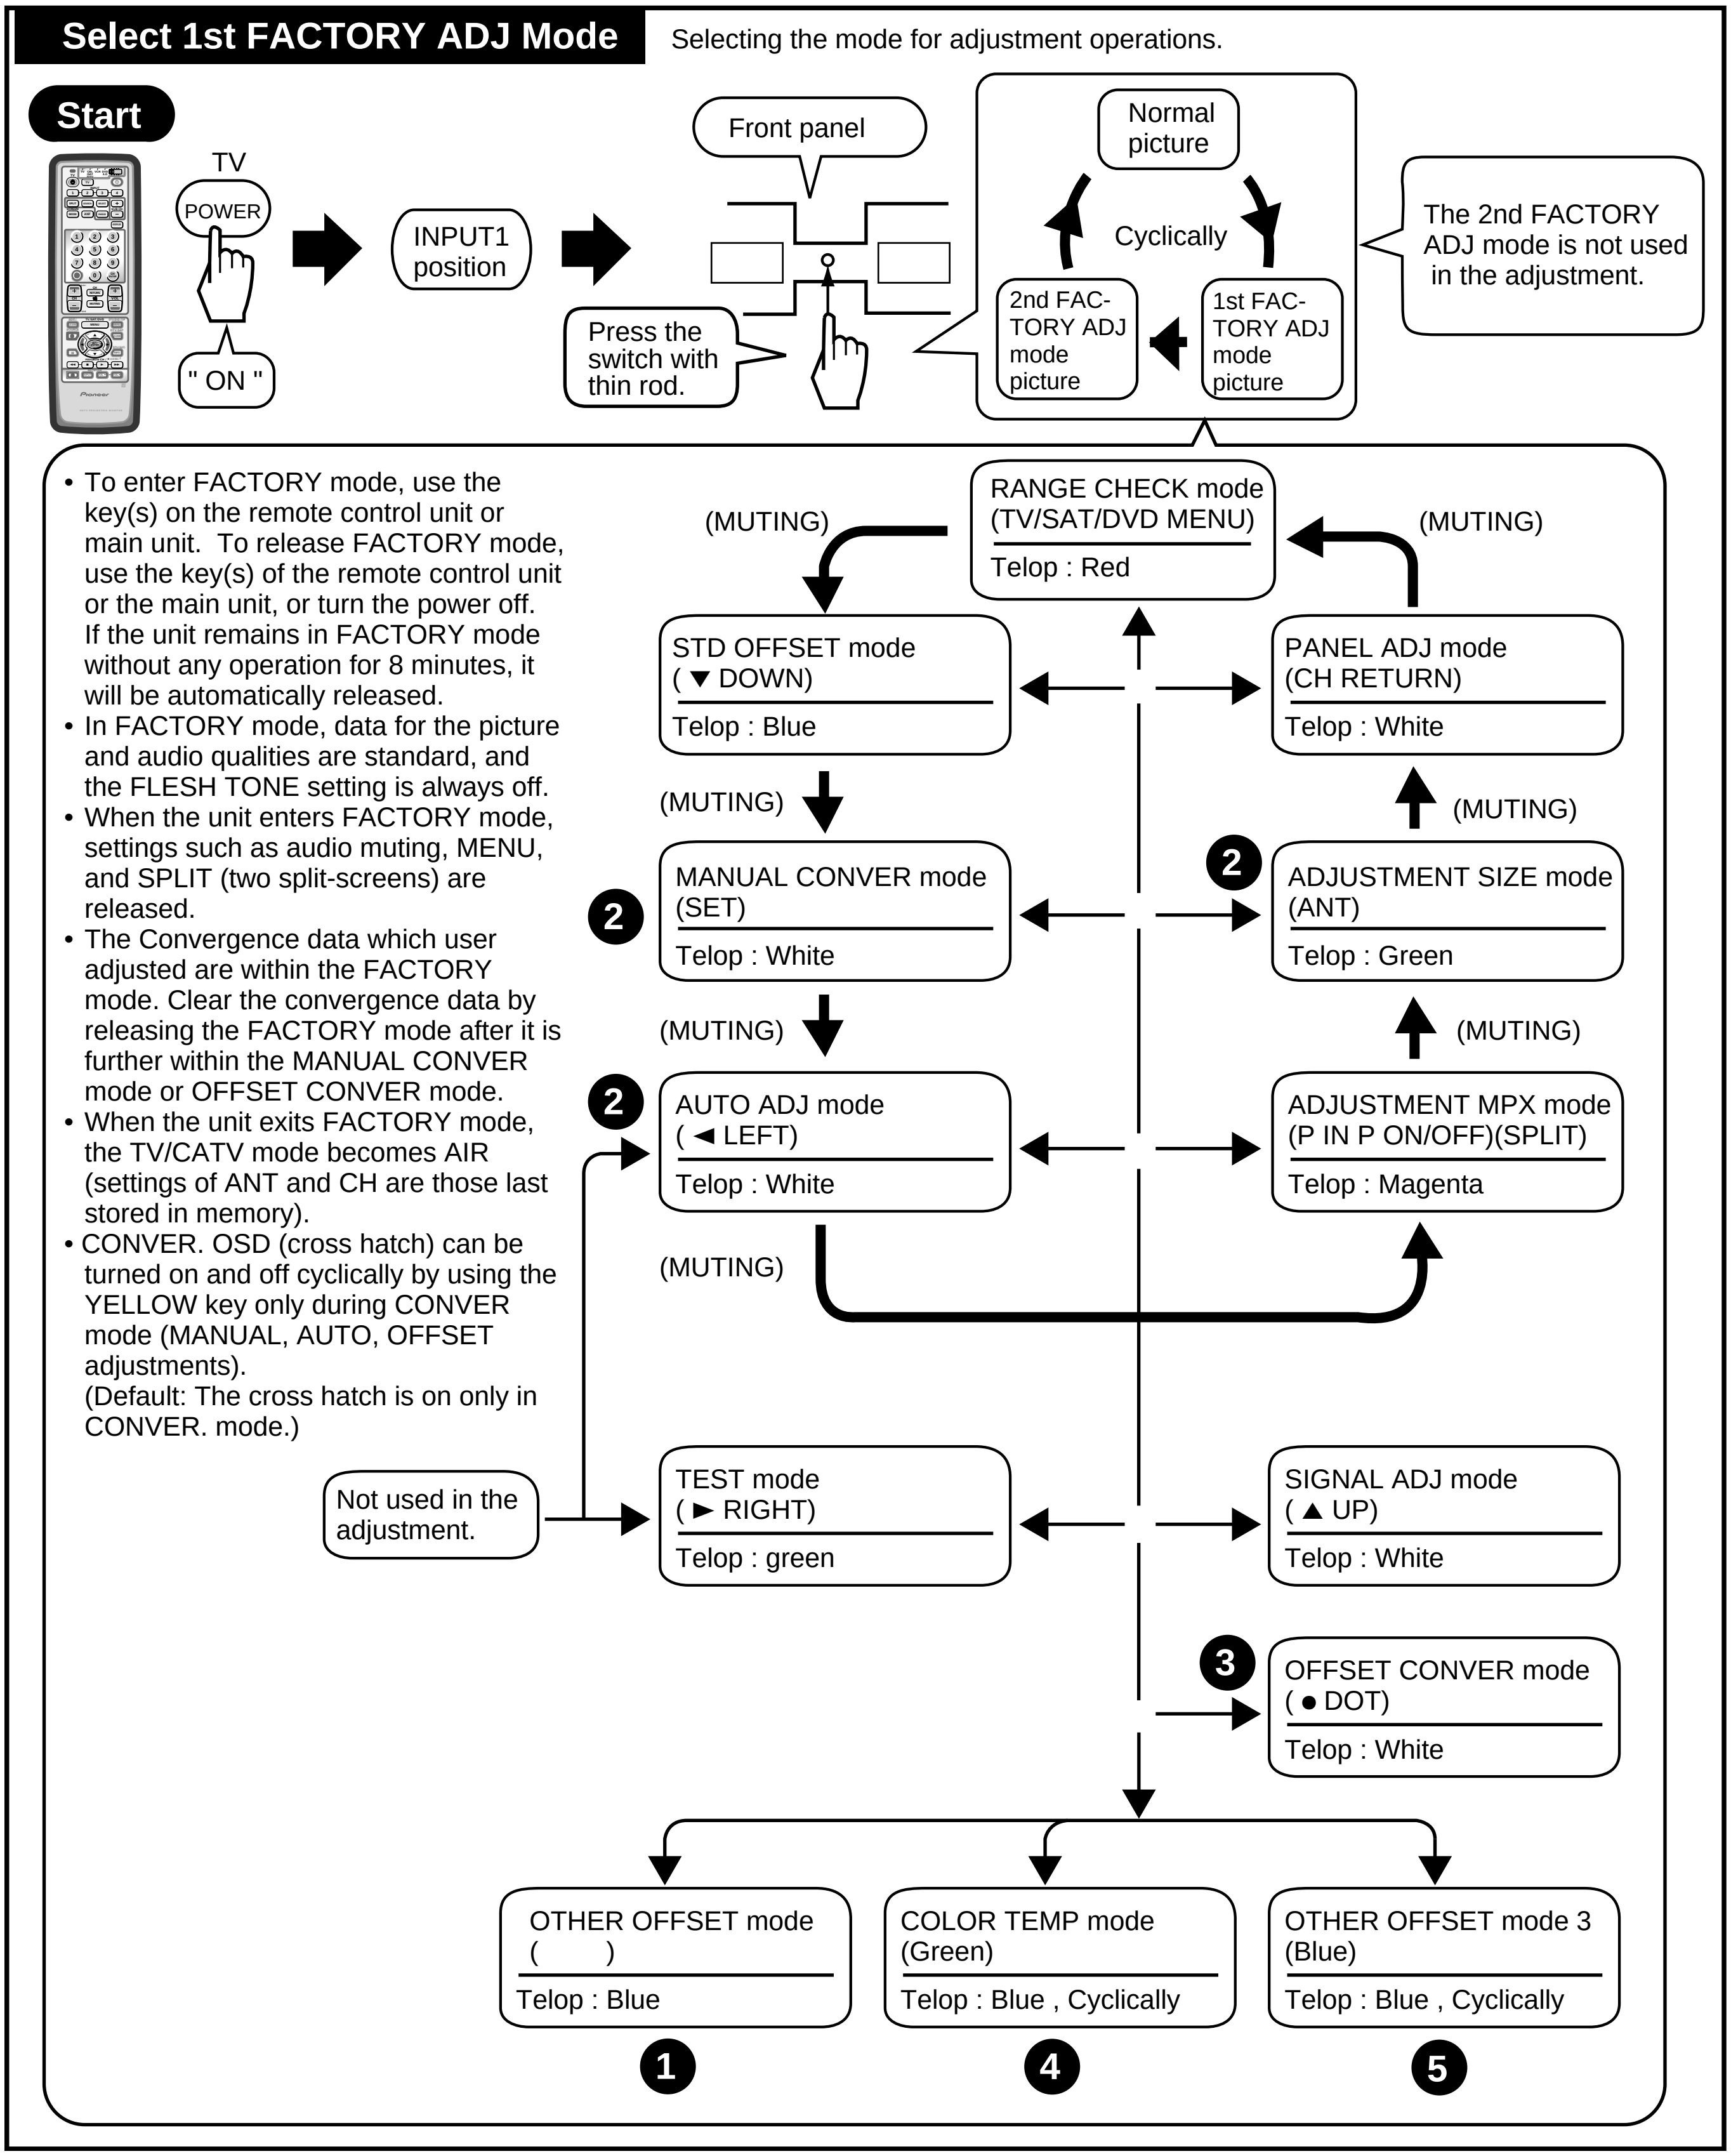

- To enter FACTORY mode, use the key(s) on the remote control unit or main unit. To release FACTORY mode, use the key(s) of the remote control unit or the main unit, or turn the power off. If the unit remains in FACTORY mode without any operation for 8 minutes, it will be automatically released.
- In FACTORY mode, data for the picture and audio qualities are standard, and the FLESH TONE setting is always off.
- When the unit enters FACTORY mode, settings such as audio muting, MENU, and SPLIT (two split-screens) are released.
- The Convergence data which user adjusted are within the FACTORY mode. Clear the convergence data by releasing the FACTORY mode after it is further within the MANUAL CONVER mode or OFFSET CONVER mode.
- When the unit exits FACTORY mode, the TV/CATV mode becomes AIR (settings of ANT and CH are those last stored in memory).
- CONVER. OSD (cross hatch) can be turned on and off cyclically by using the YELLOW key only during CONVER mode (MANUAL, AUTO, OFFSET adjustments).
  (Default: The cross hatch is on only in CONVER. mode.)

Start
TV
POWER
" ON "
INPUT1 position
Front panel
Press the switch with thin rod.
Normal picture
Cyclically
2nd FACTORY ADJ mode picture
1st FACTORY ADJ mode picture
The 2nd FACTORY ADJ mode is not used in the adjustment.
RANGE CHECK mode (TV/SAT/DVD MENU) Telop : Red
(MUTING)
STD OFFSET mode (▼ DOWN) Telop : Blue
PANEL ADJ mode (CH RETURN) Telop : White
MANUAL CONVER mode (SET) Telop : White
ADJUSTMENT SIZE mode (ANT) Telop : Green
AUTO ADJ mode (◄ LEFT) Telop : White
ADJUSTMENT MPX mode (P IN P ON/OFF)(SPLIT) Telop : Magenta
Not used in the adjustment.
TEST mode (► RIGHT) Telop : green
SIGNAL ADJ mode (▲ UP) Telop : White
OFFSET CONVER mode (● DOT) Telop : White
OTHER OFFSET mode ( ) Telop : Blue
COLOR TEMP mode (Green) Telop : Blue , Cyclically
OTHER OFFSET mode 3 (Blue) Telop : Blue , Cyclically
❶ ❷ ❸ ❹ ❺

❶ OTHER OFFSET mode

To enter the OFFSET mode of each picture quality, use the following keys and codes of the remote control unit:

		Key(s) on the Remote Control Unit
A	STD OFFSET MODE	DOWN
C	COMP (15 kHz) OFFSET MODE	P in P CH-, SUB CH-
D	COMP (31 kHz, 33 kHz) OFFSET MODE	P in P CH+, SUB CH+
B	TV OFFSET MODE	RED
V	COLOR TEMP B&W for STD	DTV MENU
L	COLOR TEMP FILM for STD & GAME	INFO
T	RGB OFFSET MODE	CH ENTER

❷ The screen size modes change cyclically with each press of the SCREEN key as follows:

→ ① FULL → ② ZOOM → ③ CINEMA → ④ NATURAL → ⑤ FULL (HD)

Note :The initial mode is always FULL.

❸ The OFFSET CONVER. modes change cyclically with each press of the DOT key as follows:

→ ① OFFSET CONVER. MODE 1 → ② OFFSET CONVER. MODE 2 → ③ OFFSET CONVER. MODE 3

Note :The initial mode is always OFFSET CONVER. MODE 1.

❹ The offset data of the picture quality in COLOR TEMP mode change cyclically with each press of the GREEN key as follows:

①	J	COLOR TEMP	NEWS
②	K	COLOR TEMP	LIVE
③	M	COLOR TEMP	FILM for REF THEATER
④	X	COLOR TEMP	B&W for REF THEATER
⑤	β	COLOR TEMP	NEWS for R, G, B
⑥	γ	COLOR TEMP	LIVE for R, G, B
⑦	Y	COLOR TEMP	FILM for R, G, B
⑧	Z	COLOR TEMP	B&W for R, G, B

Note :The initial mode is always COLOR TEMP NEWS when the GREEN key is pressed.

❺ The offset data of picture quality change cyclically with each press of the BLUE key as follows:

→ ① E REF THEATER OFFSET MODE → ② F GAME OFFSET MODE → ③ δ REF THEATER OFFSET MODE for RGB
↓
④ ε GAME OFFSET MODE for RGB

Note :The initial mode is always (1) when the BLUE key is pressed.

6.5 ADJUSTMENT

1 Brightness Adjustment

Start **1st FAC** Input signal : Black Burst (INPUT 1)

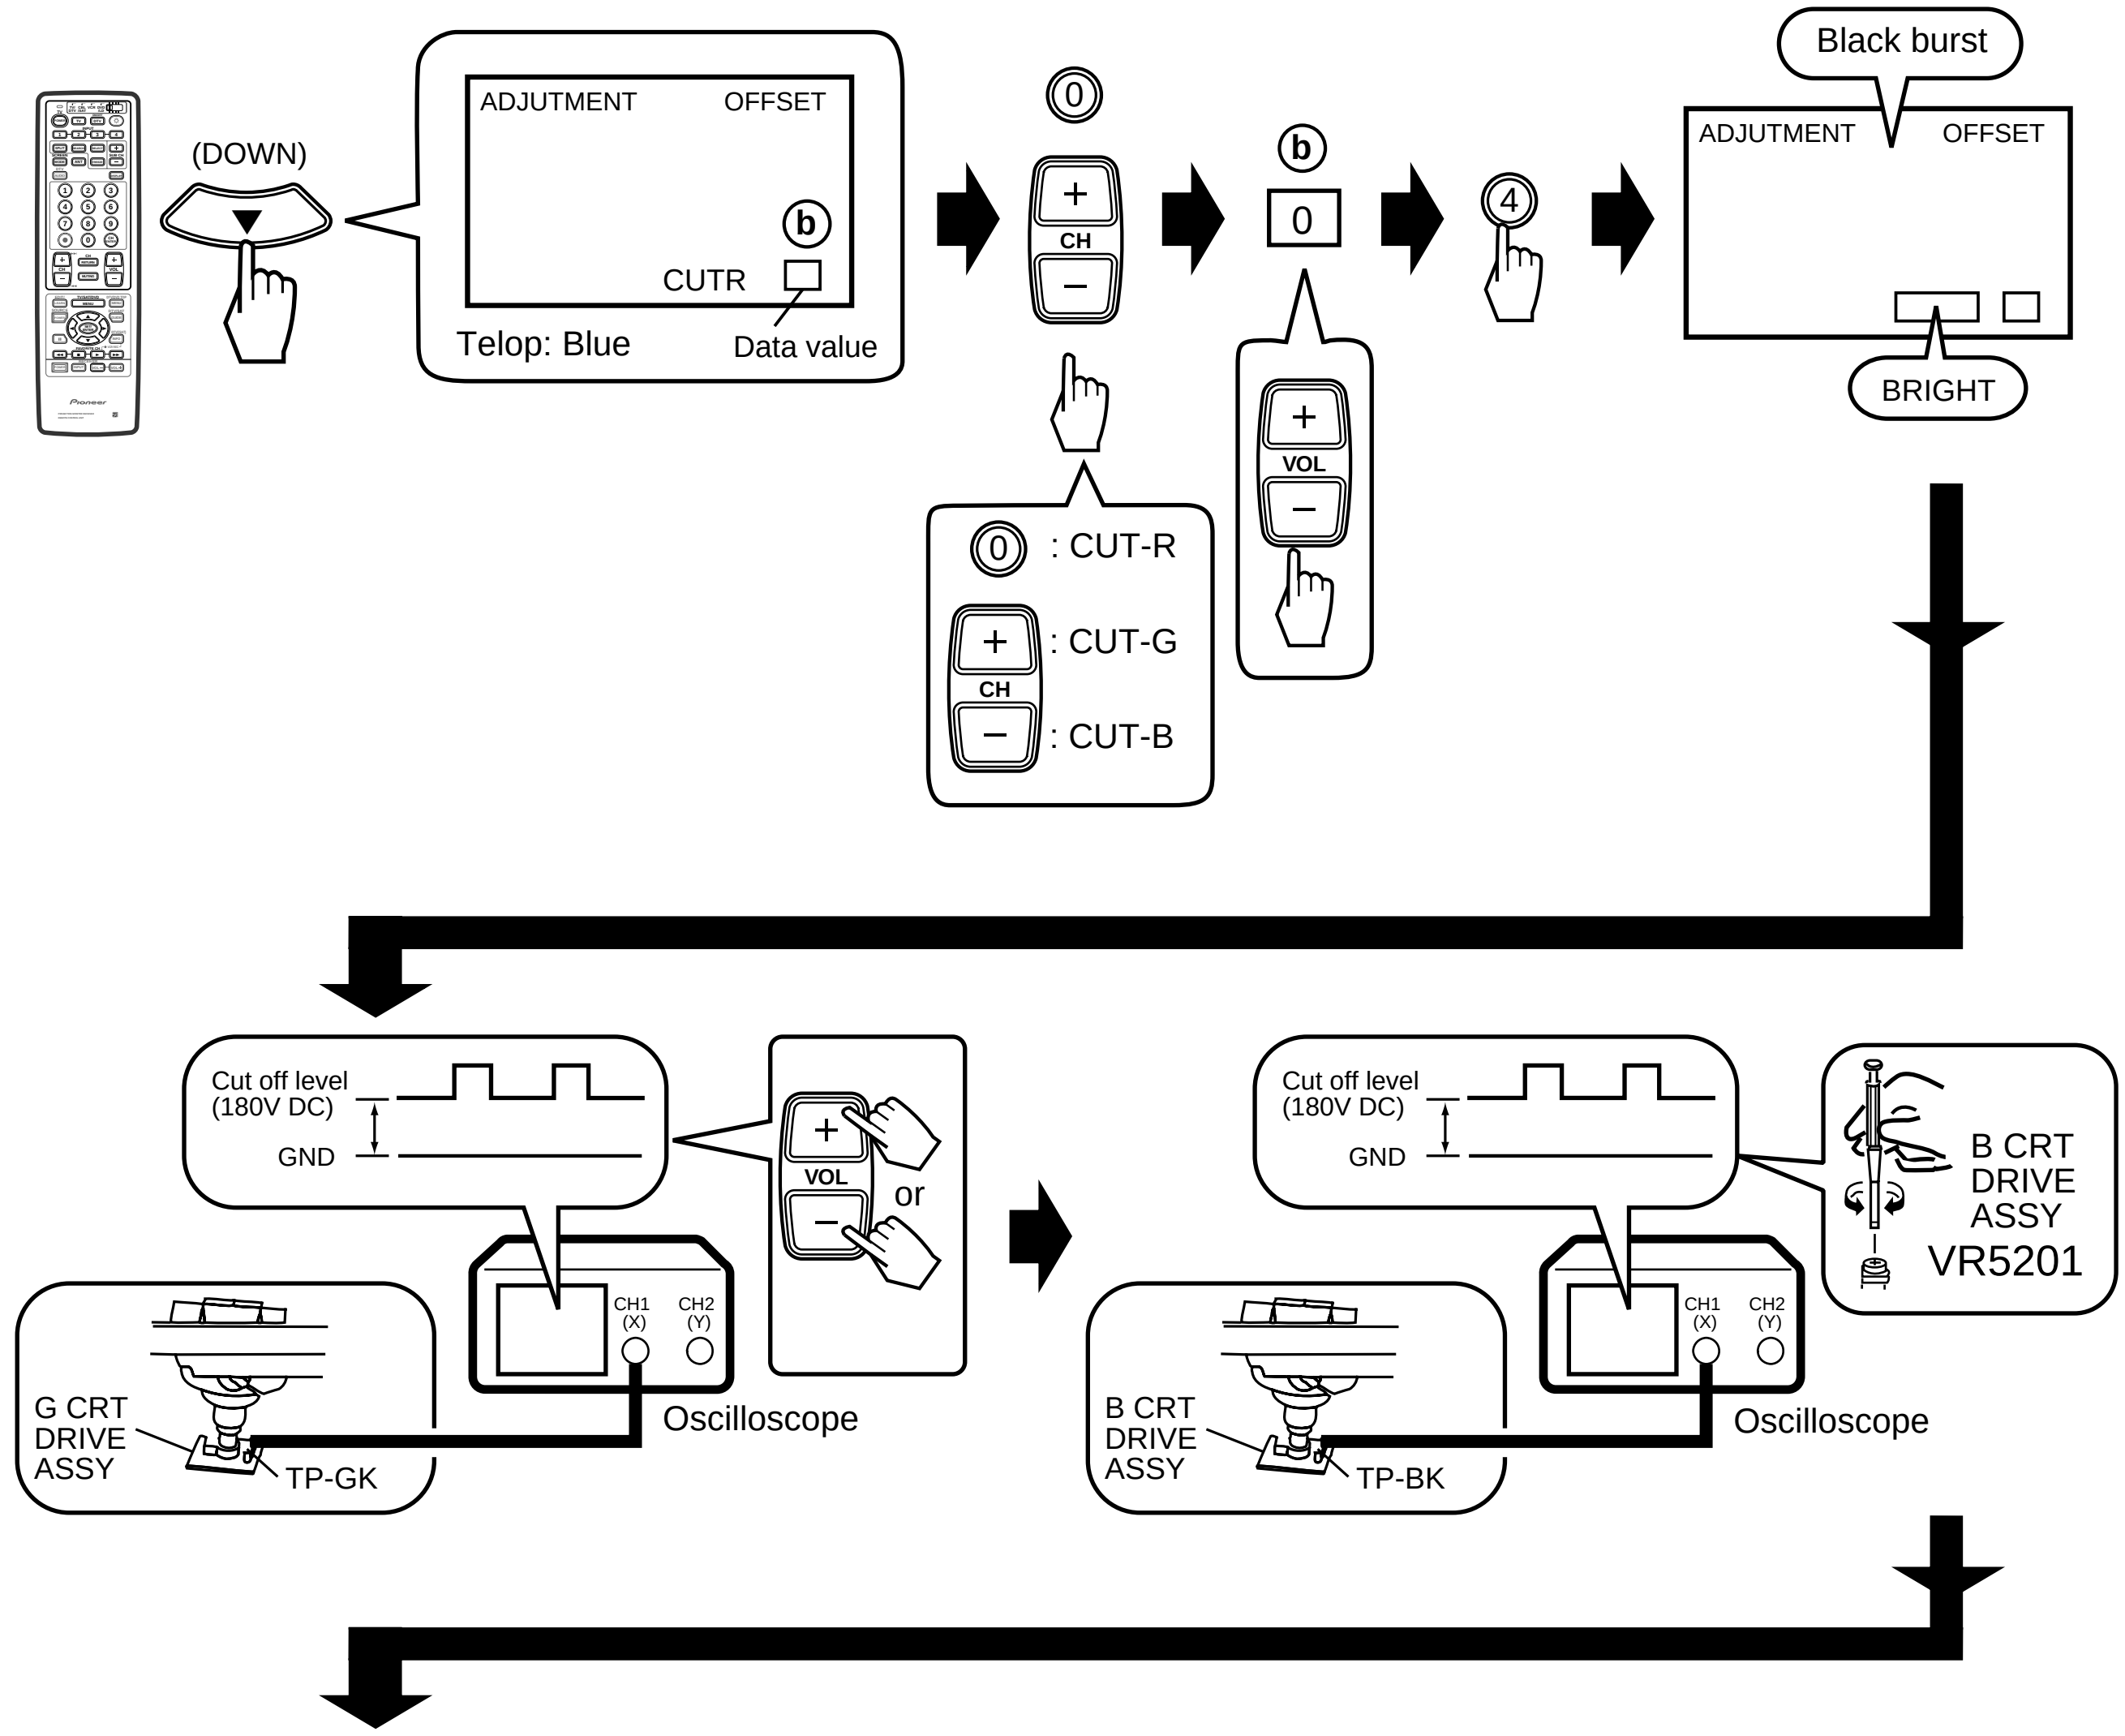
(DOWN)
ADJUTMENT
OFFSET
b
CUTR
Telop: Blue
Data value
0
+
CH
−
b
0
+
VOL
−
4
0 : CUT-R
+ : CUT-G
CH
− : CUT-B
Black burst
ADJUTMENT
OFFSET
BRIGHT
Cut off level
(180V DC)
GND
+
VOL
or
−
CH1 (X)
CH2 (Y)
Oscilloscope
G CRT DRIVE ASSY
TP-GK
Cut off level
(180V DC)
GND
CH1 (X)
CH2 (Y)
Oscilloscope
B CRT DRIVE ASSY
TP-BK
B CRT DRIVE ASSY
VR5201

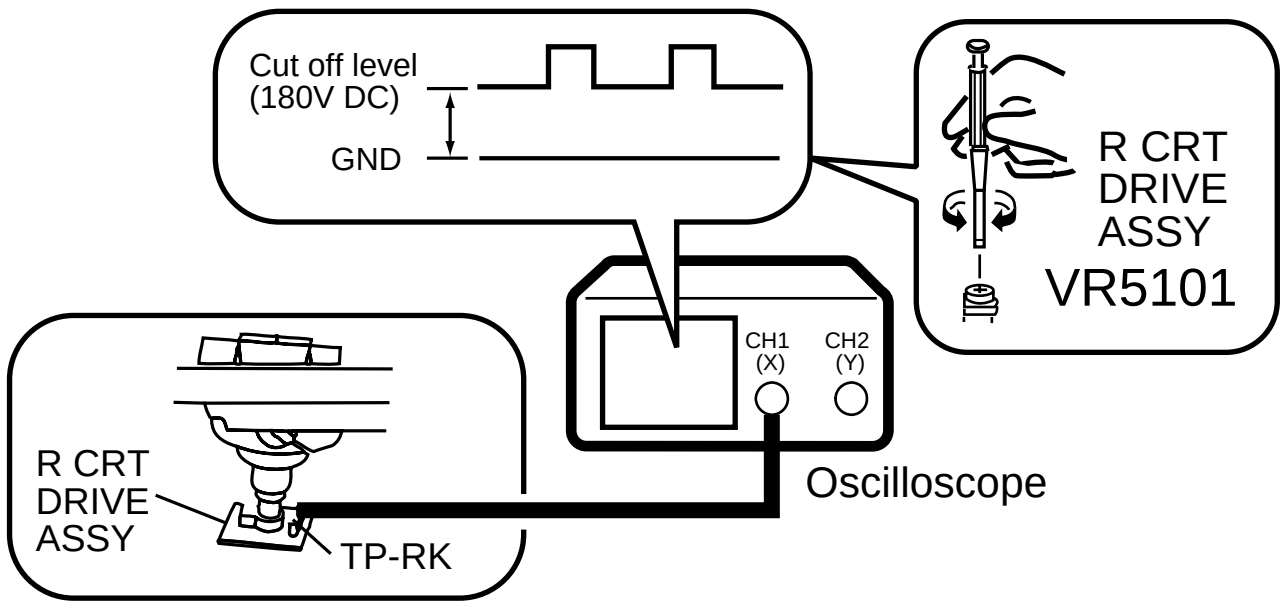
Cut off level
(180V DC)
GND
CH1 (X)
CH2 (Y)
Oscilloscope
R CRT DRIVE ASSY
TP-RK
R CRT DRIVE ASSY
VR5101

When the DEFLECTION SERVICE Assy or VIDEO Assy is replaced, check the following to confirm if the above adjustment is necessary:

(1) Make a note of the data of CUT R, CUT G, CUT B, and BRIGHT. (1st FAC) (▼ DOWN)

(2) Input "0" as parameters for (1) and check TP-RK, TP-GK and TP-BK of the CRT DRIVE assembly. If the levels are within 180 V ±5 V, the adjustment is not necessary. Input the noted data.
If the levels are not within the above level, proceed with the above adjustment.

2 Deflection Yoke Adjustment

2 -1 Deflection Yoke Lean Adjustment

Start

- Input a stable signal (e.g. from an LD player or SG) to the INPUT 1 connector.
- MENU → SETUP → Enter the MULTI-POINT (FULL) in the CONVERGENCE.
- The cross hatch disappears if there is no operation with the remote control unit for about 8 minutes. If the cross hatch disappears, repeat the above operation with the remote control unit.

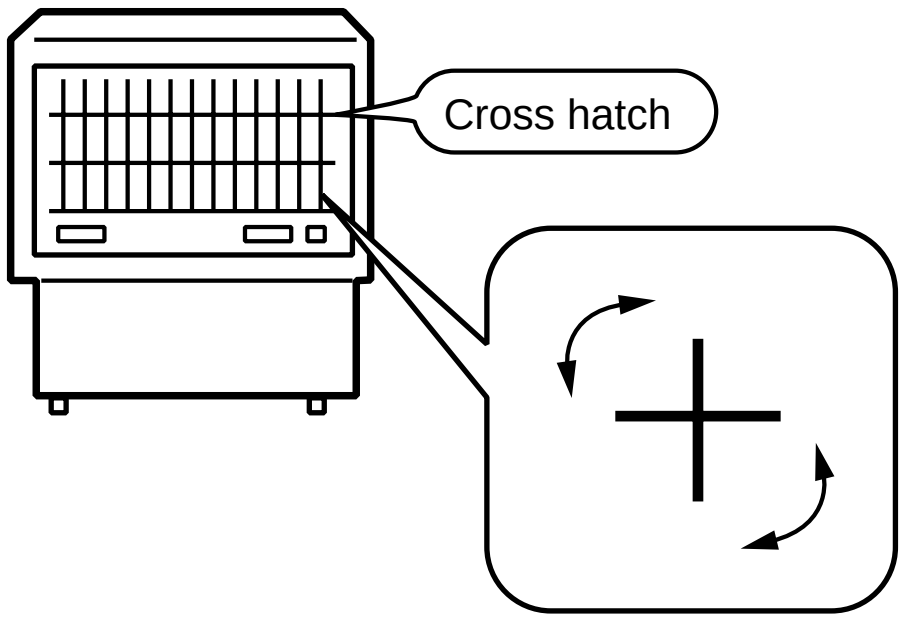
Cross hatch

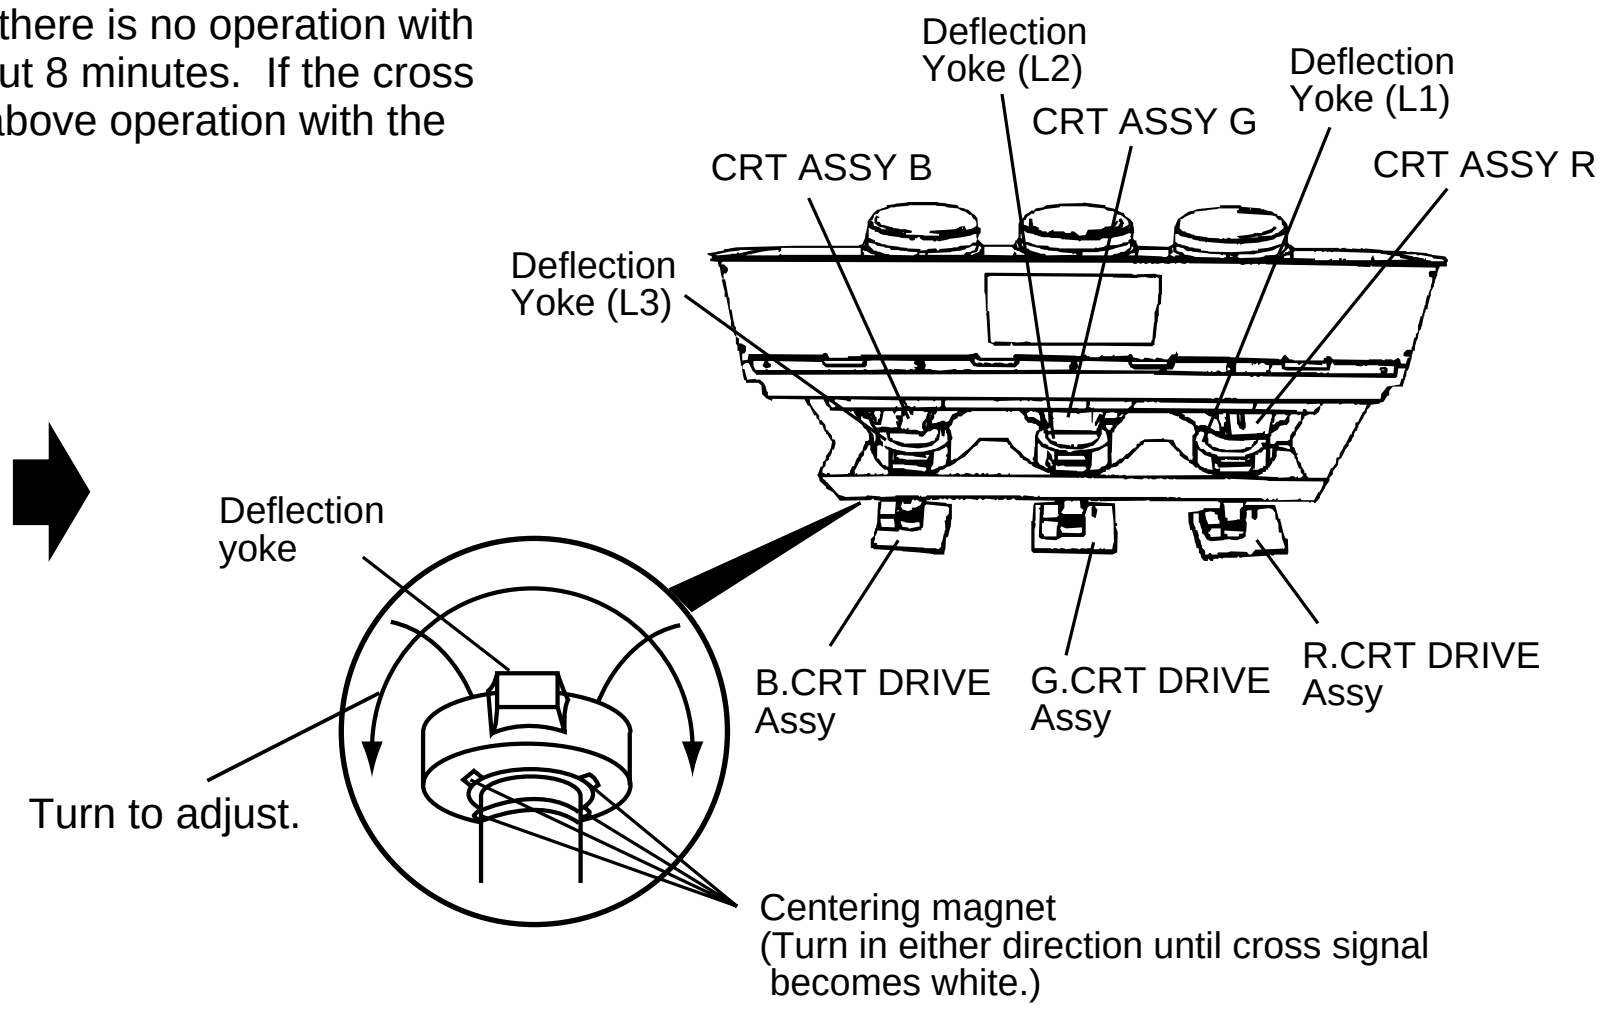
Deflection Yoke (L2)
Deflection Yoke (L1)
CRT ASSY G
CRT ASSY B
CRT ASSY R
Deflection Yoke (L3)
Deflection yoke
B.CRT DRIVE Assy
G.CRT DRIVE Assy
R.CRT DRIVE Assy
Turn to adjust.
Centering magnet
(Turn in either direction until cross signal becomes white.)

- Turn the deflection yoke of the replaced CRT so that the cross hatch of the color corresponding to the replaced CRT converges with that of the CRTs not replaced.
- When a CRT is replaced, check the position of the VM (Velocity Modulation) yoke.

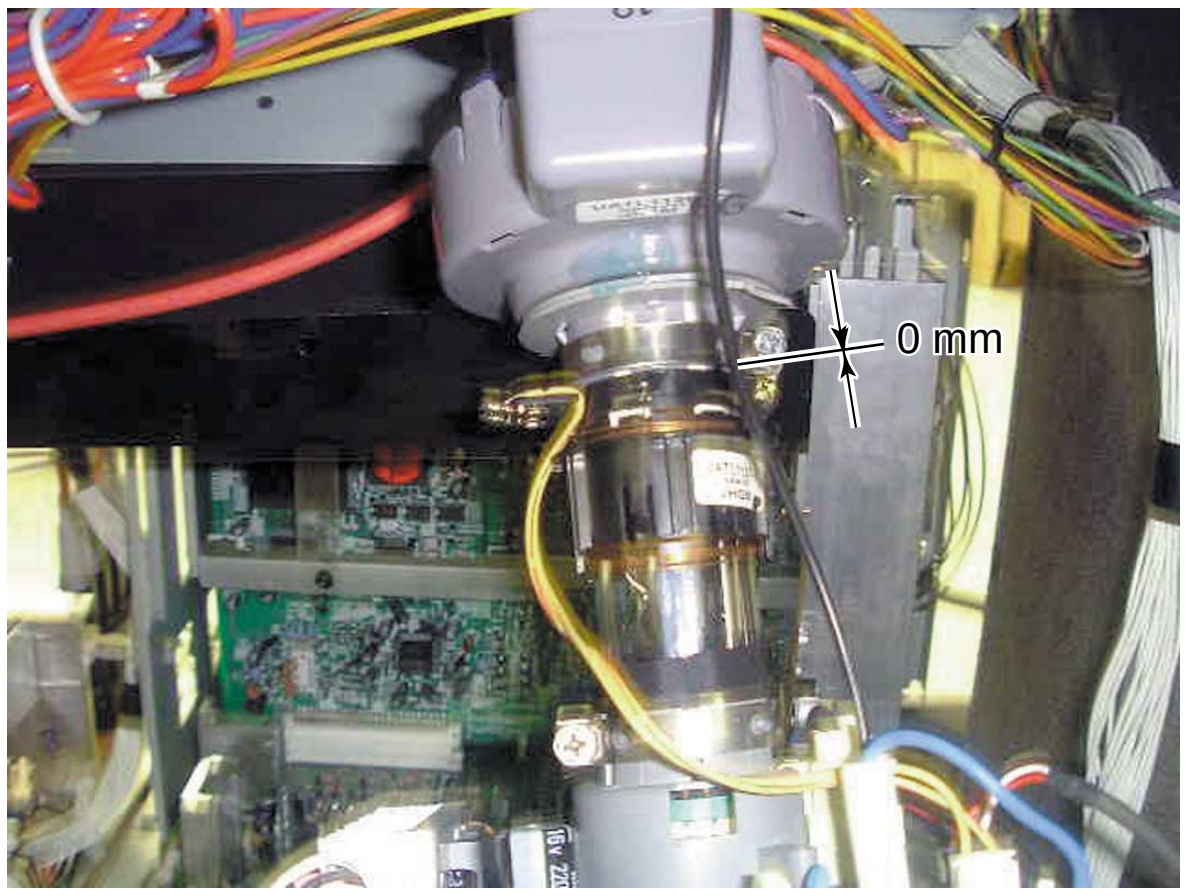

2 -2 Screen Center Adjustment

Start

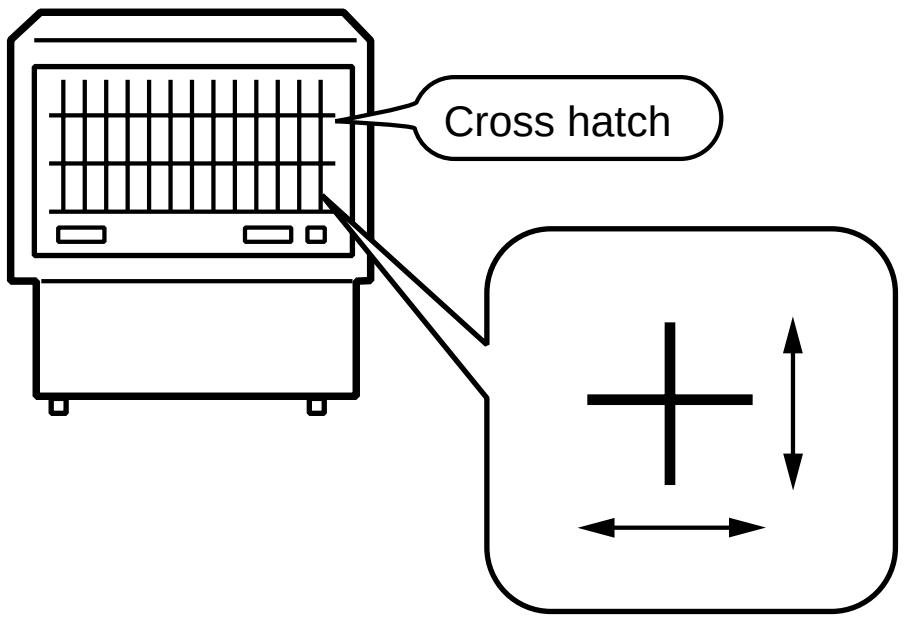
Cross hatch

- Move the centering magnet of the deflection yoke for the replaced color so that the horizontal and vertical lines at the center of the screen align with the lines for a color not replaced.
- Secure the centering magnet from moving after adjustment is finished.

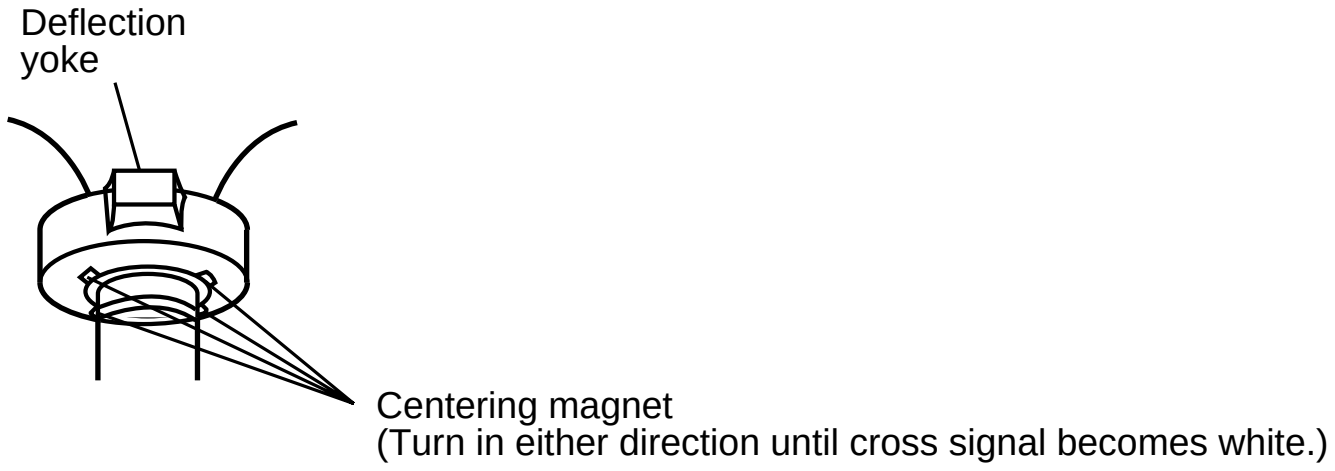
Deflection yoke
Centering magnet
(Turn in either direction until cross signal becomes white.)

3 Focus Adjustment

3-1 Focus Adjustment of Lens Assy

Start

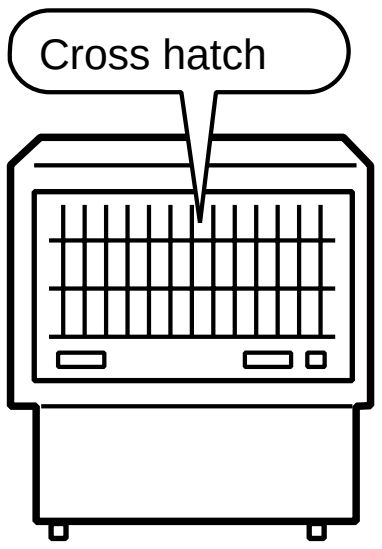
Cross hatch

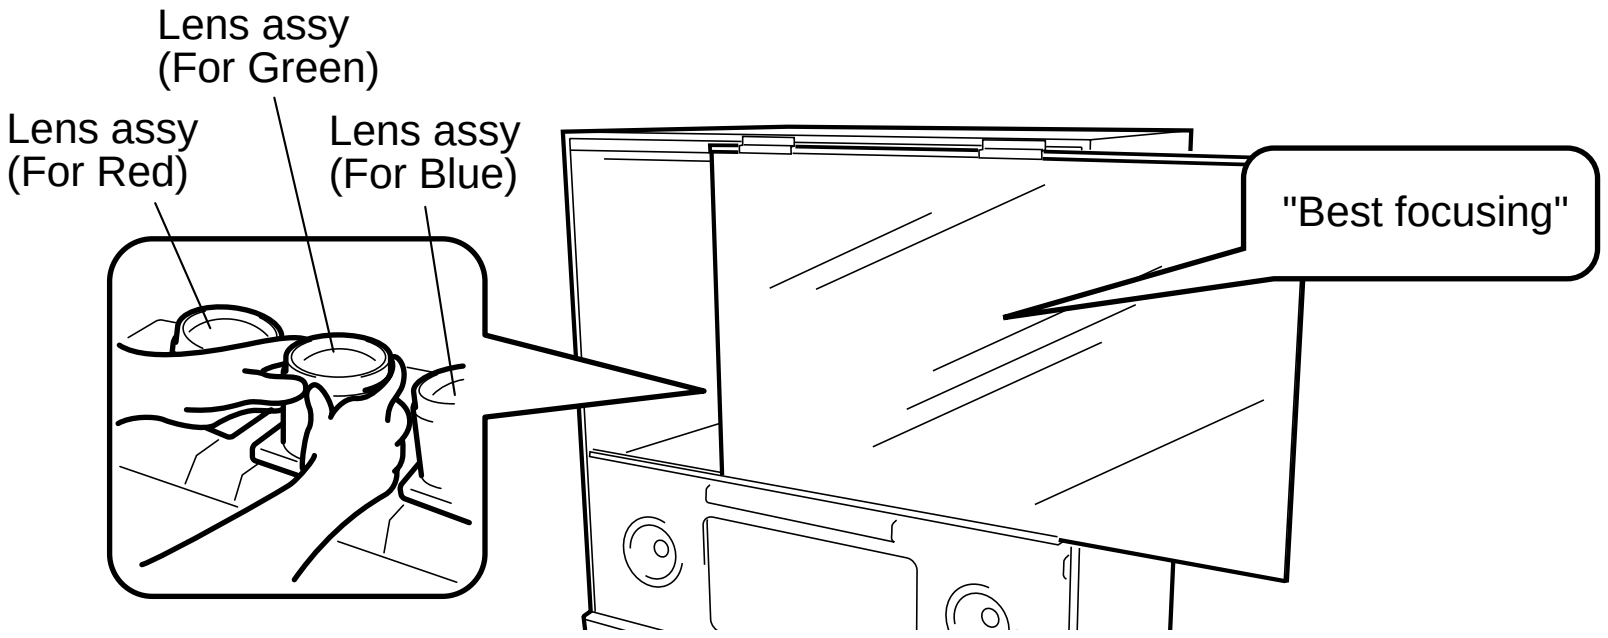
Lens assy
(For Green)
Lens assy
(For Red)
Lens assy
(For Blue)
"Best focusing"

3-2 Focus VR Adjustment

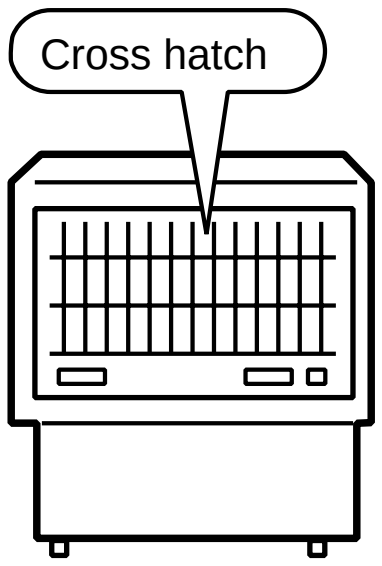
Cross hatch

Focus VR (VR1)

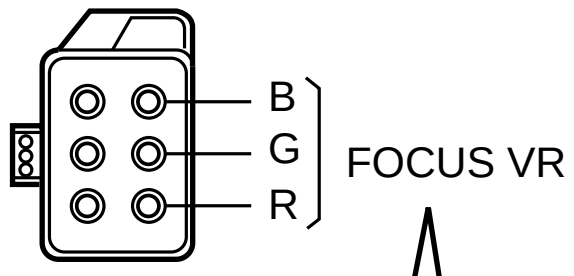
B
G
R
FOCUS VR

Turn the Focus VR for best focusing.

❹ Test-cross Position Check

- Check the test-cross position. If it is located within ± 20 mm from the center of the screen, no adjustment is required. If it is not, adjust the position as follows:
- Input a stable NTSC (480i) signal (e.g. from an LD player) and adjust the position.

Start

MENU → SETUP → CONVERGENCE → FULL

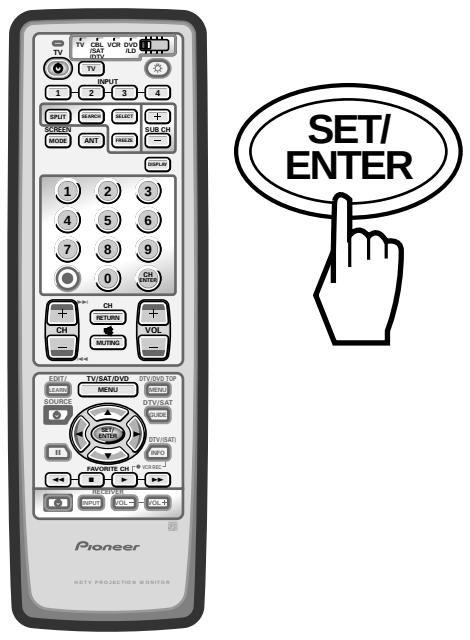

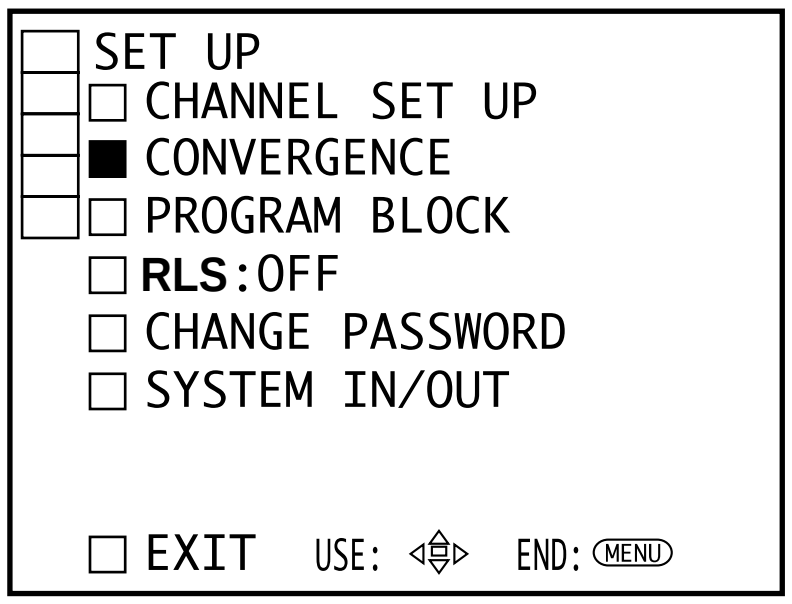
SET UP
☐ CHANNEL SET UP
■ CONVERGENCE
☐ PROGRAM BLOCK
☐ RLS:OFF
☐ CHANGE PASSWORD
☐ SYSTEM IN/OUT
☐ EXIT USE: END: MENU

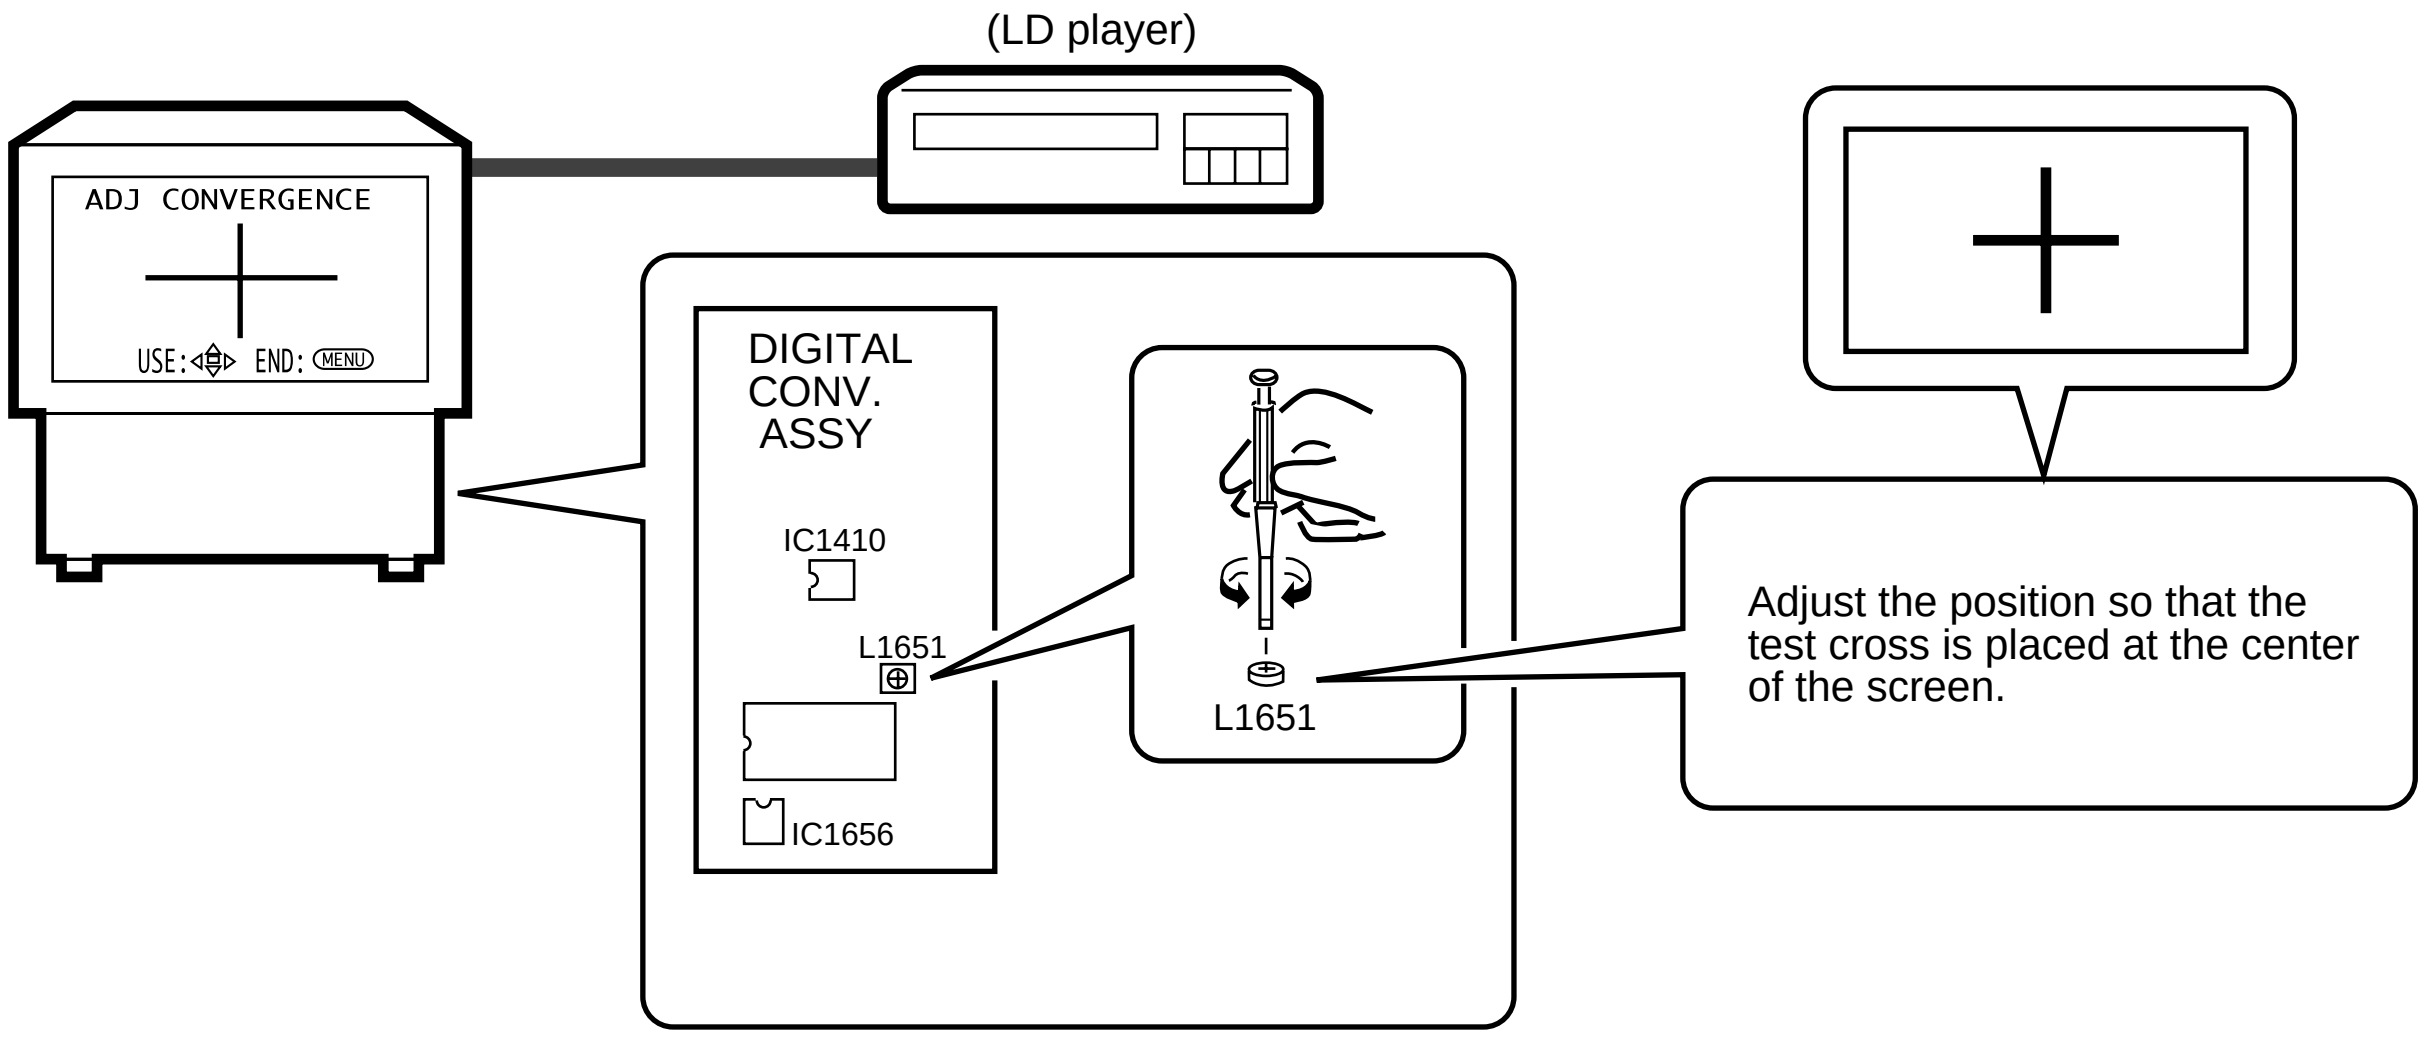
(LD player)
ADJ CONVERGENCE
USE: END: MENU
DIGITAL
CONV.
ASSY
IC1410
L1651
IC1656
L1651

Adjust the position so that the test cross is placed at the center of the screen.

5 Screen Size Adjustment

Check if both vertical and horizontal sizes are within 91% ±2%. If they are not, perform the size adjustment as follows:

5 -1 Size Mode

Start **1st FAC**

Note :
Screen mode : FULL

- Mode for roughly adjusting the horizontal and vertical sizes of the main deflection.
- In this mode, the color is green only, screen size is FULL and the contrast is +10.
- The above settings are cleared when this mode is exited.

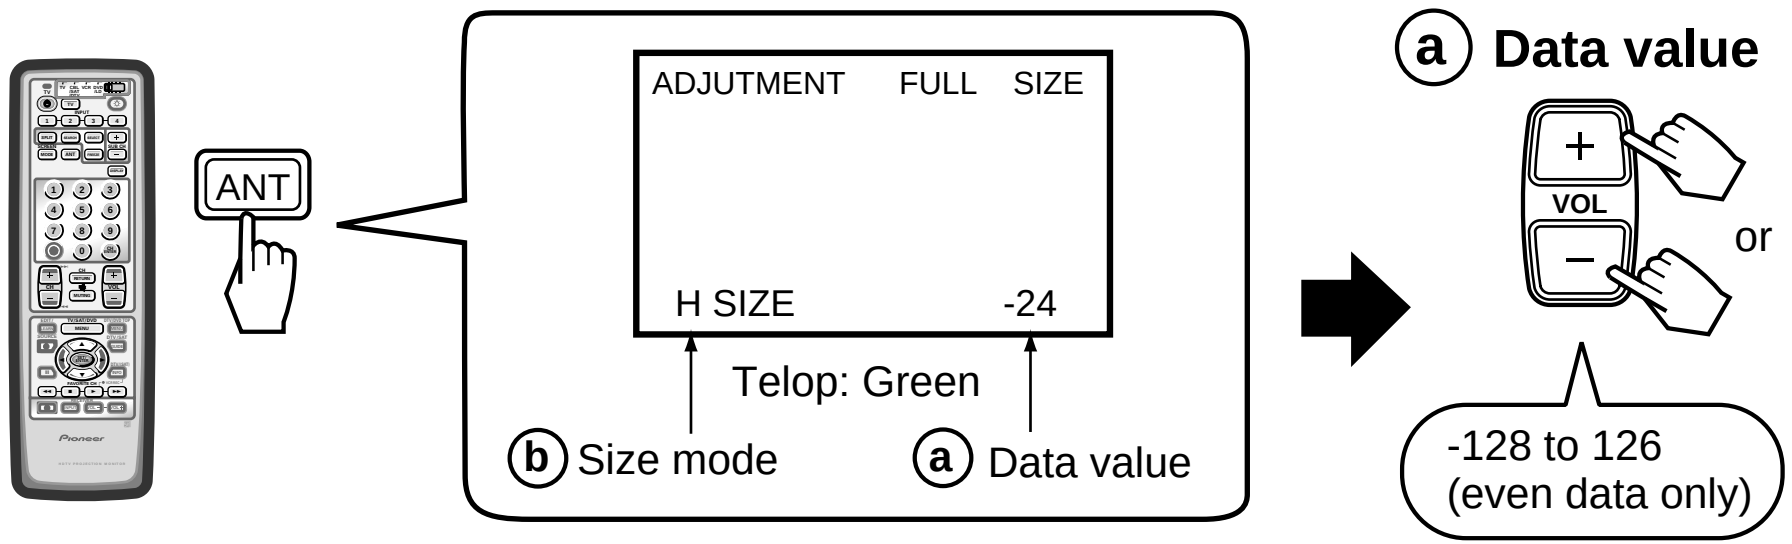
ANT
ADJUTMENT FULL SIZE
H SIZE -24
Telop: Green
ⓑ Size mode
ⓐ Data value
ⓐ Data value
+
VOL
–
or
-128 to 126
(even data only)

ⓑ Size mode

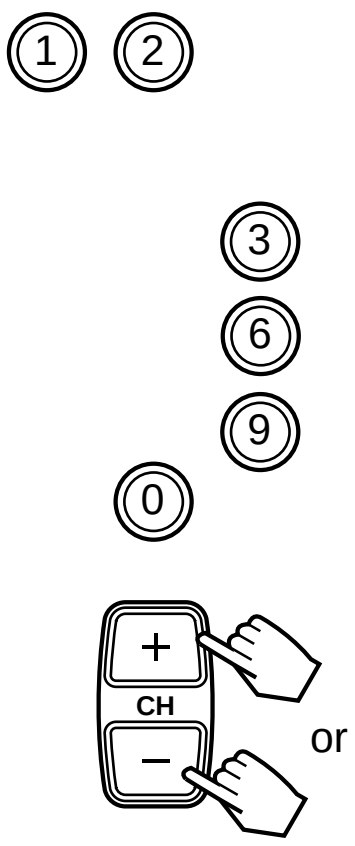
①
②
③
⑥
⑨
⓪
+
CH
–
or

① : H Size (15 kHz)
② : V Size

③ : H PHA (15K)
⑥ : H SIZE (33K) (fixed value D can be varied)
⑨ : H PHA (31K RGB)
⓪ : H PHA (33K RGB)
CH + : H PHA (31kHz)
CH – : H PHA (33kHz)

Note :
- The adjustment is unnecessory for D so that is set in factory shipment by the most suitable value. However, please adjust it when a screen is missed when displayed the HD source on the screen.
- For H PHA, refer to the section "• Reference."

Table on H SIZE and V SIZE data

Picture Quality Mode	H SIZE	V SIZE
NATURAL WIDE	A	B
CINEMA WIDE	A	B
ZOOM	A	B
FULL	A	B
FULL for HD	A+D	B

A, B	: Adjustment values
D	: Fixed values
A+D	: Addition of A and D

- Perform the H SIZE and V SIZE adjustments only in FULL mode (NTSC MONOSCOPE signal input).
- Release the FACTORY mode, then change the screen mode and confirm that the picture is not missing.

The factory-preset values are as follows:

Key No.	Adjustment Value
1 : H SIZE (15K)	Approx. 16 ± 30
2 : V SIZE	Approx. -40 ± 30
6 : H SIZE (33K)	Approx. 60 ± 30

Note: Varies depending on the factory-preset value.

5 -2 Vertical Size Adjustment

Start **1st FAC**

Note :
Screen mode : FULL

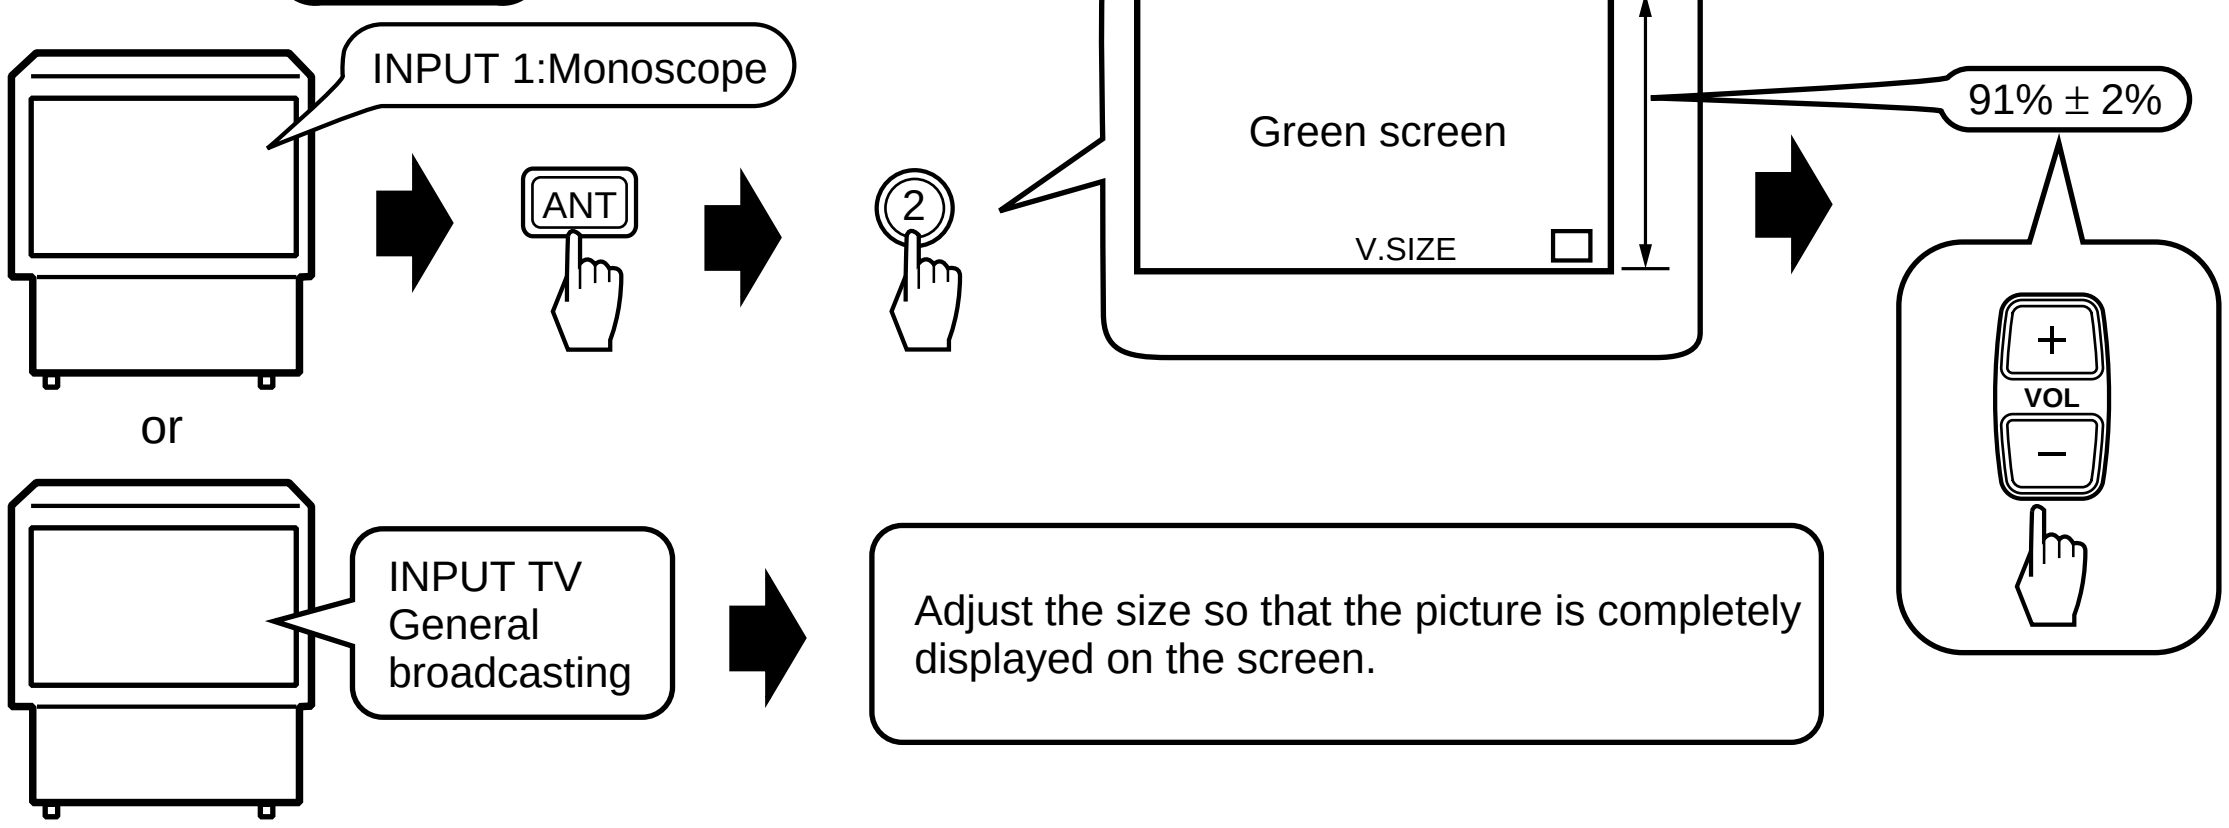
INPUT 1:Monoscope
ANT
②
Green screen
V.SIZE
91% ± 2%
+
VOL
–
or
INPUT TV
General
broadcasting

Adjust the size so that the picture is completely displayed on the screen.

5 -3 Horizontal Size Adjustment

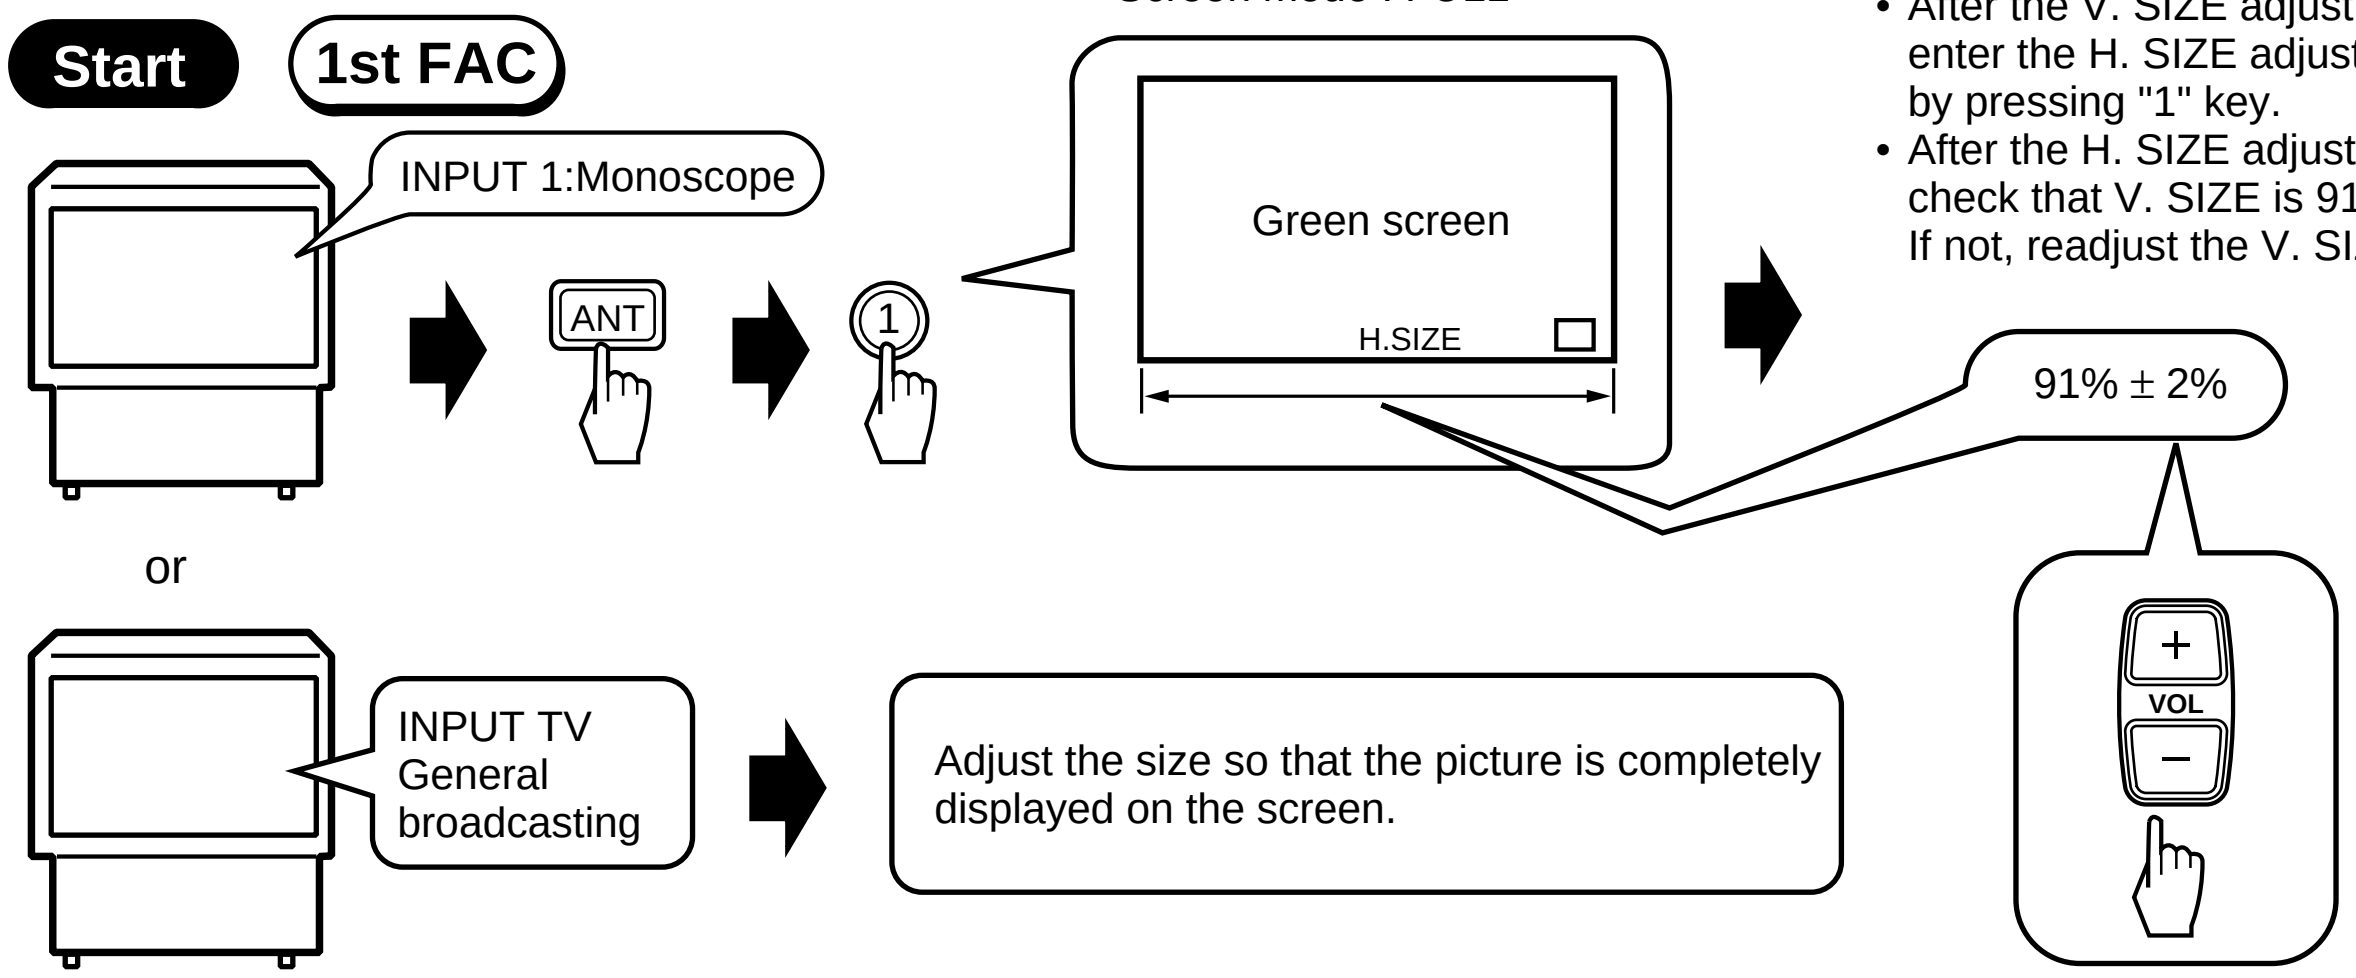

Adjust the size so that the picture is completely displayed on the screen.

Note :
Screen mode : FULL

Note :
- After the V. SIZE adjustment, enter the H. SIZE adjustment by pressing "1" key.
- After the H. SIZE adjustment, check that V. SIZE is 91± 2%. If not, readjust the V. SIZE.

• Reference

The H PHASE adjustment is required if the left or right part of the screen becomes black, as illustrated below, depending on the format of the input signal (Ex. component 31.5 kHz, RGB 33K etc.).

Ex. Component 31K

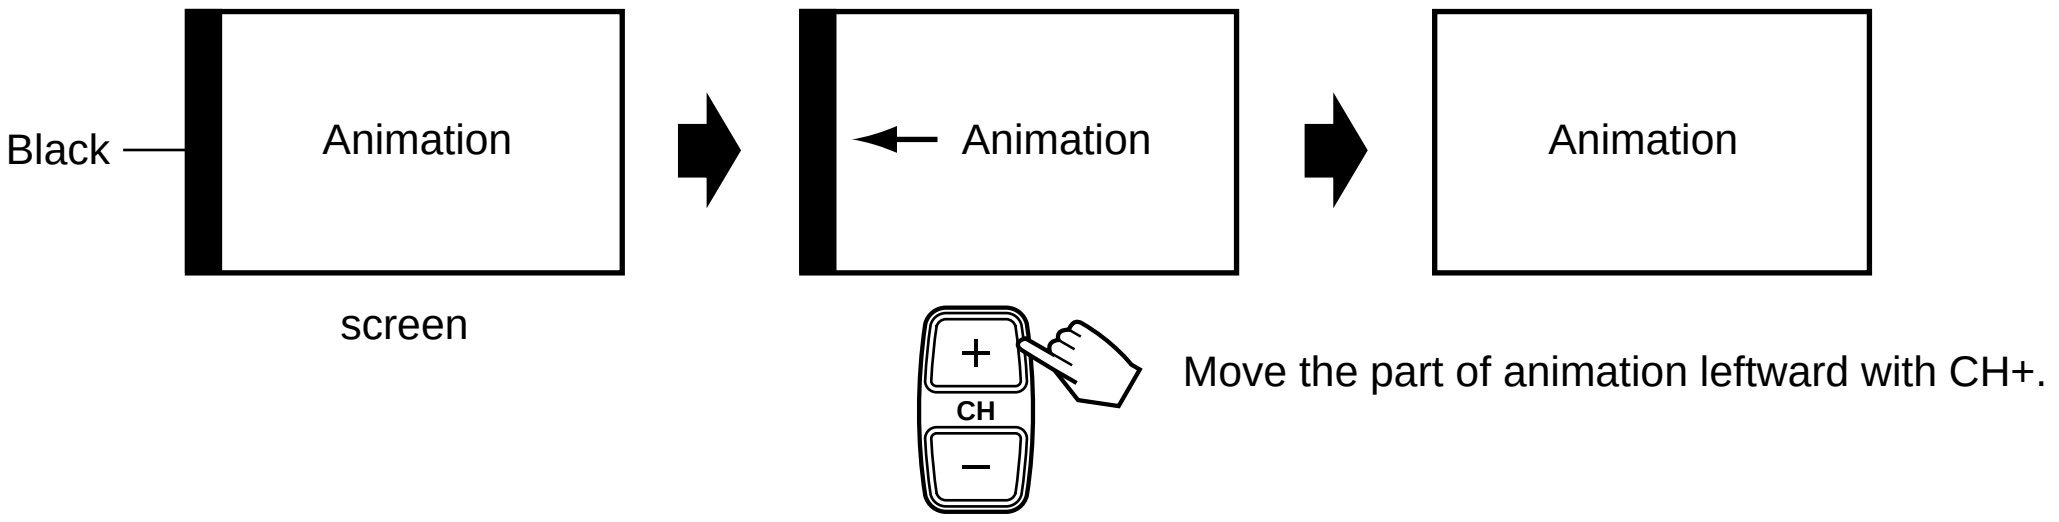

Move the part of animation leftward with CH+.

• About H. PHASE

In principle, adjustment of the data for the H. PHASE is not required.
Check whether the H. PHASE data are the factory-preset values, as indicated below:

Key No.	Adjustment Value
3 : H PHA (15K)	40
CH+ : H PHA (31K)	20
CH- : H PHA (33K)	-14
9 : H PHA (31K RGB)	8
0 : H PHA (33K RGB)	-26

15K : CONPOSITE, S COMPONENT (480i)
31K : COMPONENT (480P)
33K : COMPONENT (1080i)

The screen moves to the right or the left if the above data are in variance. (See the above figures.)

Note :
H PHASE is set in factory shipment by the most suitable value. But, there is the case that screen is missed as an upper figure occurs by the signal format of other apparatus to be connected to.
A screen can be improved as the following by the readjustment. However, attention is necessary because in convenience may occur when connected to another apparatus.

❻ CONVERGENCE ADJUSTMENT

1. Procedures

1. When replacinf the DIGITAL CONV. Assy, replace the EEPROM of new DIGITAL CONV. Assy with the EEPROM of old DIGITAL CONV. Assy.
2. Check the initial data for the convergence adjustment.
3. Perform the coarse adjustment for the green to roughly correct distortion of the green.
4. Fine-adjust the green to eliminate any distortion. The green becomes the standard for the red and the blue.
   If necessary, repeat steps 3 and 4. Green adjustment is completed.
5. Perform the coarse adjustment for the red by roughly converging the red with the green.
6. Fine-adjust the red until the red is completely converging with the green.
   If necessary, repeat steps 5 and 6. Red adjustment is completed.
7. Perform the coarse adjustment for the blue by roughly converging the blue with the green.
8. Fine-adjust the blue until the blue is completely converging with the green.
   If necessary, repeat steps 7 and 8. Blue adjustment is completed.
9. Display the green, red, and blue colors at the same time to check the convergence. Readjust the convergence if necessary.

2. Prior to Adjustment

There are five screen modes, and convergence adjustment is required for each mode. For adjustment, input the following video signal:

Table 1 Input signal

Screen mode	Input signal
1. FULL (FULL, 4:3 NORMAL) 2. ZOOM (ZOOM) 3 CINEMA (CINEMA WIDE) 4. NATURAL (NATURAL WIDE)	NTSC (480i) signal
5. FULL for HD (HD/DTV)	HD/DTV (1080i) signal

NTSC : Stable signal source, such as an SG or an LD/DVD player
HD : Stable signal source, such as an HD SG or a DTV tuner .

When CRTs are replaced or when the deflection yoke is moved, perform the deflection yoke adjustment, horizontal and vertical size adjustments, and centering magnet adjustments before the convergence adjustment. (See Pages 190, 193 and 194)

3. Convergence Adjustment

3.1 Replacement of the EEPROMs inside the DIGITAL CONV. Assy

IC1410 24LC128P
IC1656 24LC08B (I) P

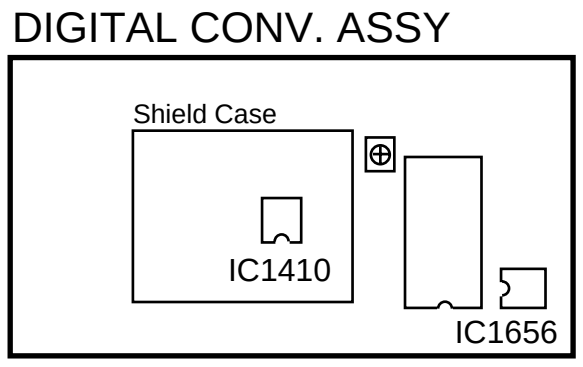

The data stored in the EEPROMs are as follows:

IC1410
OFFSET CONVER. MODE 1 (DFH, DFV)
OFFSET CONVER. MODE 3
Factory-preset values for convergence
User-adjusted values for convergence (CENTER, MULTI-POINT)

IC1656
OFFSET CONVER. MODE 1 (HDP)
OFFSET CONVER. MODE 2

3.2 Confirmation of convergence data

The convergence coarse adjustment modes change cyclically, as shown below, with each press of the DOT key in FACTORY mode:

Convergence coarse adjustment

→ DOT key (pressed once) : OFFSET CONVER. MODE 1
↓
DOT key (pressed twice) : OFFSET CONVER. MODE 2
↓
DOT key (pressed three times) : OFFSET CONVER. MODE 3
Cyclical change

Check whether the data of MODE 1 and MODE 2 are as shown in Table 2.

The cross-hatch signal is generated inside the unit, and is automatically displayed in OFFSET CONVER. mode and MANUAL CONVERGENCE mode. You can turn on and off the cross-hatch signal with the YELLOW key.

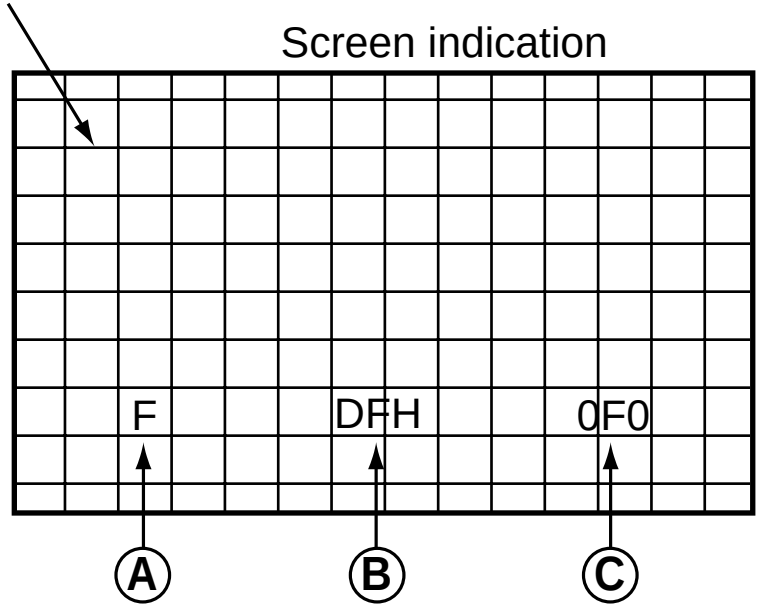

Ⓐ

Screen mode:
F : FULL Z : ZOOM C : CINEMA
N : NATURAL H : FULL for HD
The Screen modes change cyclically with each press of the SCREEN mode key.

Ⓑ

Adjustment items can be selected with the numeric keys.
See Table 2.

Ⓒ

Adjustment data:
MAX ↑ 1FF
100
001
CNT ● 000
3FF
2FF
MIN ↓ 200

Data can be adjusted with the VOL+ and VOL- keys.

Table 2 OFFSET CONVER DATA

OFFSET CONVER MODE 1						
Numeric Key	Adjustment Item	Screen Mode				
		F FULL	Z ZOOM	C CINEMA	N NATURAL	H HD FULL
		140	140	140	140	160
1	DFH	0F0	0D0	0D0	0D0	100
2	DFV	070	070	070	070	070
3	HDP	010	010	010	010	010

OFFSET CONVER MODE 2						
Numeric Key	Adjustment Item	Screen Mode				
		F FULL	Z ZOOM	C CINEMA	N NATURAL	H HD FULL
1	HFP	0CC	0CC	0CC	0CC	0D0
2	HCP	00F	00F	00F	00F	015
3	HTP	047	047	047	047	044
4	HHD	0EE	0EE	0EE	0EE	0E9
5	HPW	00C	00C	00C	00C	00F
6	V1C	01F	029	025	022	01D
7	V1S	000	000	000	000	000
8	VFP	01D	02D	013	033	065

The above offset convergence values are common to the PRO-720 HD/ PRO-620HD and PRO-520HD.

If the offset convergence values are as indicated in Table 2, proceed to 3.3. If the values are not the same, adjust the values with the numeric keys and VOL +/– keys.

Example:
To check HDP in ZOOM mode of OFFSET CONVER. MODE 1
① Enter the FACTORY mode.
② Enter the OFFSET CONVER. MODE 1 by pressing the DOT key once.
③ Enter the ZOOM screen mode by pressing the SCREEN mode key once. (When the unit enters FACTORY mode, the screen mode automatically becomes FULL.)
④ Check the indication on the screen by pressing the numeric key 3.
Indication at the bottom of the screen : Z HDP 010
If the adjustment value is 010, adjustment is not required.
If the adjustment value is other than 010, adjust with the VOL + or VOL- key so that the value becomes 010.

3.3 Coarse Adjustment of the Green

(Proceed with 3.3 and afterwards when the DIGITAL CONV. Assy is not replaced.)
Select adjustment items (STATIC and SIZE of vertical and horizontal lines, etc.) for each GH and GV, and adjust to roughly eliminate distortion. (For GV, peripheral pin distortion adjustment is necessary.)
Press the DOT key three times to enter OFFSET CONVER. MODE 3.
Press the SCREEN mode key and proceed with the adjustment for each screen mode.

The cross-hatch signal is generated inside the unit, and is automatically displayed in OFFSET CONVER. mode and MANUAL CONVERGENCE mode. You can turn on and off the cross-hatch signal with the YELLOW key.

Screen indication

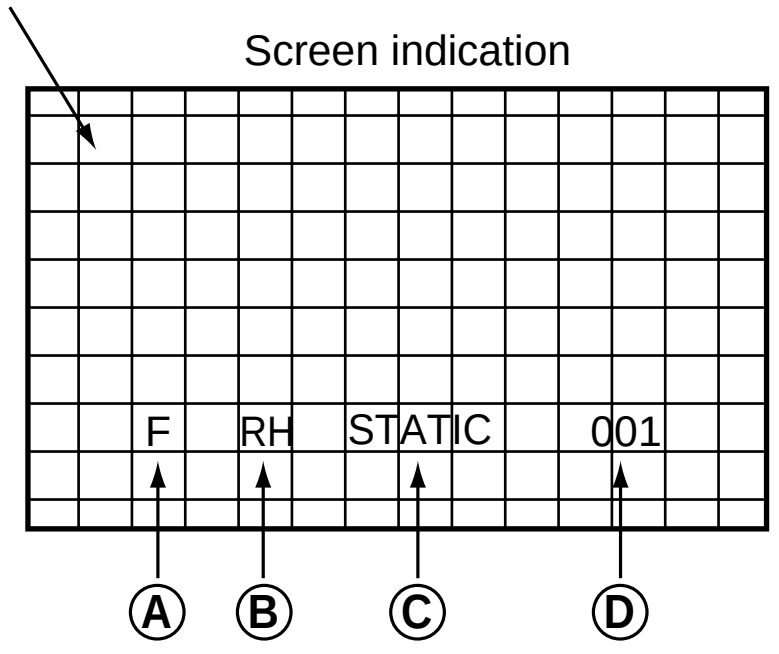

Ⓐ

Screen mode:
F : FULL
Z : ZOOM
C : CINEMA
N : NATURAL
H : FULL for HD

The Screen modes change cyclically with each press of the SCREEN mode key.

Ⓑ

Cyclically changes with the CH+ or CH- key as follows:

RH ↔ RV ↔ BH
↕ ↕
GV ↔ GH ↔ BV

Ⓒ

Adjustment items can be selected with the numeric keys. See Table below.

• Waveforms adjustable in the coarse adjustment of the green

Numeric Key	GH	GV
0	STATIC	STATIC
1	SKEW	SKEW
6		PIN
8	SIZE	SIZE

Ⓓ

Adjustment data:
MAX ↑ 1FF
100
001
CNT ● 000
3FF
2FF
MIN ↓ 200

Data can be adjusted with the VOL+ and VOL- keys.

• Pattern for each adjustment item

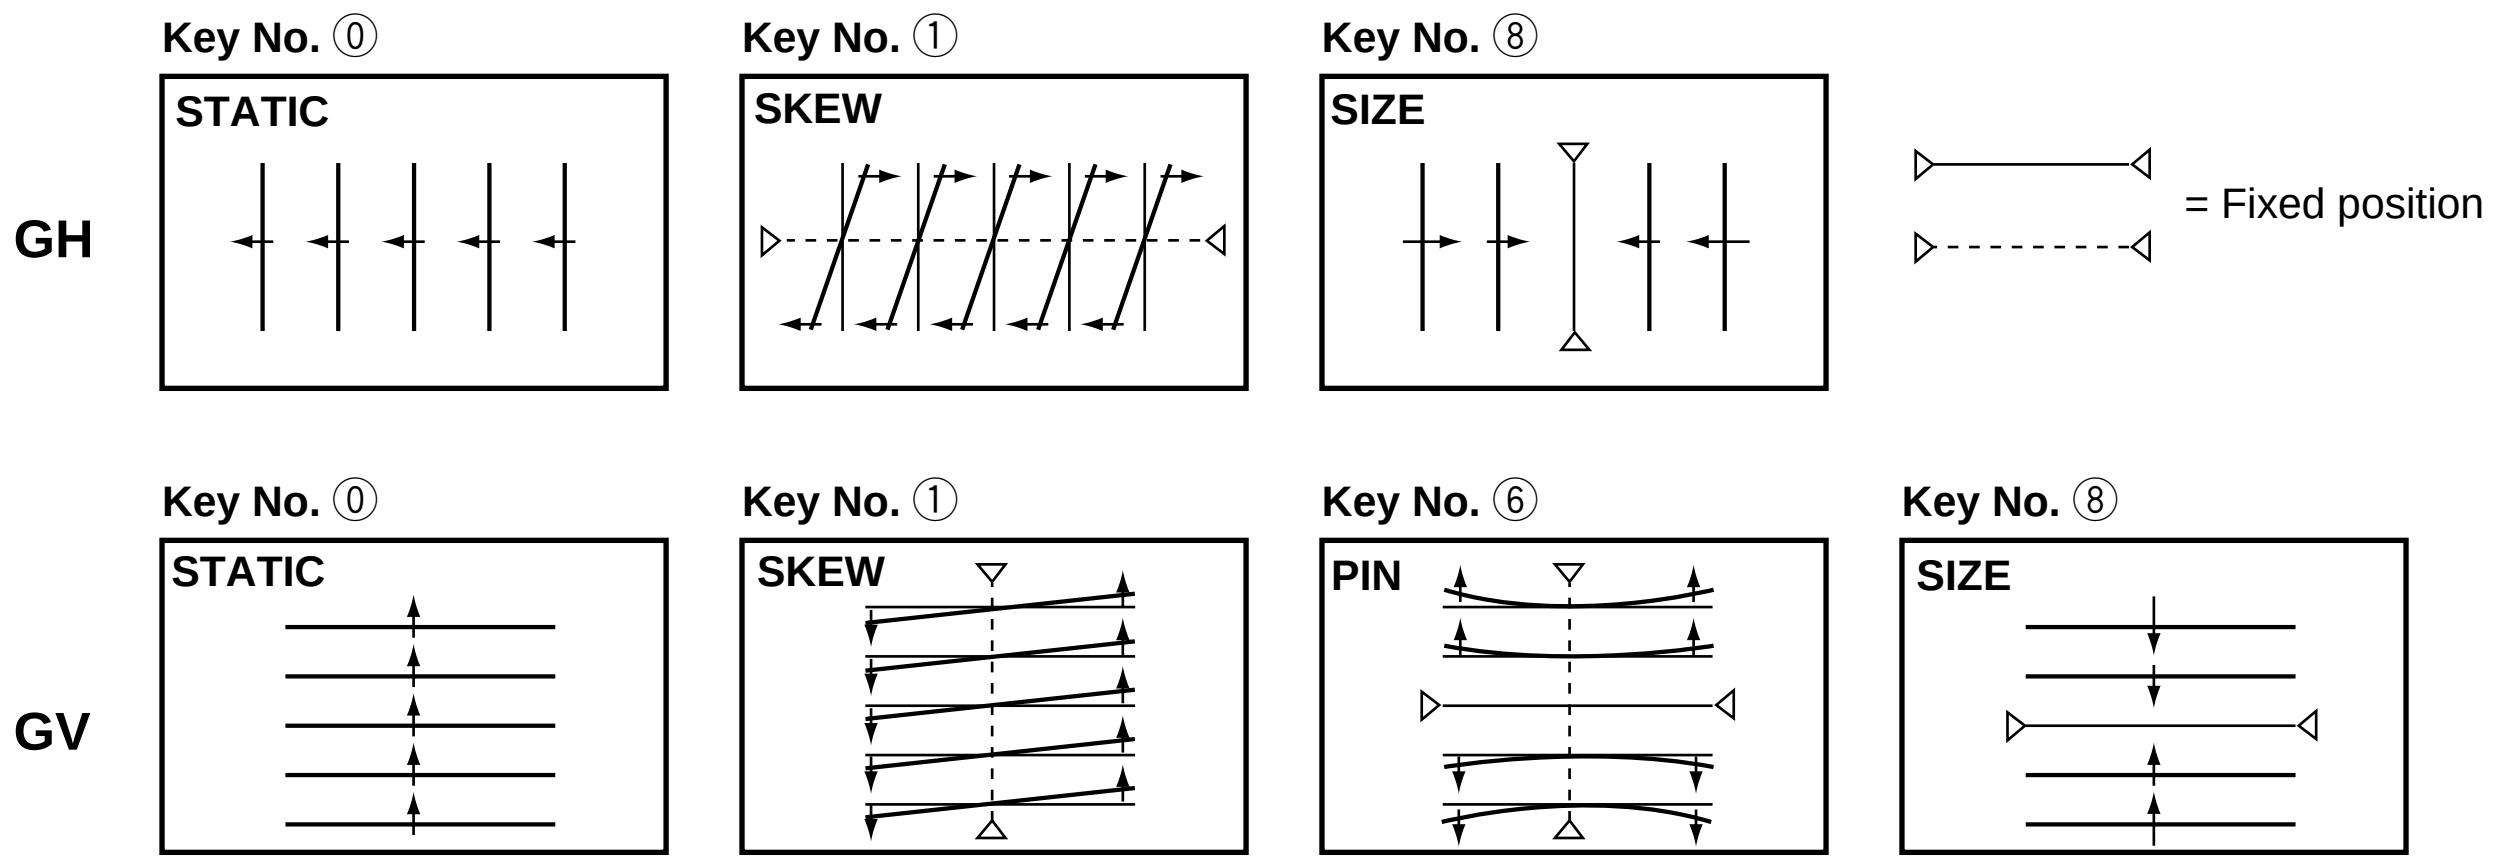

Note 1: When the green CRT is replaced, or when the deflection yoke for the green is replaced, prior to the convergence adjustment, tune the center of the image to the center of the screen by turning the centering magnet.

Note 2: When the CONVER. AMP Assy or DIGITAL CONV. Assy is replaced, make coarse adjustment as shown in 3.3 above.

3.4 Fine-adjustment of the Green

Enter MANUAL CONVERGENCE mode by pressing the SET/ENTER key, and make adjustments. Repeatedly make the coarse adjustment as shown in 3.3 if necessary. Proceed with the adjustment for each screen mode. Adjusted values for the green become the standard for the red and the blue.

3.4.1

In MANUAL CONVERGENCE mode entered by pressing the SET/ENTER key, the display becomes as shown below:

Screen indication

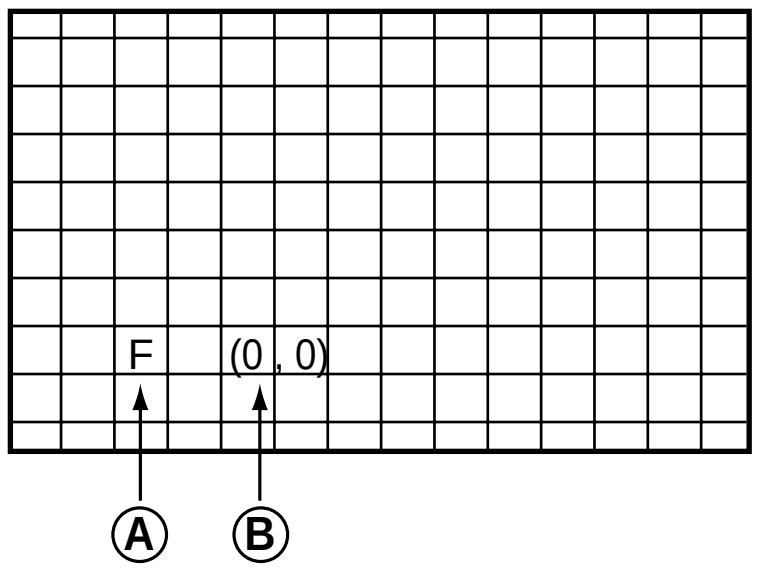

Ⓐ

Screen mode:
F : FULL
Z : ZOOM
C : CINEMA
N : NATURAL
H : FULL for HD

The Screen modes change cyclically with each press of the SCREEN mode key.

Ⓑ

Coordinates where the cursor (adjustment point) is located
There are 72 adjustment points (8,9) on the coordinates for FULL, ZOOM, CINEMA, NATURAL and FULL for HD modes, but the coordinates actually used for adjustment are as follows (the coordinates outside the ranges indicated below are outside the screen, and adjustment will not have any effect on the screen):

FULL : (0, 1) to (7, 9)
ZOOM : (0, 1) to (7, 7)
CINEMA : (0, 1) to (7, 8)
NATURAL : (0, 1) to (7, 8)
HD for FULL : (0, 1) to (7, 9)
(X, Y): X=abscissa, Y=ordinate

Some coordinates may be outside the screen and invisible.
The point at coordinates (0, 0) is at the upper left of the screen.

3.4.2

Move the cursor to a point to be adjusted with the cursor move keys.

Screen indication

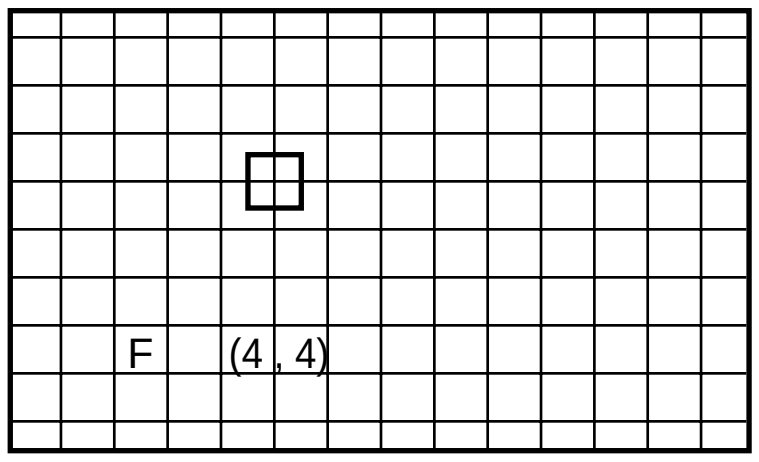

Note: The actual shape of the cursor is " [ ] ".
The position of the cursor in this figure is different from the actual position on the screen.

3.4.3

Press the SET/ENTER key when the point to be adjusted is determined.

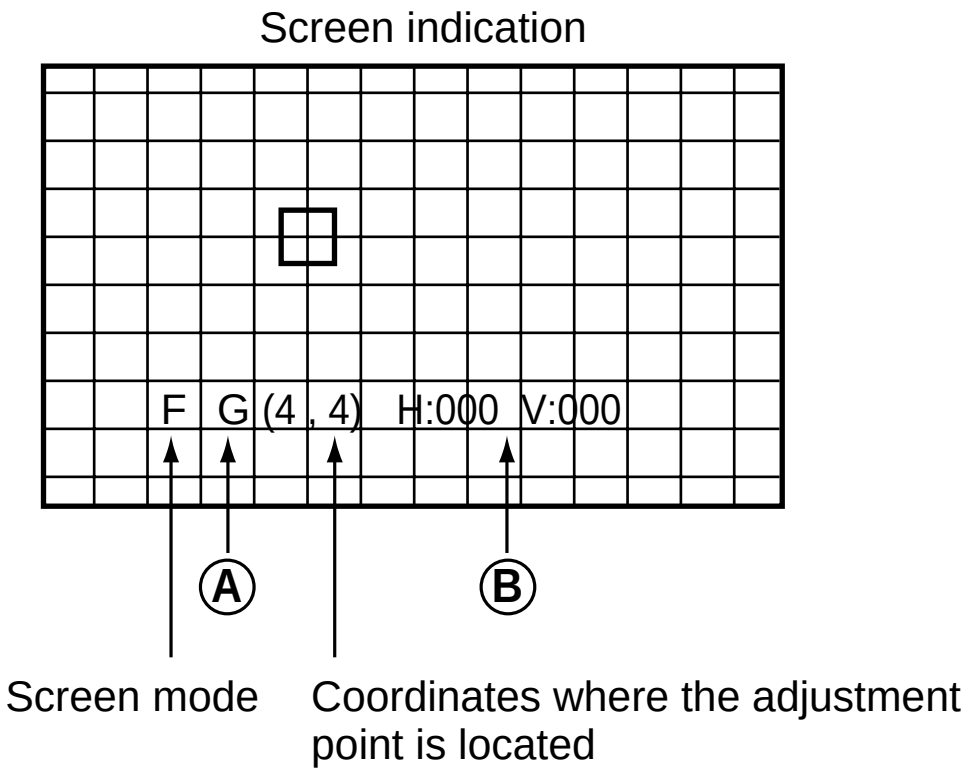

Ⓐ

Color to be adjusted:
G: GREEN, R: RED, B: BLUE
To change colors, use the CH+ or CH- key.
The colors change cyclically as follows:
With CH+ : R → B → G → R
With CH- : R → G → B → R

Ⓑ

H : *** Adjustment data in the horizontal direction
V : *** Adjustment data in the vertical direction
(***= hexadecimal number)

Data		
	MAX ↑	1FF
		100
		001
	CNT ●	000
		3FF
		2FF
	MIN ↓	200

For adjustment, move the Line to the desired direction with the cursor keys.

To move the Horizontal Line upward, press the " ▲ " key. (The value decreases.)
To move the Horizontal Line downward, press the " ▼ " key. (The value increases.)
To move the Vertical Line to the left, press the " ◀ " key. (The value decreases.)
To move the Vertical Line to the right, press the " ▶ " key. (The value increases.)

- To select one color, use the SEARCH key for the red, SELECT key for the green, FREEZE key for the blue. Pressing this key toggles color muting on or off.
- To mute all the colors, press the DISPLAY key. To release muting, press the SEARCH, SELECT, or FREEZE key.
- To erase the cross hatch, press the YELLOW key. Pressing this key toggles between display of the cross hatch screen and the input screen.
- To change the brightness of the input screen, use the VOL+ or VOL- key. The brightness increases with the VOL+ key (CONTRAST +10) and decreases with the VOL- key (CONTRAST -40). (The brightness can be changed only in Fine-adjustment mode. The brightness of the cross hatch screen cannot be changed.)

3.4.4

When adjustment of the selected point is finished, press the SET/ENTER key, then adjust the other adjustment points by repeating 3.4.1 to 3.4.4.

3.4.5

Make the adjustment for the green in each screen mode, and use the green as the standard screen for the red and the blue. To change screen modes, use the SCREEN mode key.

Note: Some coordinates for adjustment points are located outside the screen. Be sure not to make adjustments on those points, because adjustment of those coordinates will have little effect on the screen.

● Adjustment Technique

1st step

Adjust so that the vertical and horizontal lines forming a cross at the center of the screen become straight. Check also the screen size and the linearity of the horizontal and vertical lines.

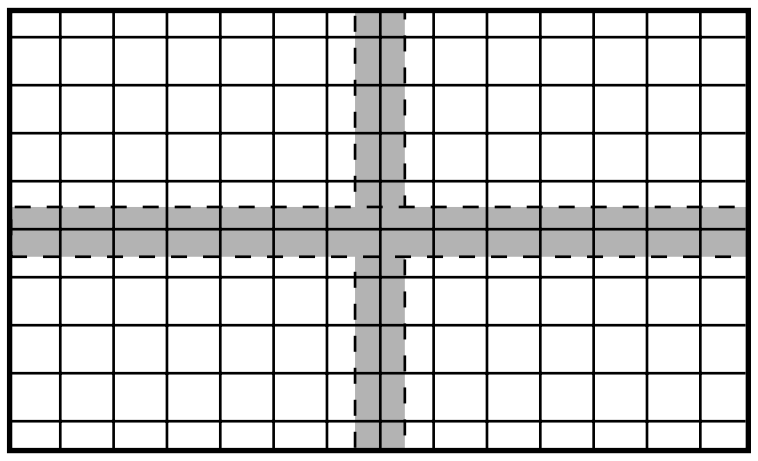

- See "3.3 Coarse adjustment of the green." Adjust GH STATIC, SKEW and SIZE, and GV STATIC, SKEW, PIN and SIZE to correct the screen location, tilt, screen information volume, and peripheral pin distortion.
- See "3.4 Fine-adjustment of the green." Fine-adjust the linearity of the vertical and horizontal lines forming a cross at the center of the screen.

Note: In principle, only the selected point is changed in MANUAL CONVER. mode. However, as the adjusted data (amount of adjustment) increase, peripheral points may be affected. So be sure not to greatly change the adjustment data of one point, but change peripheral points at the same time. See the examples below.

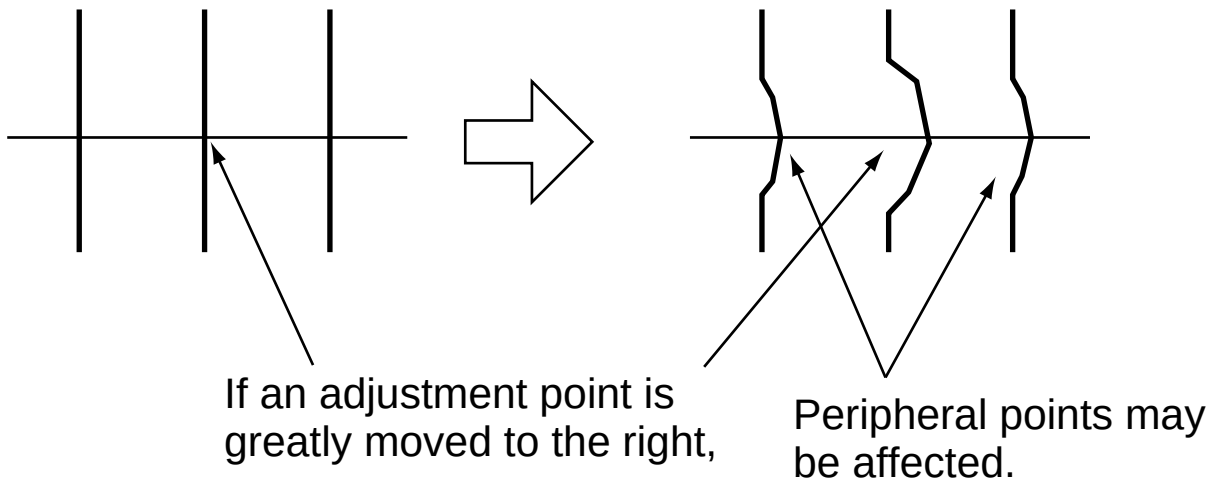
If an adjustment point is greatly moved to the right,
Peripheral points may be affected.

In a case of an error in convergence:

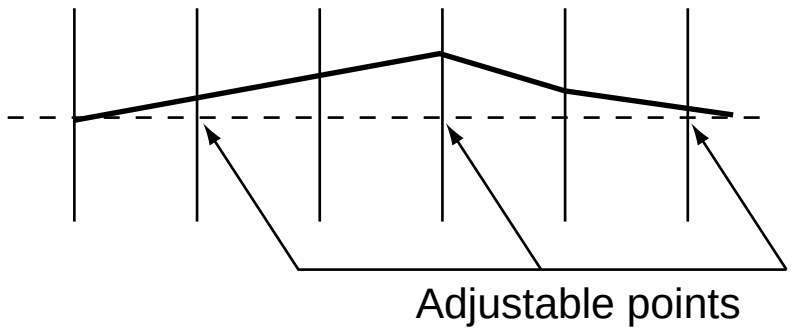

Good adjustment:

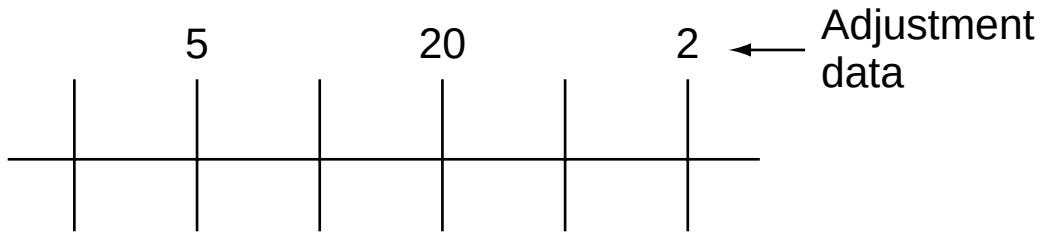

Bad adjustment:

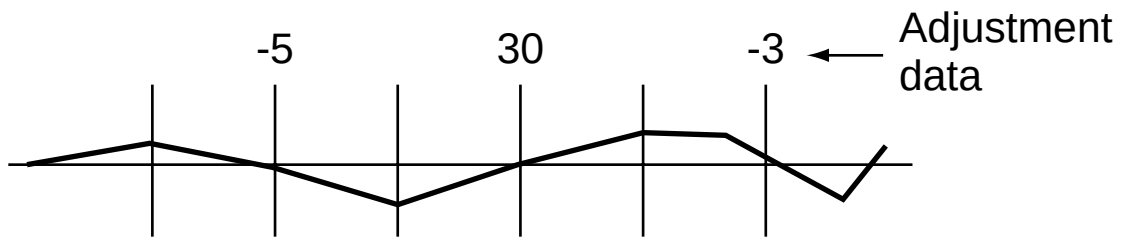

2nd step

Adjust so that the vertical lines become straight, taking care to preserve proper screen information volume and the linearity. Adjust the right half of the screen first, then the left half. (See 3.4.)

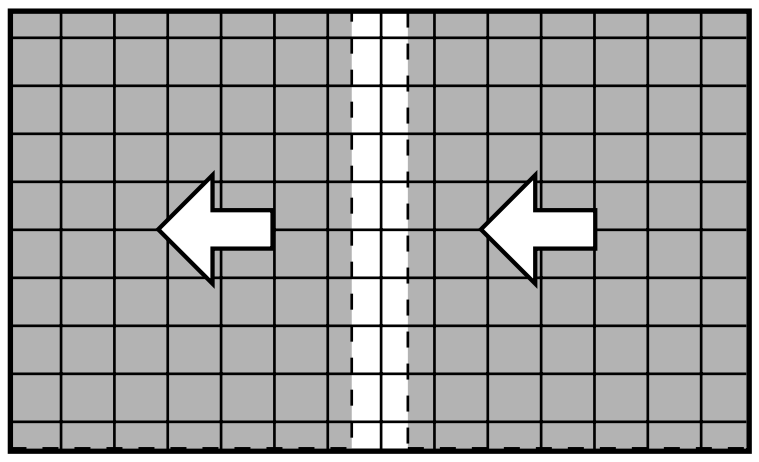

Right half : Adjust from the edge toward the center.
Left half : Adjust from the center toward the edge.

3rd step

Adjust so that the horizontal lines become straight. Adjust the upper half of the screen first, then the lower half. (See 3.4.)

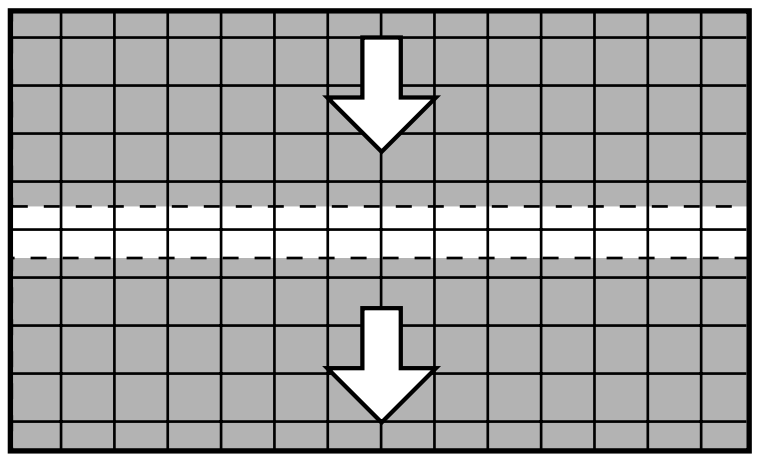

Upper half : Adjust from the edge toward the center.
Lower half : Adjust from the center toward the edge.

4th step

Repeat 2nd and 3rd steps to take total balance. Then the adjustment for the green is completed.
To return from the fine adjustment mode to the coarse adjustment mode, press the MENU key once, then the DOT key.

Note: When the MENU key is pressed to quit MANUAL CONVERGENCE mode, the display will be unstable for several seconds. This is because the adjustment data are being written to the EEPROMs, and is not a malfunction. Do not perform any operation (power on/off, or pressing keys on the remote control unit or on the main unit, etc.) during this period, because doing so may affect your adjustment data.

3.5 Coarse Adjustment of the Red

After the green adjustment is completed, quit MANUAL CONVERGENCE mode by pressing the MENU or MUTING key, then press the DOT key three times to enter OFFSET CONVER. MODE 3.
Select adjustment items for RH and RV, and roughly correct distortion to converge with the green. Adjustment is required for each screen mode

For adjustable items of the red and the blue, see the following table.

Numeric Key	RH	RV	BH	BV
0	STATIC	STATIC	STATIC	STATIC
1	SKEW	SKEW	SKEW	SKEW
4		KEY		KEY
6		PIN		PIN
7	LIN		LIN	
8	SIZE	SIZE	SIZE	SIZE

• Pattern for each adjustment item

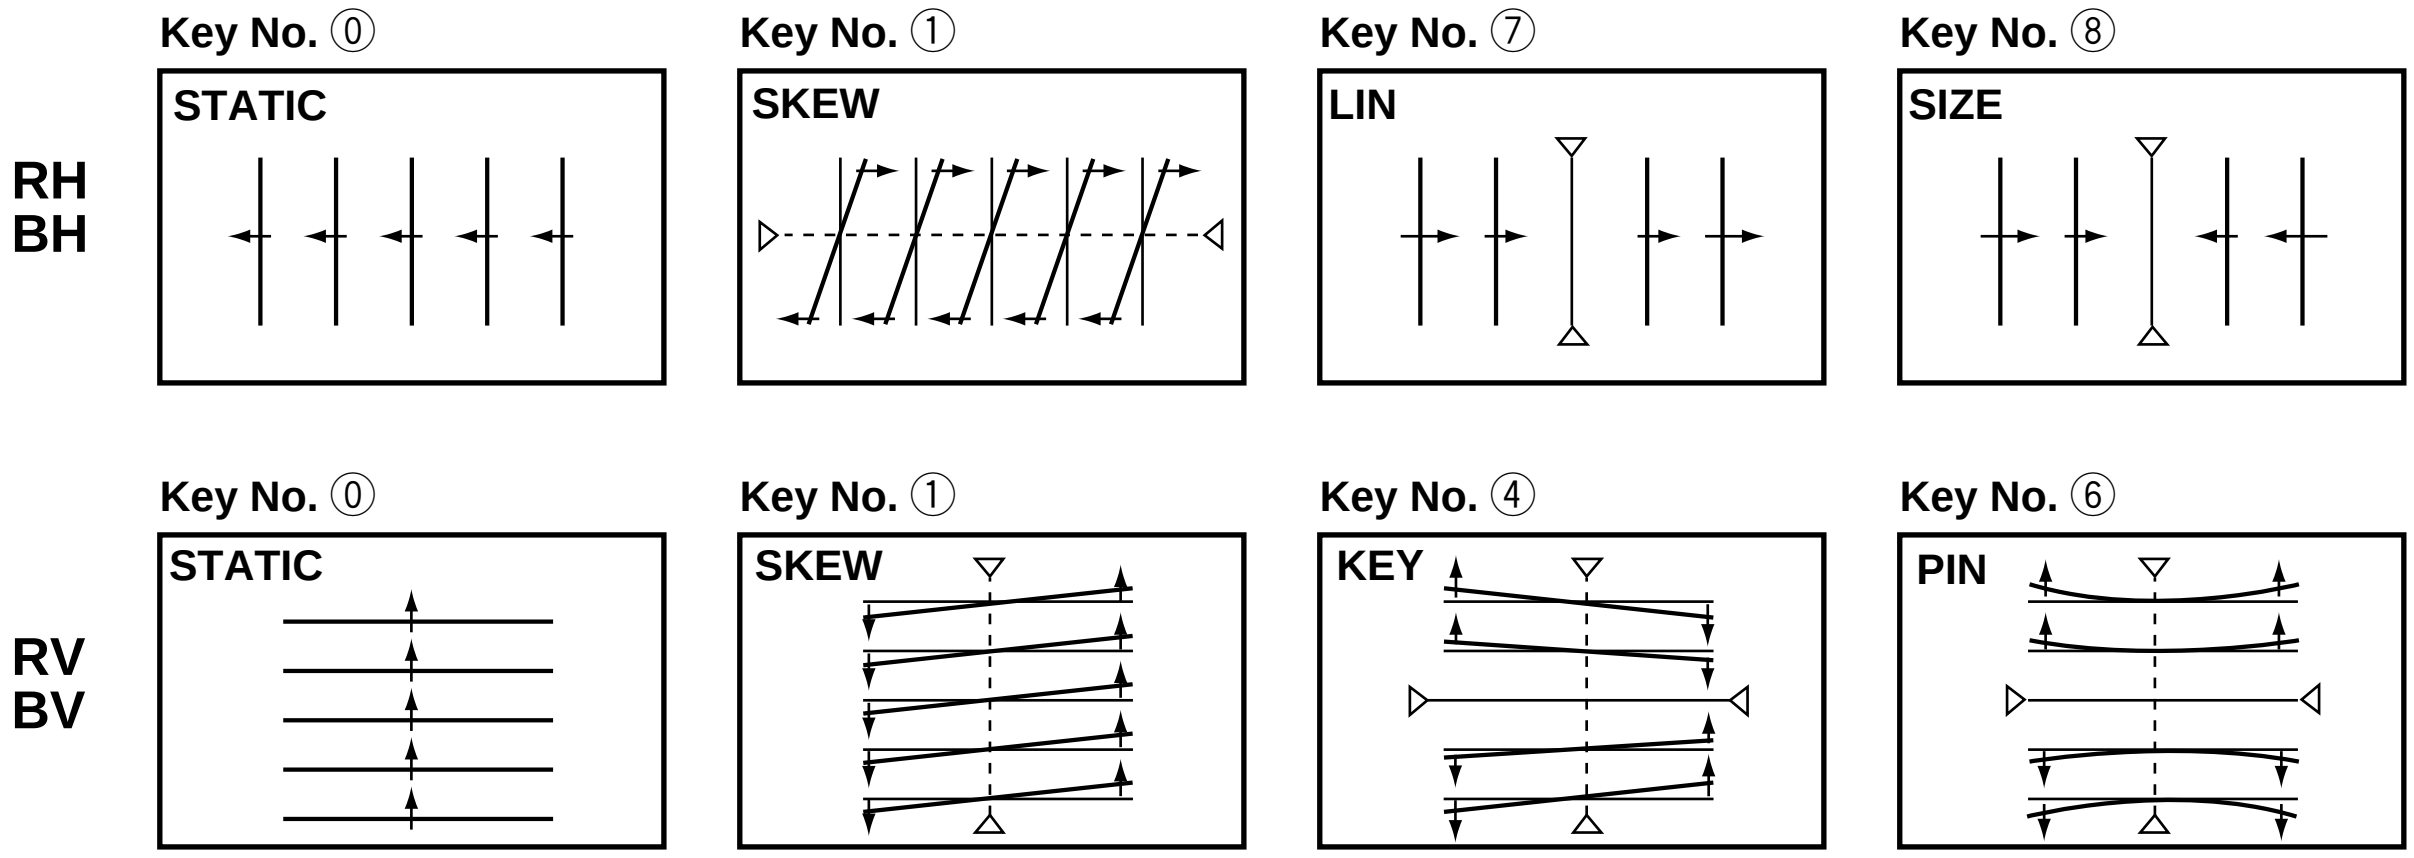

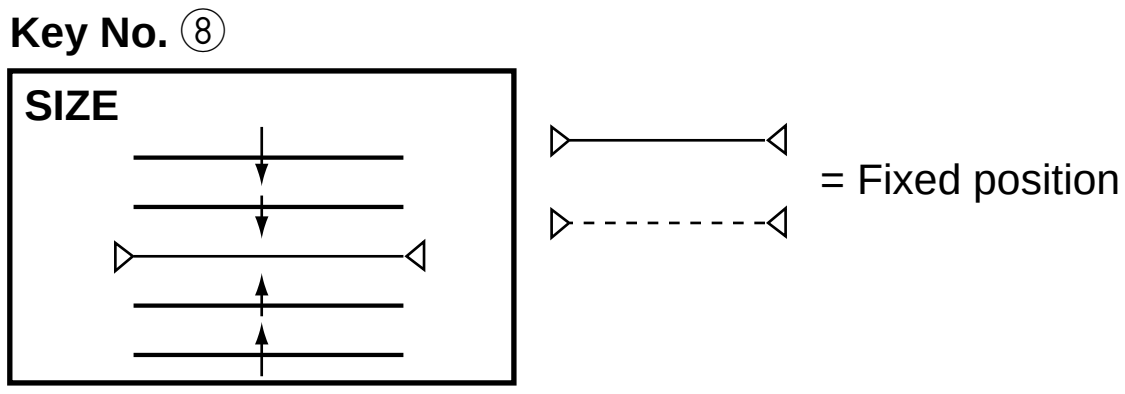

Note 1: When the red CRT is replaced, or when the deflection yoke for the red is replaced, prior to adjustment, tune the center of the image to the center of the screen by turning the centering magnet.

Note 2: When the CONVER. AMP Assy or DIGITAL CONV. Assy is replaced, make coarse adjustment as shown in 3.5 above.

3.6 Fine-adjustment of the Red

To fine-adjust the red, press the SET/ENTER key to enter MANUAL CONVERGENCE mode. Repeat the coarse adjustment described in "3.5 Coarse Adjustment of the Red" if necessary. Make adjustment for each SCREEN mode, and eliminate distortion to converge with the green.

3.6.1

Press the SET/ENTER key to enter MANUAL CONVERGENCE mode, and make adjustment in the same manner as with the green. First, adjust the vertical and horizontal the red lines at the center of the screen so that they converge with the green center lines.

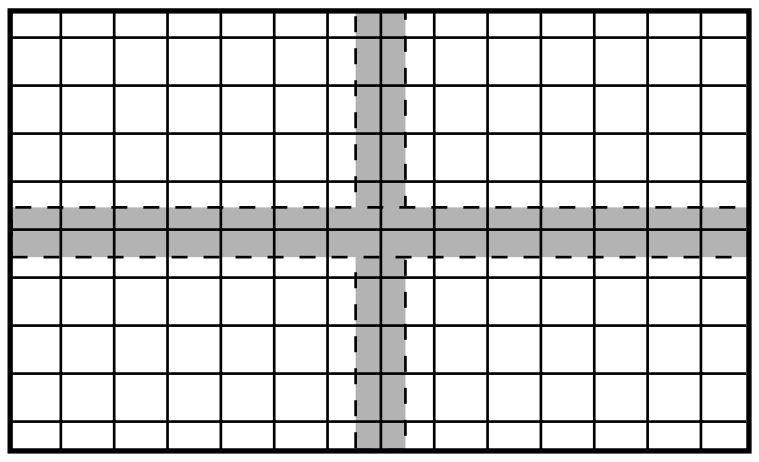

3.6.2

Adjust the red vertical lines so that they converge with the green vertical lines. Proceed to adjustment of the right half of the screen, then the left half. Adjustment should be done from the part where convergence is greatly dislocated.

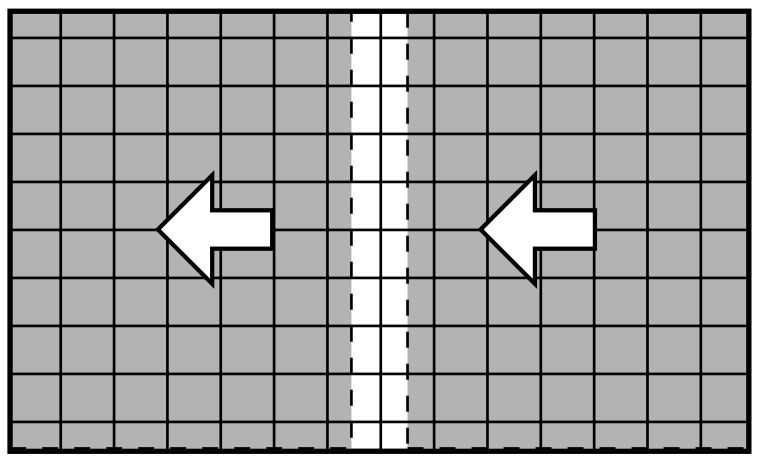

3.6.3

Adjust the red horizontal lines so that they converge with the green horizontal lines. Proceed to adjustment of the upper half of the screen, then the lower half. Adjustment should be done from the part where convergence is greatly dislocated.

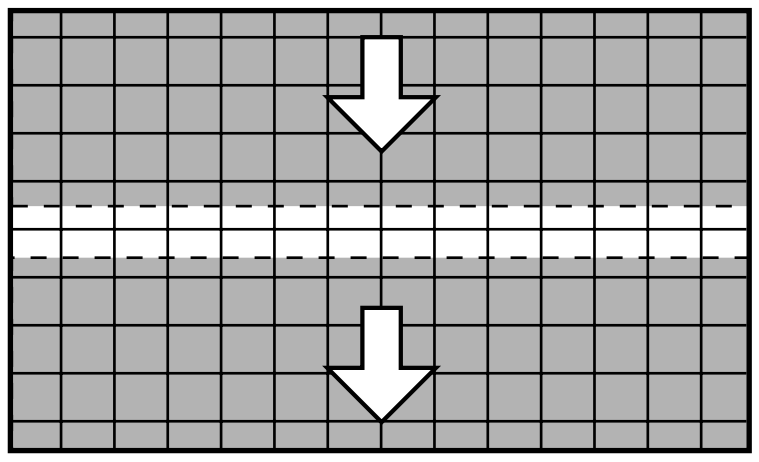

3.6.4

Repeat the adjustments described in 3.6.2 and 3.6.3 so that all the red vertical and horizontal lines converge with the green lines. (Completion of one screen mode)

3.6.5

Repeat procedures 3.6.2 through 3.6.4 for the other screen modes.
(Completion of the red adjustment)

3.7 Coarse Adjustment and Fine Adjustment of the Blue

Make coarse and fine-adjustments of the blue in the same manner as with the red, described in 3.5 and 3.6.

3.8 Confirmation of Adjustment

After the green, red, and blue adjustments are finished, check convergence errors with the patterns for all three colors on the monitor.
Check the patterns in all SCREEN modes, and if any error in convergence is recognized, readjust convergence in MANUAL CONVER. mode.

Note: Be sure NOT to change the green pattern during readjustment.

IMPORTANT!

(1) When all the adjustments are completed, or when adjustment should be temporarily interrupted, adjustment data must be written to the EEPROM, in the following manner:
When all the adjustments are completed, or to interrupt adjustment, press the MENU key to quit Convergence Adjustment mode. The display will be unstable for several seconds, but this is because the data are being written to the EEPROM. Wait without doing anything until the display becomes stable, which means writing of data to the EEPROM is finished.
If the power of the TV is turned off (standby) during Convergence Adjustment mode (coarse and fine-adjustments), turn on the TV, enter FACTORY mode, and enter Convergence Adjustment mode by pressing the SET/ENTER key. Then press the MENU key. The data will be written to the EEPROM as described above.

(2) Do NOT turn off the main power during or after convergence adjustment.
If you do so, the adjusted data may be lost. If the data are lost, you must make all the adjustments again.

(3) When the CENTER POINT (test cross) or MULTI-POINT (user convergence) adjustments have been made by a user, and if the unit enters FACTORY Convergence Adjustment mode (with the DOT and SET/ENTER keys), the user's adjustment data will be all cleared and returned to the factory-preset values.
Be sure NOT to enter this Convergence Adjustment mode except when a repair related to convergence or a repair that requires convergence adjustment later, is needed.
If you inadvertently enter Convergence Adjustment mode, readjust the convergence.

7 White Balance Adjustment

7 -1 Contrast Adjustment

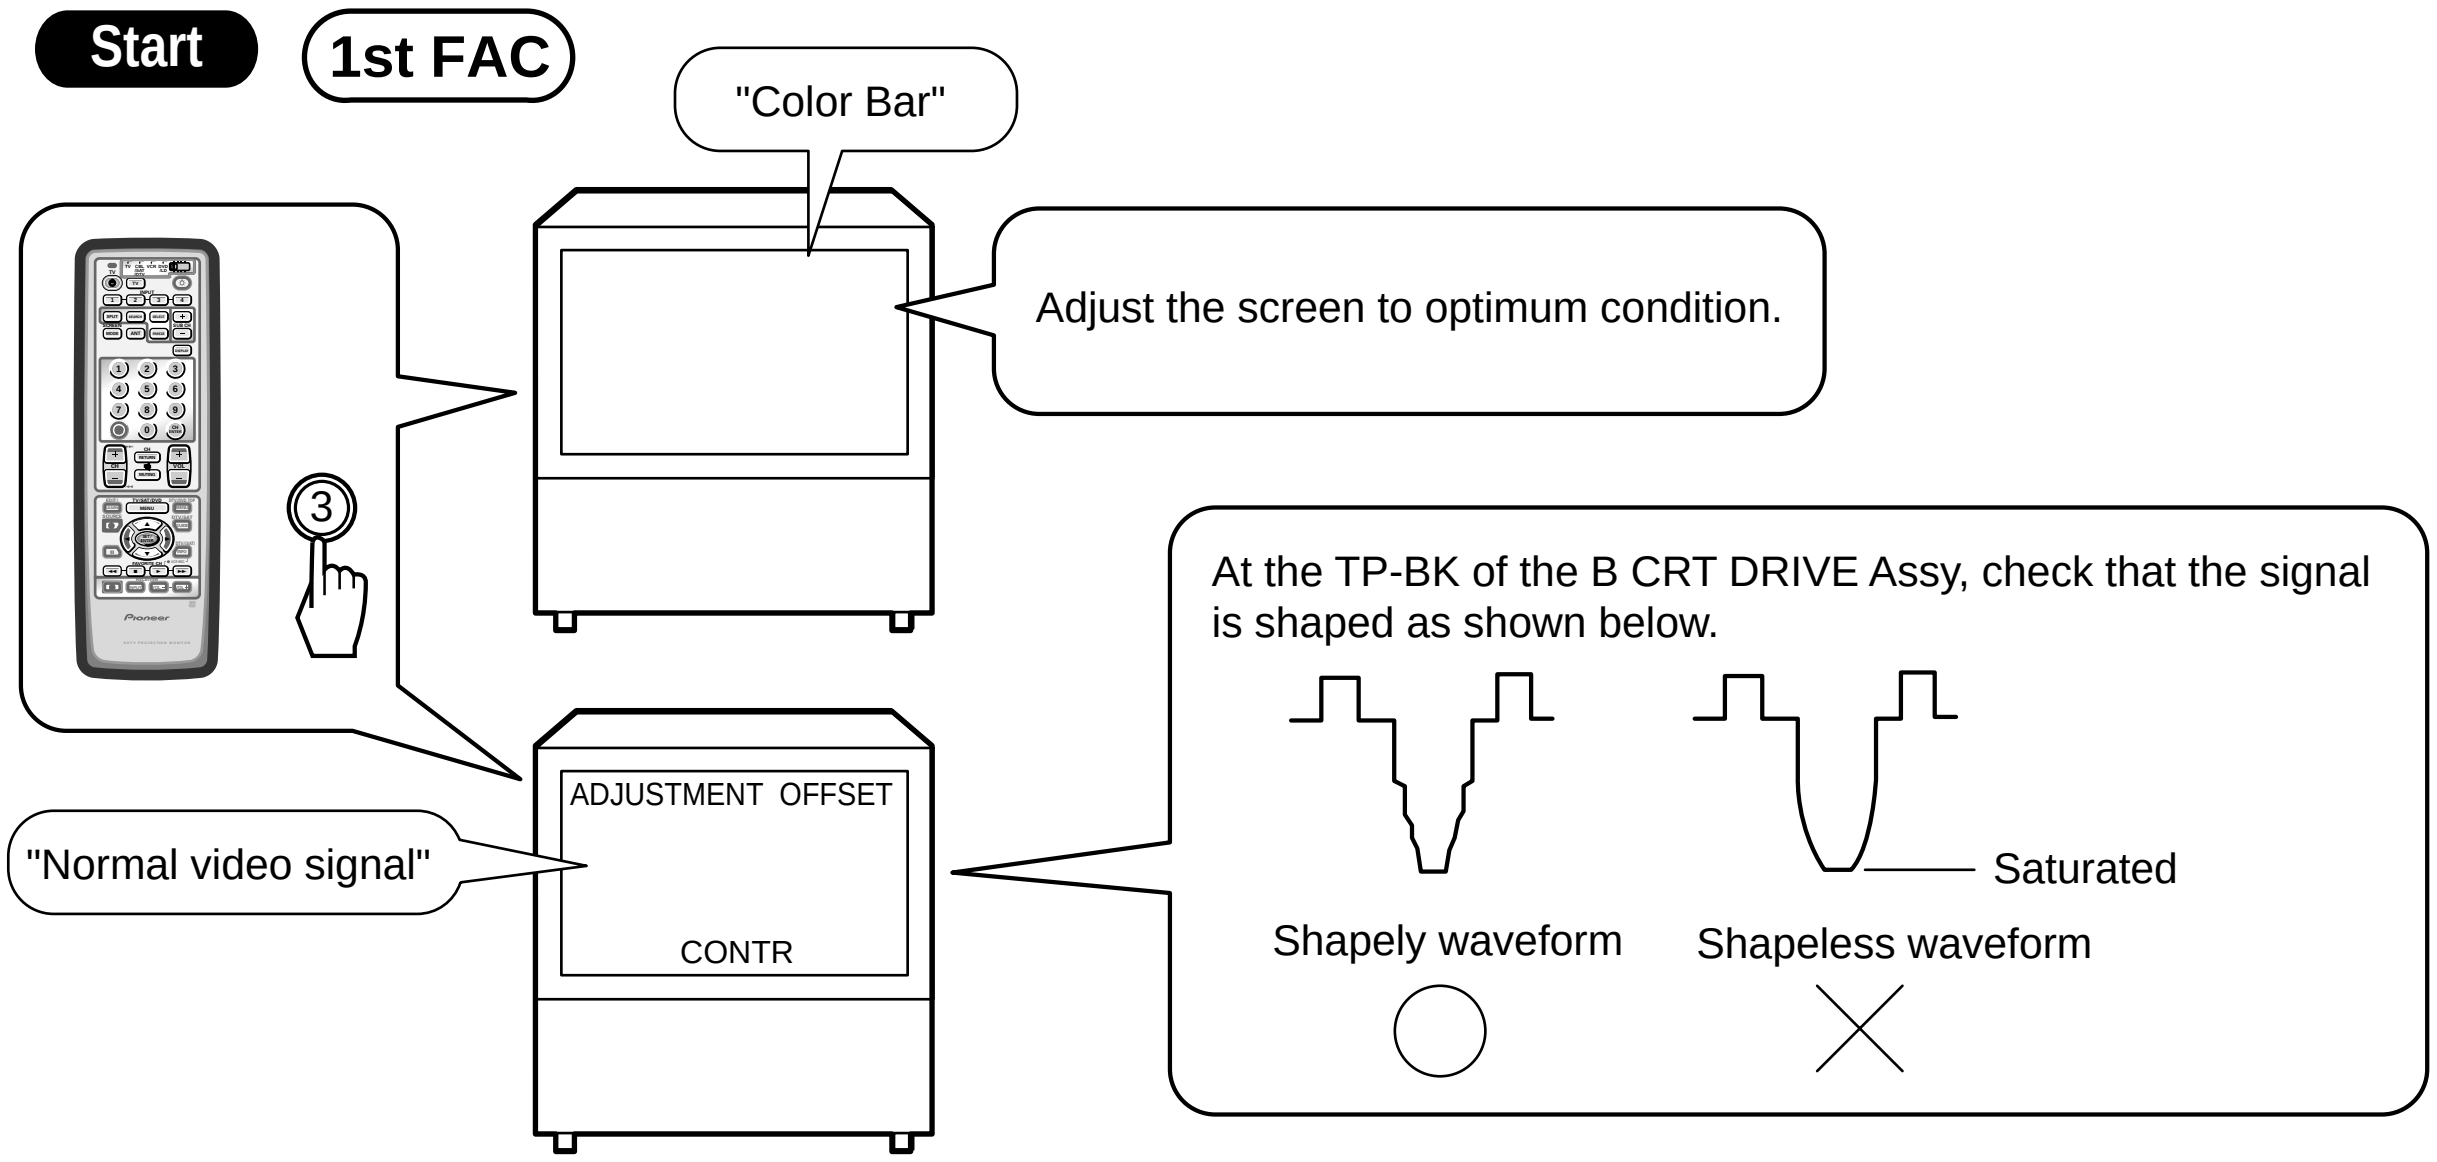
Start
1st FAC
"Color Bar"
Adjust the screen to optimum condition.
3
ADJUSTMENT OFFSET
CONTR
"Normal video signal"
At the TP-BK of the B CRT DRIVE Assy, check that the signal is shaped as shown below.
Saturated
Shapely waveform
Shapeless waveform
○
×

After the STD adjustment is complete, adjust the COMP 15K, COMP 31K, 33K RGB, COLOR TEMP FILM or STD and COLOR TEMP B&W for STD.

7-2 White Balance Adjustment

This mode is to set the standard picture quality for a normal picture.

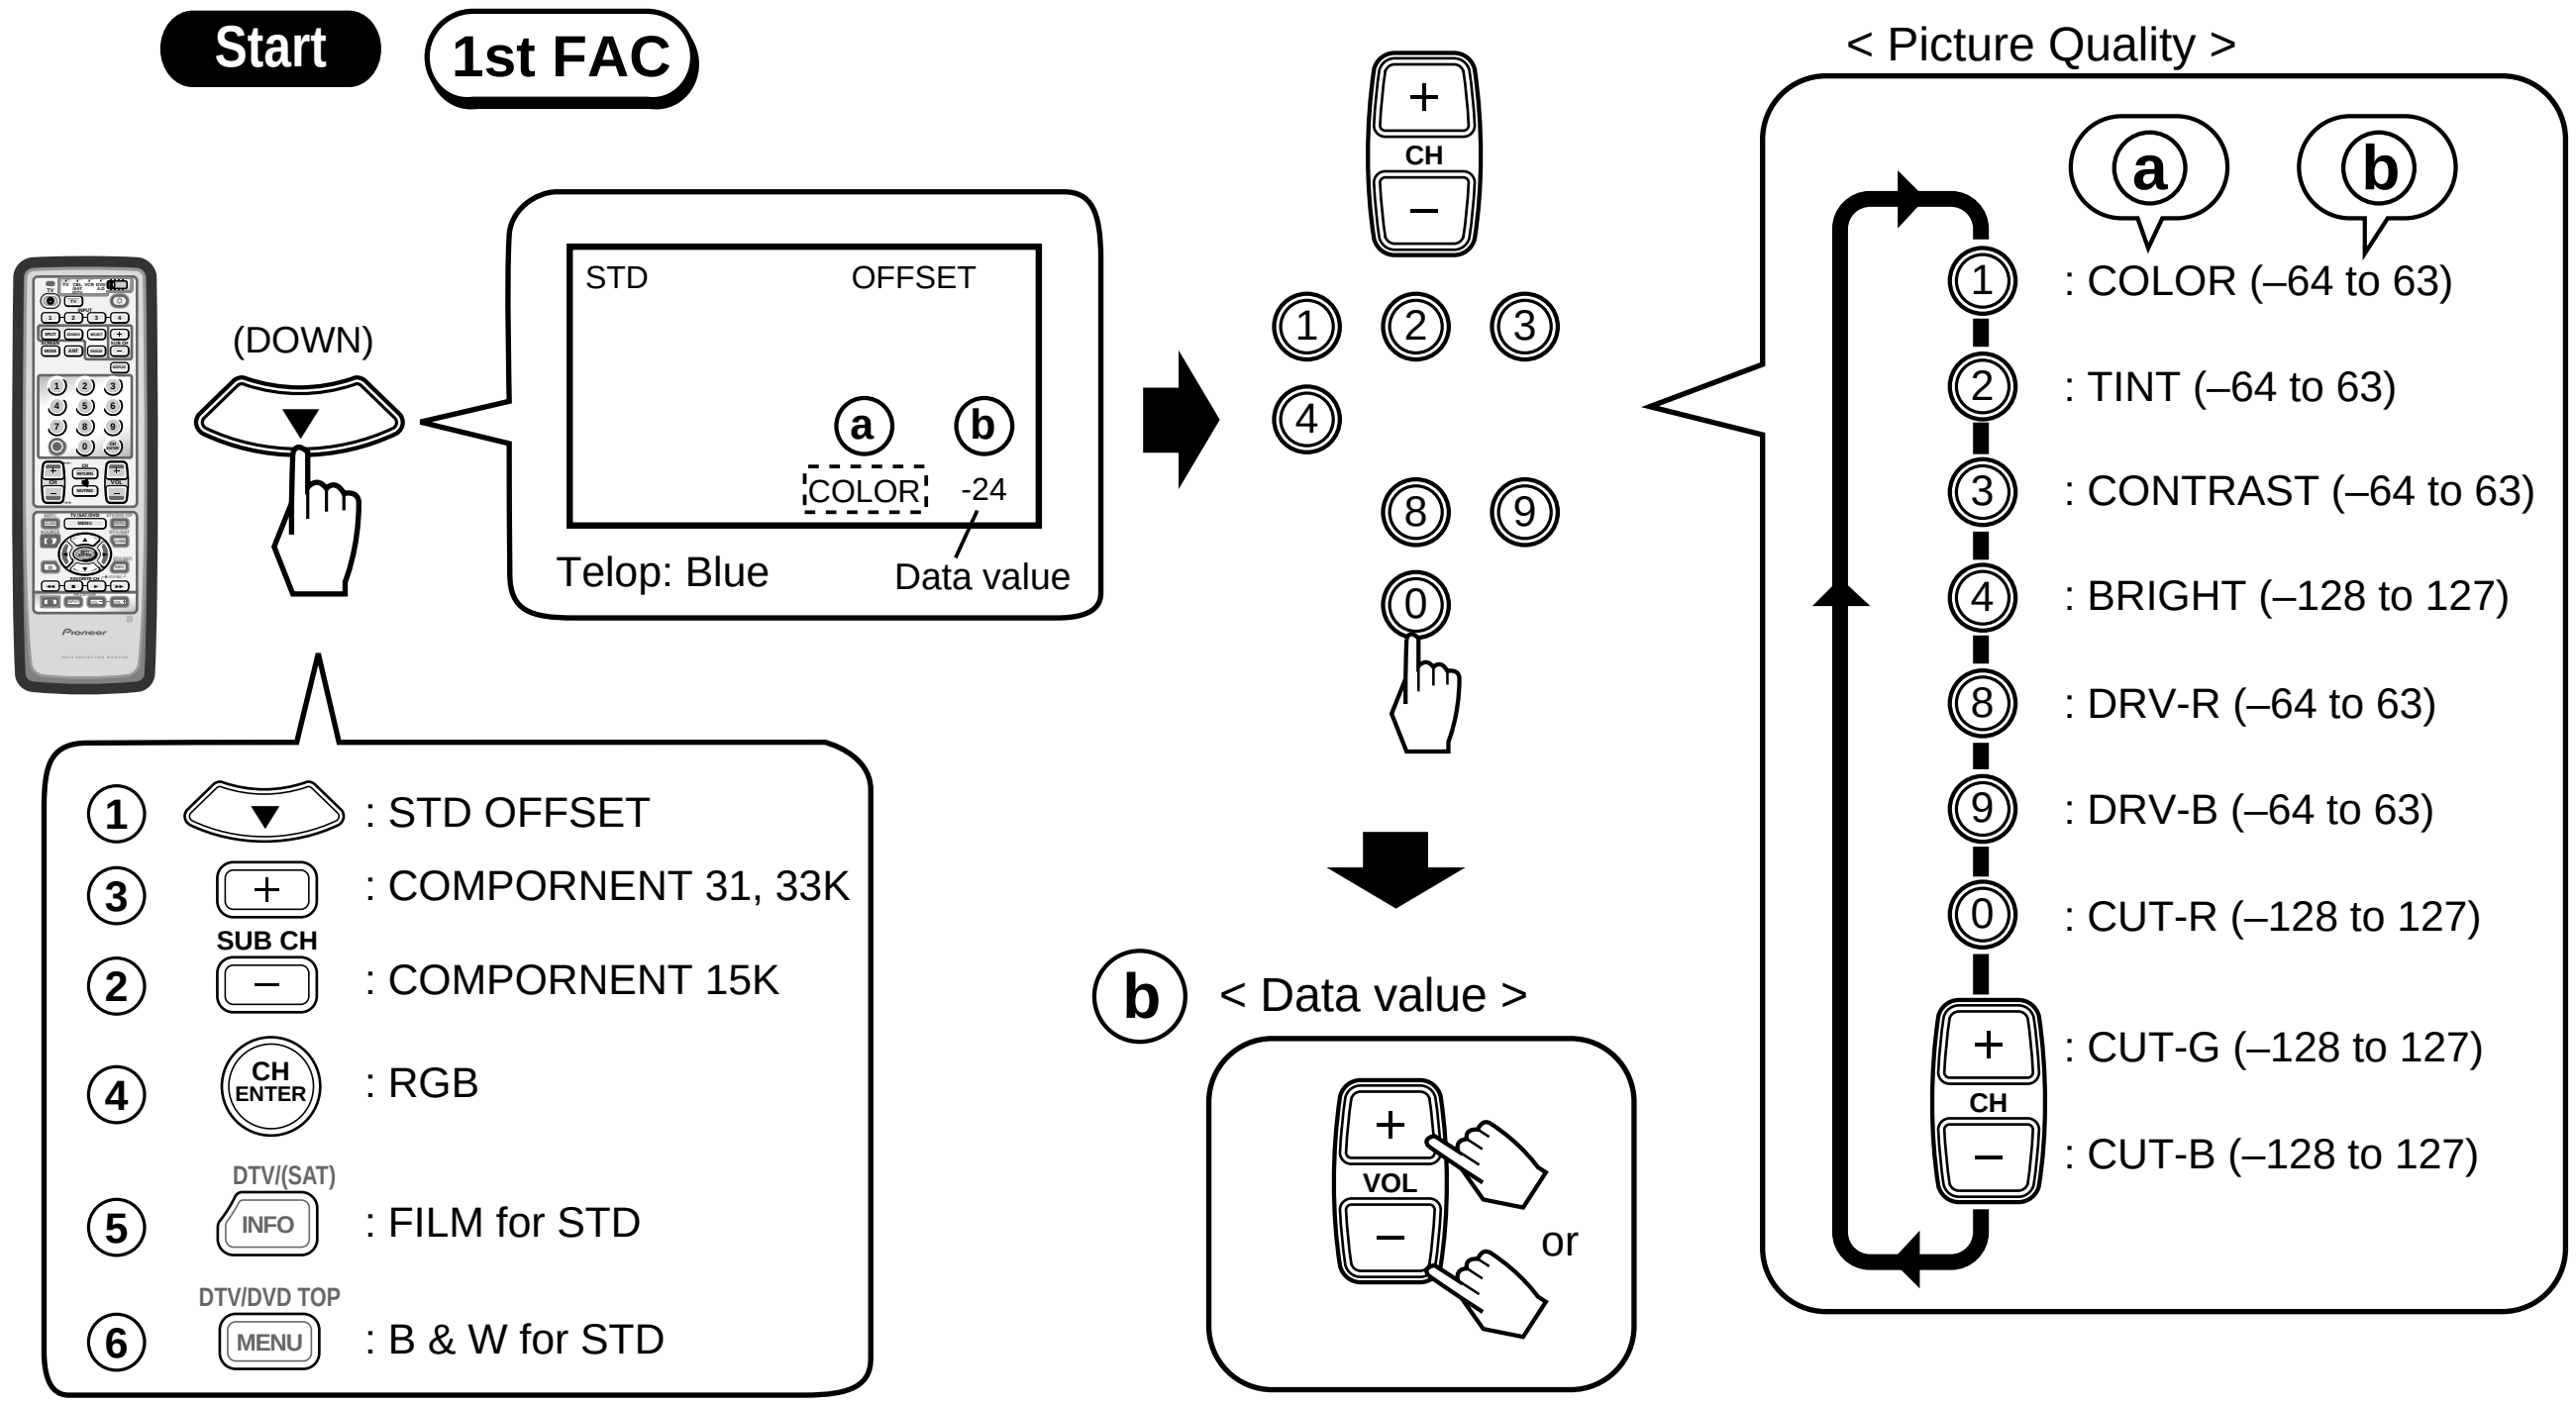
Start
1st FAC
(DOWN)
STD
OFFSET
a
b
COLOR
-24
Telop: Blue
Data value
CH
+
−
1 2 3
4
8 9
0
< Picture Quality >
a
b
b
< Data value >
VOL
or

① (DOWN) : STD OFFSET
③ SUB CH + : COMPORNENT 31, 33K
② SUB CH − : COMPORNENT 15K
④ CH ENTER : RGB
⑤ DTV/(SAT) INFO : FILM for STD
⑥ DTV/DVD TOP MENU : B & W for STD

< Picture Quality >

① : COLOR (–64 to 63)
② : TINT (–64 to 63)
③ : CONTRAST (–64 to 63)
④ : BRIGHT (–128 to 127)
⑧ : DRV-R (–64 to 63)
⑨ : DRV-B (–64 to 63)
⓪ : CUT-R (–128 to 127)
CH + : CUT-G (–128 to 127)
CH − : CUT-B (–128 to 127)

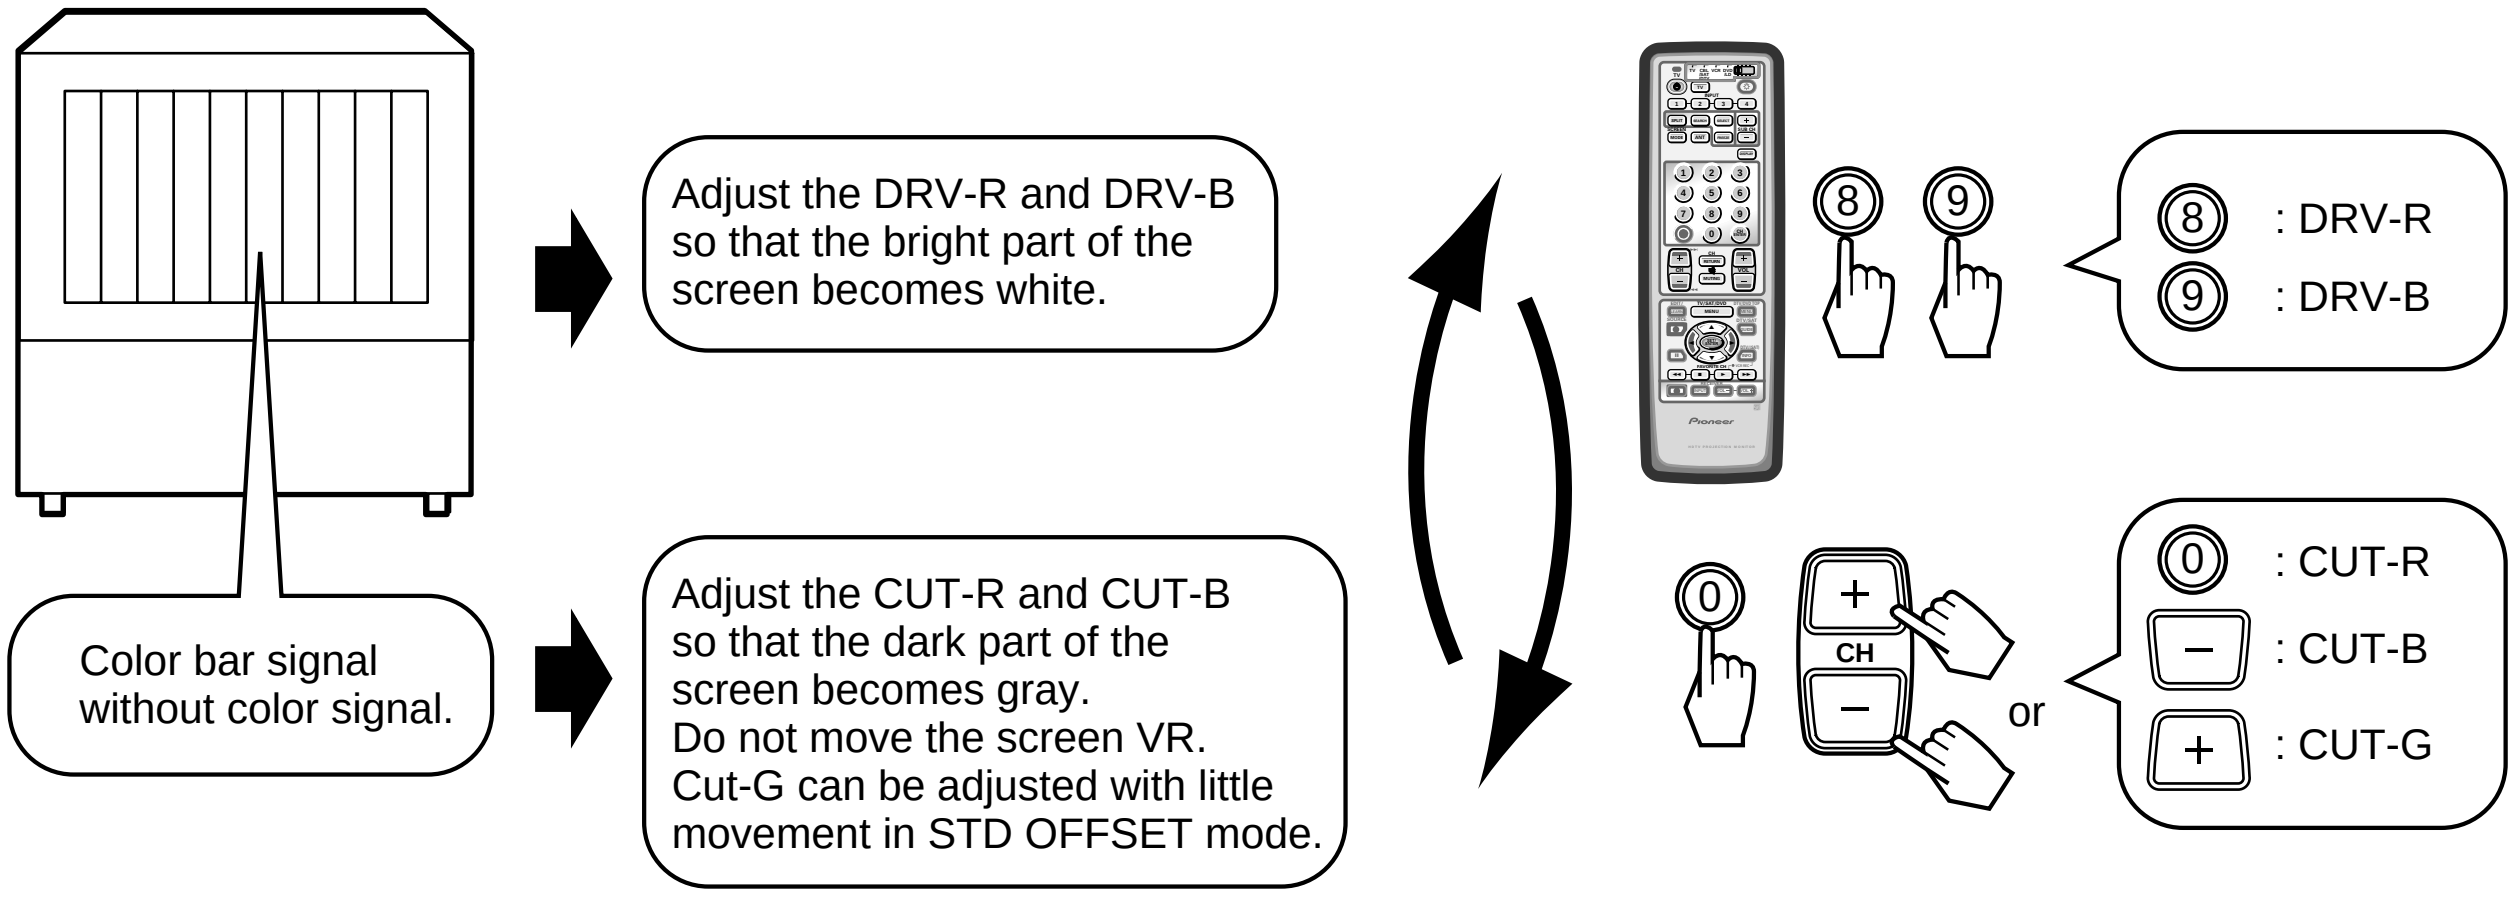

Color bar signal without color signal.

Adjust the DRV-R and DRV-B so that the bright part of the screen becomes white.

Adjust the CUT-R and CUT-B so that the dark part of the screen becomes gray.
Do not move the screen VR.
Cut-G can be adjusted with little movement in STD OFFSET mode.

⑧ : DRV-R
⑨ : DRV-B

⓪ : CUT-R
− : CUT-B
+ : CUT-G

Note :
Not all adjustments described above can be made for COLOR TEMP FILM for STD and COLOR TEMP B&W for STD.
Refer to the following adjustment procedure.

● Adjustment Procedure of White Balnce

OFFSET Data Table

	Without RGB Input							RGB Input			
COLOR TEMP Setting	STD	NEWS	LIVE	FILM STD	FILM REF THEATER	B&W STD	B&W REF THEATER	NEWS	LIVE	FILM	B&W
	I	J	K	L	M	V	X	β	γ	Y	Z
User Mode	REF THEATER			GAME			REF THEATER for RGB		GAME for RGB		
	E			F			δ		ε		
Input Signal	TV		COMPORNENT 15K		COMPORNENT 31K 33K		RGB				
	B		C		D		T				
	STD OFFSET										
	A										

Adjustments are required for A, C, D, T, L, and V in the table above. Data in other parts are fixed. (I="0")
Proceed with the adjustments in the following order:

Adjustment	Direct key		Picture quality data on the screen
(1) STD OFFSET	DOWN	A	Adjustment of all standard picture qualities
(2) COMPONENT 15K	SUB CH-	A+C	Adjustment of C
(3) COMPONENT 31, 33K	SUB CH+	A+D	Adjustment of D
(4) RGB	CH ENTER	A+T	Adjustment of T
(5) FILM for STD	INFO	A+L	Adjustment of L
(6) B&W for STD	DTV MENU	A+V	Adjustment of V

Make adjustment only for items described as ADJ in the following table.
Do NOT change other data.
Other data are adjusted in factory shipment by Fix data of the following table . (refer to page 204.)

- First, perform "(1) STD OFFSET", then perform adjustments (2), (3) and (4) so that the same picture quality (color temperature) as achieved in (1) is obtained.
- In adjustment (5), make the whole picture more reddish than in (1), and in adjustment (6), make it more reddish.

- When readjusting, once "(1) STD OFFSET" is adjusted, the data for other input signals (component, etc.) revert to the factory-preset values, in principle.
- After the adjustment of STD OFFSET is completed, check other picture quality modes by switching color temperatures and signals.
  It is OK if picture quality does not deviate greatly when input signal is changed (composite, component 15K, etc.).
  Furthermore, it is OK if color temperature changes when color remperarure is changed.
  With this model, five color temperature switching modes are provided. In FILM and B&W modes, a white part appears to be reddish in general because of their color temperature settings.

7 -3 Color/Tint Adjustment

Start **1st FAC**

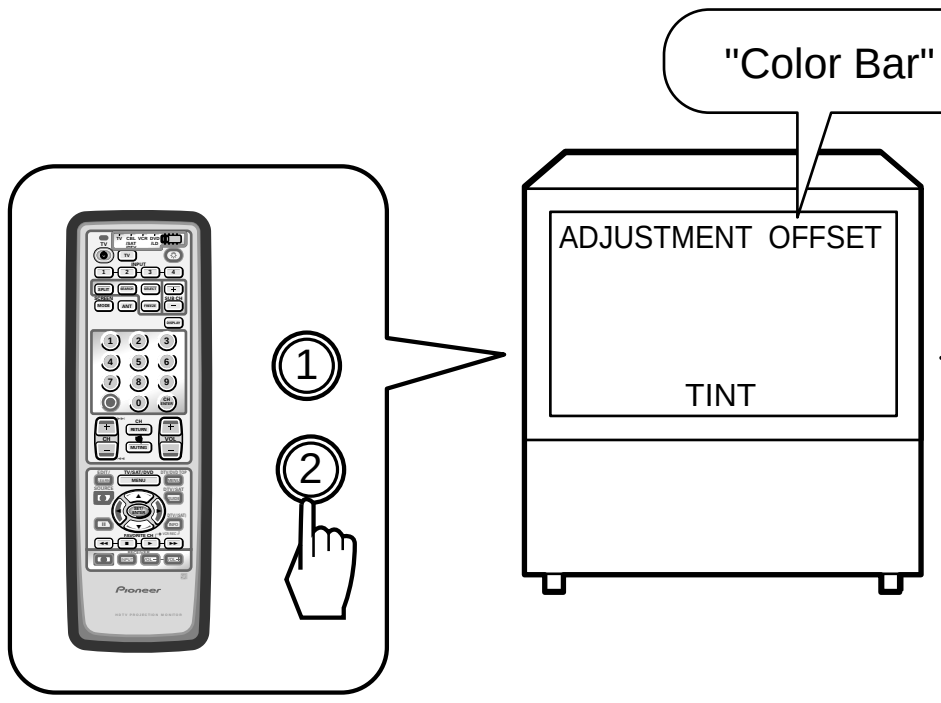

Adjust ① COLOR and ② TINT so that the color-bar is set in the proper color saturation and the tint.

Do not adjust the RGB, COLOR TEMP FILM and B&W.

OFFSET DATA (VIDEO)

ADJ :Adjustment item

The numerical value is shipping a set value in the factory.

DIRECT KEY		
OFFSET MODE		Adjustment Value
KEY	ADJ NAME	
DOWN		
STD OFFSET A		
1	COLOR	ADJ
2	TINT	ADJ
3	CONTRAST	ADJ
4	BRIGHT	ADJ
5	SHARPNESS	0
6	DETAIL	–50
7	S. V. M	0
8	R DRV	ADJ
9	B DRV	ADJ
0	R CUT	ADJ
CH+	G CUT	ADJ
CH–	B CUT	ADJ
SUB CH –		
COMPONENT 15K C		
1	COLOR	ADJ
2	TINT	ADJ
3	CONTRAST	ADJ
4	BRIGHT	0
5	SHARPNESS	0
6	DETAIL	0
7	S. V. M	0
8	R DRV	ADJ
9	B DRV	ADJ
0	R CUT	ADJ
CH+	G CUT	ADJ
CH–	B CUT	ADJ
SUB CH+		
COMPONENT 31, 33K D		
1	COLOR	ADJ
2	TINT	ADJ
3	CONTRAST	ADJ
4	BRIGHT	0
5	SHARPNESS	–20
6	DETAIL	92
7	S. V. M	0
8	R DRV	ADJ
9	B DRV	ADJ
0	R CUT	ADJ
CH+	G CUT	ADJ
CH–	B CUT	ADJ
RED		
TV OFFSET B		
1	COLOR	–10
2	TINT	0
3	CONTRAST	0
4	BRIGHT	0
5	SHARPNESS	15

DIRECT KEY		
OFFSET MODE		Adjustment Value
KEY	ADJ NAME	
BLUE (cyclically)		
REF THEATER OFFSET E		
1	COLOR	–13
2	TINT	–15
3	CONTRAST	–22
4	BRIGHT	–5
5	SHARPNESS	–20
6	DETAIL	30
8	R DRV	–3
9	B DRV	–2
0	R CUT	–2
CH+	G CUT	–2
CH–	B CUT	–2
GAME OFFSET F		
1	COLOR	0
2	TINT	0
3	CONTRAST	–39
4	BRIGHT	0
5	SHARPNESS	–35
6	DETAIL	0
8	R DRV	–6
9	B DRV	10
0	R CUT	1
CH+	G CUT	3
CH–	B CUT	2
REF THEATER OFFSET for RGB δ		
3	CONTRAST	–15
4	BRIGHT	0
8	R DRV	–4
9	B DRV	–2
0	R CUT	1
CH+	G CUT	0
CH–	B CUT	0
GAME OFFSET for RGB ε		
3	CONTRAST	–34
4	BRIGHT	0
8	R DRV	–7
9	B DRV	14
0	R CUT	12
CH+	G CUT	13
CH–	B CUT	6
CH ENTER		
RGB OFFSET T		
3	CONTRAST	ADJ
4	BRIGHT	ADJ
8	R DRV	ADJ
9	B DRV	ADJ
0	R CUT	ADJ
CH+	G CUT	ADJ
CH–	B CUT	ADJ
INFO		
COLOR TEMP FILM for STD L		
3	CONTRAST	ADJ
8	R DRV	ADJ
9	B DRV	ADJ
0	R CUT	ADJ
CH+	G CUT	ADJ
CH–	B CUT	ADJ
DTV MENU		
COLOR TEMP B&W for STD V		
3	CONTRAST	ADJ
8	R DRV	ADJ
9	B DRV	ADJ
0	R CUT	ADJ
CH+	G CUT	ADJ
CH–	B CUT	ADJ

DIRECT KEY		
OFFSET MODE		Adjustment Value
KEY	ADJ NAME	
GREEN (cyclically)		
COLOR TEMP NEWS J		
3	CONTRAST	–6
8	R DRV	–1
9	B DRV	16
0	R CUT	3
CH+	G CUT	3
CH–	B CUT	1
COLOR TEMP LIVE K		
3	CONTRAST	–1
8	R DRV	–5
9	B DRV	7
0	R CUT	2
CH+	G CUT	3
CH–	B CUT	1
COLOR TEMP FILM for REF THEATER M		
3	CONTRAST	0
8	R DRV	12
9	B DRV	–14
0	R CUT	–2
CH+	G CUT	1
CH–	B CUT	–1
COLOR TEMP B&W for REF THEATER X		
3	CONTRAST	–1
8	R DRV	16
9	B DRV	–22
0	R CUT	–1
CH+	G CUT	2
CH–	B CUT	0
GREEN (cyclically)		
COLOR TEMP NEWS for RGB β		
3	CONTRAST	–6
4	BRIGHT	0
8	R DRV	–1
9	B DRV	16
0	R CUT	3
CH+	G CUT	3
CH–	B CUT	1
COLOR TEMP LIVE for RGB γ		
3	CONTRAST	–1
4	BRIGHT	0
8	R DRV	–5
9	B DRV	7
0	R CUT	2
CH+	G CUT	3
CH–	B CUT	1
COLOR TEMP FILM for RGB Y		
3	CONTRAST	–1
4	BRIGHT	0
8	R DRV	11
9	B DRV	–16
0	R CUT	–1
CH+	G CUT	3
]CH–	B CUT	3
COLOR TEMP B&W for RGB Z		
3	CONTRAST	–2
4	BRIGHT	0
8	R DRV	15
9	B DRV	–23
0	R CUT	–1
CH+	G CUT	3
CH–	B CUT	3

8 Panel Adjustment

Start **1st FAC**

- Mode for adjusting the brightness, contrast LEFT and RIGHT of the gray part (panel) of the 4:3 normal screen.

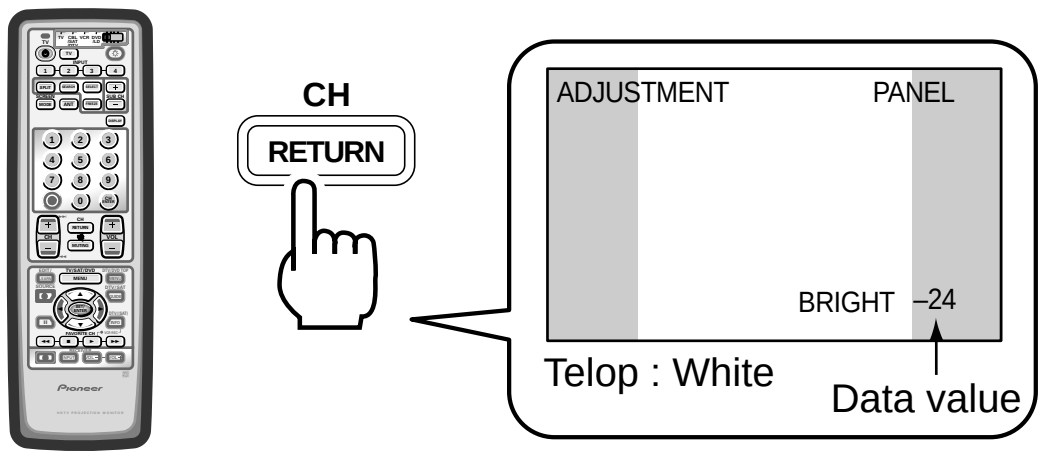
CH
RETURN
ADJUSTMENT
PANEL
BRIGHT –24
Telop : White
Data value

<Data value section>

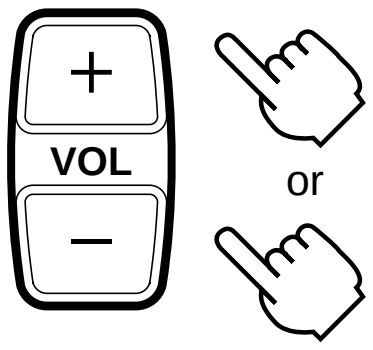

<Adjustment item section>

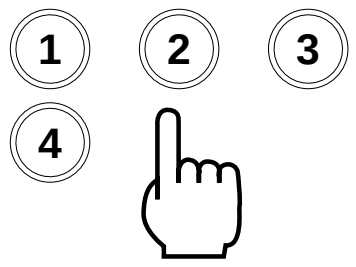

① : BRIGHT (–64 to 63)
② : CONTRAST (–64 to 63)
③ : LEFT (–128 to 127)
④ : RIGHT (–128 to 127)

Procedures

① Send the black-burst signal to the INPUT 1 connector.
Enter Adjustment mode by following the procedures described above.
② With BRIGHT, adjust the gray part (panel) of the screen.
By observing TP5151 of the GREEN CRT DRIVE assembly with the oscilloscope, , adjust the brightness level which is low by 20V from Black level of the main screen.

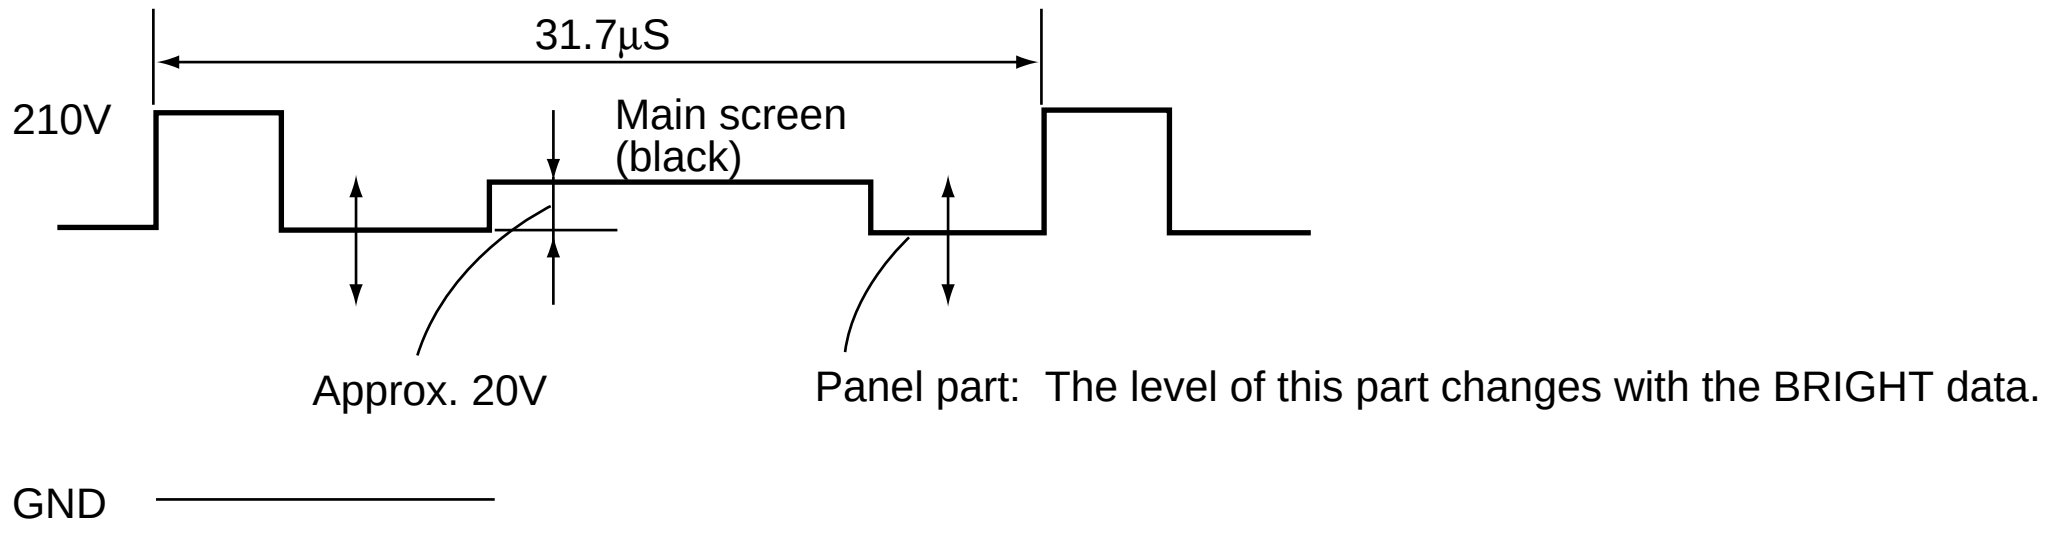
31.7μS
210V
Main screen
(black)
Approx. 20V
Panel part: The level of this part changes with the BRIGHT data.
GND

③ Switch the input signal to a 100%-white signal.
Adjust the panel part and the main screen with CONTRAST.
Observe the same site as described in Step ② above, and adjust the amplitude of the luminosity.

Adjust so that the level of the luminosity of the panel and that of the main screen become the same.

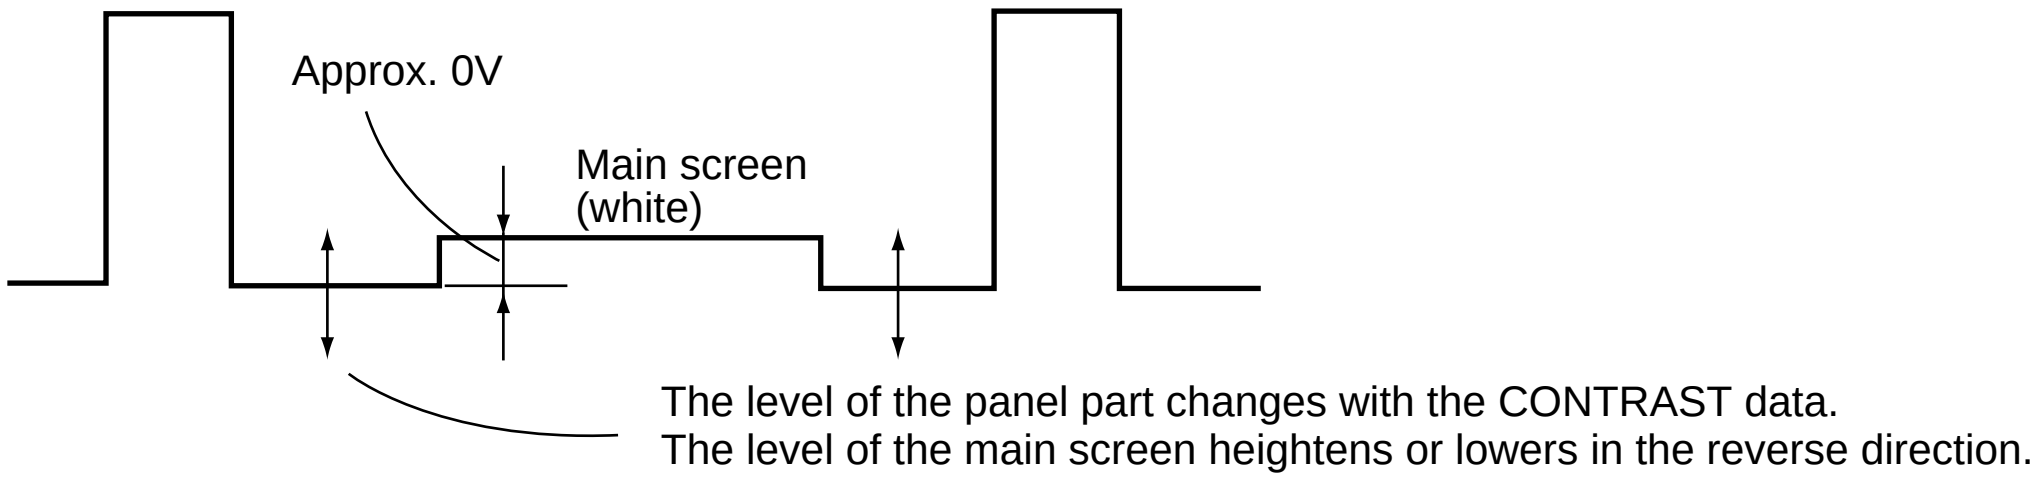
Approx. 0V
Main screen
(white)
The level of the panel part changes with the CONTRAST data.
The level of the main screen heightens or lowers in the reverse direction.

● Size Adjustment of the Panel Part of the 4:3 Normal Screen

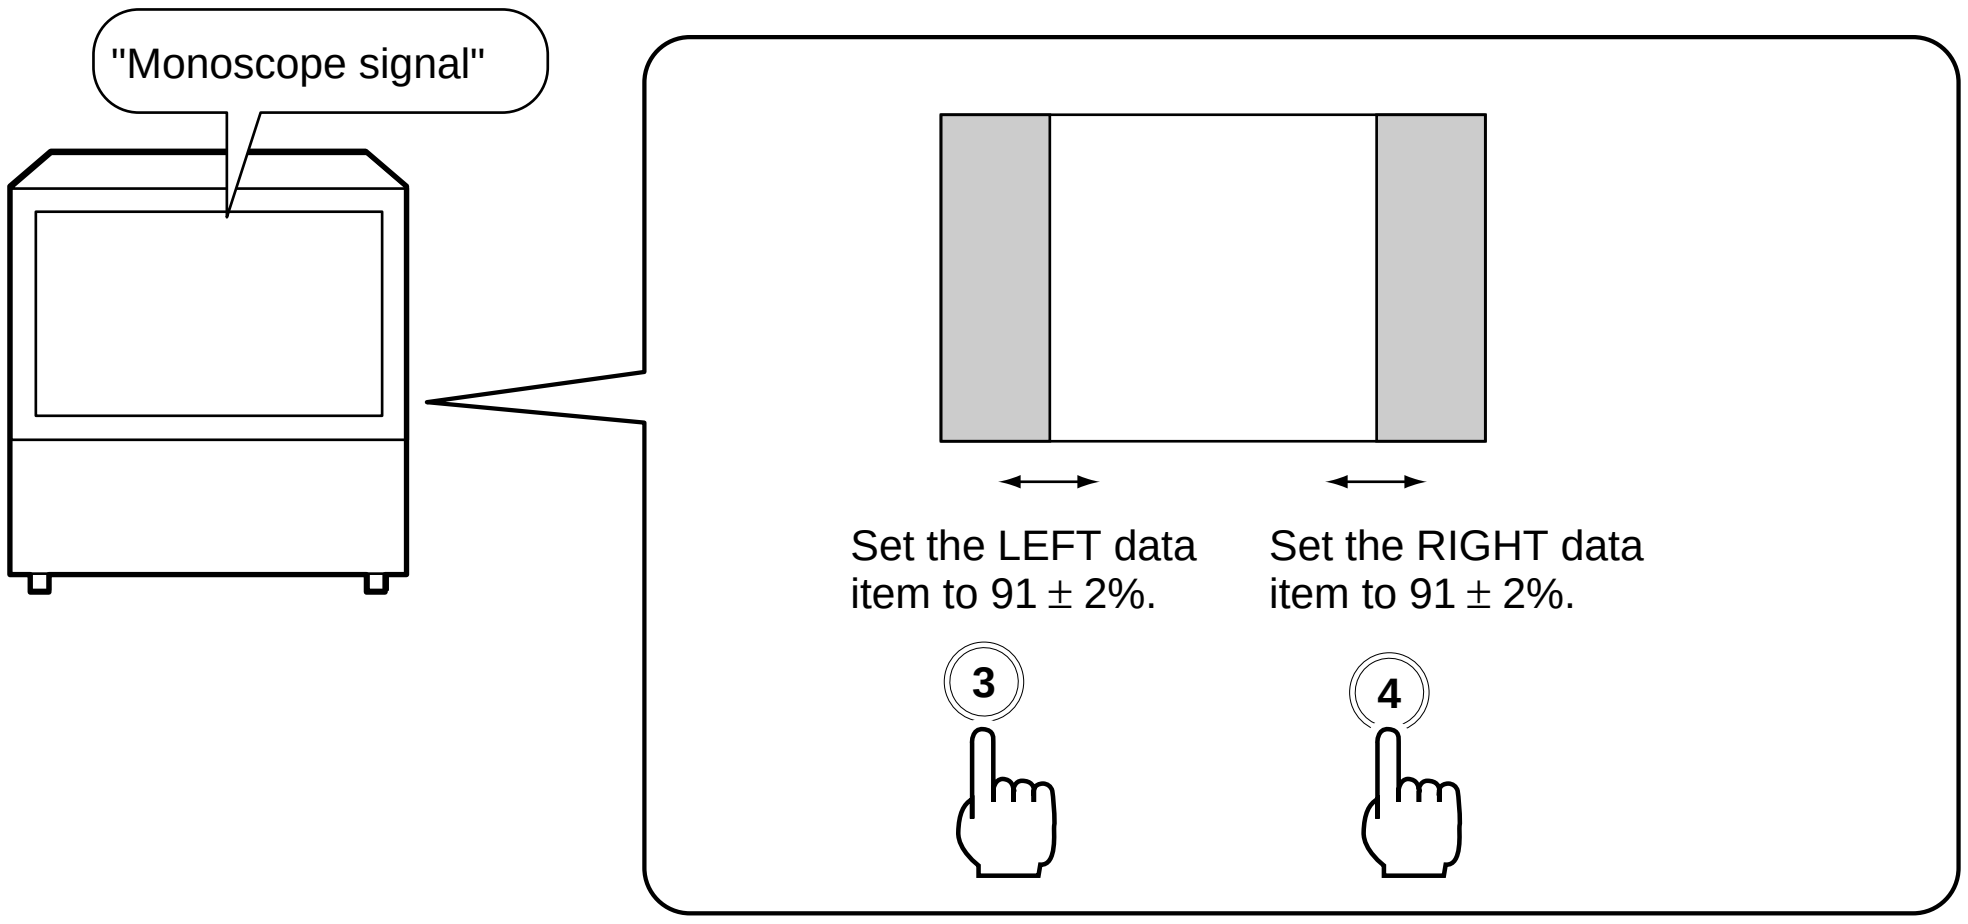
"Monoscope signal"
3
4

Set the LEFT data item to 91 ± 2%.

Set the RIGHT data item to 91 ± 2%.

7. GENERAL INFORMATION

7.1 DIAGNOSIS

7.1.1 DIAGNOSIS METHOD

Various protection circuits are provided for this unit. When these protection circuits are activated, the power of the unit is shut down (P.D.: Power Down).
The defective parts can be easily diagnosed by observing the LEDs inside the following assemblies.

1. POWER SUPPLY Assy
   Common to all models : D915 in the AWV1912
2. DEFLECTION SERVICE Assy
   Common to all models : D321 in the AWV1913
   For service assembly : D321 in the AWV1921
3. CONV. AMP Assy
   Common to all models : D923 in the AWZ6649

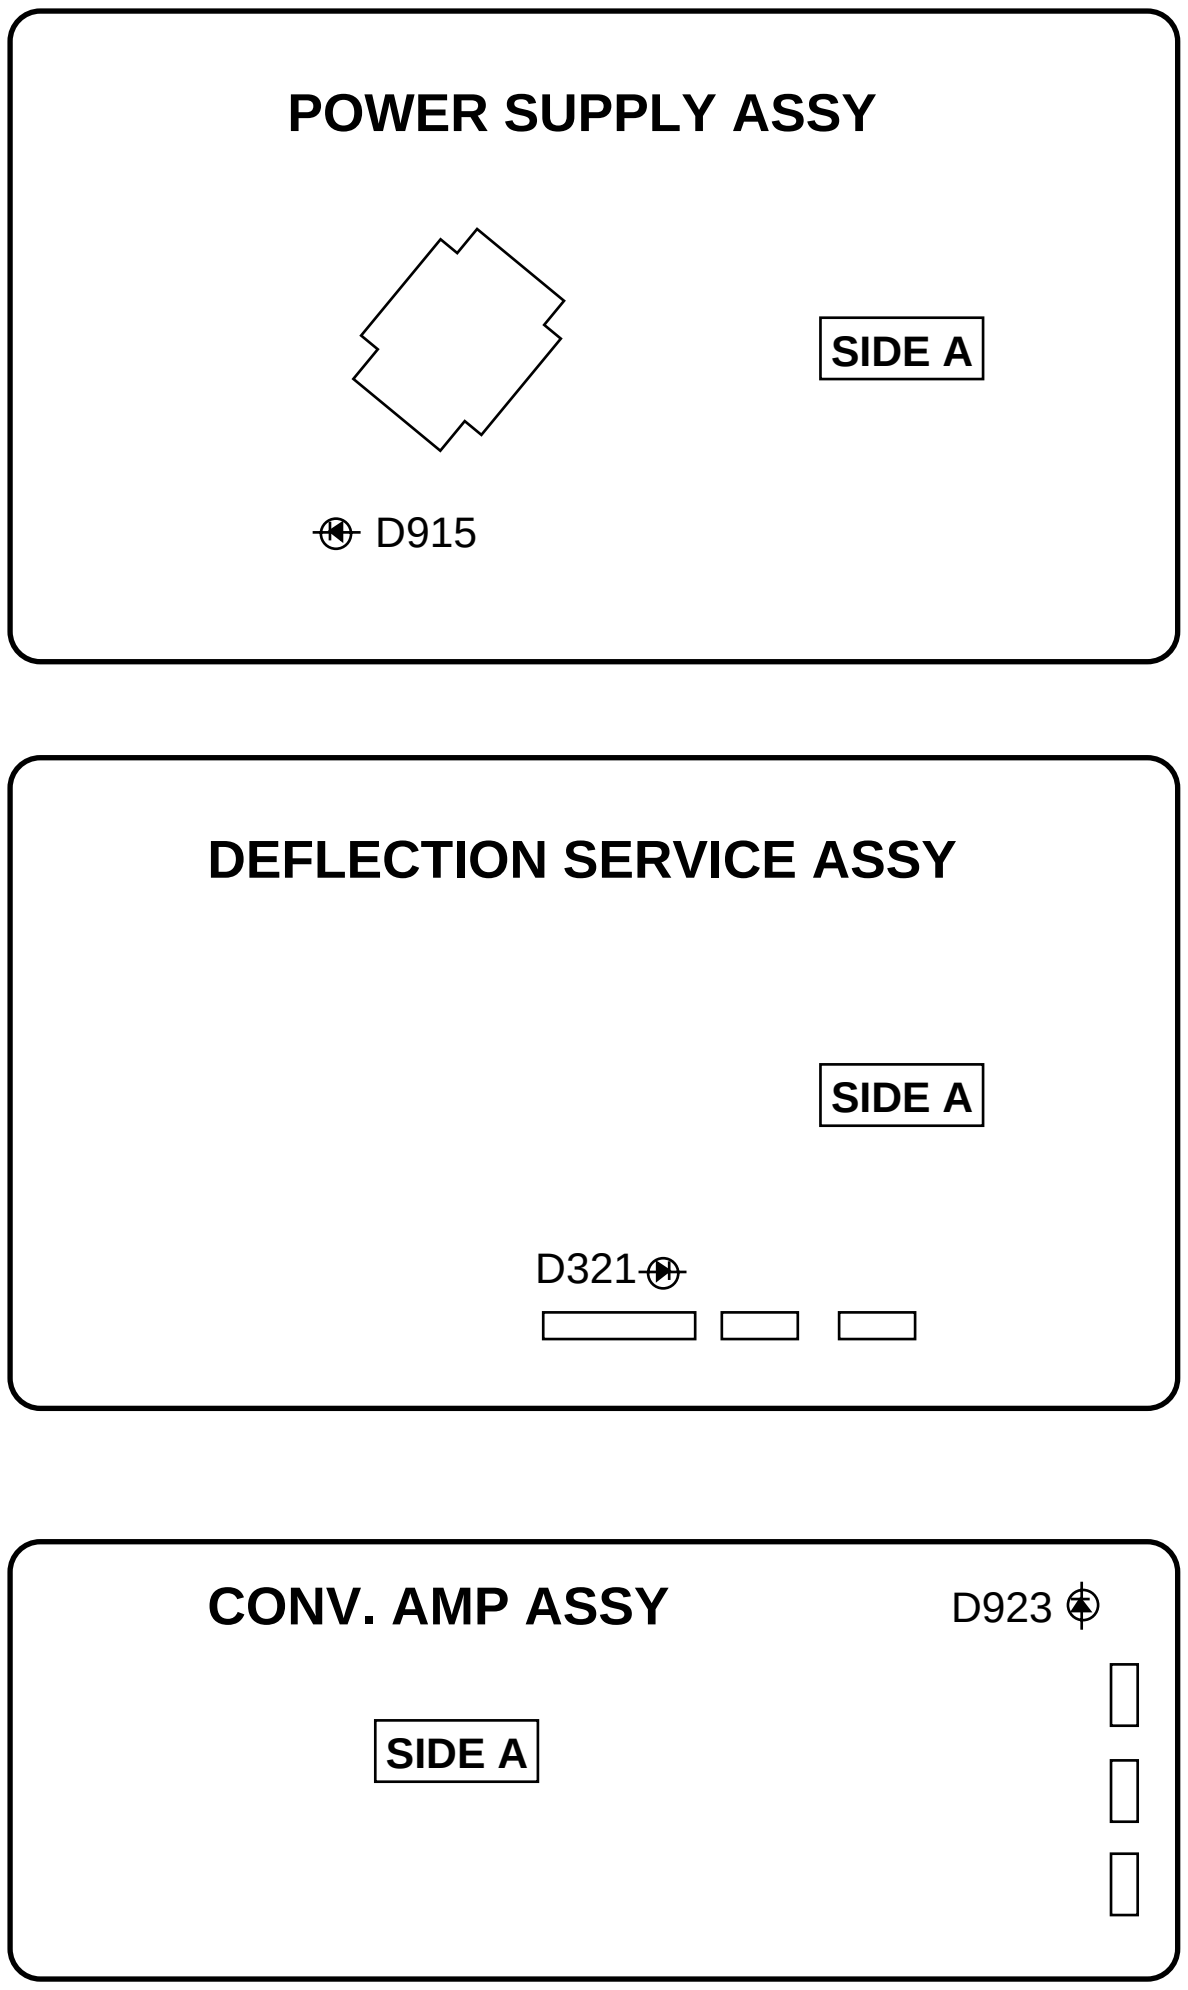
POWER SUPPLY ASSY
SIDE A
D915
DEFLECTION SERVICE ASSY
SIDE A
D321
CONV. AMP ASSY
D923
SIDE A

LED points

How to diagnose a failure

The D915 LED of the POWER SUPPLY Assy always lights up when the power is turned off because of the protection circuits (P.D.).

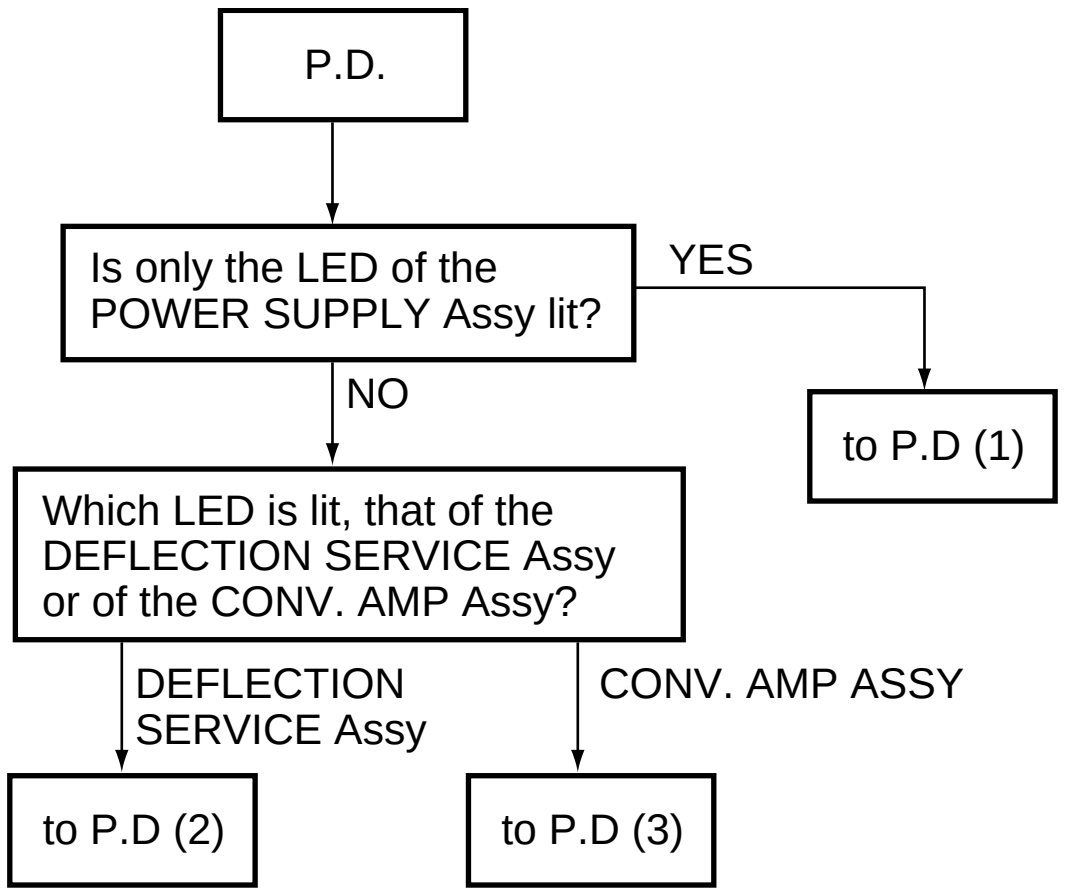
P.D.
Is only the LED of the POWER SUPPLY Assy lit?
YES
NO
to P.D (1)
Which LED is lit, that of the DEFLECTION SERVICE Assy or of the CONV. AMP Assy?
DEFLECTION SERVICE Assy
CONV. AMP ASSY
to P.D (2)
to P.D (3)

1. P.D. (1)

Failure in the POWER SUPPLY Assy and the AUDIO Assy.
There are four main possibilities:

1. Abnormality in the regulator of the heater
2. Blown fuse(s) in secondary
3. Abnormality in RELAY (RY102)
4. Abnormality in AUDIO OUTPUT

Status	Causes	Check Items	Probable Defective Parts
D223 ANODE Hi	Abnormality in the regulator for the heater	The voltage of HT- at TP205 is NOT approx. 19 V, and that of the HT+ at TP204 is NOT approx. 26 V.	Q201, R202, D210, D209
D207 ANODE Hi	Blown fuse(s)	The voltage HT+ (approx. 26 V) at TP204 is NOT supplied.	CONV. AMP Assy and DEFLECTION SERVICE Assy
		The voltage (approx. 35 V) at TP203 is NOT supplied.	AUDIO Assy
		The voltage (approx. 11 V) at TP209 is NOT supplied.	VIDEO Assy
D911 ANODE Hi	Abnormality in RELAY	The RELAY signal is NOT high (ON) at TP904.	SIGNAL Assy
		P.D. even if the RELAY signal is high (ON) at TP904.	Q904, Q905 RY102, R102
D203 ANODE Hi	Abnormality in AUDIO OUTPUT	The SP line (CN5611) is disconnected.	Connect the SP line.
		The voltage at the negative electrode of the C5616 and C5617 is 5.2 V or more.	C5616, C5617 (VIDEO Assy)

Note: The anode of the diode is high only for a short time after the power is turned on until the protection circuits are activated (P.D.) The LEDs are lit by the HOLD circuit.

In a case when the power cannot be on with no LED lit, check the following:

1. Check if the FU101 fuse in the POWER SUPPLY Assy is blown.
2. Disconnect and check connector E1 (CN201) to see whether STB 5 V is supplied.
   If STB 5 V is supplied, replace the SIGNAL Assy. If STB 5 V is NOT supplied, replace the POWER SUPPLY Assy.
3. Disconnect and check connector E1 (CN201) to see whether AC CLK is supplied.
   If AC CLK is supplied, replace the SIGNAL Assy. If AC CLK is NOT supplied, replace the POWER SUPPLY Assy.

2. P.D. (2)

Failure in the DEFLECTION SERVICE Assy.
There are four main possibilities:

1. H. deflection overload detection (1)
2. H. deflection stopping detection
3. H. deflection overload detection (2)
4. X-ray protection

Status	Causes	Check Items	Probable Defective Parts
D312 ANODE Hi	Overload detection 1		Q309, Q324 (short-circuited between C and E)
D309 ANODE Hi	Stopping H. deflection	Is the connector of the deflection yoke plugged in?	Plug in the connector.
		No H. OSC signal at TP304 (F=31.5 kHz, Duty 50%)	IC301, Q309
		No DH. BLK signal at TP305	Q309
D615 ANODE Hi	Overload detection 2		Q612, Q613 (short-circuited between C and E)
		About one minute after the power is turned off, disconnect the K4 connector and turn on the power. Then the power is not turned off (no P.D.).	IC5101, IC5151 and IC5201 in the CRT DRIVE Assy
D621 ANODE Hi	X-ray protection	No change in the ABL voltage (no DC change) at Pin 12 of the CN305 when a 100%-white signal is repeatedly connected and disconnected	D2224 (short-circuited)of the SUB VIDEO Assy
			T601 (FBT) rare short

Note: The anode of the diode is high only for a short time after the power is turned on until the protection circuits are activated (P.D.) The LEDs are lit by the HOLD circuit.

Note that the power may be shut down when the voltages 130 V, 25 V, and 12 V from the POWER SUPPLY Assy are not supplied because the DEFLECTION SERVICE Assy is powered by the POWER SUPPLY Assy.

When overload detection mechanisms 1 and 2 are activated, the 130 V line is short-circuited. If the power switch is set to ON again in this condition, there may be a case where the power cannot be turned on, with just a whining sound, and where only the D915 LED in the POWER SUPPLY Assy is lit. If this happens, first replace only the DEFLECTION SERVICE Assy, disconnect the AC cord from the AC outlet or turn the main power switch OFF, and wait for five minutes. Then, turn on the power again. If the condition is ameliorated, only the DEFLECTION SERVICE Assy is defective. If the same symptom occurs, replace the POWER SUPPLY Assy. In the latter case, the DEFLECTION SERVICE Assy may not be defective.

Be sure to check the fuses in the POWER SUPPLY Assy because one or more may be blown as a result of short-circuiting of the load circuit of the DEFLECTION SERVICE Assy.

3. P.D. (3)

Failure in the CONV. AMP Assy
The following reason may be suspected:
1. V. deflection stopping detection

Status	Causes	Check Items	Probable Defective Parts
D923, P.D. LED, lit	V. deflection stopping	Check that the connectors (G1, G2, G3) of the convergence yoke are plugged in.	Plug in the connectors.
		Check that the connectors (G4, G5) of the DIGITAL CONV. Assy are plugged in.	Plug in the connectors.
		Check that the connector (H4) from the POWER SUPPLY Assy is plugged in to the DIGITAL CONV. Assy.	Plug in the connectors.
		Check that the connector (H3) from the DEFLECTION SERVICE Assy is plugged in to the DIGITAL CONV. Assy.	Plug in the connectors.
		Abnormality in V. BLK 2 waveform that is output from Pin 6 of the CN1653 in the DIGITAL CONV. Assy (too long a high period with the DC voltage on)	IC4802 in the SUB VIDEO Assy
		Abnormality in V. BLK 0 waveform that is output from Pin 2 of the CN1652 in the DIGITAL CONV. Assy (too long a high period with the DC voltage on)	IC301 in the DEFLECTION SERVICE Assy
		No waveform is output from Pin 1 of the CN902.	Q913, Q914

Note: The anode of the diode is high only for a short time after the power is turned on until the protection circuits are activated (P.D.) The LEDs are lit by the HOLD circuit.

Be sure to check the fuses in the POWER SUPPLY Assy because one or more may be blown as a result of short-circuiting of the load circuit of the CONV. AMP Assy. See the table below.

Note that the power may be shut down when the voltages 25 V, -20 V, +5 V and -5 V from the POWER SUPPLY Assy are not supplied because the CONV. AMP and DIGITAL CONVER. Assys are powered by the POWER SUPPLY Assy.

If the FU202 and FU204 fuses are blown, see the following table:

Causes	Check Items	Probable Defective Parts
Too high loading on the CONVER. AMP	Check that waveform signals are output from Pin 3 and Pin 5 of the CN901, CN902 and CN903, and that the DC element is not added to the signals.	IC901, IC903
CONVER. MUTING not activated	Check that the electric potential of Pin 3 and Pin 4 of IC901 and IC903 are at the same level when the power is turned on.	Q904, Q918

4. Block Diagram of the Protection Circuit

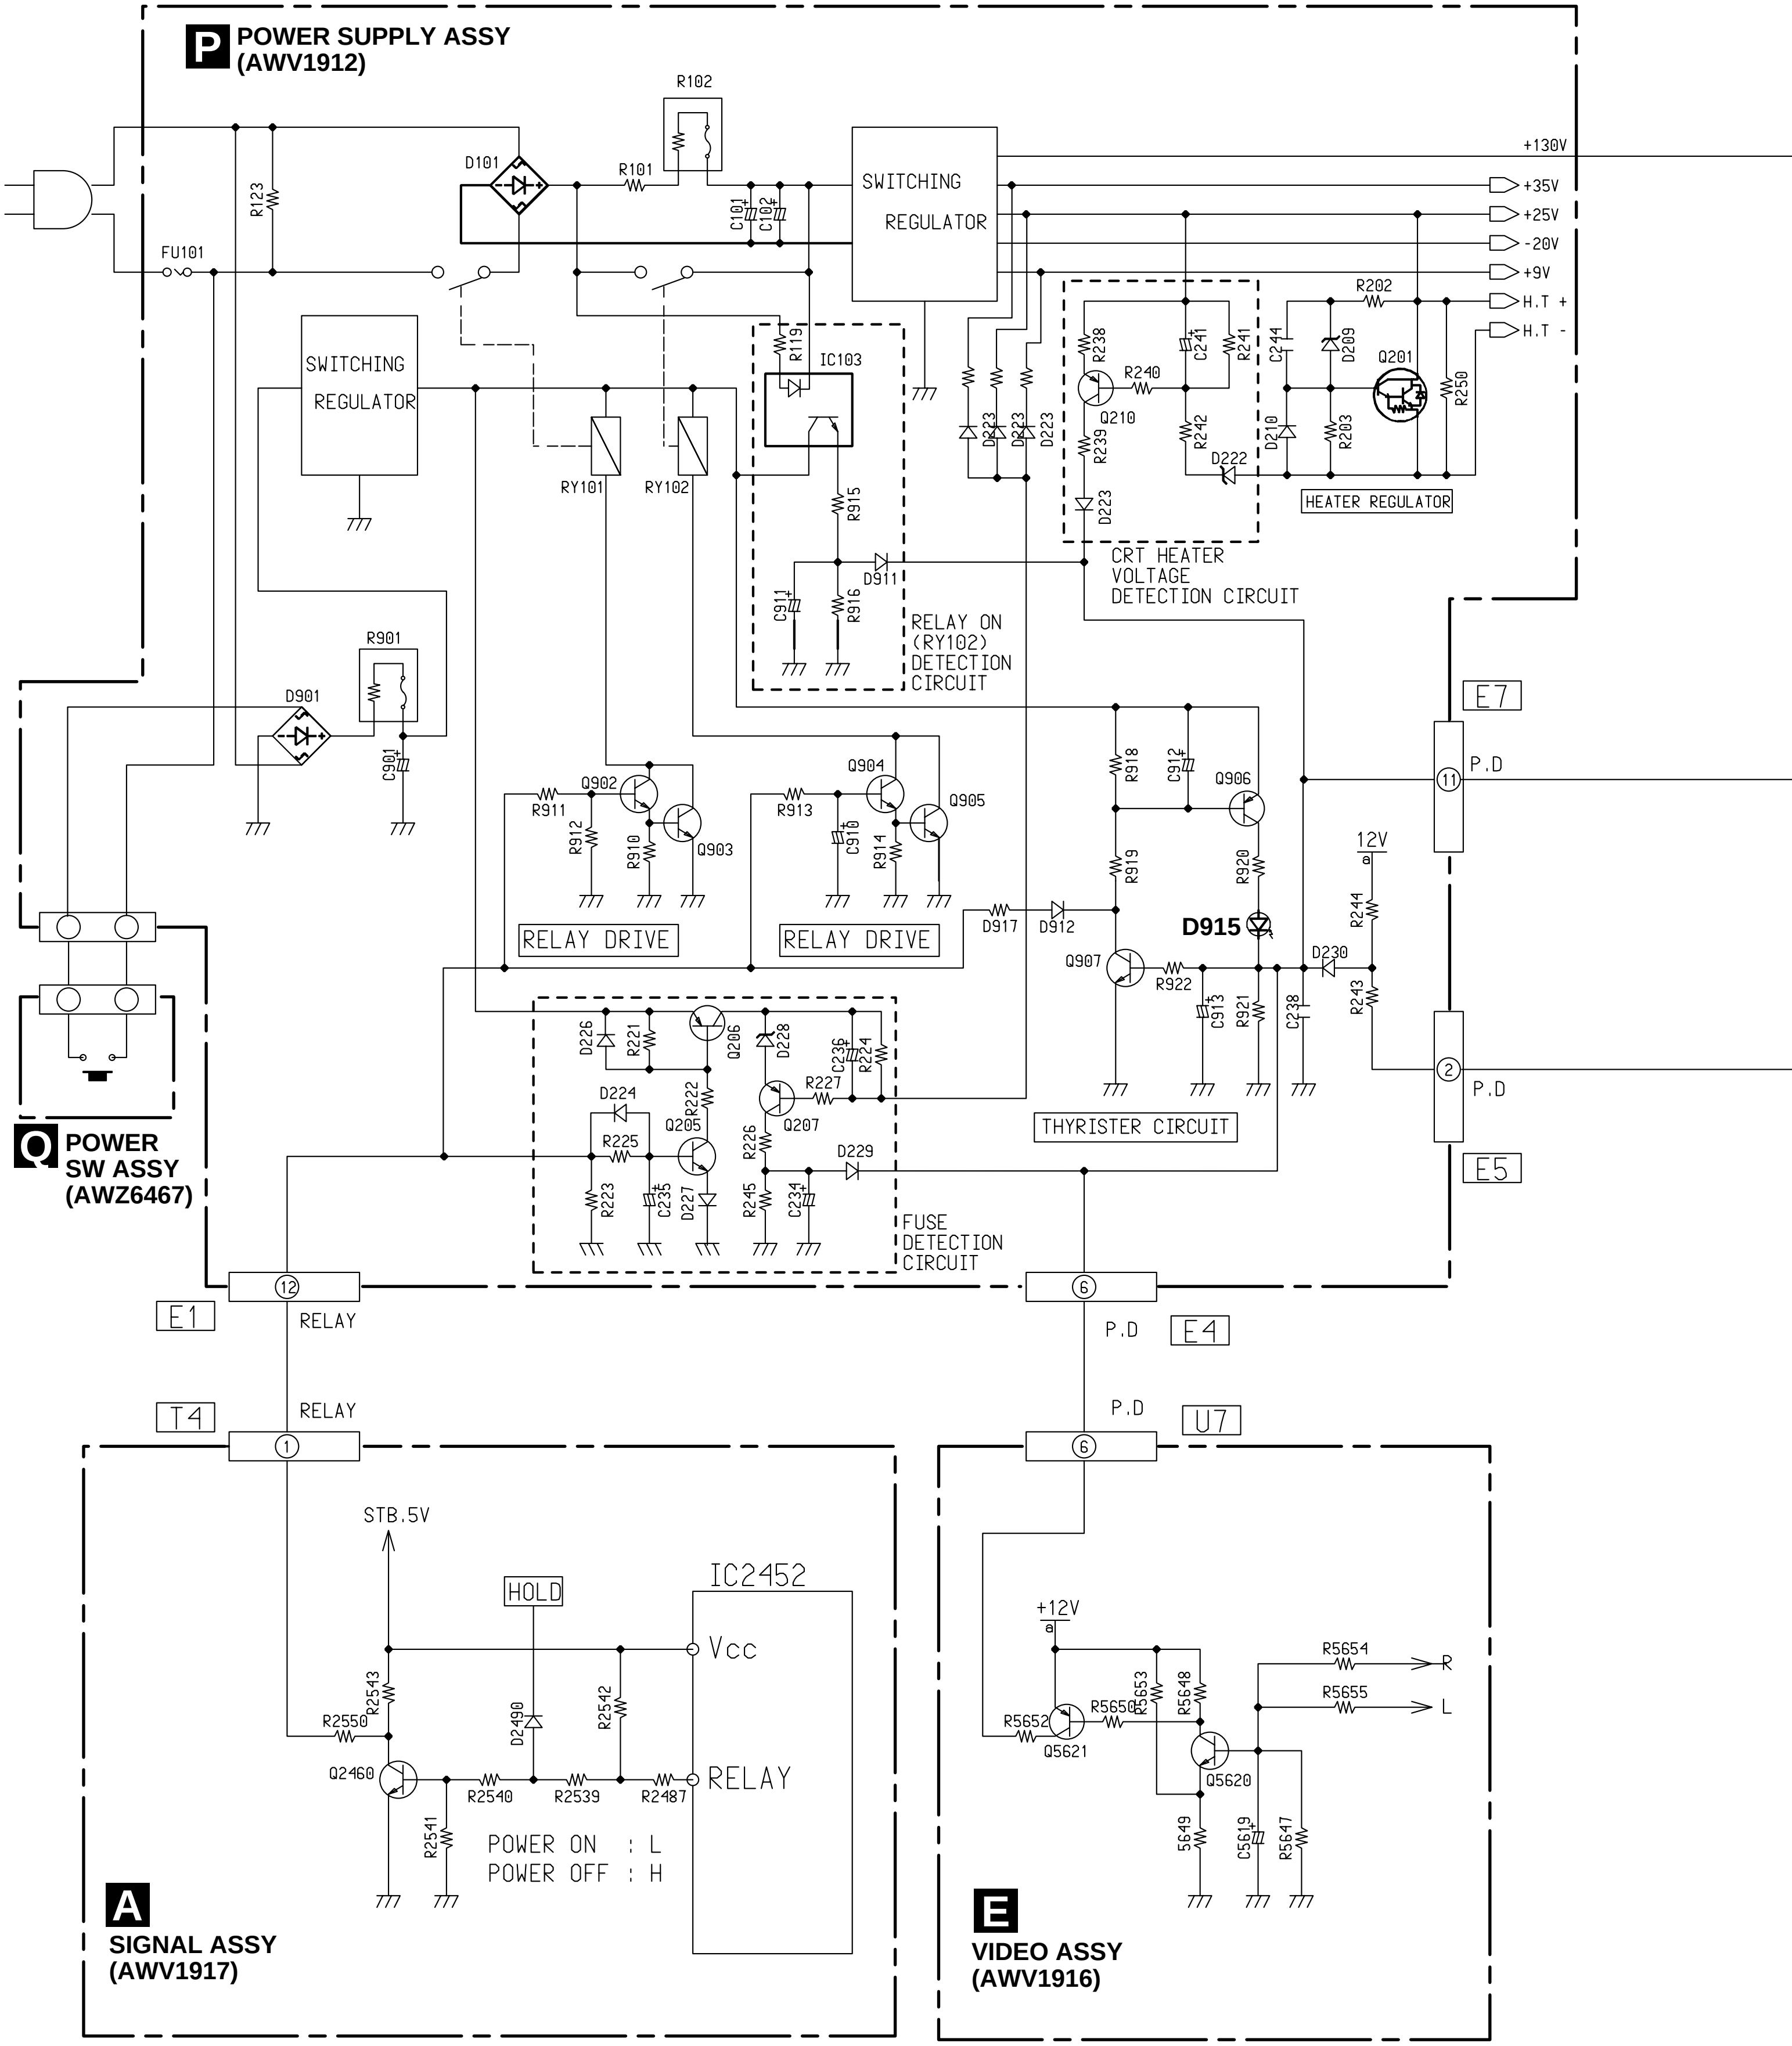
P
POWER SUPPLY ASSY
(AWV1912)
R102
D101
R101
R123
FU101
C101
C102
SWITCHING
REGULATOR
+130V
+35V
+25V
-20V
+9V
H.T +
H.T -
R202
R119
IC103
SWITCHING
REGULATOR
RY101
RY102
D223
D223
D223
R238
C241
R241
C244
D209
Q201
R240
Q210
R239
R242
D210
R203
R250
D222
D223
HEATER REGULATOR
CRT HEATER
VOLTAGE
DETECTION CIRCUIT
R915
D911
C911
R916
RELAY ON
(RY102)
DETECTION
CIRCUIT
R901
D901
C901
E7
R918
C912
Q906
P.D
Q902
R911
R912
R910
Q903
Q904
R913
C910
R914
Q905
R919
R920
12V
R244
RELAY DRIVE
RELAY DRIVE
D917
D912
D915
D230
Q907
R922
C913
R921
C238
R243
D226
R221
Q206
D228
C236
R224
R227
D224
R222
Q207
R225
Q205
R226
D229
R223
C235
D227
R245
C234
THYRISTER CIRCUIT
P.D
E5
Q
POWER
SW ASSY
(AWZ6467)
FUSE
DETECTION
CIRCUIT
⑫
⑪
②
⑥
E1
RELAY
P.D
E4
T4
RELAY
P.D
U7
①
⑥
STB.5V
HOLD
IC2452
Vcc
R2543
R2542
D2490
R2550
Q2460
R2540
R2539
R2487
RELAY
R2541
POWER ON : L
POWER OFF : H
A
SIGNAL ASSY
(AWV1917)
+12V
R5654
R
R5655
L
R5653
R5648
R5652
R5650
Q5621
Q5620
5649
C5619
R5647
E
VIDEO ASSY
(AWV1916)

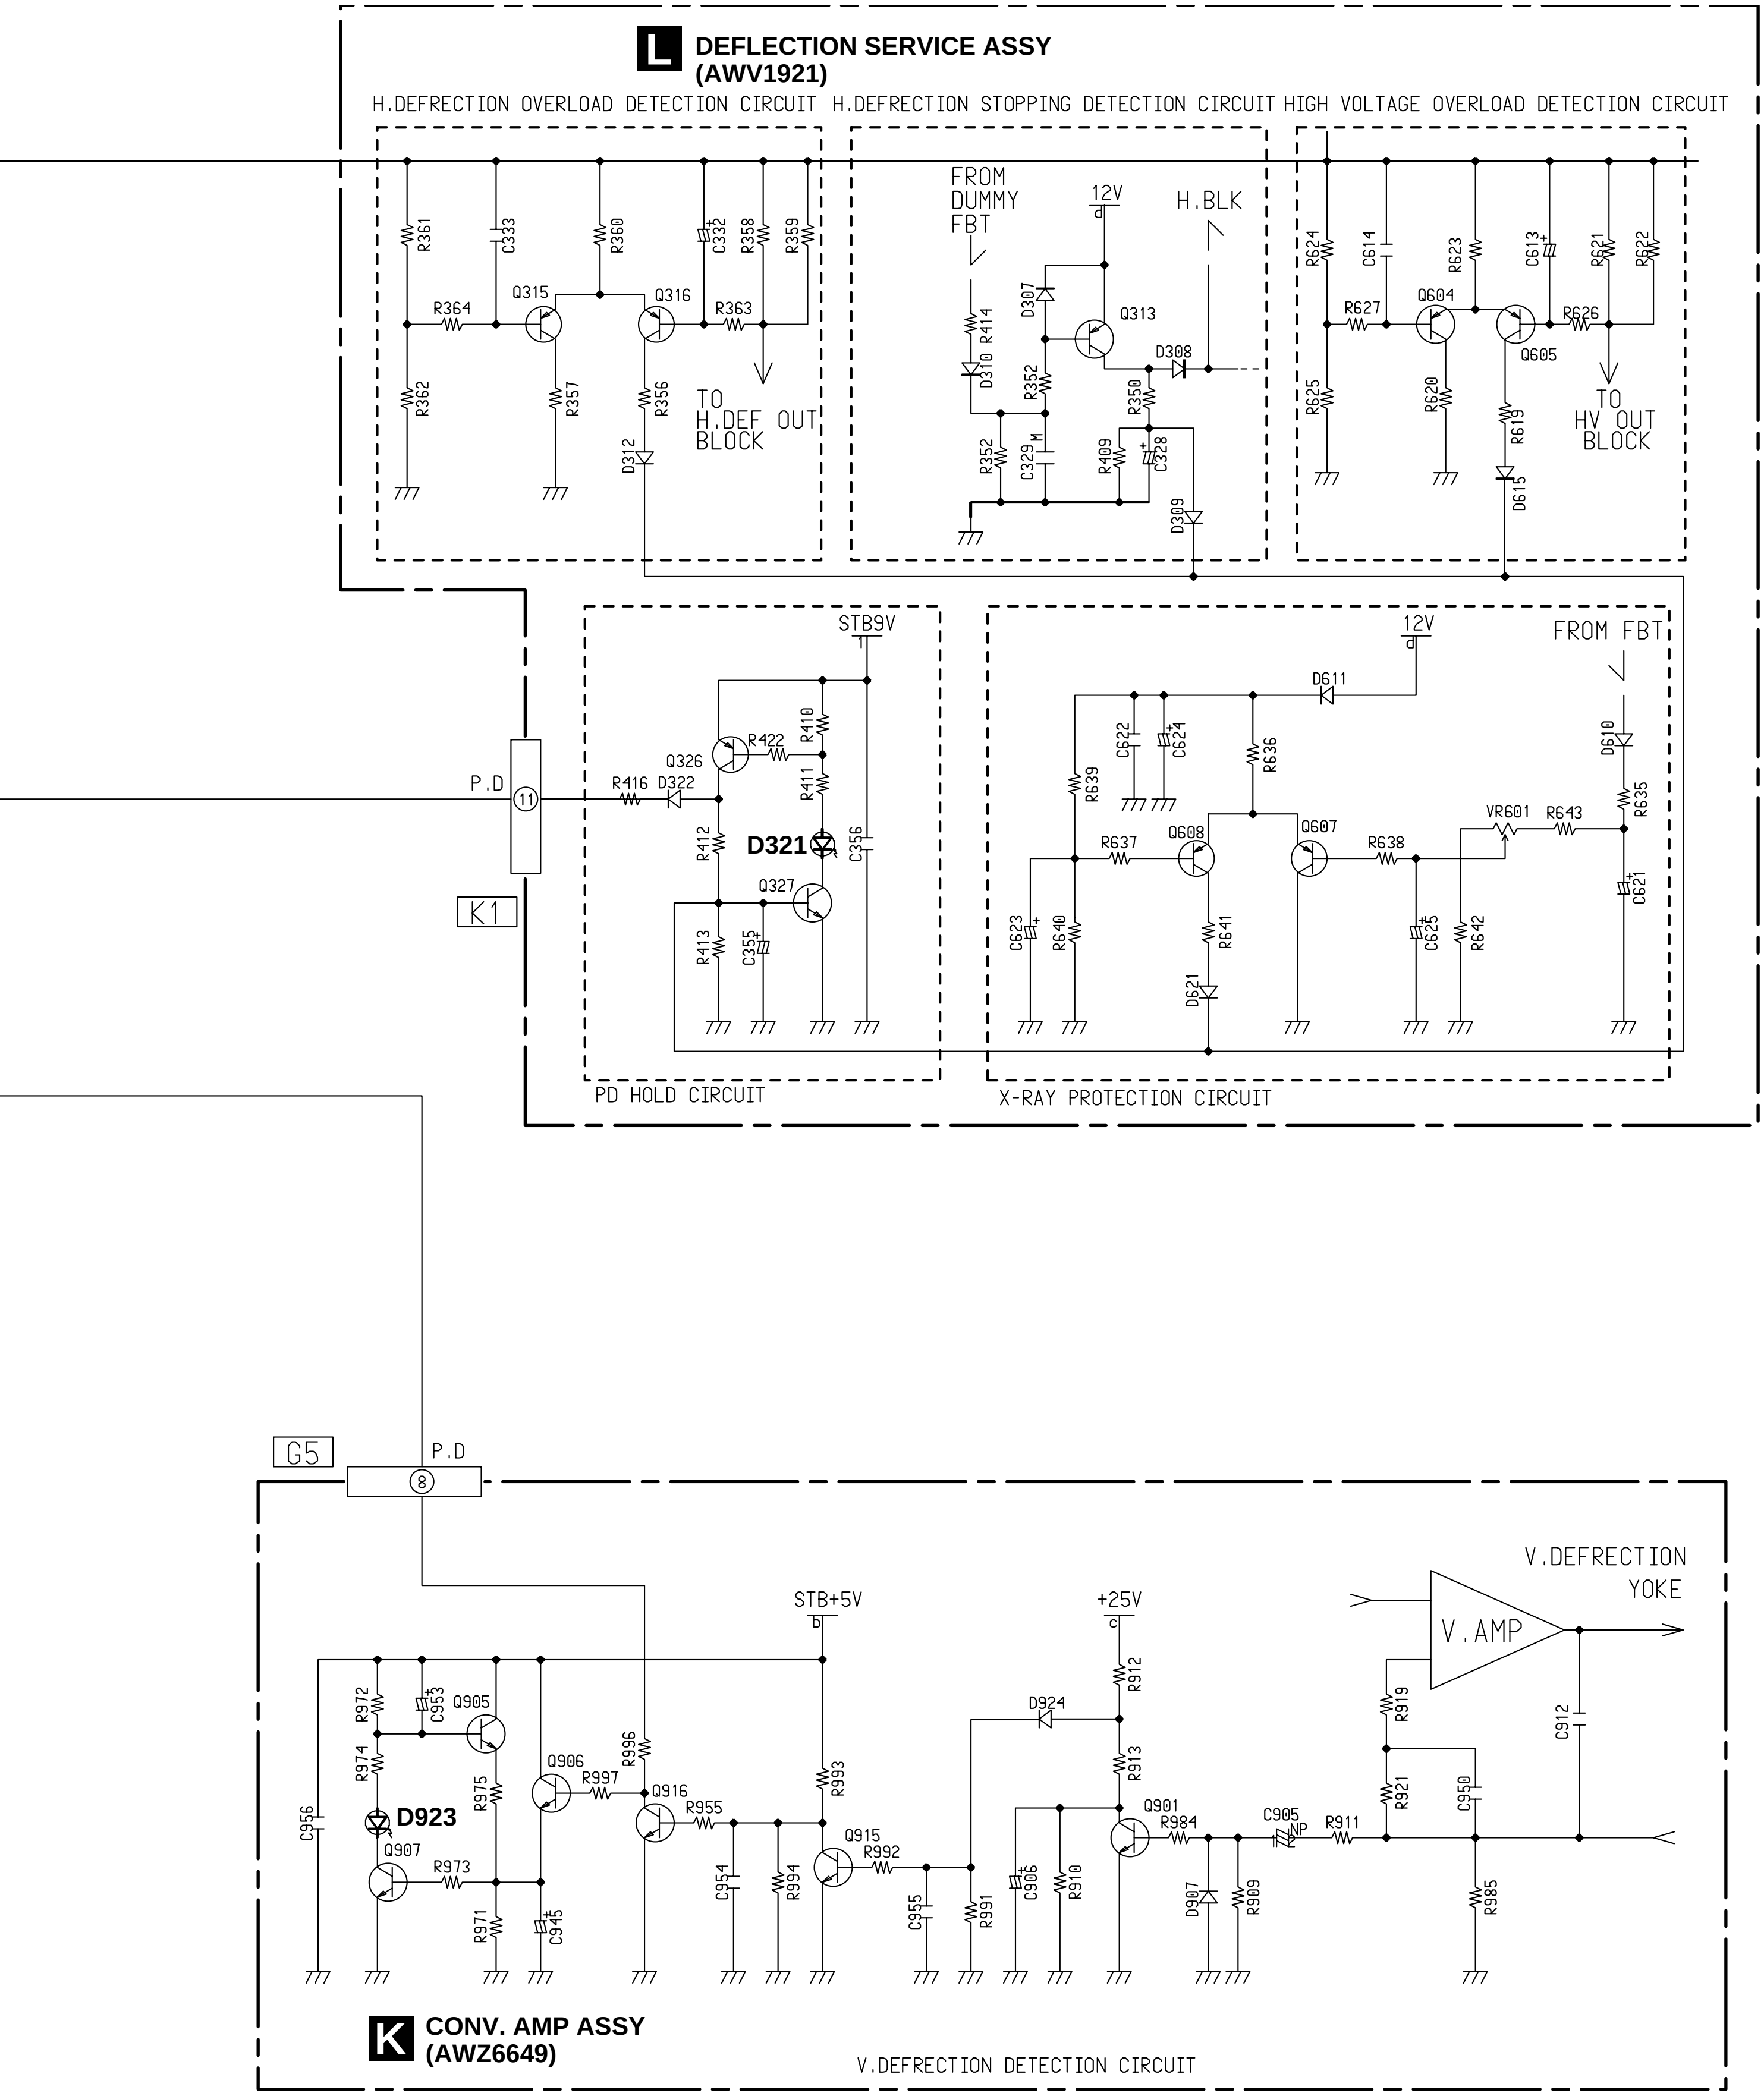
L
DEFLECTION SERVICE ASSY
(AWV1921)
H.DEFRECTION OVERLOAD DETECTION CIRCUIT
H.DEFRECTION STOPPING DETECTION CIRCUIT
HIGH VOLTAGE OVERLOAD DETECTION CIRCUIT
R361
C333
R360
C332
R358
R359
R364
Q315
Q316
R363
R362
R357
R356
D312
TO
H.DEF OUT
BLOCK
FROM
DUMMY
FBT
12V
d
H.BLK
D307
Q313
R414
D308
D310
R352
R350
R352
C329
M
R409
C328
D309
R624
C614
R623
C613
R621
R622
R627
Q604
R626
Q605
R625
R620
R619
TO
HV OUT
BLOCK
D615
STB9V
R410
Q326
R422
P.D
11
R416
D322
R411
R412
D321
C356
Q327
K1
R413
C355
PD HOLD CIRCUIT
12V
d
FROM FBT
D611
D610
C622
C624
R636
R639
R635
VR601
R643
Q608
Q607
R637
R638
C621
C623
R640
R641
C625
R642
D621
X-RAY PROTECTION CIRCUIT
G5
P.D
8
V.DEFRECTION
YOKE
STB+5V
b
+25V
c
V.AMP
R912
R972
C953
Q905
D924
R919
C912
R974
R996
Q906
R997
R993
R913
R921
C950
R975
Q916
R955
C956
D923
Q915
Q901
R984
C905
NP
R911
Q907
R973
R992
C954
R994
C955
R991
C906
R910
D907
R909
R985
R971
C945
K
CONV. AMP ASSY
(AWZ6649)
V.DEFRECTION DETECTION CIRCUIT

7.1.2 DISASSEMBLY

■ How to remove the screen (for adjusting Lens assemblies)

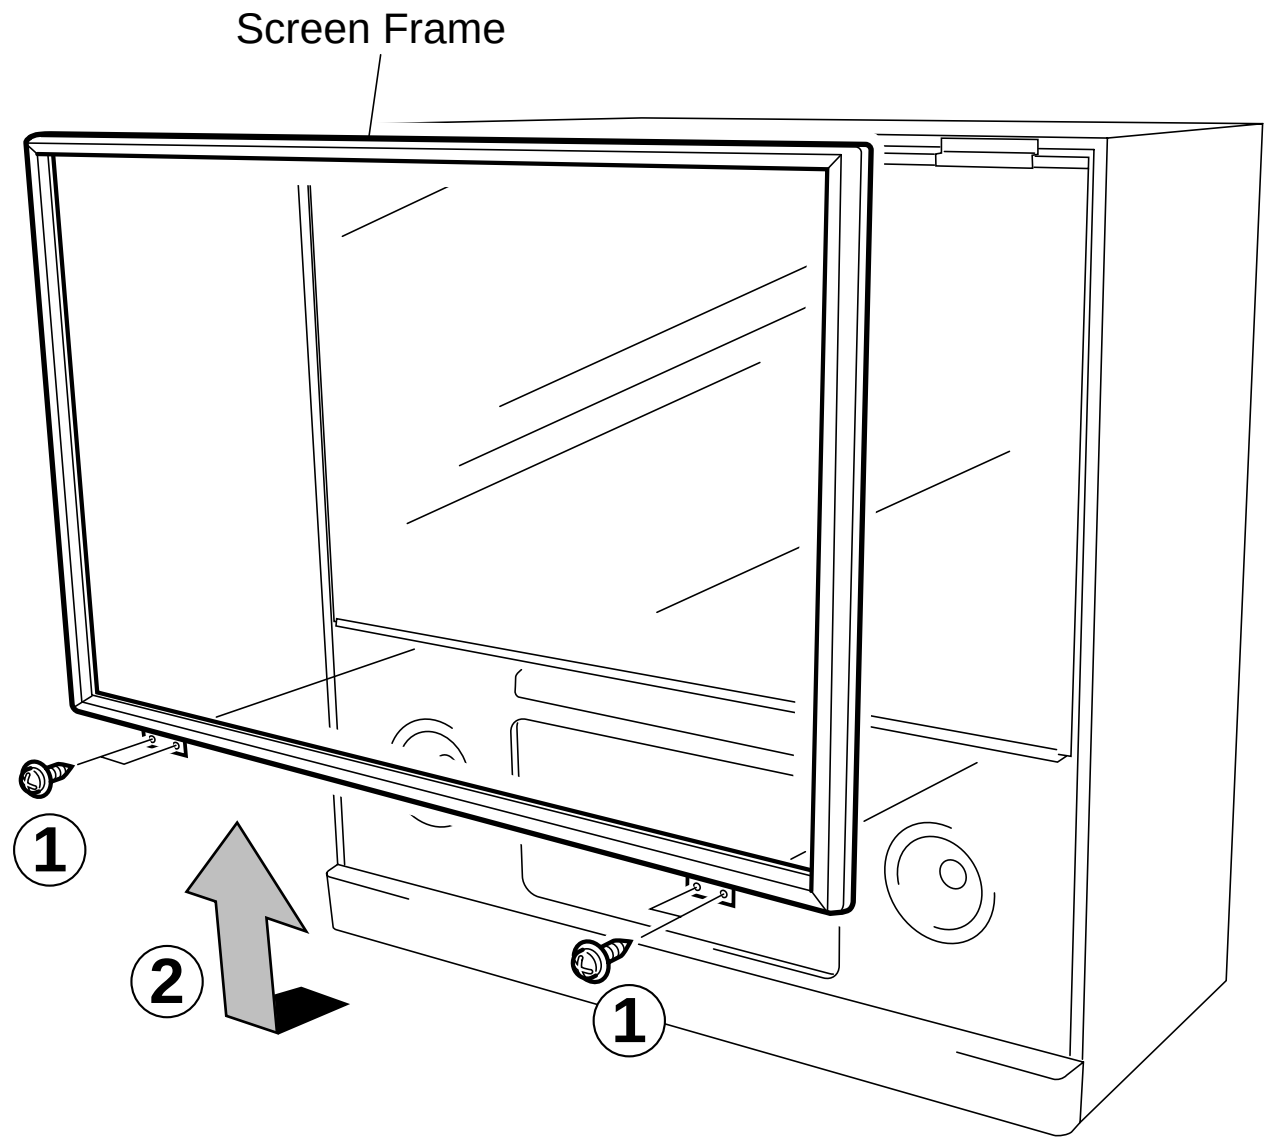
Screen Frame
①
②
①

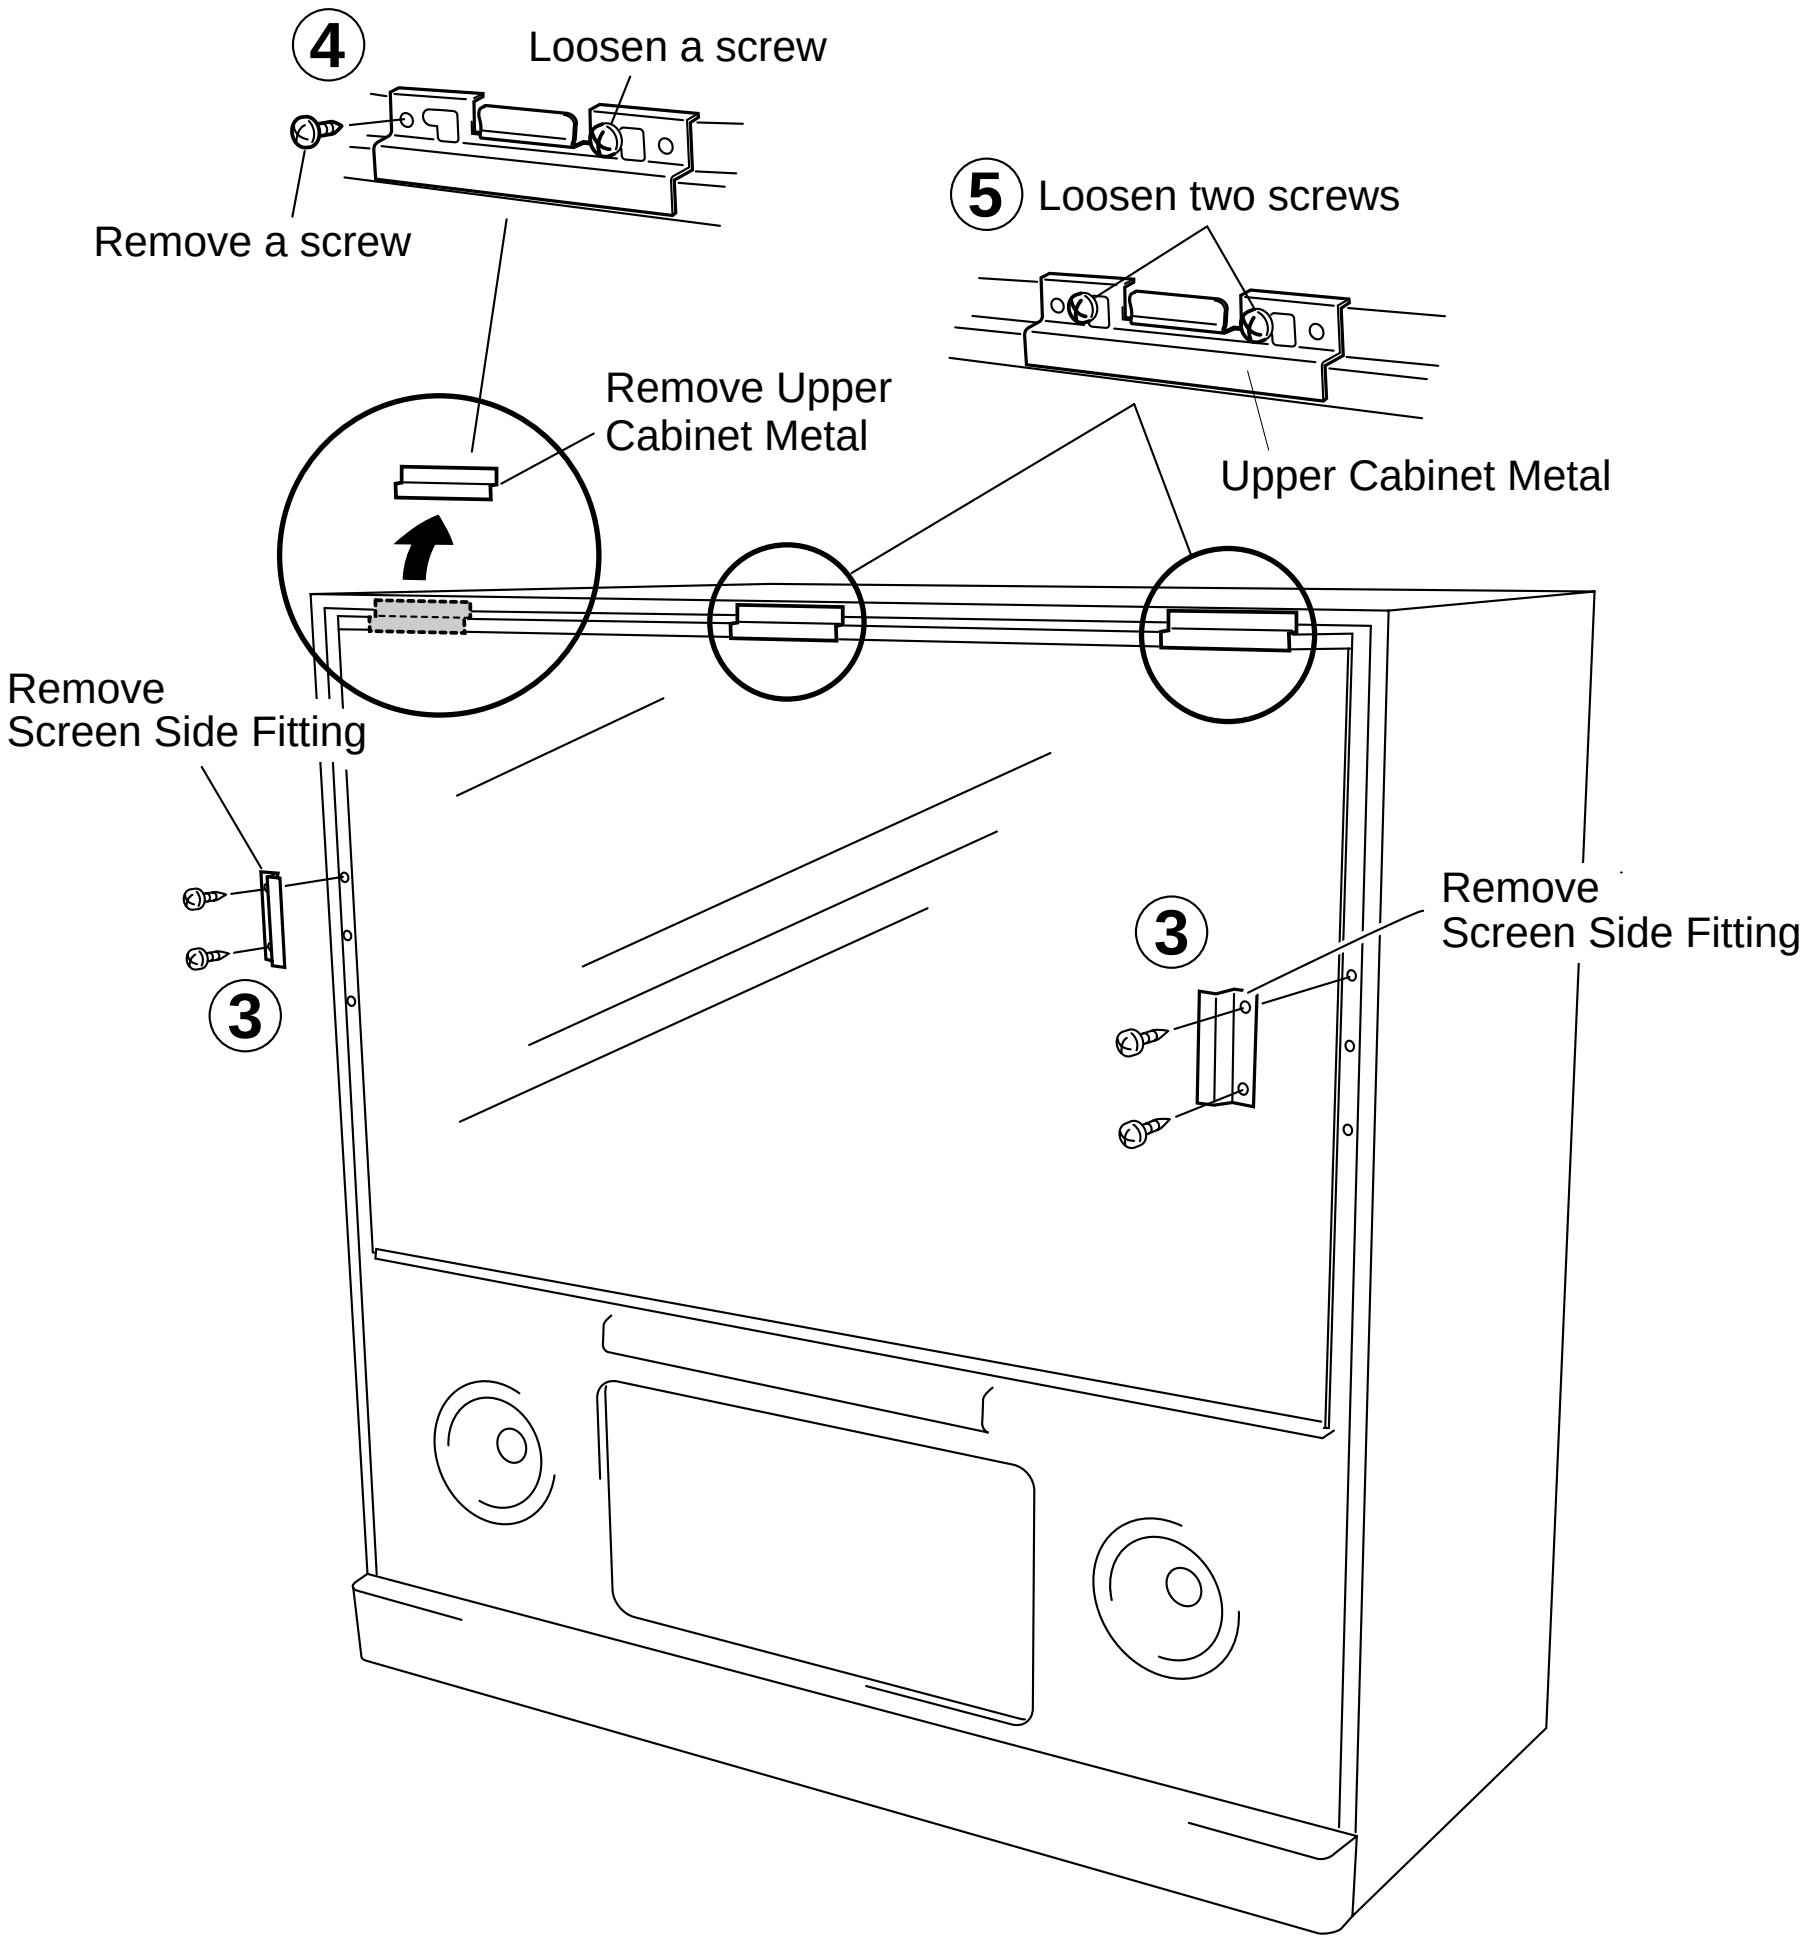
④
Loosen a screw
Remove a screw
⑤ Loosen two screws
Remove Upper Cabinet Metal
Upper Cabinet Metal
Remove Screen Side Fitting
③
③
Remove Screen Side Fitting

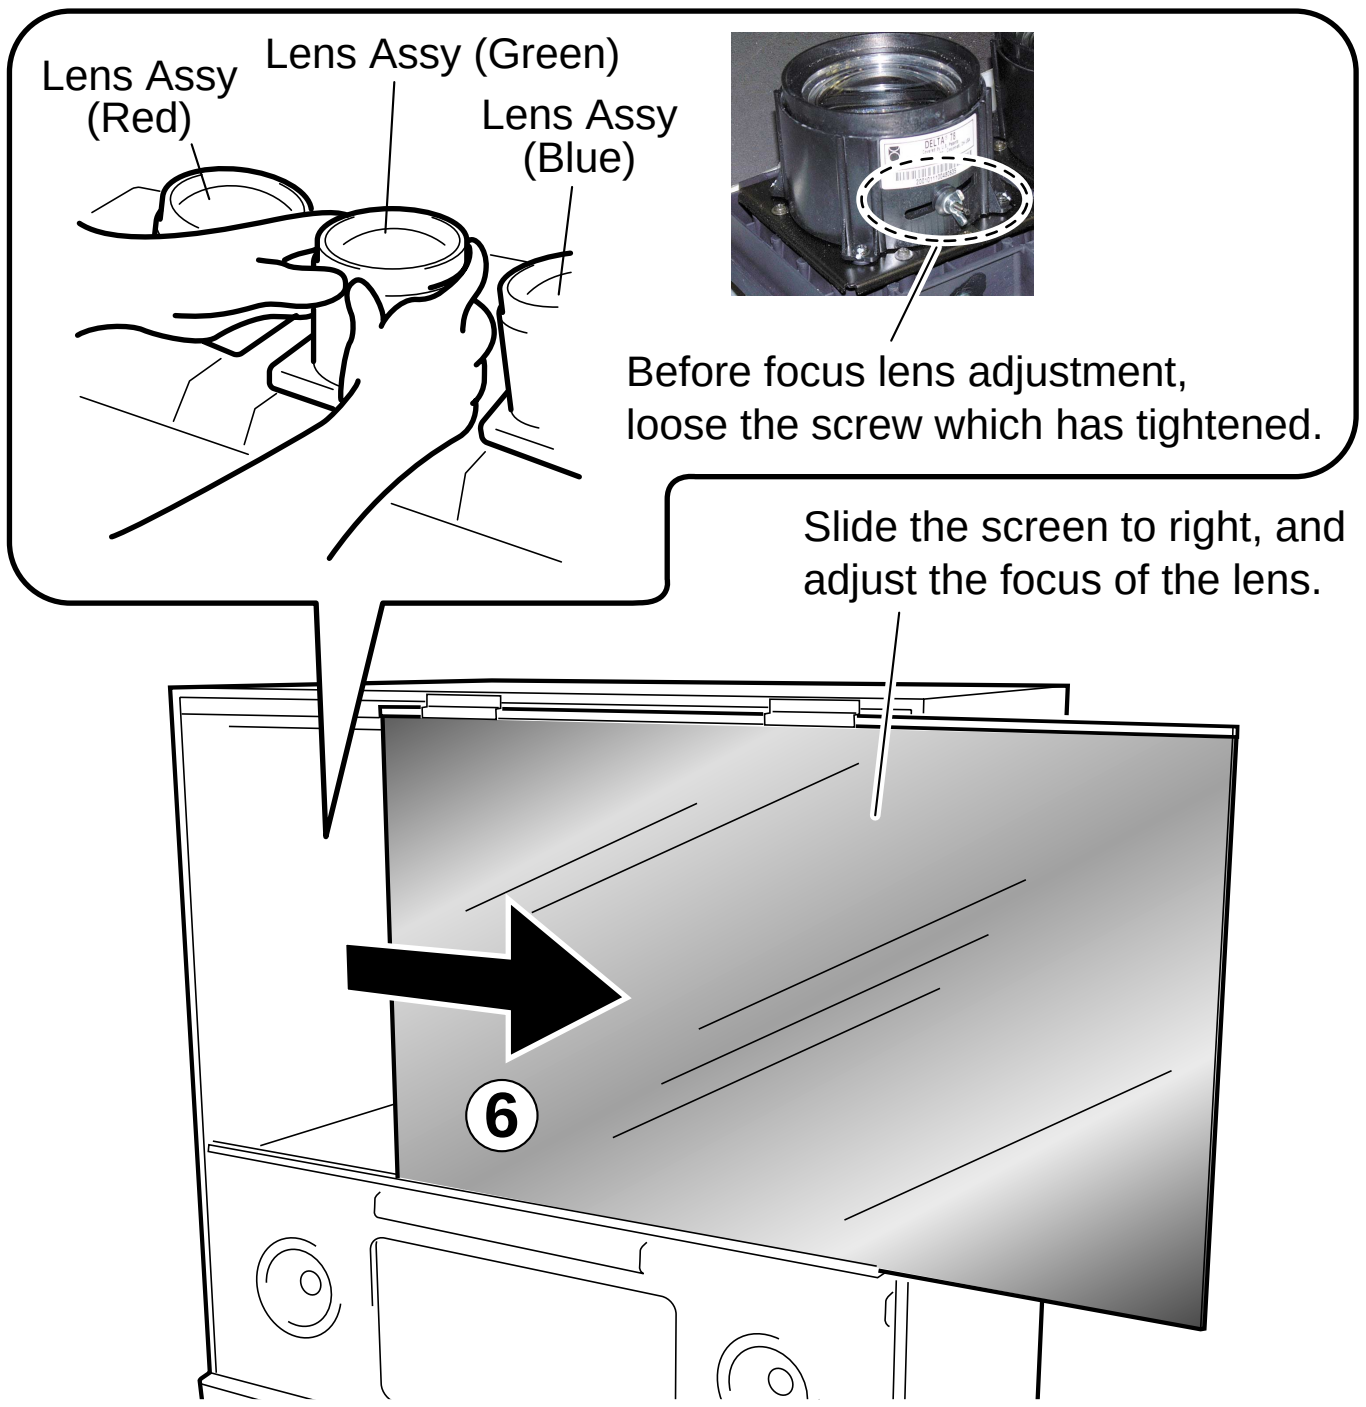
Lens Assy (Red)
Lens Assy (Green)
Lens Assy (Blue)
Before focus lens adjustment, loose the screw which has tightened.
Slide the screen to right, and adjust the focus of the lens.
6

Notes:
To assemble the screen, perform the above procedures in reverse order.
After assembling it, verify that the right and left sides of the screen are positioned as shown in the figure.

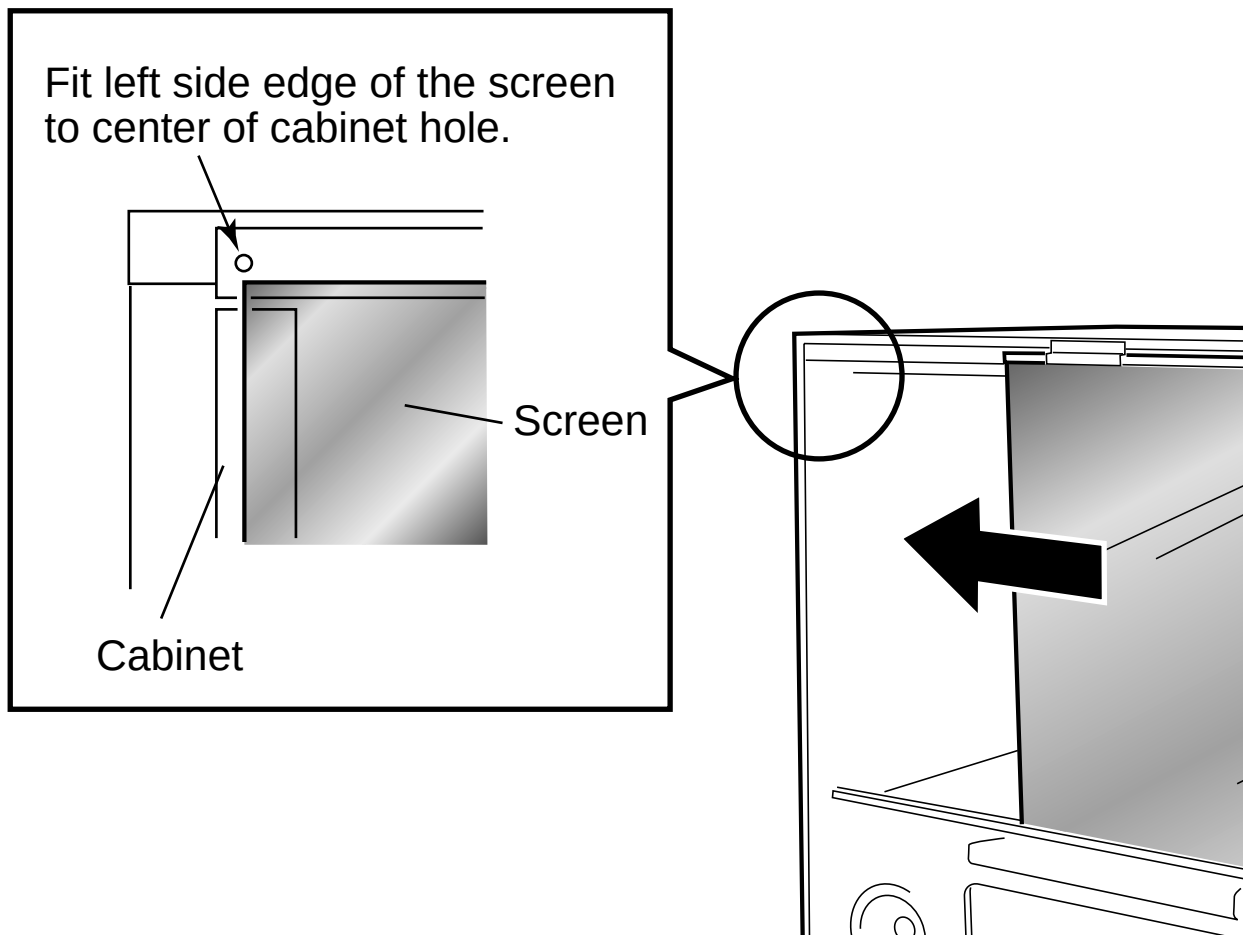
Fit left side edge of the screen to center of cabinet hole.
Screen
Cabinet

■ Disconnect the Anode Cable

WARNING:
Before disconnect the anode cable, turn off the power, unplug the AC plug and let the unit discharge for more than 1 minut.

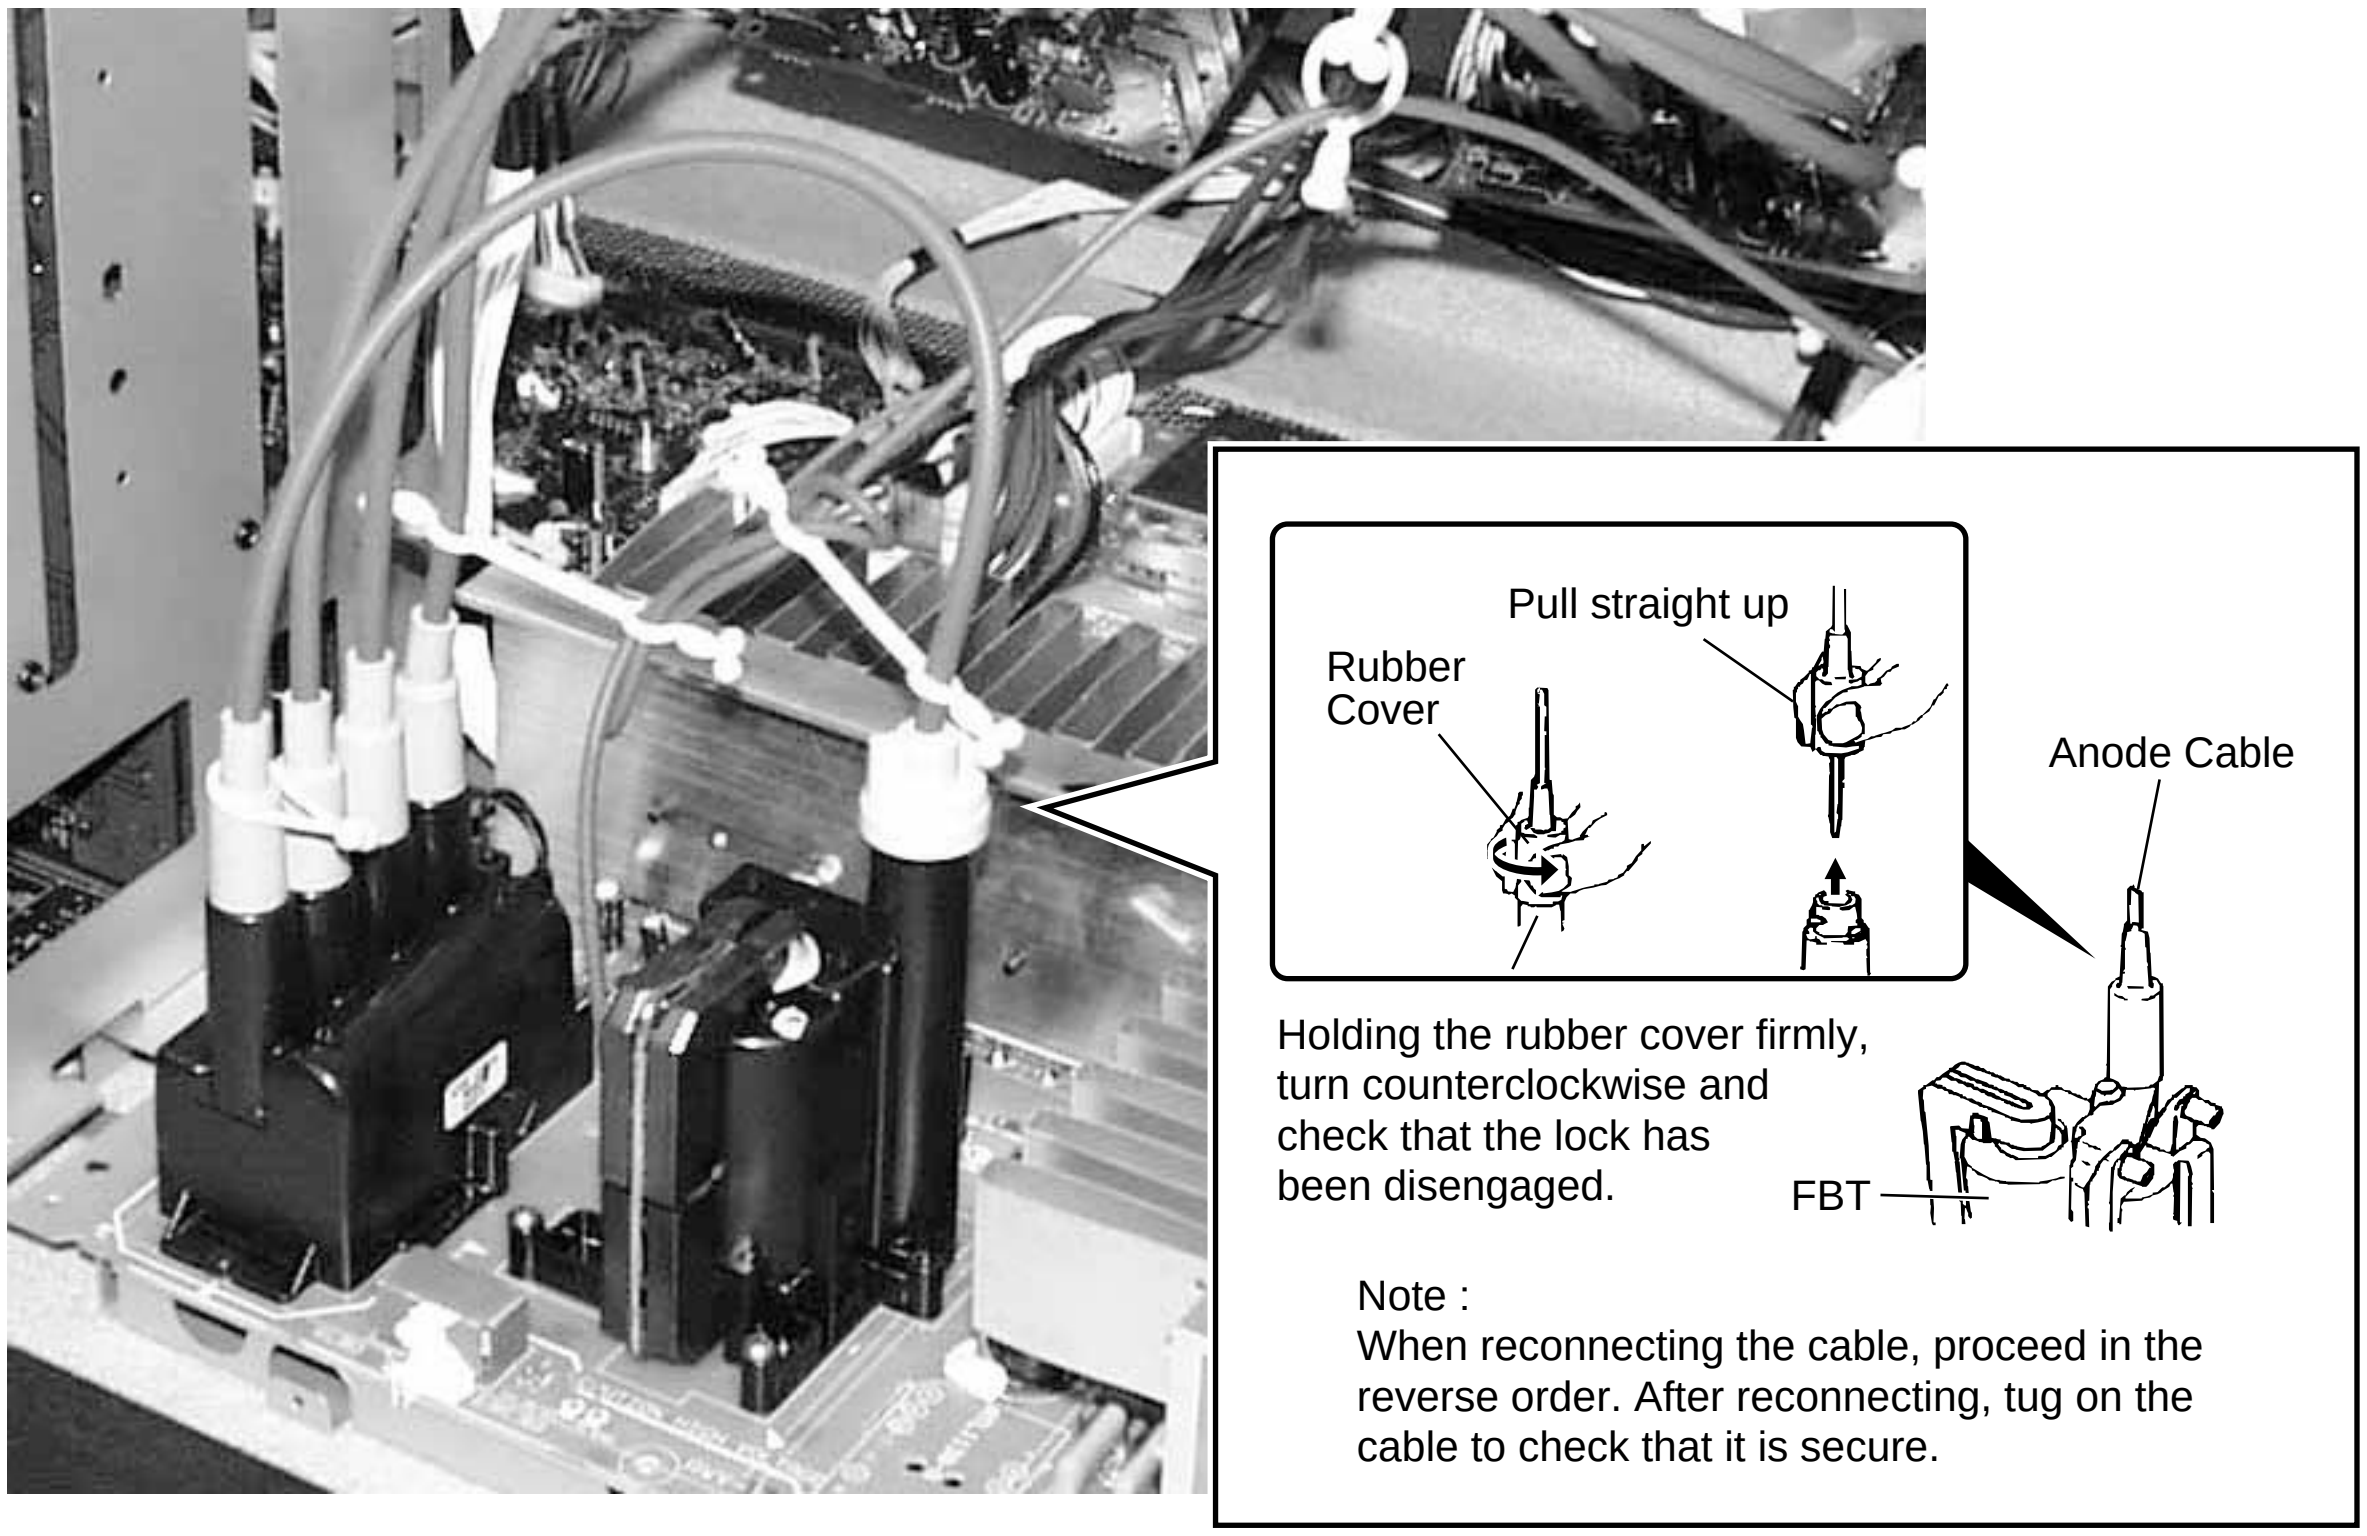
Pull straight up
Rubber Cover
Anode Cable
Holding the rubber cover firmly, turn counterclockwise and check that the lock has been disengaged.
FBT

Note :
When reconnecting the cable, proceed in the reverse order. After reconnecting, tug on the cable to check that it is secure.

7.1.3 WIRING DIAGRAM

■ Front Section

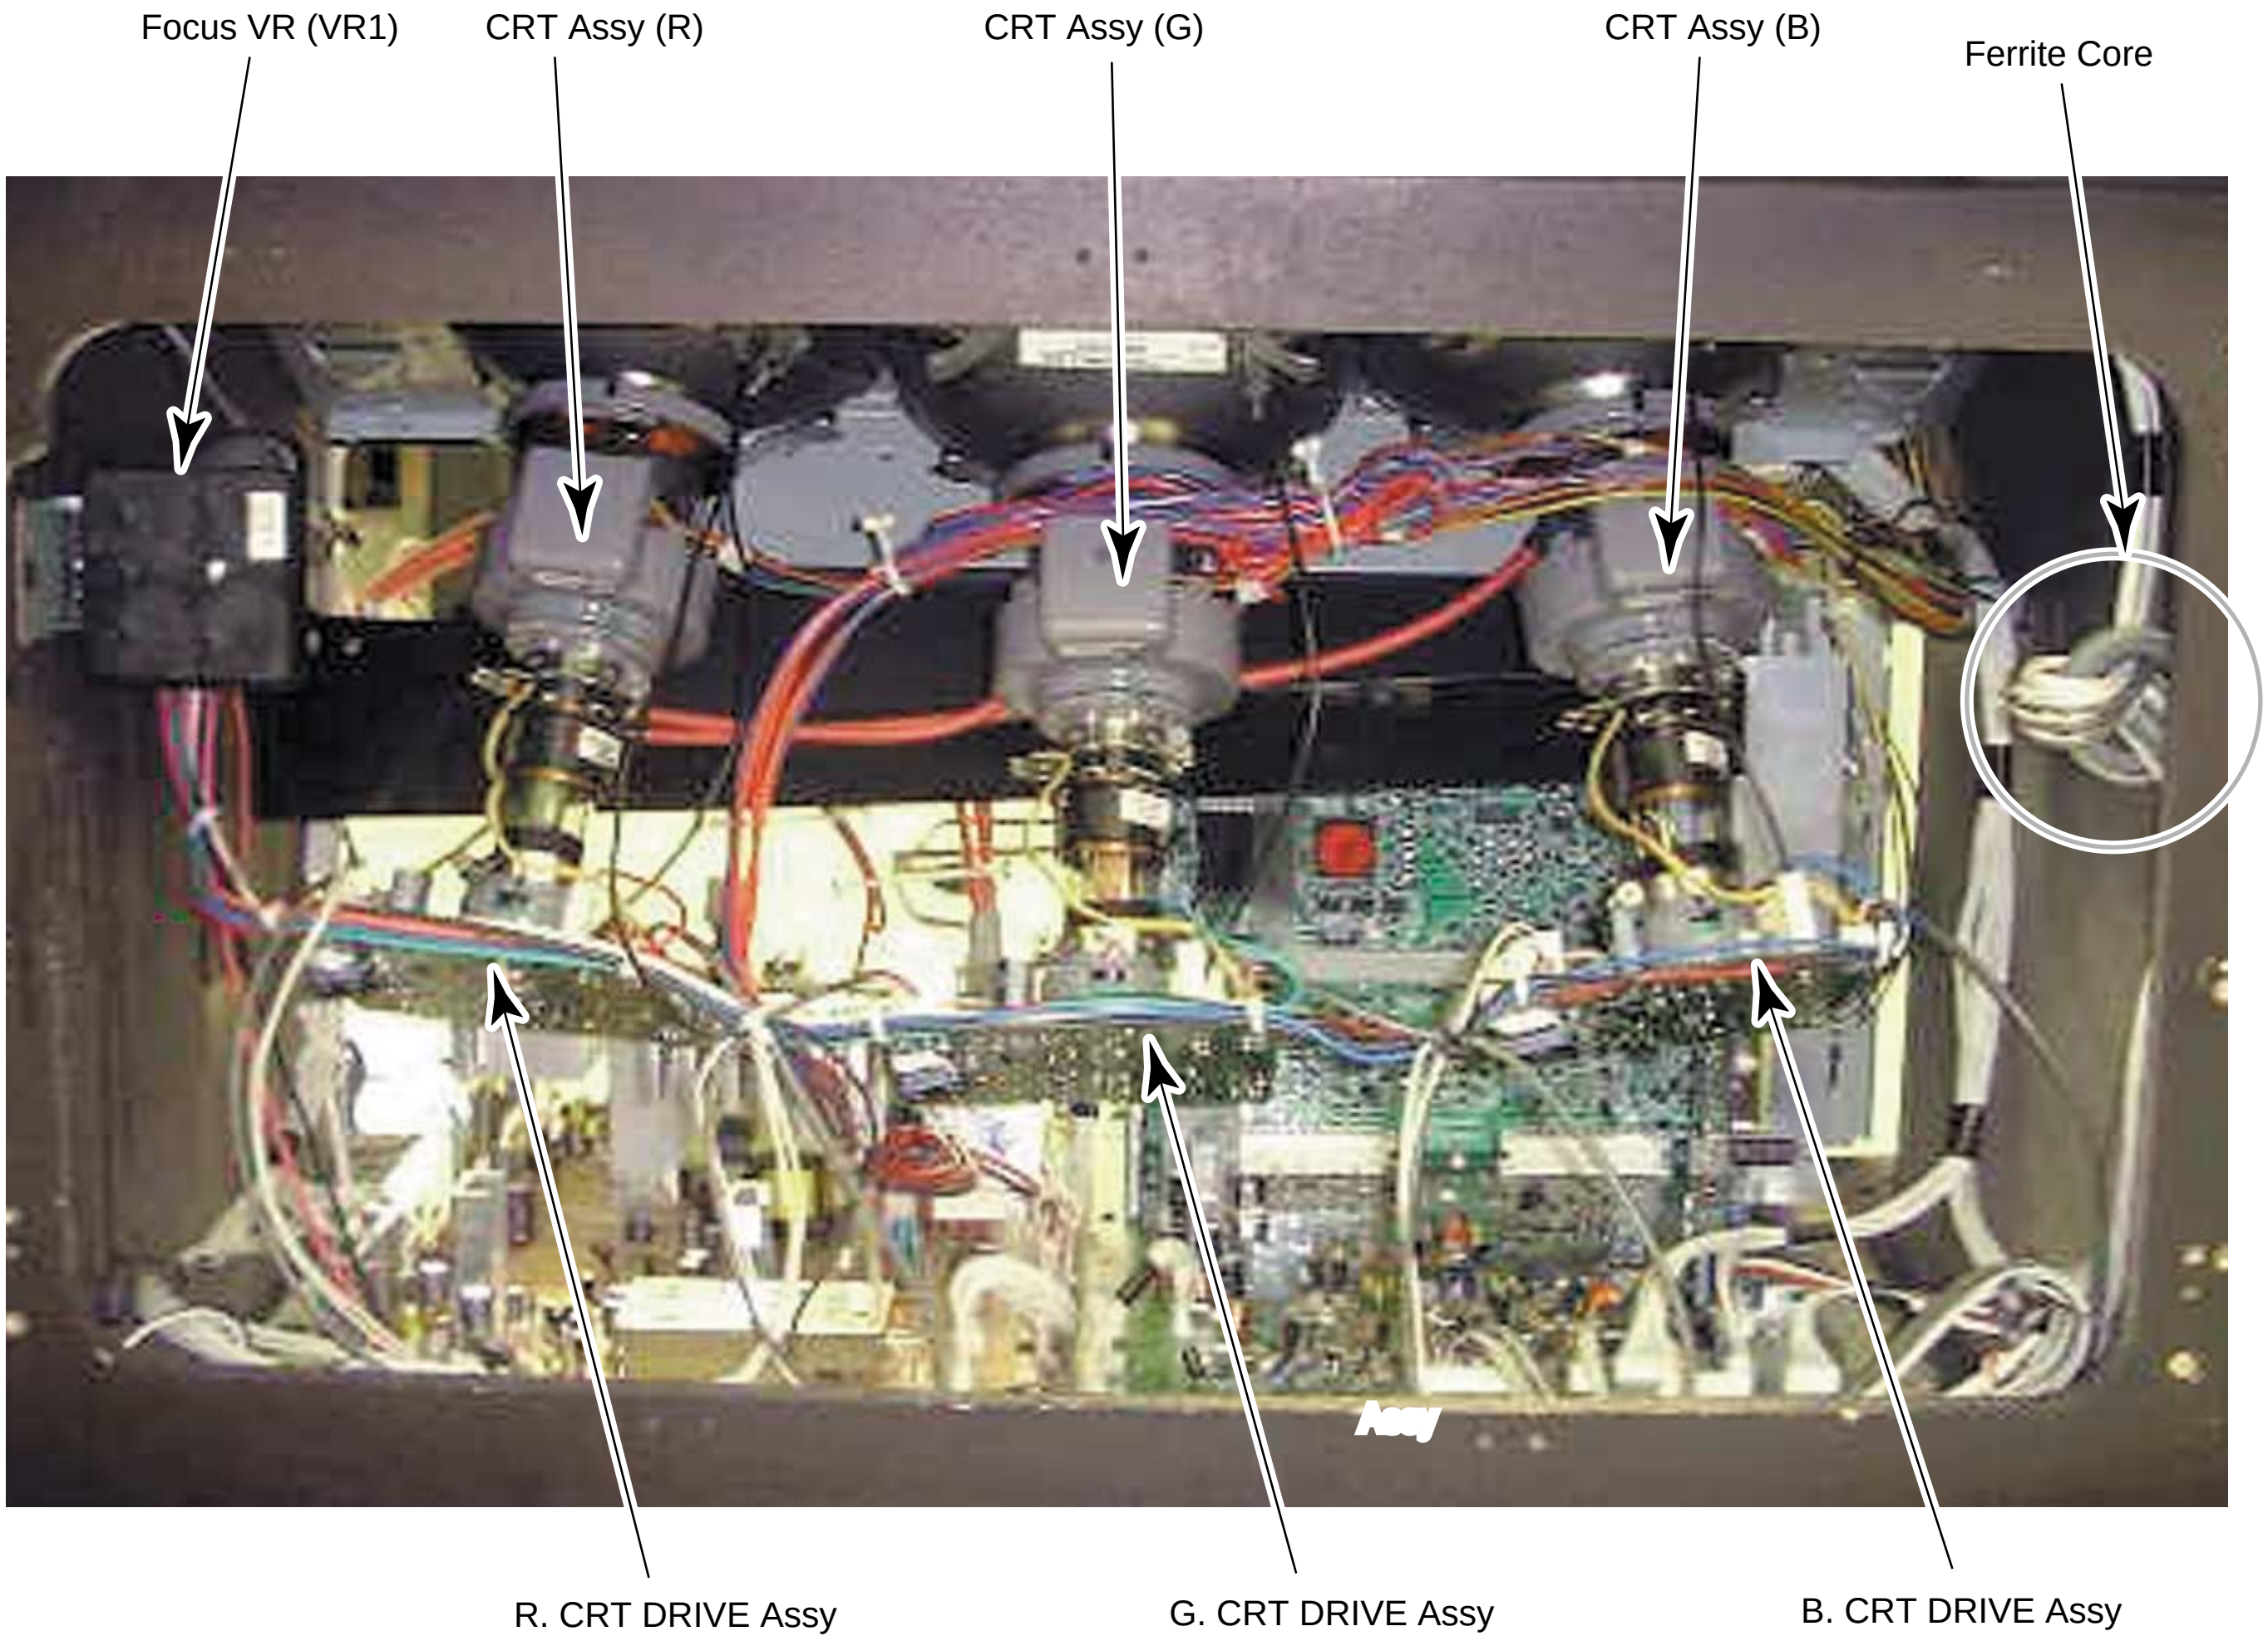
Focus VR (VR1)
CRT Assy (R)
CRT Assy (G)
CRT Assy (B)
Ferrite Core
Assy
R. CRT DRIVE Assy
G. CRT DRIVE Assy
B. CRT DRIVE Assy

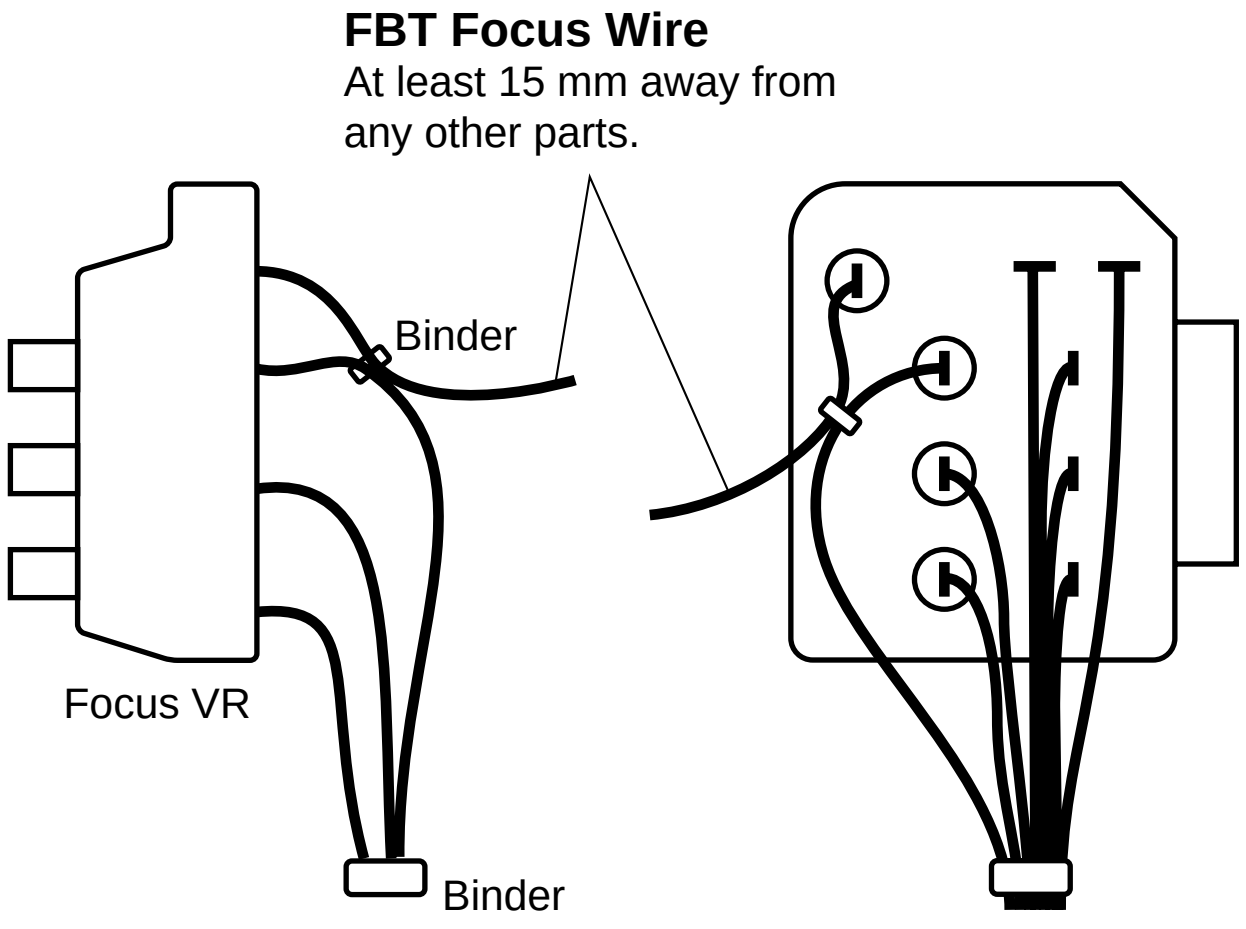
FBT Focus Wire
At least 15 mm away from
any other parts.
Binder
Focus VR
Binder

■ Rear Section

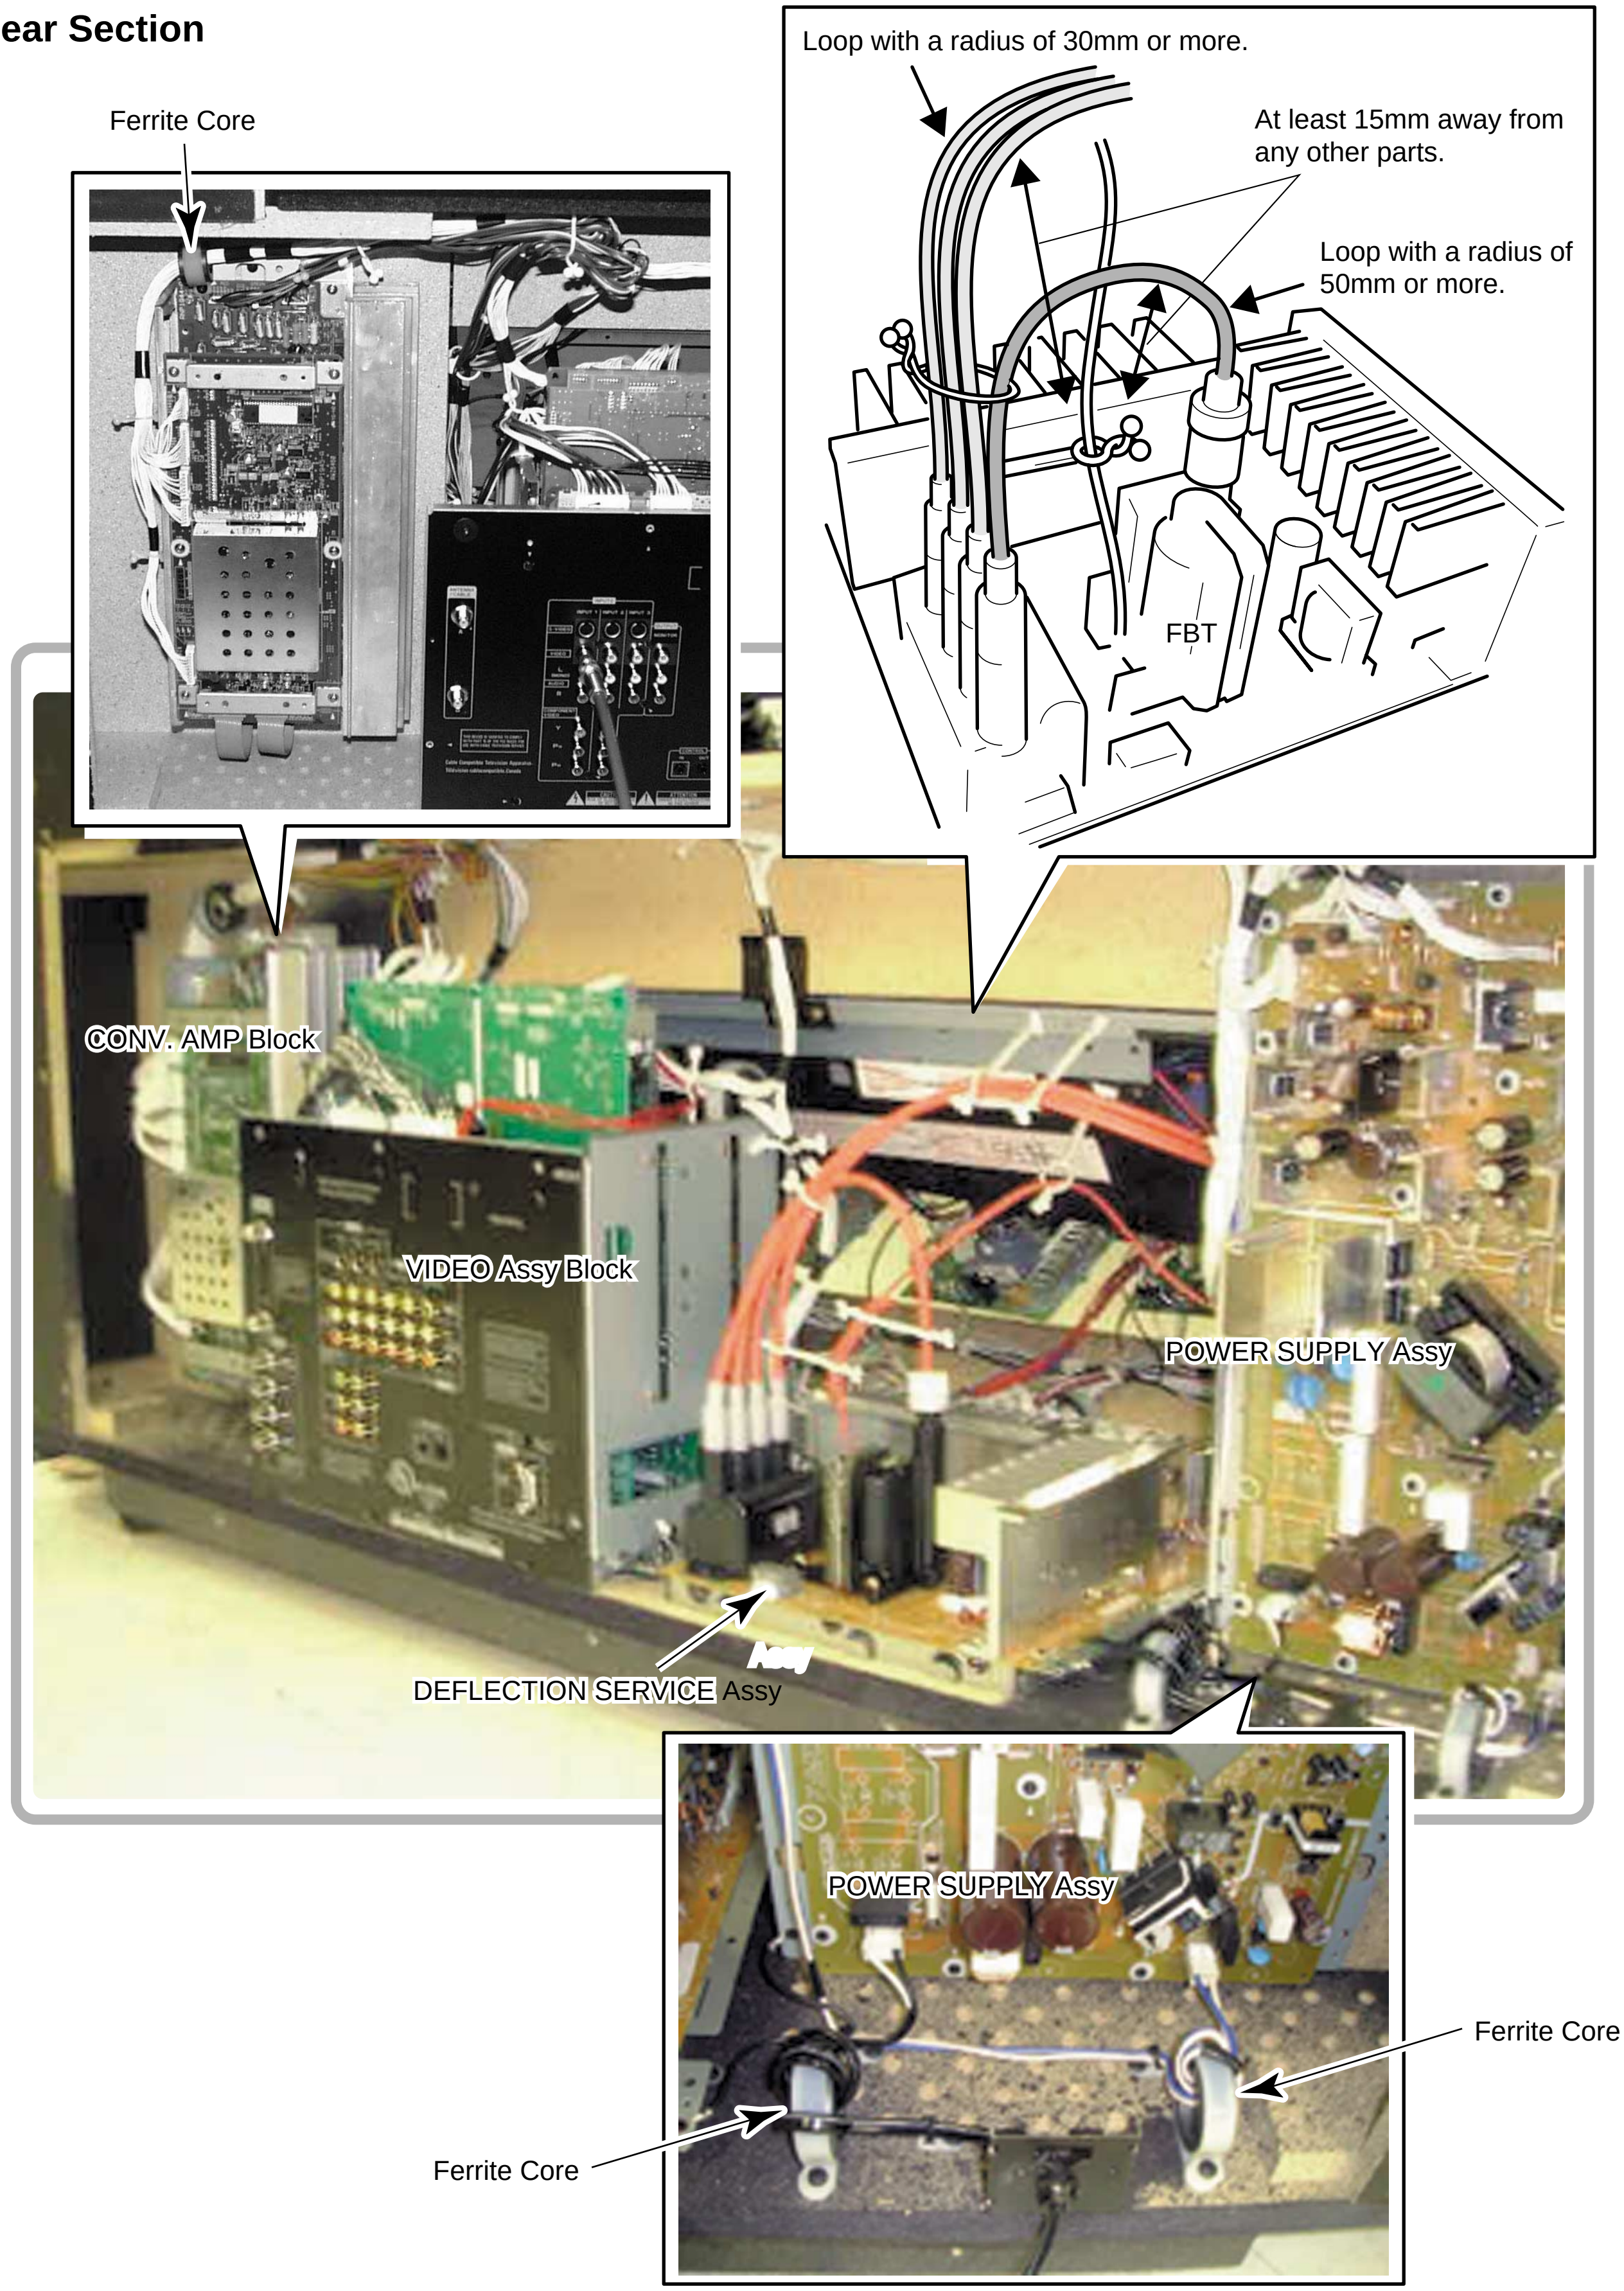
Ferrite Core
Loop with a radius of 30mm or more.
At least 15mm away from any other parts.
Loop with a radius of 50mm or more.
FBT
CONV. AMP Block
VIDEO Assy Block
POWER SUPPLY Assy
DEFLECTION SERVICE Assy
POWER SUPPLY Assy
Ferrite Core
Ferrite Core

7.2 IC

• The information shown in the list is basic information and may not correspond exactly to that shown in the schematic diagrams.

● List of IC

CXD2303AQ, SDA9280, CXA3106Q, PE5066A, PE5067A, MS82V16520-8GA, HD64F3067RF20, 24LC128(I)P, 24LC08B(I)P, CM0006C1F, 24LC32A(I)P, CXA2094Q, CM0010AF, TK15420M, MC33167TV

■ CXD2303AQ (SUB VIDEO SERVICE ASSY : IC3203)

• Video A/D Converter

● Block Diagram

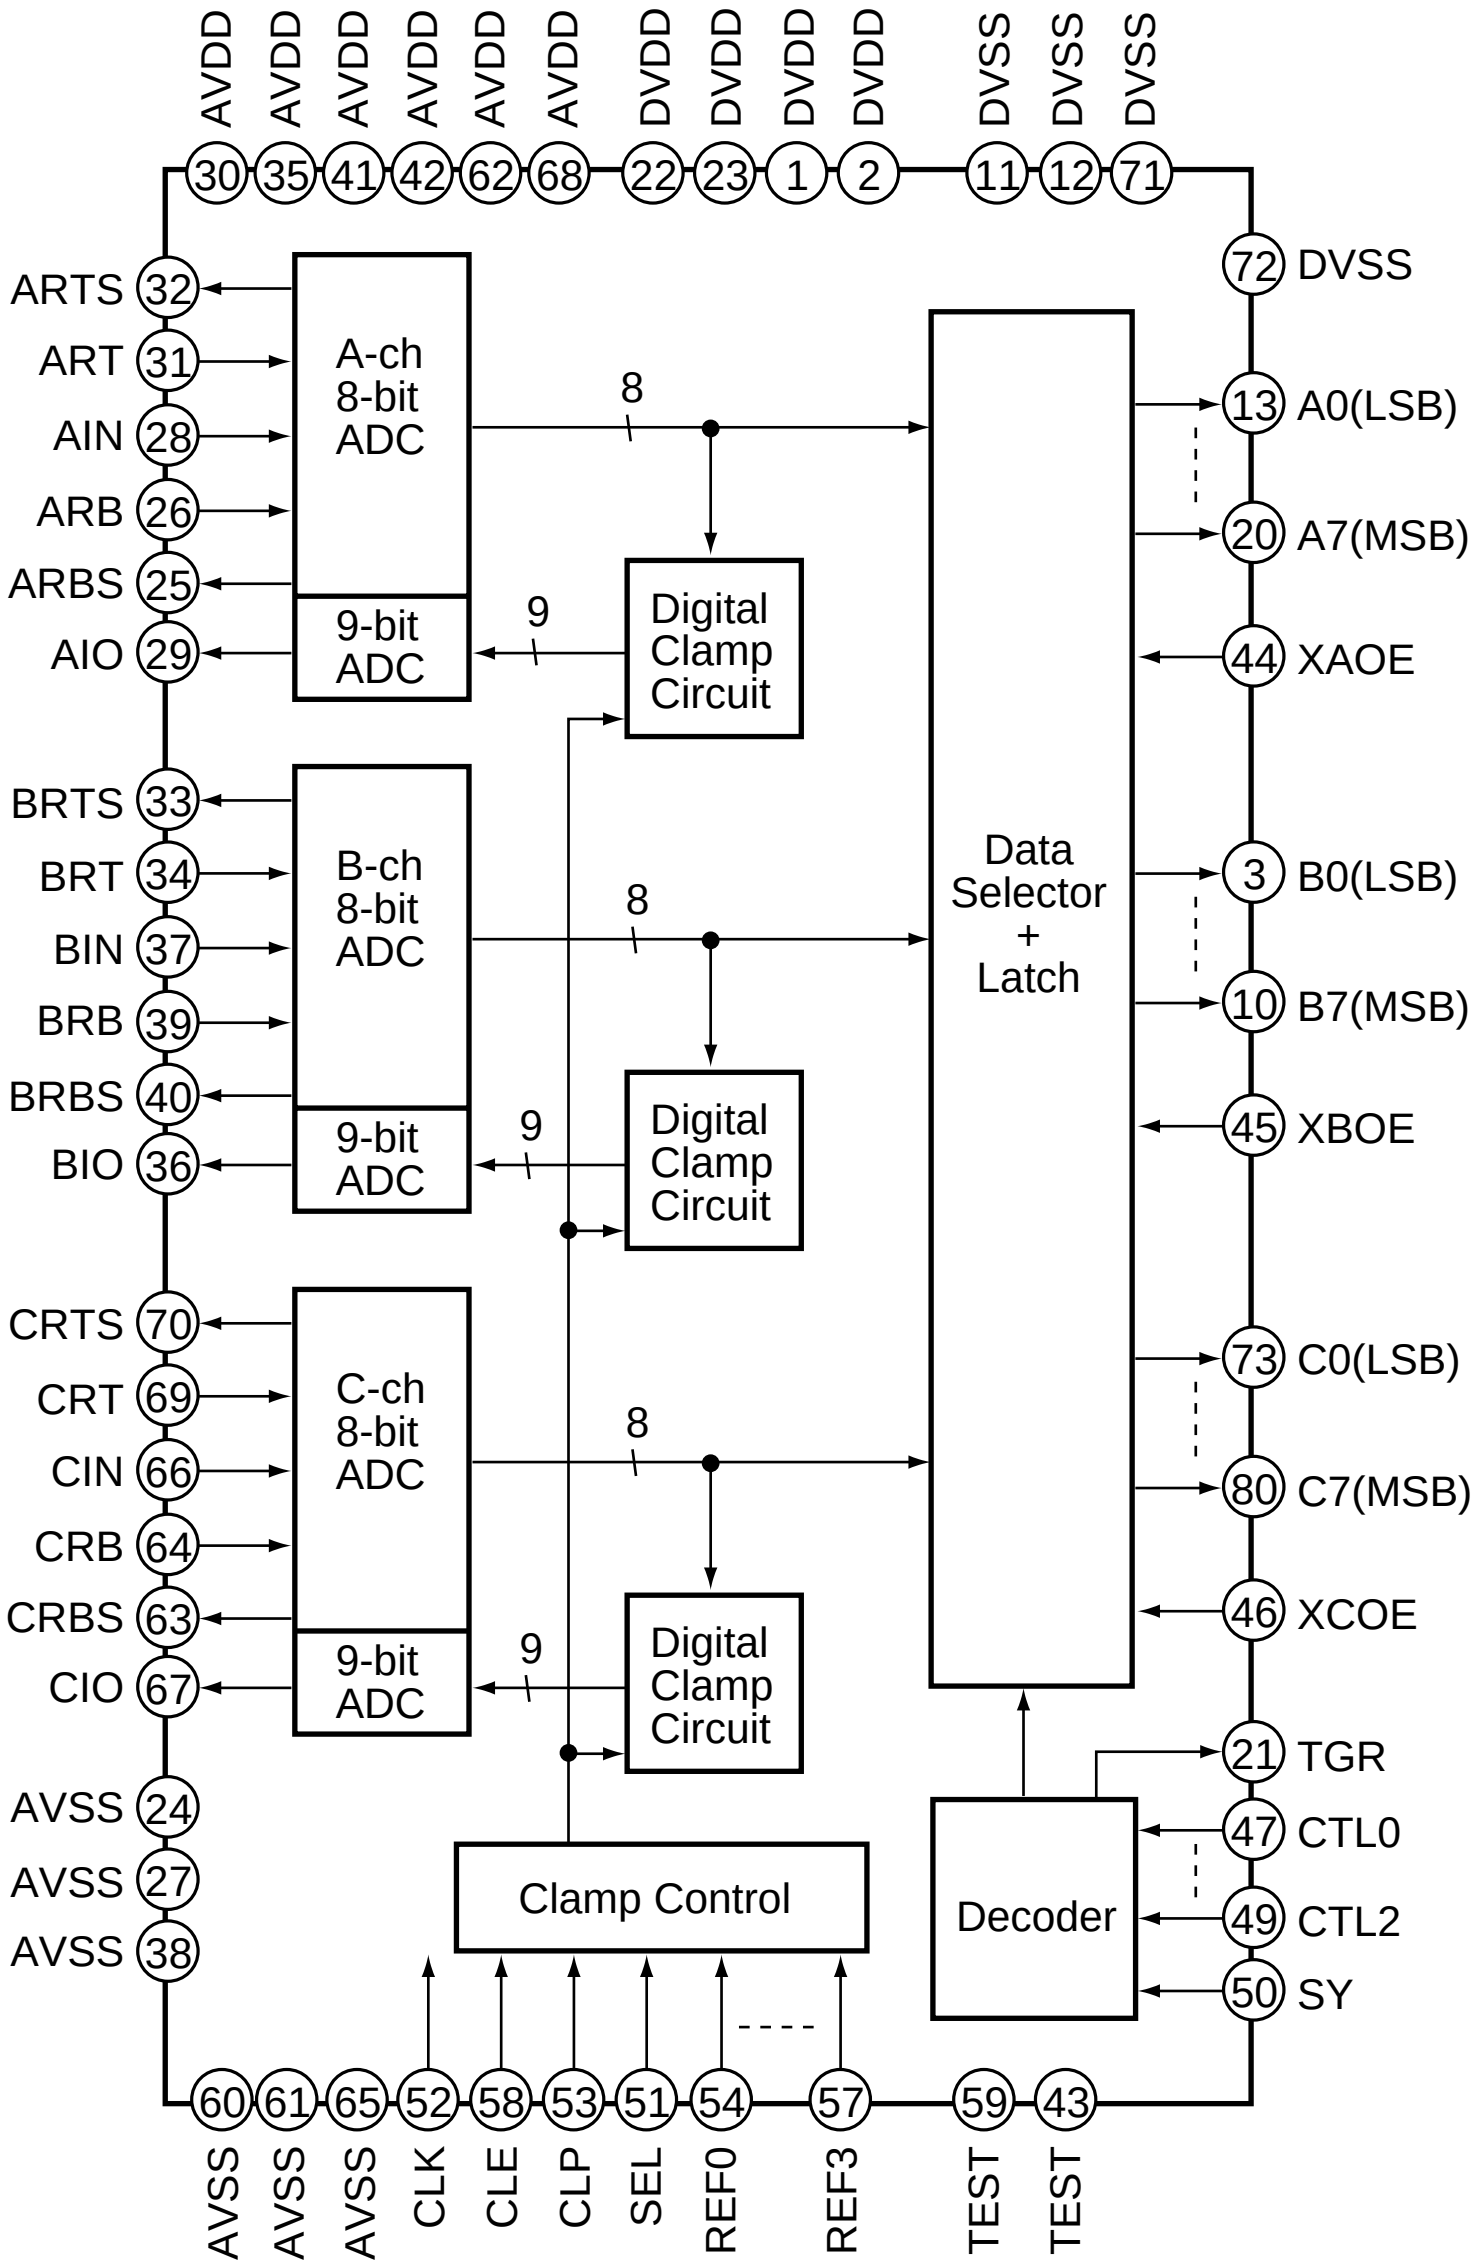

AVDD 30
AVDD 35
AVDD 41
AVDD 42
AVDD 62
AVDD 68
DVDD 22
DVDD 23
DVDD 1
DVDD 2
DVSS 11
DVSS 12
DVSS 71
72 DVSS
ARTS 32
ART 31
AIN 28
ARB 26
ARBS 25
AIO 29
A-ch
8-bit
ADC
9-bit
ADC
8
9
Digital
Clamp
Circuit
Data
Selector
+
Latch
13 A0(LSB)
20 A7(MSB)
44 XAOE
BRTS 33
BRT 34
BIN 37
BRB 39
BRBS 40
BIO 36
B-ch
8-bit
ADC
3 B0(LSB)
10 B7(MSB)
45 XBOE
CRTS 70
CRT 69
CIN 66
CRB 64
CRBS 63
CIO 67
C-ch
8-bit
ADC
73 C0(LSB)
80 C7(MSB)
46 XCOE
21 TGR
47 CTL0
49 CTL2
50 SY
Decoder
Clamp Control
AVSS 24
AVSS 27
AVSS 38
60 AVSS
61 AVSS
65 AVSS
52 CLK
58 CLE
53 CLP
51 SEL
54 REF0
57 REF3
59 TEST
43 TEST

● Pin Function

No.	Pin Name	I/O	Pin Function	No.	Pin Name	I/O	Pin Function
1	DVDD	–	Digital power supply +5V or +3.3V	41	AVDD	–	Analog power supply +5V
2	DVDD	–		42	AVDD	–	
3	B0	O	Digital output (B0: LSB, B7: MSB)	43	TEST	I	Open at normal use (built-in pull-down resistor)
4	B1			44	XAOE	I	Output enable input L: output, H: High-impedance
5	B2			45	XBOE		
6	B3			46	XCOE		
7	B4			47	CTL0	I	Decides the digital output mode (built-in pull-down resistor)
8	B5			48	CTL1		
9	B6			49	CTL2		
10	B7			50	SY	I	Control the switching timing of the digital output mode (built-in pull-down resistor)
11	DVSS	–	Digital ground	51	SEL	I	Control the polarity of CLP signal L: CLP is High, H: CLP is Low (built-in pull-down resistor)
12	DVSS	–		52	CLK	I	Clock input (built-in pull-down resistor)
13	A0	O	Digital output (A0: LSB, A7: MSB)	53	CLP	I	Clamp pulse input (built-in pull-down resistor)
14	A1			54	REF0	I	Decides the reference data of the clamp circuit (built-in pull-down resistor)
15	A2			55	REF1		
16	A3			56	REF2		
17	A4			57	REF3		
18	A5			58	CLE	I	Clamp enable L: Clamp circuit is not operate , H: Clamp circuit operates (built-in pull-down resistor)
19	A6			59	TEST	I	Open at normal use (built-in pull-down resistor)
20	A7			60	AVSS	–	Analog ground
21	TGR	O	Trigger output	61	AVSS	–	
22	DVDD	–	Digital power supply +5V or +3.3V	62	AVDD	–	Analog power supply +5V
23	DVDD	–		63	CRBS	–	Generates about 0.5V to CRB pin by short-circuiting to AVSS
24	AVSS	–	Analog ground	64	CRB	–	Reference voltage (Bottom)
25	ARBS	–	Generates about 0.5V to ARB pin by short-circuiting to AVSS	65	AVSS	–	Analog ground
26	ARB	–	Reference voltage (Bottom)	66	CIN	I	Analog input
27	AVSS	–	Analog ground	67	CIO	O	Analog output (D/A converter output pin)
28	AIN	I	Analog input	68	AVDD	–	Analog power supply +5V
29	AIO	O	Analog output (D/A converter output pin)	69	CRT	–	Reference voltage (Top)
30	AVDD	–	Analog power supply +5V	70	CRTS	–	Generates about 2.5V to CRT pin by short-circuiting to AVDD
31	ART	–	Reference voltage (Top)	71	DVSS	–	Digital ground
32	ARTS	–	Generates about 2.5V to ART pin by short-circuiting to AVDD	72	DVSS	–	
33	BRTS	–	Generates about 2.5V to BRT pin by short-circuiting to AVDD	73	C0	O	Digital output (C0: LSB, C7: MSB)
34	BRT	–	Reference voltage (Top)	74	C1		
35	AVDD	–	Analog power supply +5V	75	C2		
36	BIO	O	Analog output (D/A converter output pin)	76	C3		
37	BIN	I	Analog input	77	C4		
38	AVSS	–	Analog ground	78	C5		
39	BRB	–	Reference voltage (Bottom)	79	C6		
40	BRBS	–	Generates about 0.5V to BRB pin by short-circuiting to AVSS	80	C7		

■ SDA9280 (SUB VIDEO SERVICE ASSY : IC3602)

- **D/A Converter**

● Block Diagram

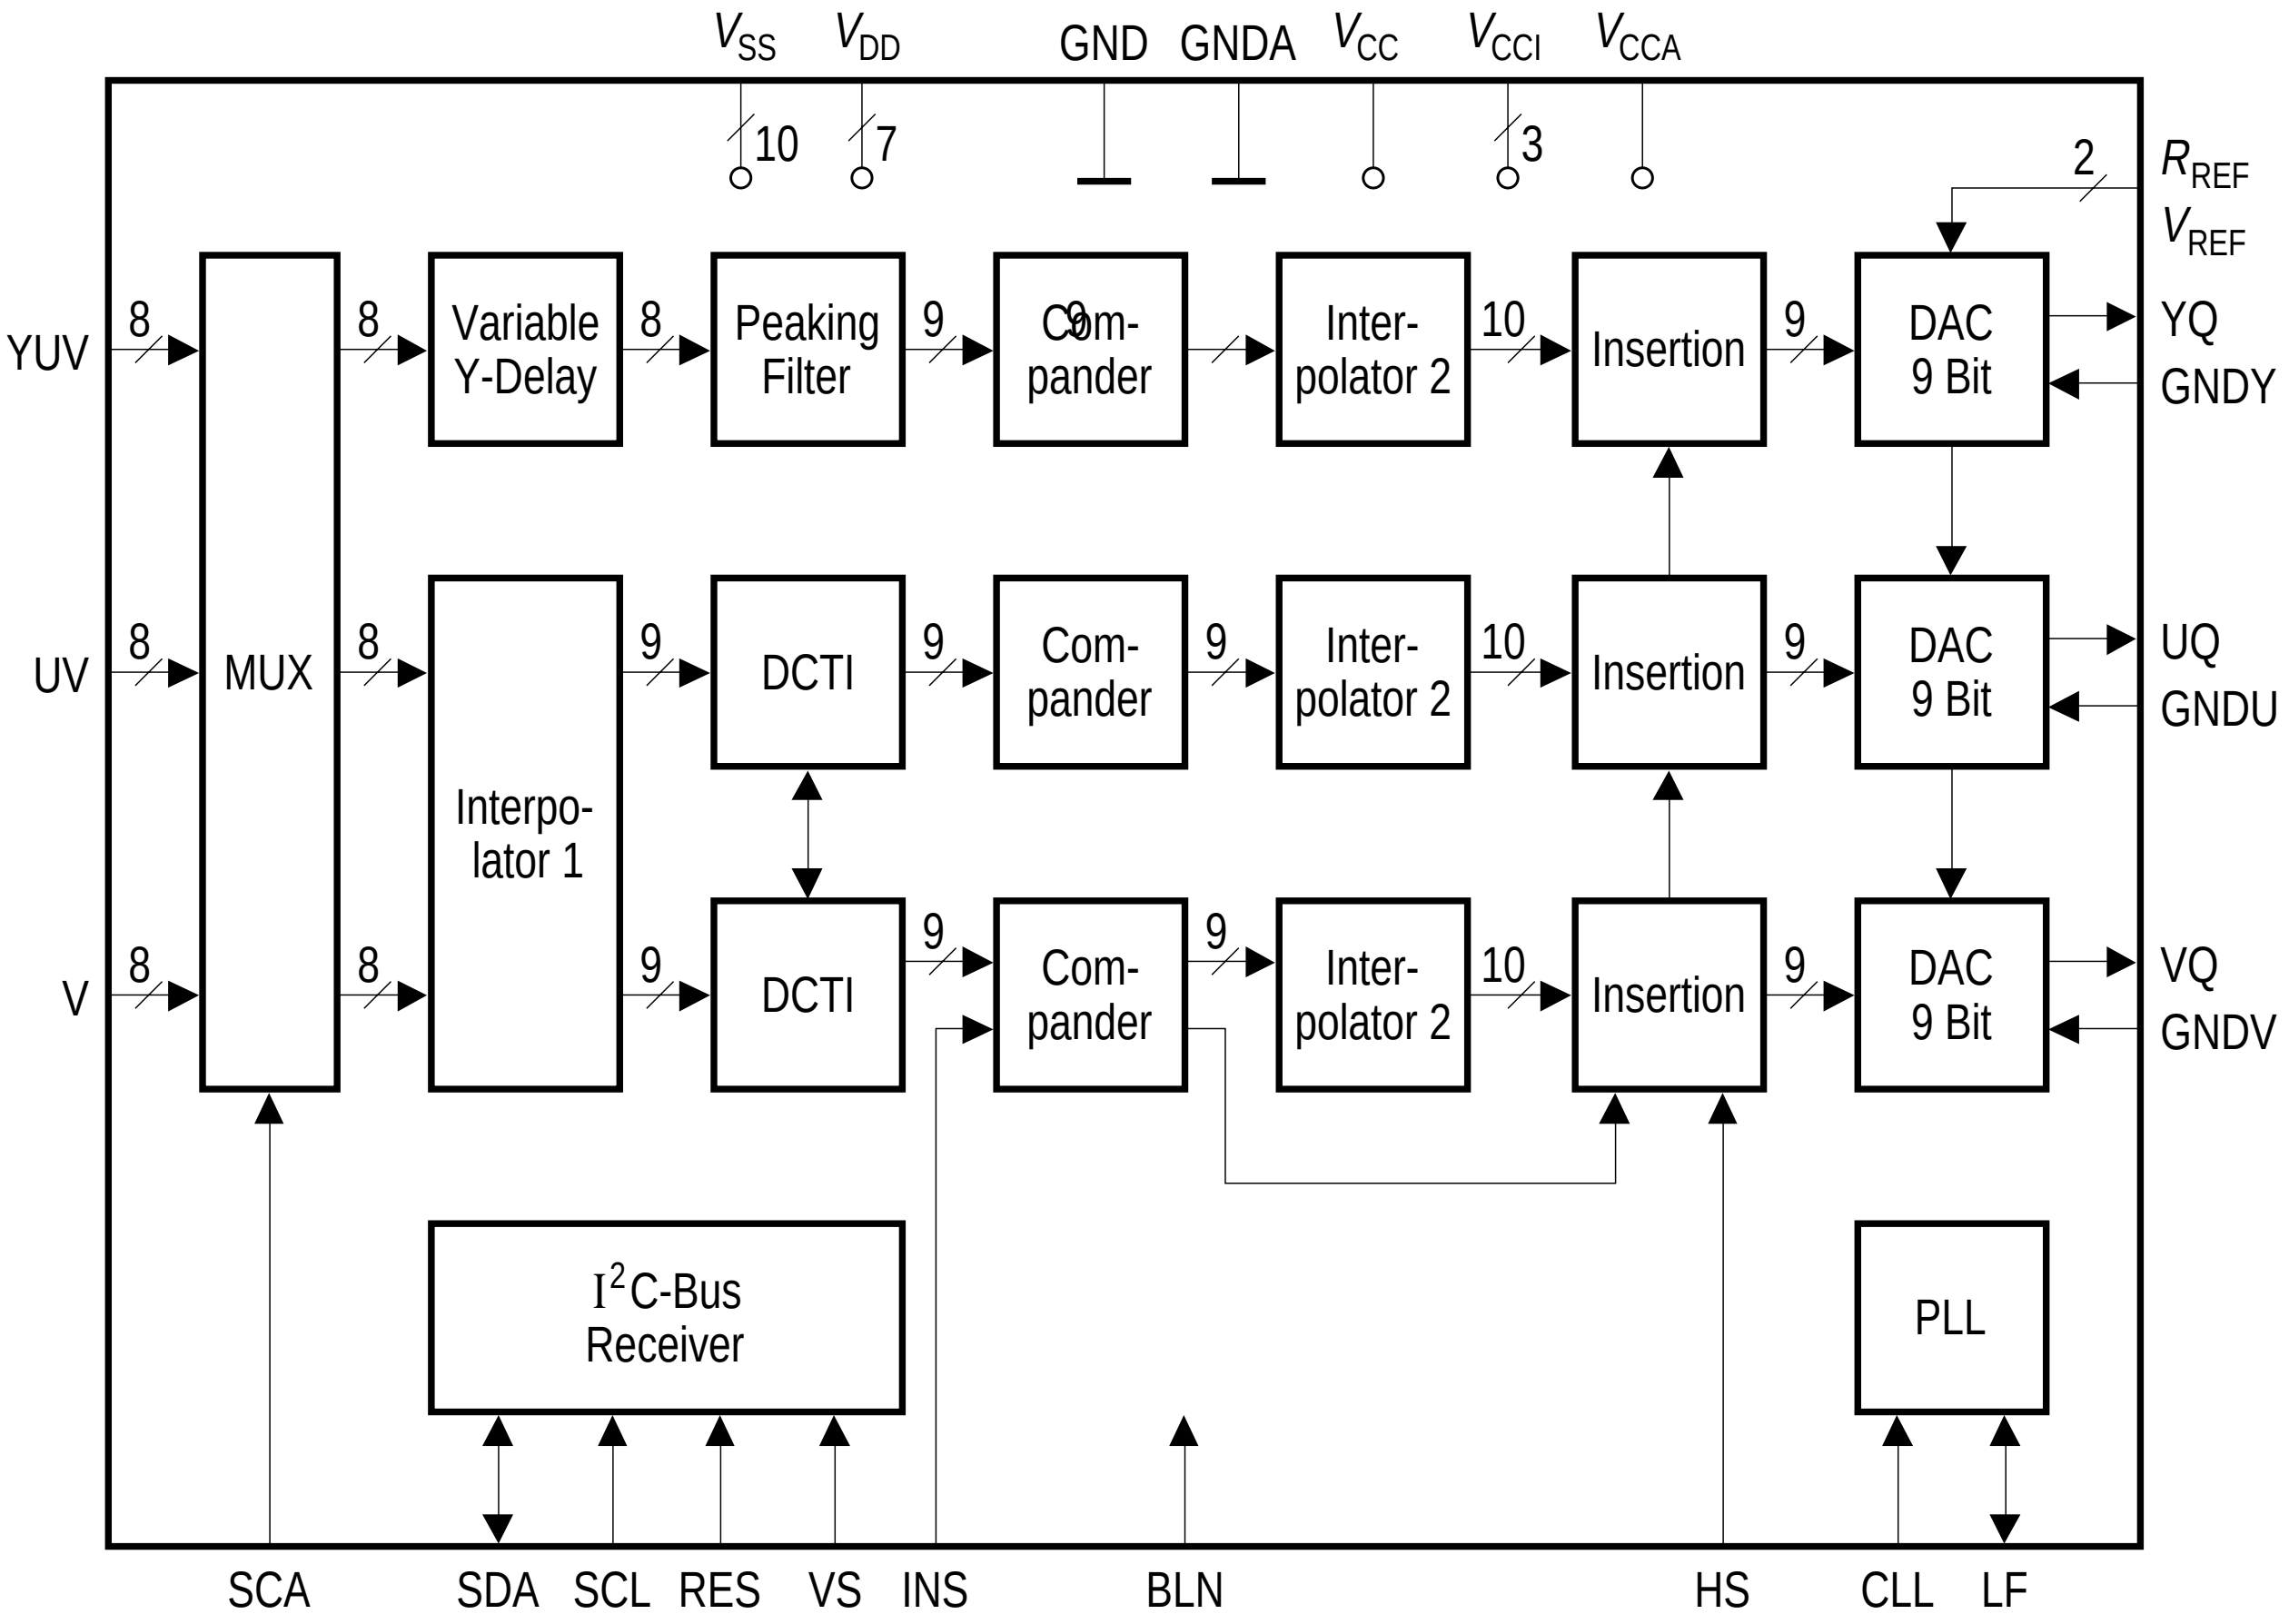
VSS
VDD
GND
GNDA
VCC
VCCI
VCCA
10
7
3
2
RREF
VREF
YUV
UV
V
8
MUX
Variable Y-Delay
Peaking Filter
Com-pander
Inter-polator 2
Insertion
DAC 9 Bit
Interpo-lator 1
DCTI
9
10
YQ
GNDY
UQ
GNDU
VQ
GNDV
I2C-Bus Receiver
PLL
SCA
SDA
SCL
RES
VS
INS
BLN
HS
CLL
LF

- **Pin Function**

Pin No.	Symbol	Type	Description
1,17,35	V_{SS}	S	Supply voltage (V_{SS}) for input stages
8,9,27,34,43, 60,63	V_{SS}	S	Supply voltage (V_{SS}) for digital parts and PLL ***Note**: no internal connection to pins No 1,17,35*
10,11,26,33, 42,61,62	V_{DD}	S	Supply voltage (V_{DD}) for digital parts, PLL and input stages ***Note**: internal connection to* V_{CCI}, V_{CCA} *(about 2 Ω)*
64 ... 68, 2 ... 4	V0 ... 7	I/TTL	Data input V (see Data Input Formats)
5,6,7,12 ... 16	UV0 ... 7	I/TTL	Data input UV (see Data Input Formats)
18 ... 25	YUV0 ... 7	I/TTL	Data input YUV (see Data Input Formats)
28	BLN	I/TTL	Blanking signal, high level indicates active video line
29	INS	I/TTL	Control signal for insertion of an arbitrary pattern (frame insertion)
30	SCA	I/TTL	Clock signal for data input
31	RES	I/TTL	Reset signal (active low) for I^2C Bus
32	SCL	I	I^2C-Bus clock line
36	SDA	IQ	I^2C-Bus data line
37	TEST		Don’t connect
38	VS	I/TTL	Vertical synchronization signal for synchronizing I^2C Bus (active: HIGH)
39	CLL	I/TTL	System clock
40	HS	I/TTL	Control signal for black level insertion (line frequency)
41	TEST		Connect to VSS
44	LF		PLL-filter connection
45,48,52	V_{CCI}	S	Analog supply voltage for DACs internally connected to V_{DD}, V_{CCA} (about 2 Ω)
46	GNDY	S	Return path for YQ
47	YQ	Q/ana	Analog output: luminance signal Y
49	V_{CCA}	S	Analog supply voltage internally connected to V_{DD}, V_{CCI} (about 2 Ω)
50	GNDV	S	Return path for VQ
51	VQ	Q/ana	Analog output: chrominance signal -(R-Y)
53	GNDU	S	Return path for UQ
54	UQ	Q/ana	Analog output: chrominance signal -(B-Y)
55	GNDA	S	Analog supply voltage
56	V_{REF}	I/ana	Analog reference voltage for DACs
57	R_{REF}		Reference resistor for DACs
58	V_{CC}	S	Analog supply voltage
59	GND	S	Analog supply voltage

S: supply, I: input, Q: output, TTL: digital (TTL)

■ CXA3106Q (SUB VIDEO SERVICE ASSY : IC3201)

• PLL IC

● Pin Function

No.	Pin Name	I/O	Pin Function	No.	Pin Name	I/O	Pin Function
1	IOVCC	–	Digital power supply	25	TTLGND	–	GND for TTL output
2	IOGND	–	Digital GND	26	TTLVCC	–	Power supply for TTL output
3	VCOH	I	External VCO input	27	IOGND	–	Digital GND
4	VCOL	I	External inverting VCO input	28	PECLVCC	–	Power supply for PECL output
5	VCO	I	External VCO input	29	CLK/2L	O	Inverting 1/2 clock output
6	HOLD	I	Phase comparating disable signal input	30	CLK/2H	O	1/2 clock output
7	SYNCH	I	Sync input	31	CLKL	O	Inverting clock output
8	SYNCL	I	Inverting sync input	32	CLKH	O	Clock output
9	SYNC	I	Sync input	33	DSYNCL	O	Delay sync signal output
10	SENABLE		Control signal (enable)	34	DSYNCH	O	Inverting delay sync signal output
11	SCLK		Control signal (clock)	35	VBB	–	Reference voltage of PECL
12	SDATA		Control signal (data)	36	PECLVCC	–	Power supply for PECL output
13	TLOAD	I	Programmable counter test input	37	IOGND	–	Digital GND
14	CS		Chip select	38	IOVCC	–	Digital power supply
15	SEROUT	O	Register read output	39	PLLVCC	–	Analog power supply for PLL circuit
16	DIVOUT	O	Programmable counter test output	40	PLLGND	–	Analog GND for PLL circuit
17	UNLOCK	O	Unlock signal output	41	VCOVCC	–	Analog power supply for VCO circuit
18	DVCC	–	Digital power supply	42	VCOGND	–	Analog GND for VCO circuit
19	DGND	–	Digital GND	43	VCOHGND	–	Analog GND for VCO SUB
20	CLK/2N	O	Inverting 1/2 clock outpit	44	IREF	–	For generates the charge pump current
21	CLK/2	O	1/2 clock output	45	RC2	–	External connection pin for LPF
22	CLKN	O	Inverting clock output	46	RC1	–	External connection pin for LPF
23	CLK	O	Clock output	47	IRGND	–	Analog GND for IREF
24	DSYNC	O	Delay sync signal output	48	IRVCC	–	Analog power supply for IREF

■ PE5066A (SUB VIDEO SERVICE ASSY : IC3401)

• I/P System Controller IC

● Pin Function

No.	Pin Name	I/O	Pin Function
1	GND	–	Ground
2	GND	–	Ground
3	PRP(15)	O	(upper bit)
4	PRP(14)		
5	PRP(13)		
6	PRP(12)		
7	PRP(11)		
8	PRP(10)		
9	PRP(9)		
10	PRP(8)		Digital output of sequential converting R-Y signal
11	PRP(7)		
12	PRP(6)		
13	PRP(5)		
14	PRP(4)		
15	PRP(3)		
16	PRP(2)		
17	PRP(1)		
18	PRP(0)		(lower bit)
19	PBP(15)	O	Digital output of sequential converting B-Y signal (upper bit)
20	GND	–	Ground
21	VDD	–	Power supply (3.3V)
22	PBP(14)	O	Digital output of sequential converting B-Y signal
23	PBP(13)		
24	PBP(12)		
25	PBP(11)		
26	PBP(10)		
27	PBP(9)		
28	PBP(8)		
29	PBP(7)		
30	PBP(6)		
31	PBP(5)		
32	PBP(4)		
33	PBP(3)		
34	PBP(2)		
35	PBP(1)		
36	PBP(0)		(lower bit)
37	YP(15)	O	(upper bit)
38	YP(14)		Digital output of sequential converting Y signal
39	YP(13)		
40	GND	–	Ground
41	VDD	–	Power supply (3.3V)
42	YP(12)	O	Digital output of sequential converting Y signal
43	YP(11)		
44	YP(10)		
45	YP(9)		
46	YP(8)	O	
47	YP(7)		
48	YP(6)		
49	YP(5)		
50	YP(4)		Digital output of sequential converting Y signal
51	YP(3)		
52	YP(2)		
53	YP(1)		
54	YP(0)		(lower bit)
55	HP	O	Sequential converting H. sync signal output
56	VP	O	Sequential converting V. sync signal output
57	HI	I	H. sync signal input
58	VI	I	V. sync signal input
59	GND	–	Ground
60	GND	–	Ground
61	VDD	–	Power supply (3.3V)
62	RES	I	Reset signal input
63	GND	–	Ground
64	FI	I	Field signal input
65	RD	I	RD signal input for PE5066A
66	HWR	I	HWR signal input for PE5066A
67	CS	I	CS signal input for PE5066A
68	IPKILL	I	ON/OFF signal input of I/P process
69	NC	–	Non connection
70	FILM	O	Film detection signal output
71	NC	–	Non connection
72	UA(11)	I	Address signal input for PE5066A
73	UA(10)		
74	UA(9)		
75	UA(8)		
76	UA(7)		
77	UA(6)		
78	UA(5)		
79	UA(4)		
80	GND	–	Ground
81	VDD	–	Power supply (3.3V)
82	UA(3)	I	Address signal input for PE5066A
83	UA(2)		
84	UA(1)		
85	UA(0)		
86	UD(7)	I/O	Data input/output for PE5066A
87	UD(6)		
88	UD(5)		
89	GND	–	Ground
90	VDD	–	Power supply (3.3V)

No.	Pin Name	I/O	Pin Function	No.	Pin Name	I/O	Pin Function
91	UD(4)	I/O	Data input/output for PE5066A	141	MDY(23)	I/O	Data input/output for external SGRAM
92	UD(3)			142	MDY(22)		
93	UD(2)			143	MDY(21)		
94	UD(1)			144	MDY(20)		
95	UD(0)			145	MDY(19)		
96	GND	–	Ground	146	MDY(18)		
97	MDC(23)	I/O	Data input/output for external SGRAM	147	MDY(17)		
98	MDC(22)			148	MDY(16)		
99	MDC(21)			149	MDY(7)		
100	VDD	–	Power supply (3.3V)	150	MDY(6)		
101	GND	–	Ground	151	MDY(5)		
102	MDC(20)	I/O	Data input/output for external SGRAM	152	MDY(4)		
103	MDC(19)			153	MDY(3)		
104	MDC(18)			154	MDY(2)		
105	MDC(17)			155	MDY(1)		
106	MDC(16)			156	MDY(0)		
107	MDC(7)			157	MA(10)	O	Address signal output for external SGRAM
108	MDC(6)			158	MA(8)		
109	MDC(5)			159	MA(0)		
110	MDC(4)			160	VDD	–	Power supply (3.3V)
111	MDC(3)			161	GND	–	Ground
112	MDC(2)			162	MA(1)	O	Address signal output for external SGRAM
113	MDC(1)			163	MA(2)		
114	MDC(0)			164	MA(3)		
115	MCLKC	O	CLK signal output for external SGRAM	165	MA(4)		
116	MCS	O	CS signal output for external SGRAM	166	MA(5)		
117	MRAS	O	RAS signal output for external SGRAM	167	MA(6)		
118	MCAS	O	CAS signal output for external SGRAM	168	MA(7)		
119	MWE	O	WE signal output for external SGRAM	169	MA(9)		
120	VDD	–	Power supply (3.3V)	170	MCLKY	O	CLK signal output for external SGRAM
121	GND	–	Ground	171	MDY(31)	I/O	Data input/output for external SGRAM
122	GND	–	Ground	172	MDY(30)		
123	MDC(31)	I/O	Data input/output for external SGRAM	173	MDY(29)		
124	MDC(30)			174	MDY(28)		
125	MDC(29)			175	MDY(27)		
126	MDC(28)			176	MDY(26)		
127	MDC(27)			177	MDY(25)		
128	MDC(26)			178	MDY(24)		
129	MDC(25)			179	GND	–	Ground
130	MDC(24)			180	GND	–	Ground
131	MDC(15)			181	VDD	–	Power supply (3.3V)
132	MDC(14)			182	MDY(15)	I/O	Data input/output for external SGRAM
133	MDC(13)			183	MDY(14)		
134	MDC(12)			184	MDY(13)		
135	MDC(11)			185	MDY(12)		
136	MDC(10)			186	MDY(11)		
137	MDC(9)			187	MDY(10)		
138	MDC(8)			188	MDY(9)		
139	GND	–	Ground	189	MDY(8)		
140	VDD	–	Power supply (3.3V)	190	NC	–	Non connection

No.	Pin Name	I/O	Pin Function
191	NC	–	Non connection
192	NC		
193	NC		
194	NC		
195	NC		
196	NC		
197	NC		
198	NC		
199	NC		
200	GND	–	Ground
201	VDD	–	Power supply (3.3V)
202	NC	–	Non connection
203	NC		
204	NC		
205	NC		
206	NC		
207	NC		
208	NC		
209	NC		
210	NC		
211	NC		
212	YI(7)	I	(upper bit) Digital input of Y signal
213	YI(6)		
214	YI(5)		
215	YI(4)		
216	YI(3)	I	Digital input of Y signal (lower bit)
217	YI(2)		
218	YI(1)		
219	YI(0)		
220	VDD	–	Power supply (3.3V)
221	GND	–	Ground
222	PBI(7)	I	(upper bit) Digital input of B-Y signal (lower bit)
223	PBI(6)		
224	PBI(5)		
225	PBI(4)		
226	PBI(3)		
227	PBI(2)		
228	PBI(1)		
229	PBI(0)		
230	PRI(7)	I	(upper bit) Digital input of R-Y signal (lower bit)
231	PRI(6)		
232	PRI(5)		
233	PRI(4)		
234	PRI(3)		
235	PRI(2)		
236	PRI(1)		
237	PRI(0)		
238	GND	–	Ground
239	CLK	I	System clock input
240	VDD	–	Power supply (3.3V)

■ PE5067A (SUB VIDEO SERVICE ASSY : IC3501)

- **I/P System Controller IC**

● Pin Function

No.	Pin Name	I/O	Pin Function
1	GND	–	Ground
2	GND	–	Ground
3	CLK	I	System clock input
4	GND	–	Ground
5	GBI(0)	I	(lower bit)
6	GBI(1)		
7	GBI(2)		
8	GBI(3)		Demultiplex digital input B of G/Y signal
9	GBI(4)		
10	GBI(5)		
11	GBI(6)		
12	GBI(7)		(upper bit)
13	BBI(0)	I	(lower bit)
14	BBI(1)		
15	BBI(2)		
16	BBI(3)		Demultiplex digital input B of B/PB signal
17	BBI(4)		
18	BBI(5)		
19	VDD	–	Power supply (3.3V)
20	GND	–	Ground
21	BBI(6)	I	Demultiplex digital input B of B/PB signal (upper bit)
22	BBI(7)		
23	RAI(0)	I	(lower bit)
24	RAI(1)		
25	RAI(2)		
26	RAI(3)		Demultiplex digital input A of R/PR signal
27	RAI(4)		
28	RAI(5)		
29	RAI(6)		
30	RAI(7)		(upper bit)
31	GAI(0)	I	(lower bit)
32	GAI(1)		
33	GAI(2)		
34	GAI(3)		Demultiplex digital input A of G/Y signal
35	GAI(4)		
36	GAI(5)		
37	VDD	–	Power supply (3.3V)
38	VDD	–	
39	GND	–	Ground
40	GND	–	
41	GAI(6)	I	Demultiplex digital input A of G/Y signal (upper bit)
42	GAI(7)		
43	BAI(0)	I	(lower bit)
44	BAI(1)		
45	BAI(2)		
46	BAI(3)		
47	BAI(4)		Demultiplex digital input A of B/PB signal
48	BAI(5)		
49	BAI(6)		
50	BAI(7)		(upper bit)
51	DEI	I	Data enable input for external DIGITAL I/F
52	HDI	I	H. sync signal input
53	VDI	I	V. sync signal input
54	FLDI	I	Field signal input (Not used)
55	GND	–	Ground
56	RES	I	Reset signal input
57	VDD	–	Power supply (3.3V)
58	GND	–	Ground
59	HCLR	O	Histogram clear signal output
60	FDET	O	ON/OFF judge signal output of I/P process
61	VACT	O	Histogram signal output
62	WAIT	O	WAIT signal input for PE5067A
63	NC	–	Non connection
64	HWR	I	HWR signal input for PE5067A
65	RD	I	RD signal input for PE5067A
66	CS	I	CS signal input for PE5067A
67	EMG_IP	I	Compulsory hardware through function
68	UA(11)	I	Address signal input for PE5067A
69	UA(10)		
70	UA(9)		
71	UA(8)		
72	UA(7)		
73	UA(6)		
74	UA(5)		
75	GND	–	Ground
76	GND	–	
77	VDD	–	Power supply (3.3V)
78	VDD	–	
79	UA(4)	I	Address signal input for PE5067A
80	UA(3)		
81	UA(2)		
82	UA(1)		
83	UA(0)		
84	GND	–	Ground
85	UD(7)	I/O	Data input/output for PE5067A
86	UD(6)		
87	UD(5)		
88	UD(4)		
89	GND	–	Ground
90	UD(3)	I/O	Data input/output for PE5067A
91	UD(2)		
92	UD(1)		
93	UD(0)		
94	FLDO	O	System output of field signal
95	GND	–	Ground
96	GND	–	
97	VDO	O	System output of sequential converting V. sync signal
98	HDO	O	System output of sequential converting H. sync signal
99	DEO	O	Sequential converting data enable output
100	BAO(7)	O	Demultiplex digital outut A of B/PB signal (upper bit)

No.	Pin Name	I/O	Pin Function	No.	Pin Name	I/O	Pin Function
101	BAO(6)	O	Demultiplex digital outut A of B/PB signal	152	VDD	–	Power supply (3.3V)
102	BAO(5)			153	GND	–	Ground
103	BAO(4)			154	GND	–	
104	VDD	–	Power supply (3.3V)	155	GBO(0)	O	Demultiplex digital outut B of G/Y signal (lower bit)
105	GND	–	Ground	156	RBO(7)	O	(upper bit) Demultiplex digital outut B of R/PR signal
106	BAO(3)	O	Demultiplex digital outut A of B/PB signal	157	RBO(6)		
107	BAO(2)			158	RBO(5)		
108	BAO(1)			159	RBO(4)		
109	BAO(0)		(lower bit)	160	RBO(3)		
110	GAO(7)	O	(upper bit) Demultiplex digital outut A of G/Y signal	161	RBO(2)		
111	GAO(6)			162	VDD	–	Power supply (3.3V)
112	GAO(5)			163	GND	–	Ground
113	VDD	–	Power supply (3.3V)	164	RBO(1)	O	Demultiplex digital outut B of R/PR signal (lower bit)
114	VDD	–		165	RBO(0)		
115	GND	–	Ground	166	FI	O	Field signal output
116	GND	–		167	VI	O	V. sync signal output
117	GAO(4)	O	Demultiplex digital outut A of G/Y signal	168	HI	O	H. sync signal output
118	GAO(3)			169	VP	I	Sequential converting V. sync signal input
119	GAO(2)			170	HP	I	Sequential converting H. sync signal input
120	GAO(1)			171	VDD	–	Power supply (3.3V)
121	GAO(0)		(lower bit)	172	GND	–	Ground
122	RAO(7)	O	(upper bit) Demultiplex digital outut A of R/PR signal	173	PRP(0)	I	(lower bit) Digital input of R-Y signal after sequential converted
123	RAO(6)			174	PRP(1)		
124	VDD	–	Power supply (3.3V)	175	PRP(2)		
125	GND	–	Ground	176	PRP(3)		
126	RAO(5)	O	Demultiplex digital outut A of R/PR signal	177	PRP(4)		
127	RAO(4)			178	PRP(5)		
128	RAO(3)			179	PRP(6)		
129	RAO(2)			180	PRP(7)		
130	RAO(1)			181	PRP(8)		
131	RAO(0)		(lower bit)	182	PRP(9)		
132	VCLK	O	Sync clock output of digital output	183	PRP(10)		
133	GND	–	Ground	184	PRP(11)		
134	GND	–		185	PRP(12)		
135	BBO(7)	O	(upper bit) Demultiplex digital outut B of B/PB signal	186	PRP(13)		
136	BBO(6)			187	PRP(14)		
137	BBO(5)			188	PRP(15)		(upper bit)
138	BBO(4)			189	VDD	–	Power supply (3.3V)
139	BBO(3)			190	VDD	–	
140	BBO(2)			191	GND	–	Ground
141	BBO(1)			192	GND	–	
142	BBO(0)		(lower bit)	193	PBP(0)	I	(lower bit) Digital input of B-Y signal after sequential converted
143	GND	–	Ground	194	PBP(1)		
144	GBO(7)	O	(upper bit) Demultiplex digital outut B of G/Y signal	195	PBP(2)		
145	GBO(6)			196	PBP(3)		
146	GBO(5)			197	PBP(4)		
147	GBO(4)			198	PBP(5)		
148	GBO(3)			199	PBP(6)		
149	GBO(2)			200	PBP(7)		
150	GBO(1)			201	PBP(8)		
151	VDD	–	Power supply (3.3V)	202	PBP(9)		

No.	Pin Name	I/O	Pin Function
203	PBP(10)	I	Digital input of B-Y signal after sequential converted
204	PBP(11)		
205	PBP(12)		
206	PBP(13)		
207	PBP(14)		
208	PBP(15)		(upper bit)
209	VDD	–	Power supply (3.3V)
210	GND	–	Ground
211	YP(0)	I	(lower bit)
212	YP(1)		
213	YP(2)		
214	YP(3)		
215	YP(4)		
216	YP(5)		
217	YP(6)		
218	YP(7)		Digital input of sequential converting Y signal
219	YP(8)		
220	YP(9)		
221	YP(10)		
222	YP(11)		
223	YP(12)		
224	YP(13)		
225	YP(14)		
226	YP(15)		(upper bit)
227	GND	–	Ground
228	GND	–	
229	VDD	–	Power supply (3.3V)
230	VDD	–	
231	PRI(0)	O	(lower bit)
232	PRI(1)		
233	PRI(2)		
234	PRI(3)		Digital output of R-Y signal
235	PRI(4)		
236	PRI(5)		
237	PRI(6)		
238	PRI(7)		(upper bit)
239	PBI(0)	O	(lower bit)
240	PBI(1)		
241	PBI(2)		
242	PBI(3)		
243	PBI(4)		Digital output of B-Y signal
244	PBI(5)		
245	PBI(6)		
246	PBI(7)		(upper bit)
247	GND	–	Ground
248	GND	–	
249	YI(0)	O	(lower bit)
250	YI(1)		
251	YI(2)		Digital output of Y signal
252	YI(3)		
253	YI(4)		
254	YI(5)	O	Digital output of Y signal
255	YI(6)		
256	YI(7)		(upper bit)
257	NC	–	Non connection
258	NC		
259	NC		
260	NC		
261	NC		
262	NC		
263	NC		
264	NC		
265	VDD	–	Power supply (3.3V)
266	VDD	–	
267	GND	–	Ground
268	GND	–	
269	NC	–	Non connection
270	NC		
271	NC		
272	NC		
273	NC		
274	NC		
275	NC		
276	NC		
277	GND	–	Ground
278	CLP1	O	Programmable CLP output
279	CLP2		
280	HBLK1	O	Programmable HBLK output
281	HBLK2		
282	VBLK1	O	Programmable VBLK output
283	VBLK2		
284	FLD2	O	Programmable field signal output
285	GND	–	Ground
286	GND	–	
287	NC	–	Non connection
288	NC		
289	NC		
290	NC		
291	NC		
292	NC		
293	NC		
294	SGLB	I	SGLB signal input for PE5067A
295	RBI(0)	I	(lower bit)
296	RBI(1)		
297	RBI(2)		
298	RBI(3)		Demultiplex digital input B of R/PR signal
299	RBI(4)		
300	RBI(5)		
301	RBI(6)		
302	RBI(7)		(upper bit)
303	VDD	–	Power supply (3.3V)
304	VDD	–	

■ MS82V16520-8GA (SUB VIDEO SERVICE ASSY : IC3601, IC3604)

- **16M SGRAM**

● Pin Function

No.	Pin Name	I/O	Pin Function	No.	Pin Name	I/O	Pin Function
1	DQ3	I/O	Data input/output	51	A9	I	Address input
2	VDDQ	–	DQ power supply	52	NC	–	Non connection
3	DQ4	I/O	Data input/output	53	DSF	I	Define special function signal input
4	DQ5			54	CKE	I	Clock enable input
5	VSSQ	–	DQ ground	55	CLK	I	Clock input
6	DQ6	I/O	Data input/output	56	DQM1	I	Data input/output mask input
7	DQ7			57	DQM3		
8	VDDQ	–	DQ power supply	58	NC	–	Non connection
9	DQ16	I/O	Data input/output	59	VDDQ	–	DQ power supply
10	DQ17			60	DQ8	I/O	Data input/output
11	VSSQ	–	DQ ground	61	DQ9		
12	DQ18	I/O	Data input/output	62	VSSQ	–	DQ ground
13	DQ19			63	DQ10	I/O	Data input/output
14	VDDQ	–	DQ power supply	64	DQ11		
15	VDD	–	Power supply	65	VDD	–	Power supply
16	VSS	–	Ground	66	VSS	–	Ground
17	DQ20	I/O	Data input/output	67	VDDQ	–	DQ power supply
18	DQ21			68	DQ12	I/O	Data input/output
19	VSSQ	–	DQ ground	69	DQ13		
20	DQ22	I/O	Data input/output	70	VSSQ	–	DQ ground
21	DQ23			71	DQ14	I/O	Data input/output
22	VDDQ	–	DQ power supply	72	DQ15		
23	DQM0	I	Data input/output mask input	73	VDDQ	–	DQ power supply
24	DQM2			74	DQ24	I/O	Data input/output
25	WE#	I	Write enable signal input	75	DQ25		
26	CAS#	I	Column address strobe signal input	76	VSSQ	–	DQ ground
27	RAS#	I	Row address strobe signal input	77	DQ26	I/O	Data input/output
28	CS#	I	Chip select input	78	DQ27		
29	BS	I	Bank select input	79	VDDQ	–	DQ power supply
30	A8	I	Address input	80	DQ28	I/O	Data input/output
31	A0			81	DQ29		
32	A1			82	VSSQ	–	DQ ground
33	A2			83	DQ30	I/O	Data input/output
34	A3			84	DQ31		
35	VDD	–	Power supply	85	VSS	–	Ground
36	NC	–	Non connection	86	NC	–	Non connection
37	NC			87	NC		
38	NC			88	NC		
39	NC			89	NC		
40	NC			90	NC		
41	NC			91	NC		
42	NC			92	NC		
43	NC			93	NC		
44	NC			94	NC		
45	NC			95	NC		
46	VSS	–	Ground	96	VDD	–	Power supply
47	A4	I	Address input	97	DQ0	I/O	Data input/output
48	A5			98	DQ1		
49	A6			99	VSSQ	–	DQ ground
50	A7			100	DQ2	I/O	Data input/output

■ HD64F3067RF20 (SUB VIDEO SERVICE ASSY : IC3801)

• I/P System micro-computer IC

● Pin Function

No.	Pin Name	I/O	Pin Function	No.	Pin Name	I/O	Pin Function
1	VCC	–	Power supply (+5V)	51	A14	I	Non connection
2	CS7	O	Non connection	52	A15	I	
3	CS6	O		53	A16	O	
4	CS5	O		54	A17	O	
5	CS4	O	Chip select of PE5066A	55	A18	O	
6	UCAS	O	Data phase control of PE5067A	56	A19	O	
7	LCAS	I/O	For microcomputer communication (Not used)	57	VSS	–	Ground
8	PB6	O		58	WAIT	I	WAIT signal of PE5067A
9	PB7	I		59	BREQ	I	Non connection
10	FEW	I	For writing the flash	60	BACK	O	Compulsory hardware through of PE5067A (Not used)
11	VSS	–	Ground	61	P18 (ϕ)	I	Clock output
12	P90	O	Error signal for communicating with main unit microcomputer	62	STBY	I	––
13	TxD1	O	For writing the flash	63	RES	I	Hardware reset of I/P microcomputer
14	RxD0	I	Data for communicating with main unit microcomputer	64	NMI	I	––
15	RxD1	I	For writing the flash	65	VSS	–	Ground
16	SCK0	I	Clock for communicating with main unit microcomputer	66	EXTAL	I	Connect a crystal oscillator
17	P95	O	Busy for communicating with main unit microcomputer	67	XTAL	I	
18	D0	O	For test	68	VCC	–	Power supply (+5V)
19	D1			69	AS	O	Non connection
20	D2			70	RD	O	RD for PE5066A/5067A
21	D3			71	HWR	O	HWR for PE5066A/5067A
22	VSS	–	Ground	72	LWR	O	––
23	D4	O	For test	73	MD0	I	––
24	D5			74	MD1	I	––
25	D6			75	MD2	I	––
26	D7			76	AVCC	–	Power supply (+5V)
27	D8	I/O	Data bus 8-bit	77	VREF	–	Reference voltage setting (+5V)
28	D9			78	P70	I	Non connection
29	D10			79	P71	I	
30	D11			80	P72	I	
31	D12			81	P73	I	
32	D13			82	P74	I	
33	D14			83	P75	I	
34	D15			84	P76	I	PLL unlock detection (Not used)
35	VCC	–	Power supply (+5V)	85	P77	I	Obtain the external film information (Not used)
36	A0	O	Address bus 12-bit	86	AVSS	–	Ground
37	A1			87	IRQ0	I	Obtain the film information
38	A2			88	IRQ1	I	Obtain the histogram
39	A3			89	IRQ2	I	Vertical sync input
40	A4			90	IRQ3	O	Chip select of PE5067A
41	A5			91	CS0	I	Field judgement
42	A6			92	VSS	–	Ground
43	A7			93	PA0	I	System frequency detection (Not used)
44	VSS	–	Ground	94	PA1	I	Horizontal sync input
45	A8	O	Address bus 12-bit	95	PA2	O	––
46	A9			96	PA3	O	––
47	A10			97	PA4	O	For test
48	A11			98	PA5	O	
49	A12	I	Non connection	99	PA6	O	IP process (PE5066A) stop control
50	A13	I	Non connection	100	PA7	O	IP system reset

■ 24LC128(I)P (DIGITAL CONV. ASSY : IC1410)

• 128Kbit CMOS Serial EEPROM

● Pin Assignment (Top view)

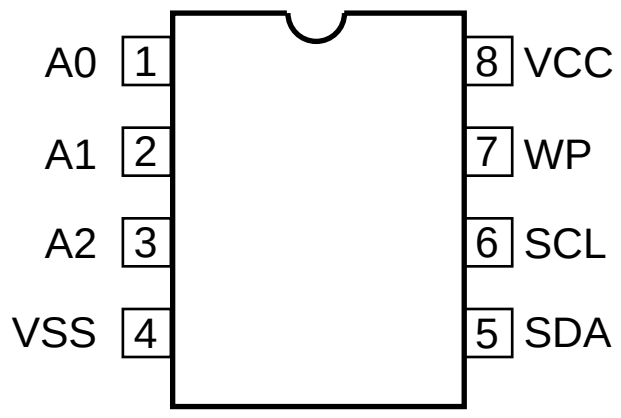
A0 1
A1 2
A2 3
VSS 4
8 VCC
7 WP
6 SCL
5 SDA

● Block Diagram

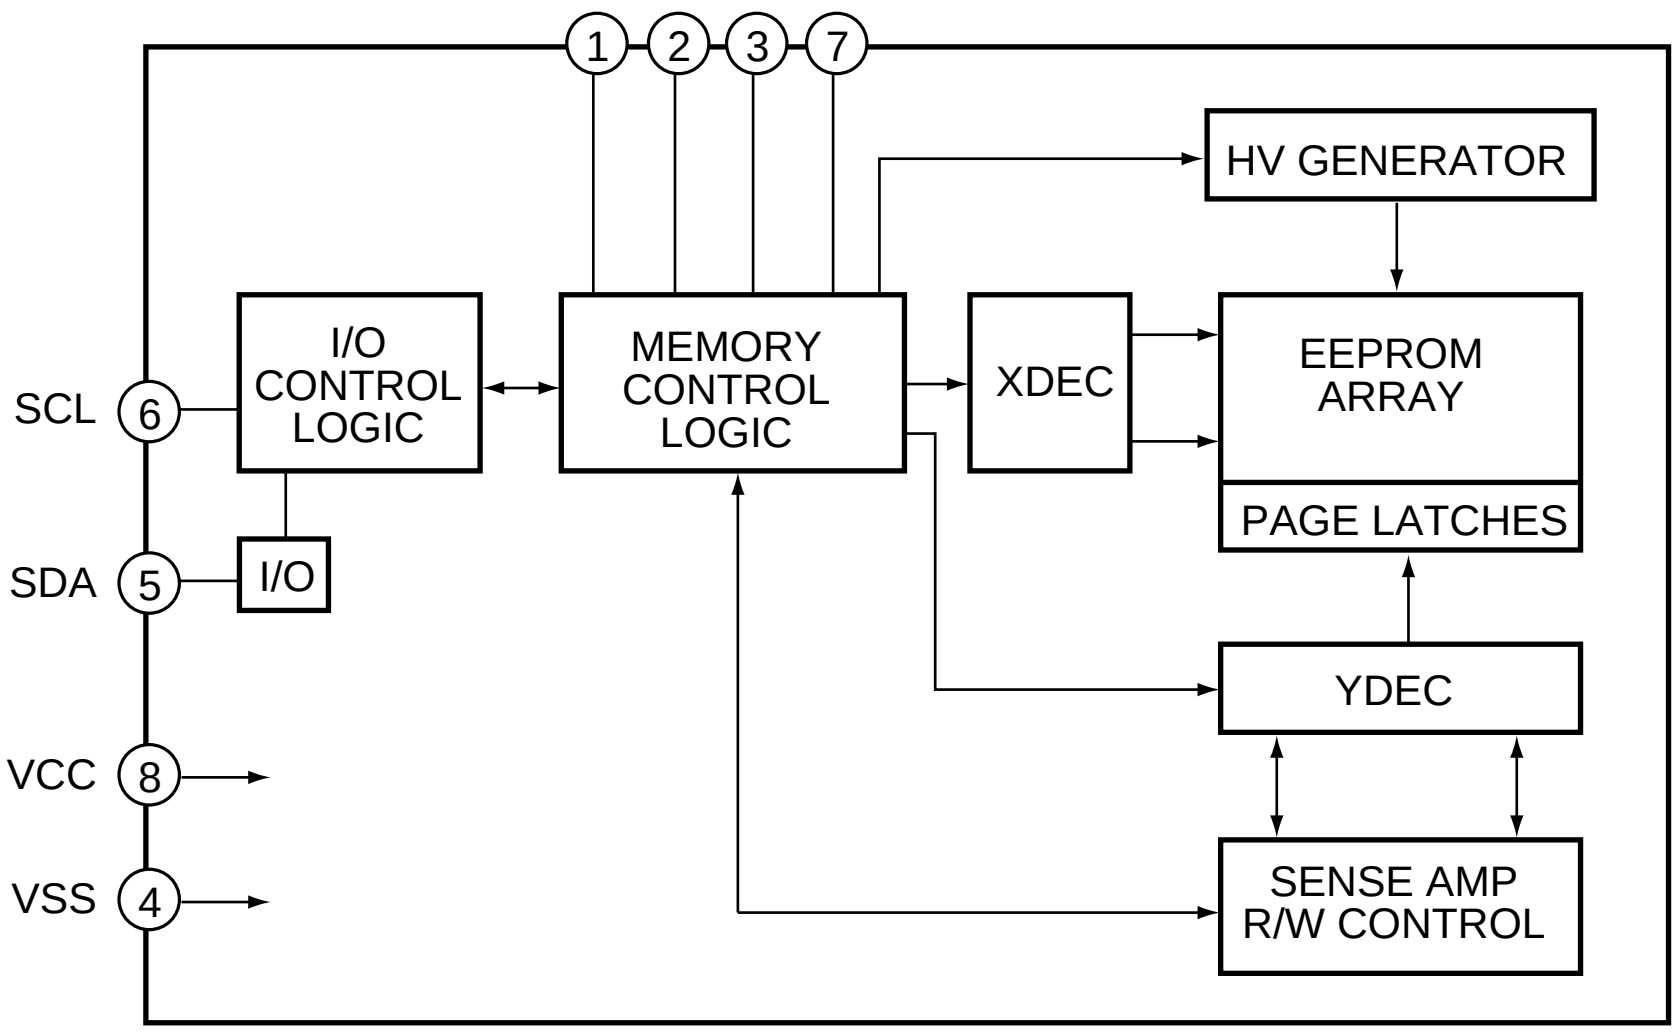
A0 A1 A2 WP
1 2 3 7
HV GENERATOR
SCL 6
I/O CONTROL LOGIC
MEMORY CONTROL LOGIC
XDEC
EEPROM ARRAY
PAGE LATCHES
SDA 5
I/O
YDEC
VCC 8
VSS 4
SENSE AMP R/W CONTROL

● Pin Function

No.	Pin Name	Pin Function
1	A0	User configurable chip selects
2	A1	
3	A2	
4	VSS	Ground
5	SDA	Serial Data
6	SCL	Serial clock
7	WP	Write protect input
8	VCC	+2.5V to 5.5V power supply

■ 24LC08B(I)P (DIGITAL CONV. ASSY : IC1656)

• 8Kbit CMOS Serial EEPROM

● Pin Assignment (Top view)

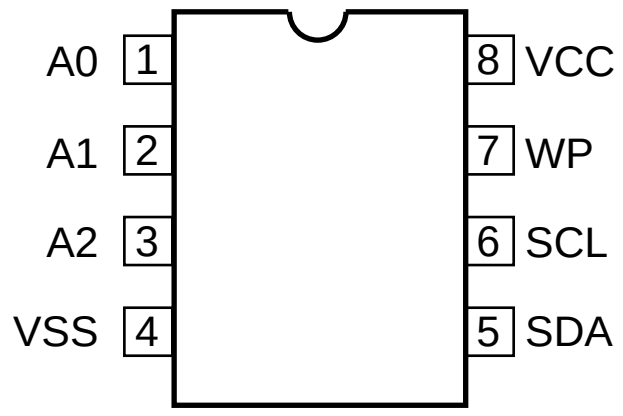
A0 1
A1 2
A2 3
VSS 4
8 VCC
7 WP
6 SCL
5 SDA

● Block Diagram

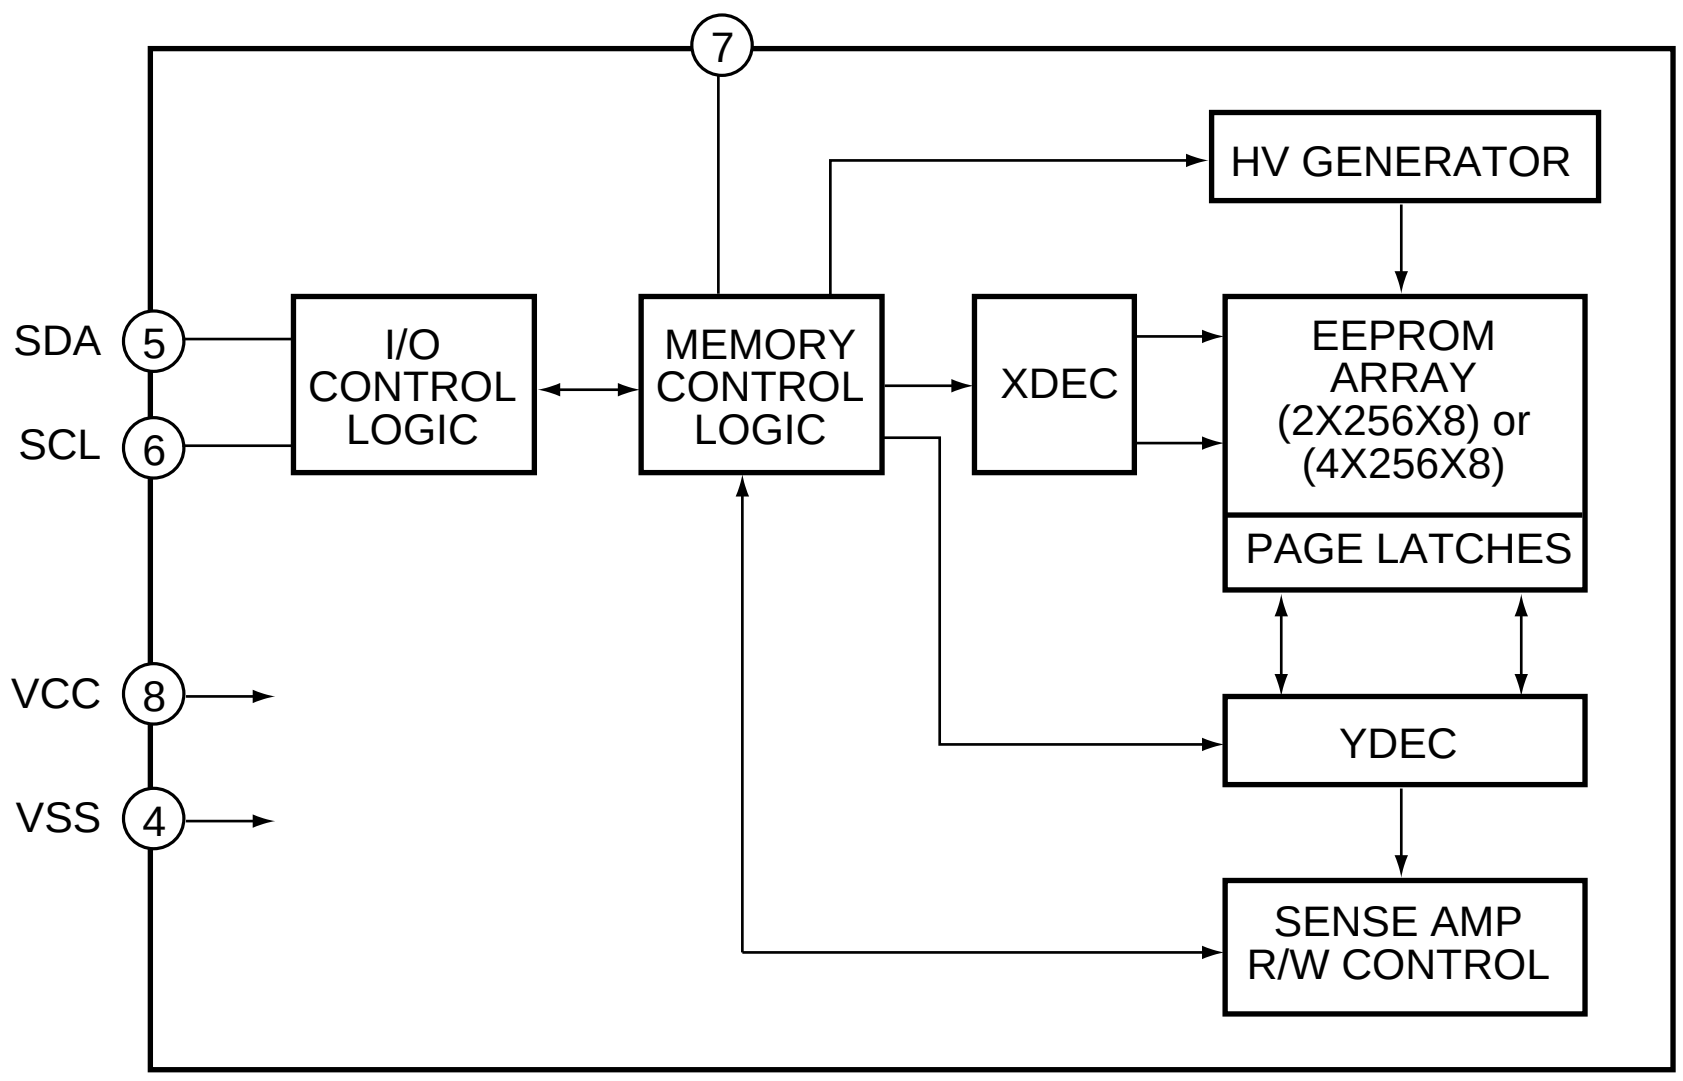
WP
7
HV GENERATOR
SDA 5
SCL 6
I/O CONTROL LOGIC
MEMORY CONTROL LOGIC
XDEC
EEPROM ARRAY (2X256X8) or (4X256X8)
PAGE LATCHES
VCC 8
YDEC
VSS 4
SENSE AMP R/W CONTROL

● Pin Function

No.	Pin Name	Pin Function
1	A0	No internal connection
2	A1	
3	A2	
4	VSS	Ground
5	SDA	Serial Address/Data I/O
6	SCL	Serial clock
7	WP	Write protect input
8	VCC	+2.5V to 5.5V power supply

■ CM0006CF (DIGITAL CONV. ASSY : IC1401)

• Digital Convergence Correction IC

● Pin Function

No.	Pin Name	I/O	Pin Function
1	TEST1	I/O	Non connection
2	XSTOP	I/O	Input of compulsory stop for accessing external EEPROM (low active, internal pull-up resistance)
3	XWC	O	Output of write control to external EEPROM (low active)
4	SDAM	I/O	Serial data input/output (open-drain) to external EEPROM for I^2C-bus master
5	SCLM	I/O	Clock output to external EEPROM for I^2C-bus master
6	DVDD	–	+5V power supply to digital circuits
7	DVSS	–	Common of digital circuits
8	XOFDET	O	Output of DSP overflow detection (low active)
9	XMUTE	I	Mute input (low active)
10	XRESET	I	Reset input (low active)
11	XBUSY	O	Busy input (low active)
12	XACKM	O	ACK monitor output (low active)
13	SDAS	I/O	Serial data input/output (open-drain) to external master for I^2C-bus slave
14	SCLS	I/O	Clock input from external master for I^2C-bus slave
15	HBLKIN	I	Horizopntal blanking pulse input (TTL level compatible)
16	PWM1	O	Pulse width modulation output-1
17	PWM2	O	Pulse width modulation output-2
18	VBLKIN	I	Vertical blanking pulse input (TTL level compatible)
19	TEST3	I/O	Non connection
20	ODDEVEN	I/O	Odd/Even input/output, Odd (High)/Even (Low) (internal pull-up resistance)
21	ROUT	O	Red test pattern output
22	GOUT	O	Green test pattern output
23	BOUT	O	Blue test pattern output
24	YMOUT	O	Contrast control output
25	YSOUT	O	OSD control output
26	HBLKOUT	I/O	Regenerated horizontal blanking pulse output (internal pull-up resistance)
27	WCLK	O	Word clock output for external DAC
28	BCLK	O	Bit clock output for external DAC
29	TEST4	I/O	Clock input for external PLL mode
30	TEST5	I/O	Output to phase comparison for external PLL mode
31	PLLVDD	–	+5V analog power supply for VCO and phase detector
32	PDOUT	O	Phase detector output (external loop filter connection to VCOIN terminal)
33	PLLVSS	–	Common of analog circuits for VCO and phase detector
34	VCOIN	I	VCO input (external loop filter connection from PDOUT terminal)
35	R1	–	External resistance for setting VCO initial transmission frequency (external resistance connection)
36	R2	–	External resistance for setting VCO gain (external resistance connection)
37	DAREF	–	Bias for dynamic focus DAC (external filter capacitor connection)
38	DAOUT	O	Dynamic focus DAC output
39	DAVDD	–	+5V analog power supply for dynamic focus DAC
40	DAVSS	–	Common of analog circuits for dynamic focus DAC
41	SHBIAS	I	Bias resistance (external resistance connection)
42	DVSS	–	Common of digital circuits

No.	Pin Name	I/O	Pin Function
43	DVDD	–	+5V power supply to digital circuits
44	BVOUT	O	Serial data output of vertical blue convergence
45	GVOUT	O	Serial data output of vertical green convergence
46	RVOUT	O	Serial data output of vertical red convergence
47	DVDD	–	+5V power supply to digital circuits
48	NC	–	Non connection
49	NC	–	Non connection
50	NC	–	Non connection
51	DVDD	–	+5V power supply to digital circuits
52	NC	–	Non connection
53	NC	–	Non connection
54	DVSS	–	Common of digital circuits
55	NC	–	Non connection
56	NC	–	Non connection
57	DVDD	–	+5V power supply to digital circuits
58	BHOUT	O	Serial data output of horizontal blue convergence
59	GHOUT	O	Serial data output of horizontal green convergence
60	RHOUT	O	Serial data output of horizontal red convergence
61	TEST6	I	Non connection
62	TEST7	I	Non connection
63	TEST8	I	Non connection
64	TEST9	I	Non connection
65	TEST10	I	Non connection
66	TEST11	I	Non connection
67	DAMODE	I	External DAC mode setting
68	DIVCNT	I	Divider setting
69	TEST14	I/O	Non connction
70	TEST15	I/O	Non connection
71	TEST16	I/O	Non connection
72	TEST17	I/O	Non connection
73	TEST18	I/O	Non connection
74	TEST19	I/O	Non connection
75	TEST20	I/O	Non connection
76	TEST21	I/O	Non connection
77	TEST22	I/O	Non connection
78	TEST23	I/O	Non connection
79	TEST24	I/O	Non connection
80	TEST25	I/O	Non connection

Note: (1) A symbol beginning with "X" indicates negative logic.
(2) The terminals from "TEST1" to "TEST25" excluding "TEST4" and "TEST5" are prohibited to use.
Finish these terminals are open terminals or pull-up to VDD.

■ 24LC32A(I)P (SIGNAL ASSY : IC2454)

- **32Kbit CMOS Serial EEPROM**

● Pin Assignment (Top view)

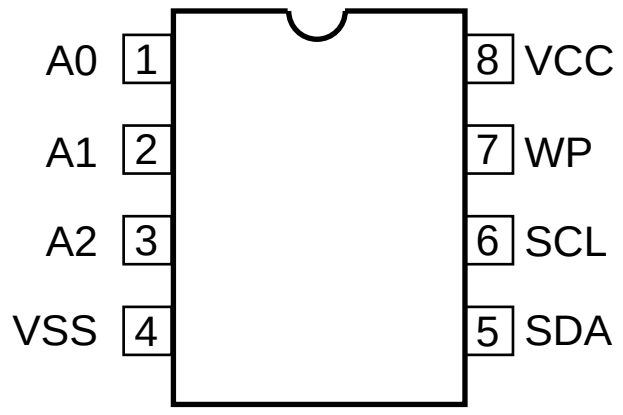
A0 1
A1 2
A2 3
VSS 4
8 VCC
7 WP
6 SCL
5 SDA

● Block Diagram

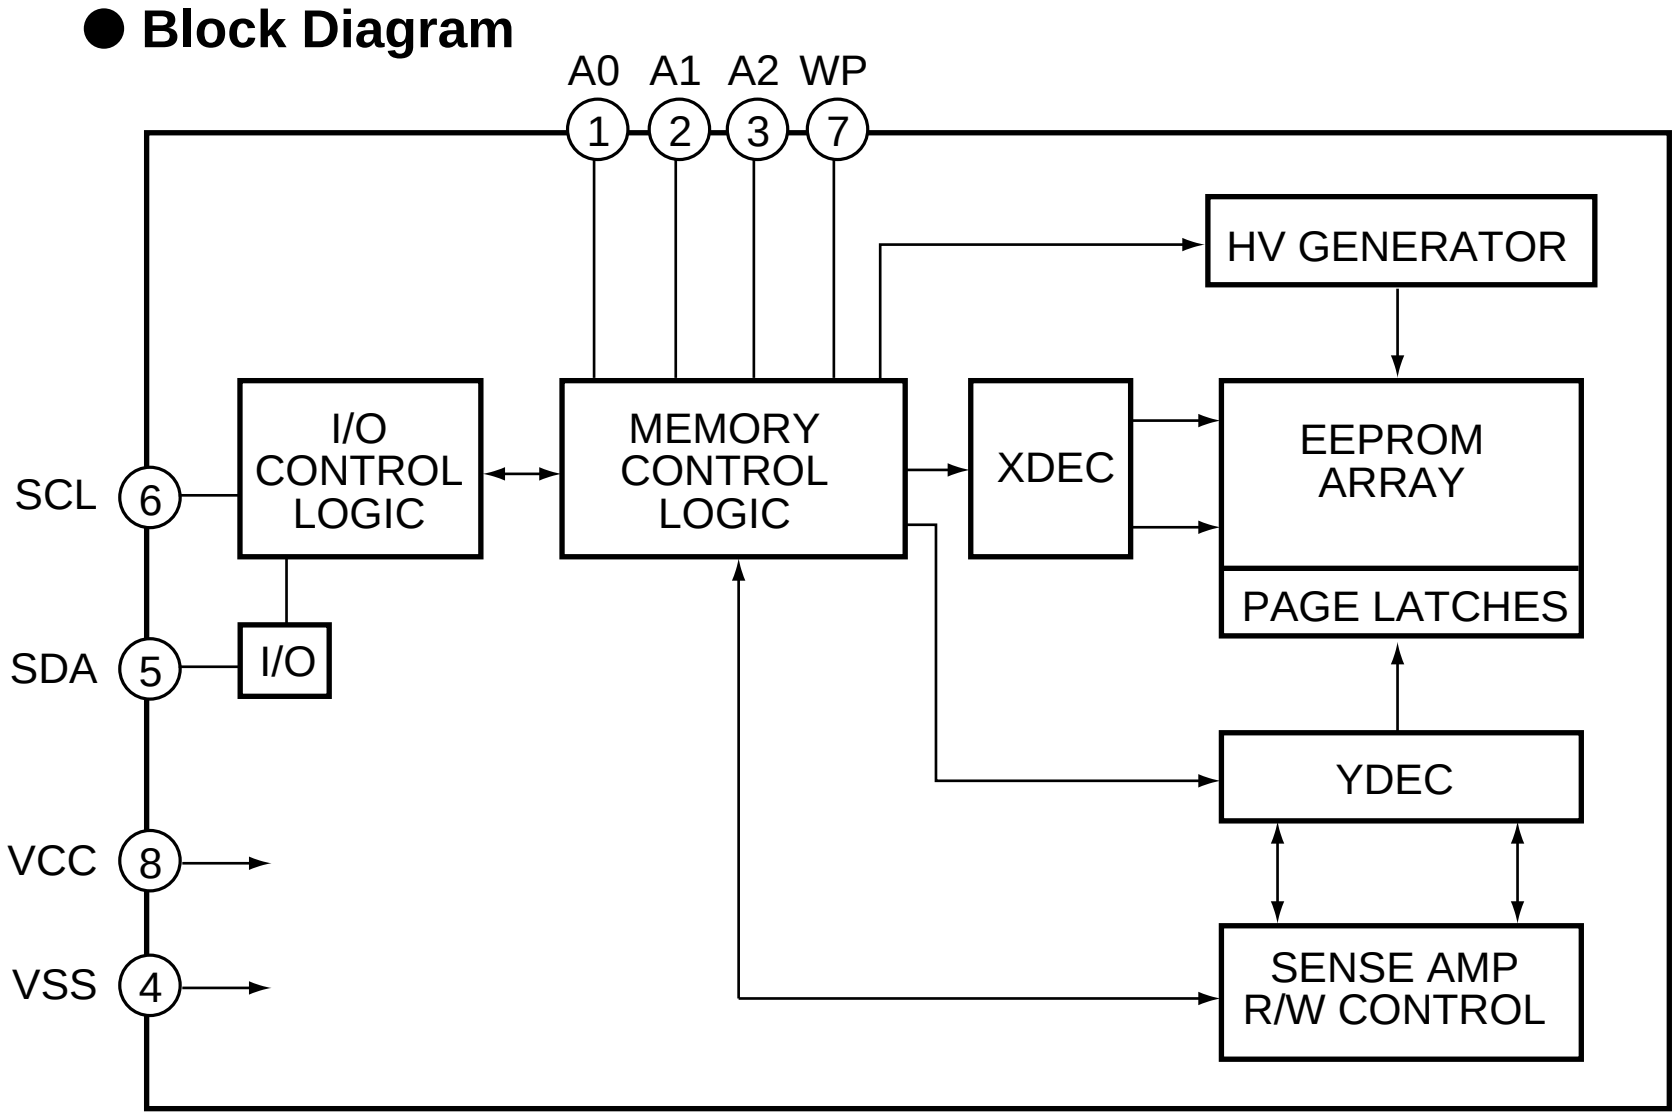
A0 A1 A2 WP
1 2 3 7
HV GENERATOR
SCL 6
I/O CONTROL LOGIC
MEMORY CONTROL LOGIC
XDEC
EEPROM ARRAY
PAGE LATCHES
SDA 5
I/O
YDEC
VCC 8
VSS 4
SENSE AMP R/W CONTROL

● Pin Function

No.	Pin Name	Pin Function
1	A0	User configurable chip selects
2	A1	
3	A2	
4	VSS	Ground
5	SDA	Serial Address / Data I/O
6	SCL	Serial clock
7	WP	Write protect input
8	VCC	+2.5V to 5.5V power supply

■ CXA2094Q (SIGNAL ASSY : IC2801)

• US Audio Multi-channel Decoder IC

● Block Diagram

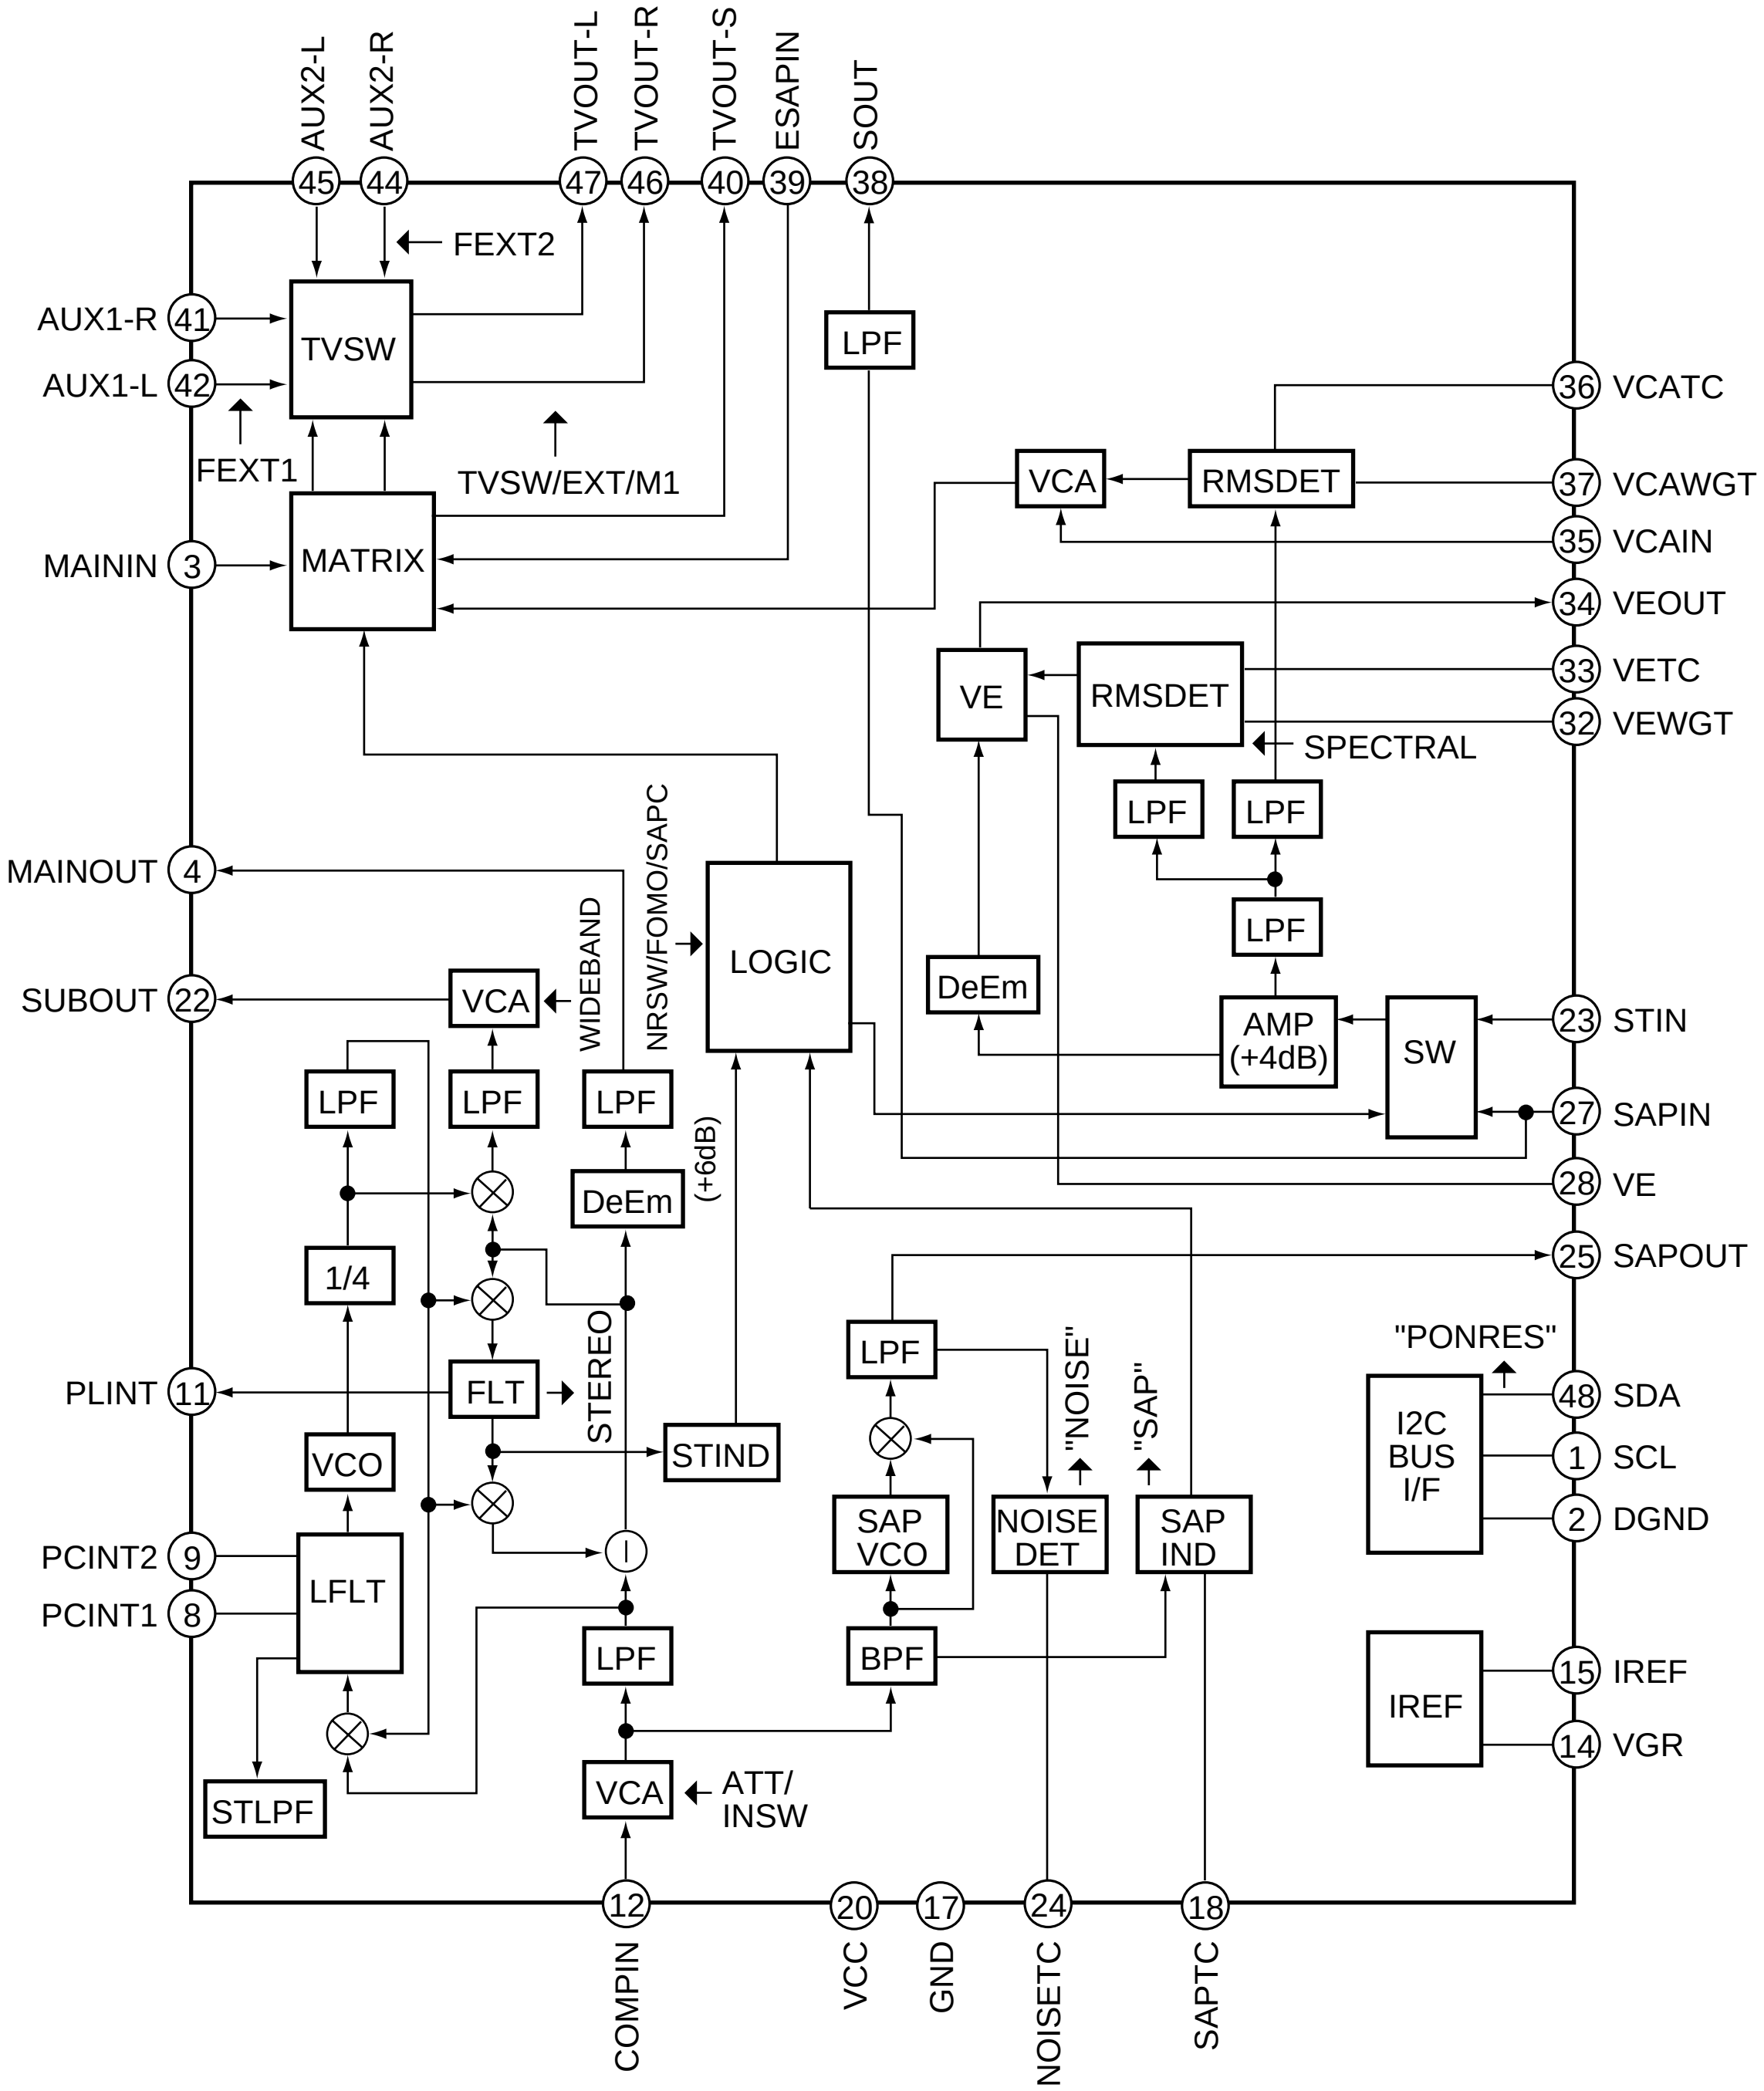
AUX2-L
AUX2-R
TVOUT-L
TVOUT-R
TVOUT-S
ESAPIN
SOUT
45
44
47
46
40
39
38
FEXT2
AUX1-R 41
AUX1-L 42
TVSW
LPF
36 VCATC
FEXT1
TVSW/EXT/M1
VCA
RMSDET
37 VCAWGT
MAININ 3
MATRIX
35 VCAIN
34 VEOUT
VE
RMSDET
33 VETC
32 VEWGT
SPECTRAL
LPF
LPF
MAINOUT 4
NRSW/FOMO/SAPC
WIDEBAND
LOGIC
LPF
SUBOUT 22
VCA
DeEm
AMP (+4dB)
SW
23 STIN
LPF
LPF
LPF
27 SAPIN
(+6dB)
DeEm
28 VE
1/4
25 SAPOUT
"PONRES"
LPF
PLINT 11
FLT
STEREO
"NOISE"
"SAP"
48 SDA
I2C BUS I/F
STIND
1 SCL
VCO
SAP VCO
NOISE DET
SAP IND
2 DGND
PCINT2 9
LFLT
PCINT1 8
LPF
BPF
15 IREF
IREF
14 VGR
STLPF
VCA
ATT/ INSW
12
20
17
24
18
COMPIN
VCC
GND
NOISETC
SAPTC

● Pin Function

No.	Pin Name	I/O	Pin Function
1	SCL	I	Serial clock input
2	DGND	–	Digital ground
3	MAININ	I	L+R signal input from MAINOUT (pin 4)
4	MAINOUT	O	L+R signal output
5	NC	–	Non connection
6	NC	–	Non connection
7	NC	–	Non connection
8	PCINT1	–	Integrated pin of the PLL loop filter of the stereo block
9	PCINT2		
10	NC	–	Non connection
11	PLINT	–	Integrated pin of the loop filter of the pilot cancel circuit
12	COMPIN	I	Audio multiple signal input
13	NC	–	Non connection
14	VGR	O	Band gap reference output
15	IREF	–	Set the reference current of the filter and VCO
16	NC	–	Non connection
17	GND	–	Analog ground
18	SAPTC	–	Set the time constant of the SAP carrier detection circuit
19	NC	–	Non connection
20	VCC	–	Power supply
21	NC	–	Non connection
22	SUBOUT	O	L-R signal output
23	STIN	I	L-R signal input from SUBOUT (pin 22)
24	NOISETC	–	Set the time constant of the NOISE detection circuit
25	SAPOUT	O	FM detector output of SAP
26	NC	–	Non connection
27	SAPIN	I	SAP signal input from SAPOUT (pin 25)
28	VE	–	Integrated pin of the variable deemphasis
29	NC	–	Non connection
30	NC	–	Non connection
31	NC	–	Non connection
32	VEWGT	–	Weight the effective value detecting circuit of variable deemphasis control
33	VETC	–	Decides the return time constant of the effective value detecting circuit of variable deemphasis
34	VEOUT	O	Variable deemphasis output
35	VCAIN	I	VCA input Input variable deemphasis output of pin 34 via the coupling capacitor.
36	VCATC	–	Decides the return time constant of the effective value detecting circuit of VCA control
37	VCAWGT	–	Weight the effective value detecting circuit of VCA control
38	SOUT	O	Simple SAP output
39	ESAPIN	I	Signal input from SOUT (pin 38)
40	TVOUT-S	O	Back output pin, it outputs the monaural or simple SAP signal
41	AUX1-R	I	R ch external input 1
42	AUX1-L	I	L ch external input 1
43	NC	–	Non connection
44	AUX2-R	I	R ch external input 2
45	AUX2-L	I	L ch external input 2
46	TVOUT-R	O	TVOUT R ch output
47	TVOUT-L	O	TVOUT L ch output
48	SDA	I/O	Serial data input/output VIH > 3.0V , VIL < 1.5V

■ CM0010AF (SIGNAL ASSY : IC7703)

• Multi Screen Controller IC

● Pin Function

(1) A/D Inputs for Main Video Signals

No.	Pin Name	I/O	Pin Function
62	MYIN	I	Main video Y luminance input signal. Typical input level is 1.7Vp-p.
56	MYVREFH	I/O	ADC top reference voltage for main Y signal. Maximum value (2.726V in typical) of ADC dynamic range is set by self-bias.
64	MYVREFL	I/O	ADC bottom reference voltage for main Y signal. Minimum value (0.574V in typical) of ADC dynamic range is set by self-bias.
59	MYVREF16	I/O	Clamp output signal for main Y signal. Clamp level is set to 16 in typical, and Y input is clamped at this level.
60	MYVCLAMP	I/O	For Test (Operation Amplifier output of MYVREF16 pin)
58, 63	AVDD	–	ADC analog power supply voltage for Y signal (x2)
57, 61	AGND	–	ADC analog ground for Y signal (x2)
53	MUIN	I	Sub video V chrominance input signal. Typical input level is 1.7Vp-p.
47	MVIN	I	Sub video U chrominance input signal. Typical input level is 1.7Vp-p.
45	MCVREFH	I/O	ADC top reference signal for sub UV signals.
55	MCVREFL	I/O	ADC bottom reference signal for sub UV signals.
50	MCVREF128	I/O	Clamp output signal for sub UV signals. Clamp level is set to 128 in typical, and UV inputs is clamped at this level.
51	MUCLAMP	I/O	For Test (Operation Amplifier output of MCVREF128 terminal)
49	MVCLAMP	I/O	For Test (Operation Amplifier output of MCVREF129 terminal)
48, 54	AVDD	–	ADC analog power supply voltage for UV signals (x2)
46, 52	AGND	–	ADC analog ground for UV signals (x2)

(2) A/D Inputs for Sub Video Signals

No.	Pin Name	I/O	Pin Function
82	SYIN	I	Sub video Y luminance input signal
76	SYVREFH	I/O	ADC top reference voltage for sub Y signal. Maximum value (2.726V in typical) of ADC dynamic range is set by self-bias.
84	SYVREFL	I/O	ADC bottom reference voltage for sub Y signal. Maximum value (0.574V in typical) of ADC dynamic range is set by self-bias.
79	SYVREF16	I/O	Clamp output signal for sub Y signal. Clamp level is set to 16 in typical, and Y input is clamped at this level.
80	SYCLAMP	–	For Test (Operation Amplifier output of SYVREF16 terminal).
78. 83	AVDD	–	ADC analog power supply voltage for Y signal (x2)
77, 81	AGND	–	ADC analog ground for Y signal (x2)
73	SUIN	I	Sub video U chrominance input signal. Typical input level is 2.0Vp-p.
67	SVIN	I	Sub video V chrominance input signal. Typical input level is 1.7Vp-p.
65	SCVREFH	I/O	ADC top reference signal for sub UV signals
75	SCVREFL	I/O	ADC bottom reference signal for sub UV signals
70	SCVREF128	I/O	Clamp output signal for sub UV signals. Clamp level is set to 128 in typical and UV inputs is clamped at this level.
71	SUCLAMP	I/O	For Test (Operation Amplifier output of MCVREF128 terminal)
69	SVCLAMP	I/O	For Test (Operation Amplifier output of MCVREF128 terminal)
68, 74	AVDD	–	ADC analog power supply voltage for UV signals (x2)
66, 72	AGND	–	ADC analog ground for UV signals (x2)

(3) Main PLL

No.	Pin Name	I/O	Pin Function
120	MHS	I	Main horizontal synchronous input, it inputs NTSC 15.75Hz signal.
121	MCPOUT1	O	Charge pump output, it connects to MVCOIN1 pin through external loop filter.
122	MVCOIN1	I	VCO voltage input
123	MLPFGND	–	Ground for the external loop filter
125	MPLLVDD1	–	Power supply voltage for PLL, it connects to digital power supply voltage.
124	MPLLGND1	–	Ground for PLL, it connects to digital ground.
119	MVS	I	Main vertical synchronous input
131	FB1	O	Divider output of PLL1, it outputs a divided signal in 1820 and is available if constructing the external PLL.
126	MRBIAS	I	Bias setting pin for main VCO (for test), it always sets to open.
127	MBP	O	Bias measuring pin for test
128	MBN	O	Bias measuring pin for test

(4) Sub PLL

No.	Pin Name	I/O	Pin Function
117	SHS	I	Sub horizontal synchronous input
108	SCPOUT	O	Charge pump output, it connects to SVCOIN pin through the external loop filter.
109	SVCOIN	I	VCO voltage input
110	SLPFGND	–	Ground for the external loop filter
112	SPLLVDD	–	Power voltage for PLL, it connects to digital power voltage.
111	SPLLGND	–	Ground for PLL, it connects to digital ground.
116	SVS	I	Sub vertical synchronous input
107	FB3	O	Divider output for PLL3, it outputs a divided signal in 1820 and is available if constructing the external PLL.
113	SRBIAS	I	Bias setting pin for sub VCO (for test), it always sets to open.
114	SBP	O	Bias measuring pin for test
115	SBN	O	Bias measuring pin for test

(5) Image D/A output

No.	Pin Name	I/O	Pin Function
40	YOUT	O	Luminance (Y) output signal. It is current-type output and converts to the voltage by connecting the resistance between YOUT and AGND.
38	UOUT	O	Chrominance (U) output signal. It is current-type output and converts to the voltage by connecting the resistance between YOUT and AGND.
36	VOUT	O	Chrominance (V) output signal. It is current-type output and converts to the voltage by connecting the resistance between YOUT and AGND.
22	NHSO	O	Horizontal synchronous output signal
23	NVSO	O	Vertical synchronous output signal
24	NBLANK	O	Video blanking output signal, it indicates the active period of video output signal.
44	VREF	I	Reference voltage input, it inputs 1V in typical.
43	VG	O	The capacitance pin compensating the gate voltage for current cell, it connects the 0.1µF between VG and AGND.
42	FSADJ	I/O	The resistance pin setting the maximum amplitude, it sets a full scale voltage for the DAC by connecting the external resistance.
37, 41	AVDD	–	Analog power supply voltage for DAC (x2)
35, 39	AGND	–	Analog ground for DAC (x2)

(6) DRAM

No.	Pin Name	I/O	Pin Function
144-145, 147-149, 151,152, 156,157	ADD [8:0]	O	9 bit DRAM address bus
2-4,158, 160,161, 163-165, 167,168, 170-172, 175,176	DAT [15:0]	I/O	16 bit DRAM data bus
139	NRAS	O	Row address strobe output signal
140	NCAS	O	Column address strobe output signal
141	NWE	O	Write enable output signal
142	NOE	O	Output enable signal

(7) I^{2}C Bus

No.	Pin Name	I/O	Pin Function
137	AS	I	Select pin for I^{2}C slave address. 0 selects "2C", 1 selects "2E".
135	SDA	I/O	Serial data output signal, it includes ACK signal.
136	SCL	I	Serial clock input signal

(8) Digital Input

No.	Pin Name	I/O	Pin Function
8-15	DY [7:0]	I	Digital Y inputs
25-32	DC [7:0]	I	Digital UV inputs
16	MCLK	I/O	Main 8fsc clock input/output signal
17	SCLK	I/O	Sub 8fsc clock input/output signal
18	MLOP1	O	Main ADC (Y) clamp pulse output signal, it is available for the clamp pulse of the external ADC.
19	MLOP2	O	Main ADC (UV) clamp pulse output signal, it is available for the clamp pulse of the external ADC.
20	SLOP1	O	Sub ADC (Y) clamp pulse output signal
21	SLOP2	O	Sub ADC (UV) clamp pulse output signal

(9) Test

No.	Pin Name	I/O	Pin Function
88-92	TMODE [4:0]	I	Test mode pins, it is always set to Low.
94-101	TDO [7:0]	I/O	8 bit digital output signals/digital input signals for DAC
7	SCANEN	I	Scan test enable signal, it is always set to Low or Open.
106	SYS_STOP	I	System stopping pins except PLL, it is always set to Low.
129	VCOREN	I	VCO bias ON/OFF control pins, it is always set to Low.
130	DEVSEL	I	VCO clock divider ON/OFF control pins, it is always set to Low.

(10) Others

No.	Pin Name	I/O	Pin Function
134	NRST	I	System reset input signal
5,86,87, 105,132, 133,143, 150,159, 166,173, 174	SYSVDD	–	3.3V power supply voltage
1,6,33,34, 93,102, 103,104, 118,138, 146,153, 154,155, 162,169	SYSGND	–	Digital ground (GND)

■ TK15420M (SIGNAL ASSY : IC7102, IC7302, IC7502)
(SUB VIDEO ASSY : IC3002)

- **75ohm Video Driver IC**

● Pin Assignment (Top view)

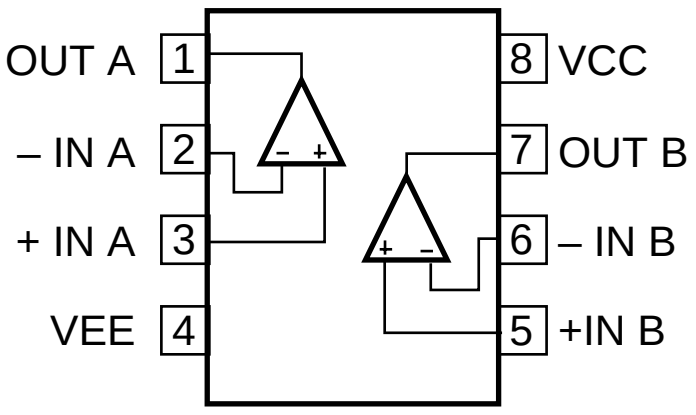
OUT A 1
– IN A 2
+ IN A 3
VEE 4
8 VCC
7 OUT B
6 – IN B
5 +IN B

■ MC33167TV (POWER SUPPLY ASSY : IC204)

- **Switching Power Supply IC**

● Block Diagram

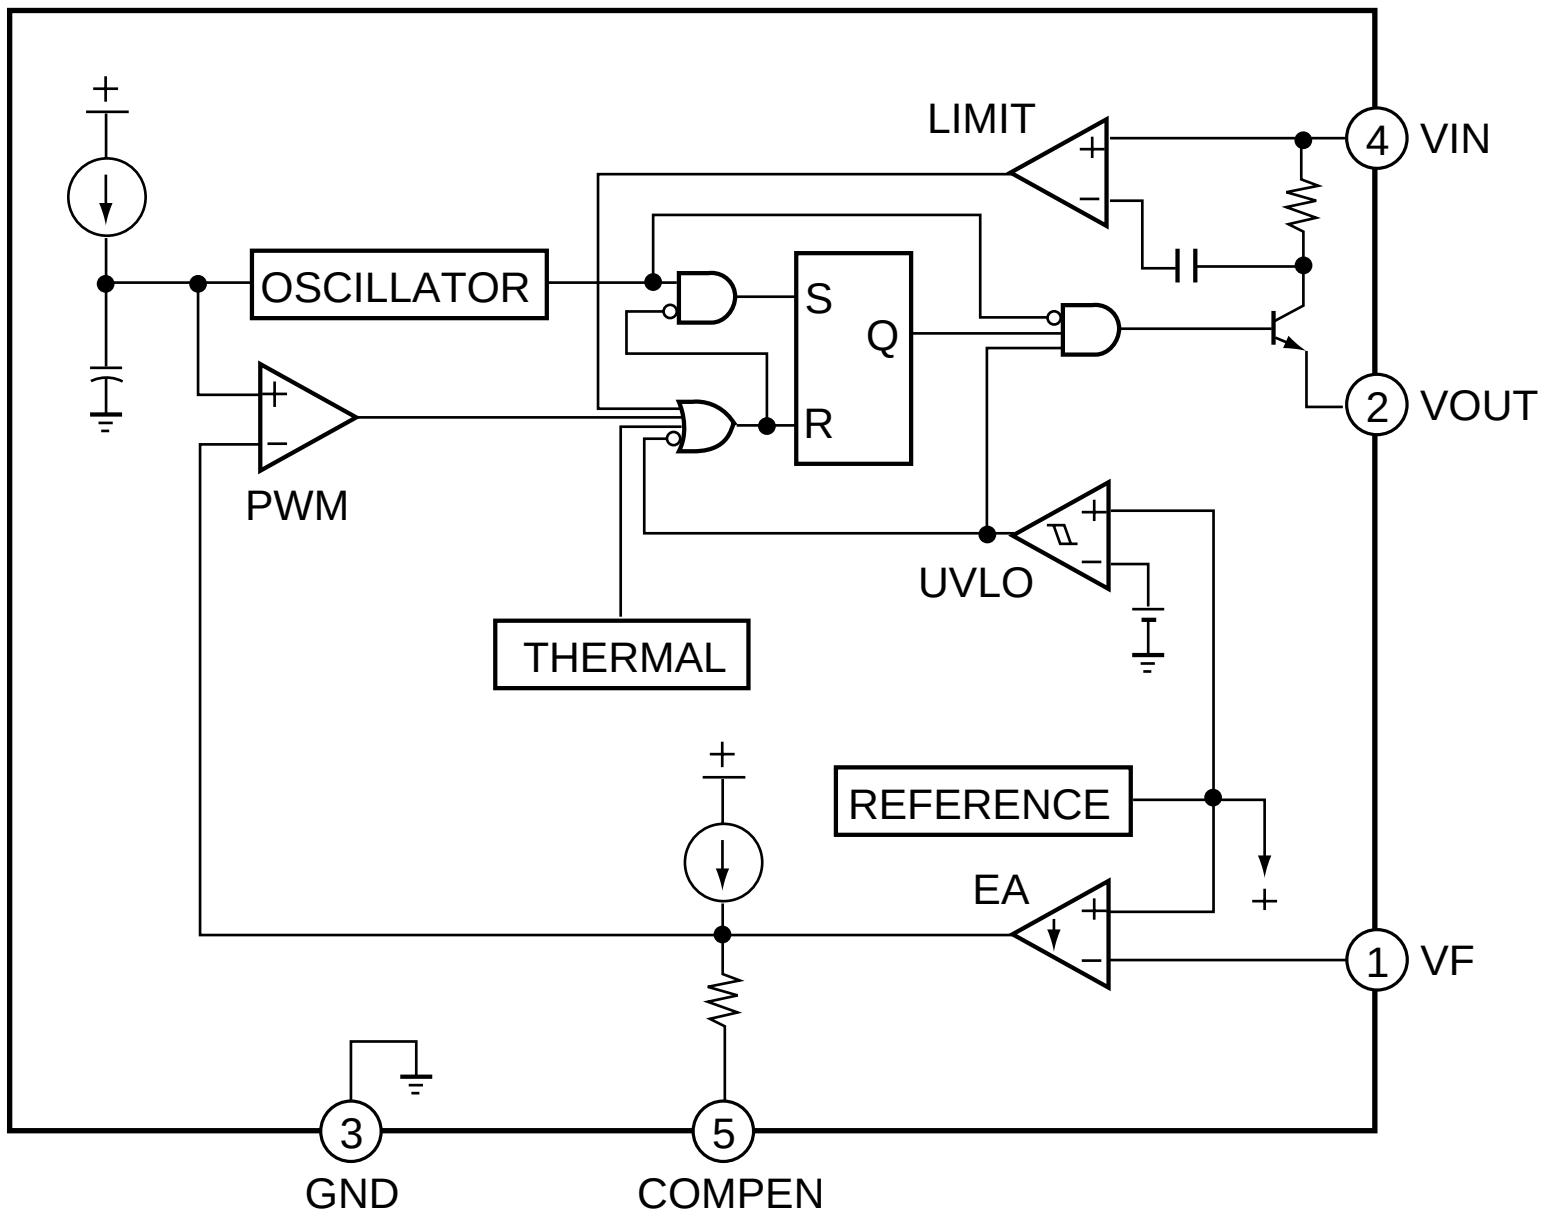
LIMIT
4 VIN
OSCILLATOR
S
Q
R
PWM
2 VOUT
UVLO
THERMAL
REFERENCE
EA
1 VF
3
GND
5
COMPEN

● Pin Function

No.	Pin Name	Pin Function
1	VF	Voltage feedback input
2	VOUT	Switch output
3	GND	Ground
4	VIN	Input voltage / VCC
5	COMPEN	Compensation/Standby

7.3 EXPLANATION

■ CONNECTING VIDEO/AUDIO EQUIPMENT

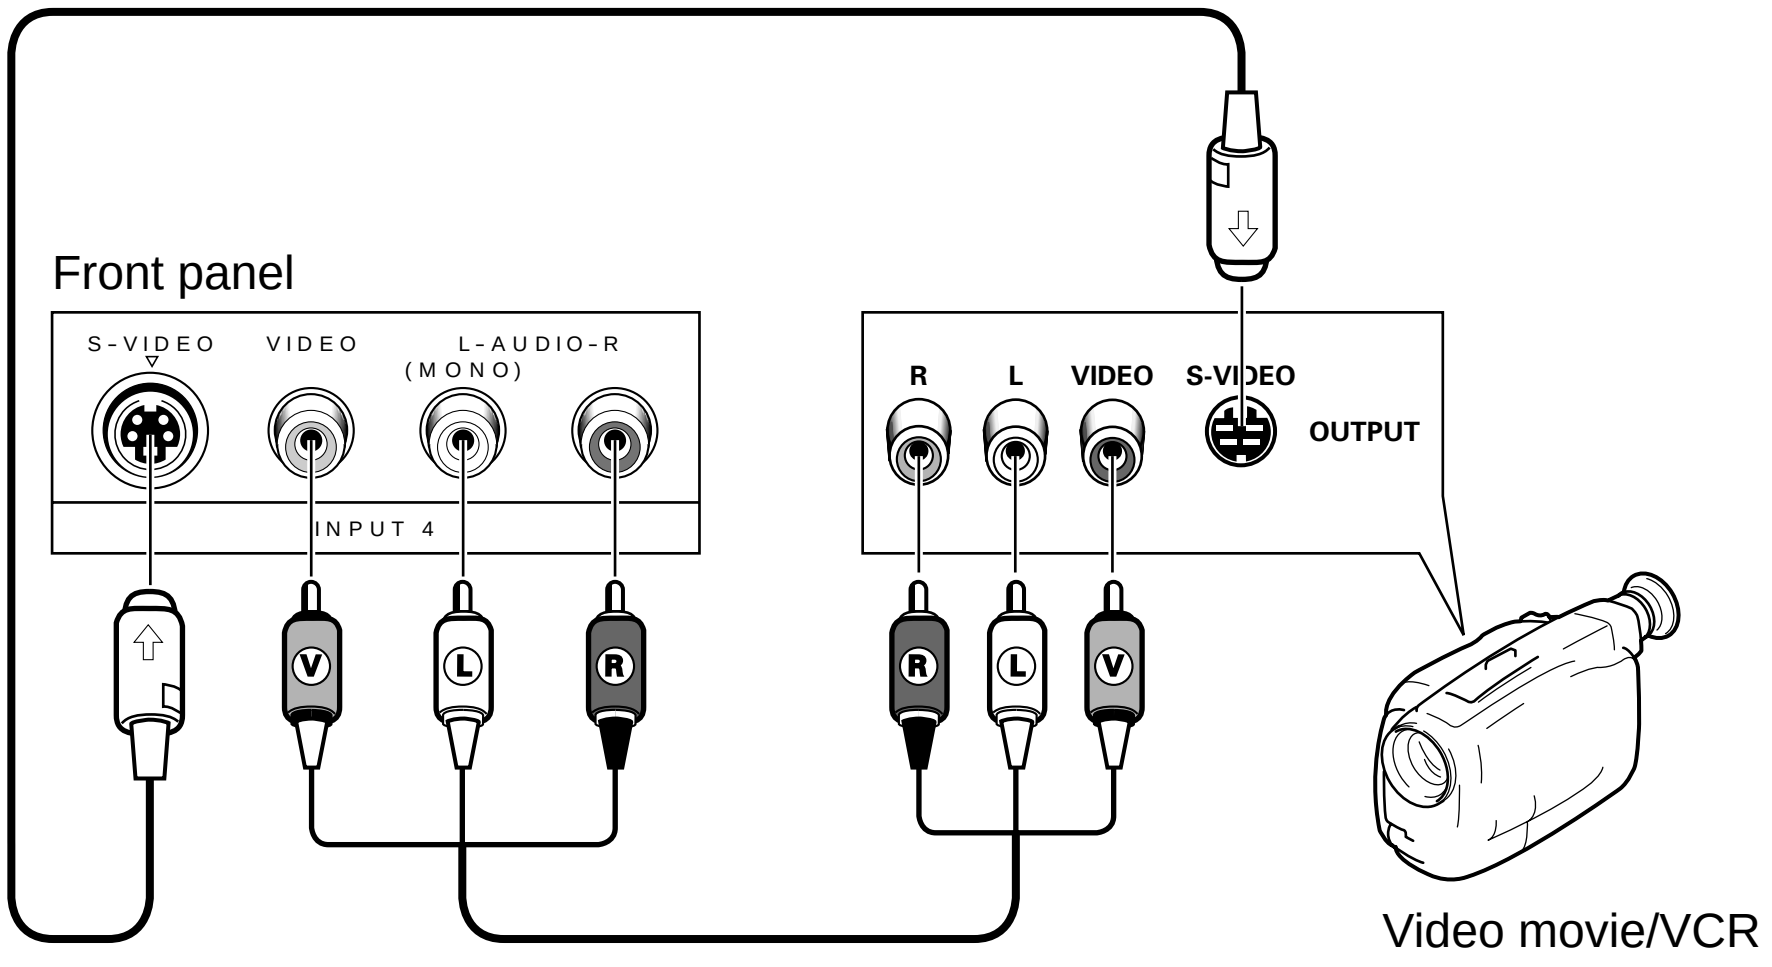

INPUT jacks

There are 4 sets of inputs for VCR and DVD/LD players. Use RCA-type pin plug cords (the same as those used in Hi-Fi systems) for connections. When the audio source to be connected is mono, connect the source to the L-(MONO) jack.

MONITOR OUTPUT jacks

These are used for connecting the monitor to a VCR for recording, or for linking it to another monitor. These jacks output the video and audio signals of the source currently selected by the INPUT SELECT. Connect these output jacks to your VCR's inputs. Connect the VCR's outputs to the monitor's VIDEO inputs.

S-VIDEO INPUT jacks

- Inputs signals from a DVD/LD player that has an S-VIDEO output jack.
- When the signal input from the S-VIDEO INPUT jack is output from the MONITOR OUTPUT jack, the output signal will be a composite of Y and C.

COMPONENT VIDEO INPUT jack

Inputs three signals – Y, P_B (C_B) and P_R (C_R) – output from DVD players and the like.

Input formats in which images can be received.

	Format	Horizontal frequency	Vertical frequency
DVD player, etc.	480 i	15.734 kHz	60 Hz
	480 p	31.468 kHz	60 Hz
Digital tuner, etc.	1080 i	33.75 kHz	60 Hz
	480 p	31.468 kHz	60 Hz

RGB INPUT jack

Inputs five signals – R, G, B, H and V – output from digital tuners and the like.

Input format in which images can be received.

	Format	Horizontal frequency	Vertical frequency
Digital tuner	1080 i	33.75 kHz	60 Hz

NOTES:

- SPLIT screen, FREEZE screen and SEARCH screen functions cannot be used when 1080i or 480p component signals are input.
- Signals from MONITOR OUTPUT jacks will not be output when component signals or RGB signals are input.
- The RGB input jack is designed for use in connecting a digital tuner with RGB signal output, and it should accordingly never be used for connecting to a personal computer or other device.

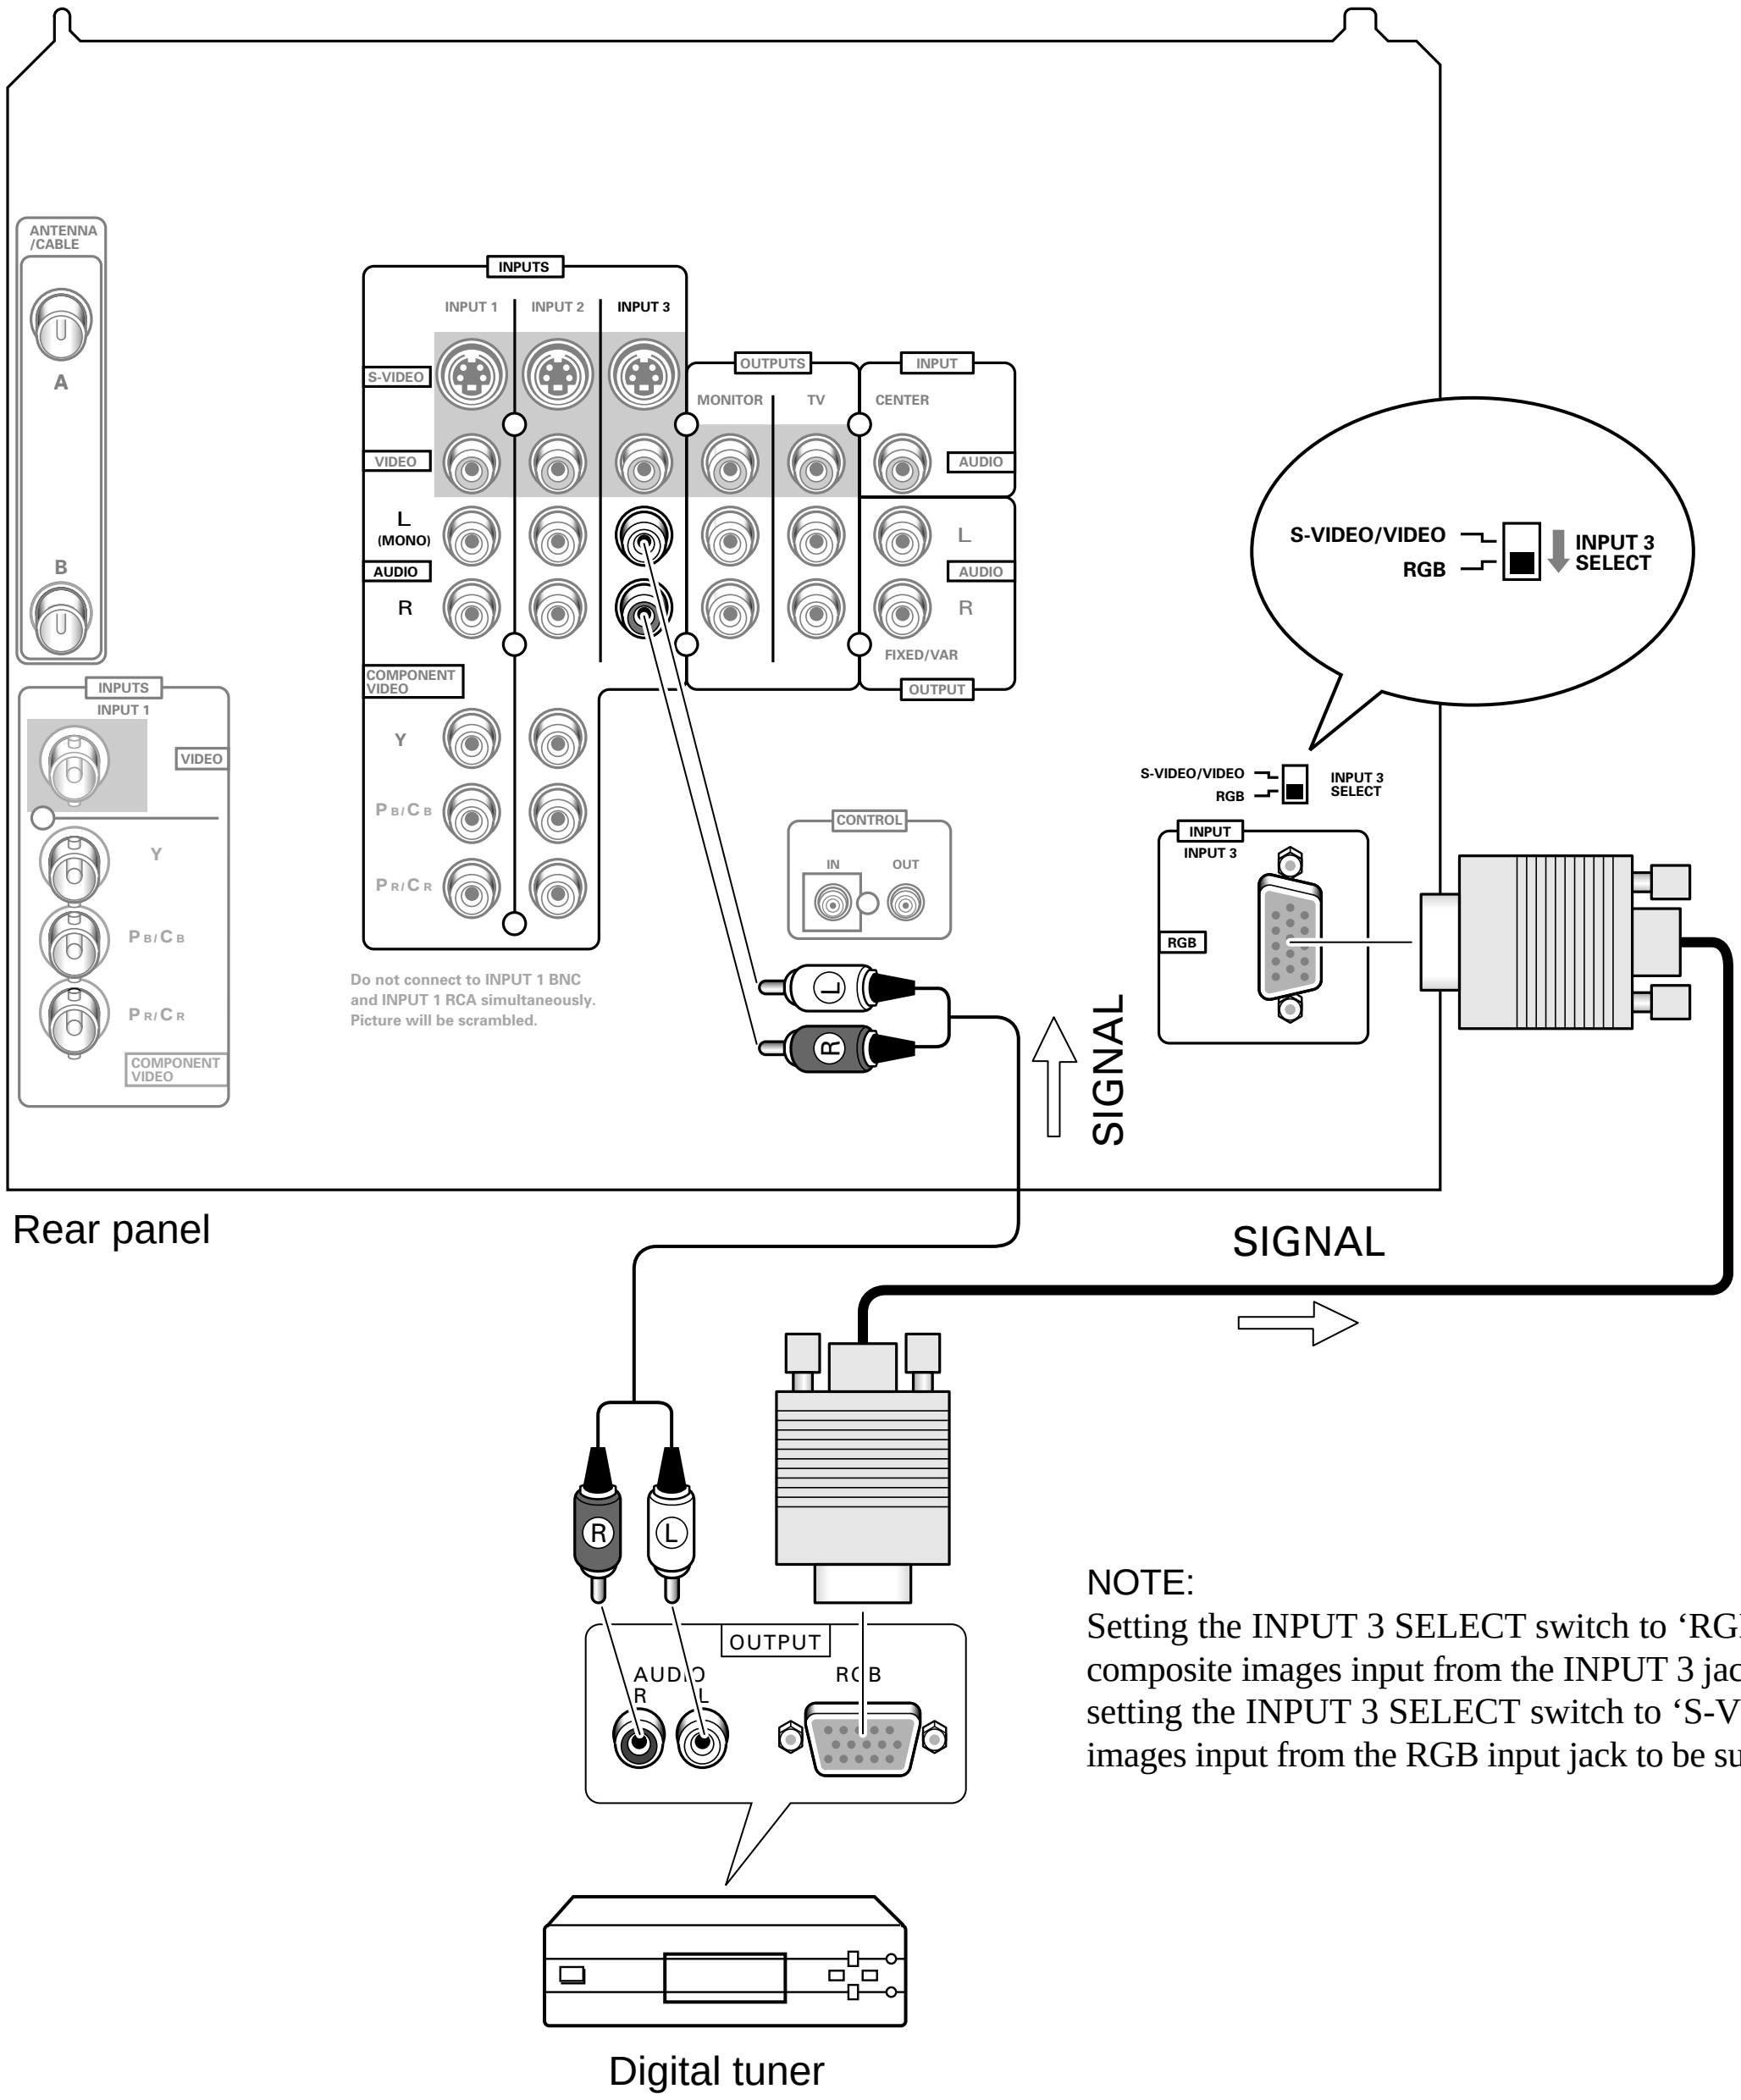
ANTENNA /CABLE
A
B
INPUTS
INPUT 1
VIDEO
Y
PB/CB
PR/CR
COMPONENT VIDEO
INPUTS
INPUT 1
INPUT 2
INPUT 3
S-VIDEO
VIDEO
L (MONO)
AUDIO
R
OUTPUTS
MONITOR
TV
INPUT
CENTER
AUDIO
L
R
FIXED/VAR
OUTPUT
COMPONENT VIDEO
Y
PB/CB
PR/CR
Do not connect to INPUT 1 BNC and INPUT 1 RCA simultaneously. Picture will be scrambled.
CONTROL
IN
OUT
L
R
S-VIDEO/VIDEO
RGB
INPUT 3 SELECT
INPUT
INPUT 3
RGB
SIGNAL
Rear panel
SIGNAL
R
L
OUTPUT
AUDIO
R
L
RGB
Digital tuner

NOTE:
Setting the INPUT 3 SELECT switch to ‘RGB’ will cause all S-Video and composite images input from the INPUT 3 jack to be suppressed. Similarly, setting the INPUT 3 SELECT switch to ‘S-VIDEO/VIDEO’ will cause all images input from the RGB input jack to be suppressed.

■ TO WATCH TV

To turn off the sound

Press the MUTING button.

When mute is turned on, a volume indicator will appear in red on the screen (and will disappear in a few seconds).



If the MUTING button is pressed while a closed caption signal is being received, CC/TEXT will be displayed.
Press MUTING again to return to the previous volume level.

Auto power off function

If the monitor is receiving no input signals in TV mode, its power will turn off (go on standby) after some time has passed.

■ PROGRAM BLOCK (V. CHIP) FUNCTION

Since laws have been passed in the United States requiring a way of blocking undesirable programming, the V-chip has become a required component in television sets. The V-chip is a computer chip which decodes signals added to broadcast signals transmitted by television broadcasters. These signals are classified by programming content (e.g., amount of violence or sexual content) and age, and viewers may specify settings which block certain types of programming.
Program blocking may be set to a specific level judged by parents to be undesirable for children depending on their age and the content of the programming in question. The V-chip makes it impossible for such children to view programs with ratings exceeding the specified level.

The V-chip uses the following rating system.

<U.S.A. RATING SYSTEM>

MPAA RATING

RATING		
Age-Base	G	GENERAL AUDIENCES. All ages admitted.
	PG	PARENTAL GUIDANCE SUGGESTED. Some material may not be suitable for children.
	PG-13	PARENTAL STRONGLY CAUTIONED. Some material may be inappropriate for children under 13.
	R	RESTRICTED. Under 17 requires accompanying parent or adult guardian.
	NC-17	NO ONE 17 AND UNDER ADMITTED.
	X	X Rating is an older rating that is the same as NC-17 and may be encoded on the data of older movie.
	NR	NOT RATED

TV PARENTAL GUIDELINES

RATING		Description and Content Themes				
		FV	D	L	S	V
Age-Base	TV-Y	–	–	–	–	–
	TV-Y7	○	–	–	–	–
	TV-G	–	–	–	–	–
	TV-PG	–	○	○	○	○
	TV-14	–	○	○	○	○
	TV-MA	–	–	○	○	○

FV: Fantasy Violence
D: Sexually Suggestive Dialog
L: Adult Language
S: Sexual Situations
V: Violence

TV-Y All Children. This program is designed to be appropriate for all children.

TV-Y7 Directed to Older Children. This program is designed for children age 7 and above.
Note: For those programs where fantasy violence may be more intense or more combative than other programs in this category, such programs will be designated TV-Y7-FV.

TV-G General Audience. Most parents would find this program suitable for all ages.

TV-PG Parental Guidance Suggested. This program contains material that parents may find unsuitable for younger children.
The program contains one or more of the following:
- (D) Some suggestive dialogue
- (L) Infrequent coarse language
- (V) Moderate violence
- (S) Some sexual situations

TV-14 Parents Strongly Cautioned. This program contains some material that many parents would find unsuitable for children under 14 years of age.
This program contains one or more of the following:
- (D) Intensely suggestive dialogue
- (L) Strong coarse language
- (S) Intense sexual situations
- (V) Intense violence

TV-MA Mature Audience Only. This program is specifically designed to be viewed by adults and therefore may be unsuitable for children under 17.
This program contains one or more of the following:
- (L) Crude indecent language
- (S) Explicit sexual activity
- (V) Graphic violence

<CANADIAN RATING SYSTEM>

CANADIAN ENGLISH LANGUAGE RATING SYSTEM

RATING		
Age-Base	C	Children
	C8+	Children 8 years and older
	G	General programming, suitable for all audiences
	PG	Parental Guidance
	14+	Viewers 14 years and older
	18+	Adult Programming

C	Programming interned for children under age 8 Careful attention is paid to themes, which could threaten children's sense of security and well-being. There will be no realistic scenes of violence. Depictions of aggressive behavior will be infrequent and limited to portrayals that are clearly imaginary, comedic or unrealistic in nature.
C8+	Programming generally considered acceptable for children 8 years and over to watch on their own Violence will not be portrayed as the preferred, acceptable, or only way to resolve conflict; or encourage children to imitate dangerous acts which they may see on television. Any realistic depictions of violence will be infrequent, discreet, of low intensity and will show the consequences of the acts.
G	General Audience Will contain very little violence, either physical or verbal or emotional. Will be sensitive to themes which could frighten a younger child, will not depict realistic scenes of violence which minimize or gloss over the effects of violent acts.
PG	Parental Guidance Programming intended for a general audience but which may not be suitable for younger children. Parents may consider some content inappropriate for unsupervised viewing by children aged 8-13.
14+	Programming contains themes or content which may not be suitable for viewers under the age of 14 Parents are strongly cautioned to exercise discretion in permitting viewing by pre-teens and early teens.
18+	Adult May contain violence integral to the development of the plot, character or theme, intended for adult audiences.

CANADIAN FRENCH LANGUAGE RATING SYSTEM

RATING		
Age-Base	G	General
	8+	Children 8 years and older
	13+	Viewers 13 years and older
	16+	Viewers 16 years and older
	18+	For Adults

G	General Programming intended for audience of all ages. Contains no violence, or the violence it contains is minimal or is depicted appropriately with humour or caricature or in an unrealistic manner.
8+ (8 ans+)	8+ General – Not recommended for young children Programming intended for a broad audience but contains light or occasional violence that could disturb young children. Viewing with an adult is therefore recommended for young children (under the age of 8) who cannot differentiate between real and imaginary portrayals.
13+ (13 ans+)	Programming may not be suitable for children under the age of 13 Contains either a few violent scenes or one or more sufficiently violent scenes to affect them. Viewing with an adult is therefore strongly recommended for children under 13.
16+ (16 ans+)	Programming is not suitable for children under the age of 16 Contains frequent scenes of violence or intense violence.
18+ (18 ans+)	Programming restricted to adults Contains constant violence or scenes of extreme violence.

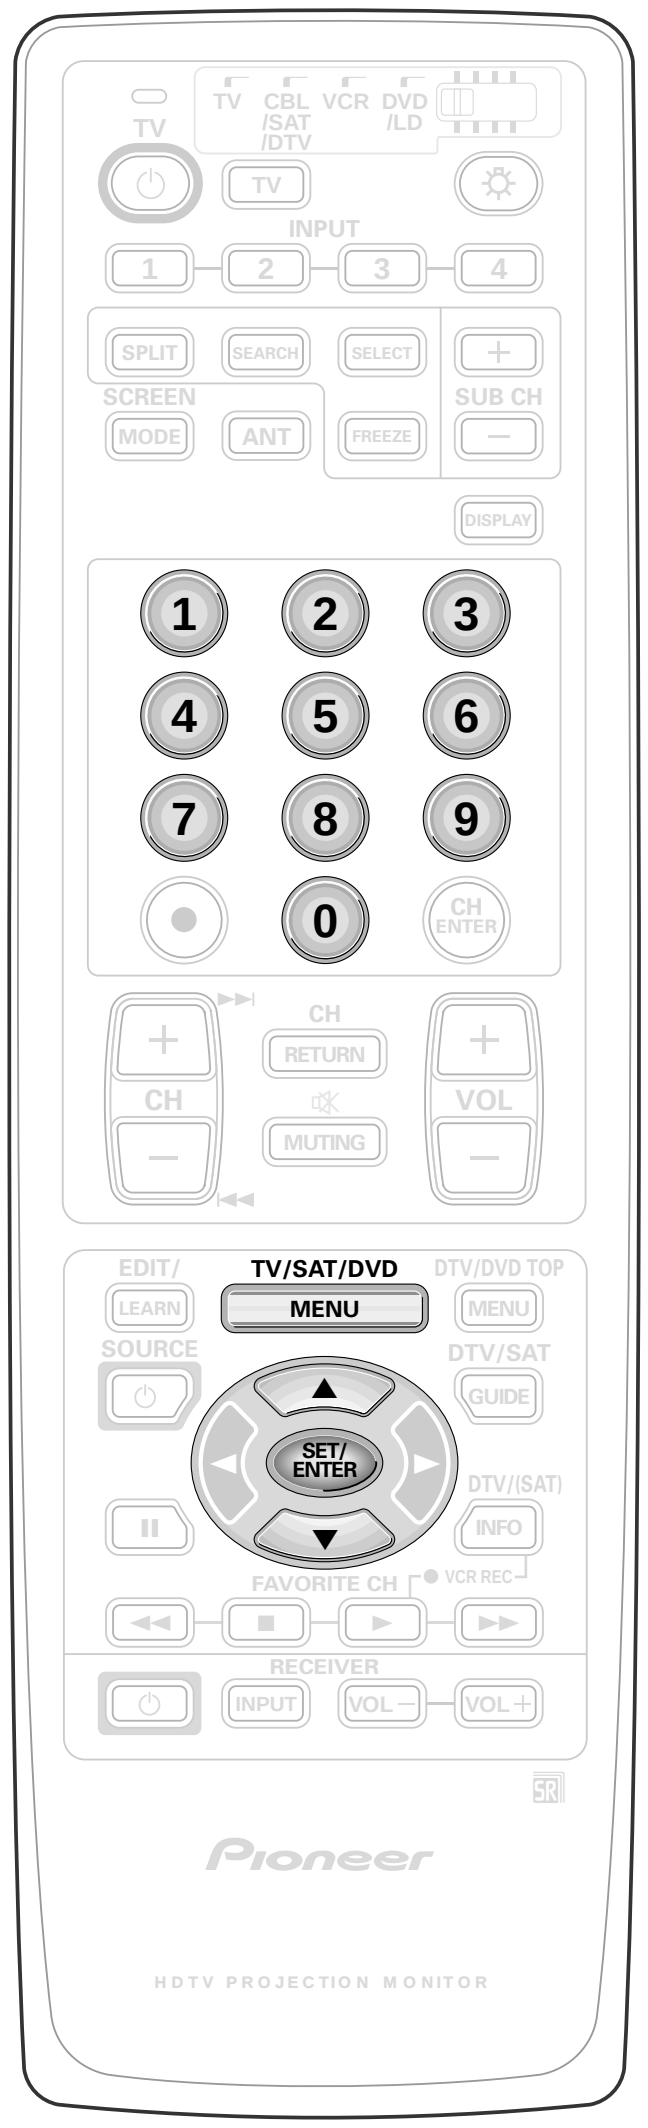
TV
TV
CBL /SAT /DTV
VCR
DVD /LD
TV
INPUT
1
2
3
4
SPLIT
SEARCH
SELECT
SCREEN
SUB CH
MODE
ANT
FREEZE
DISPLAY
1
2
3
4
5
6
7
8
9
0
CH ENTER
CH
RETURN
MUTING
CH
VOL
EDIT/
LEARN
TV/SAT/DVD
MENU
DTV/DVD TOP
MENU
SOURCE
DTV/SAT
GUIDE
SET/ ENTER
DTV/(SAT)
INFO
FAVORITE CH
VCR REC
RECEIVER
INPUT
VOL –
VOL +
Pioneer
HDTV PROJECTION MONITOR

• SETTING THE PROGRAM BLOCKING LEVEL

1. Press MENU and select SET UP by using the ▲ or ▼ button and then pressing SET/ENTER.

2. Select PROGRAM BLOCK in the same way.

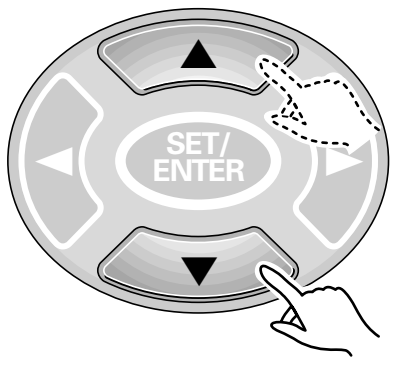

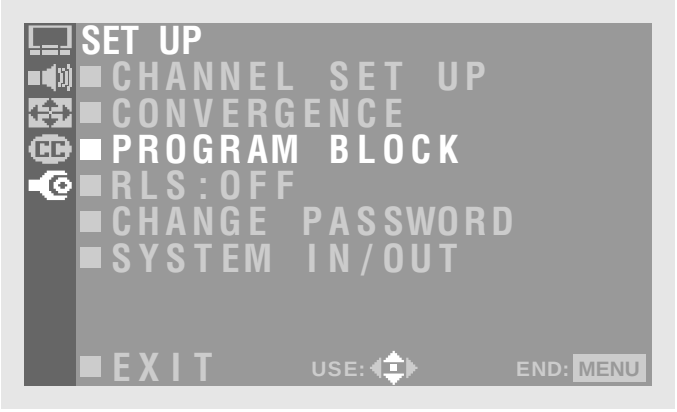
SET UP
■CHANNEL SET UP
■CONVERGENCE
■PROGRAM BLOCK
■RLS:OFF
■CHANGE PASSWORD
■SYSTEM IN/OUT
■EXIT USE: END: MENU

3. Enter a password.
   - Press numeric buttons '0' through '9' to enter a four-digit password.
   - If the password has not been changed as described in Changing Password, enter the default password of '1234'.
   - If you wish to change the password (recommended), Changing Password for instructions on how to do so.

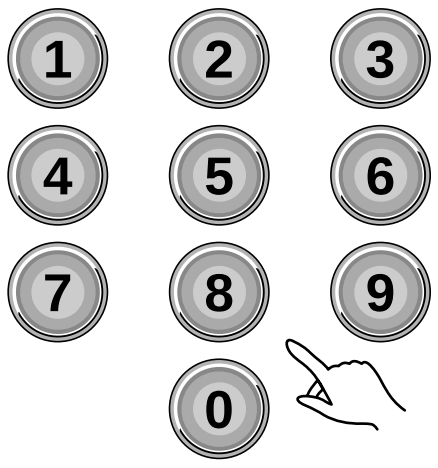
1
2
3
4
5
6
7
8
9
0

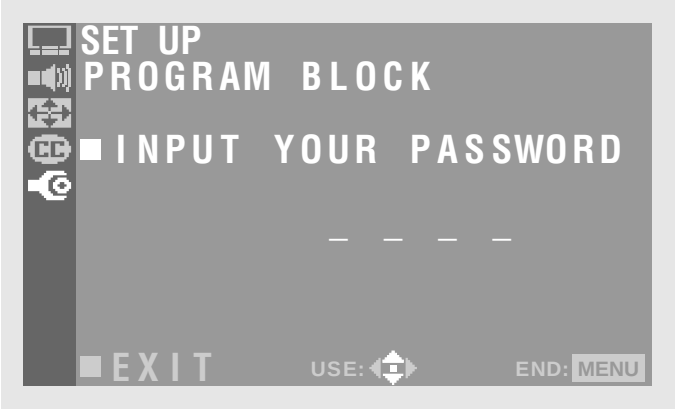
SET UP
PROGRAM BLOCK
■ INPUT YOUR PASSWORD
_ _ _ _
■EXIT USE: END: MENU

4. Select BLOCK .

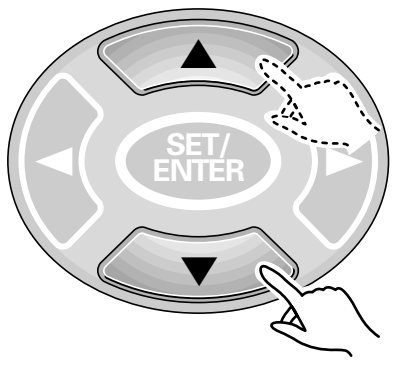

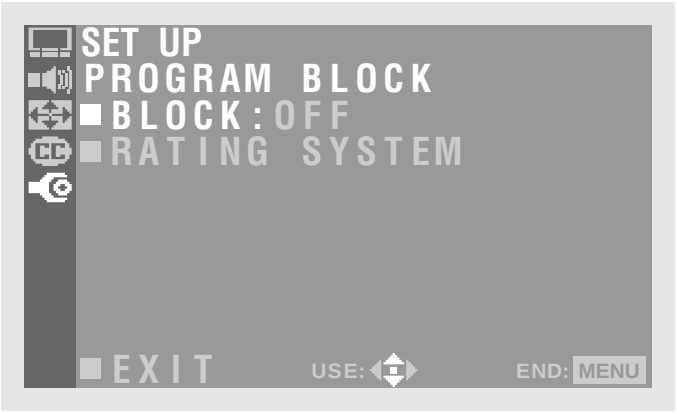
SET UP
PROGRAM BLOCK
■BLOCK:OFF
■RATING SYSTEM
■EXIT USE: END: MENU

5. Set BLOCK to ON.

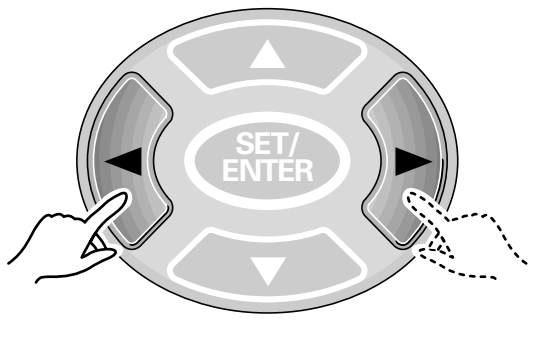

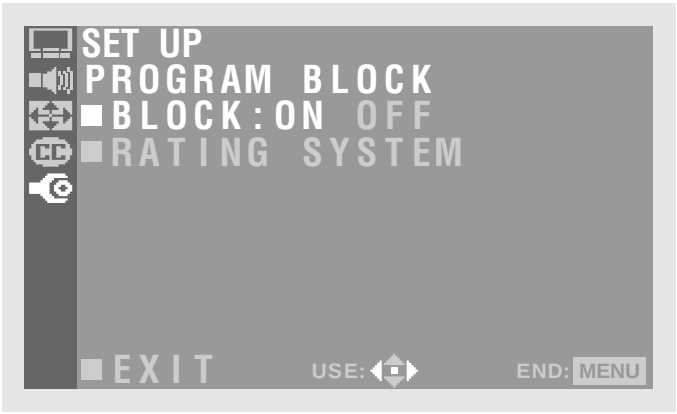
SET UP
PROGRAM BLOCK
■BLOCK:ON OFF
■RATING SYSTEM
■EXIT USE: END: MENU



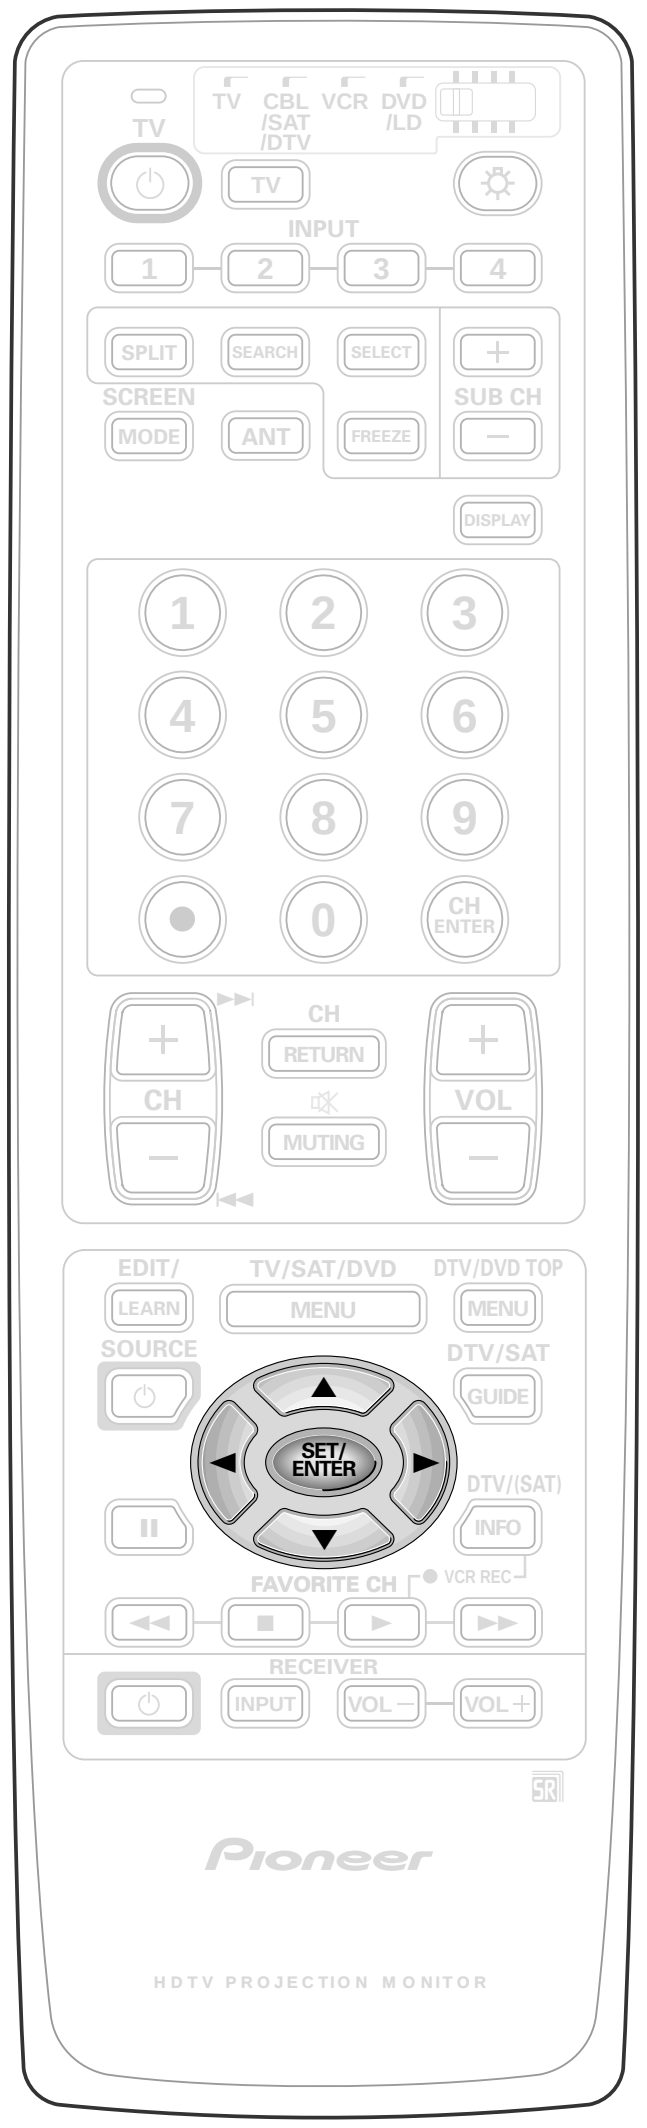
TV
CBL /SAT /DTV
VCR
DVD /LD
INPUT
SPLIT
SEARCH
SELECT
SCREEN
MODE
ANT
FREEZE
SUB CH
DISPLAY
CH ENTER
CH
RETURN
MUTING
VOL
EDIT/ LEARN
TV/SAT/DVD MENU
DTV/DVD TOP MENU
SOURCE
DTV/SAT GUIDE
SET/ ENTER
DTV/(SAT) INFO
FAVORITE CH
VCR REC
RECEIVER
INPUT
VOL –
VOL +
Pioneer
HDTV PROJECTION MONITOR

6. Select U.S.A. RATING SYSTEM or CANADIAN RATING SYSTEM .

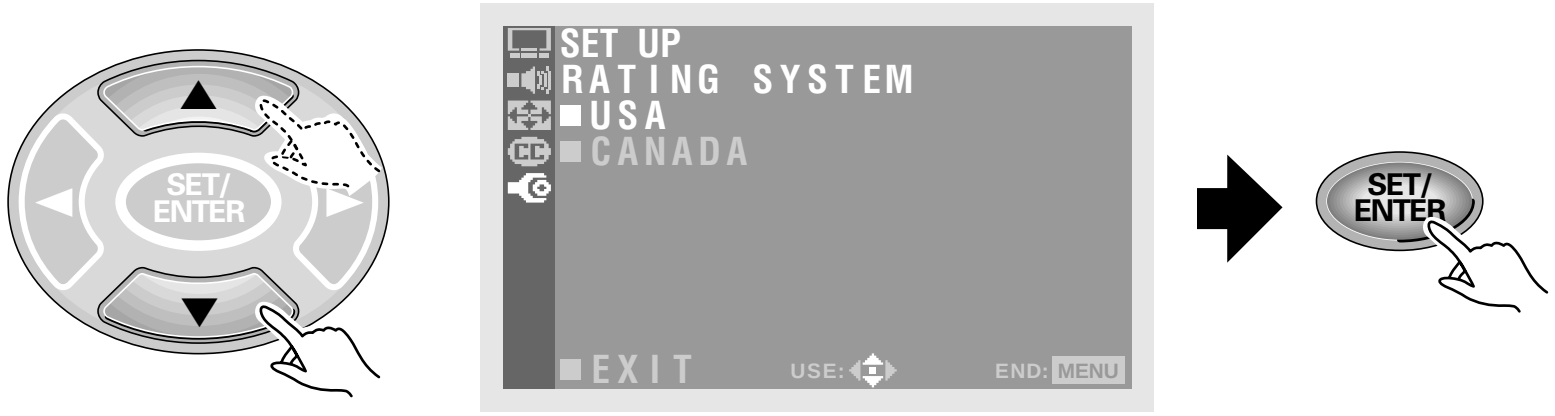
SET/ ENTER
SET/ ENTER

SET UP
RATING SYSTEM
■USA
■CANADA
■EXIT USE: END: MENU

7. If you selected U.S.A. RATING SYSTEM .

Select MPAA RATING or TV PARENTAL GUIDELINES .

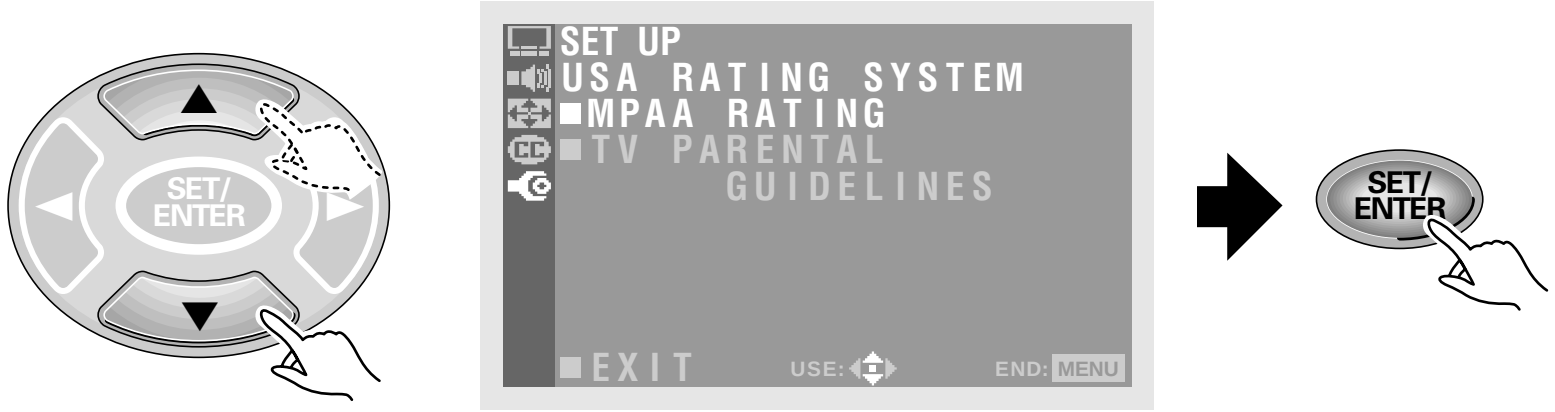
SET/ ENTER
SET/ ENTER

SET UP
USA RATING SYSTEM
■MPAA RATING
■TV PARENTAL GUIDELINES
■EXIT USE: END: MENU

8. Select and then confirm the rank of the MPAA RATING.

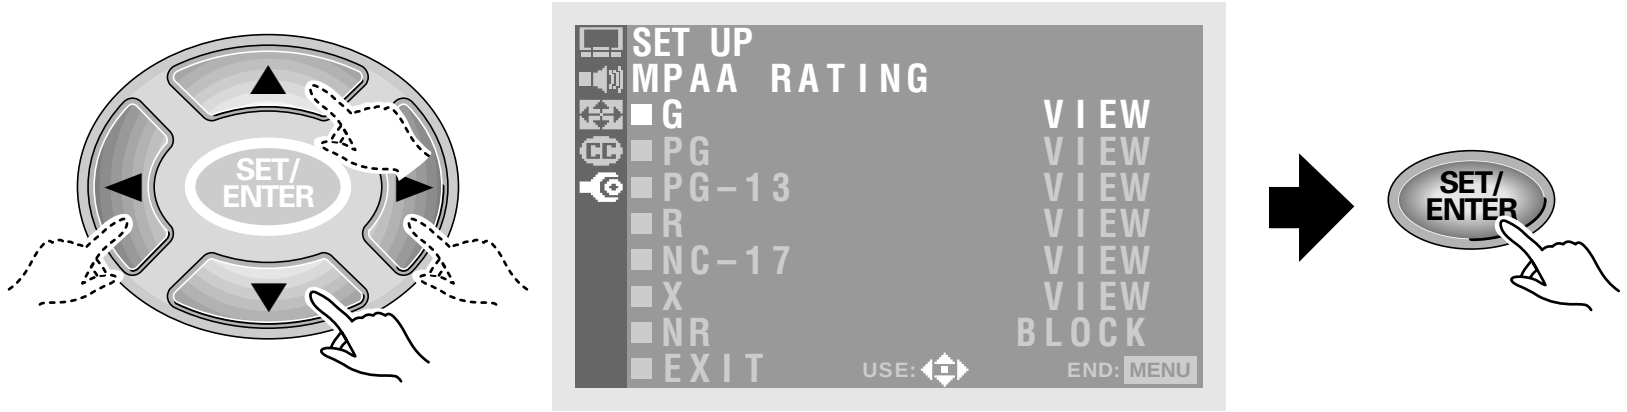
SET/ ENTER
SET/ ENTER

SET UP
MPAA RATING
■G VIEW
■PG VIEW
■PG-13 VIEW
■R VIEW
■NC-17 VIEW
■X VIEW
■NR BLOCK
■EXIT USE: END: MENU

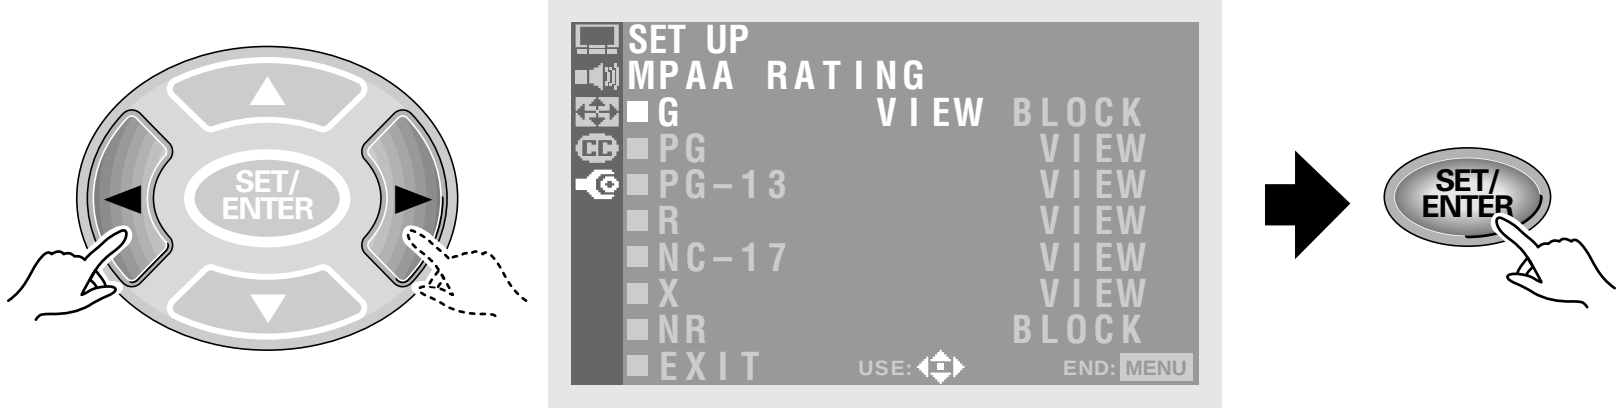
SET/ ENTER
SET/ ENTER

SET UP
MPAA RATING
■G VIEW BLOCK
■PG VIEW
■PG-13 VIEW
■R VIEW
■NC-17 VIEW
■X VIEW
■NR BLOCK
■EXIT USE: END: MENU

NOTE:
- Blocking programming with a low rating will cause all programming with a higher rating also to be blocked.
- The ‘NR’ (not rated) MPAA RATING may be set to ‘View’ or ‘Block’ without regard to other ratings.

9. Select and confirm the rank of the TV PARENTAL GUIDELINES.

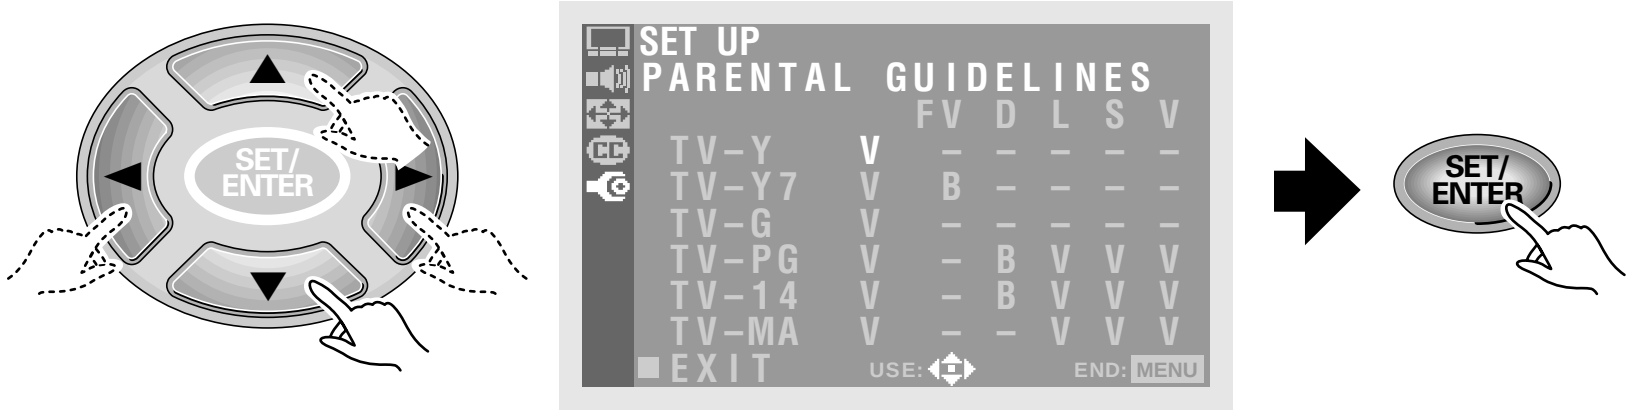
SET/ ENTER
SET/ ENTER

SET UP
PARENTAL GUIDELINES

		FV	D	L	S	V
TV-Y	V	–	–	–	–	–
TV-Y7	V	B	–	–	–	–
TV-G	V	–	–	–	–	–
TV-PG	V	–	B	V	V	V
TV-14	V	–	B	V	V	V
TV-MA	V	–	–	V	V	V

■EXIT USE: END: MENU

- Each time the SET/ENTER button is pressed, the setting will toggle between ‘B’ (Block) and ‘V’ (View).

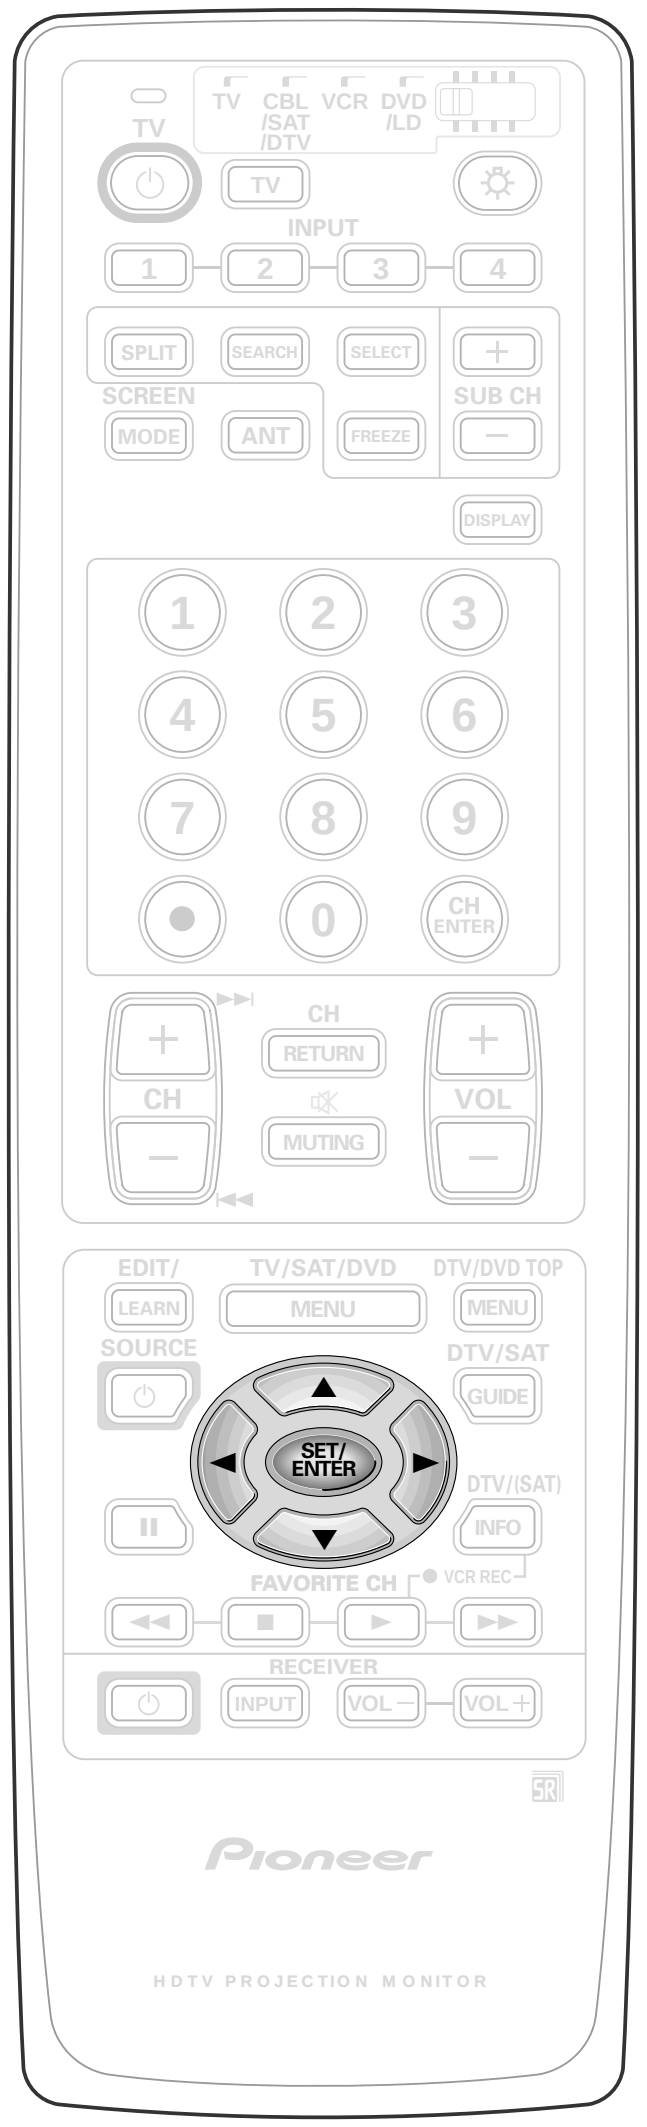
TV
CBL /SAT /DTV
VCR
DVD /LD
TV
INPUT
1
2
3
4
SPLIT
SEARCH
SELECT
SCREEN
MODE
ANT
FREEZE
SUB CH
DISPLAY
1
2
3
4
5
6
7
8
9
0
CH ENTER
CH
RETURN
CH
VOL
MUTING
EDIT/
LEARN
TV/SAT/DVD
MENU
DTV/DVD TOP
MENU
SOURCE
DTV/SAT
GUIDE
SET/ ENTER
DTV/(SAT)
INFO
FAVORITE CH
VCR REC
RECEIVER
INPUT
VOL−
VOL+
Pioneer
HDTV PROJECTION MONITOR

10. If you selected CANADIAN RATING SYSTEM in step 6, select ENGLISH or FRENCH .

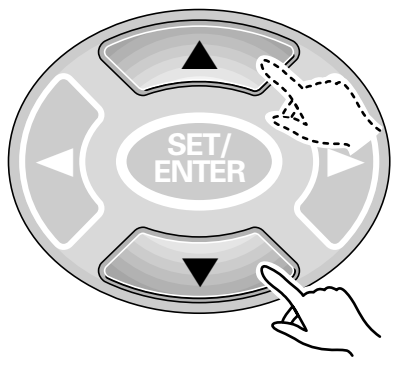

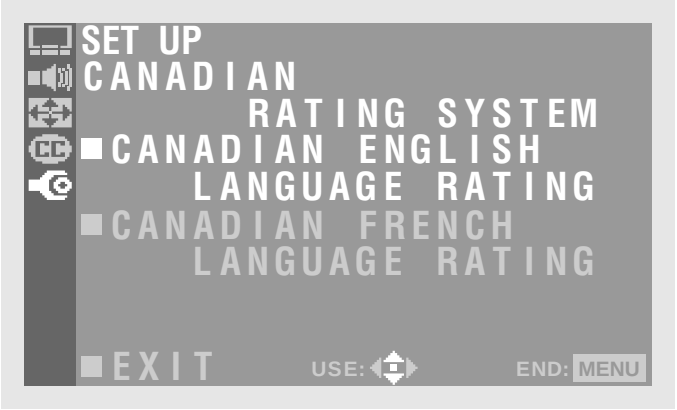

```
SET UP
CANADIAN
        RATING SYSTEM
■CANADIAN ENGLISH
    LANGUAGE RATING
■CANADIAN FRENCH
    LANGUAGE RATING

■EXIT        USE:        END: MENU
```



11. If you selected ENGLISH, select and then confirm the rank of the ENGLISH RATING (If you selected FRENCH go to step 12).

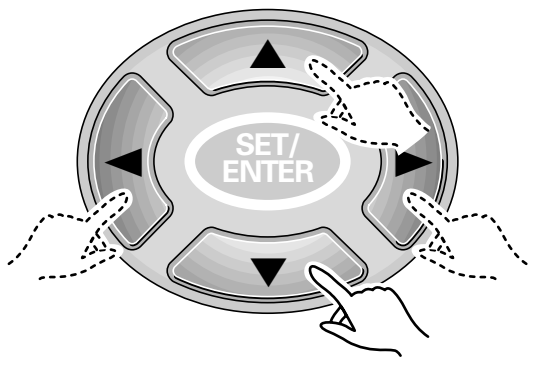

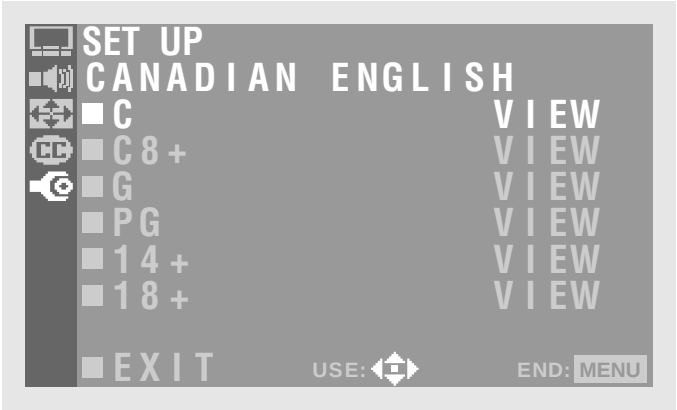

```
SET UP
CANADIAN ENGLISH
■C                VIEW
■C8+              VIEW
■G                VIEW
■PG               VIEW
■14+              VIEW
■18+              VIEW

■EXIT        USE:        END: MENU
```



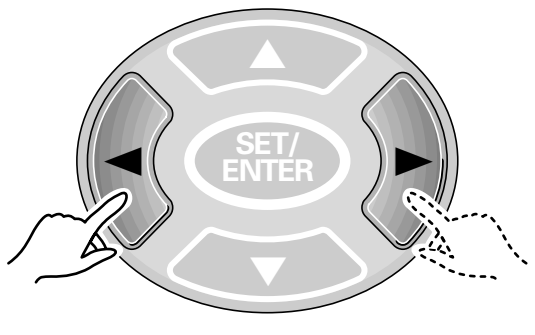

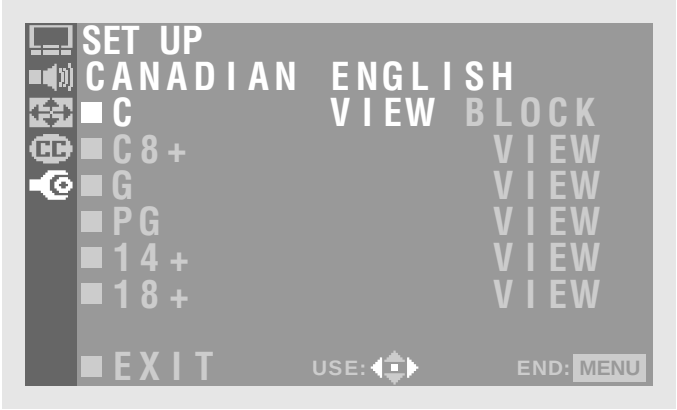

```
SET UP
CANADIAN ENGLISH
■C          VIEW BLOCK
■C8+              VIEW
■G                VIEW
■PG               VIEW
■14+              VIEW
■18+              VIEW

■EXIT        USE:        END: MENU
```



Go to step 13.

12. Select and then confirm the rank of the FRENCH RATING.

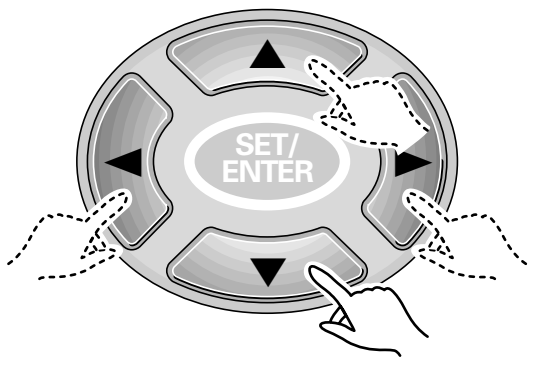

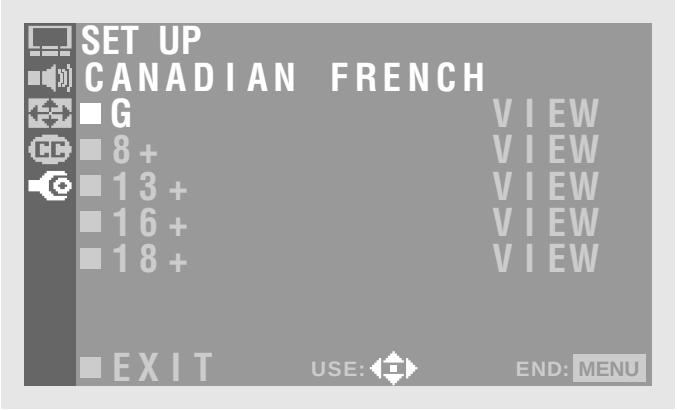

```
SET UP
CANADIAN FRENCH
■G                VIEW
■8+               VIEW
■13+              VIEW
■16+              VIEW
■18+              VIEW

■EXIT        USE:        END: MENU
```



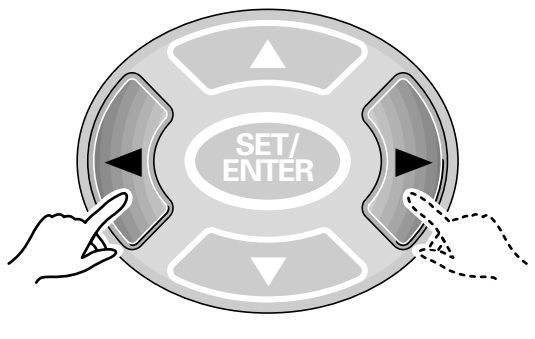

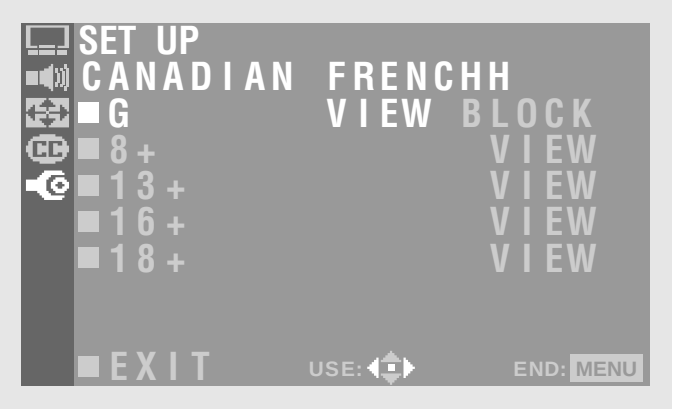

```
SET UP
CANADIAN FRENCHH
■G          VIEW BLOCK
■8+               VIEW
■13+              VIEW
■16+              VIEW
■18+              VIEW

■EXIT        USE:        END: MENU
```



13. After setting, press MENU to turn the menu off.


TV/SAT/DVD
MENU

• HOW TO REMOVE BLOCKING FROM A PROGRAM IN PROGRESS

If you choose a program that has a rating higher than your program blocking rating, the picture and sound will cut off and an enter password screen will appear.

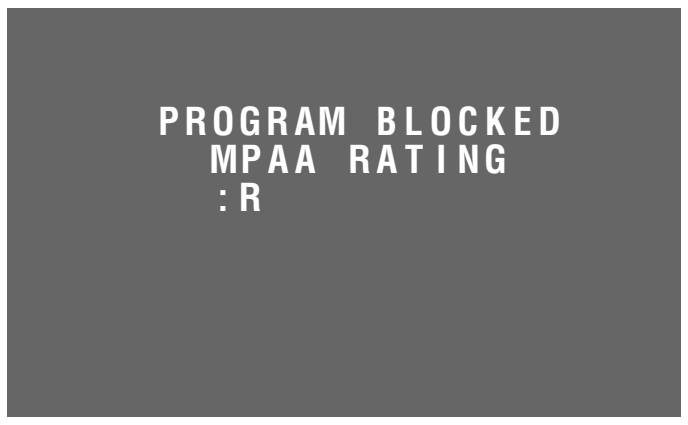

PROGRAM BLOCKED
MPAA RATING
:R

If you enter your password the blocking will be removed for this viewing only.

NOTE:
If the monitor power is turn OFF then turned ON again, the Program Blocked screen will appear again and you'll need to re-enter the password to view the program.

• REMOVING BLOCKING IN MULTI-SCREEN MODE

- Just as in normal single-screen mode, programs are blocked in SEARCH screen mode, but blocking can be removed only from the Main picture.
  To remove blocking from Search picture screen, switch to the Main picture for that channel and then remove blocking.
- When viewing in FREEZE screen mode, only programming on the Moving screen to the left will be blocked and the programming on the Still screen to the right will be displayed as is.

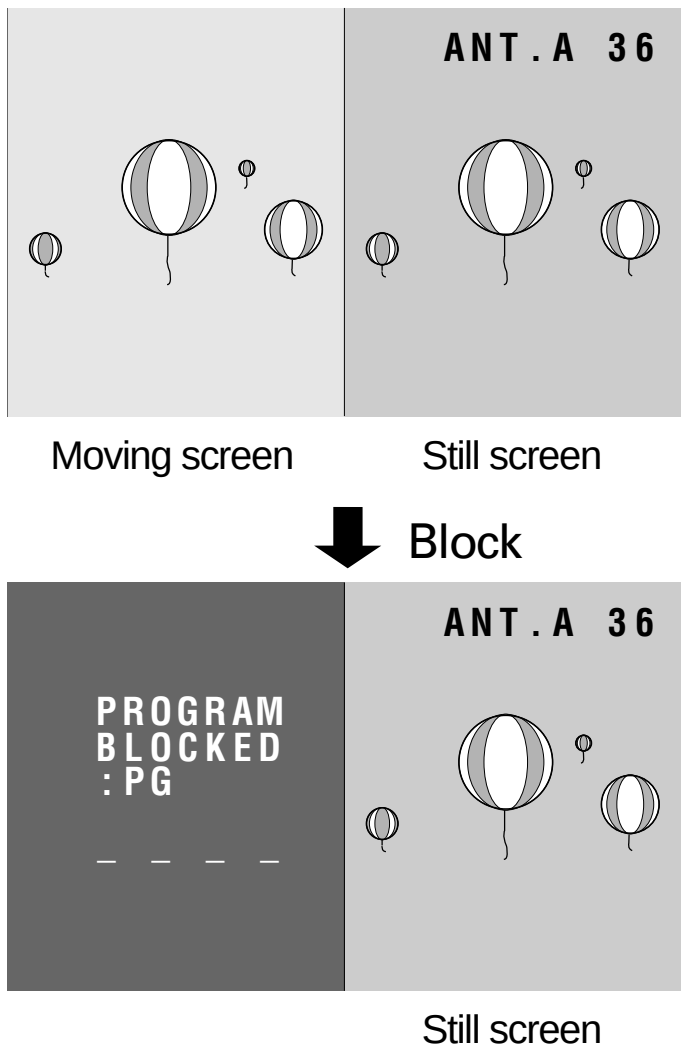

- When blocking is on during SEARCH screen mode, the screen at search picture side will be blacked out and won't display: “PROGRAM BLOCKED”.

■ CHANGING PASSWORD

If you forget the password

When the message ‘INPUT YOUR PASSWORD’ in step 3 is displayed, press the RETURN button on the front panel and hold it down for 3 seconds or longer.
The password reverts to “1234”.

■ MULTI-SCREEN FUNCTION

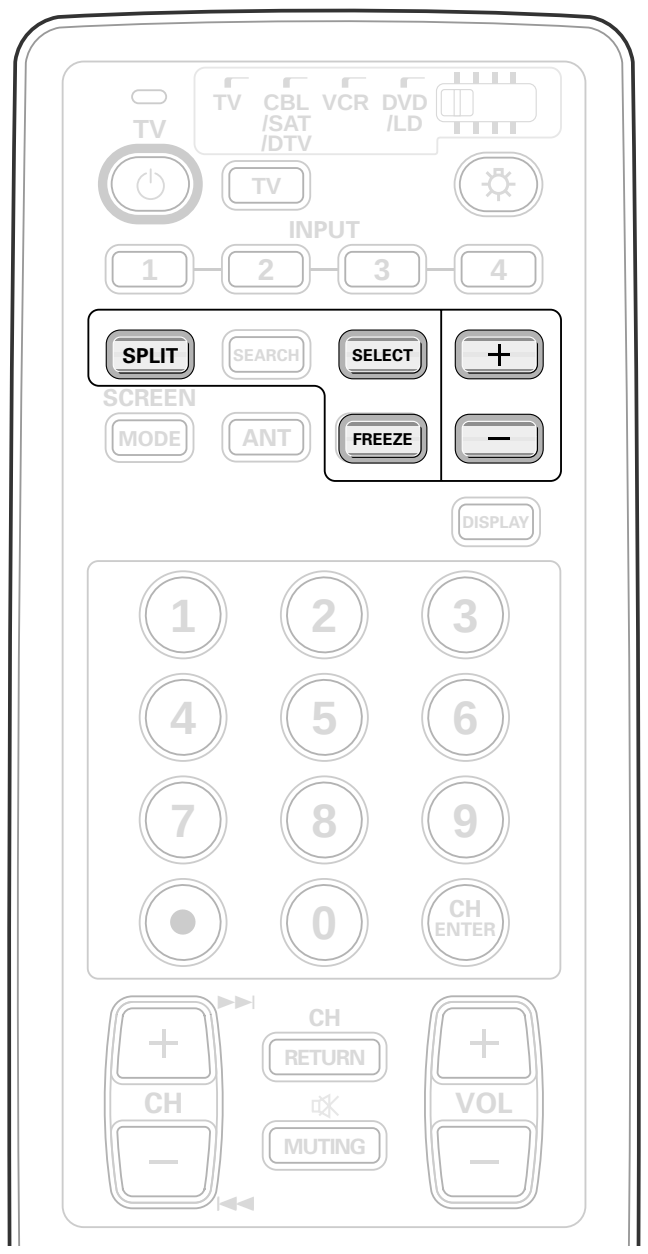

NOTES:

- The same image cannot be viewed as both the main picture and the sub-picture.
- Pressing the MENU button in SPLIT or FREEZE screen mode restores the screen display to normal and displays the menu on screen.
- These functions cannot be used when INPUT 1 or INPUT 2 is receiving a 1080i or 480p component signal (or the signals might not be received or noise might be generated).
- When a TV broadcast is being received, the screen on the right will not show the antenna B signal.
- RGB signals input from INPUT3 cannot be displayed.
- Continuous operation for extended periods in SPLIT or FREEZE screen mode may burn out the screen. We thus recommend that these modes only be used in conjunction with the normal screen mode.
- If the non-interlace signal for a TV game etc. is entered to the left screen during SPLIT screen mode, the right screen may be disrupted. If this occurs, use the right screen for TV game etc. entry.

• VIEWING TWO SCREENS (SPLIT screen)

The screen can be split vertically, making it possible to view different images on the left and right.

- The screen on which ♪ is displayed is the main picture, and the other screen is the sub-picture. Sound will be output for the main picture.
- Regular operations can be performed on the main picture.

Press the SPLIT button.

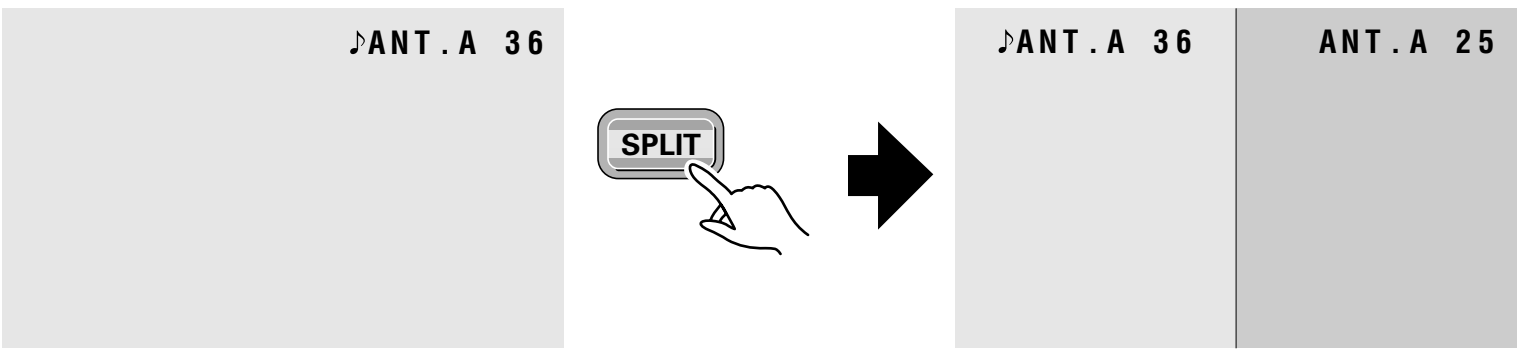

(Main picture) (Sub picture)

- When the SUB CH +,– buttons are pressed, the channel for the sub-picture will be changed.
- When the SELECT button is pressed, the ♪ will move to the other screen.
- The MONITOR OUTPUT terminal outputs the main picture signal.
- Pressing the SPLIT button again will restore the original screen.

• MAKING NOTES ON PROGRAM CONTENT (FREEZE screen)

The screen can be frozen, such as for taking down a recipe from a cooking program or an address for entering a quiz or the like.

Press the FREEZE button.

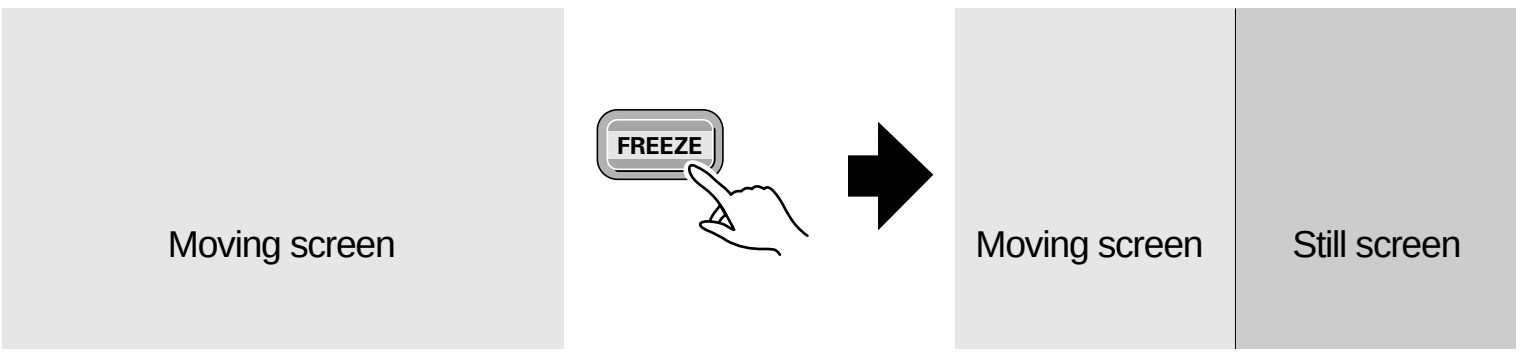

- This function is operable only with the normal screen.
- Pressing the FREEZE button again will restore the original screen.

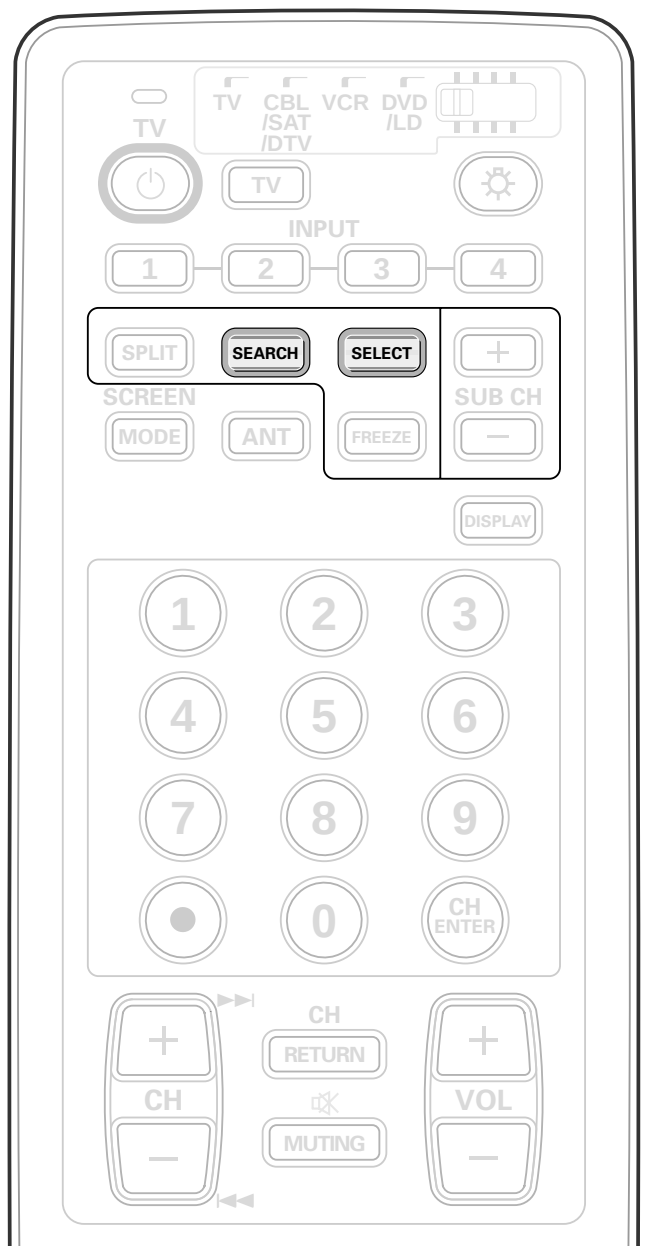

- Pressing the MENU button in SEARCH screen mode restores the screen display to normal and displays the menu on screen.
- These functions cannot be used when INPUT 1 or INPUT 2 is receiving a 1080i or 480p component signal (or the signals might not be received or noise might be generated).
- RGB signals input from INPUT3 cannot be displayed.
- Continuous operation for extended periods in SEARCH screen mode may burn out the screen. We thus recommend that these modes only be used in conjunction with the normal screen mode.
- The only channels displayed on the SEARCH screen will be those with input signals input from antenna A. Antenna B channels cannot be displayed on this screen.
- If the non-interlace signal for a TV game etc. is entered to the left screen during 9-SEARCH screen or 3-SEARCH screen modes, the screen may be disrupted.

• SEARCHING FOR A PROGRAM ON A DIFFERENT CHANNEL (SEARCH screen)

The screen on the right side can be made into nine or three different screens, making it possible to search for programs or enjoy multiple images.

Press the SEARCH button.

- Each time the SEARCH button is pressed, the screen mode changes in the following order.

→ Normal screen
3-SEARCH screen ← 9-SEARCH screen ←

① 9-SEARCH screen

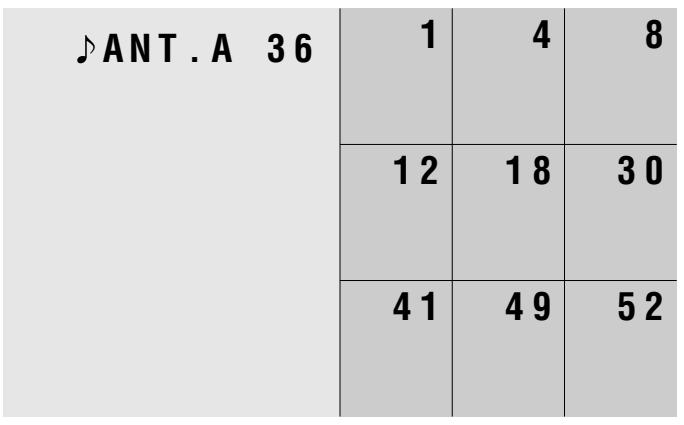

Main picture Search picture

- On the search picture, the antenna A preset channel will be displayed as a frozen image. If 9 or more channels have been preset, the screens will automatically be switched and displayed.
- The search picture cannot be operated.
- If the channel or input source is changed, SEARCH screen mode will turn off.

② 3-SEARCH screen

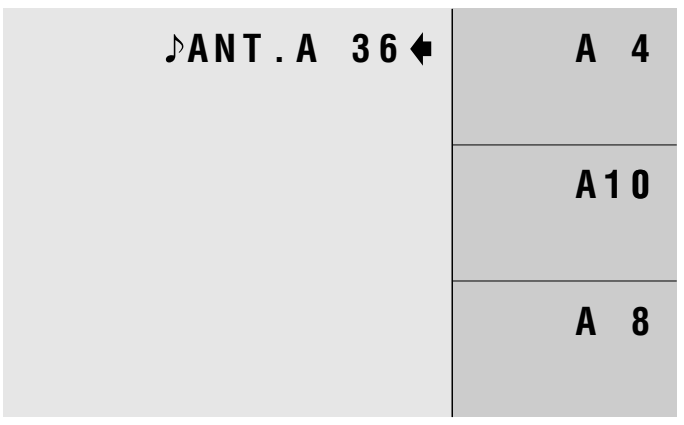

Main picture Search picture

- Press the SELECT button to select the image that you wish to switch the channel or input source to. You can operate the screen that is selected by the yellow arrow. (Use only the selector buttons, direct channel selection buttons if channel, antenna or CH +,– buttons.)
- Sound output is limited to the main picture.

■ MULTI-POINT CONVERGENCE ADJUSTMENT

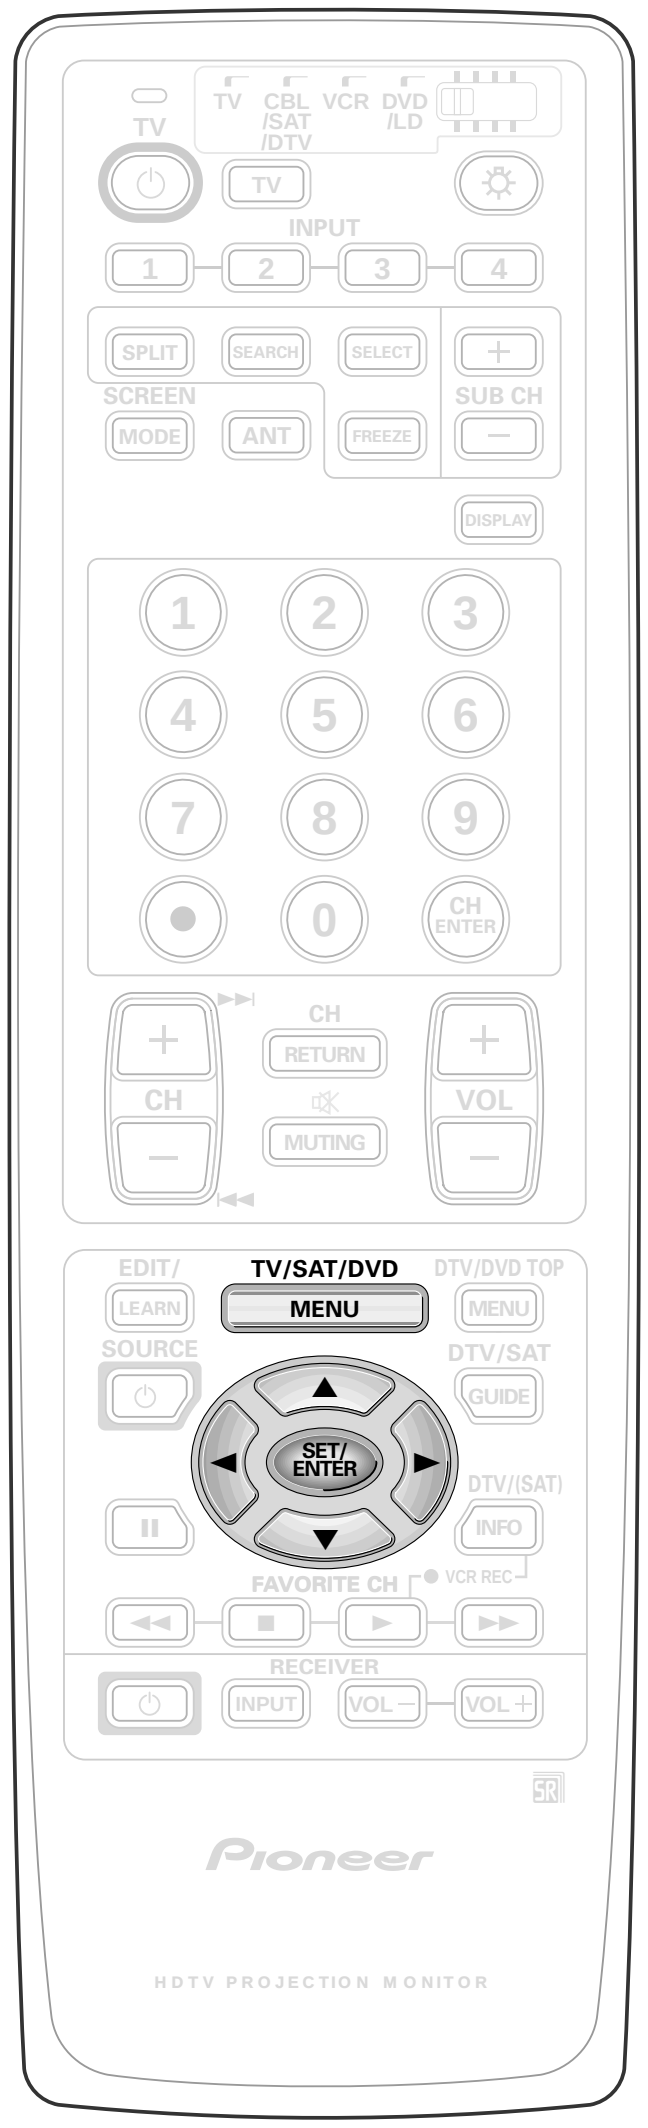
TV
TV
CBL /SAT /DTV
VCR
DVD /LD
TV
INPUT
1
2
3
4
SPLIT
SEARCH
SELECT
SCREEN
MODE
ANT
FREEZE
SUB CH
DISPLAY
1
2
3
4
5
6
7
8
9
0
CH ENTER
CH
RETURN
MUTING
CH
VOL
EDIT/
LEARN
TV/SAT/DVD
MENU
DTV/DVD TOP
MENU
SOURCE
DTV/SAT
GUIDE
SET/ ENTER
DTV/(SAT)
INFO
FAVORITE CH
VCR REC
RECEIVER
INPUT
VOL −
VOL +
Pioneer
HDTV PROJECTION MONITOR

Convergence adjustment may be fined-tuned here.

1. Press MENU and select SET UP by using the ▲ or ▼ button and then pressing SET/ENTER.

2. Adjust the center point convergence.

3. Select ADJ MULTI-POINT .

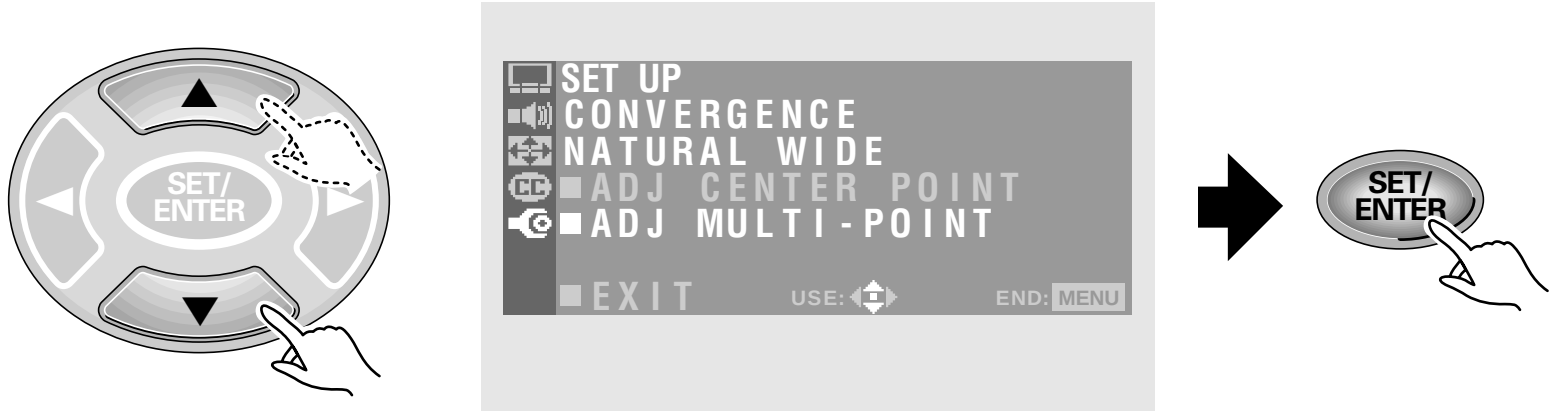
SET/ ENTER
SET/ ENTER

SET UP
CONVERGENCE
NATURAL WIDE
■ADJ CENTER POINT
■ADJ MULTI-POINT
■EXIT USE: END: MENU

4. Select the adjust point.

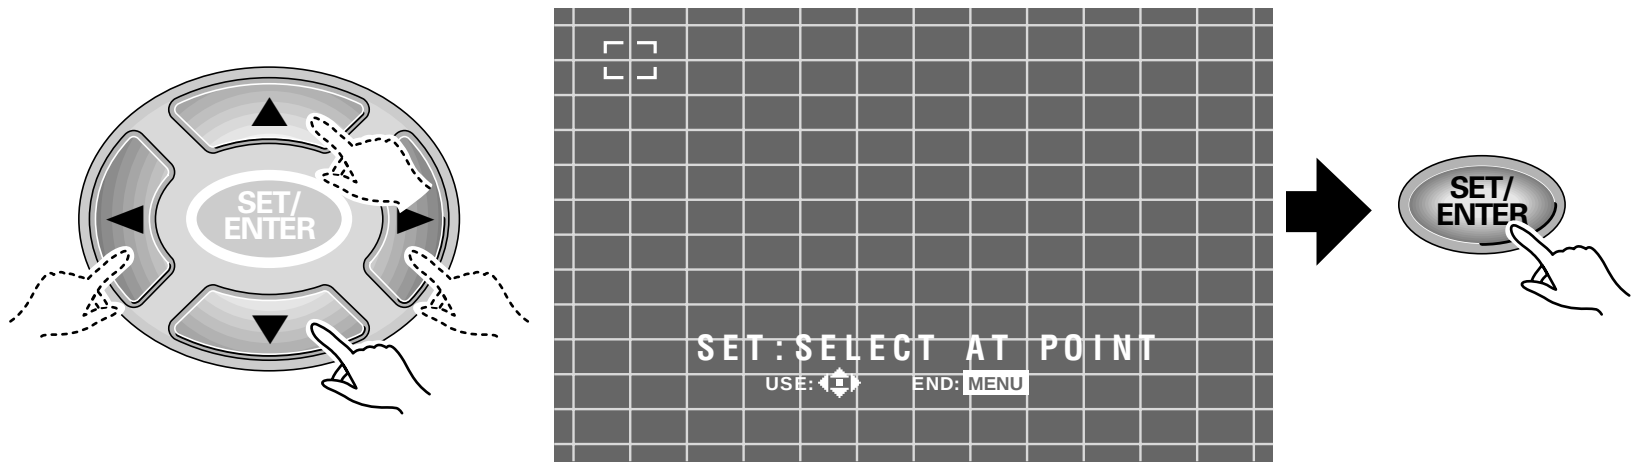
SET/ ENTER
SET/ ENTER

SET:SELECT AT POINT
USE: END: MENU

5. Adjust the red line.

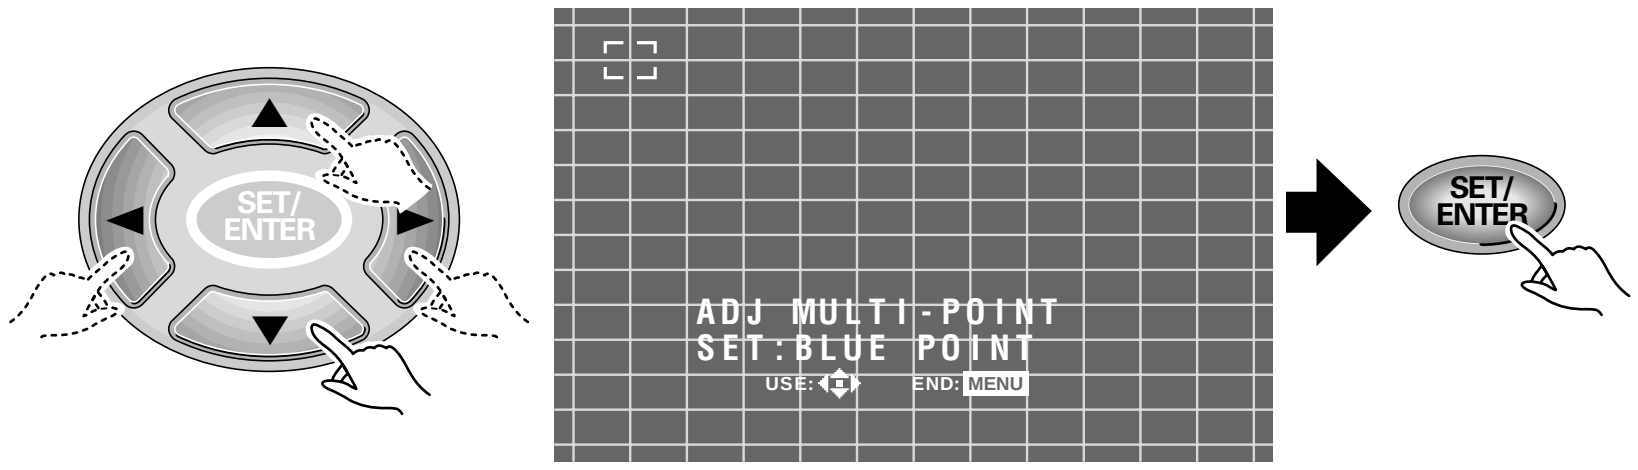
SET/ ENTER
SET/ ENTER

ADJ MULTI-POINT
SET:BLUE POINT
USE: END: MENU

6. Adjust the blue line.

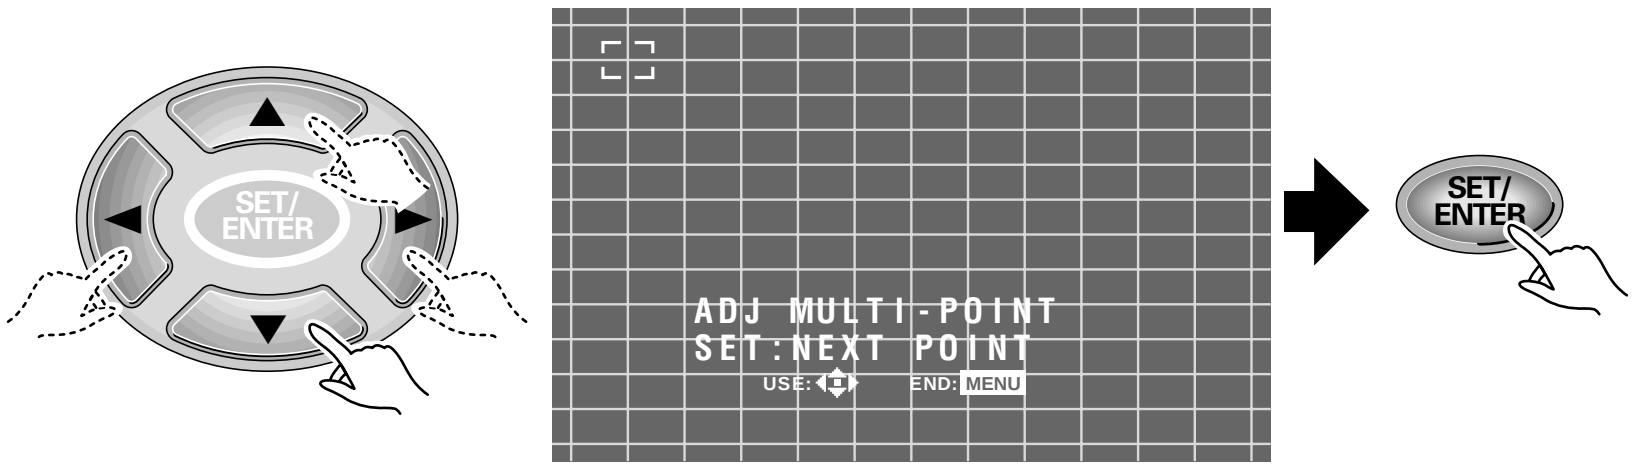
SET/ ENTER
SET/ ENTER

ADJ MULTI-POINT
SET:NEXT POINT
USE: END: MENU

- The brackets which shows the adjusting point will move in order. Move to the next point to be adjusted, and repeat steps 4 to 6.

7. After completing the convergence adjustment, press MENU to turn the menu off.


TV/SAT/DVD
MENU

NOTES:

- The number of adjustment points varies according to the screen mode. The cursor is partially invisible around the edge of the screen according to the screen mode.
- It is not possible to adjust all these points (points of change on the cross-hatch).
- Some of the cross-hatch lines are not straight, but this is not a malfunction. They are not always straight on a normal TV.

■ SPECIAL NOTES

● Picture Adjustments

MOVIE or GAME mode may not selected when receiving RGB input.

GAME mode setting:

- All signals output from the Projection Monitor will be unaffected. Only the original output signal is sent through the output jacks.

Picture Quality setting:

- The COLOR, TINT, and SHARPNESS settings may not be changed when receiving RGB input.
- When RLS is LVL1 or LVL 2, CONTRAST, BLACK LVL and COLOR cannot be adjusted.
- When picture quality has been adjusted, the user mode data will be overwritten with the new settings.

Other Picture Quality setting:

- Only the COLOR TEMP settings may be changed when receiving RGB input.

PURECINEMA adjustment:

- Normally, this function should be set to “HQ” (High Quality), however, occasionally this setting may cause slight syncopation problems with the audio track. If you are bothered by this, select “STD” (Standard) or “OFF”. If “OFF” is selected, normal progressive signal processing is performed.

● Sound Adjustments

BASS, TREBLE and BALANCE are SPEAKER mode settings, which can only be adjusted when mode is NORMAL.

Surround Mode setting:

- This function cannot be used when the SPEAKER mode is CENTER IN or when the SPEAKER mode is OFF and AUDIO OUT mode is FIXED.
- The surround effect cannot be obtained with mono sound.
- In some cases, the surround effect may be minimal.

● Connection with Receiver (1)

Speaker and AUDIO OUT Setting:

- After the speaker mode is set to CENTER IN, the volume of the center speaker should be controlled from this monitor.
- If AUDIO OUT is set to VAR and the sound is distorted, lower the Monitor volume.

● Connection with Receiver (2)

System Mode ON:

- The input cannot be switched even if you press the Input selector button of the remote control unit.
- On the sub-picture of a SPLIT screen, only the input signal from the antenna can be displayed.
- The SEARCH screen function will not be operable.
- No signal will be output from the AUDIO OUTPUT terminal.
- Setting SYSTEM MODE ON will cause RGB input signals to not be displayed.

● Changing Screen Mode

- When 1080i component signals or RGB signals are input, SCREEN MODE will be limited to FULL.

8. PANEL FACILITIES AND SPECIFICATIONS

A flip-down door conceals the INPUT 4 jacks. Push gently and release, to open the door. To close the door, lift it back up into place.

NOTE:
If you accidentally pull the door, it may not shut properly. Push the door back in to shut it.

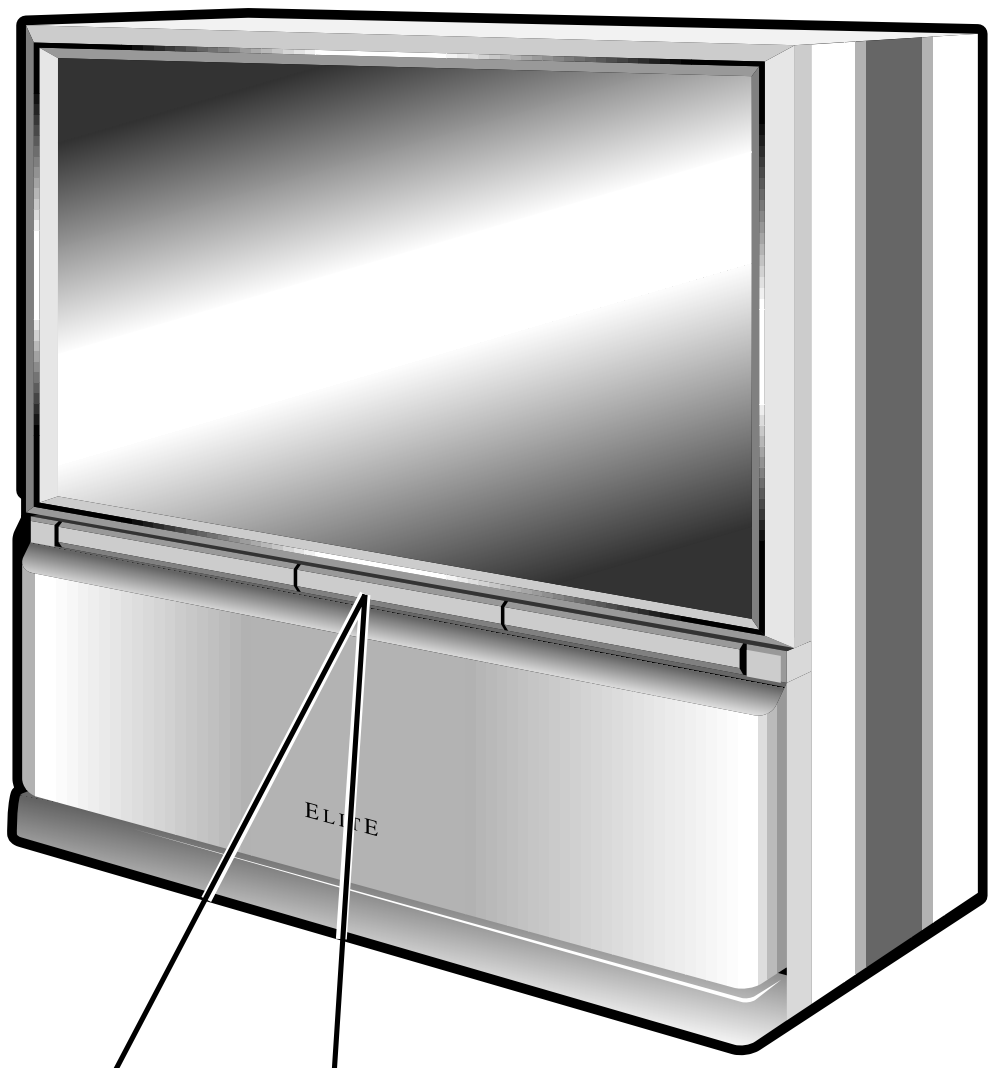

① POWER STANDBY/ON indicators

red: STANDBY
green: ON

② ROOM LIGHT SENSOR (RLS)

Sensor to detect the room brightness.

③ MAIN POWER Ⓘ (OFF/ON) button

If the button is OFF, the power of the monitor is shut off and ④ STANDBY/ON button on the receiver or TV power on the remote control will not function. Pressing the button again will turn the monitor ON and the monitor enters the standby mode. In the standby mode, you can turn on the monitor using the ④ STANDBY/ON button on the monitor or TV power on the remote control.

④ POWER (⏻ STANDBY/ON) button

Switches the monitor between on and standby (note that the monitor consumes a small amount of power (0.3 W) in standby mode.

⑤ INPUT SELECT button

Press to select your program source. Each press of the INPUT SELECT button changes the selection to the next source.

→ TV → INPUT 1 →
INPUT 4 ← INPUT 3 ← INPUT 2 ←

While the menu is displayed, it performs the same operation as the SET/ENTER button on the remote control.

⑥ CHANNEL buttons

Press plus (+) or minus (–) to tune to a higher or lower channel. Only the preset channels can be tuned in using these buttons.

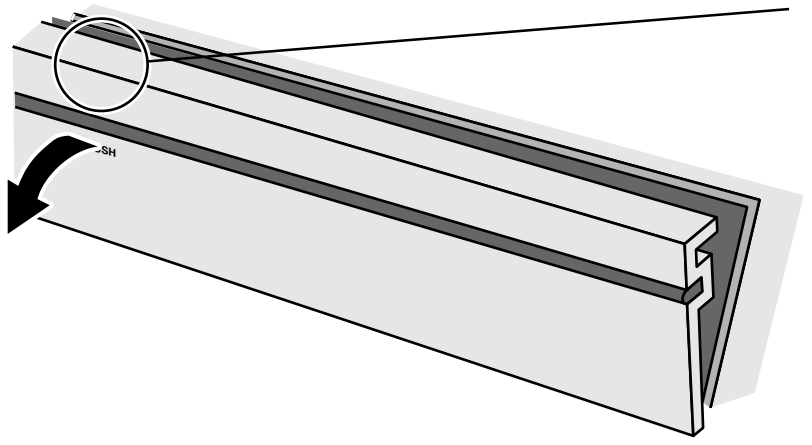

In some cases, the door may only open slightly when pushed. In such cases, open the door with your finger as shown in the figure at left.

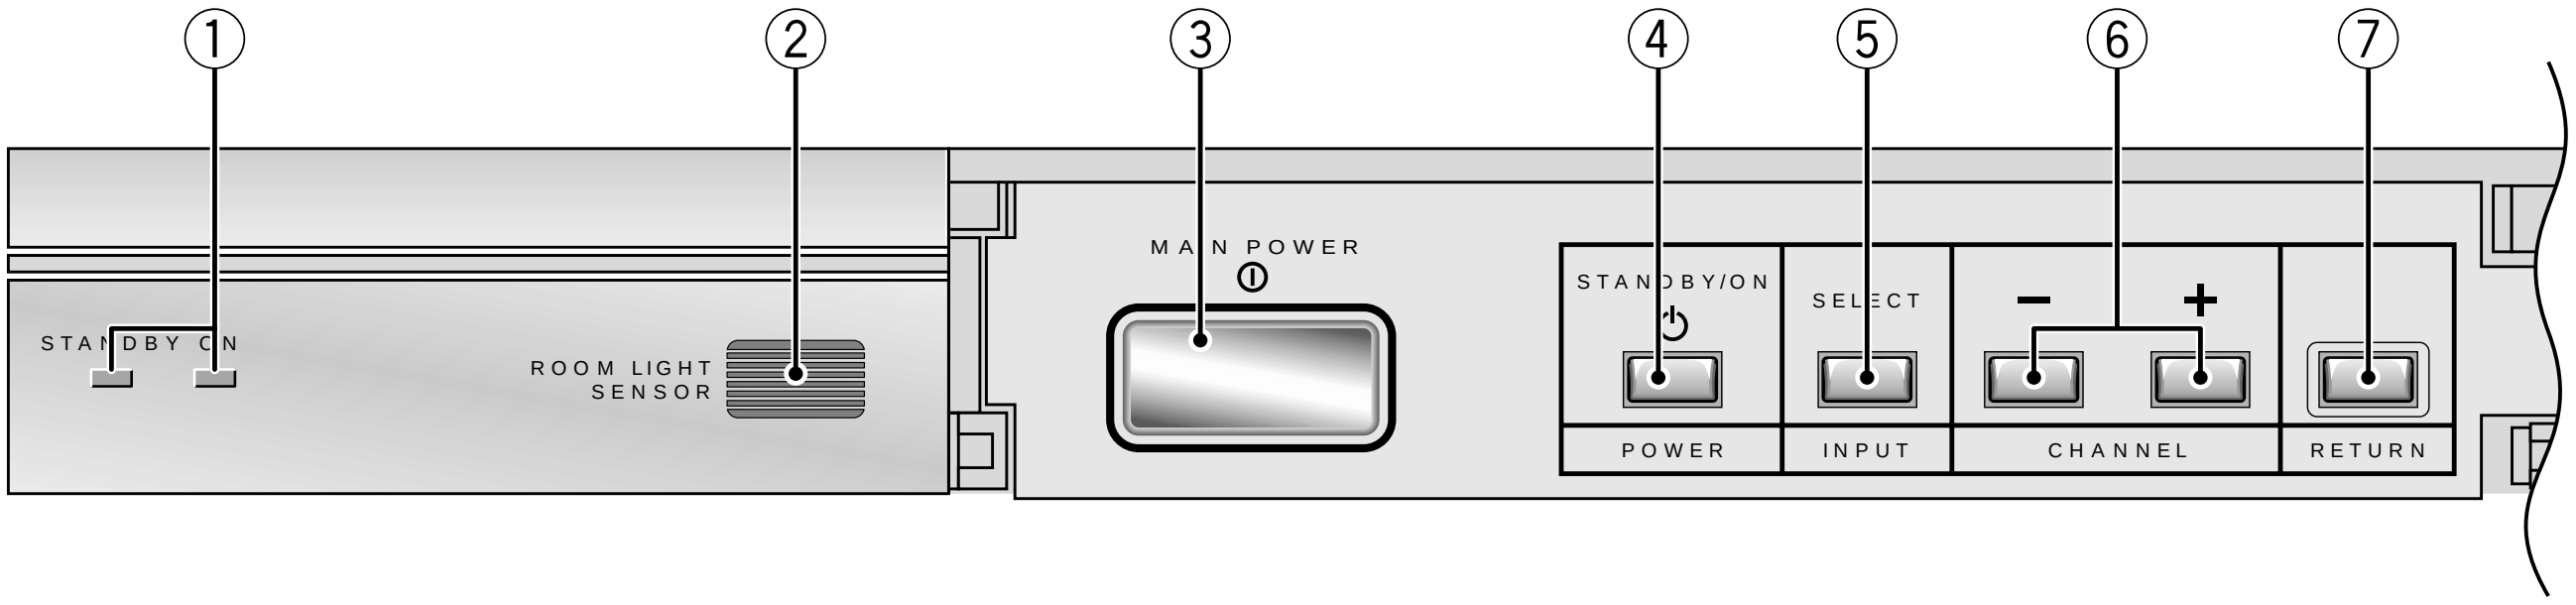

⑦ RETURN button

Press to set the Projection Monitor to its initial mode.

Initial mode

- Input selector: Set to TV.
- TV channel: Remains at the last channel set.
- VOLUME: Remains at the last setting.
- MUTING: OFF
- PICTURE
  - MODE: STD
  - Parameters: Set to 0.
  - 3D Y/C LEVEL: 3
  - 3D NR LEVEL: 3
  - COLOR TEMP: STD
  - FLESH TONE: ON
  - PURECINEMA: HQ
  - BLK ENHANCE: ON
  - SVM: HIGH
- SOUND
  - MTS: MAIN
  - Parameters: Set to 0.
  - SURROUND: OFF
  - SUPER BASS: OFF
- SCREEN
  - MODE: NATURAL WIDE
  - V. POSITION: Set to 0
- CC: OFF
- RLS: OFF
- SYSTEM IN/OUT
  - SPEAKER: NORMAL
  - AUDIO OUT: FIXED
  - SYSTEM MODE: OFF

- When this button is pressed while adjusting the MULTI-POINT convergence, the MULTI-POINT convergence returns to the initial mode.

⑧ VOLUME buttons

Press plus (+) button to increase the volume, press minus (–) button to decrease it.

⑨ INPUT 4 jacks

These inputs are for Video Movie and VCR. Use RCA-type pin plug cords (the same as those used in Hi-Fi systems) and S-VIDEO cords for connections. When the audio source to be connected is mono, connect the source to the L-(MONO) jack.

CAUTION:

Do not press any operation button on the Projection Monitor or the remote control unit while recording. Signals from the MONITOR OUTPUT jacks may be temporarily interrupted when a button is pressed.

ATTENTION

The Projection Monitor Receiver will not function properly in the following cases.

- An electrical discharge in the CRT.
- Lightning storms.
- High static electricity environment.
- Poor voltage regulation in the power source.

If the Projection Monitor does not operate properly, reset it as follows:

1. Turn off the power of the unit with the ③ MAIN POWER button.
2. After approximately 1 minute, turn on the power with ③ MAIN POWER button and ④ POWER (⏻ STANDBY/ON) button.

If the normal operation cannot be restored after the above treatment, immediately unplug the power cord and call your nearest PIONEER-authorized service center.

NOTES:

- On rare occasions, an electrical discharge may occur inside the CRT*. It makes a short, sharp pop and either no sound is produced or the volume level changes by itself. The SPLIT screen and SEARCH screen functions will be cancelled automatically if an electrical discharge occurs when this function is engaged.
  *CRT: Cathode-ray Tube
- When an electrical discharge distorts the screen and the TV power has been automatically shut off, it can turn on.
  If you notice any abnormality of the screen, turn off the MAIN POWER button for a few minutes then turn it on.
  This is not a malfunction.

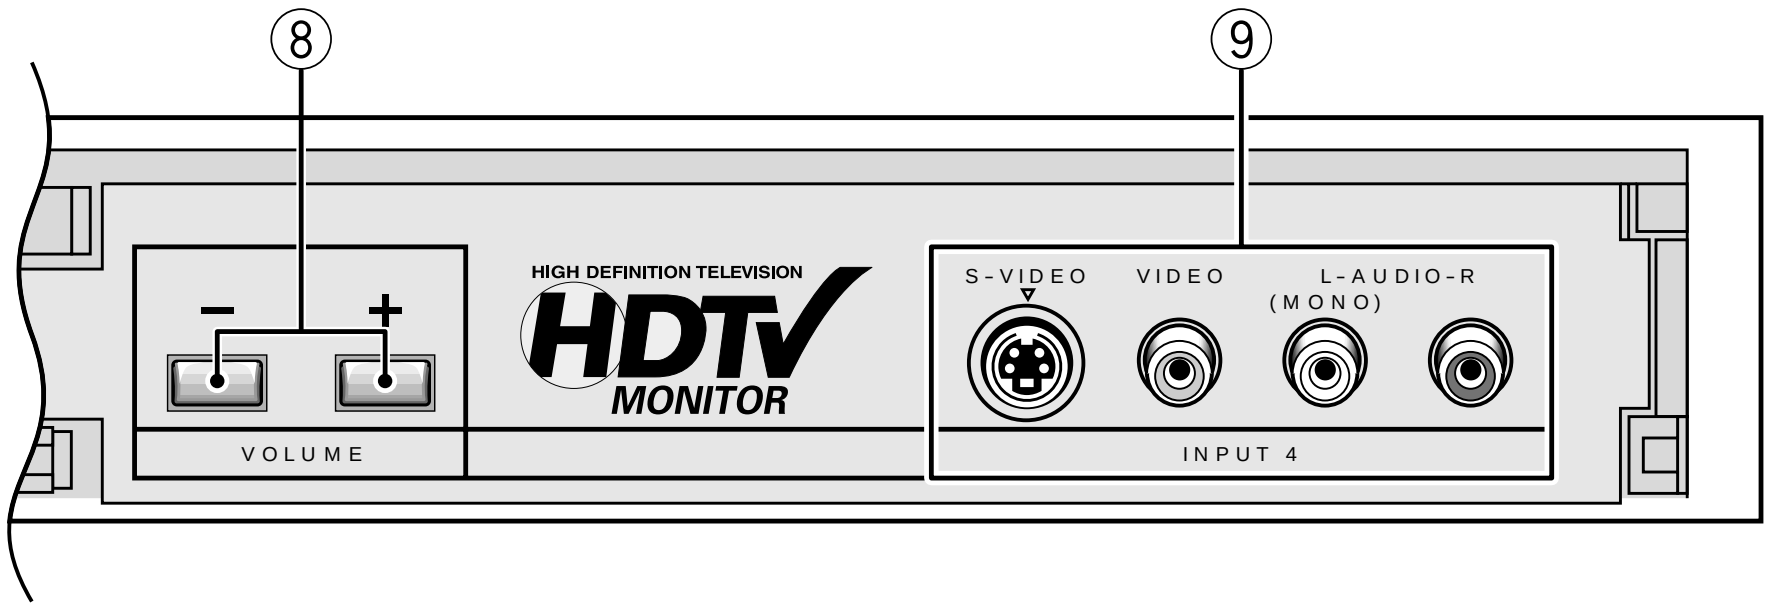

■ REMOTE CONTROL UNIT (AXD1458)

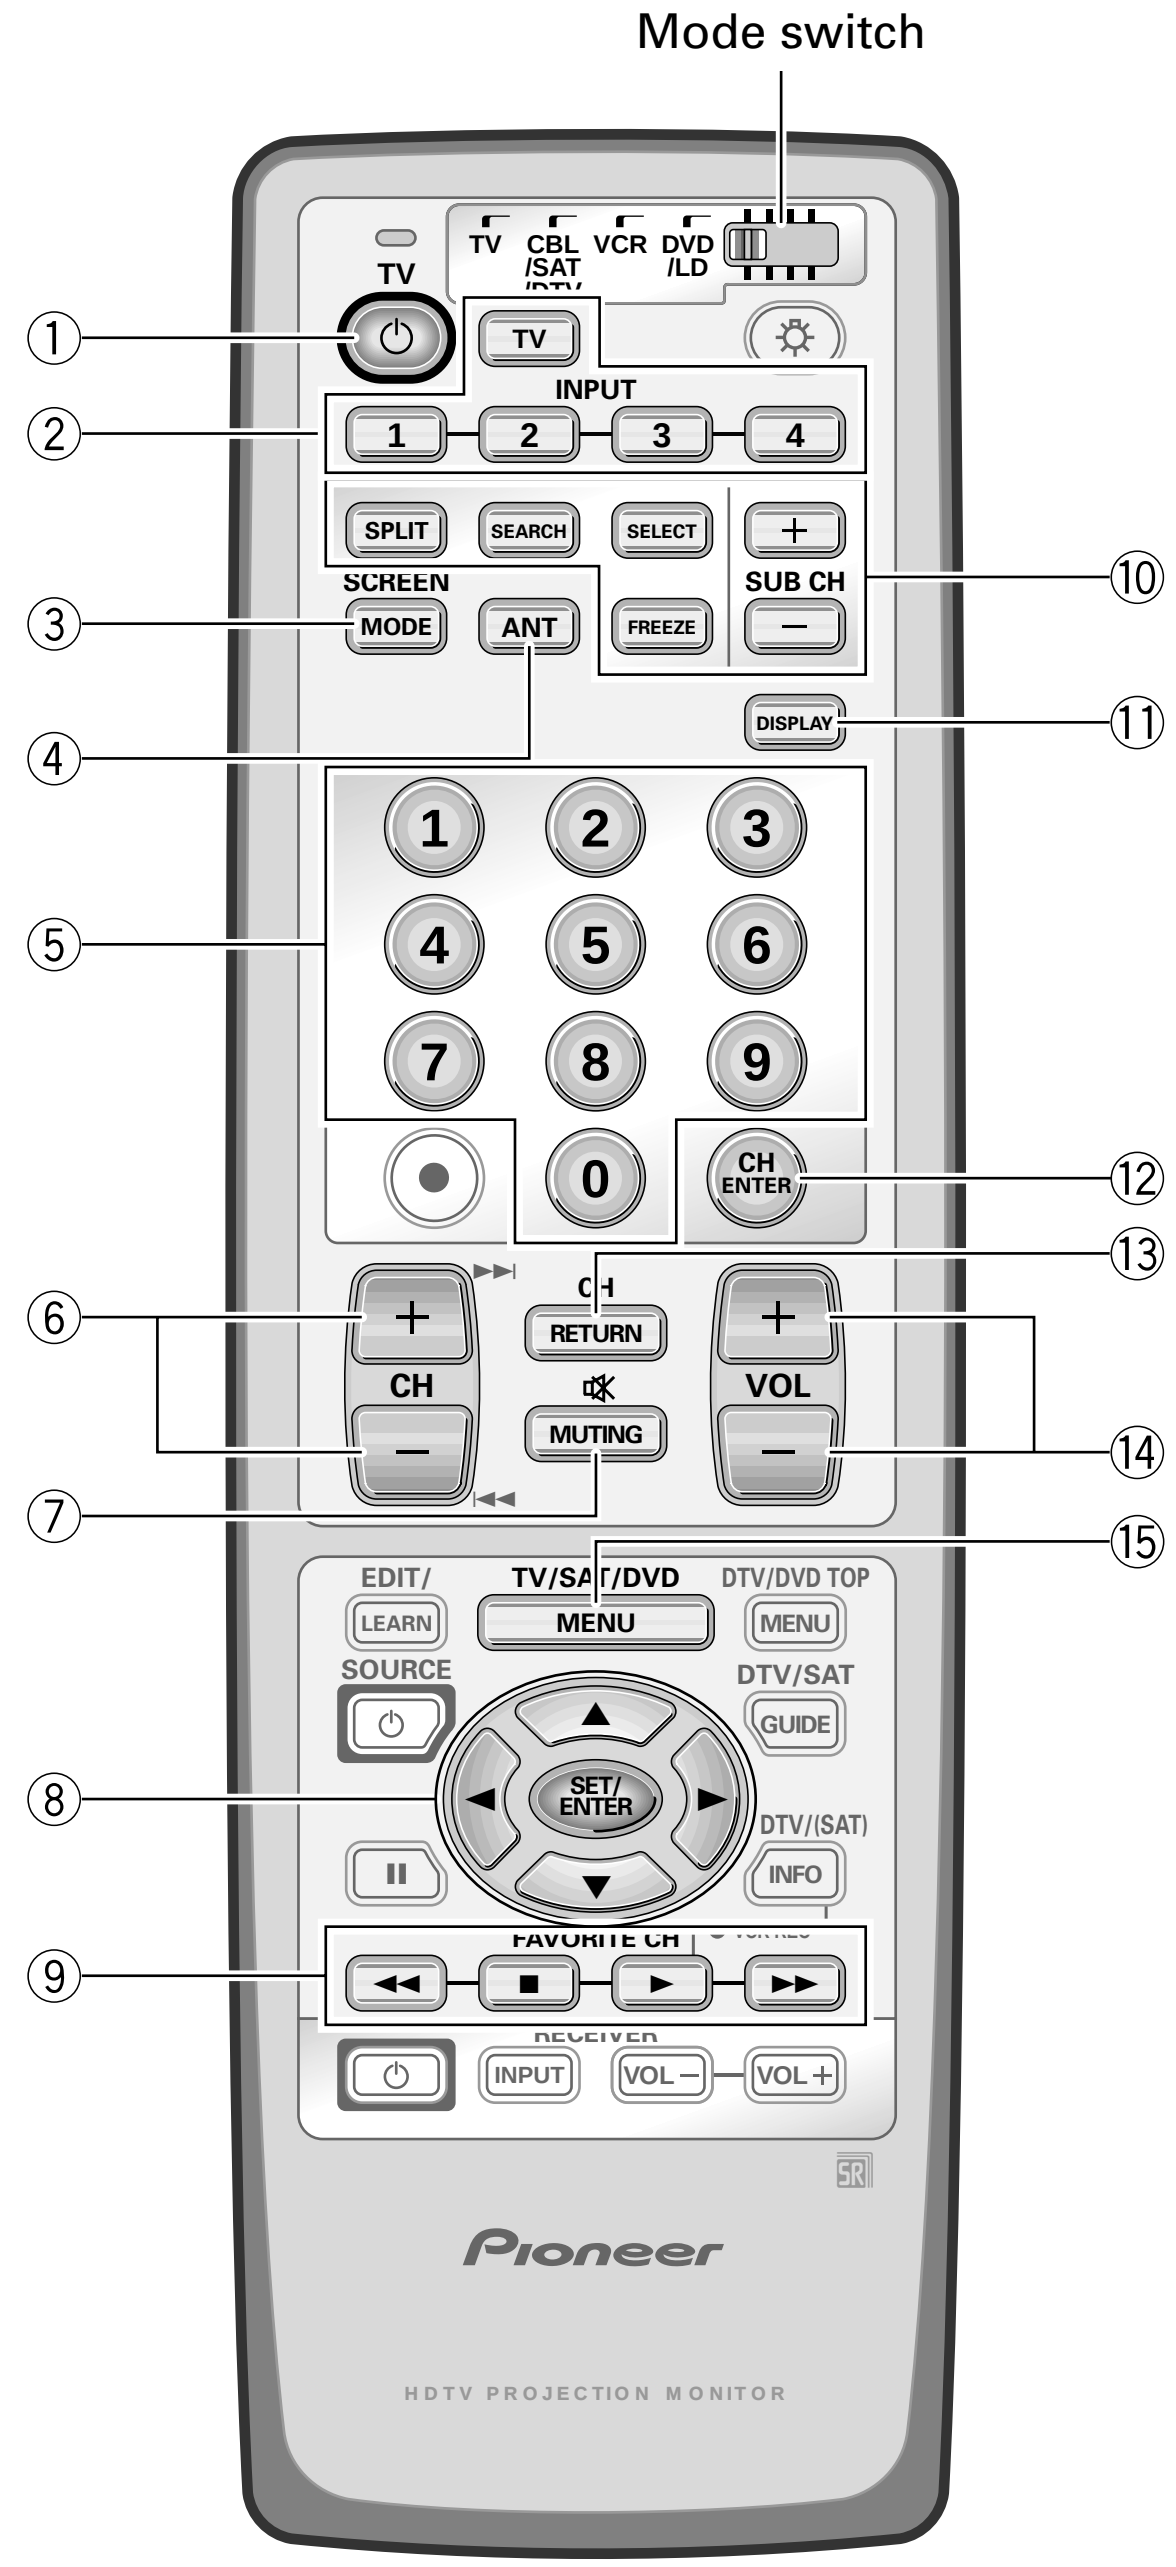
Mode switch
①
②
③
④
⑤
⑥
⑦
⑧
⑨
⑩
⑪
⑫
⑬
⑭
⑮
TV
CBL /SAT
VCR
DVD /LD
TV
INPUT
1
2
3
4
SPLIT
SEARCH
SELECT
+
SCREEN MODE
ANT
FREEZE
SUB CH
–
DISPLAY
1
2
3
4
5
6
7
8
9
0
CH ENTER
CH
RETURN
MUTING
VOL
EDIT/ LEARN
TV/SAT/DVD MENU
DTV/DVD TOP MENU
SOURCE
DTV/SAT GUIDE
SET/ ENTER
DTV/(SAT) INFO
FAVORITE CH
RECEIVER
INPUT
VOL –
VOL +
Pioneer
HDTV PROJECTION MONITOR

Set the mode switch to TV.

① ⏻ TV Power button (STANDBY/ON)
Turns the power of the monitor on and off.

② INPUT Selector buttons (TV, INPUT 1 to INPUT 4)
Press the button to select the source you wish to watch. The screen will display your selection.

③ SCREEN MODE button
Press to select the SCREEN MODE.

④ ANT (antenna selector) button
Press to switch between ANTENNA-A and ANTENNA-B when you wish to watch TV.

⑤ Direct channel selection buttons
Press the button (or buttons) that corresponds to the channel that you wish to watch.

⑥ CH (channel) +, – button
Press plus (+) or minus (–) to tune in a higher or lower channel. Only the preset channels can be tuned in using these buttons.

⑦ MUTING button
Press to temporarily turn off the sound. Press again to return to the previous volume level.

⑧ Select/Adjust/Set buttons (SET/ENTER, ◄, ►, ▲, ▼)

◄, ►, ▲, ▼:	Press to select or adjust items on the menu screen.
SET/ENTER:	Press to activate the selected function.

⑨ FAVORITE CH buttons
These buttons call up the channels that have been assigned to them.

⑩ SPLIT/SEARCH screen buttons

SPLIT:	Press to turn the SPLIT screen function on and off.
SEARCH:	Press to select the SEARCH screen mode.
SELECT:	Selects the screen for switching the channel or input source.*
FREEZE:	When this button is pressed with the regular screen, the screen will change to the SPLIT screen and the picture at the time the button was pressed will become the sub-picture, displayed as a frozen image.
SUB CH +, –:	Used to switch the channel for the sub-picture of the SPLIT screen.

⑪ DISPLAY button
Press to display the input source, channel, setting and other screen indicators for a few seconds.

⑫ CH ENTER button
Fix the selected channel with the direct channel selection buttons.

⑬ CH RETURN (channel return) button
Press to switch between the current channel and the channel you were watching immediately before.

⑭ VOL (volume) +, – buttons
Press plus (+) button to increase the volume, press minus (–) button to decrease it.
Volume level will appear on the screen as numbers and a bar graph. The maximum volume level is "63".
The display will disappear from the screen after 2 seconds.

⑮ MENU button
Press to turn on the menu screen for use in function selection.
Press again to return to normal TV screen.

* With the 9-SEARCH screen, the search picture's input source and channel cannot be switched.

■ SPECIFICATIONS

Display and amplifier section

Reception system .... American TV standard NTSC system
Screen size .... 64" (PRO-720HD)
58" (PRO-620HD)
53" (PRO-520HD)
CRT .... 7" High focus CRT x 3
Brightness (White peak) .... 360 Foot-Lambert (PRO-720HD)
380 Foot-Lambert (PRO-620HD)
450 Foot-Lambert (PRO-520HD)
[White window signal input contrast Max.]
without protective screen
Horizontal resolution ...... More than 1400 lines (PRO-720HD)
More than 1250 lines (PRO-620HD)
More than 1150 lines (PRO-520HD)
[Input digital test pattern (1400 lines resolution)]
Input terminals .... 4 video inputs
4 S-VIDEO input jacks (Y/C separate INPUT)
2 COMPONENT VIDEO INPUT jacks (Y, P_B, P_R)
4 audio inputs
CENTER INPUT jack
Mini D-sub 15 pin INPUT jack (RGB)
BNC VIDEO INPUT jack
BNC COMPONENT VIDEO INPUT jack (Y, P_B, P_R)

NOTE:
INPUT 1 video and component video input can be input to both BNC and RCA type.

Output terminals .... MONITOR, TV, AUDIO
Input terminal signal ratings
Input signal
Video signal:
Composite and S-VIDEO (Y): 1.0 Vp-p (75 ohms load)
COMPONENT (Y): 1.0 Vp-p (75 ohms load)
(P_B, P_R): 0.7 Vp-p (75 ohms load)
Mini D-sub 15 pin (RGB): 0.7 Vp-p (75 ohms load)
Audio signal (including CENTER): 400mV rms
Input impedance .... Video input: 75 ohms
Audio input (including CENTER): 22 kilo-ohms
or more
Input signal polarity (Video) .... Synchronized negative
Output terminal signal ratings
Output signal .... Video signal: 1 Vp-p (75 ohms load)
Audio signal: 500 mV rms (100 % modulation)
Output impedance .... Video output: 75 ohms
Audio output: Less than 1 kilo-ohms
Effective output
Front both channels driven .... 10 W + 10 W
(THD. 1 % 1 kHz, 8 ohms)
Built-in speaker system .... 16 cm (6-5/16 in) full range x 2

Tuner section

Circuit type .... Video signal detection:
PLL full synchronous detection
PLL digital synthesizer system
Audio multiplex: BTSC system
Reception channels .... VHF; CH2~CH13, UHF; CH14~CH69
CATV (STANDARD, IRC or HRC)
CATV 1-125 CH
Antenna terminals .... Antenna terminal, 75 ohms UNBAL,
F-type connector (VHF, UHF MIXED)

Electrical section, miscellaneous

Power requirements .... 120 V AC, 60 Hz
Power consumption
At time of shipment .... 325 W, 600 VA (CSA)
External dimensions
PRO-720HD .... 1510 (W) x 709 (D) x 1425 (H) mm
59-7/16 (W) x 27-29/32 (D) x 56-1/8 (H) inch
PRO-620HD .... 1378 (W) x 675 (D) x 1351 (H) mm
54-1/4 (W) x 26-9/16 (D) x 53-3/16 (H) inch
PRO-520HD .... 1268 (W) x 640 (D) x 1289 (H) mm
49-15/16 (W) x 25-3/16 (D) x 50-3/4 (H) inch

Weight of main unit
PRO-720HD .... 160 kg (352 lb 13 oz)
PRO-620HD .... 138 kg (304 lb 5 oz)
PRO-520HD .... 124 kg (273 lb 7 oz)

Wireless remote control unit

Operation system .... Infrared remote control system
Power source .... Two DURACELL ®"AA" MN1500 1.5 V
ALKALINE dry cell batteries
Dimensions .... 66 (W) x 24.6 (H) x 226.5 (D) mm
2-19/32 (W) x 31/32 (H) x 8-29/32 (D) inch
Weight .... 170 g (4 oz) (without batteries)

Accessories

Operating instructions 1
Warranty card 1
Remote control unit 1
DURACELL® "AA" MN1500 1.5V
Alkaline dry cell batteries 2
Protective screen 1
Panel frame 2
Side frame cover 2
Frame cover 2
Panel frame attaching screw ... 10 (PRO-720HD, PRO-620HD)
6 (PRO-520HD)

NOTE:
Specifications and design are subject to possible modifications without notice due to improvements.

Pioneer sound.vision.soul

Service Manual

ORDER NO.
ARP3095

PROJECTION MONITOR RECEIVER

PRO-720HD
PRO-620HD
PRO-520HD

THIS MANUAL IS APPLICABLE TO THE FOLLOWING MODEL(S) AND TYPE(S).

Type	Model			Power Requirement	Remarks
	PRO-720HD	PRO-620HD	PRO-520HD		
KUXC/CA	○	○	○	AC120V	

● **This service manual should be used together with the following manual(s):**

Model No.	Order No.	Remarks
PRO-720HD PRO-620HD PRO-520HD	ARP3099	ADJUSTMENT, GENERAL INFORMATION, PANEL FACILITIES AND SPECIFICATIONS

CONTENTS

1. SAFETY INFORMATION 2
2. EXPLODED VIEWS AND PARTS LIST 6
3. BLOCK DIAGRAM AND SCHEMATIC DIAGRAM ... 22
4. PCB CONNECTION DIAGRAM 112
5. PCB PARTS LIST 168

PIONEER CORPORATION 4-1, Meguro 1-chome, Meguro-ku, Tokyo 153-8654, Japan
PIONEER ELECTRONICS (USA) INC. P.O. Box 1760, Long Beach, CA 90801-1760, U.S.A.
PIONEER EUROPE NV Haven 1087, Keetberglaan 1, 9120 Melsele, Belgium
PIONEER ELECTRONICS ASIACENTRE PTE. LTD. 253 Alexandra Road, #04-01, Singapore 159936

©PIONEER CORPORATION 2001

T – ZZY SEPT. 2001 Printed in Japan

1. SAFETY INFORMATION

This service manual is intended for qualified service technicians ; it is not meant for the casual do-it-yourselfer. Qualified technicians have the necessary test equipment and tools, and have been trained to properly and safely repair complex products such as those covered by this manual.
Improperly performed repairs can adversely affect the safety and reliability of the product and may void the warranty. If you are not qualified to perform the repair of this product properly and safely, you should not risk trying to do so and refer the repair to a qualified service technician.

WARNING
This product contains lead in solder and certain electrical parts contain chemicals which are known to the state of California to cause cancer, birth defects or other reproductive harm.

Health & Safety Code Section 25249.6 – Proposition 65

NOTICE
(FOR CANADIAN MODEL ONLY)
Fuse symbols (fast operating fuse) and/or (slow operating fuse) on PCB indicate that replacement parts must be of identical designation.

REMARQUE
(POUR MODÈLE CANADIEN SEULEMENT)
Les symboles de fusible (fusible de type rapide) et/ou (fusible de type lent) sur CCI indiquent que les pièces de remplacement doivent avoir la même désignation.

1.1 SAFETY PRECAUTIONS

NOTICE : Comply with all cautions and safety related notes located on or inside the cabinet and on the chassis or picture tube.

The following precautions should be observed :

1. Do not install, remove, or handle the picture tube in any manner unless shatterproof goggles are worn.
   People not so equipped should be kept away while picture tubes are handled.
   Keep picture tube away from the while handling.
2. When service is required, even though the HDTV PROJECTION MONITOR an isolation transformer should be inserted between power line and the set in safety before any service is performed.
3. When replacing a chassis in the set, all the protective devices must be put back in place, such as barriers, nonmetallic knobs, adjustment and compartment covershields, isolation resistor-capacitor, etc.
4. When service is required, observe the original lead dress. Extra precaution should be taken to assure correct lead dress in the high voltage circuitry area.
5. Always use the manufacture's replacement components. Especially critical components as indicated on the circuit diagram should not be replaced by other manufacture's.
   Furthermore where a short circuit has occurred, replace those components that indicate evidence of overheating.
6. Before returning a serviced set to the customer, the service technician must thoroughly test the unit to be certain that it is completely safe to operate without danger of electrical shock, and be sure that no protective device built into the set by the manufacture has become defective, or inadvertently defeated during servicing.
   Therefore, the following checks should be performed for the continued protection of the customer and service technician.

Leakage Current Cold Check

With the AC plug removed from the 120V AC 60Hz source, place a jumper across the two plug prongs. Turn the AC power switch on. Using an insulation tester (DC 500V), connect one lead to the jumpered AC plug and touch the other lead to each exposed metal part (input/output terminals, screwheads, metal overlays, control shafts, etc.), particularly any exposed metal part having a return path to the chassis should have a minimum resistor reading of 0.3MΩ and a maximum resistor reading of 5MΩ. Any resistor value below or above this range indicates an abnormality which requires corrective action. Exposed metal parts not having a return path to the chassis will indicate an open circuit.

Leakage Current Hot Check

Plug the AC line cord directly into a 120V AC 60Hz outlet (do not use an isolation transformer for this check). Turn the AC power switch on.

Using a "Leakage Current Tester (Simpson Model 229 equivalent)", measure for current from all exposed metal parts of the cabinet (input/output terminals, screwheads, metal overlays, control shaft, etc.), particularly any exposed metal part having a return path to the chassis, to a known earth ground (water pipe, conduit, etc.). Any current measured must not exceed 0.5mA.

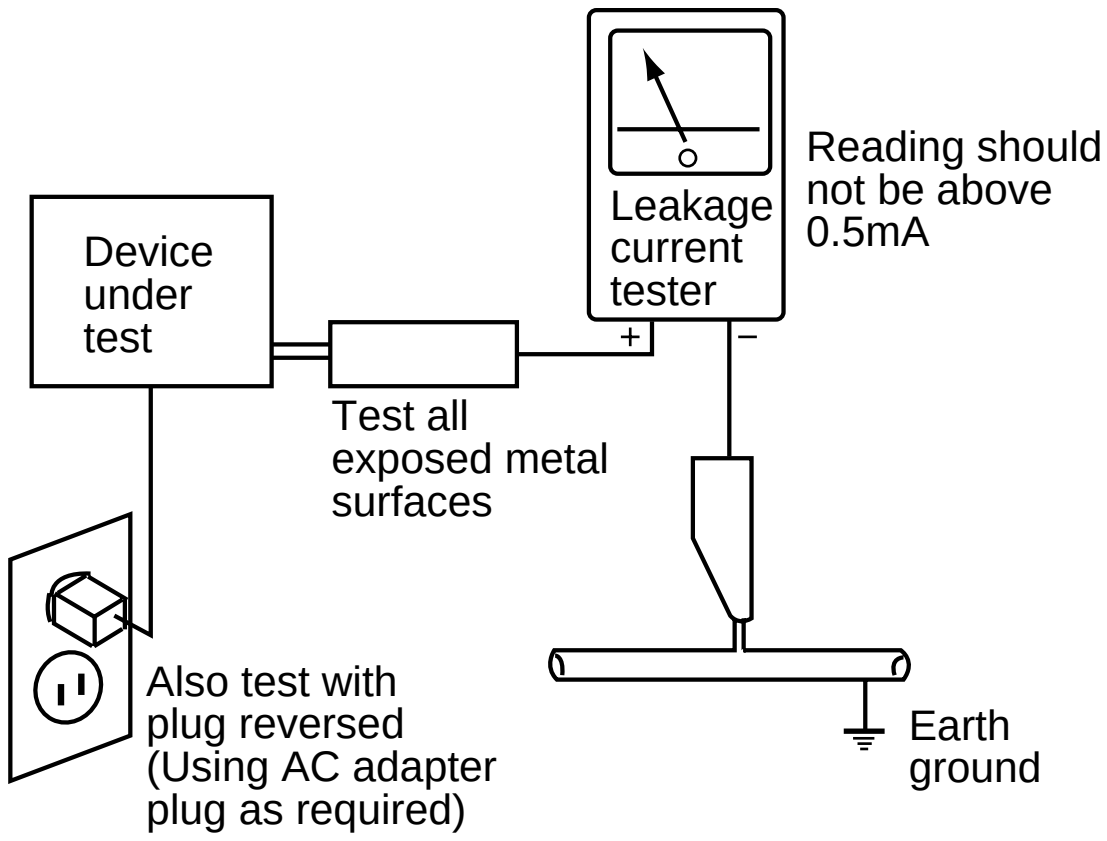
Device under test
Leakage current tester
Reading should not be above 0.5mA
+
–
Test all exposed metal surfaces
Also test with plug reversed (Using AC adapter plug as required)
Earth ground

AC Leakage Test

ANY MEASUREMENTS NOT WITHIN THE LIMITS OUTLINED ABOVE ARE INDICATIVE OF A POTENTIAL SHOCK HAZARD AND MUST BE CORRECTED BEFORE RETURNING THE SET TO THE CUSTOMER.

High Voltage

This set is provided with a X-ray protection for clearly indicating that voltage has increased in excess of a predetermined value. Comply with all notes described in this Service Manual regarding this hold down circuit when servicing, so that this X-ray protection may correctly be operated.

Serviceman Warning

In the status of the black picture (video muting is being applied) when no signal is input, high voltage of this set during operation is less than 30.5kV. In case any component having some relation to the high voltage is replaced, confirm that the high voltage is lower than 30.5kV in the status of the black picture when no signal is input.

To measure H. V. use a high impedance H. V. meter.

Connect (–) to earth and (+) to the FBT anode cable connector. (Refer to section "7.1.2 DISASSEMBLY".)

X-radiation

TUBE : The primary source of X-radiation in this set is the picture tube.

For continued X-radiation protection, the replacement tube must be the same type as the original, PIONEER approved type.

The picture tube (CRT Service Assy R, G, B) used in this set holds complete guarantee against X-ray radiation when the X-ray is sealed (See page 4). Accordingly, when the current in flowing to the picture tube (CRT Service Assy R, G, B), be sure to perform it by putting the tube into X-ray sealed applied state. Avoid absolutely to flow the current to the picture tube (CRT Service Assy R, G, B) itself. Moreover, when the voltage of the high voltage circuit becomes abnormally a little higher, the picture tube radiates X-rays. Accordingly, when servicing the high voltage circuit be sure to replace as an assy with the POWER SUPPLY Assy in the manner in which has been adjusted to perform normal operation.

1.2 PRODUCT SAFETY NOTICE

Many electrical and mechanical parts in PIONEER set have special safety related characteristics. These are often not evident from visual inspection nor the protection afforded by them necessarily can be obtained by using replacement components rated for higher voltage, wattage, etc. Replacement parts which have these special safety characteristics are identified in this Service Manual.

Electrical components having such features are identified by marking with a ⚠ on the schematics and on the parts list in this Service Manual.

The use of a substitute replacement component which dose not have the same safety characteristics as the PIONEER recommended replacement one, shown in the parts list in this Service Manual, may create shock, fire, X-radiation, or other hazards.

Product Safety is continuously under review and new instructions are issued from time to time. For the latest information, always consult the current PIONEER Service Manual. A subscription to, or additional copies of, PIONEER Service Manual may be obtained at a nominal charge from PIONEER.

1.3 CHARGED SECTION, HIGH VOLTAGE GENERATING POINT AND X-RAY PROTECTION

■ Charged section

The circuit in which the commercial AC power is used as it is without passing through the power supply transformer. If the charged section is touched, there is a risk of electric shock. In addition, the measuring equipment can be damaged if it is connected to the GND of the charged section and the GND of the non-charged section while connecting the set directly to the commercial AC power supply. In this case, be sure to connect the set via an insulated transformer and supply the current.

■ Charged section (Power supply primary side)

1. The primary side of the AC IN assy
2. AC power cord
3. The primary side of the POWER SUPPLY assy

☐ : Part is the charged section.
▨ : Part is the high voltage generating points other than the charged section.

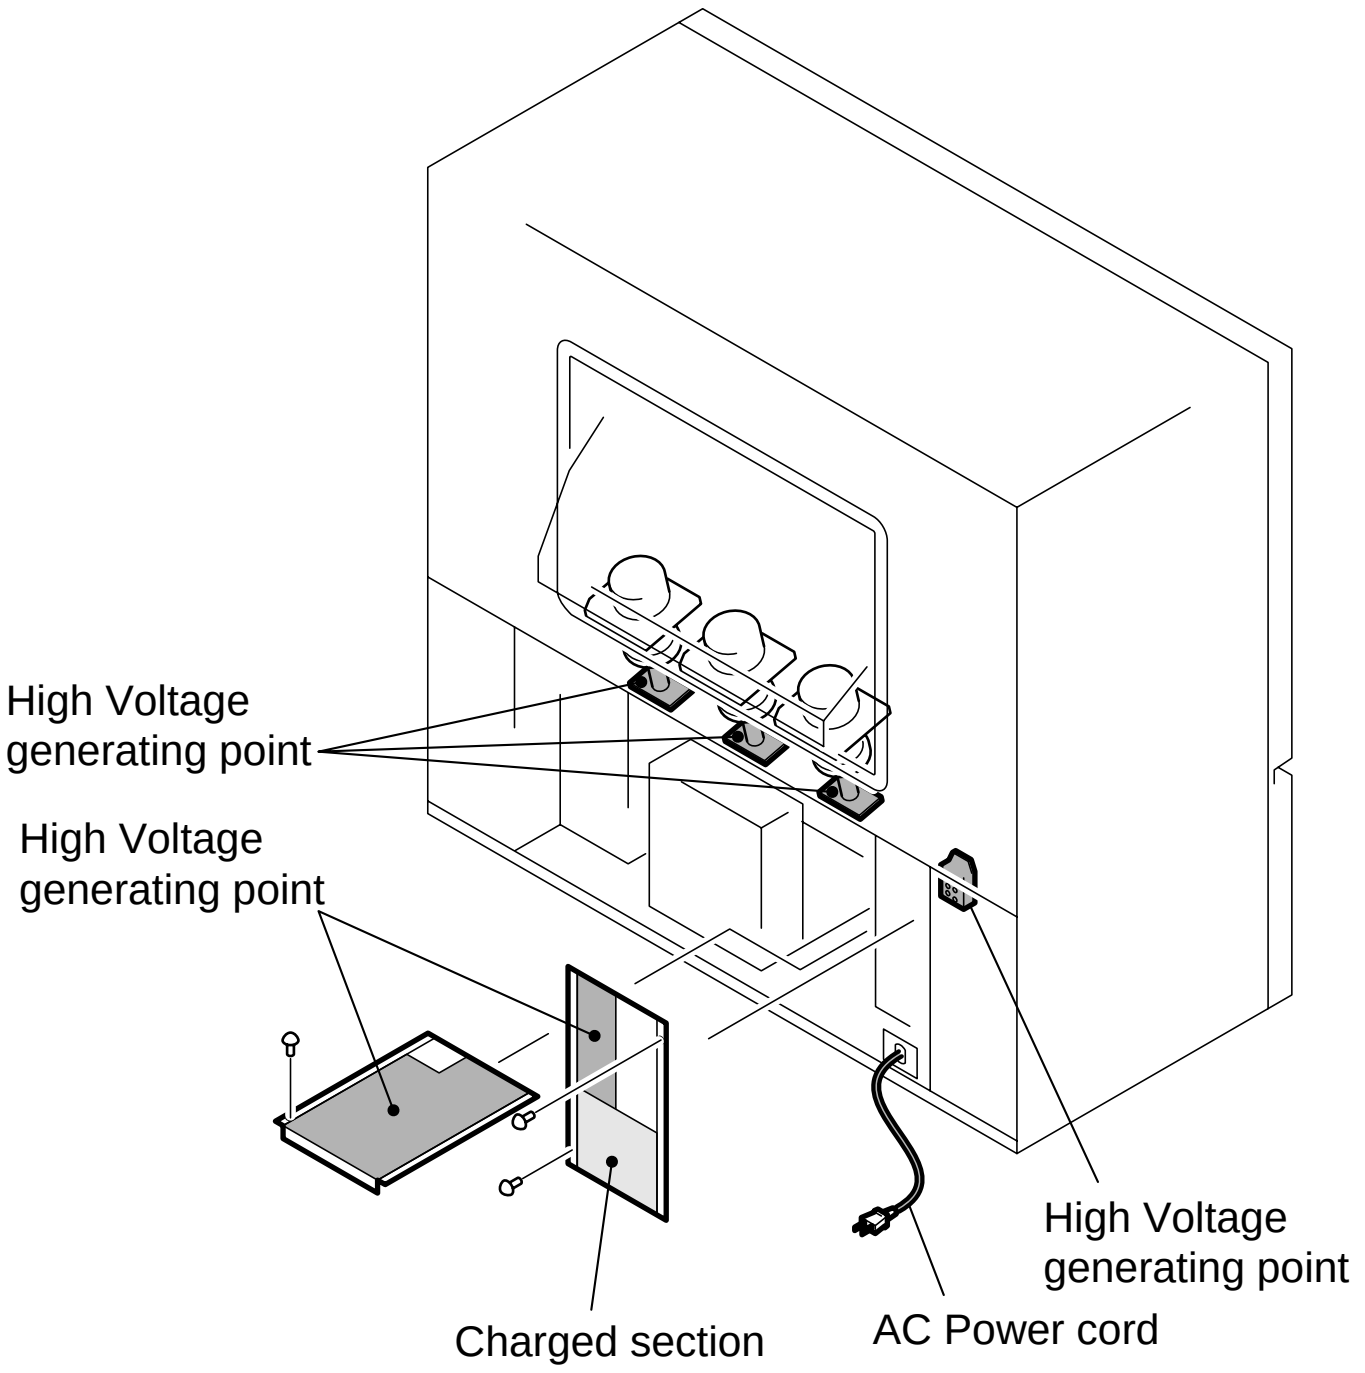
High Voltage generating point
High Voltage generating point
High Voltage generating point
Charged section
AC Power cord

Fig. 1 Charged section and high voltage generating point

■ High voltage generating point

The place where voltage is 100V is generated.

1.Charged seciton
DEFLECTION assy
(including FBT) (30.5kV, 1.2kV, 210V,135V)
2. POWER SUPPLY assy (135V)
3. R. CRT DRIVE assy (10.5kV, 210V)
4. G. CRT DRIVE assy (10.5kV, 210V)
5. B. CRT DRIVE assy (10.5kV, 210V)
6. CRT assy R (CRT service assy R) (30.5kV)
7. CRT assy G (CRT service assy G) (30.5kV)
8. CRT assy B (CRT service assy B) (30.5kV)
9. Focus variable resistor(VR1) (10.5kV)
10. Deflection yokes (L1, L2 and L3) Approx. (1100V at peak)

■ X-ray protection

- Regarding the parts which are relative to radiation of X-rays (There is the danger to radiate X-ray from the individual CRT assy R, G, B), there are notifications of caution in the individual schematic diagrams. Be sure to read them for safety's sake.
- The component parts for X-ray protection are as follows : When the current flows to the CRT assy R, G, B, be sure to perform it with these parts being attached. Protection from the X-ray radiation is maintained in the state in which these parts have been installed to the CRT assy. R, G, B. Accordingly, never supply current only to the CRT assy R, G, B.

  Moreover, the anode voltage of the CRT assy R, G, B should always be kept not higher than the predetermined value (in the minimum brightness and picture state when non signal input is less than 30.5kV). Be sure to drive the CRT assy R, G, B by using a completely functional DEFLECTION assy which have been adjusted completely in the combined state. (When the voltage abnormally becomes high, the X-ray protection circuit will operate.)

1. CRT assy R, G, B (Do not dismantle CRT assemblies under any circumastances)
2. Each Lens assy

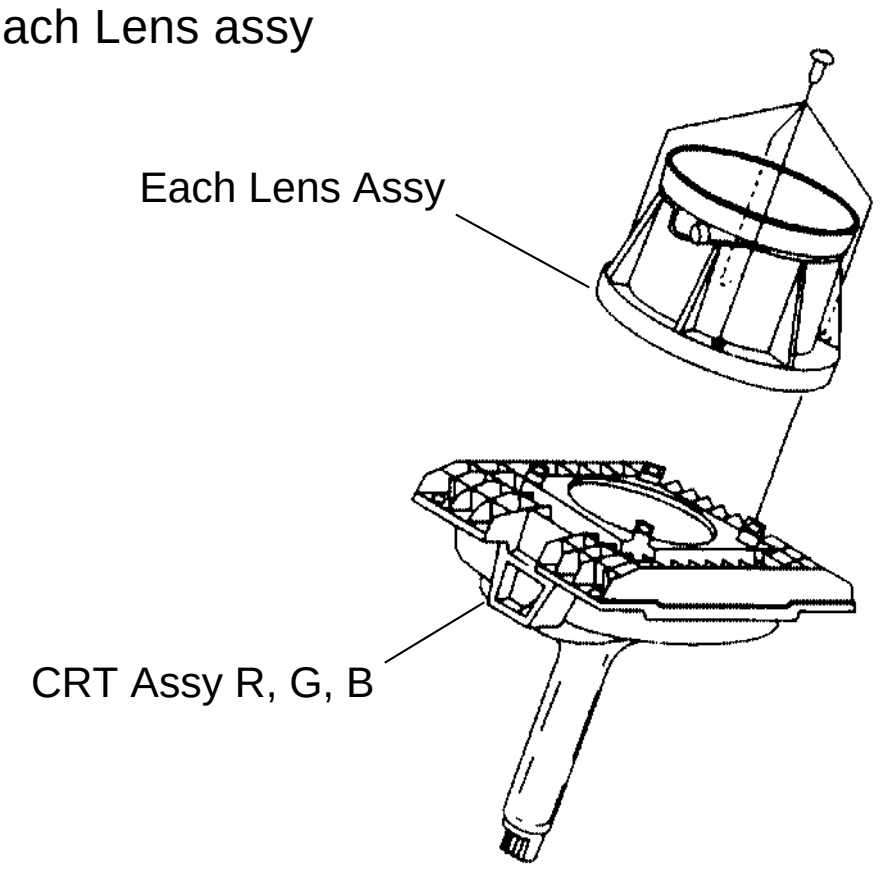

Fig. 2 Component parts for X-ray protection

2. EXPLODED VIEWS AND PARTS LIST

NOTES :
- *Parts marked by " NSP " are generally unavailable because they are not in our Master Spare Parts List.*
- *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
- *Parts marked by ☆ are important parts which relate in X-rays radiation. If any of these parts need to be replaced, always replace with specified parts.*
- *Screws adjacent to ▼ mark on the product are used for disassembly.*

2.1 PACKING

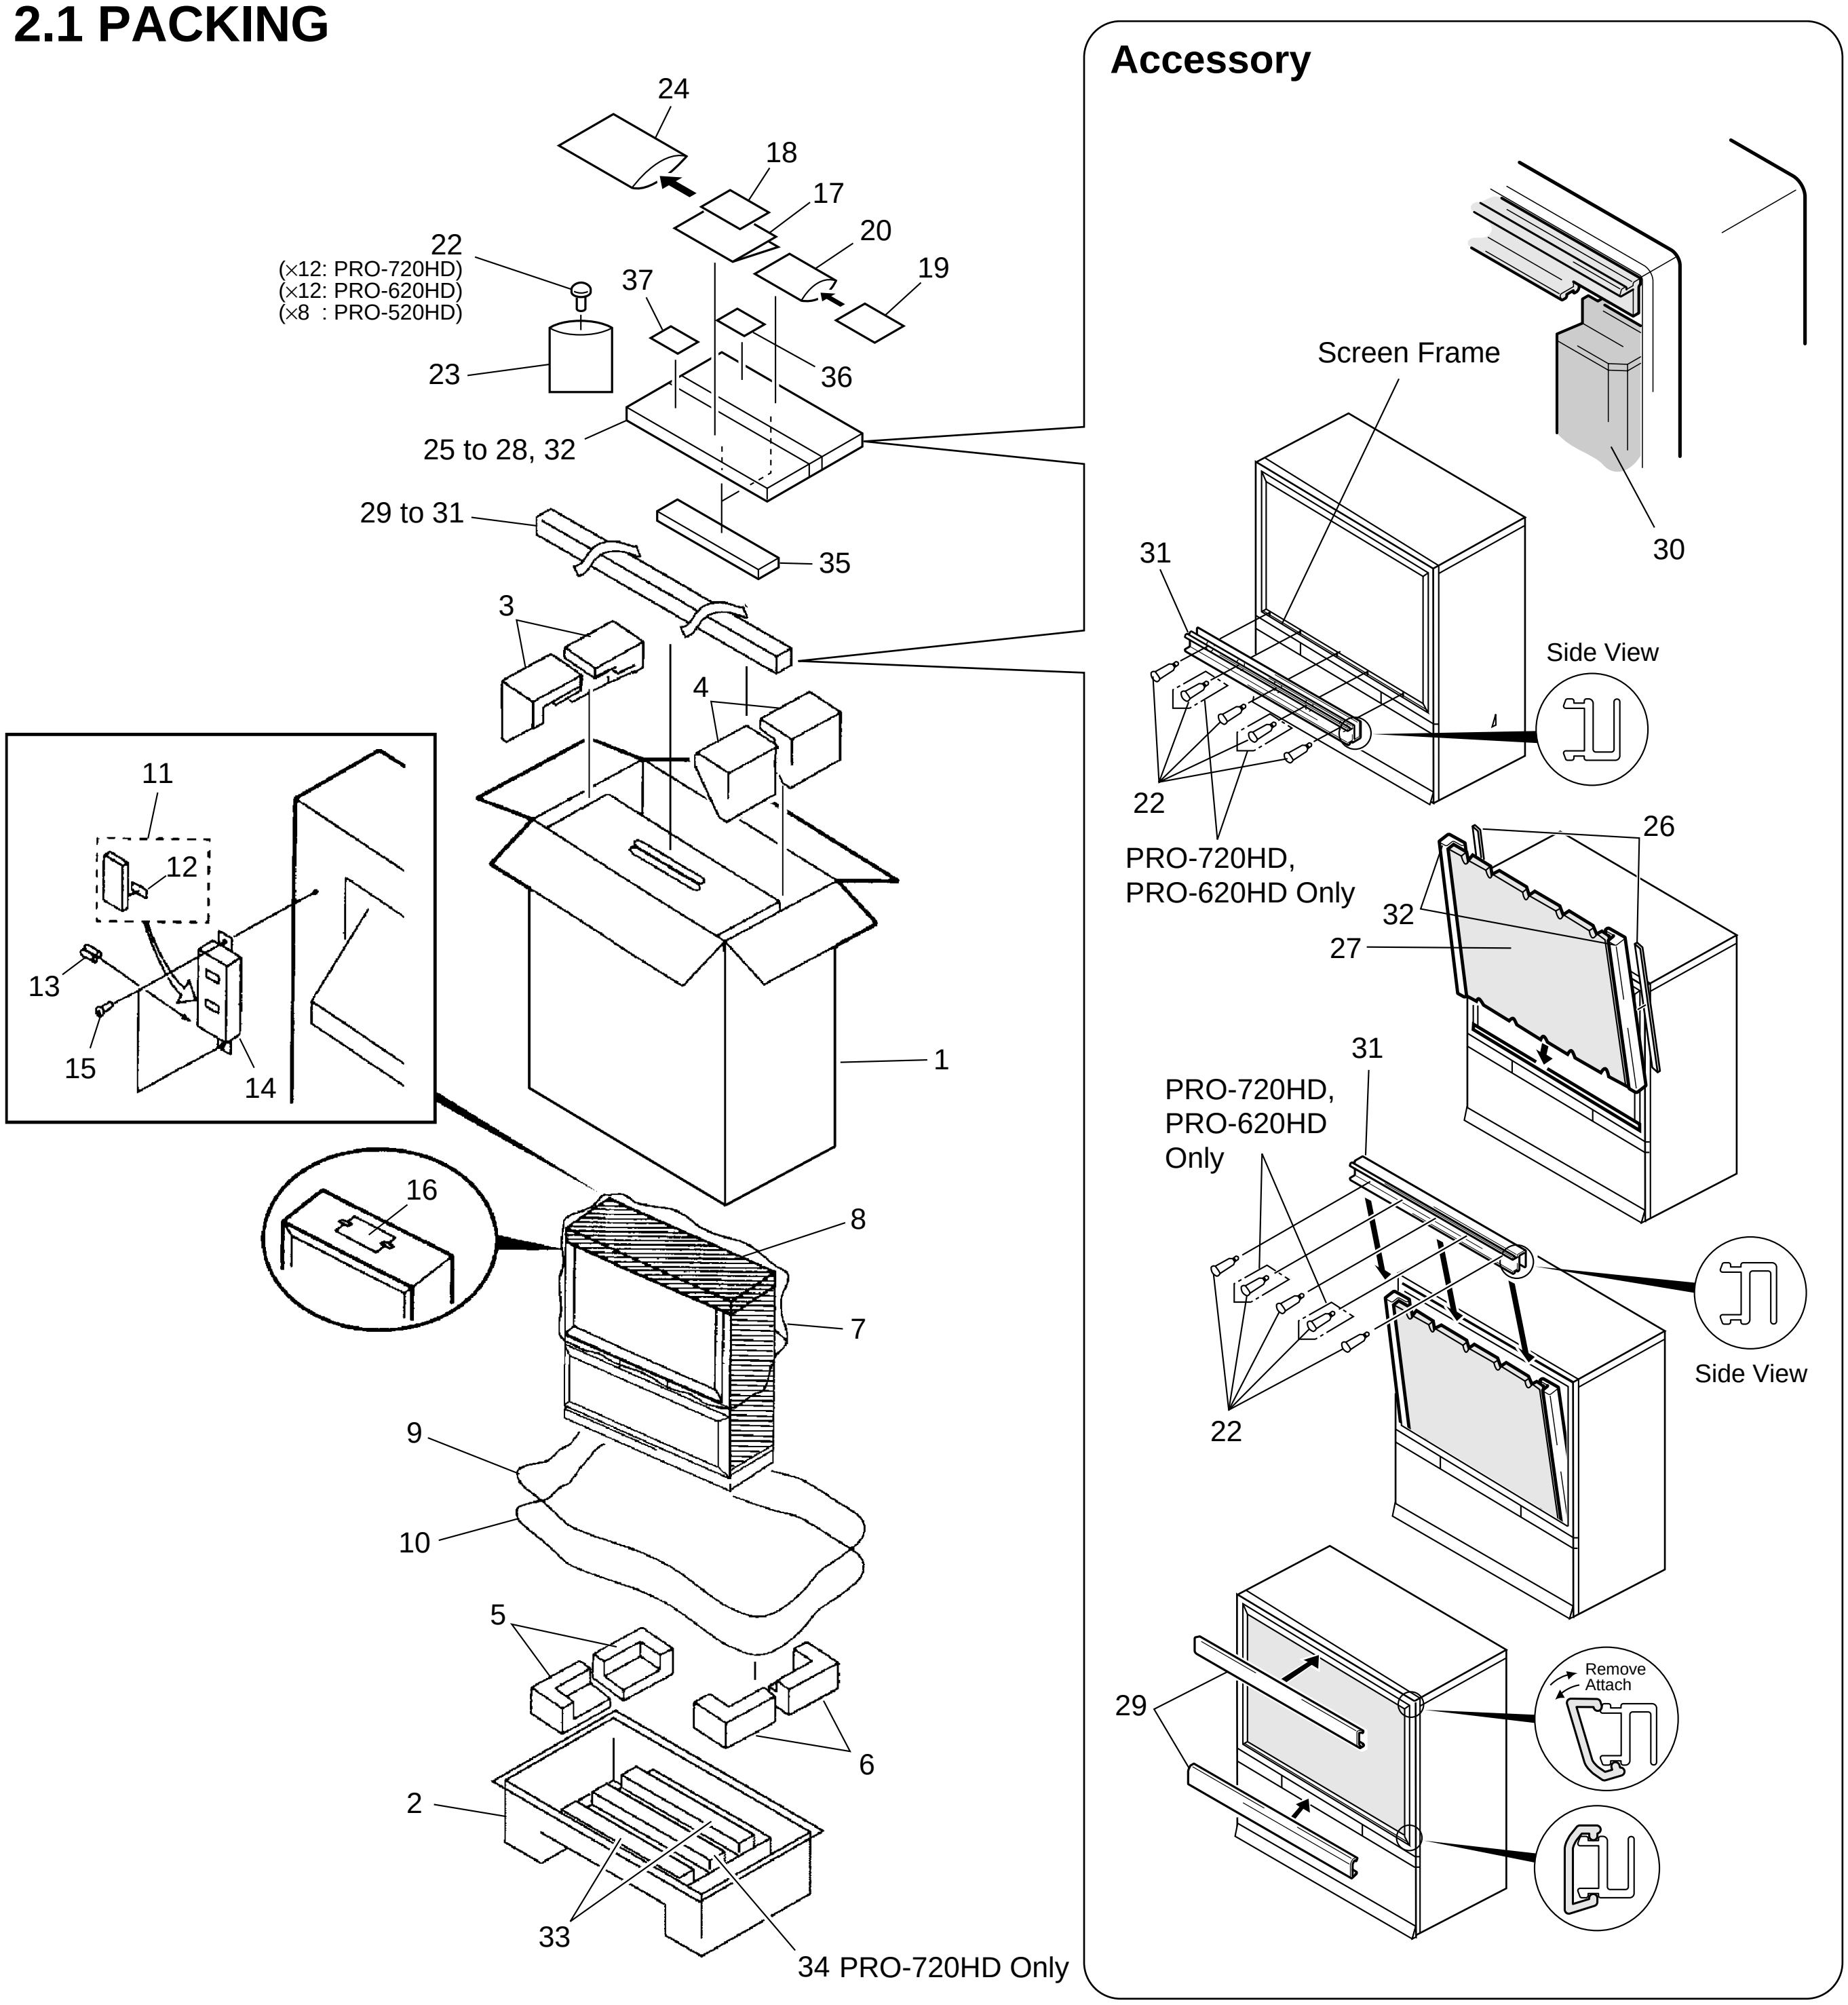
24
18
17
20
19
22
(×12: PRO-720HD)
(×12: PRO-620HD)
(×8 : PRO-520HD)
37
23
36
25 to 28, 32
29 to 31
35
3
4
11
12
13
15
14
1
16
8
7
9
10
5
6
2
33
34 PRO-720HD Only
Accessory
Screen Frame
30
31
Side View
22
PRO-720HD,
PRO-620HD Only
26
32
27
31
PRO-720HD,
PRO-620HD
Only
Side View
22
29
Remove
Attach

(1) PACKING PARTS LIST

Mark	No.	Description	Part No.
	1	Upper Carton	See Contrast table (2)
	2	Under Carton	See Contrast table (2)
	3	Upper Pad L	See Contrast table (2)
	4	Upper Pad R	See Contrast table (2)
	5	Under Pad L	See Contrast table (2)
	6	Under Pad R	See Contrast table (2)
NSP	7	Vinyl Sheet Upper	See Contrast table (2)
NSP	8	Packing Sheet	See Contrast table (2)
NSP	9	Packing Sheet Under	See Contrast table (2)
	10	Vinyl Sheet Under	See Contrast table (2)
	11	Remote Control Unit	AXD1458
	12	Battery Cover	AZN2401
NSP	13	Alkarine Dry Cell Battery(LR6,AA)	AEX1018
	14	CU Packing Case	AHC1032
	15	Special Screw	ABA1239
	16	CONV. Attention Card	ARM1173
	17	Operating Instructions (English)	ARB1543
NSP	18	Caution Card	ARM1057
NSP	19	Warranty Card	ARY1026
NSP	20	Poly Bag	AHG1285
	21	• • • • •	
	22	Special Screw (Panel Frame Attaching Screw)	See Contrast table (2)
NSP	23	Wrapper Bag	AHG1076
NSP	24	Literature Bag	AHG1222
	25	Panel Case	See Contrast table (2)
	26	Panel Cushion	AEC1790
	27	Contrast Screen	See Contrast table (2)
	28	Acrylic Caution Card	ARH1167
	29	Frame Cover H	See Contrast table (2)
	30	Frame Cover V Assy	See Contrast table (2)
	31	Panel Frame H	See Contrast table (2)
	32	Panel Frame V	See Contrast table (2)
NSP	33	Under Cushion A	See Contrast table (2)
NSP	34	Under Cushion B	See Contrast table (2)
	35	Cushion	See Contrast table (2)
	36	PC Caution Card (English)	ARM1190
	37	PC Caution Card (French)	ARM1191

(2) CONTRAST TABLE

PRO-720HD, PRO-620HD and PRO-520HD are constructed the same except for the following:

Mark	No.	Symbol and Description	Part No.			Remarks
			PRO-720HD KUXC/CA	PRO-620HD KUXC/CA	PRO-520HD KUXC/CA	
	1	Upper Carton	AHD3092	AHD3091	AHD3090	
	2	Under Carton	AHD2995	AHD3047	AHD3048	
	3	Upper Pad L	AHA2222	AHA2253	AHA2253	
	4	Upper Pad R	AHA2223	AHA2254	AHA2254	
	5	Under Pad L	AHA2224	AHA2255	AHA2255	
	6	Under Pad R	AHA2225	AHA2256	AHA2256	
NSP	7	Vinyl Sheet Upper	AHG1288	AHG1288	AHG1095	
NSP	8	Packing Sheet	AHG1230	AHG1230	AHG1120	
NSP	9	Packing Sheet Under	AHG1290	AHG1290	AHG1235	
	10	Vinyl Sheet Under	AHG1289	AHG1289	AHG1234	
	22	Special Screw	ABA1226	ABA1280	ABA1280	
	25	Panel Case	AHB1228	AHB1227	AHB1226	
	27	Contrast Screen	AAK2777	AAK2776	AAK2775	
	29	Frame Cover H	AAP1593	AAP1613	AAP1614	
	30	Frame Cover V Assy	AAP1594	AAP1617	AAP1619	
	31	Panel Frame H	AND1163	AAP1629	AAP1630	
	32	Panel Frame V	AND1164	AND1169	AND1167	
NSP	33	Under Cushion A	AHA2228	AHA2258	AHA2260	
NSP	34	Under Cushion B	AHA2229	Not used	Not used	
	35	Cushion	AHA2268	AHA2267	AHA2266	

2.2 FRONT VIEW (1/2)

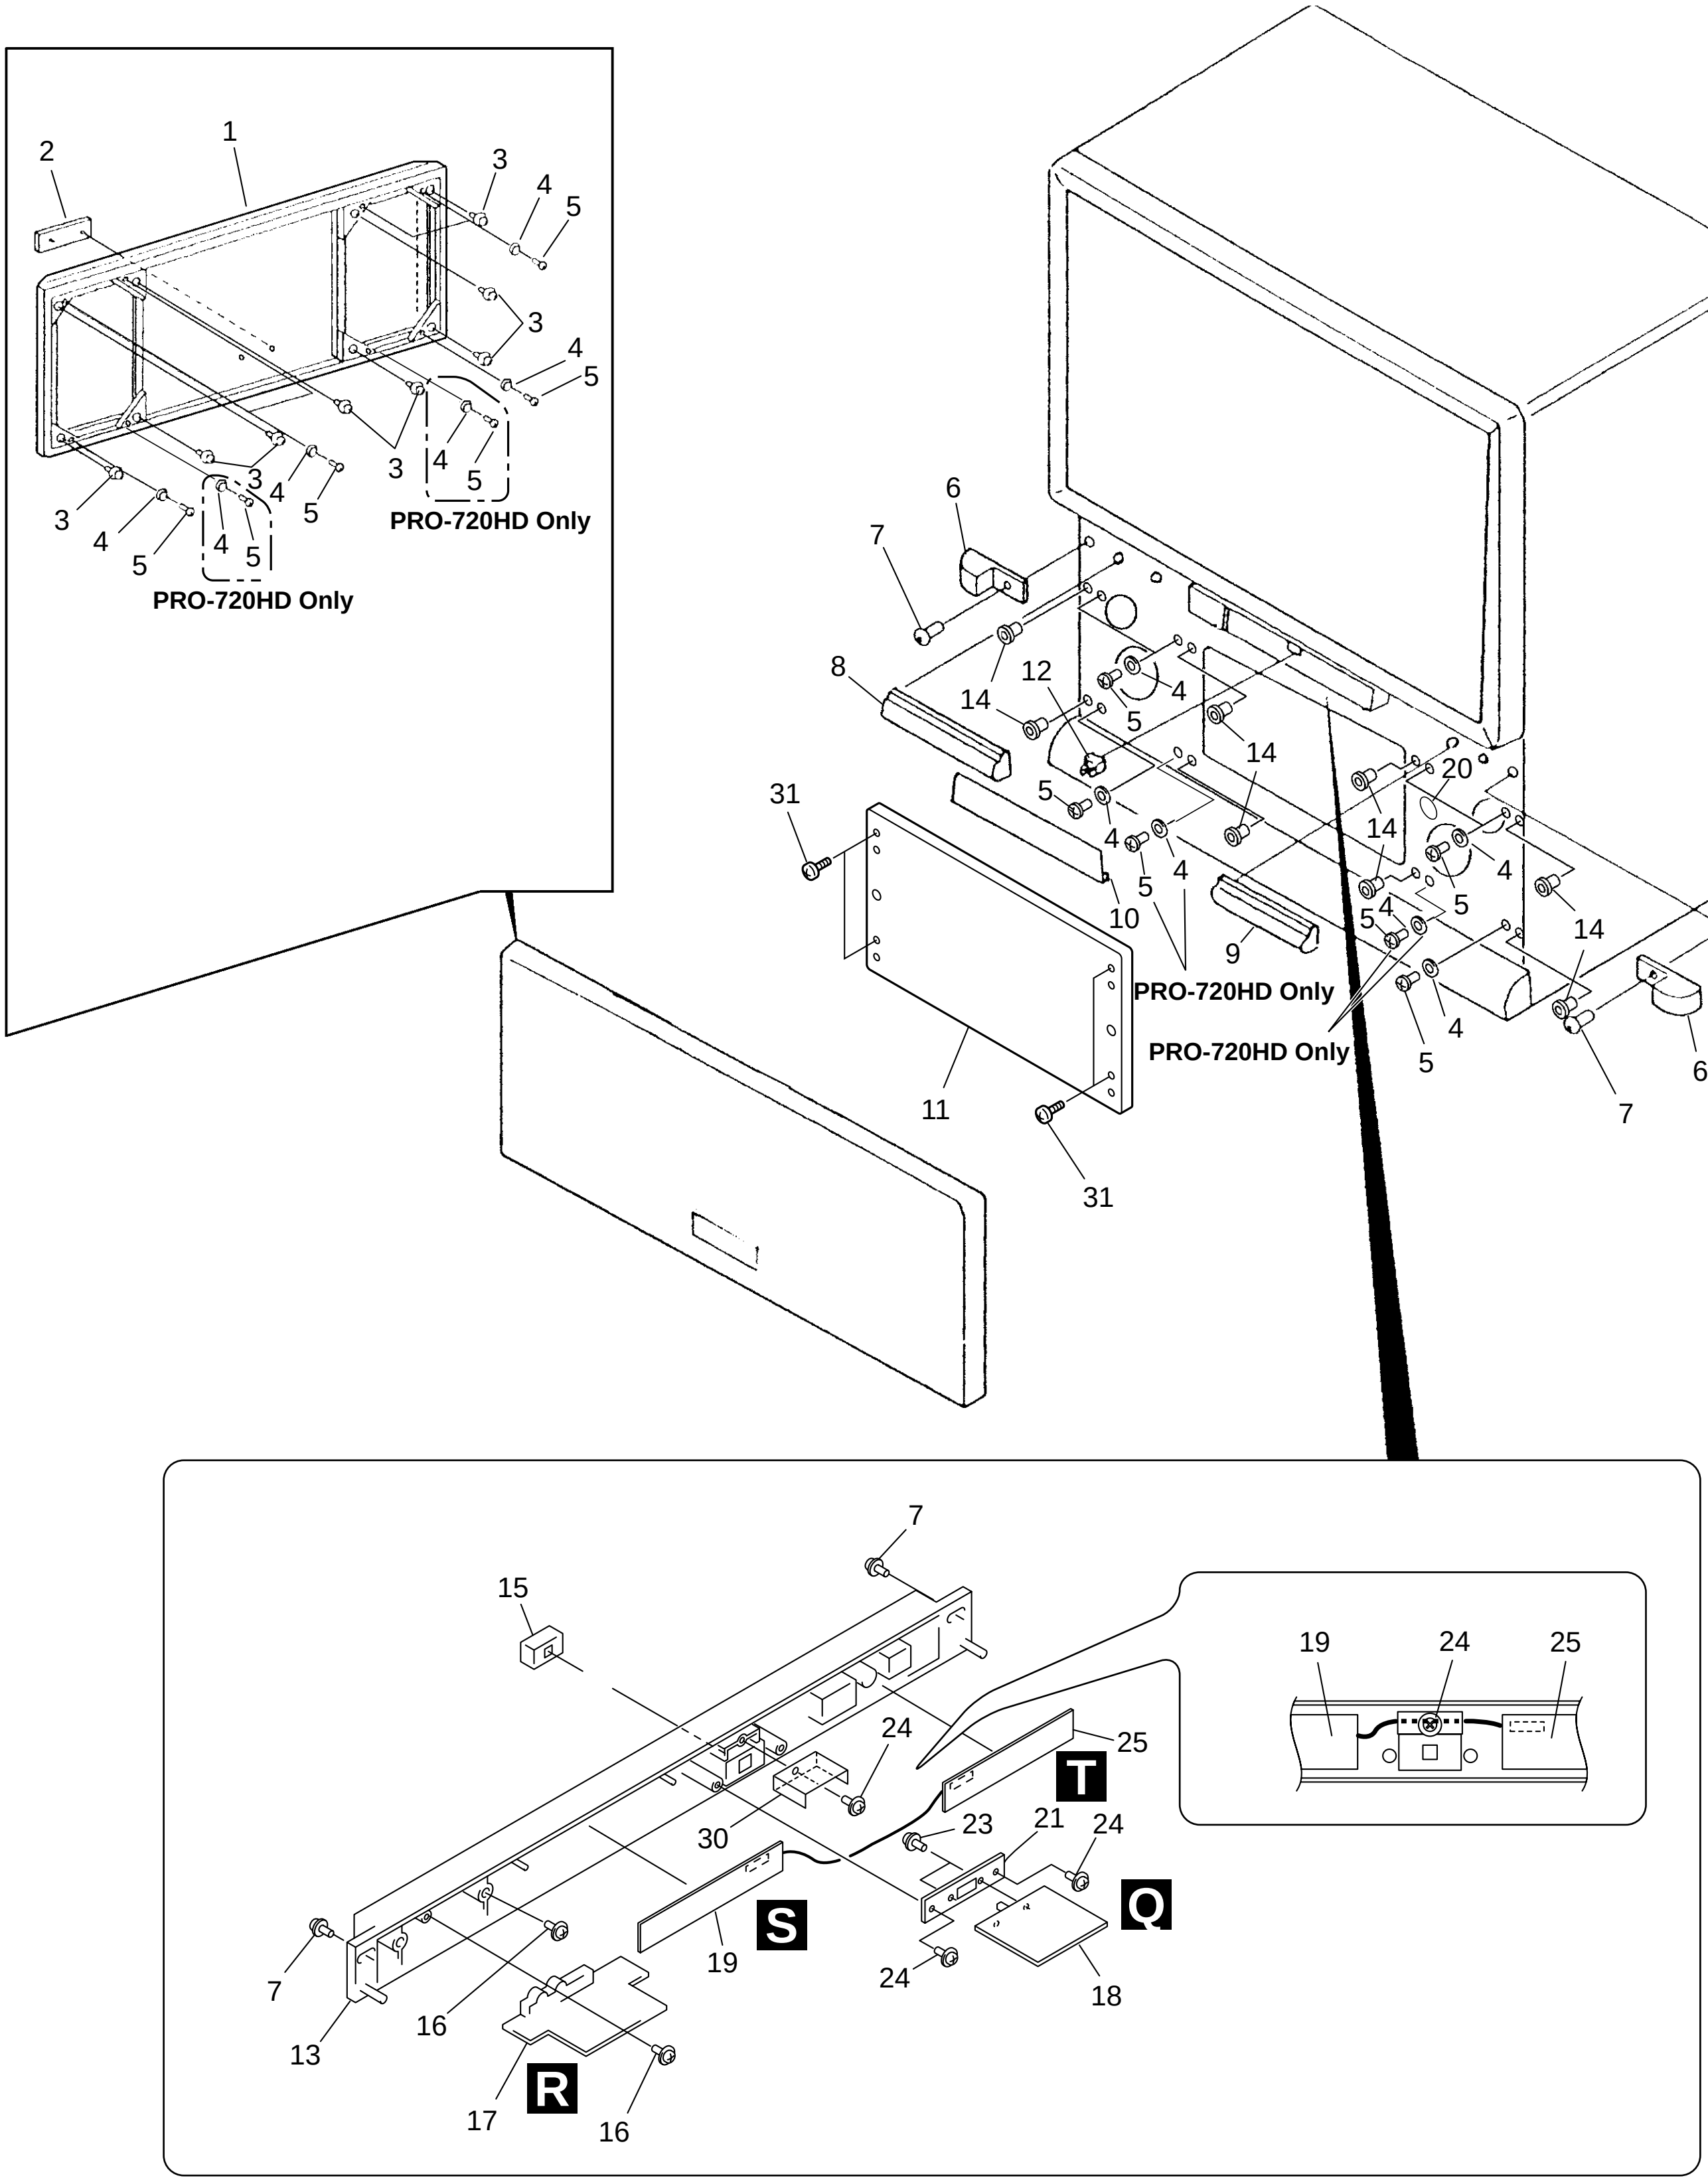
2
1
3
4
5
3
4
5
3
4
5
3
4
5
3
4
5
4
5
PRO-720HD Only
PRO-720HD Only
6
7
8
14
12
4
5
14
31
5
4
4
5
4
10
20
14
4
5
4
5
9
14
PRO-720HD Only
PRO-720HD Only
5
4
6
7
11
31
7
15
19
24
25
24
25
T
30
23
21
24
Q
S
19
24
18
7
13
16
17
R
16

(1) FRONT VIEW (1/2) PARTS LIST

Mark	No.	Description	Part No.
	1	Grille	See Contrast table (2)
	2	Badge	AAM1081
NSP	3	Catcher A	ANZ-241
	4	Magic Tape	AEC1394
	5	Screw	ABA1271
	6	Side Cover	AMR3107
	7	Special Screw	ABA1240
	8	Side Panel Assy L	See Contrast table (2)
	9	Side Panel Assy R	See Contrast table (2)
	10	Door Assy	AAN1464
	11	Blind Plate	AMM3009
	12	Catcher F2M	AEC1609
	13	Front Panel Assy	AMB2688
	14	Catch B	AEC1507
	15	Power Knob	AAD4105
	16	Screw	ABZ40P080FZK
	17	FRONT INPUT Assy	AWZ6466
	18	POWER SW Assy	AWZ6467
	19	FRONT CONTROL Assy	AWZ6462
NSP	20	UL Caution Card	AAX1238

Mark	No.	Description	Part No.
NSP	21	Switch Holder	ANG2313
	22	• • • • •	
	23	Screw	AMZ30P060FZK
	24	Screw	APZ30P080FZK
	25	LED DPO Assy	AWZ6470
	26	• • • • •	
	27	• • • • •	
	28	• • • • •	
	29	• • • • •	
NSP	30	Front Shield	ANK1502
	31	Special Screw	ABA1249

(2) CONTRAST TABLE

PRO-720HD, PRO-620HD and PRO-520HD are constructed the same except for the following:

Mark	No.	Symbol and Description	Part No.			Remarks
			PRO-720HD KUXC/CA	PRO-620HD KUXC/CA	PRO-520HD KUXC/CA	
	1	Grille	AMM3119	AMM3118	AMM3117	
	8	Side Panel Assy L	AMB2702	AMB2701	AMB2700	
	9	Side Panel Assy R	AMB2691	AMB2690	AMB2689	

2.3 FRONT VIEW (2/2)

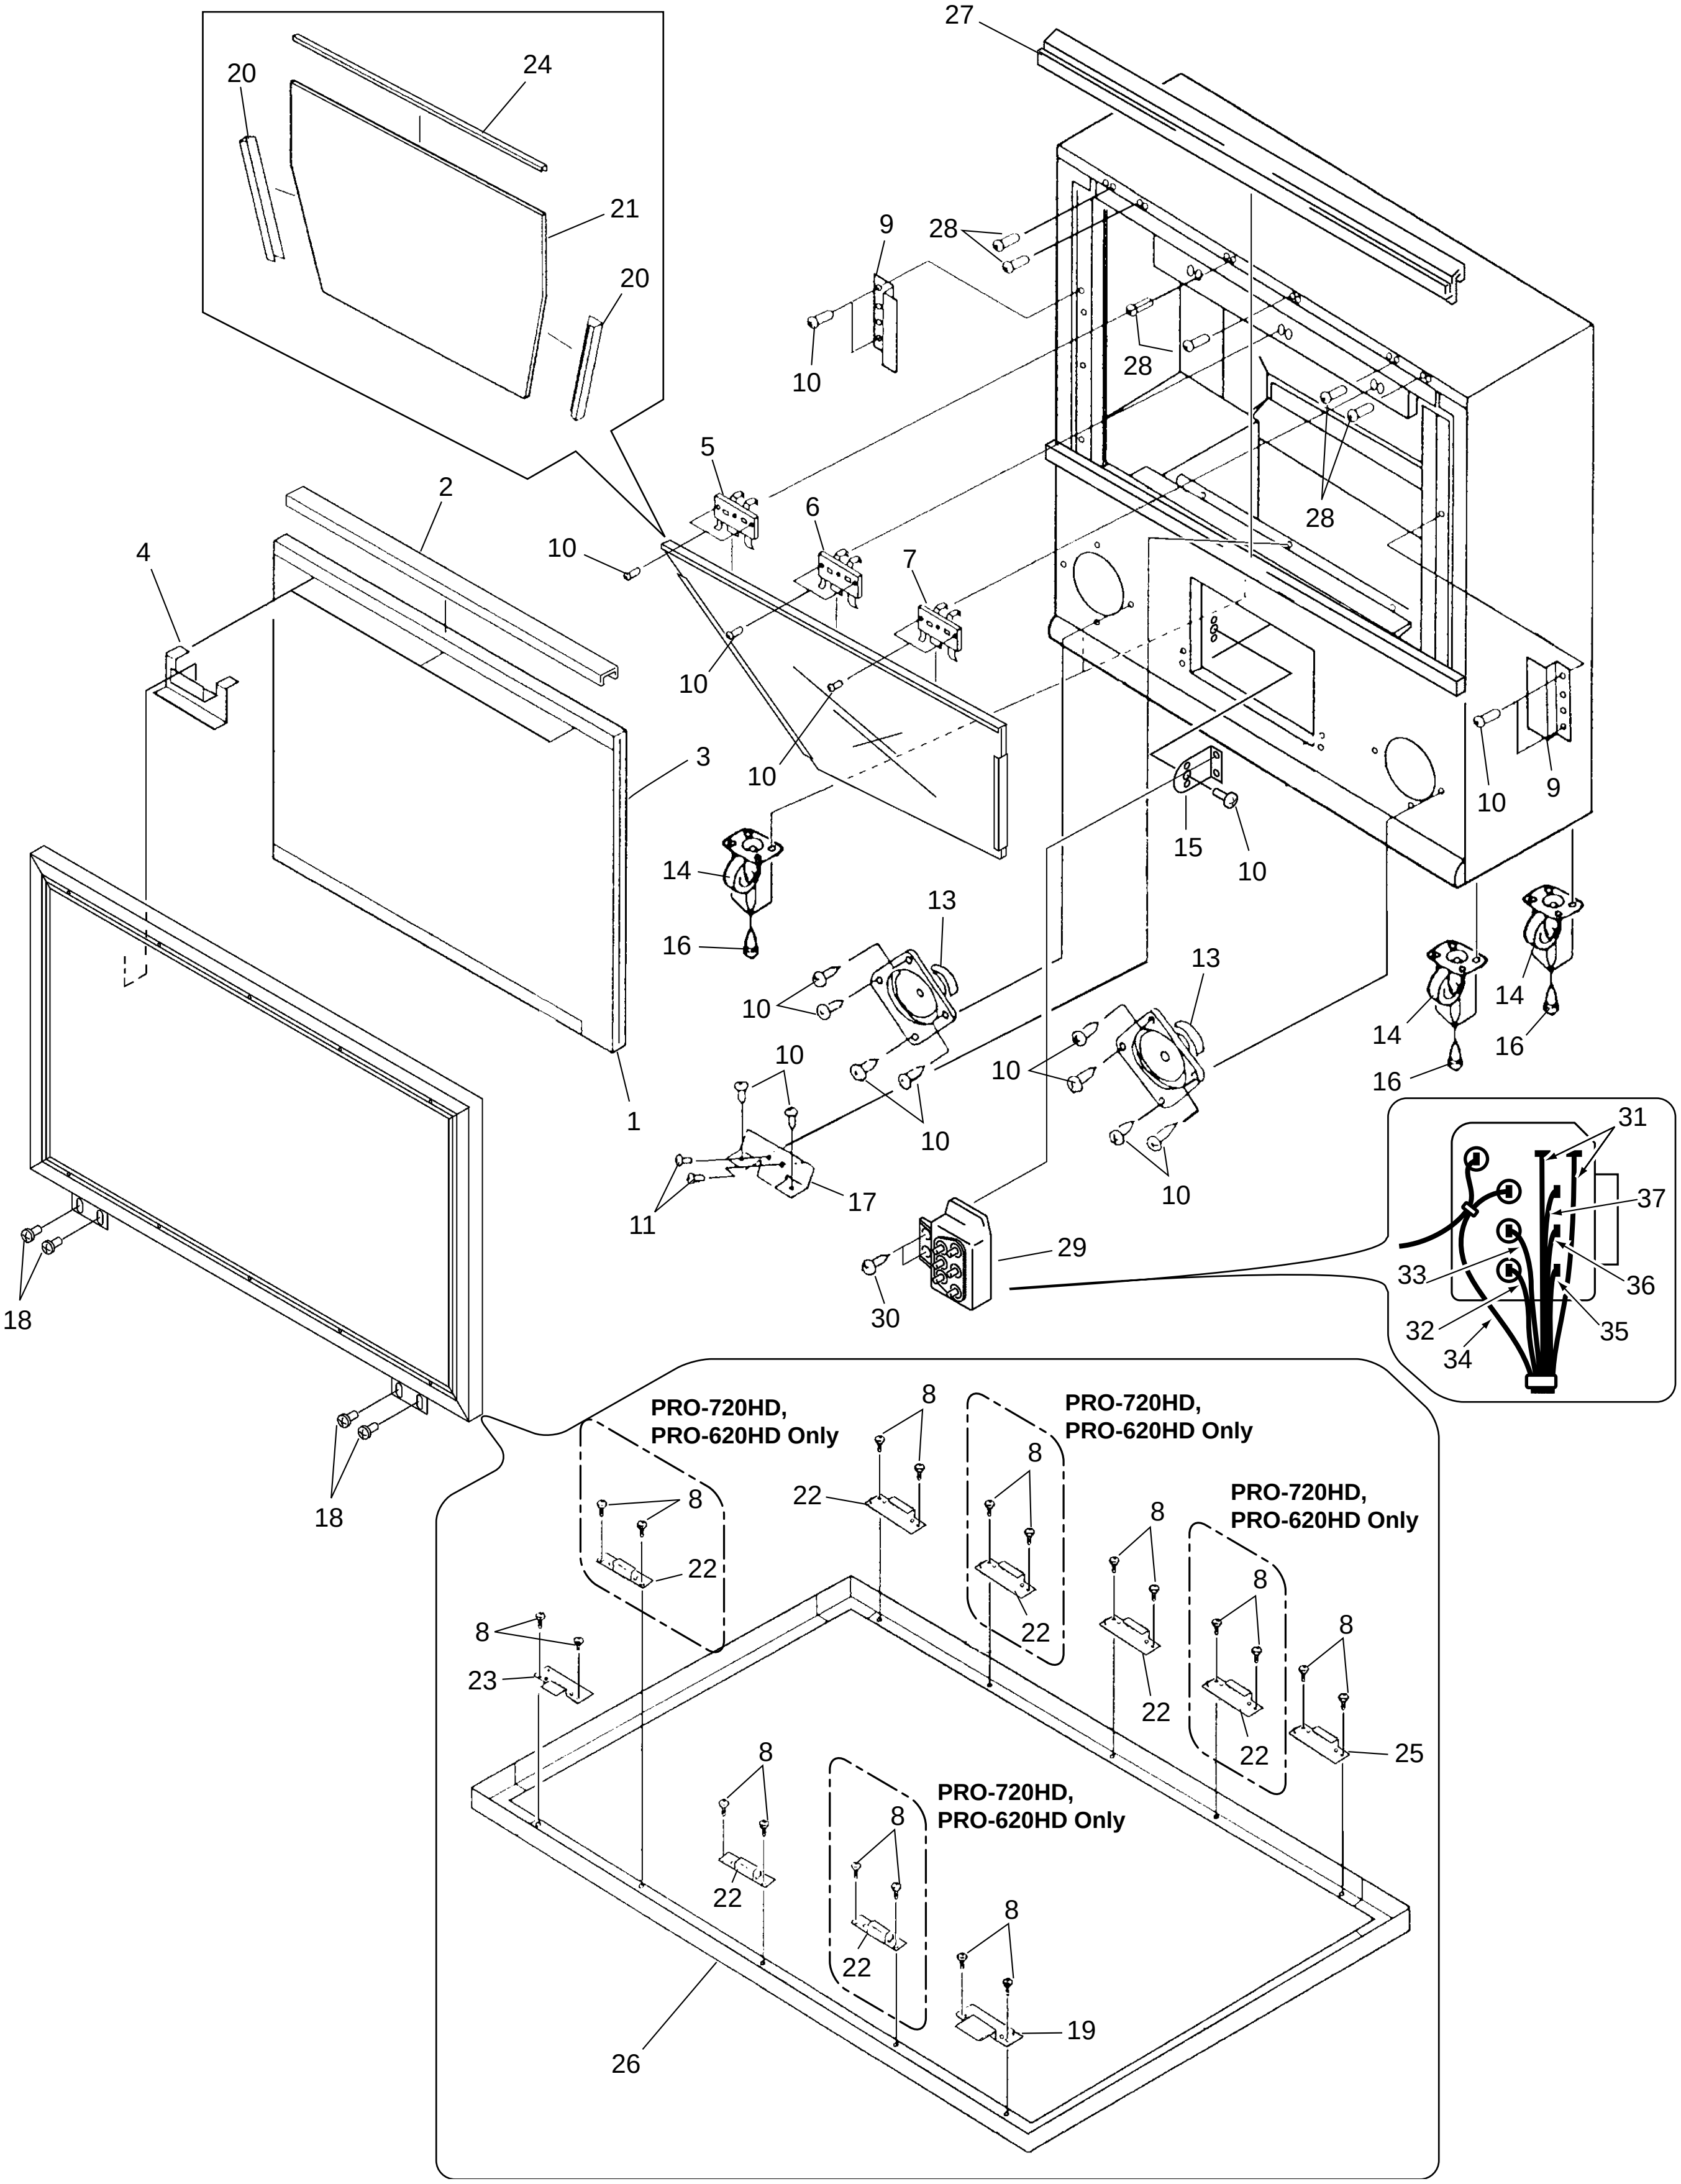
27
20
24
21
20
9
28
10
28
28
5
6
7
2
4
10
10
10
10
3
1
14
16
13
10
10
10
13
10
10
15
10
9
10
14
16
14
16
31
37
33
36
32
35
34
17
11
29
30
18
18
PRO-720HD, PRO-620HD Only
8
22
8
22
PRO-720HD, PRO-620HD Only
8
22
8
22
PRO-720HD, PRO-620HD Only
8
22
8
25
8
23
8
22
PRO-720HD, PRO-620HD Only
8
22
8
19
26

(1) FRONT VIEW (2/2) PARTS LIST

Mark	No.	Description	Part No.
	1	Lenticular Sheet	See Contrast table (2)
	2	Screen Holder Top	See Contrast table (2)
	3	Fresnel	See Contrast table (2)
NSP	4	Upper Cabinet Metal	ANG2000
NSP	5	Mirror Upper Stay L	ANG2004
NSP	6	Mirror Upper Stay C	ANG2006
NSP	7	Mirror Upper Stay R	ANG2005
	8	Screw	BYC40P160FMC
NSP	9	Screen Side Fitting	ANG1993
	10	Special Screw	ABA1240
	11	Screw	ACZ40P080FMC
	12	• • • • •	
	13	Cone Speaker	APV1021
	14	Caster	AMR2547
NSP	15	VR Holder	ANG1956
	16	Special Screw	ABA1273
NSP	17	CRT Front Holder	ANG2118
	18	Screw M5	ABA1189
NSP	19	Under Screen Metal B	ANG2009
	20	Mirror Frame V	See Contrast table (2)
	21	Mirror	See Contrast table (2)
NSP	22	Upper Screen Metal B	ANG2002
NSP	23	Under Screen Metal A	ANG2003
	24	Mirror Frame H	See Contrast table (2)
NSP	25	Upper Screen Metal A	ANG2001
	26	Screen Frame Assy	See Contrast table (2)
	27	Screen Holder Low	See Contrast table (2)
	28	Screw	BYC35P160FZK
⚠	29	Focus VR (VR1)	ACX1096
	30	Screw	BBZ30P080FZK
	31	4P Housing Wire	ADX2484
	32	1P Lead Wire	ADX2558
	33	1P Lead Wire	ADX2559
	34	1P Lead Wire	ADX2560
	35	1P Lead Wire	ADX2561
	36	1P Lead Wire	ADX2562
	37	1P Lead Wire	ADX2563

(2) CONTRAST TABLE

PRO-720HD, PRO-620HD and PRO-520HD are constructed the same except for the following:

Mark	No.	Symbol and Description	Part No.			Remarks
			PRO-720HD KUXC/CA	PRO-620HD KUXC/CA	PRO-520HD KUXC/CA	
	1	Lenticular Sheet	AMR3277	AMR3250	AMR3249	
	2	Screen Holder Top	ANG2312	ANG2369	ANG2370	
	3	Fresnel	AMR3116	AMR3186	AMR3187	
	20	Mirror Frame V	ANG2392	ANG2373	ANG2374	
	21	Mirror	AMR3113	AMR3188	AMR3189	
	24	Mirror Frame H	ANG2391	ANG2371	ANG2372	
	26	Screen Frame Assy	AAP1636	AAP1635	AAP1634	
	27	Screen Holder Low	AAP1601	AAP1646	AAP1645	

2.4 REAR VIEW (1/2)

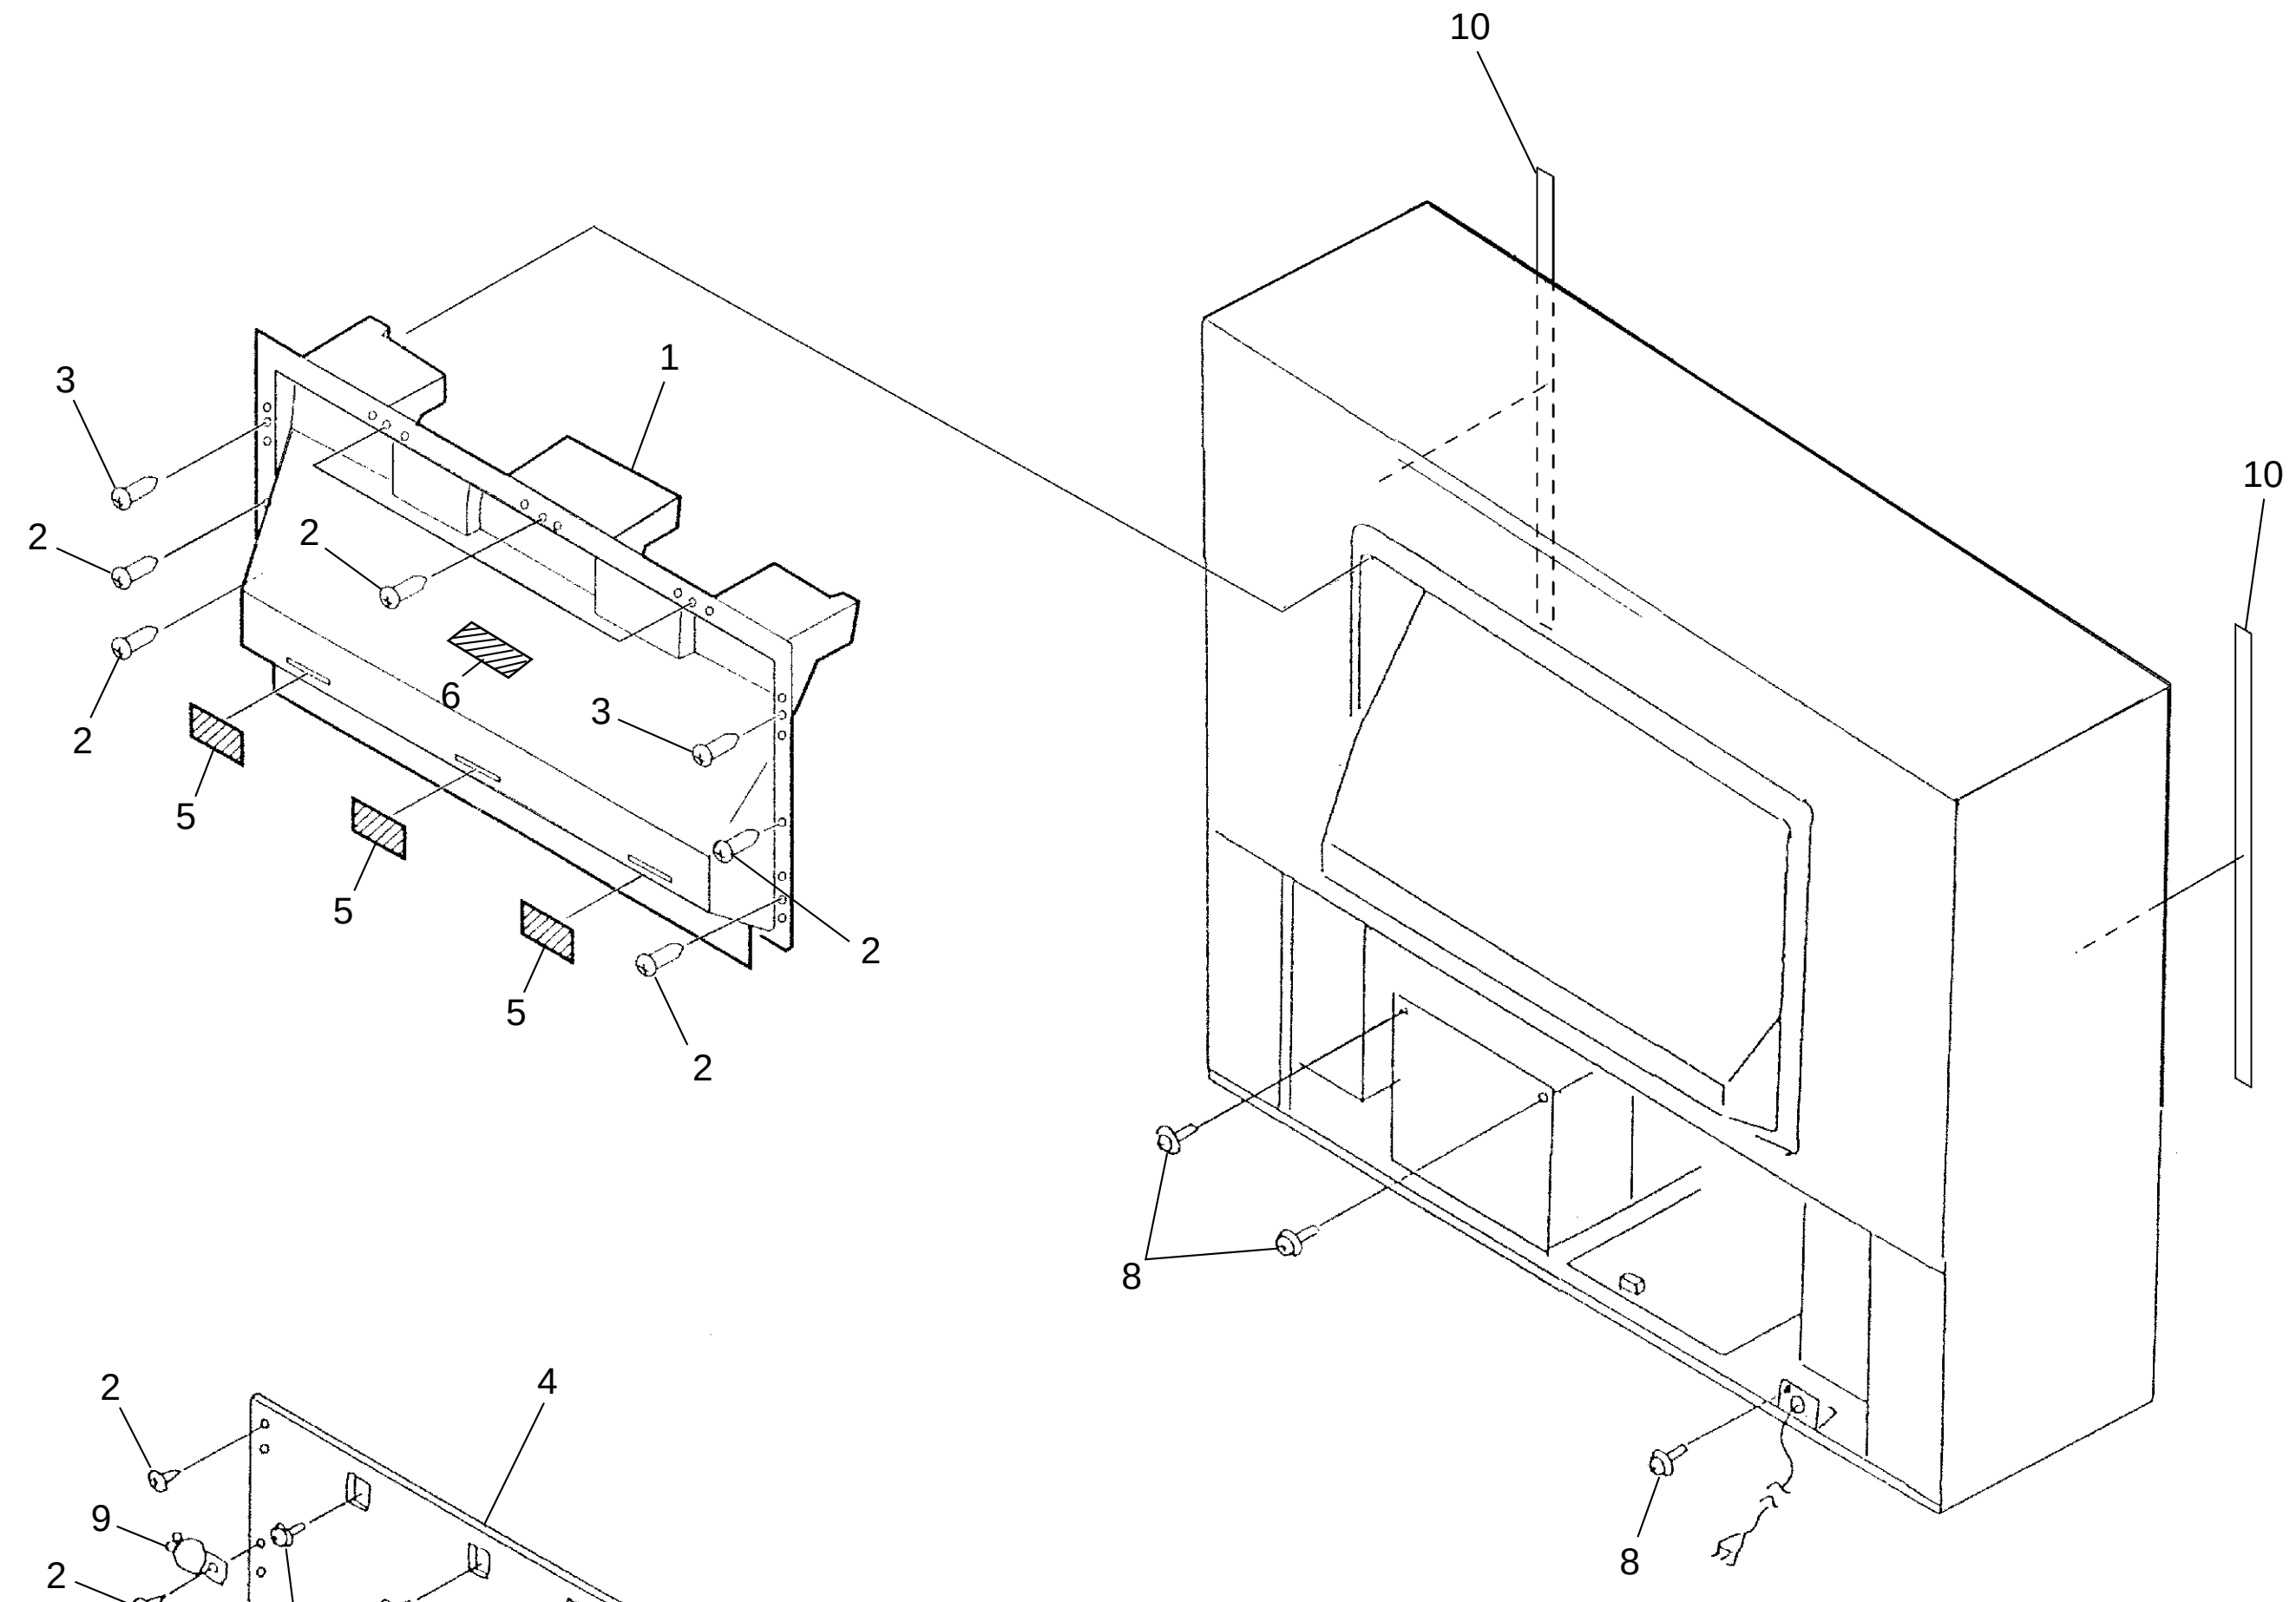
10
1
3
2
2
2
6
3
2
5
5
5
2
2
10
8
8

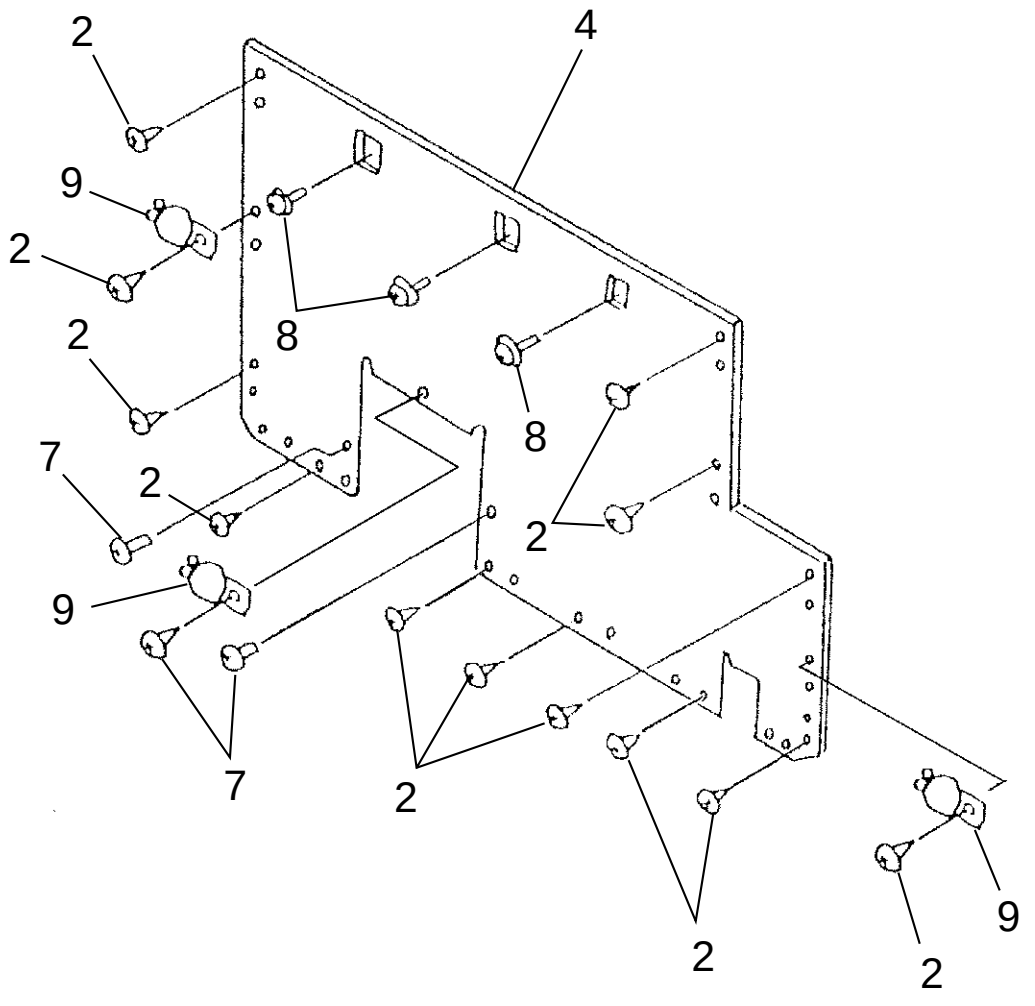
2
4
9
2
8
2
8
7
2
8
2
9
7
2
2
9
2

(1) REAR VIEW (1/2) PARTS LIST

Mark	No.	Description	Part No.
	1	Mirror Case 51	AME2296
	2	Screw	ABA1240
	3	Screw	PYC40T140FZB
	4	Rear Cover	See Contrast table (2)
	5	Blind Sheet	AEC1622
	6	Mirror Case Label	AAX2448
	7	Screw	ABZ30P100FZK
	8	Screw	ABA1269
NSP	9	Cabinet Wire Holder	AEC1263
	10	Screen Cushion	See Contrast table (2)

(2) CONTRAST TABLE

PRO-720HD, PRO-620HD and PRO-520HD are constructed the same except for the following:

Mark	No.	Symbol and Description	Part No.			Remarks
			PRO-720HD KUXC/CA	PRO-620HD KUXC/CA	PRO-520HD KUXC/CA	
	4	Rear Cover	AMM2929	AMM2999	AMM2999	
	10	Screen Cushion	AEC1778	AEC1830	AEC1831	

2.5 REAR VIEW (2/2)

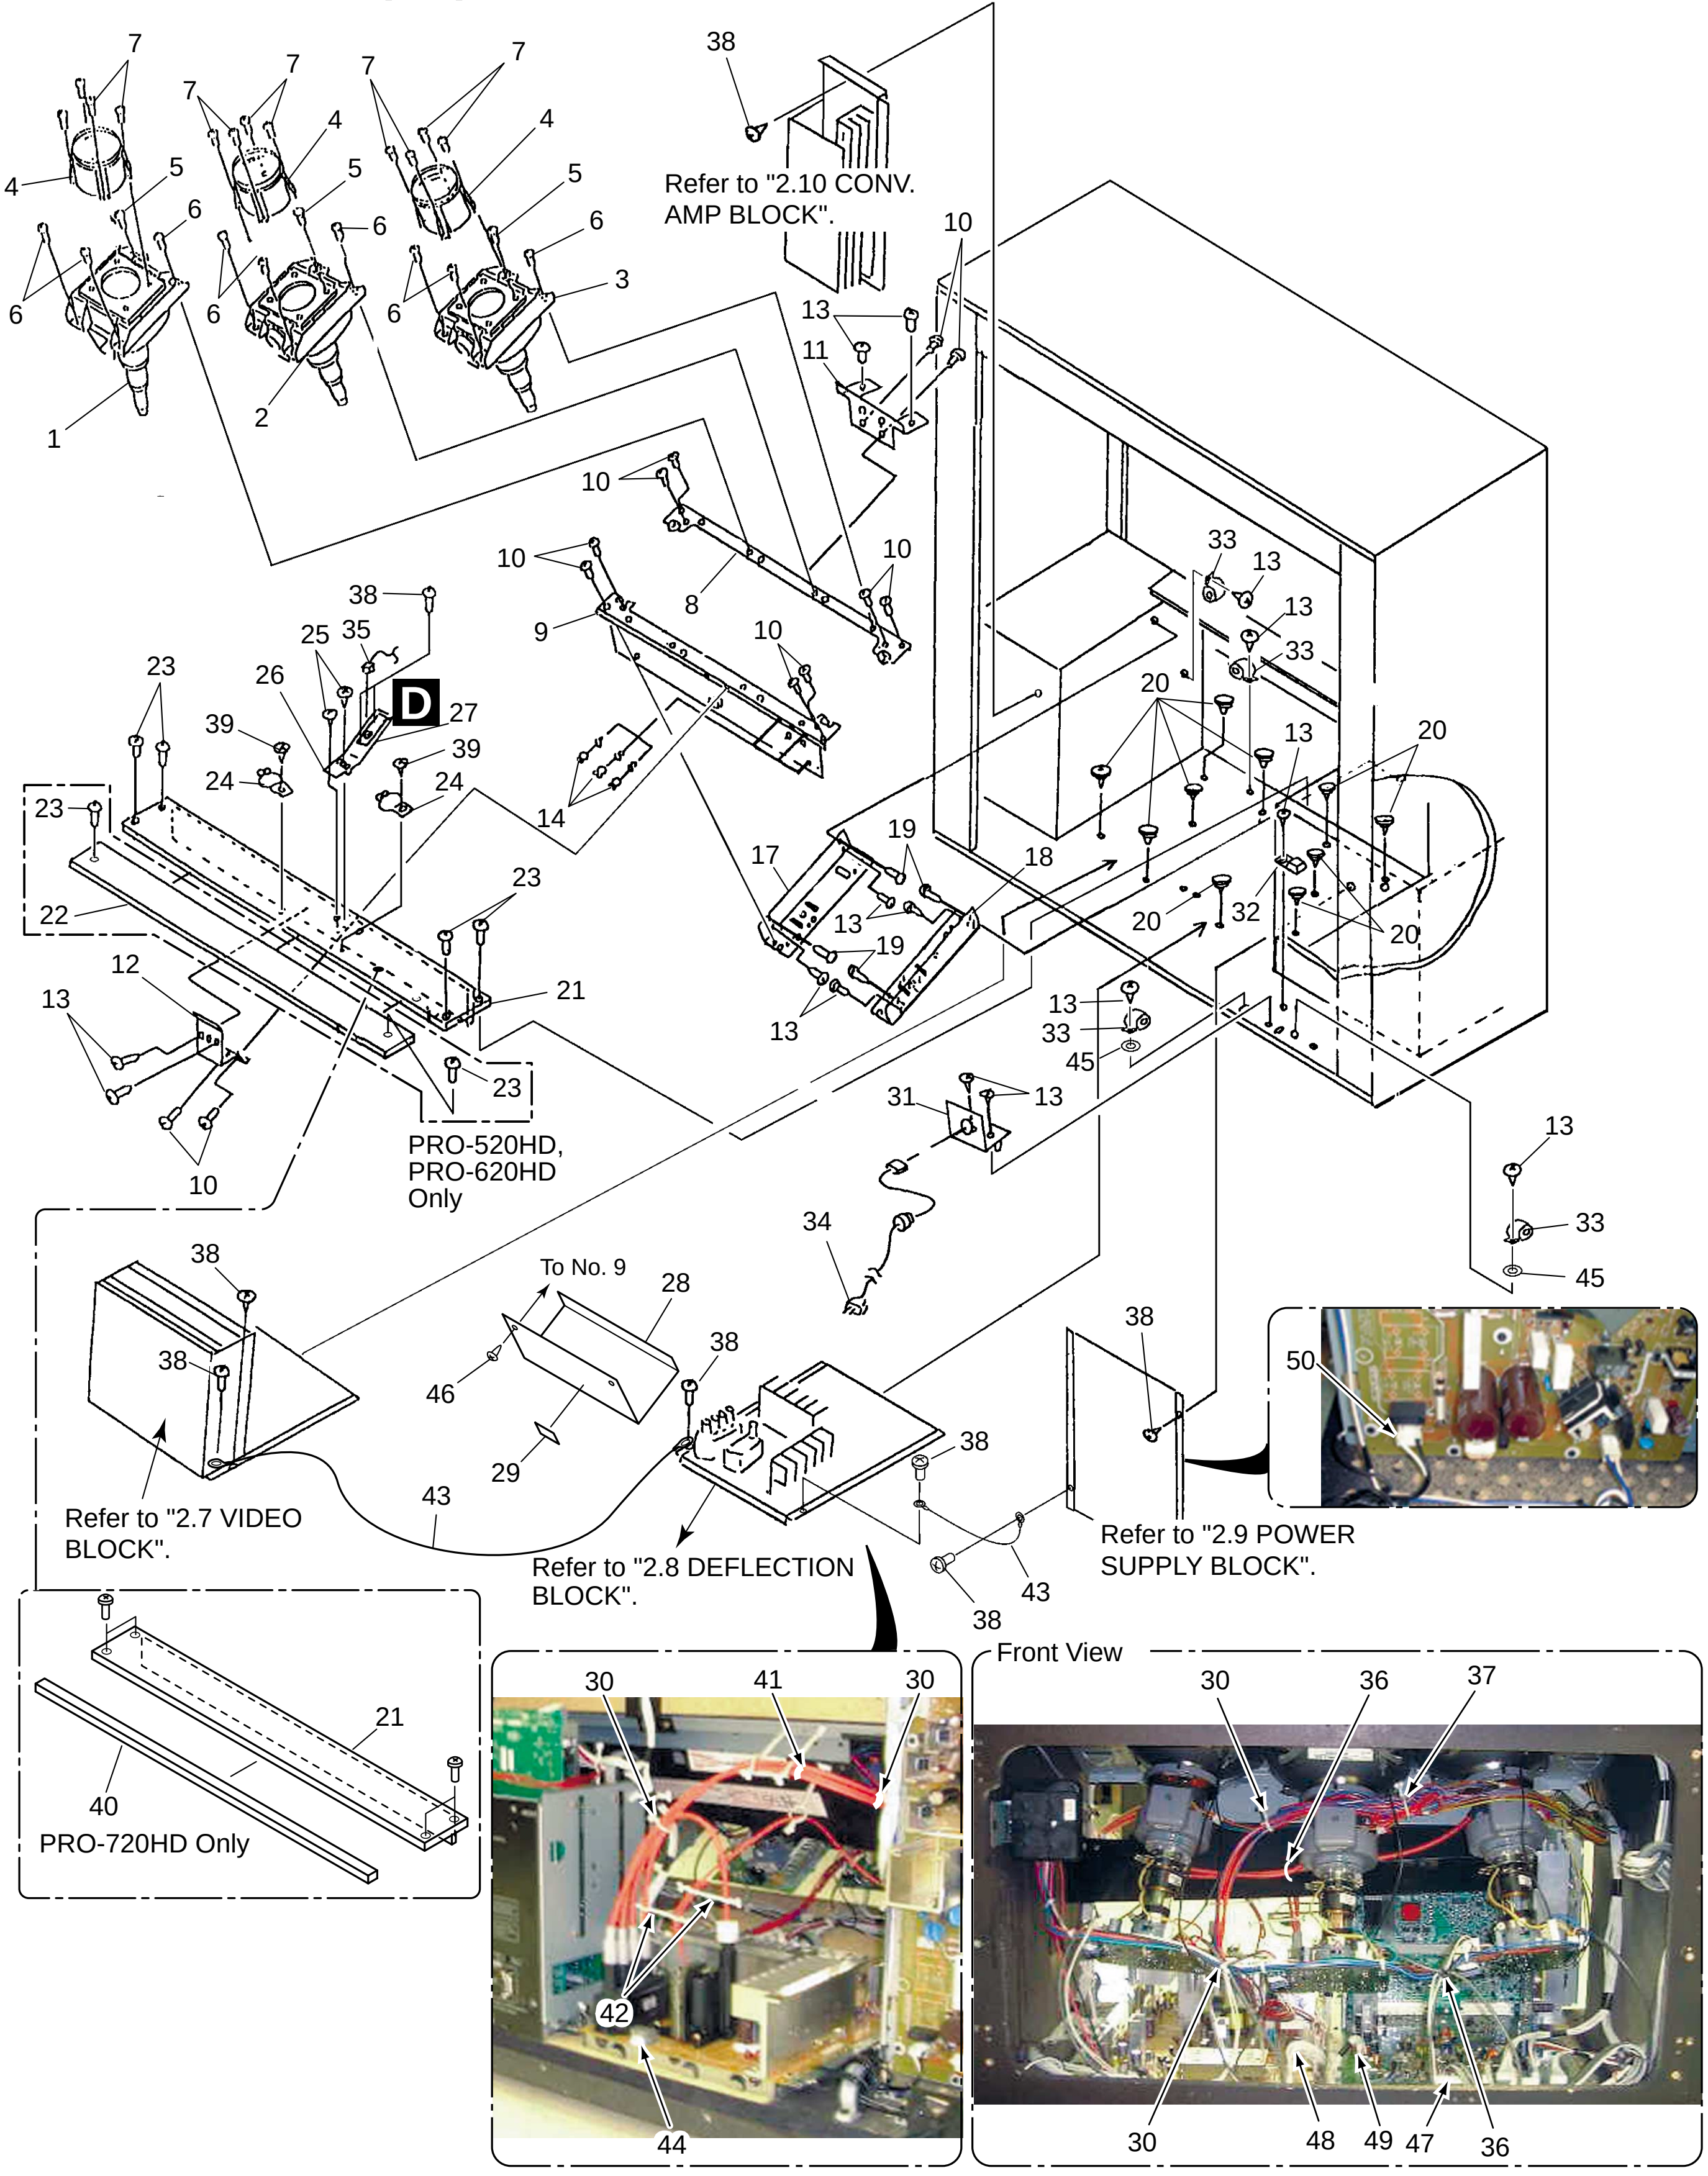
7
7
7
7
7
7
4
4
4
4
5
5
5
6
6
6
6
6
6
3
1
2
38
10
13
11
10
10
10
8
9
10
33
13
13
33
38
25
35
23
26
D
27
39
39
24
24
14
20
13
20
23
17
19
18
22
23
13
19
20
32
20
12
21
13
13
13
33
45
23
31
13
10
13
33
45
34
38
28
To No. 9
38
38
46
50
38
29
43
38
43
38
30
41
30
Front View
30
36
37
42
44
30
48
49
47
36
21
40

Refer to "2.10 CONV. AMP BLOCK".

PRO-520HD, PRO-620HD Only

Refer to "2.7 VIDEO BLOCK".

Refer to "2.8 DEFLECTION BLOCK".

Refer to "2.9 POWER SUPPLY BLOCK".

PRO-720HD Only

(1) REAR VIEW (2/2) PARTS LIST

Mark	No.	Description	Part No.
☆	1	CRT Service Assy B	See Contrast table (2)
☆	2	CRT Service Assy G	AWY1431
☆	3	CRT Service Assy R	See Contrast table (2)
☆	4	Lens Assy	See Contrast table (2)
	5	Screw	FBT40P120FZK
	6	Screw	ABA1168
	7	Screw	AMZ40P080FZK
NSP	8	CRT Front Frame	See Contrast table (2)
NSP	9	CRT Rear Frame	See Contrast table (2)
	10	Screw	ACZ40P080FMC
NSP	11	CRT Front Holder	ANG2118
NSP	12	CRT Rear Holder	ANG2119
	13	Screw	ABA1240
	14	Cord Holder	AEC1257
	15	• • • • •	
	16	• • • • •	
NSP	17	CRT Stand Holder R	ANA1497
NSP	18	CRT Stand Holder L	ANA1496
	19	Screw	PMB50P250FZB
	20	Special Screw	ABA1121
NSP	21	Back Cover Panel	See Contrast table (2)
NAP	22	Rear Cover Panel	See Contrast table (2)
	23	Screw	ABA1241
NSP	24	Cabinet Wire Holder	AEC1263
	25	Screw	ABA1279
NSP	26	Fixing Metal	ANG1958
	27	SR Assy	AWZ6465
NSP	28	Tray	AMR2936
NSP	29	Solder Warning Label	AAX2835
	30	Purse Lock	AEC1540
NSP	31	AC Cord Holder A	ANG2307
	32	Bind Holder	AEC1785
	33	Ferrite Core	ATX1040
⚠	34	AC Power Cord	ADG1180
	35	3P Housing Wire	ADX2566
NSP	36	Purse Lock S	AEC1261
NSP	37	Purse Lock L	AEC1422
	38	Screw	BBZ30P080FZK
	39	Screw	ABA1271
	40	Back Cover Cushion	See Contrast table (2)
	41	Binder	AEC1793
NSP	42	Cable Clip	AEC1369
	43	1P Lead Wire (J1)	ADX2505
	44	Shield Case	ANK1510
	45	Nylon Washer	AEC1863
	46	Screw	ABZ30P100FZK
	47	Wire Harness B	ADX2487
	48	Wire Harness A	ADX2564
	49	Wire Harness E	ADX2565
	50	2P Lead Wiht Housing	ADX2568

(2) CONTRAST TABLE

PRO-720HD, PRO-620HD and PRO-520HD are constructed the same except for the following:

Mark	No.	Symbol and Description	Part No.			Remarks
			PRO-720HD KUXC/CA	PRO-620HD KUXC/CA	PRO-520HD KUXC/CA	
☆	1	CRT Service Assy B	AWY1438	AWY1435	AWY1433	
☆	3	CRT Service Assy R	AWY1437	AWY1434	AWY1432	
☆	4	Lens Assy	AMR3235	AMR3248	AMR3248	
NSP	8	CRT Front Frame	ANA1541	ANA1613	ANA1614	
NSP	9	CRT Rear Frame	ANA1542	ANA1615	ANA1616	
NSP	21	Back Cover Panel	AMM3122	AMM3001	AMM3002	
NSP	22	Rear Cover Panel	Not used	AMM3121	AMM3121	
	40	Back Cover Cushion	AEC1779	Not used	Not used	

2.6 CRT BLOCK

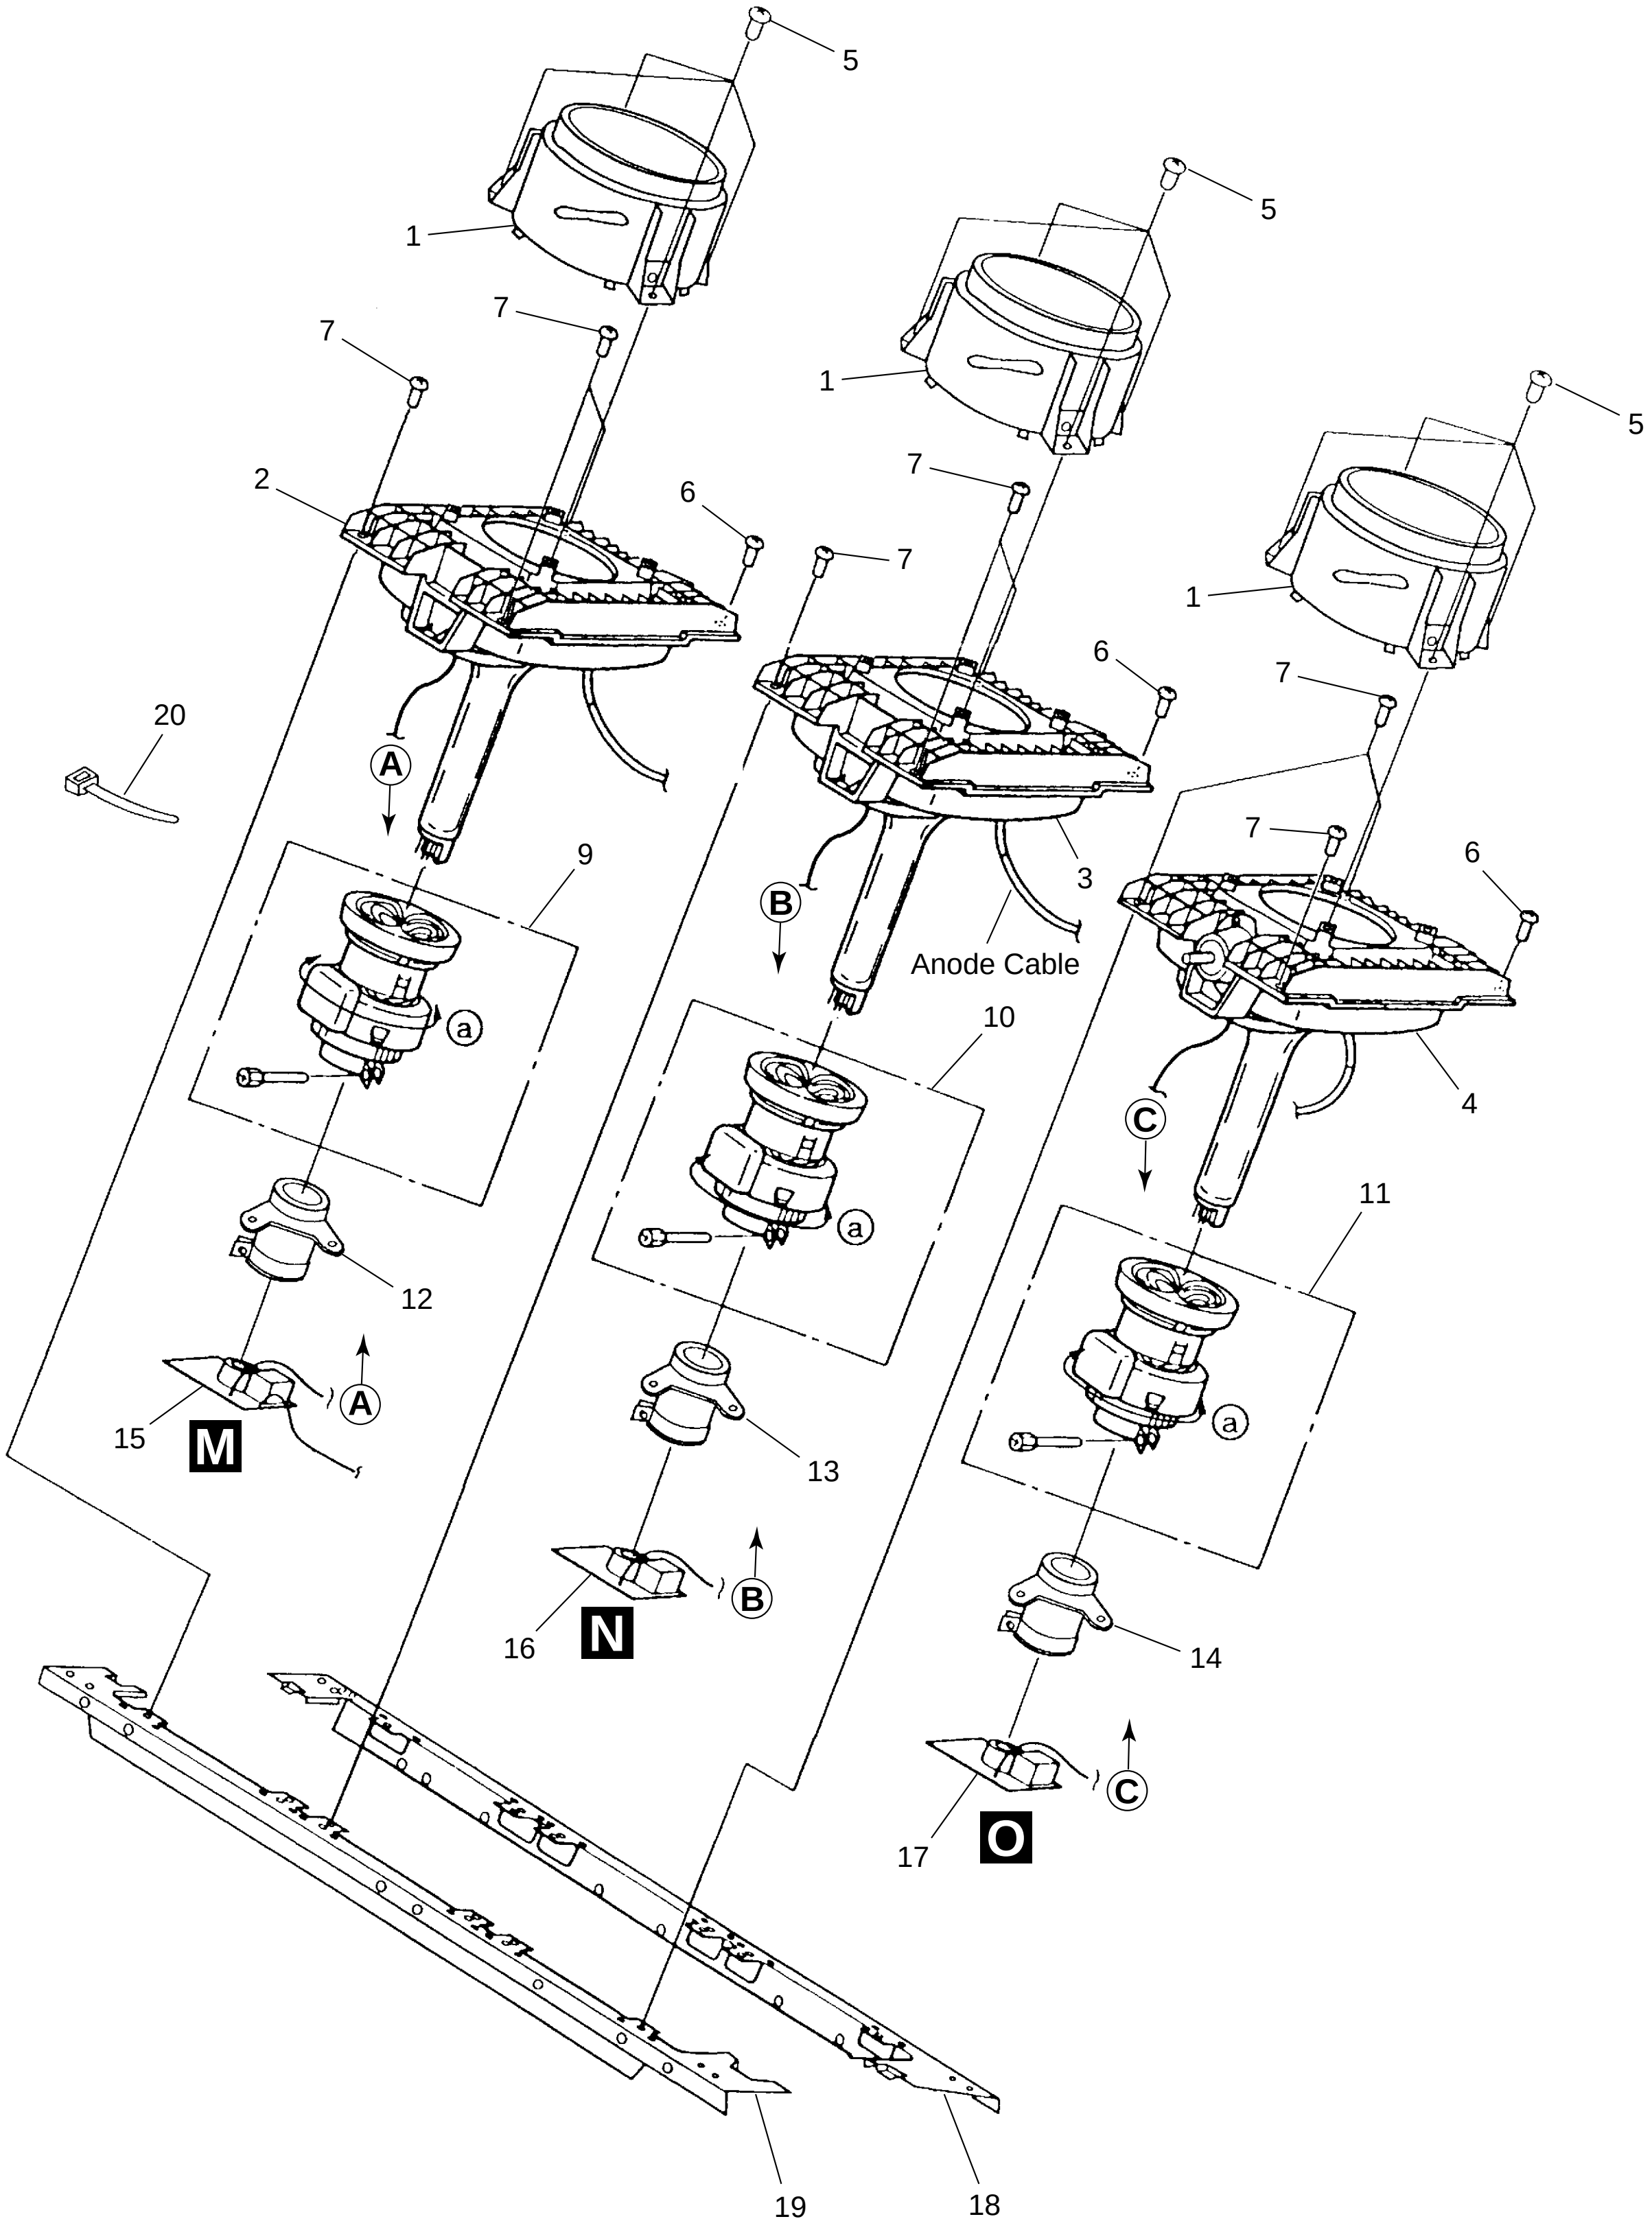
A
a
B
Anode Cable
C
a
A
M
a
B
N
C
O

(1) CRT BLOCK PARTS LIST

Mark	No.	Description	Part No.
☆	1	Lens Assy	See Contrast table (2)
☆	2	CRT Service Assy R	See Contrast table (2)
☆	3	CRT Service Assy G	AWY1431
☆	4	CRT Service Assy B	See Contrast table (2)
	5	Screw	AMZ40P080FZK
	6	Screw	FBT40P120FZK
	7	Screw	ABA1168
	8	• • • • •	
⚠	9	Deflection Yoke (L1)	ATL1145
⚠	10	Deflection Yoke (L2)	ATL1145
⚠	11	Deflection Yoke (L3)	ATL1145
⚠	12	VM Coil (L4)	ATL1137
⚠	13	VM Coil (L5)	ATL1137
⚠	14	VM Coil (L6)	ATL1137
	15	R. CRT DRIVE Assy	AWZ6601
	16	G. CRT DRIVE Assy	AWZ6602
	17	B. CRT DRIVE Assy	AWZ6603
NSP	18	CRT Rear Frame	See Contrast table (2)
NSP	19	CRT Front Frame	See Contrast table (2)
	20	Nylon Binder	AEC-093

(2) CONTRAST TABLE

PRO-720HD, PRO-620HD and PRO-520HD are constructed the same except for the following:

Mark	No.	Symbol and Description	Part No.			Remarks
			PRO-720HD KUXC/CA	PRO-620HD KUXC/CA	PRO-520HD KUXC/CA	
☆	1	Lens Assy	AMR3235	AMR3248	AMR3248	
☆	2	CRT Service Assy R	AWY1437	AWY1434	AWY1432	
☆	4	CRT Service Assy B	AWY1438	AWY1435	AWY1433	
NSP	18	CRT Rear Frame	ANA1542	ANA1615	ANA1616	
NSP	19	CRT Front Frame	ANA1541	ANA1613	ANA1614	

2.7 VIDEO BLOCK

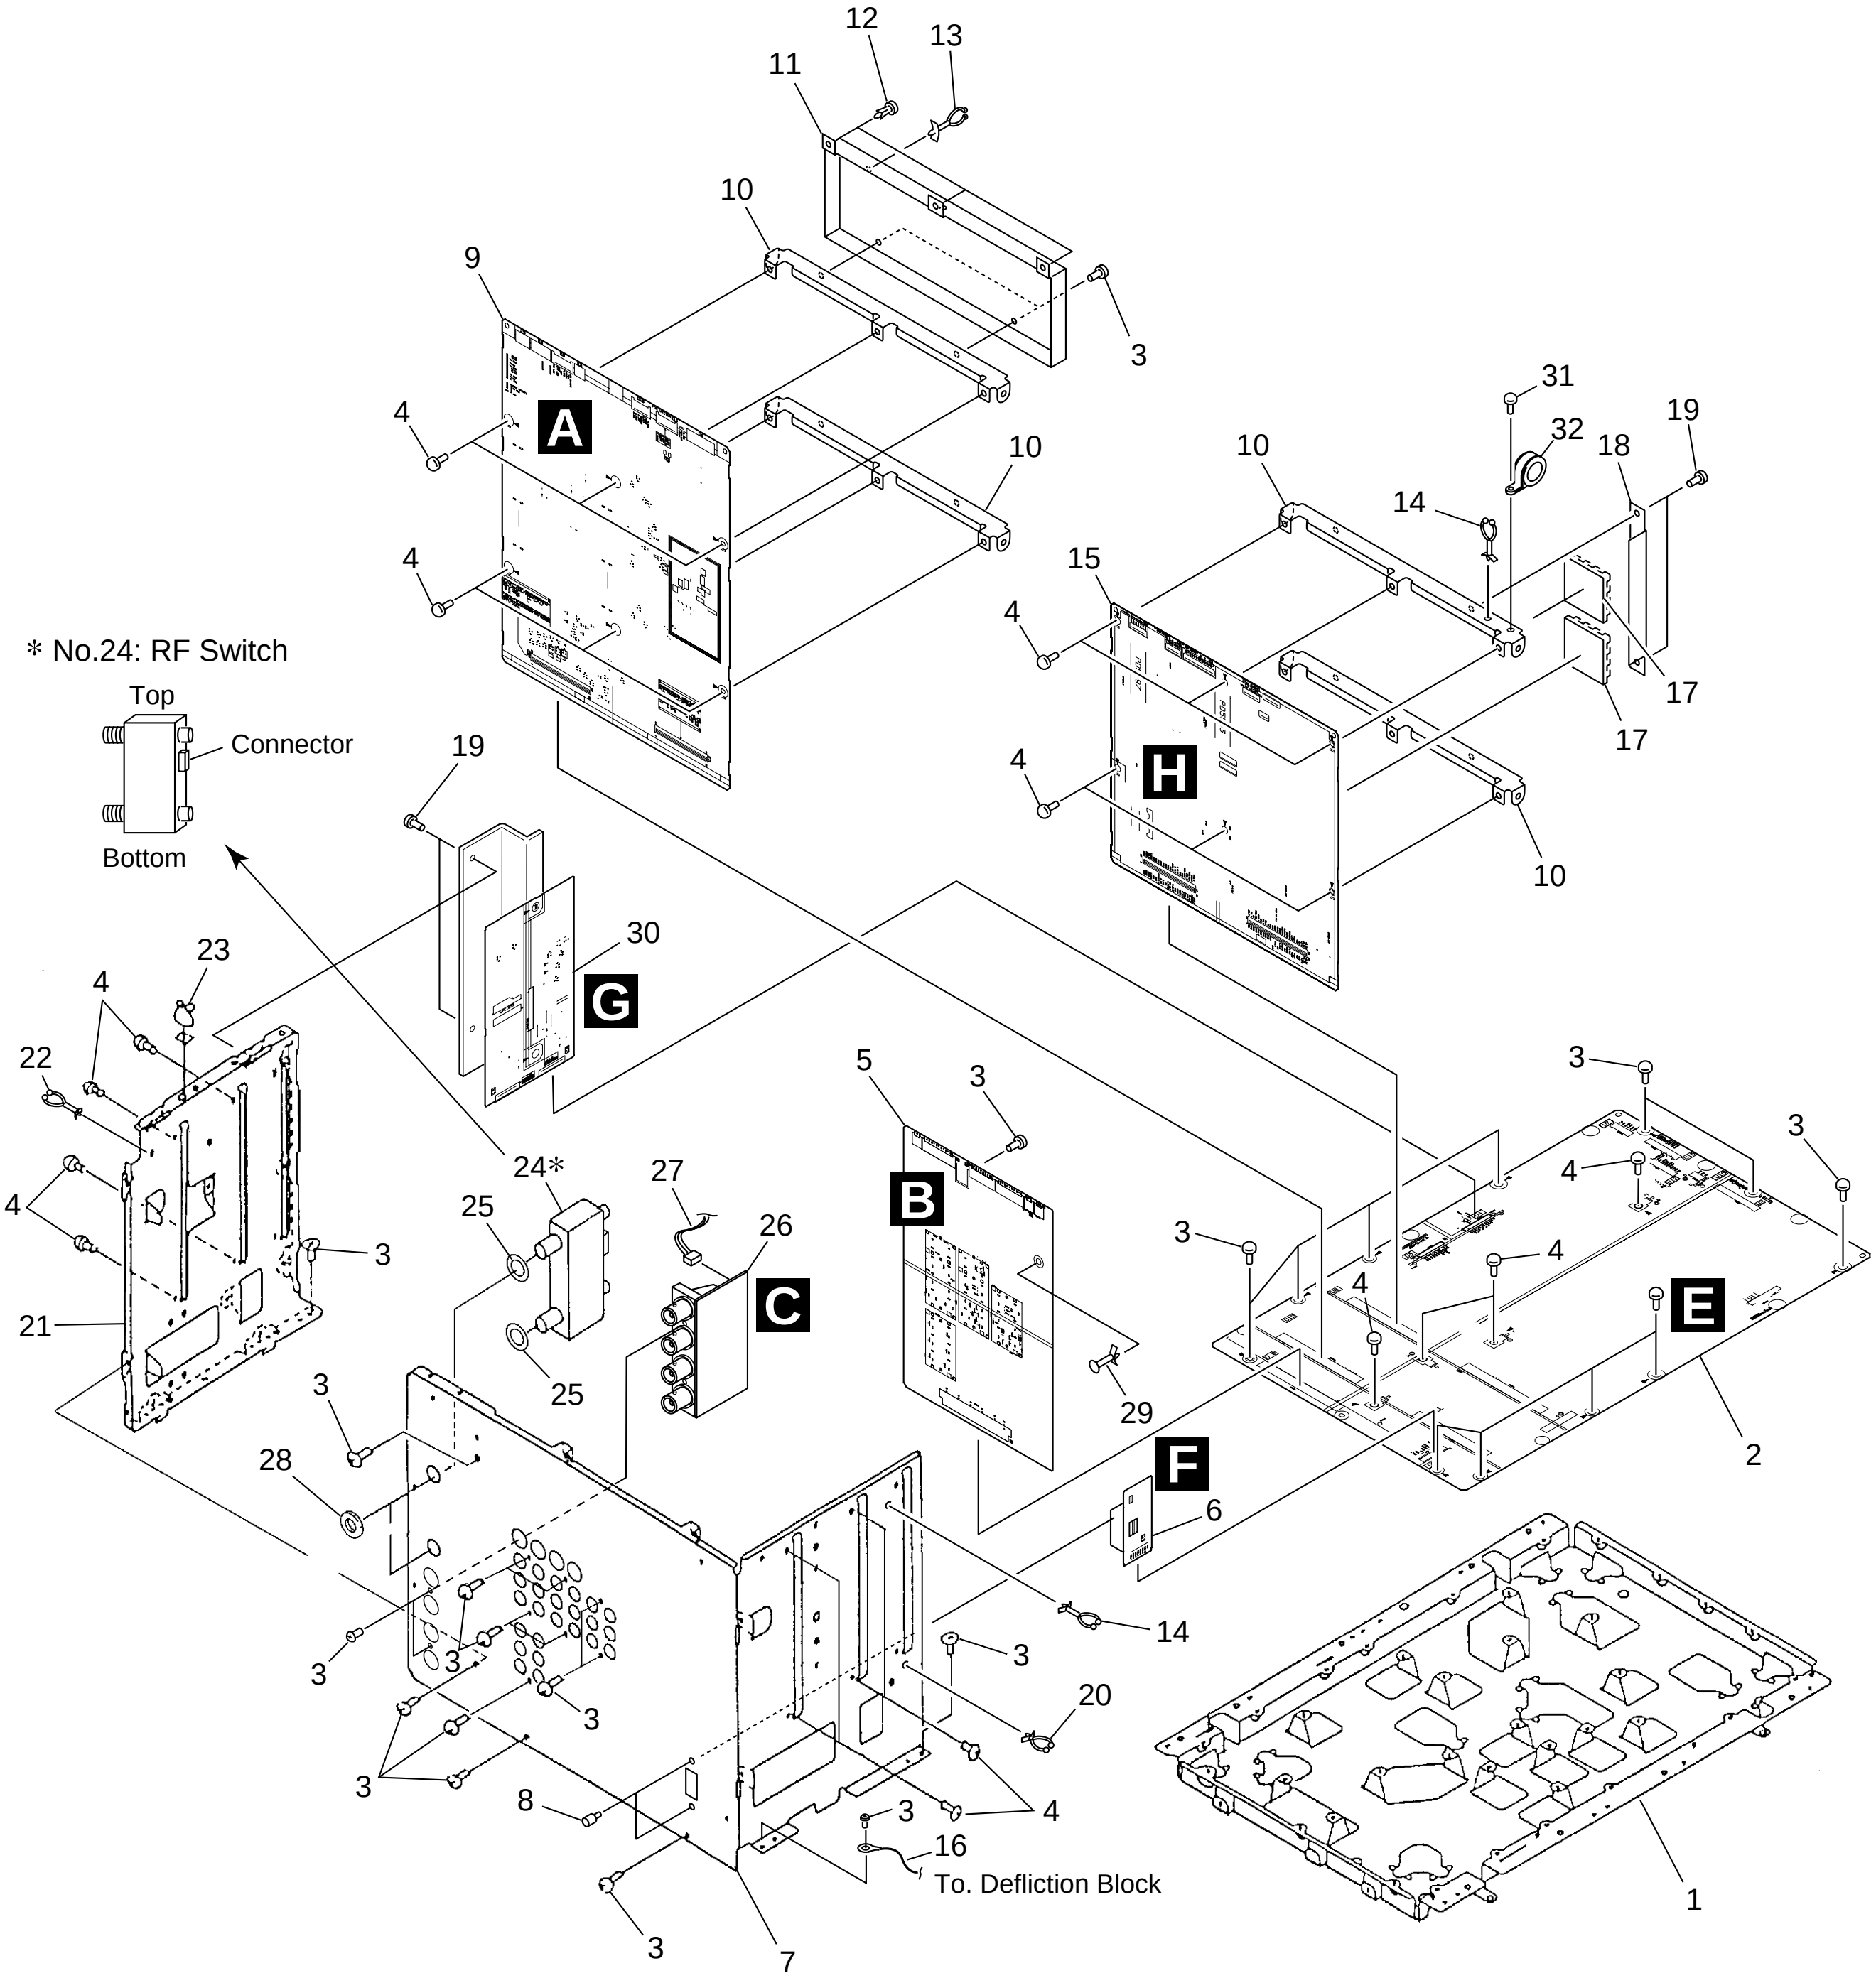
12
13
11
10
9
3
A
4
10
4
31
32
19
18
10
14
15
4
17
17
4
H
10
* No.24: RF Switch
Top
Connector
Bottom
19
30
G
23
4
22
4
3
21
24*
25
25
27
26
C
5
3
B
29
3
4
3
4
3
4
E
2
F
6
3
28
3
3
3
3
8
14
3
20
4
3
16
To. Defliction Block
3
7
1

VIDEO BLOCK PARTS LIST

Mark	No.	Description	Part No.
NSP	1	Video Chassis	ANA1584
	2	VIDEO Assy	AWV1916
	3	Screw	BBZ30P080FZK
	4	Screw	BBZ30P080FCU
	5	AV I/O Assy	AWV1919
	6	RGB SW Assy	AWZ6468
	7	Rear Panel	ANC2348
	8	Hexagon Head Screw	BBA1051
	9	SIGNAL Assy	AWV1917
NSP	10	PCB Sub Frame	ANG2304
	11	Signal Shield	ANK1629
	12	Rivet	AEC–441
NSP	13	Cable Clip D3S	AEC1782
	14	Cable Clip	AEC1806
	15	SUB VIDEO Service Assy	AWV1922
	16	1P Lead Wire	ADX2505
NSP	17	IP Heat Sink	ANH1591
	18	IP Heat Sink Holder	AEC1850
	19	Screw	ABZ30P100FZK
NSP	20	Cable Clip D3M	AEC1783
NSP	21	PCB Side Holder	ANG2305
	22	Cable Clip	AEC1806
NSP	23	Cable Clip A	AEC1325
	24	RF Switch	AXF1088
	25	Washer	WAX0F160N100
	26	BNC Assy	AWV1920
	27	Housing Wire	ADX2681
	28	Nut	BBN1005
NSP	29	Mini Card Spacer	AEC1835
	30	AUDIO Assy	AWZ6472
	31	Screw	ABZ30P100FMC
	32	Ferrite Core	ATX1040

2.8 DEFLECTION BLOCK

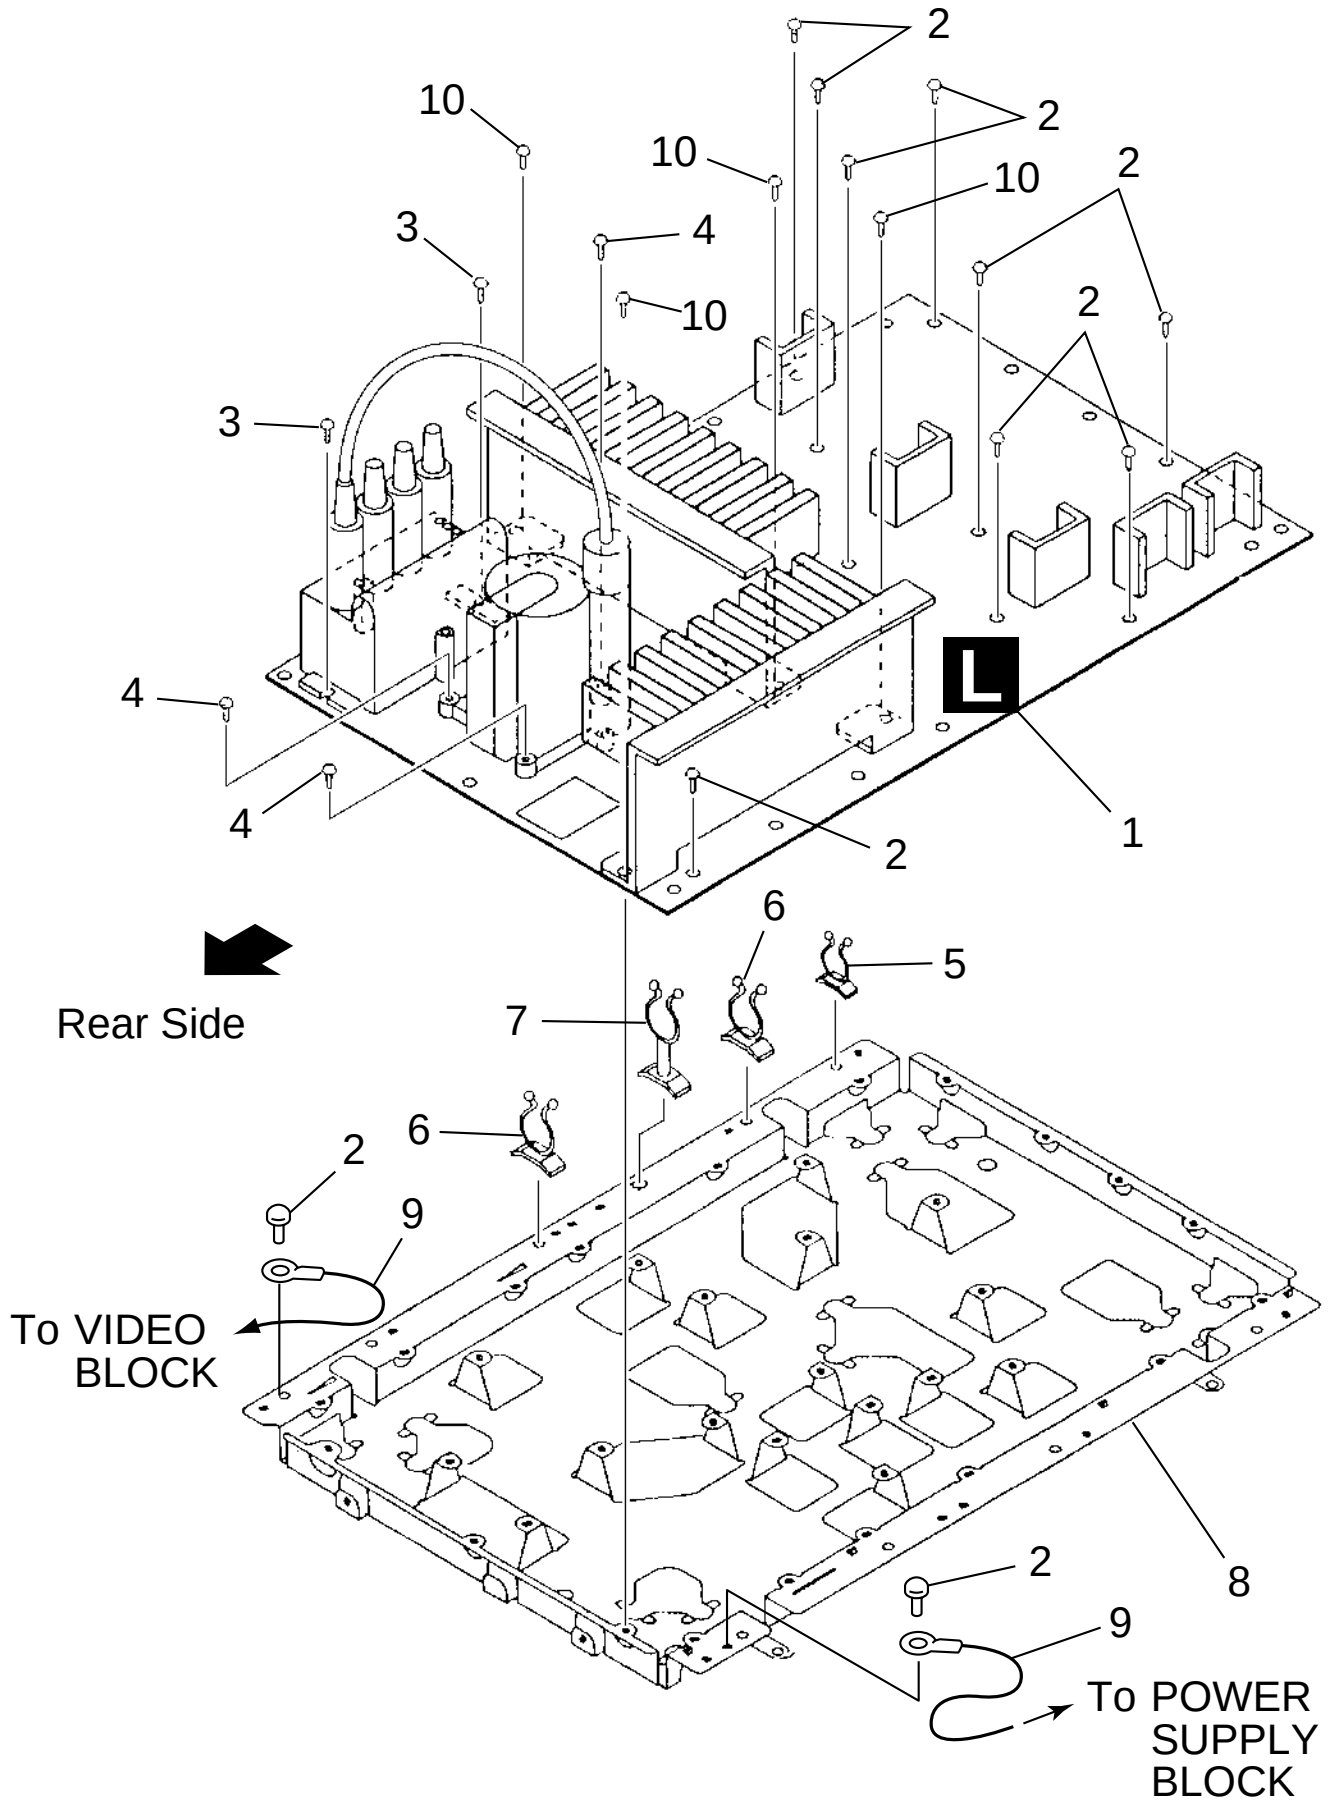
2
10
2
10
10
2
3
4
2
10
3
4
4
L
2
1
6
5
Rear Side
7
2
6
9
To VIDEO BLOCK
2
8
9
To POWER SUPPLY BLOCK

■ DEFLECTION BLOCK PARTS LIST

Mark	No.	Description	Part No.
☆	1	DEFLECTION SERVICE Assy	AWV1921
	2	Screw	BBZ30P080FZK
	3	Screw	ABZ30P100FZK
	4	Screw	VBZ30P200FMC
NSP	5	Cable Clip D3S	AEC1782
NSP	6	Cable Clip D3M	AEC1783
NSP	7	Cable CliP	AEC1325
NSP	8	DF Chassis	ANA1583
	9	1P Laed Wire	ADX2505
	10	Screw	ABA1099

2.9 POWER SUPPLY BLOCK

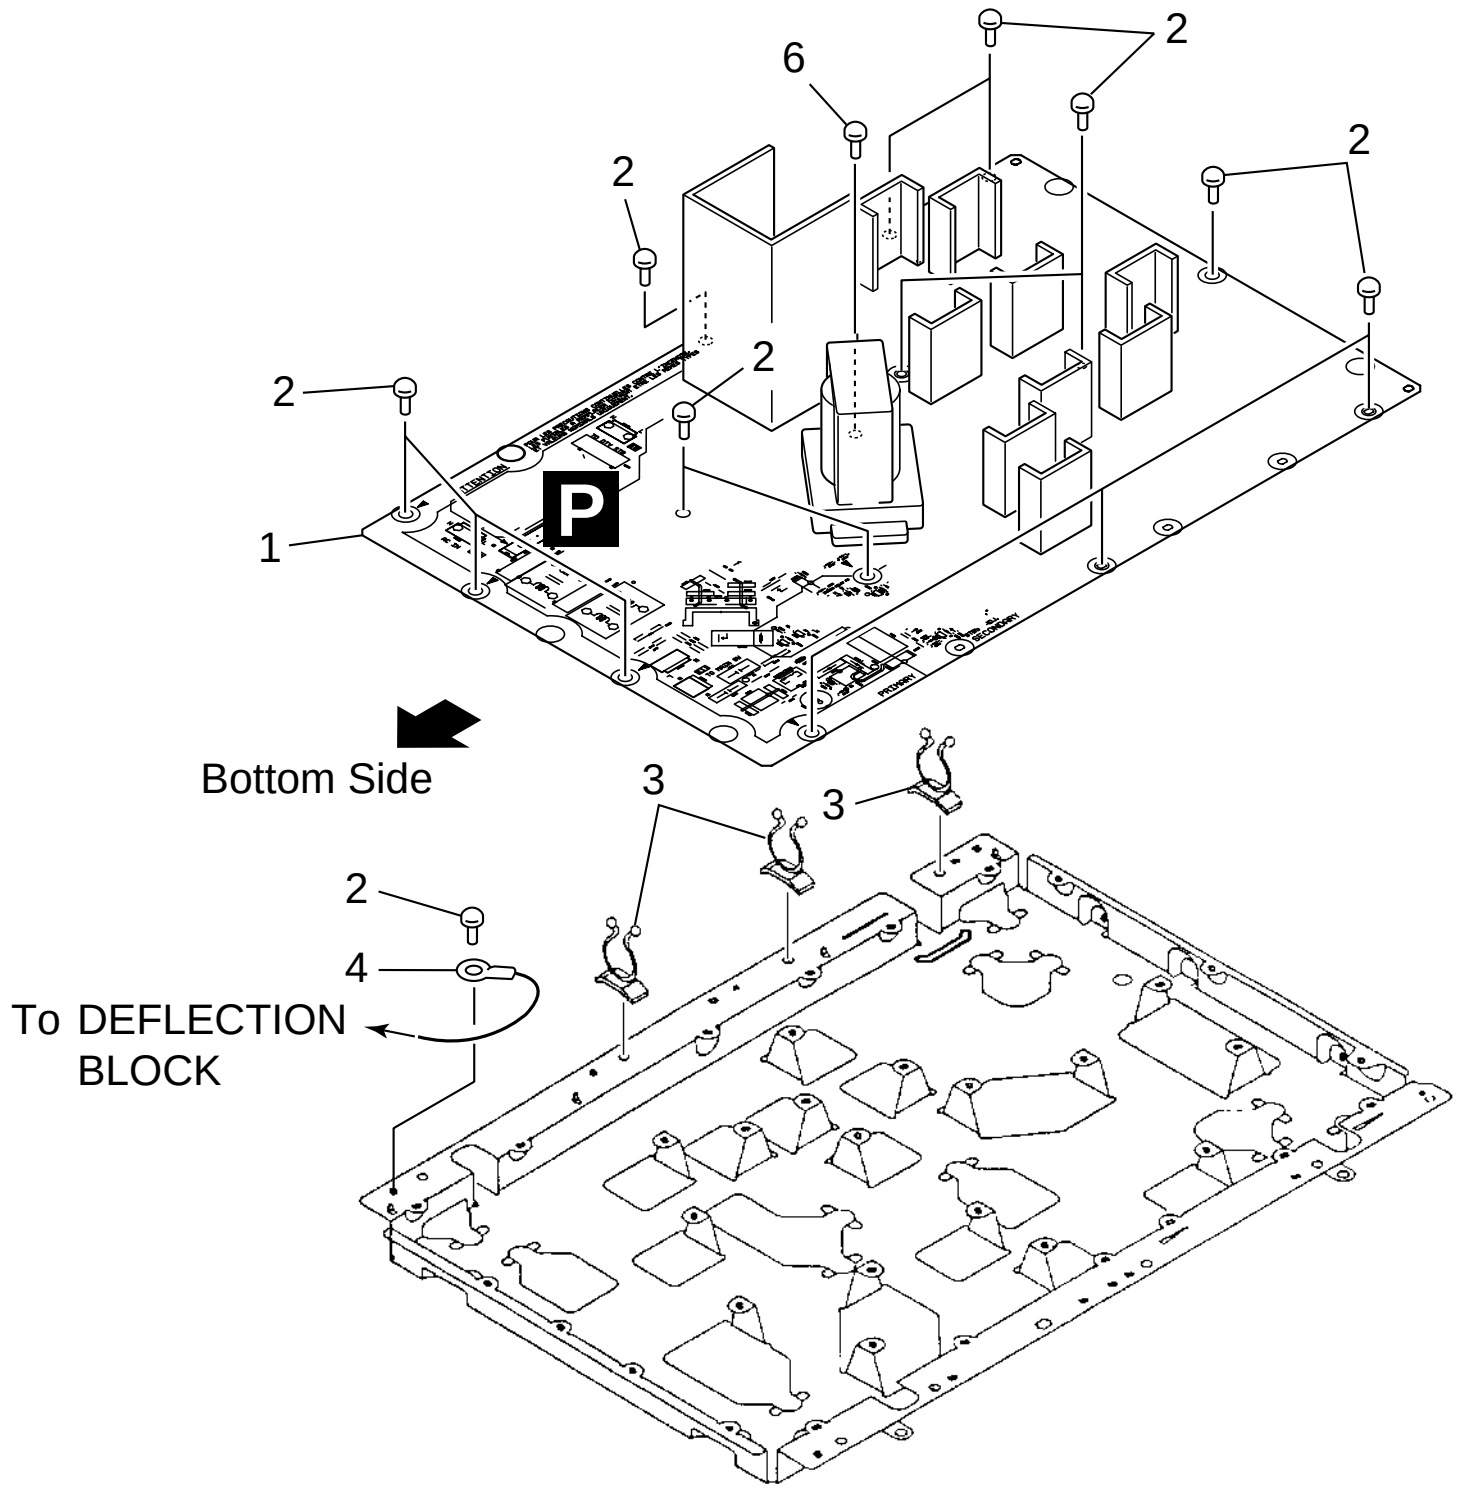
2
6
2
2
2
2
P
1
Bottom Side
3
3
2
4
To DEFLECTION BLOCK

■ POWER SUPPLY BLOCK PARTS LIST

Mark	No.	Description	Part No.
	1	POWER SUPPLY Assy	AWV1912
	2	Screw	BBZ30P080FZK
NSP	3	Cable Clip D3M	AEC1783
	4	1P Laed Wire	ADX2505
	5	• • • • •	
	6	Screw	ABZ30P100FMC

2.10 CONV. AMP BLOCK

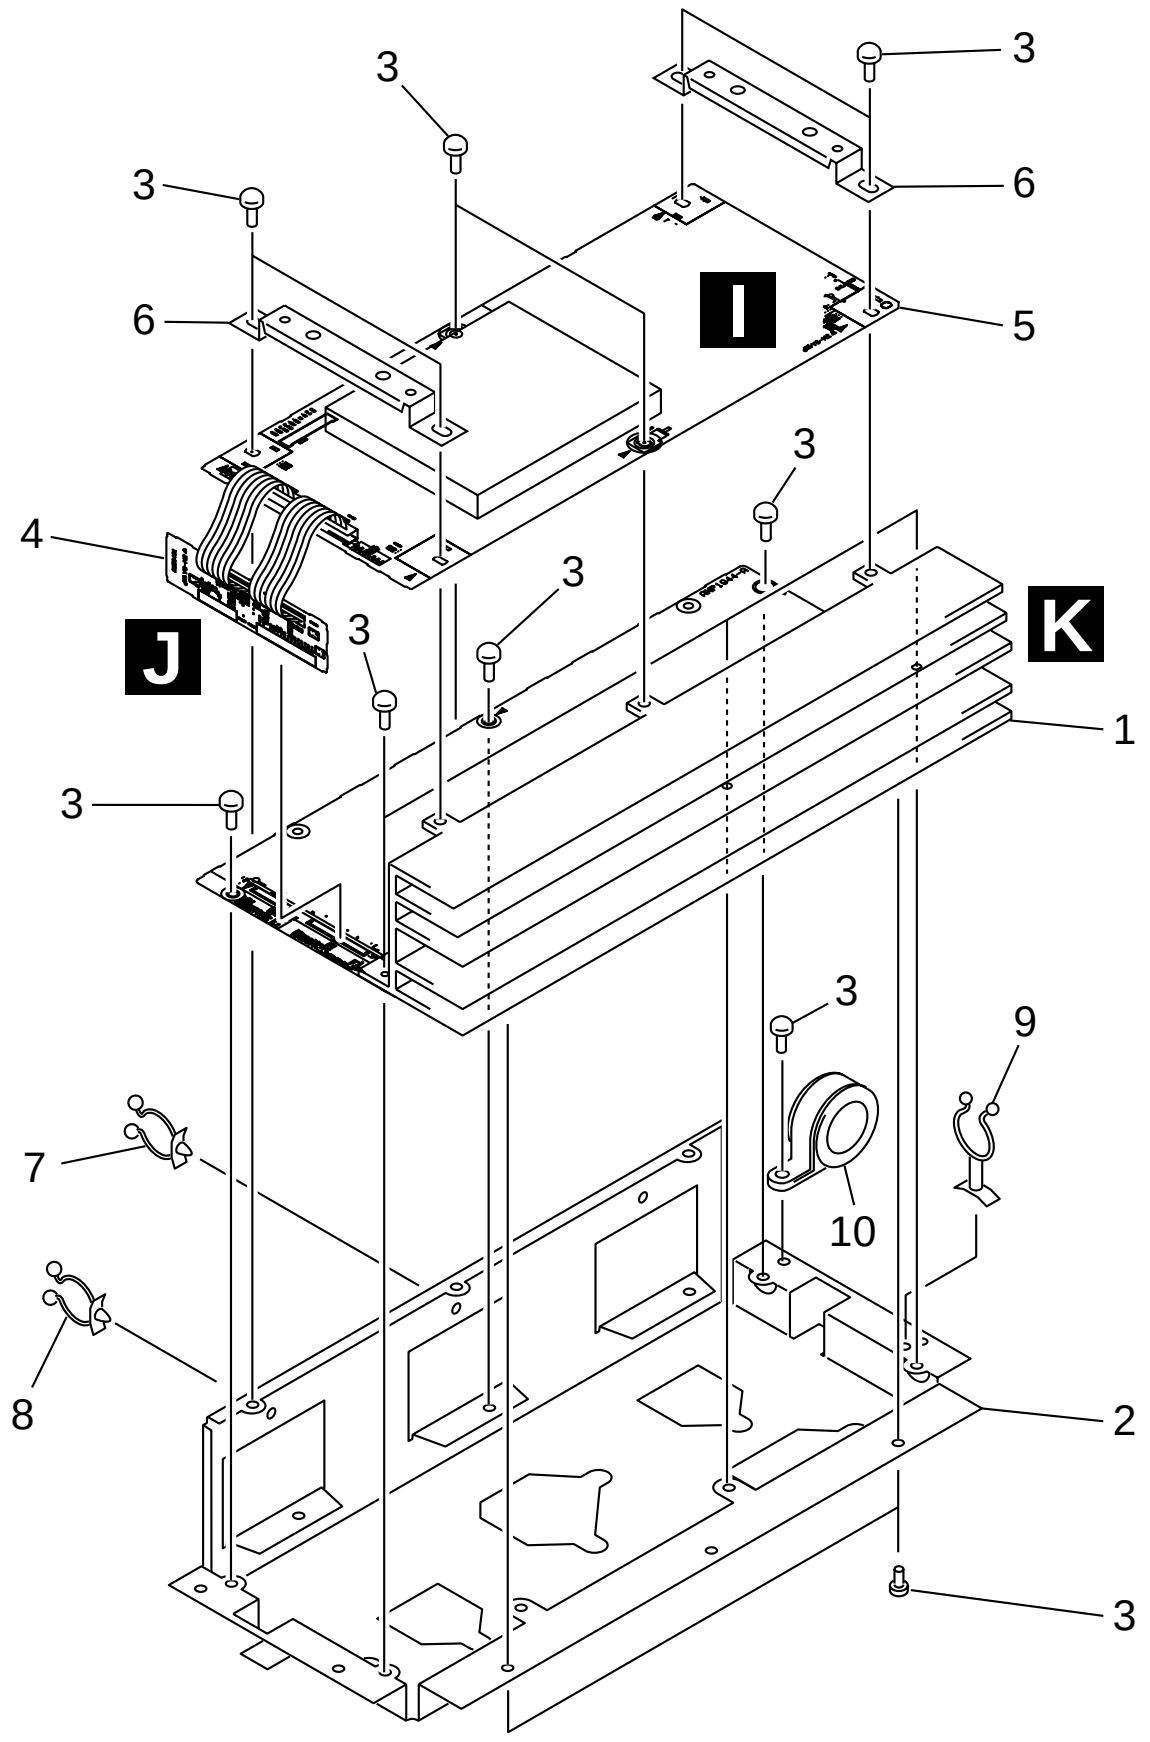

■ CONV. AMP BLOCK PARTS LIST

Mark	No.	Description	Part No.
	1	CONV. AMP Assy	AWZ6649
NSP	2	CONV. Chassis	ANA1619
	3	Screw	ABZ30P100FMC
	4	CONNECTOR Assy	AWZ6461
	5	DIGITAL CONV. ASSY	AWZ6460
NSP	6	CONV. Holder	ANG2365
NSP	7	Cable Clip D3M	AEC1783
NSP	8	Cable Clip D3S	AEC1782
	9	Cable Clip	AEC1806
	10	Ferrite Core	ATX1040

3. BLOCK DIAGRAM AND SCHEMATIC DIAGRAM

3.1 BLOCK DIAGRAM

3.1.1 OVERALL BLOCK DIAGRAM

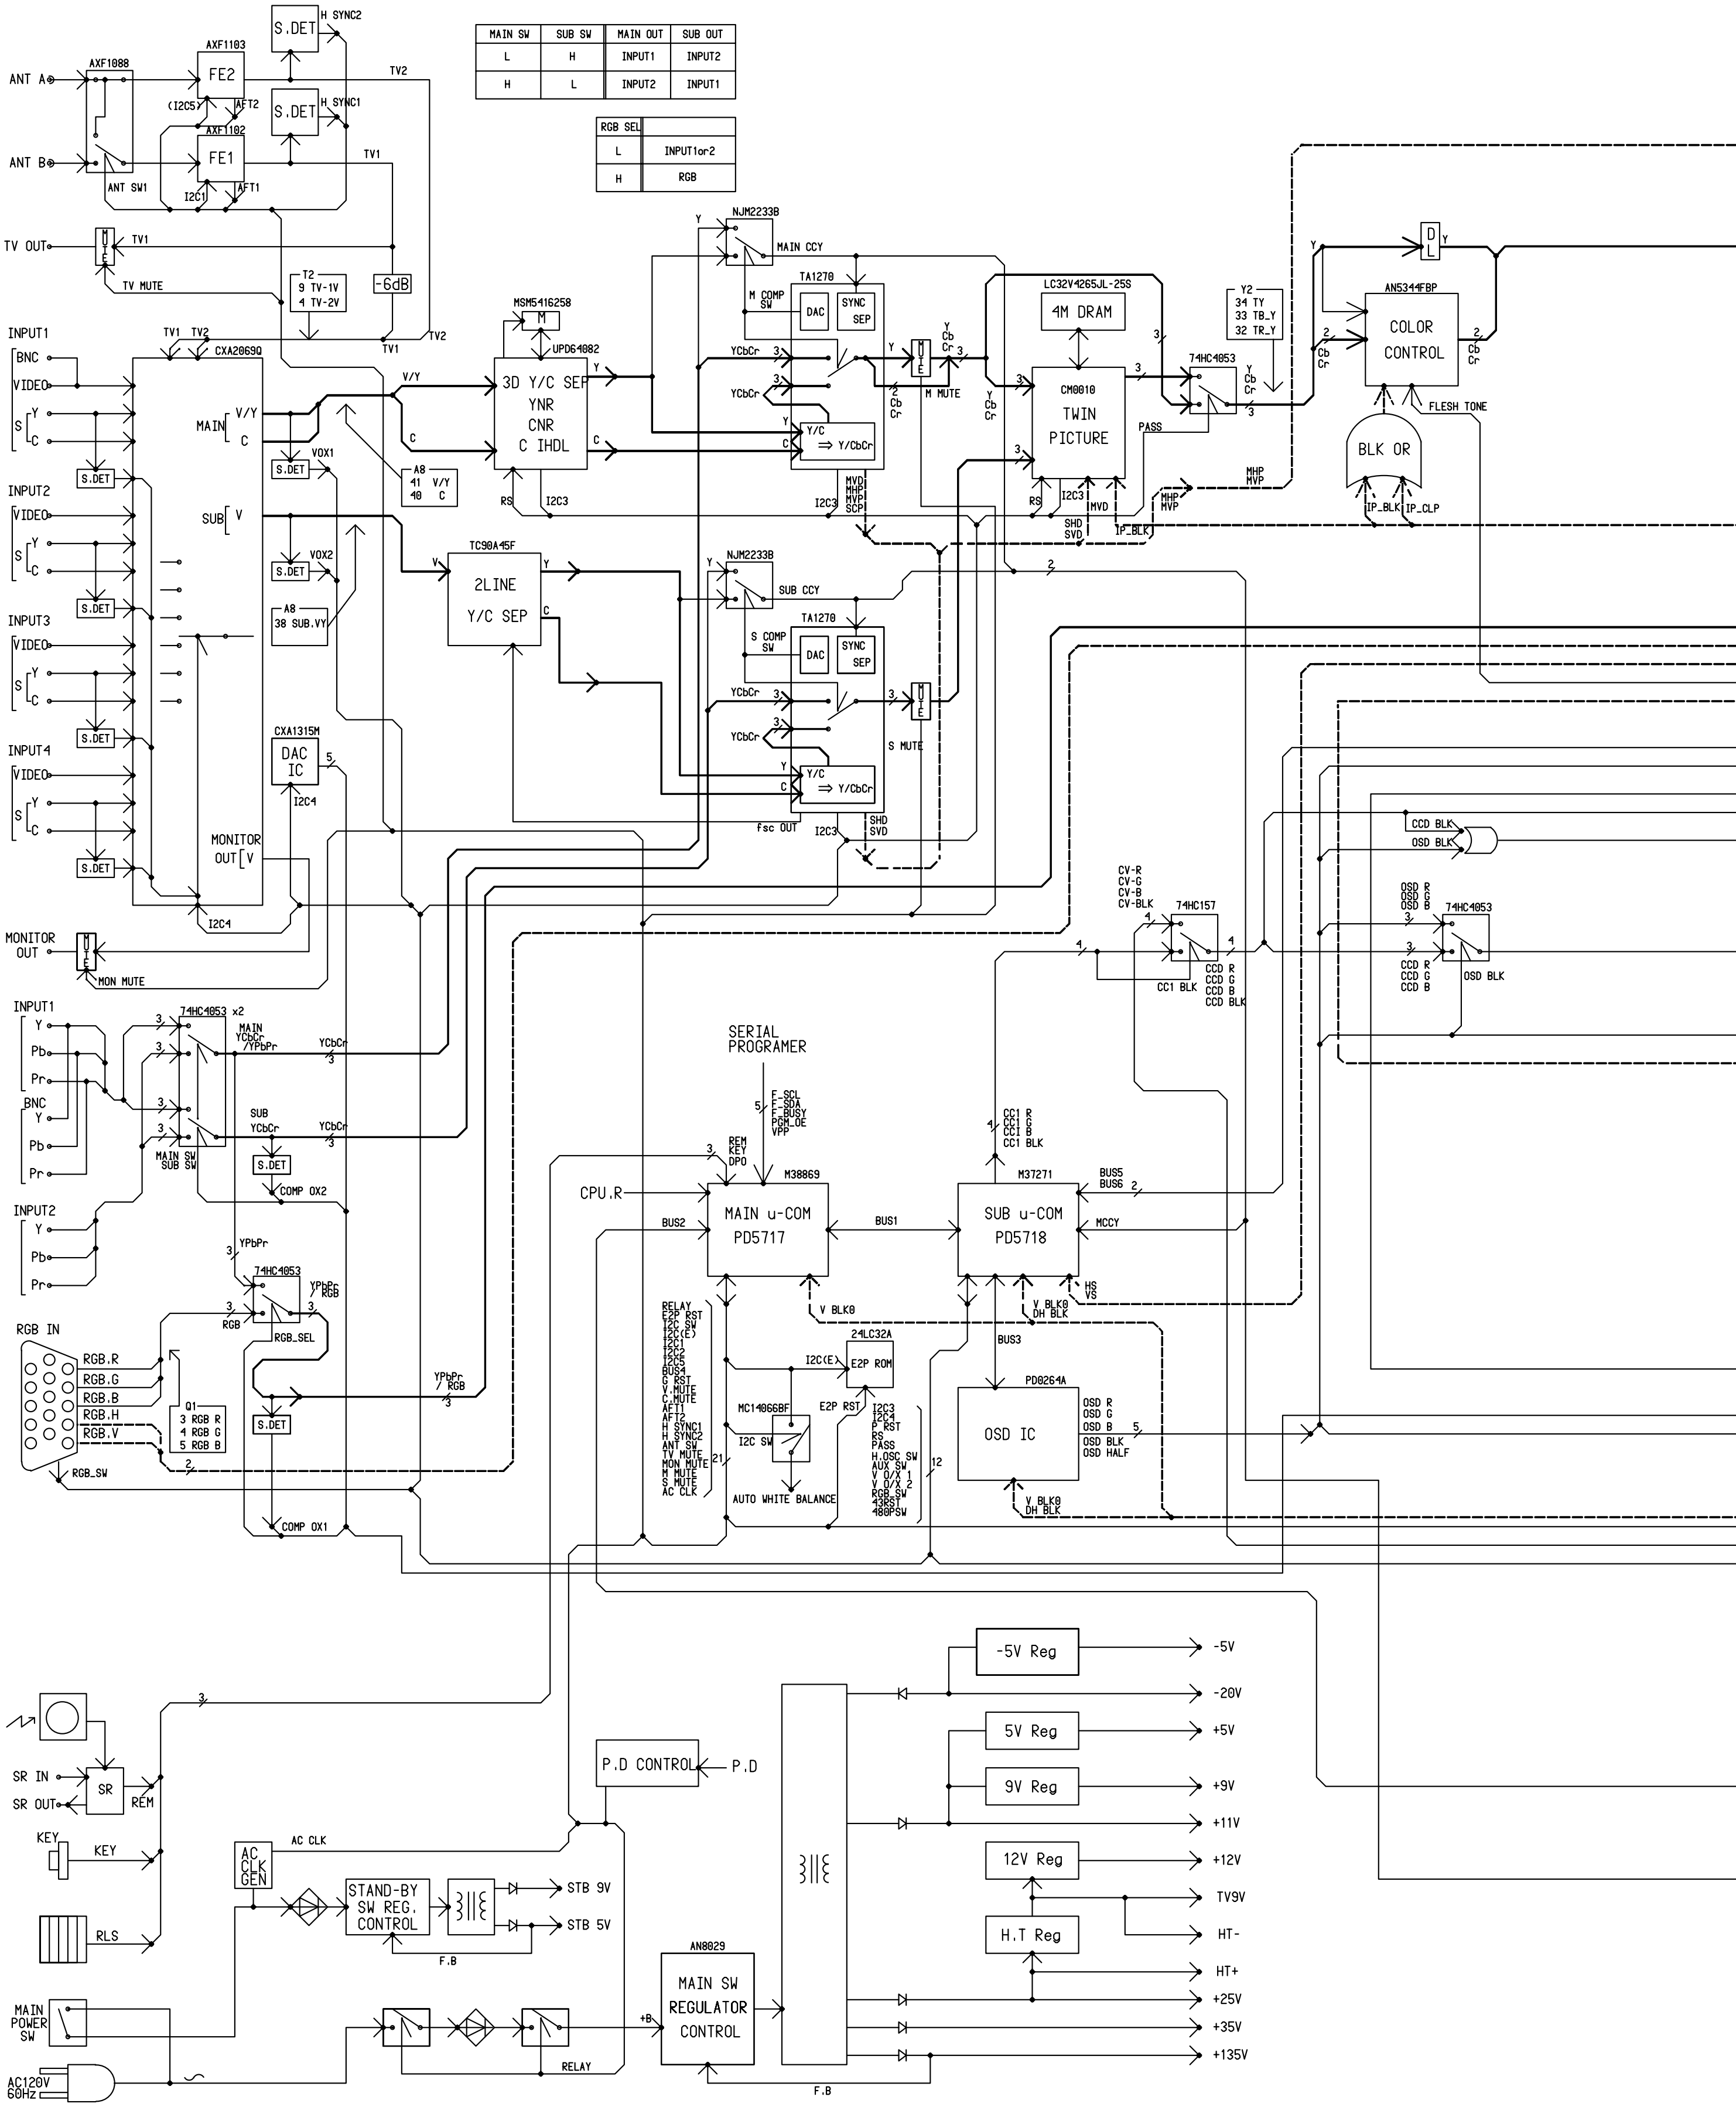

MAIN SW	SUB SW	MAIN OUT	SUB OUT
L	H	INPUT1	INPUT2
H	L	INPUT2	INPUT1

RGB SEL	
L	INPUT1or2
H	RGB

A
B
C
D
ANT A
ANT B
AXF1088
ANT SW1
AXF1103
FE2
AXF1102
FE1
(I2C5)
I2C1
AFT2
AFT1
S.DET
H SYNC2
H SYNC1
TV2
TV1
TV OUT
TV MUTE
T2
9 TV-1V
4 TV-2V
-6dB
INPUT1
BNC
VIDEO
S
Y
C
INPUT2
INPUT3
INPUT4
CXA2069Q
MAIN
V/Y
SUB
V
MONITOR OUT
I2C4
VOX1
VOX2
A8
41 V/Y
40 C
38 SUB.VY
CXA1315M
DAC IC
MONITOR OUT
MON MUTE
MSM5416258
M
UPD64082
3D Y/C SEP
YNR
CNR
C IHDL
RS
I2C3
TC90A45F
2LINE
Y/C SEP
NJM2233B
MAIN CCY
SUB CCY
TA1270
M COMP SW
S COMP SW
DAC
SYNC SEP
YCbCr
Y/C ⇒ Y/CbCr
MVD
MHP
MVP
SCP
M MUTE
S MUTE
SHD
SVD
fsc OUT
LC32V4265JL-25S
4M DRAM
CM0010
TWIN PICTURE
PASS
IP_BLK
MHP
MVP
74HC4053
Y2
34 TY
33 TB_Y
32 TR_Y
Cb
Cr
DL
AN5344FBP
COLOR CONTROL
FLESH TONE
BLK OR
IP_BLK
IP_CLP
CCD BLK
OSD BLK
CV-R
CV-G
CV-B
CV-BLK
74HC157
CCD R
CCD G
CCD B
CCD BLK
CC1 BLK
OSD R
OSD G
OSD B
74HC4053
74HC4053 x2
MAIN YCbCr /YPbPr
SUB YCbCr
MAIN SW
SUB SW
INPUT1
Y
Pb
Pr
BNC
INPUT2
COMP OX2
YPbPr
RGB
RGB_SEL
YPbPr / RGB
RGB IN
RGB.R
RGB.G
RGB.B
RGB.H
RGB.V
Q1
3 RGB R
4 RGB G
5 RGB B
RGB_SW
COMP OX1
SERIAL PROGRAMER
F_SCL
F_SDA
F_BUSY
PGM_OE
VPP
REM
KEY
DPO
CPU.R
M38869
MAIN u-COM
PD5717
BUS2
BUS1
M37271
SUB u-COM
PD5718
CC1 R
CC1 G
CC1 B
CC1 BLK
BUS5
BUS6
MCCY
HS
VS
V BLK0
DH BLK
BUS3
24LC32A
I2C(E)
E2P ROM
E2P RST
MC14066BF
I2C SW
AUTO WHITE BALANCE
RELAY
E2P RST
I2C SW
I2C(E)
I2C1
I2C2
I2C5
BUS4
G RST
V.MUTE
C.MUTE
AFT1
AFT2
H SYNC1
H SYNC2
ANT SW
TV MUTE
MON MUTE
M MUTE
S MUTE
AC CLK
I2C3
I2C4
P RST
RS
PASS
H.OSC SW
AUX SW
V O/X 1
V O/X 2
RGB SW
43RST
480PSW
PD0264A
OSD IC
OSD R
OSD G
OSD B
OSD BLK
OSD HALF
V BLK0
DH BLK
-5V Reg
5V Reg
9V Reg
12V Reg
H.T Reg
-5V
-20V
+5V
+9V
+11V
+12V
TV9V
HT-
HT+
+25V
+35V
+135V
P.D CONTROL
P.D
SR IN
SR OUT
SR
REM
KEY
RLS
AC CLK
AC CLK GEN
STAND-BY SW REG. CONTROL
STB 9V
STB 5V
F.B
AN8029
MAIN SW REGULATOR CONTROL
+B
RELAY
MAIN POWER SW
AC120V 60Hz

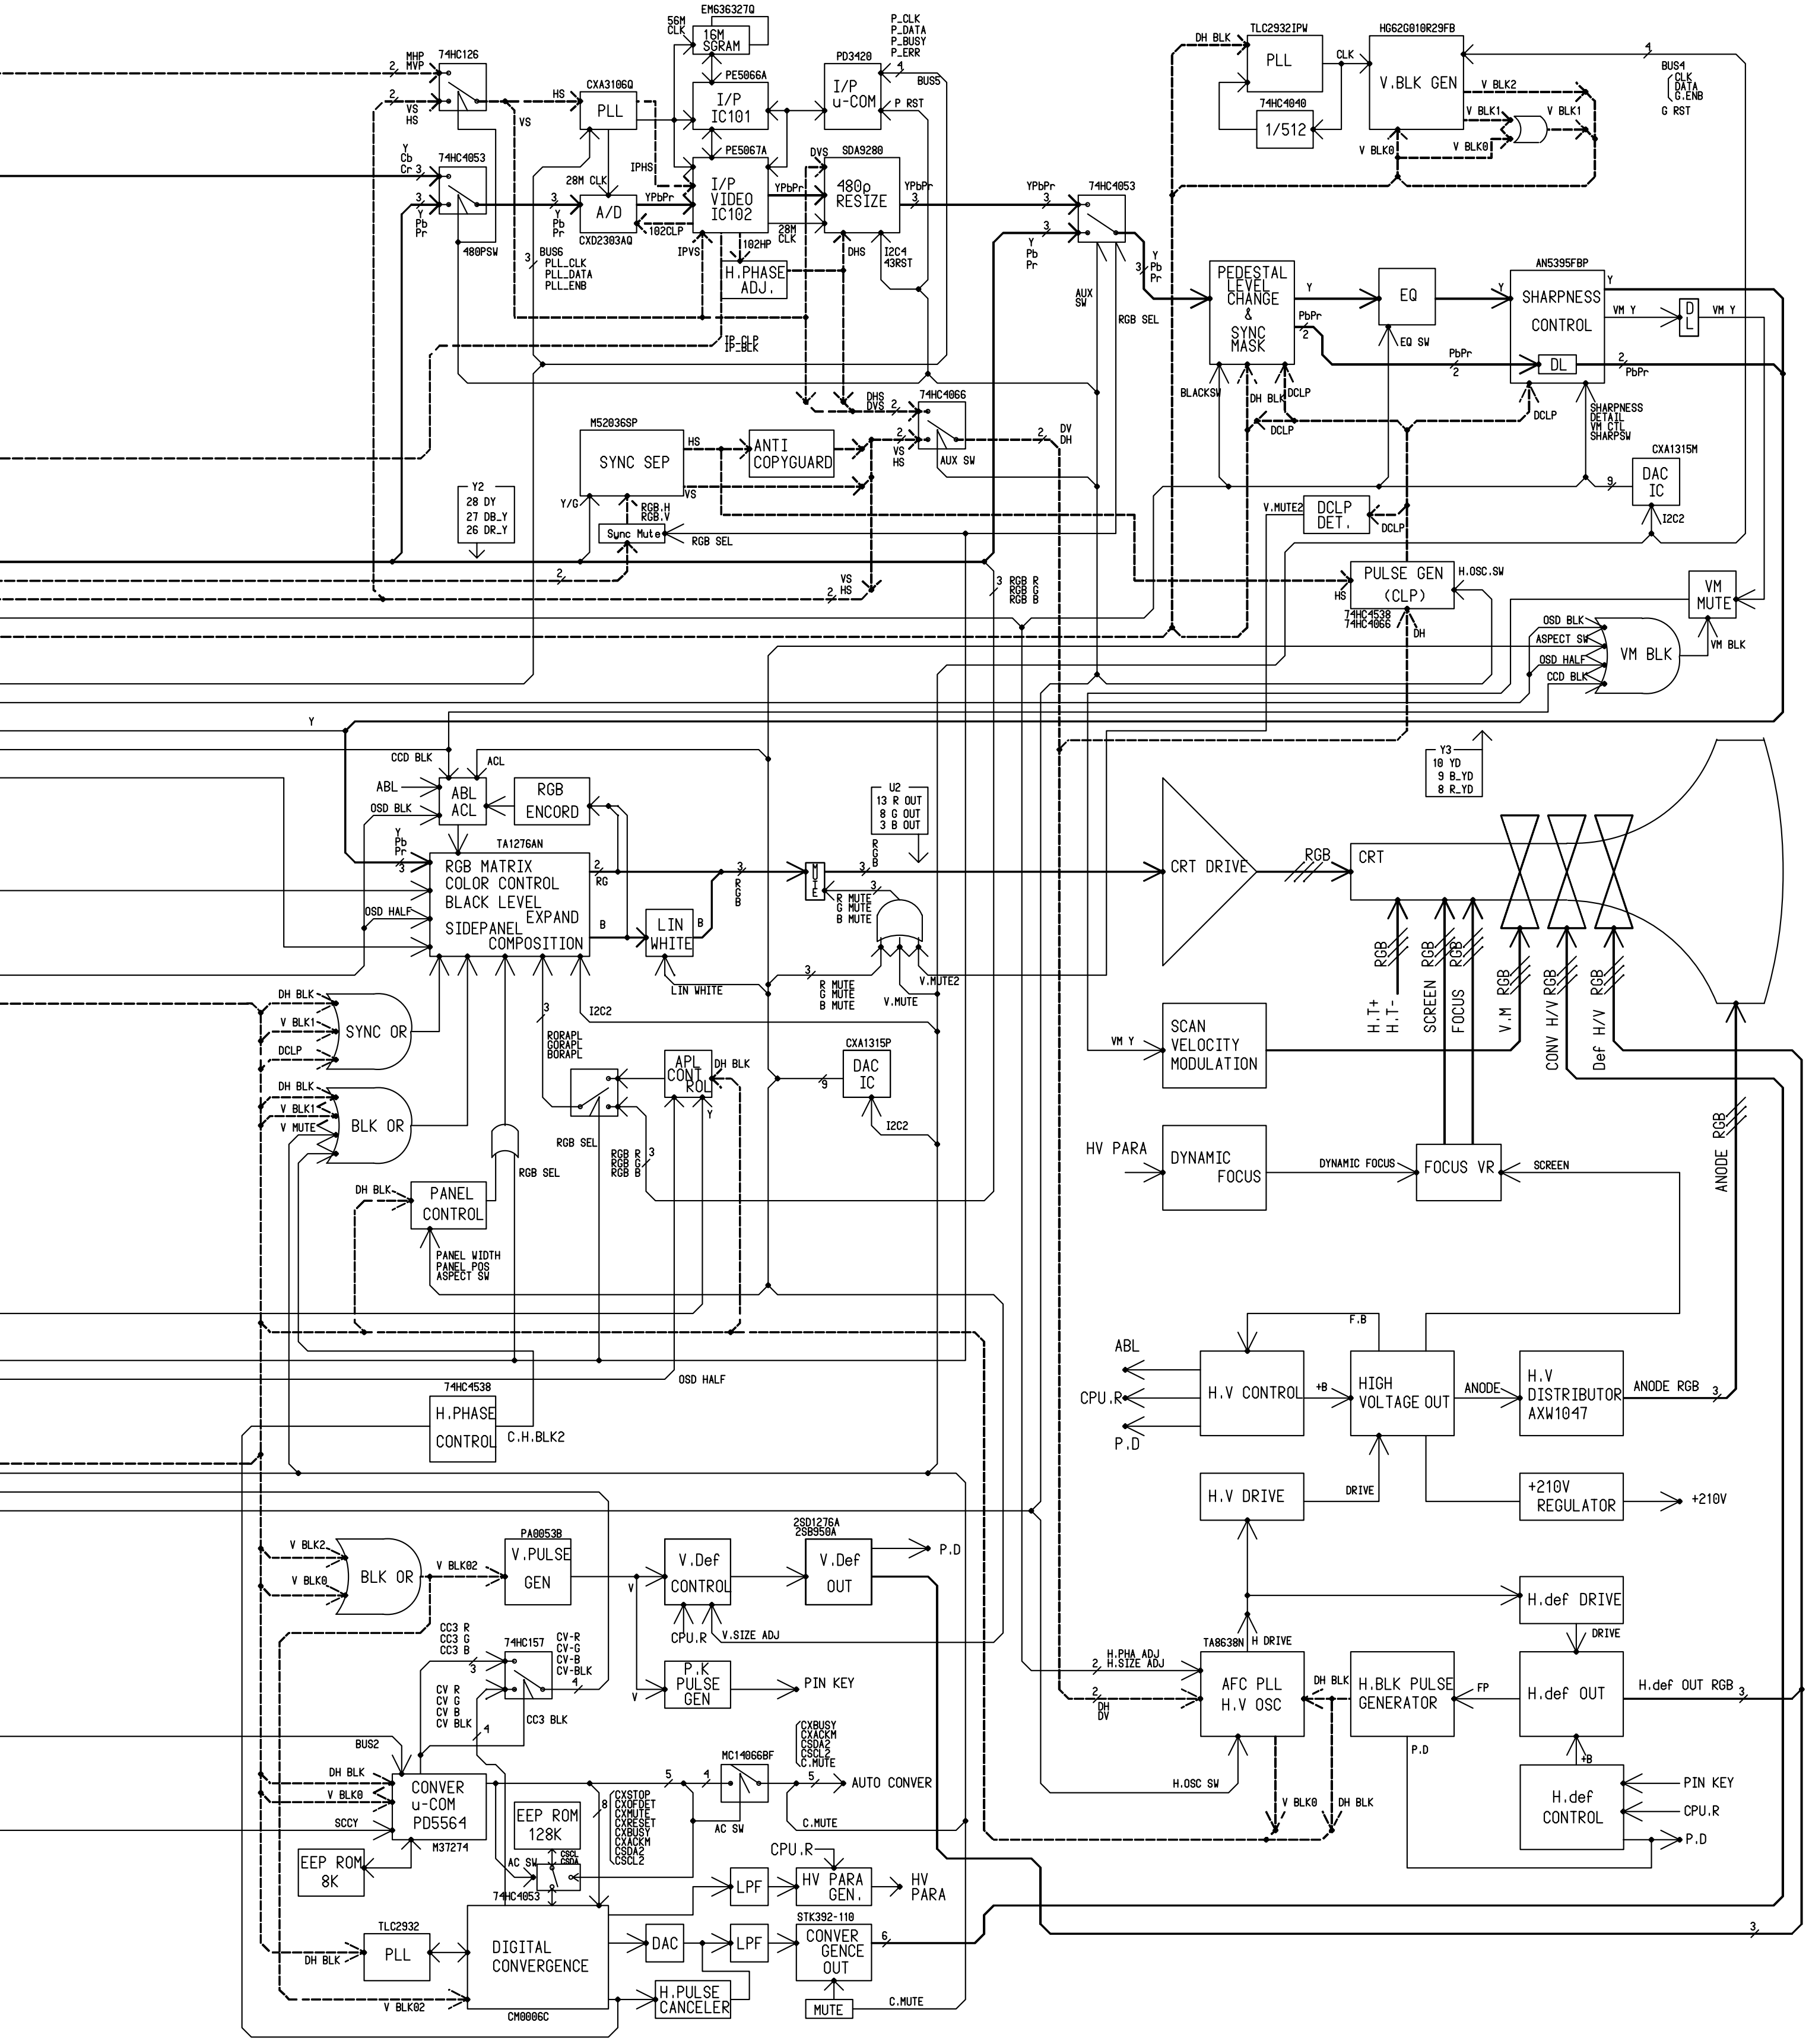
74HC126
MHP
MVP
VS
HS
CXA3106Q
PLL
EM636327Q
16M SGRAM
56M CLK
PE5066A
I/P IC101
PD3420
I/P u-COM
P_CLK
P_DATA
P_BUSY
P_ERR
BUS5
P RST
74HC4053
Y Cb Cr
28M CLK
A/D
CXD2303AQ
480PSW
IPHS
PE5067A
I/P VIDEO IC102
YPbPr
102CLP
102HP
IPVS
H.PHASE ADJ.
DVS
SDA9280
480p RESIZE
DHS
I2C4
43RST
BUS6
PLL_CLK
PLL_DATA
PLL_ENB
IP-CLP
IP-BLK
AUX SW
RGB SEL
TLC2932IPW
DH BLK
CLK
74HC4040
1/512
HG62G010R29FB
V.BLK GEN
V BLK2
V BLK1
V BLK0
BUS4
CLK
DATA
G.ENB
G RST
PEDESTAL LEVEL CHANGE & SYNC MASK
EQ
EQ SW
AN5395FBP
SHARPNESS CONTROL
VM Y
DL
PbPr
BLACKSW
DCLP
SHARPNESS
DETAIL
VM CTL
SHARPSW
CXA1315M
DAC IC
I2C2
74HC4066
M52036SP
SYNC SEP
ANTI COPYGUARD
Y/G
RGB.H
RGB.V
Sync Mute
RGB SEL
Y2
28 DY
27 DB_Y
26 DR_Y
DV
DH
V.MUTE2
DCLP DET.
PULSE GEN (CLP)
H.OSC.SW
74HC4538
74HC4066
VM MUTE
OSD BLK
ASPECT SW
OSD HALF
CCD BLK
VM BLK
Y3
10 YD
9 B_YD
8 R_YD
Y
CCD BLK
ABL
OSD BLK
ABL ACL
ACL
RGB ENCORD
TA1276AN
RGB MATRIX
COLOR CONTROL
BLACK LEVEL EXPAND
SIDEPANEL COMPOSITION
OSD HALF
LIN WHITE
U2
13 R OUT
8 G OUT
3 B OUT
MUTE
R MUTE
G MUTE
B MUTE
V.MUTE2
V.MUTE
LIN WHITE
I2C2
CRT DRIVE
RGB
CRT
H.T+
H.T-
SCREEN
FOCUS
V.M
CONV H/V
Def H/V
ANODE RGB
DH BLK
V BLK1
DCLP
SYNC OR
V MUTE
BLK OR
RORAPL
GORAPL
BORAPL
APL CONTROL
CXA1315P
DAC IC
RGB SEL
DH BLK
PANEL CONTROL
PANEL WIDTH
PANEL POS
ASPECT SW
SCAN VELOCITY MODULATION
HV PARA
DYNAMIC FOCUS
FOCUS VR
SCREEN
74HC4538
H.PHASE CONTROL
C.H.BLK2
OSD HALF
ABL
CPU.R
P.D
F.B
H.V CONTROL
+B
HIGH VOLTAGE OUT
ANODE
H.V DISTRIBUTOR AXW1047
H.V DRIVE
DRIVE
+210V REGULATOR
+210V
PA0053B
V BLK2
V BLK0
BLK OR
V BLK02
V.PULSE GEN
V.Def CONTROL
2SD1276A
2SB950A
V.Def OUT
P.D
CPU.R
V.SIZE ADJ
P.K PULSE GEN
PIN KEY
CC3 R
CC3 G
CC3 B
74HC157
CV-R
CV-G
CV-B
CV-BLK
CV R
CV G
CV B
CV BLK
CC3 BLK
H.def DRIVE
TA8638N
H DRIVE
H.PHA ADJ
H.SIZE ADJ
AFC PLL H.V OSC
H.BLK PULSE GENERATOR
FP
H.def OUT
H.def OUT RGB
H.OSC SW
BUS2
CONVER u-COM PD5564
SCCY
M37274
EEP ROM 128K
CXSTOP
CXOFDET
CXMUTE
CXRESET
CXBUSY
CXACKM
CSDA2
CSCL2
MC14066BF
AUTO CONVER
CXBUSY
CXACKM
CSDA2
CSCL2
C.MUTE
AC SW
EEP ROM 8K
74HC4053
CPU.R
LPF
HV PARA GEN.
HV PARA
TLC2932
PLL
DIGITAL CONVERGENCE
CM0006C
DAC
LPF
STK392-110
CONVER GENCE OUT
MUTE
C.MUTE
H.PULSE CANCELER
V BLK02
H.def CONTROL
PIN KEY
CPU.R
P.D

3.1.2 CONTROL BLOCK

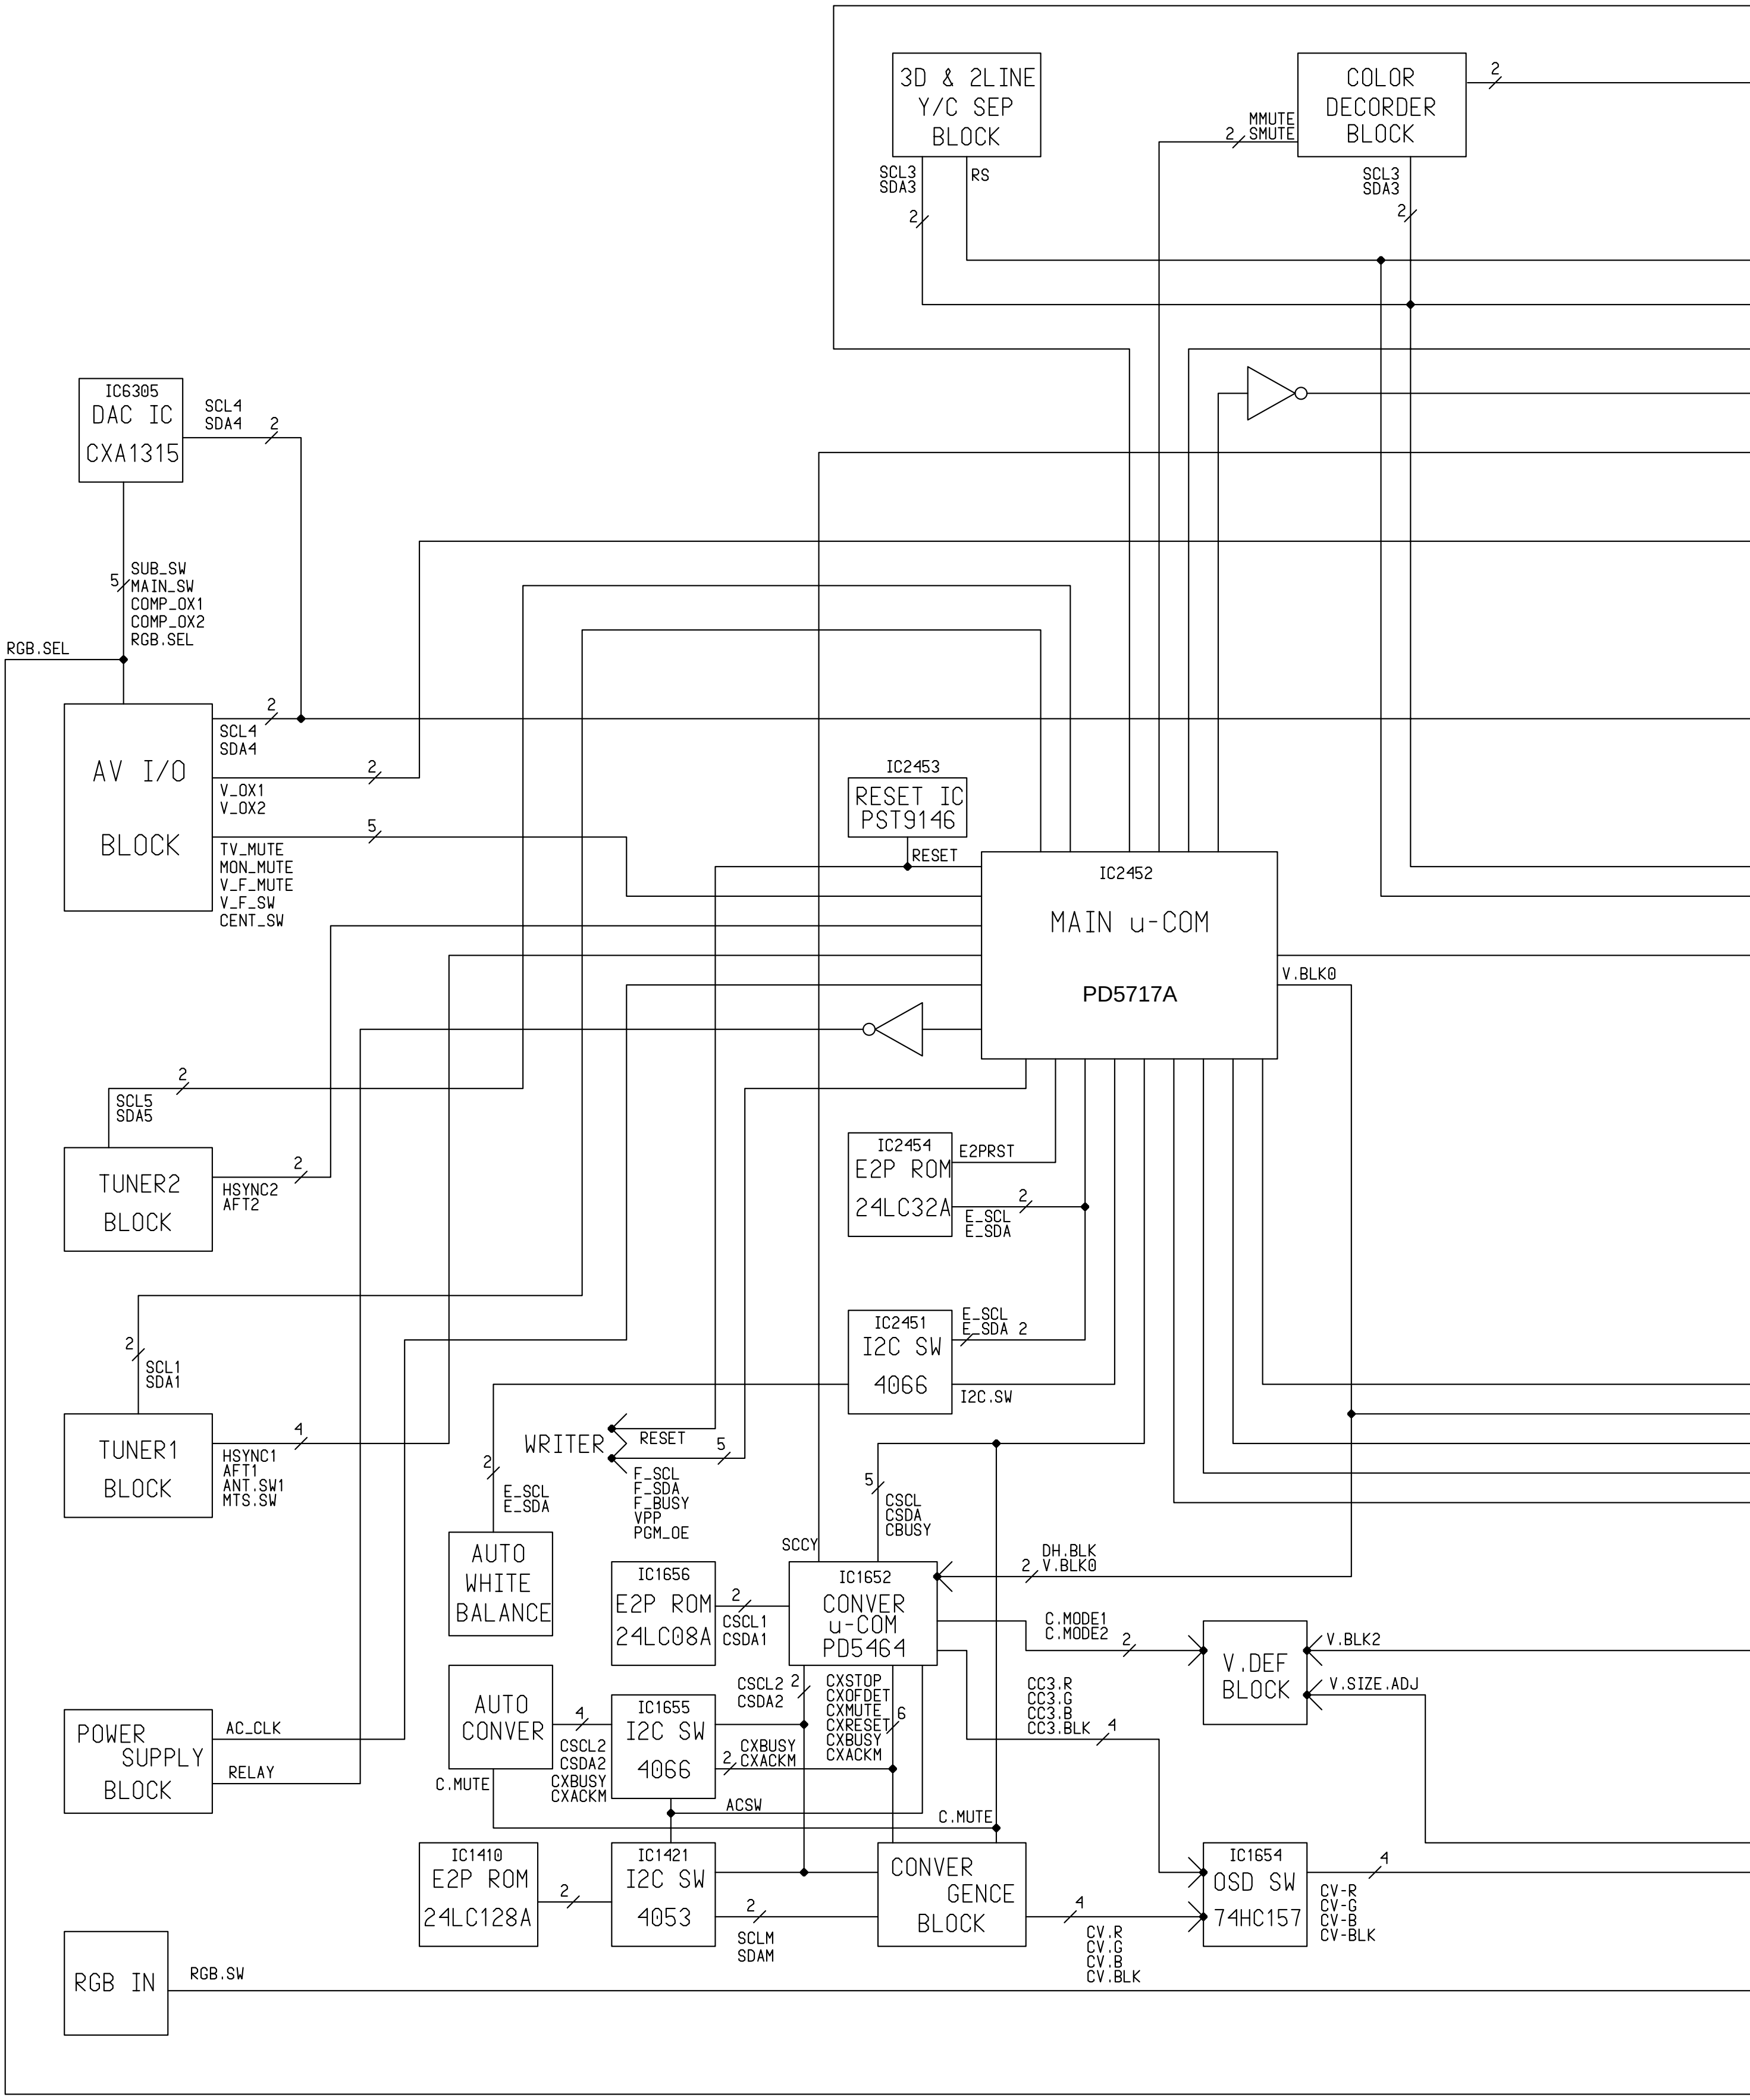
3D & 2LINE Y/C SEP BLOCK
SCL3
SDA3
RS
COLOR DECORDER BLOCK
MMUTE
SMUTE
SCL3
SDA3
IC6305
DAC IC
CXA1315
SCL4
SDA4
SUB_SW
MAIN_SW
COMP_OX1
COMP_OX2
RGB.SEL
RGB.SEL
AV I/O BLOCK
SCL4
SDA4
V_OX1
V_OX2
TV_MUTE
MON_MUTE
V_F_MUTE
V_F_SW
CENT_SW
IC2453
RESET IC
PST9146
RESET
IC2452
MAIN u-COM
PD5717A
V.BLK0
SCL5
SDA5
TUNER2 BLOCK
HSYNC2
AFT2
IC2454
E2P ROM
24LC32A
E2PRST
E_SCL
E_SDA
IC2451
I2C SW
4066
E_SCL
E_SDA
I2C.SW
SCL1
SDA1
TUNER1 BLOCK
HSYNC1
AFT1
ANT.SW1
MTS.SW
WRITER
RESET
F_SCL
F_SDA
F_BUSY
VPP
PGM_OE
E_SCL
E_SDA
AUTO WHITE BALANCE
CSCL
CSDA
CBUSY
SCCY
DH.BLK
V.BLK0
IC1656
E2P ROM
24LC08A
CSCL1
CSDA1
IC1652
CONVER u-COM
PD5464
C.MODE1
C.MODE2
V.DEF BLOCK
V.BLK2
V.SIZE.ADJ
AUTO CONVER
IC1655
I2C SW
4066
CSCL2
CSDA2
CXBUSY
CXACKM
CSCL2
CSDA2
CXSTOP
CXOFDET
CXMUTE
CXRESET
CXBUSY
CXACKM
CXBUSY
CXACKM
CC3.R
CC3.G
CC3.B
CC3.BLK
POWER SUPPLY BLOCK
AC_CLK
RELAY
C.MUTE
ACSW
C.MUTE
IC1410
E2P ROM
24LC128A
IC1421
I2C SW
4053
SCLM
SDAM
CONVER GENCE BLOCK
CV.R
CV.G
CV.B
CV.BLK
IC1654
OSD SW
74HC157
CV-R
CV-G
CV-B
CV-BLK
RGB IN
RGB.SW
2
5
4
6

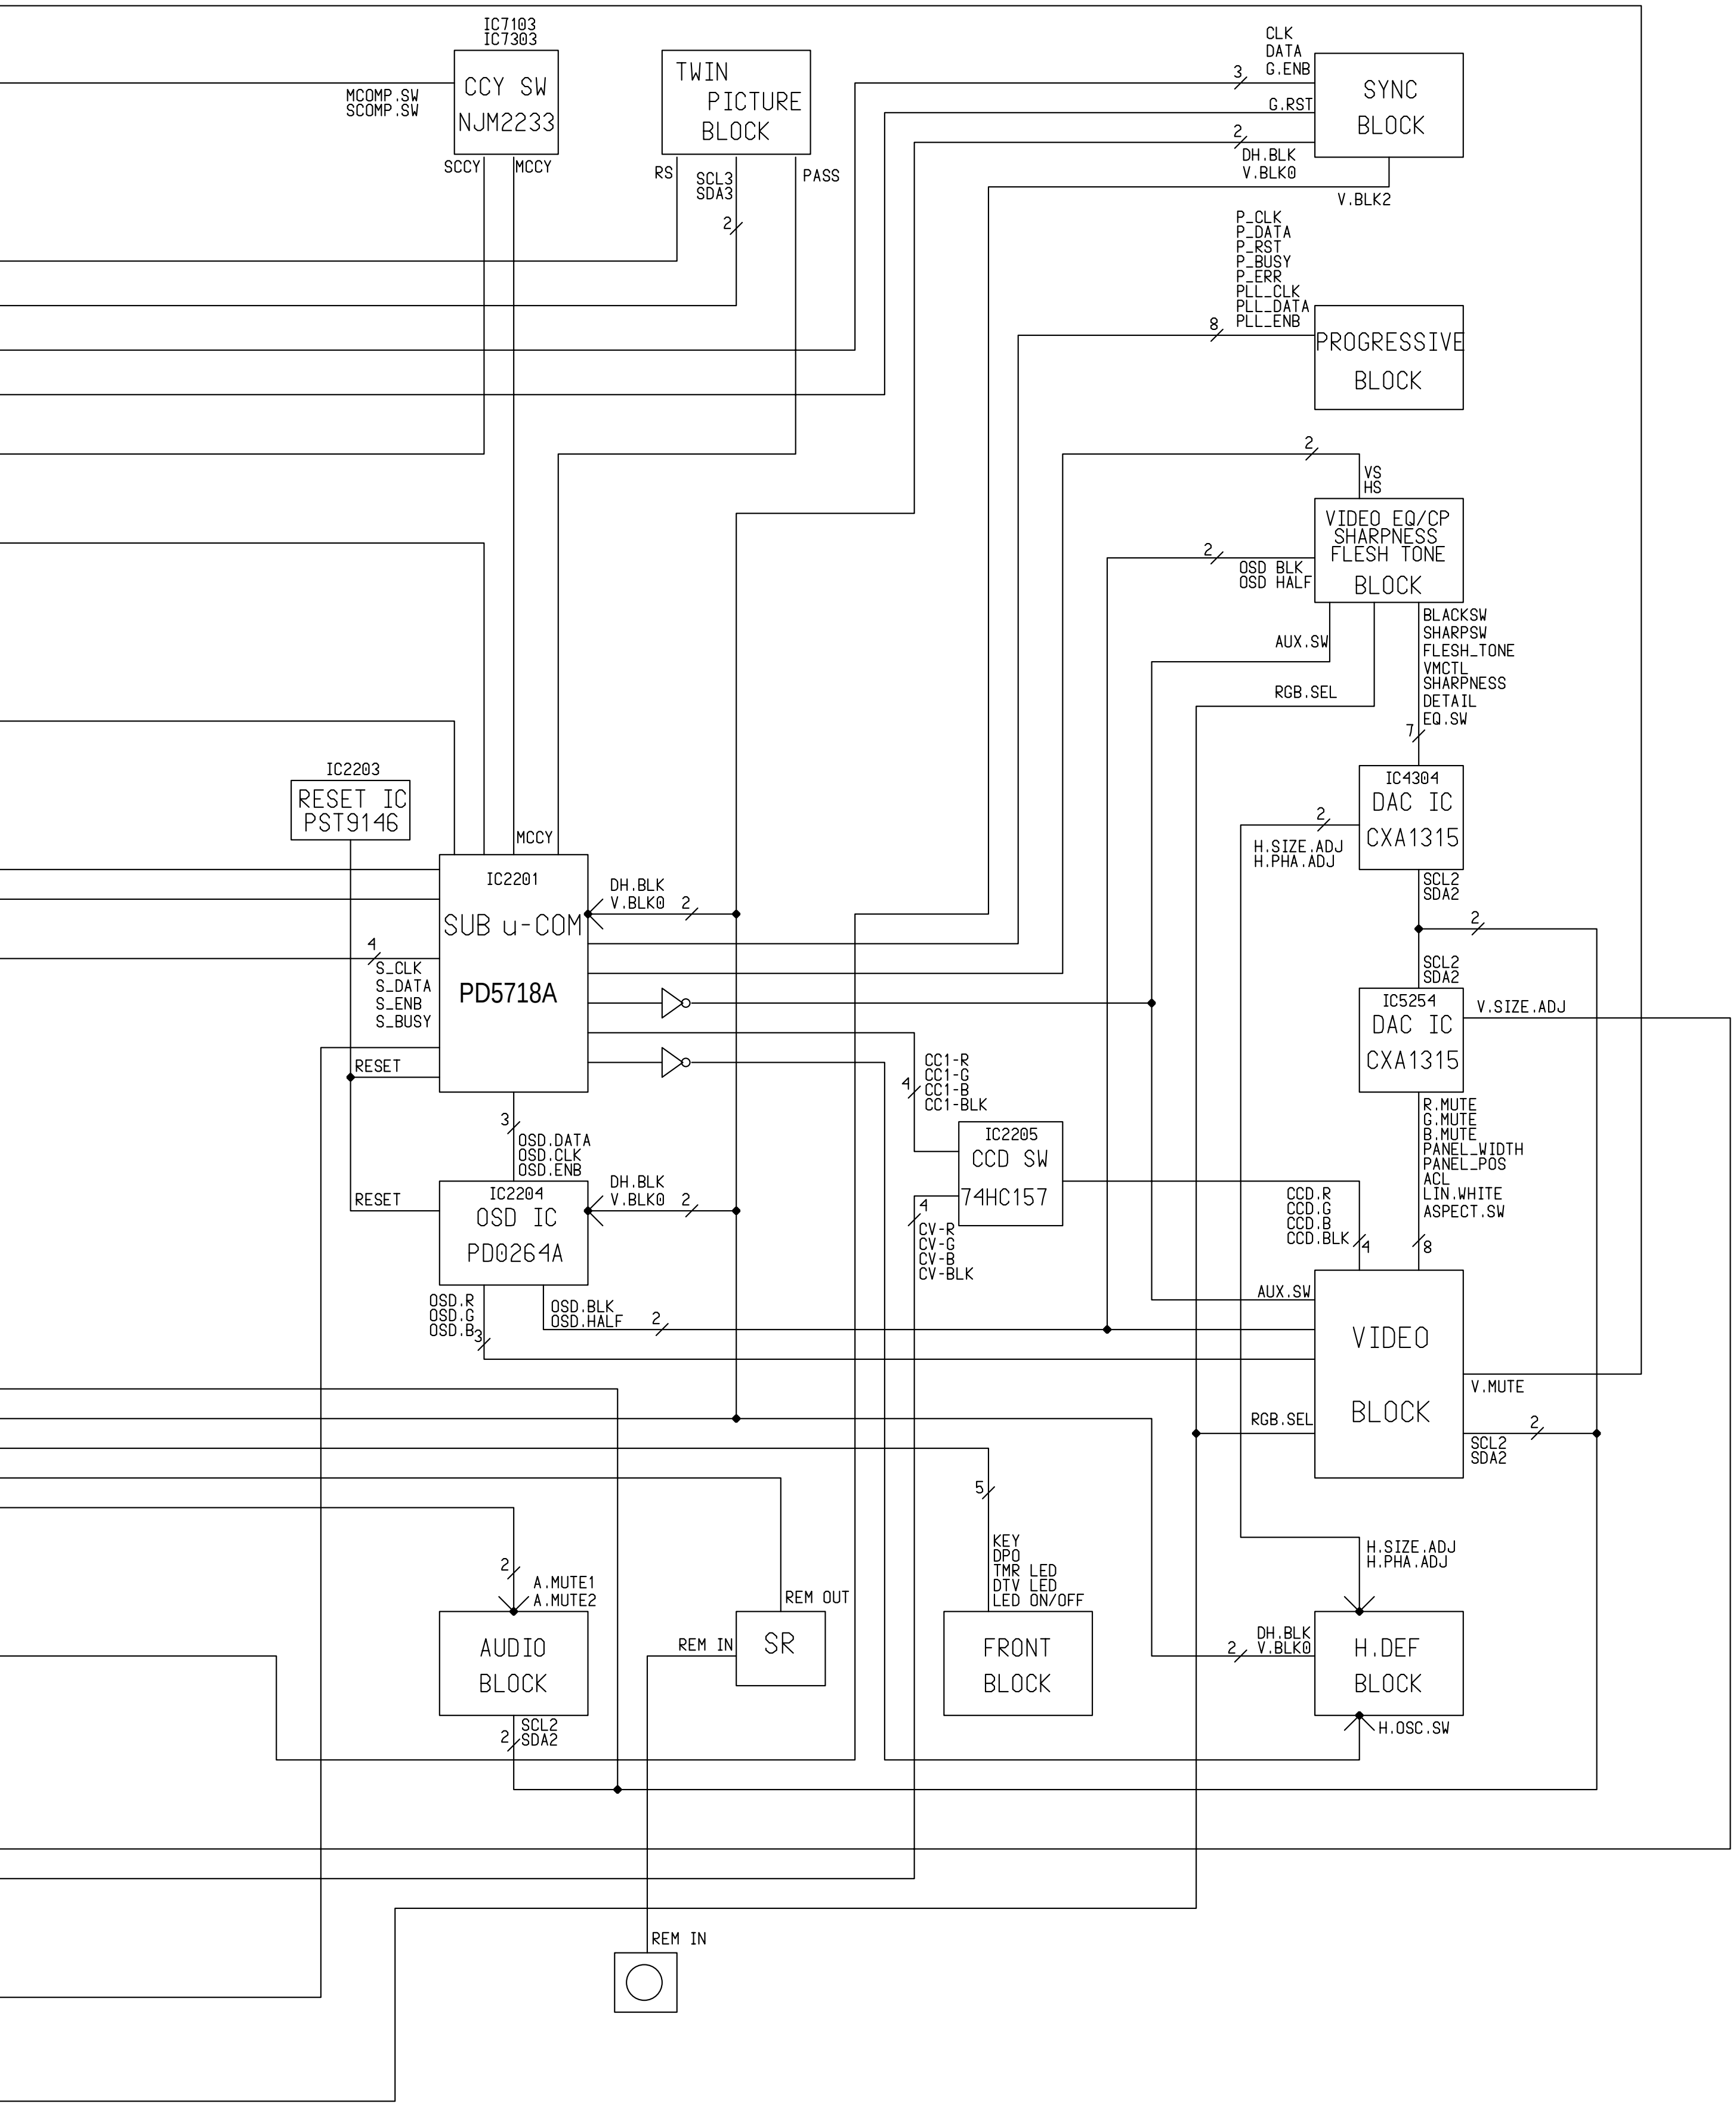
IC7103
IC7303
CCY SW
NJM2233
MCOMP.SW
SCOMP.SW
SCCY
MCCY
TWIN PICTURE BLOCK
RS
SCL3
SDA3
2
PASS
CLK
DATA
G.ENB
3
G.RST
2
DH.BLK
V.BLK0
SYNC BLOCK
V.BLK2
P_CLK
P_DATA
P_RST
P_BUSY
P_ERR
PLL_CLK
PLL_DATA
PLL_ENB
8
PROGRESSIVE BLOCK
2
VS
HS
VIDEO EQ/CP
SHARPNESS
FLESH TONE
BLOCK
2
OSD BLK
OSD HALF
AUX.SW
RGB.SEL
BLACKSW
SHARPSW
FLESH_TONE
VMCTL
SHARPNESS
DETAIL
EQ.SW
7
IC4304
DAC IC
CXA1315
2
H.SIZE.ADJ
H.PHA.ADJ
SCL2
SDA2
2
SCL2
SDA2
IC5254
DAC IC
CXA1315
V.SIZE.ADJ
R.MUTE
G.MUTE
B.MUTE
PANEL_WIDTH
PANEL_POS
ACL
LIN.WHITE
ASPECT.SW
8
IC2203
RESET IC
PST9146
MCCY
IC2201
SUB u-COM
PD5718A
DH.BLK
V.BLK0
2
4
S_CLK
S_DATA
S_ENB
S_BUSY
RESET
3
OSD.DATA
OSD.CLK
OSD.ENB
CC1-R
CC1-G
CC1-B
CC1-BLK
4
IC2205
CCD SW
74HC157
4
CV-R
CV-G
CV-B
CV-BLK
CCD.R
CCD.G
CCD.B
CCD.BLK
4
RESET
IC2204
OSD IC
PD0264A
DH.BLK
V.BLK0
2
OSD.R
OSD.G
OSD.B
3
OSD.BLK
OSD.HALF
2
AUX.SW
VIDEO BLOCK
V.MUTE
RGB.SEL
2
SCL2
SDA2
5
KEY
DPO
TMR LED
DTV LED
LED ON/OFF
2
A.MUTE1
A.MUTE2
AUDIO BLOCK
SCL2
SDA2
2
REM OUT
REM IN
SR
FRONT BLOCK
H.SIZE.ADJ
H.PHA.ADJ
DH.BLK
V.BLK0
2
H.DEF BLOCK
H.OSC.SW
REM IN
A
B
C
D

3.1.3 SIGNAL ASSY

A SIGNAL ASSY

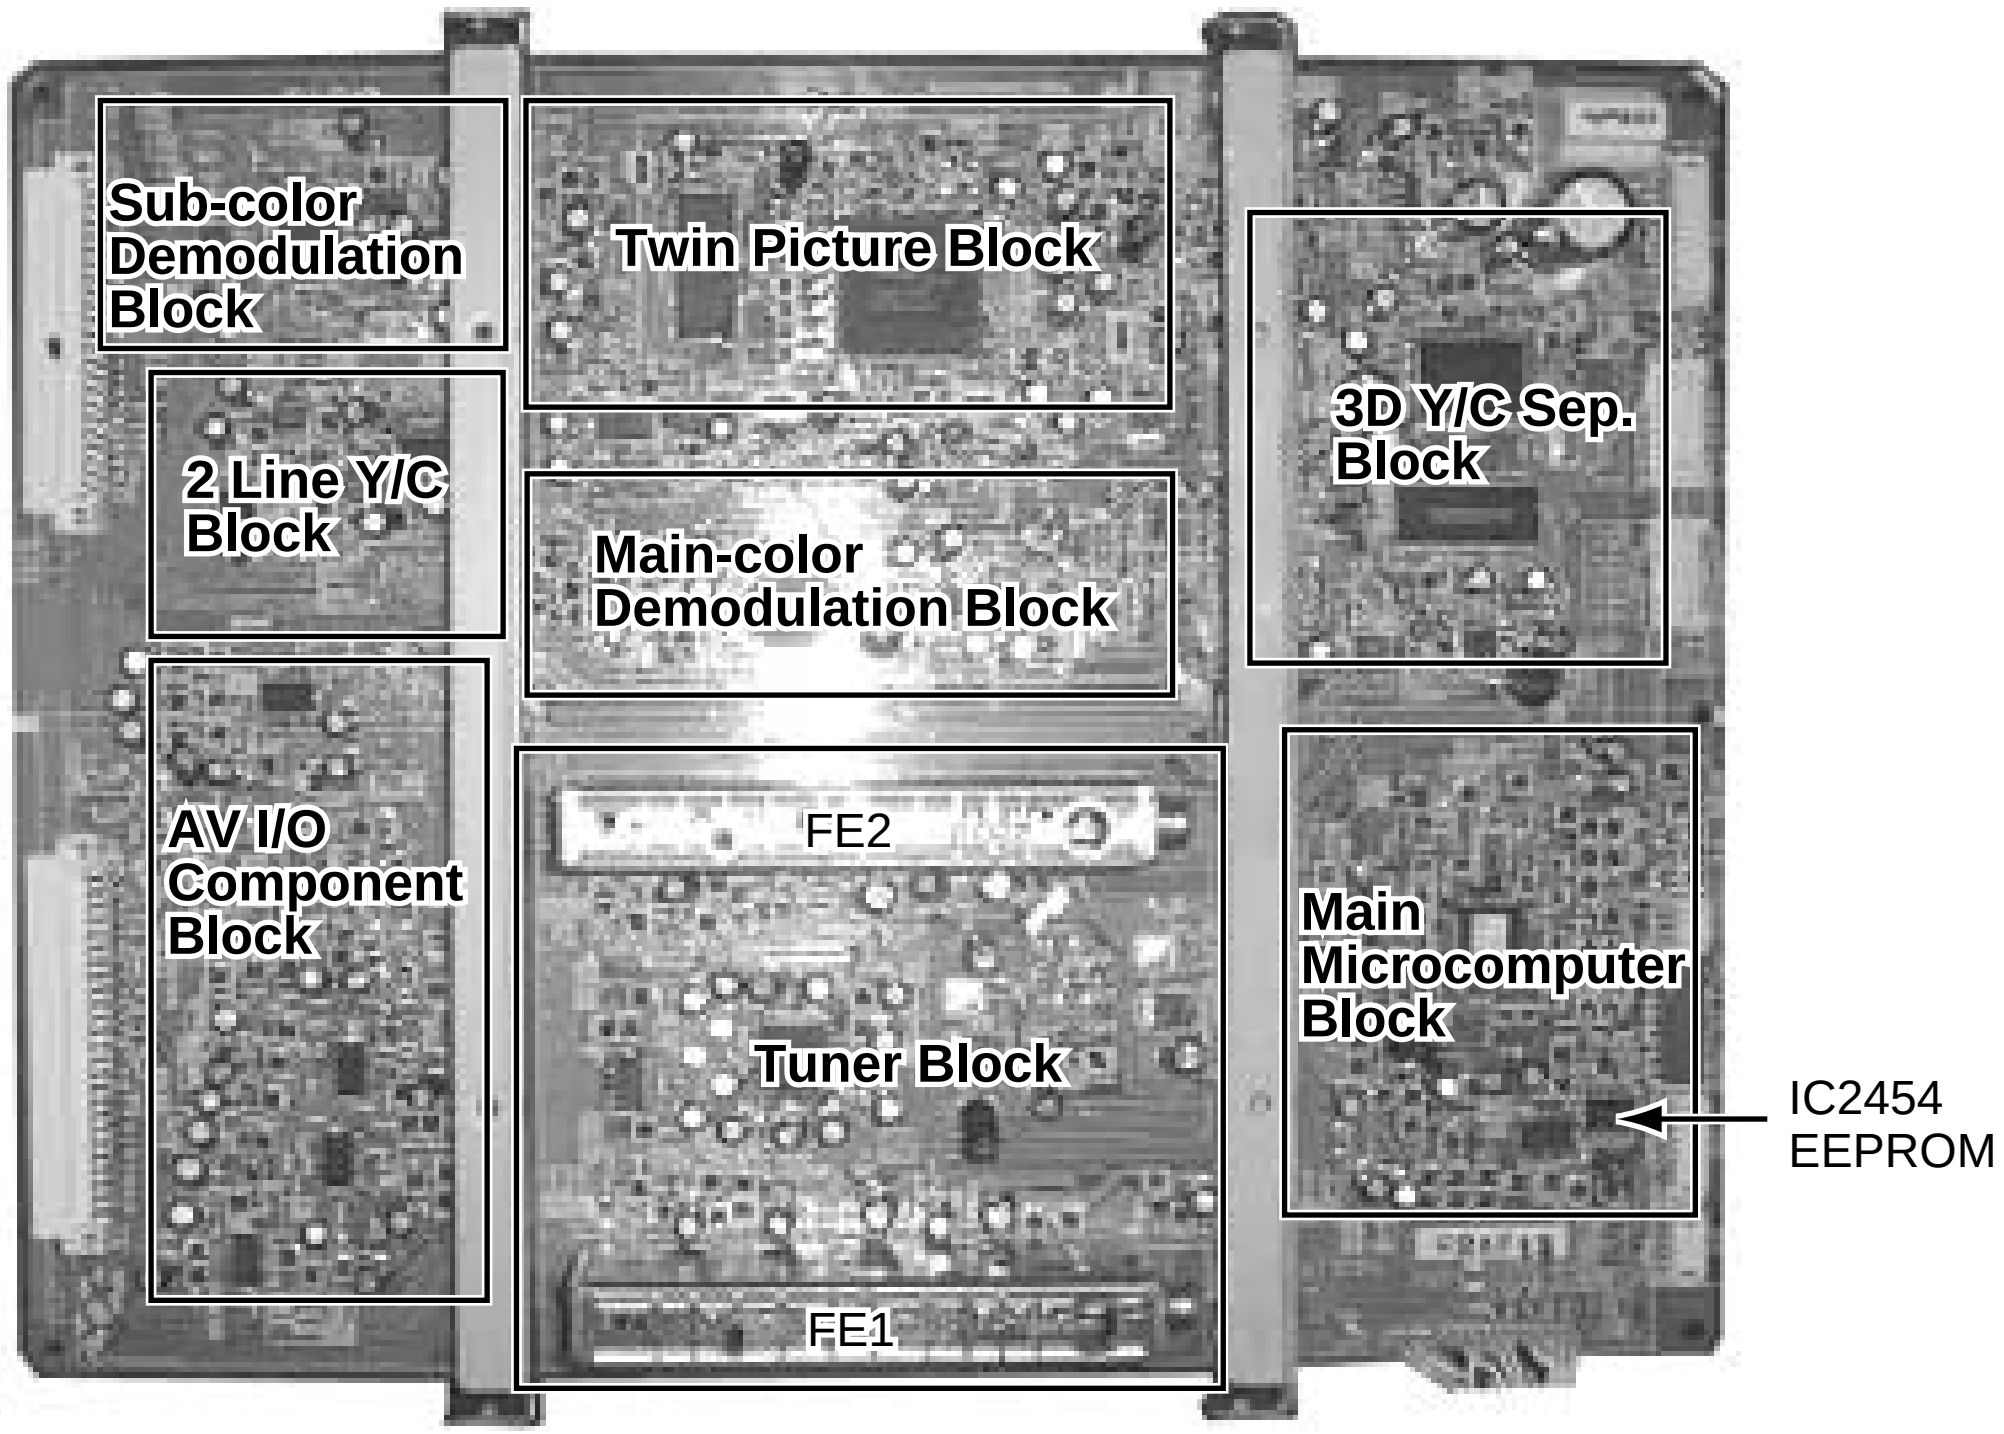
Sub-color Demodulation Block
Twin Picture Block
2 Line Y/C Block
Main-color Demodulation Block
3D Y/C Sep. Block
AV I/O Component Block
FE2
Tuner Block
FE1
Main Microcomputer Block
IC2454
EEPROM

● **Video Block**

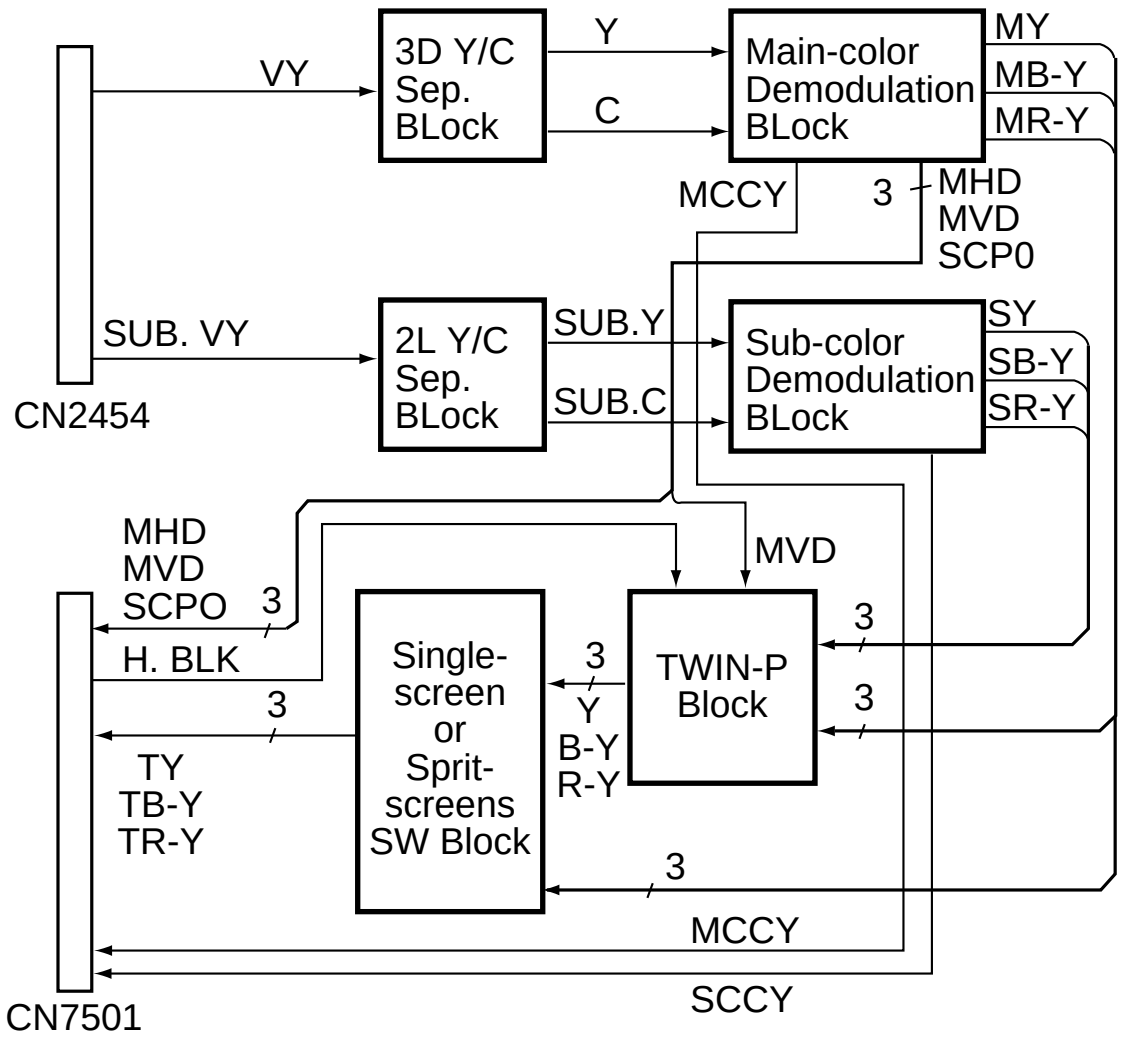
VY
3D Y/C Sep. BLock
Y
C
Main-color Demodulation BLock
MY
MB-Y
MR-Y
MCCY
3
MHD
MVD
SCP0
SUB. VY
2L Y/C Sep. BLock
SUB.Y
SUB.C
Sub-color Demodulation BLock
SY
SB-Y
SR-Y
CN2454
MHD
MVD
SCPO
3
H. BLK
3
TY
TB-Y
TR-Y
Single-screen or Sprit-screens SW Block
3
Y
B-Y
R-Y
TWIN-P Block
MVD
3
3
3
MCCY
SCCY
CN7501

● **Tuner Block**

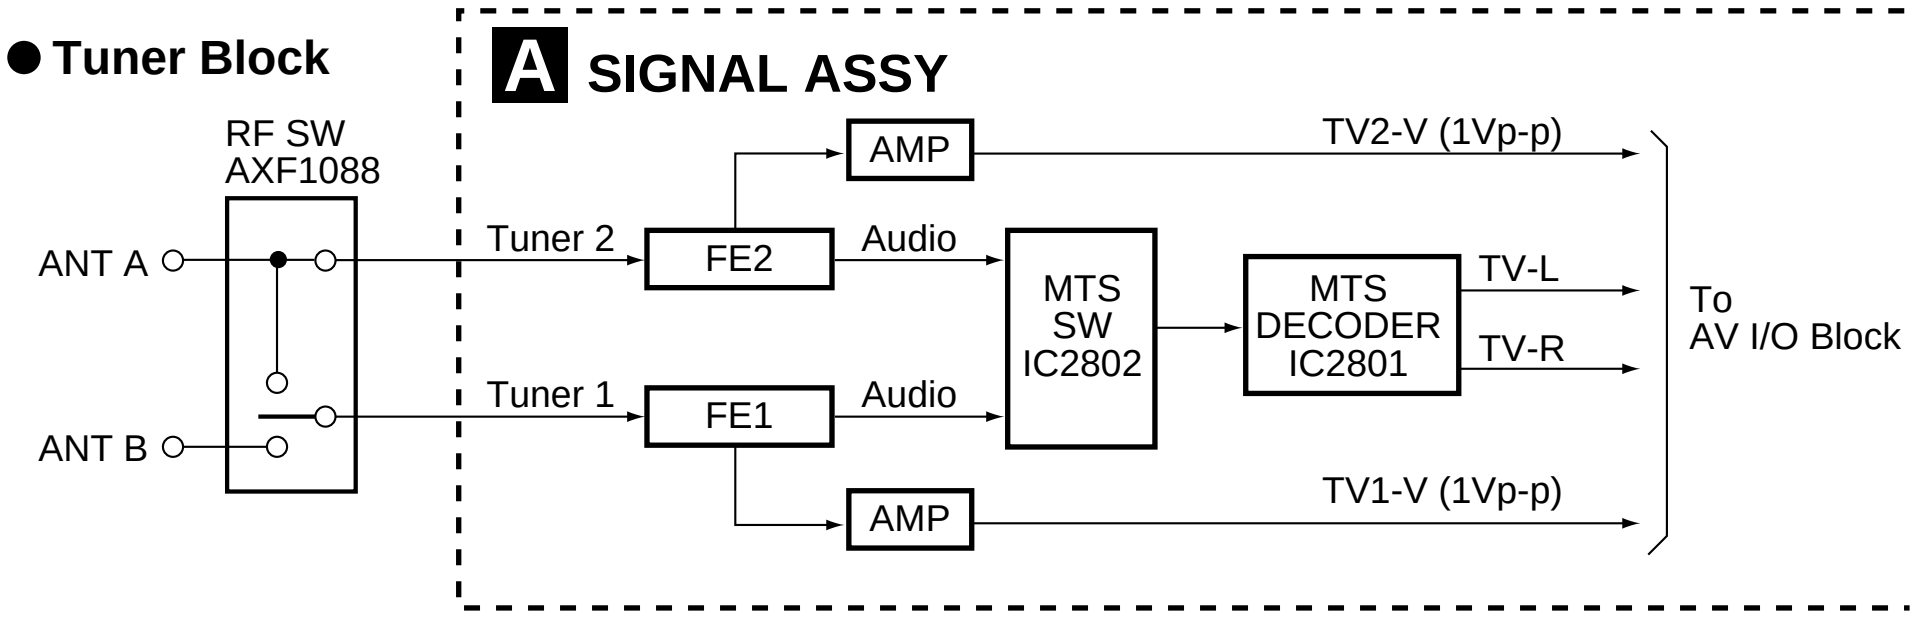
A SIGNAL ASSY
RF SW
AXF1088
ANT A
ANT B
Tuner 2
Tuner 1
FE2
FE1
AMP
AMP
Audio
Audio
MTS SW IC2802
MTS DECODER IC2801
TV2-V (1Vp-p)
TV-L
TV-R
TV1-V (1Vp-p)
To
AV I/O Block

Note :
Main picture is able to receive the ANT A and B.
Sub picuture is able to receive the ANT A only.

3.1.4 AV I/O and AUDIO ASSYS

B AV I/O ASSY

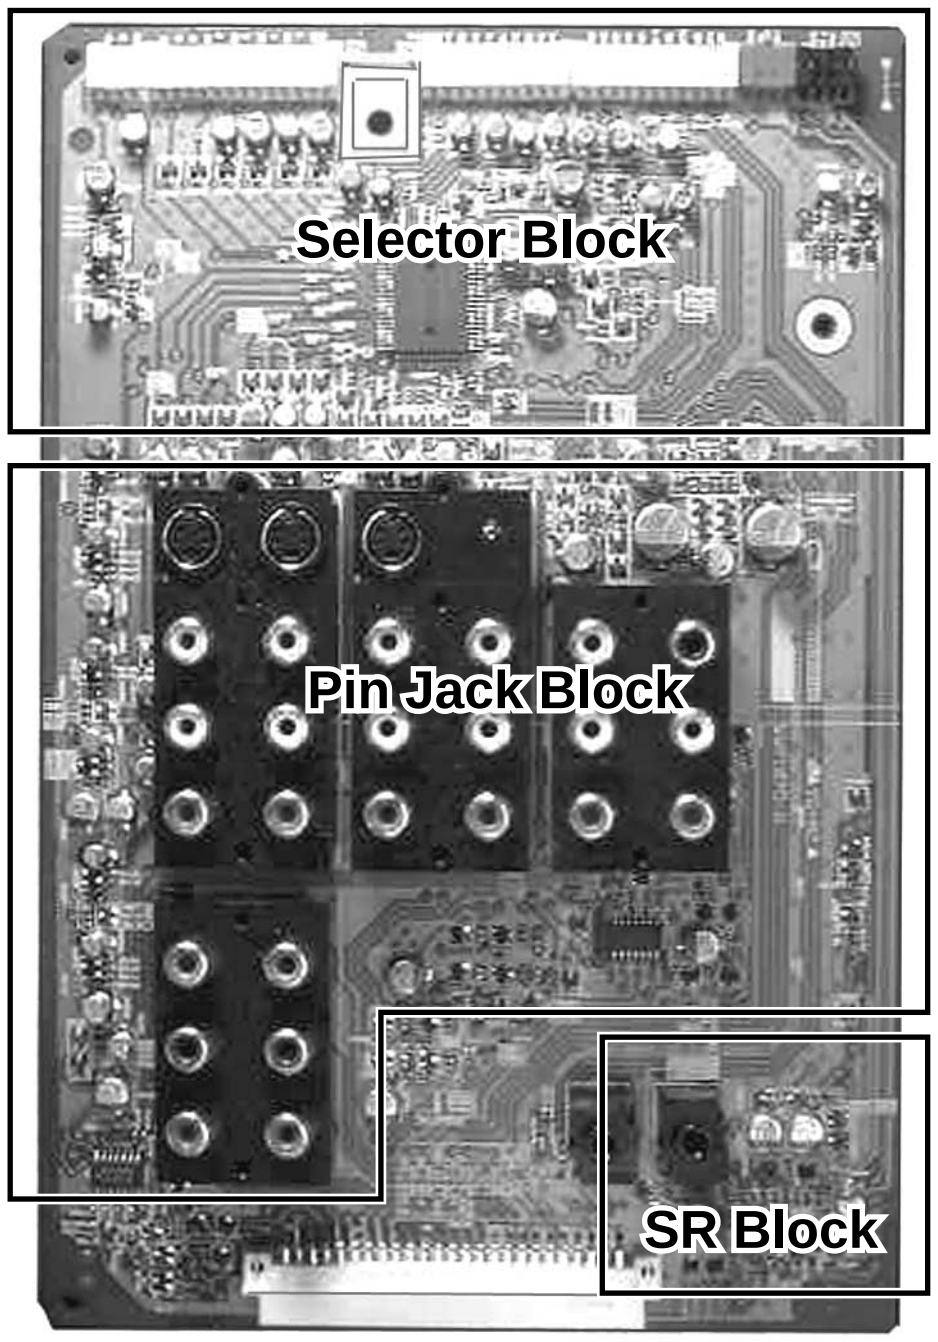
Selector Block
Pin Jack Block
SR Block

NOTE) The AUDIO Assy show the state without the heat sink.
Please attach the heat sink when you install the AUDIO Assy.

G AUDIO ASSY

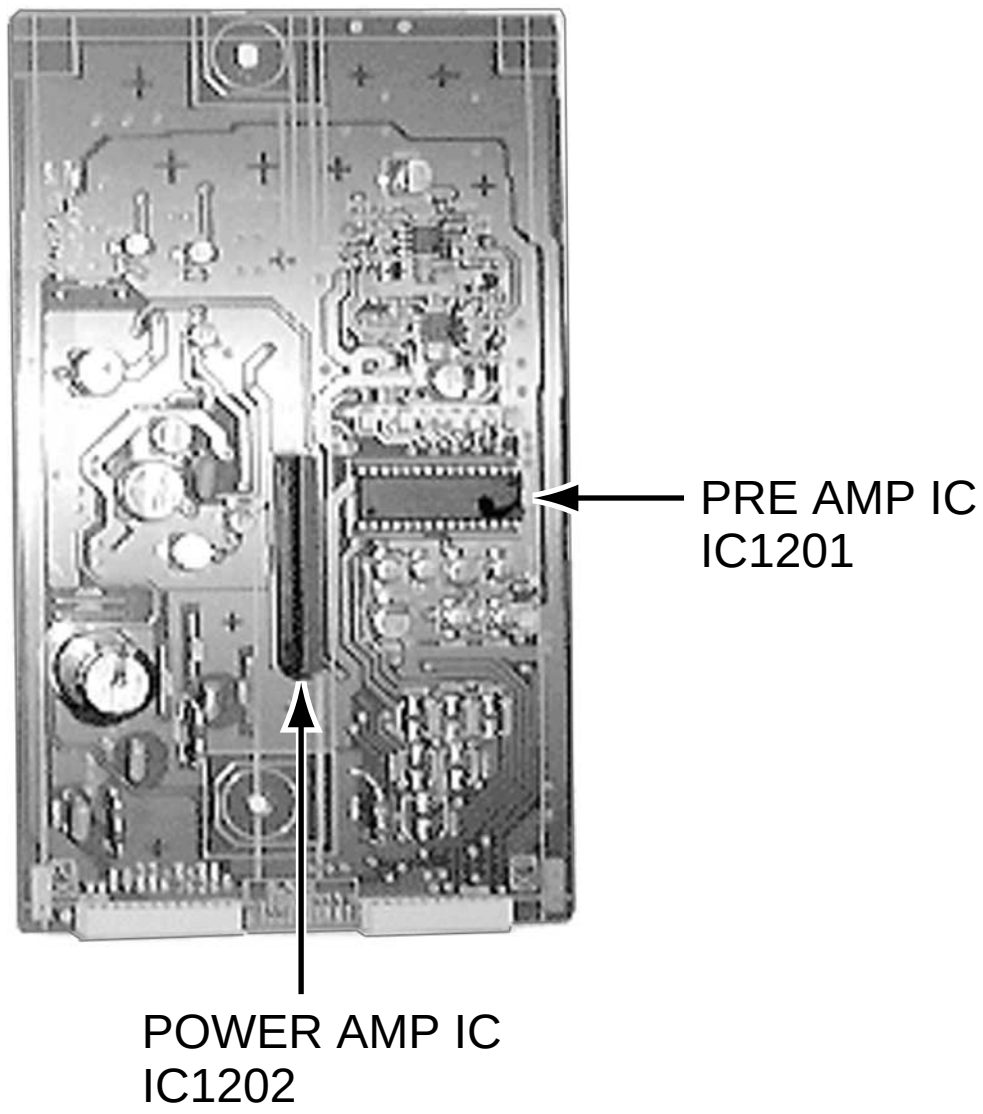
PRE AMP IC
IC1201
POWER AMP IC
IC1202

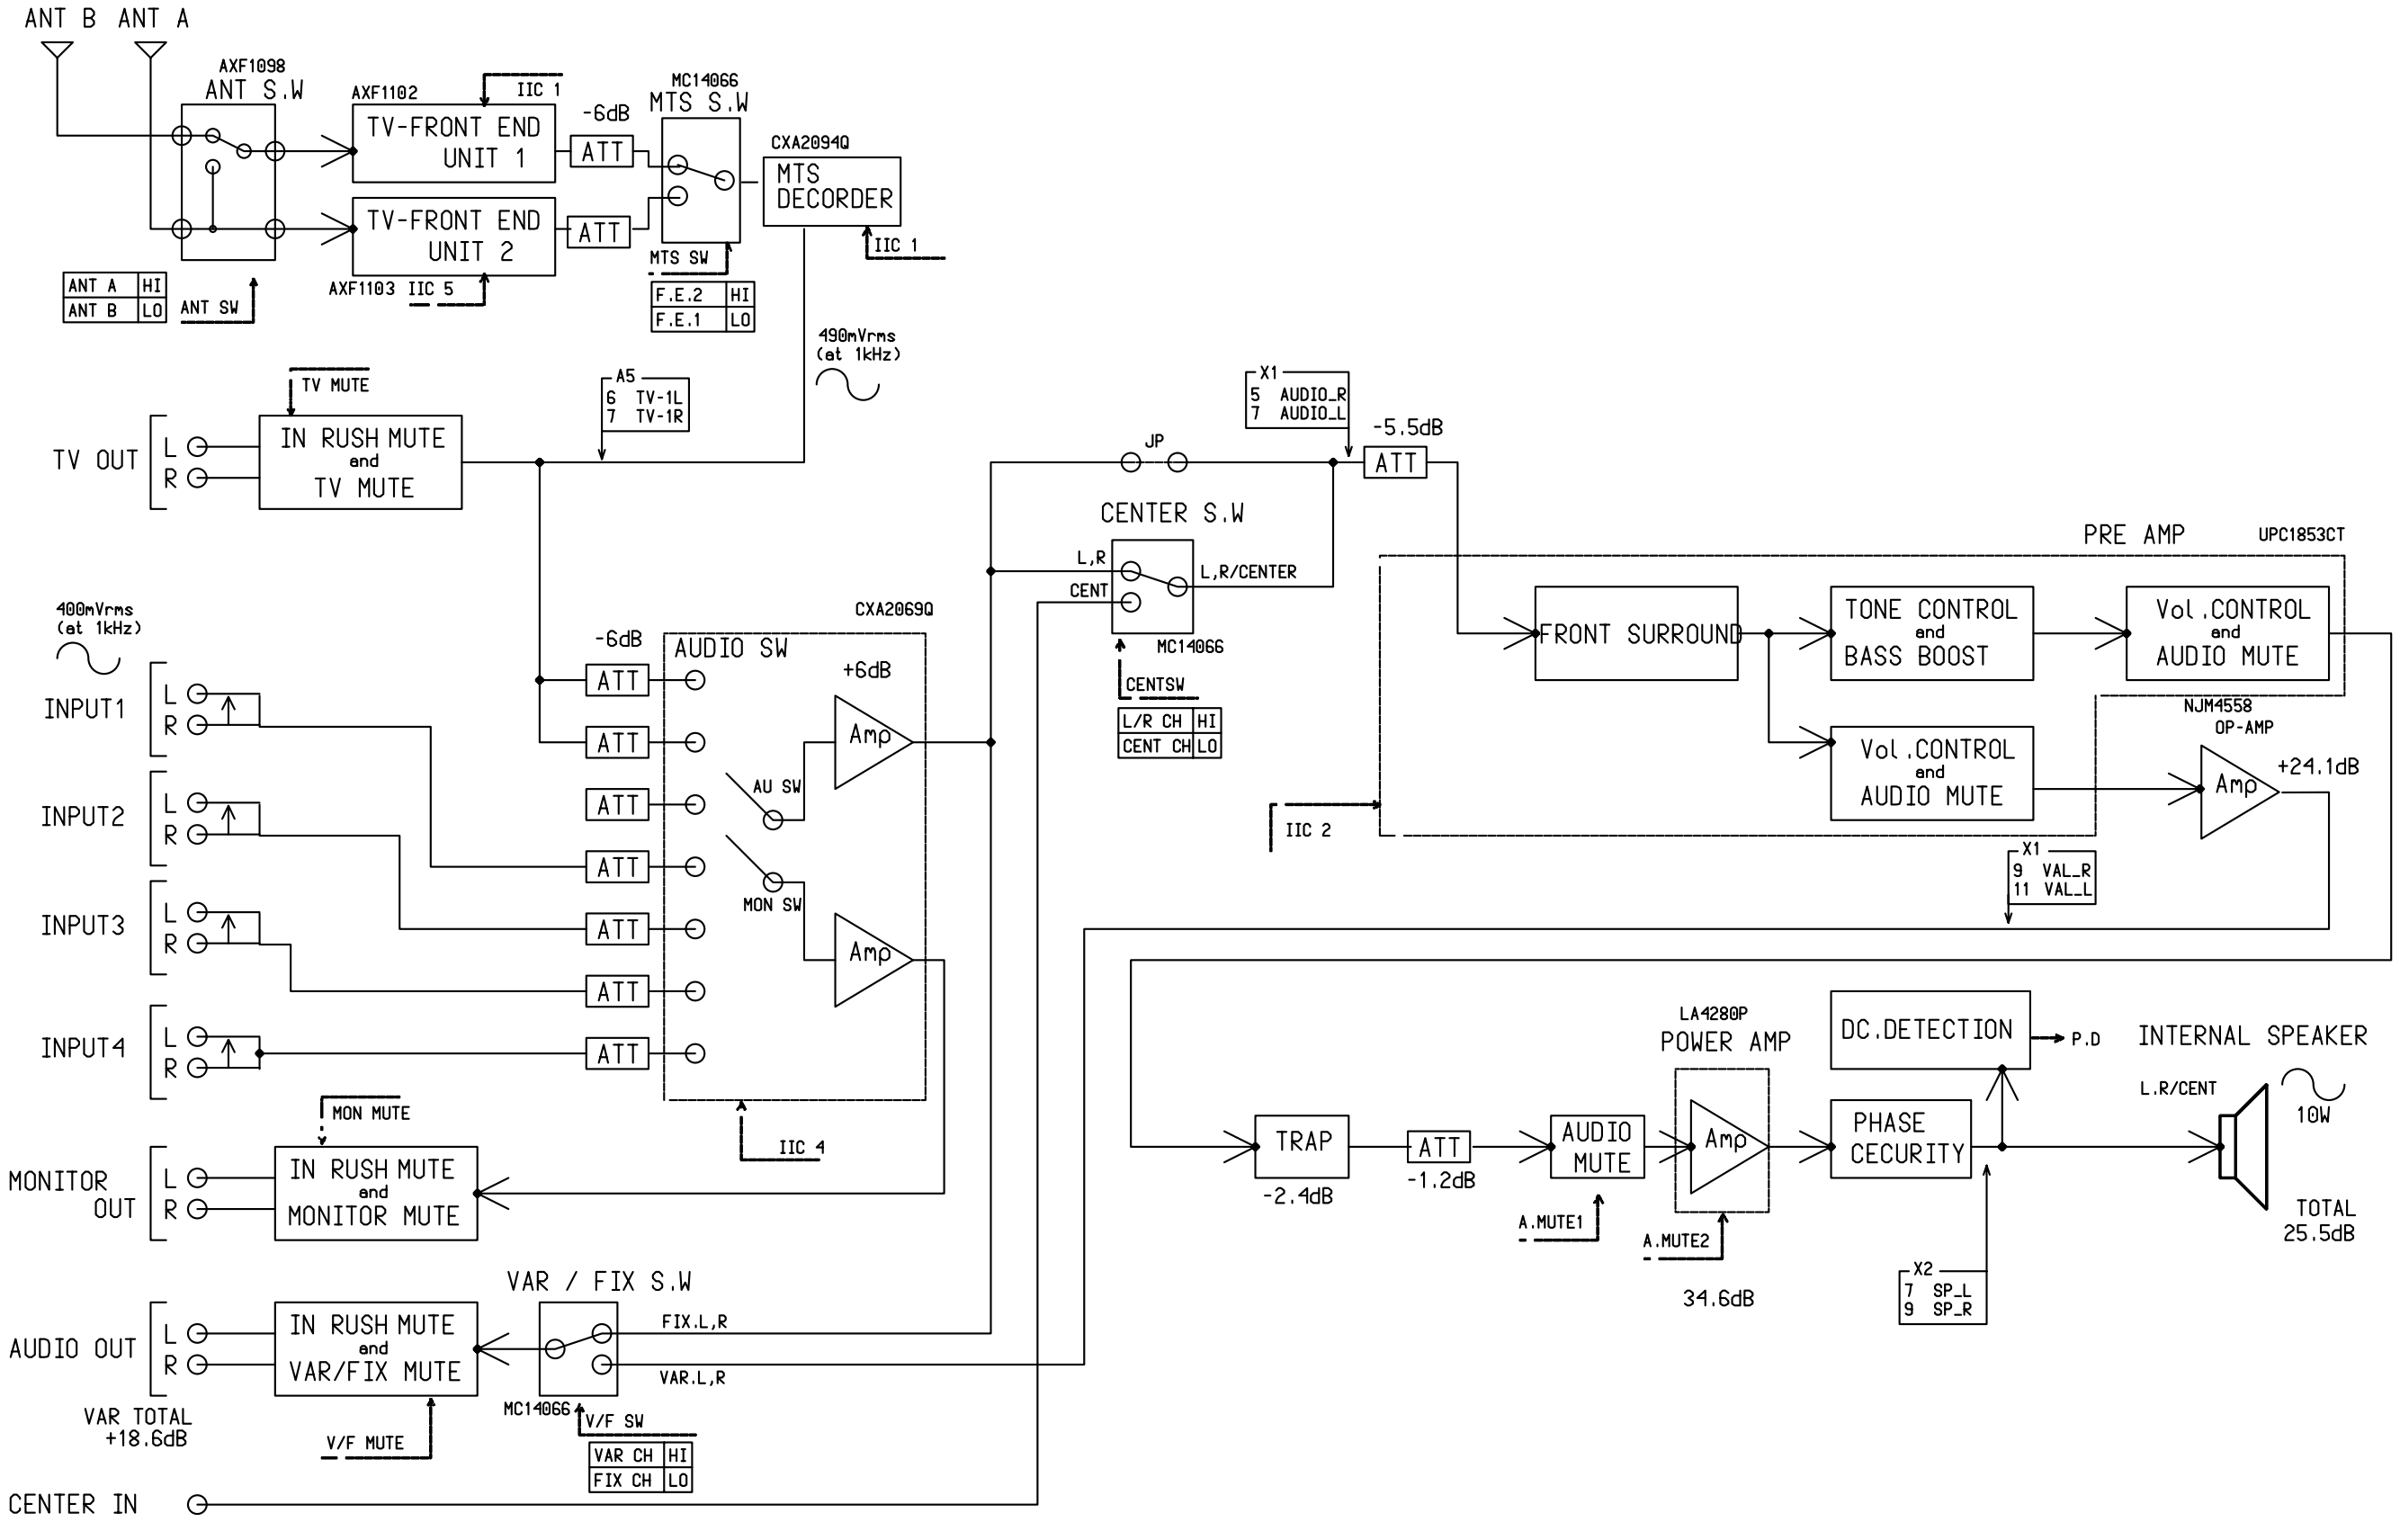
ANT B
ANT A
AXF1098
ANT S.W
ANT A HI
ANT B LO
ANT SW
AXF1102
TV-FRONT END UNIT 1
IIC 1
TV-FRONT END UNIT 2
AXF1103
IIC 5
-6dB
ATT
ATT
MC14066
MTS S.W
MTS SW
F.E.2 HI
F.E.1 LO
CXA2094Q
MTS DECORDER
IIC 1
490mVrms (at 1kHz)
TV MUTE
TV OUT
L
R
IN RUSH MUTE and TV MUTE
A5
6 TV-1L
7 TV-1R
400mVrms (at 1kHz)
INPUT1
INPUT2
INPUT3
INPUT4
-6dB
ATT
CXA2069Q
AUDIO SW
+6dB
Amp
AU SW
MON SW
Amp
IIC 4
MON MUTE
MONITOR OUT
IN RUSH MUTE and MONITOR MUTE
VAR / FIX S.W
AUDIO OUT
IN RUSH MUTE and VAR/FIX MUTE
FIX.L,R
VAR.L,R
MC14066
V/F SW
VAR CH HI
FIX CH LO
VAR TOTAL +18.6dB
V/F MUTE
CENTER IN
X1
5 AUDIO_R
7 AUDIO_L
JP
-5.5dB
ATT
CENTER S.W
L,R
CENT
L,R/CENTER
MC14066
CENTSW
L/R CH HI
CENT CH LO
PRE AMP
UPC1853CT
FRONT SURROUND
TONE CONTROL and BASS BOOST
Vol.CONTROL and AUDIO MUTE
Vol.CONTROL and AUDIO MUTE
NJM4558 OP-AMP
Amp
+24.1dB
IIC 2
X1
9 VAL_R
11 VAL_L
TRAP
-2.4dB
ATT
-1.2dB
AUDIO MUTE
A.MUTE1
LA4280P
POWER AMP
Amp
A.MUTE2
34.6dB
DC.DETECTION
P.D
PHASE CECURITY
X2
7 SP_L
9 SP_R
INTERNAL SPEAKER
L.R/CENT
10W
TOTAL 25.5dB

3.1.5 VIDEO, R, G and B CRT DRIVE ASSYS

E VIDEO ASSY

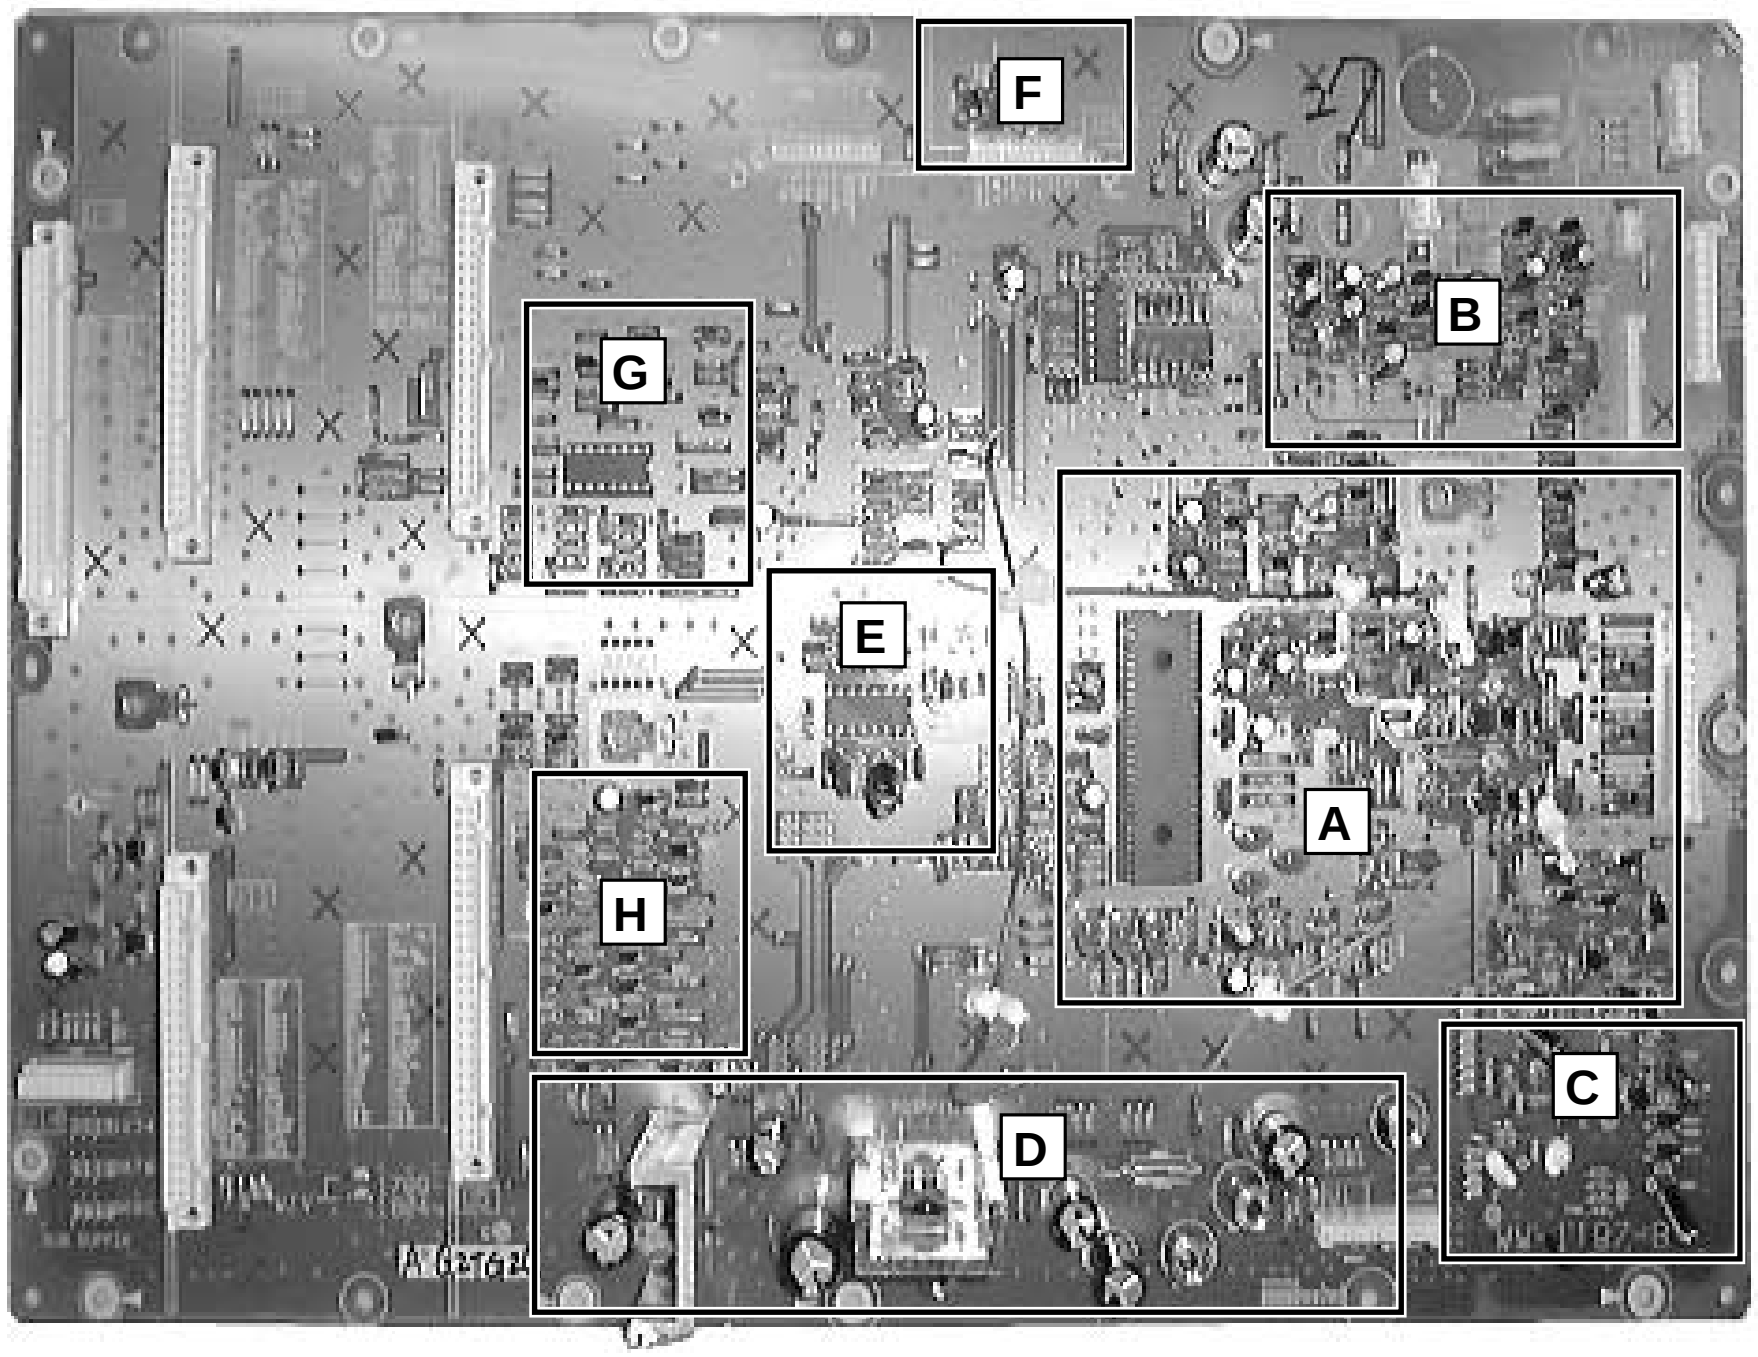

M R CRT DRIVE ASSY

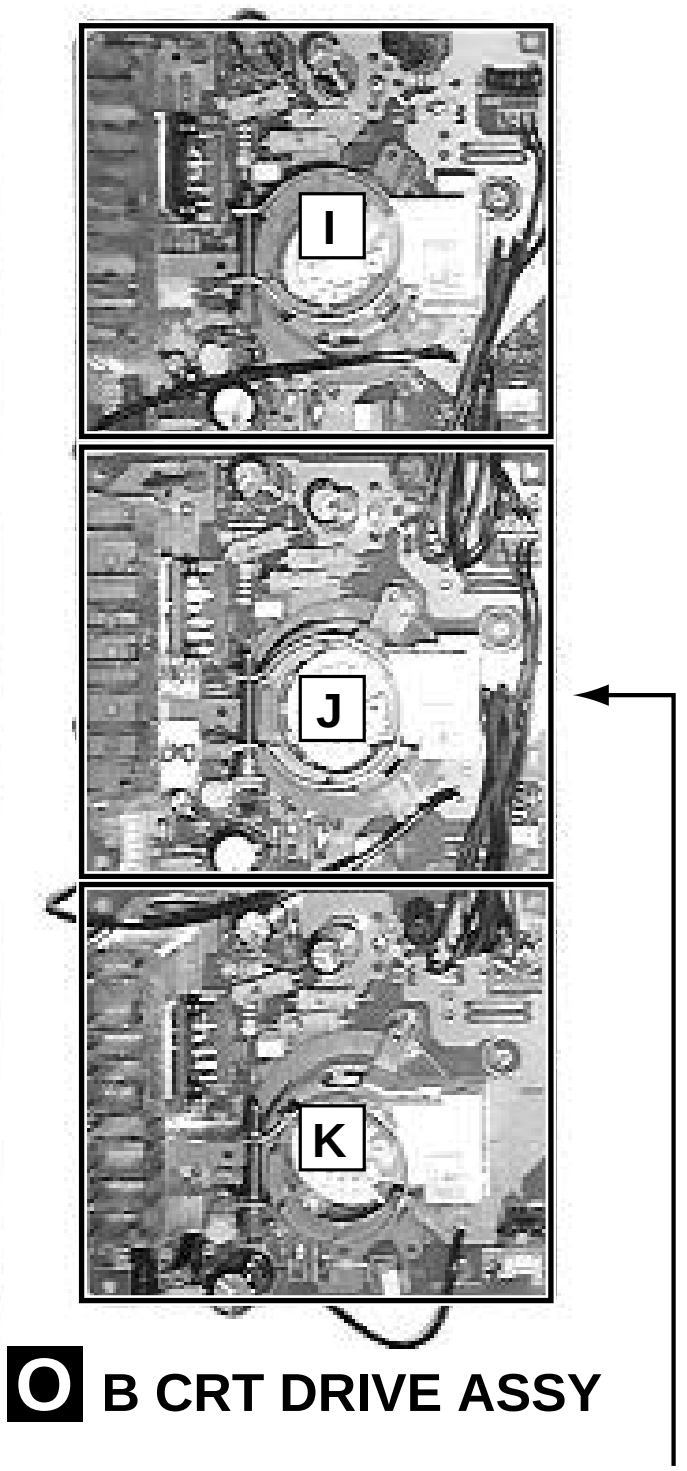

O B CRT DRIVE ASSY

N G CRT DRIVE ASSY

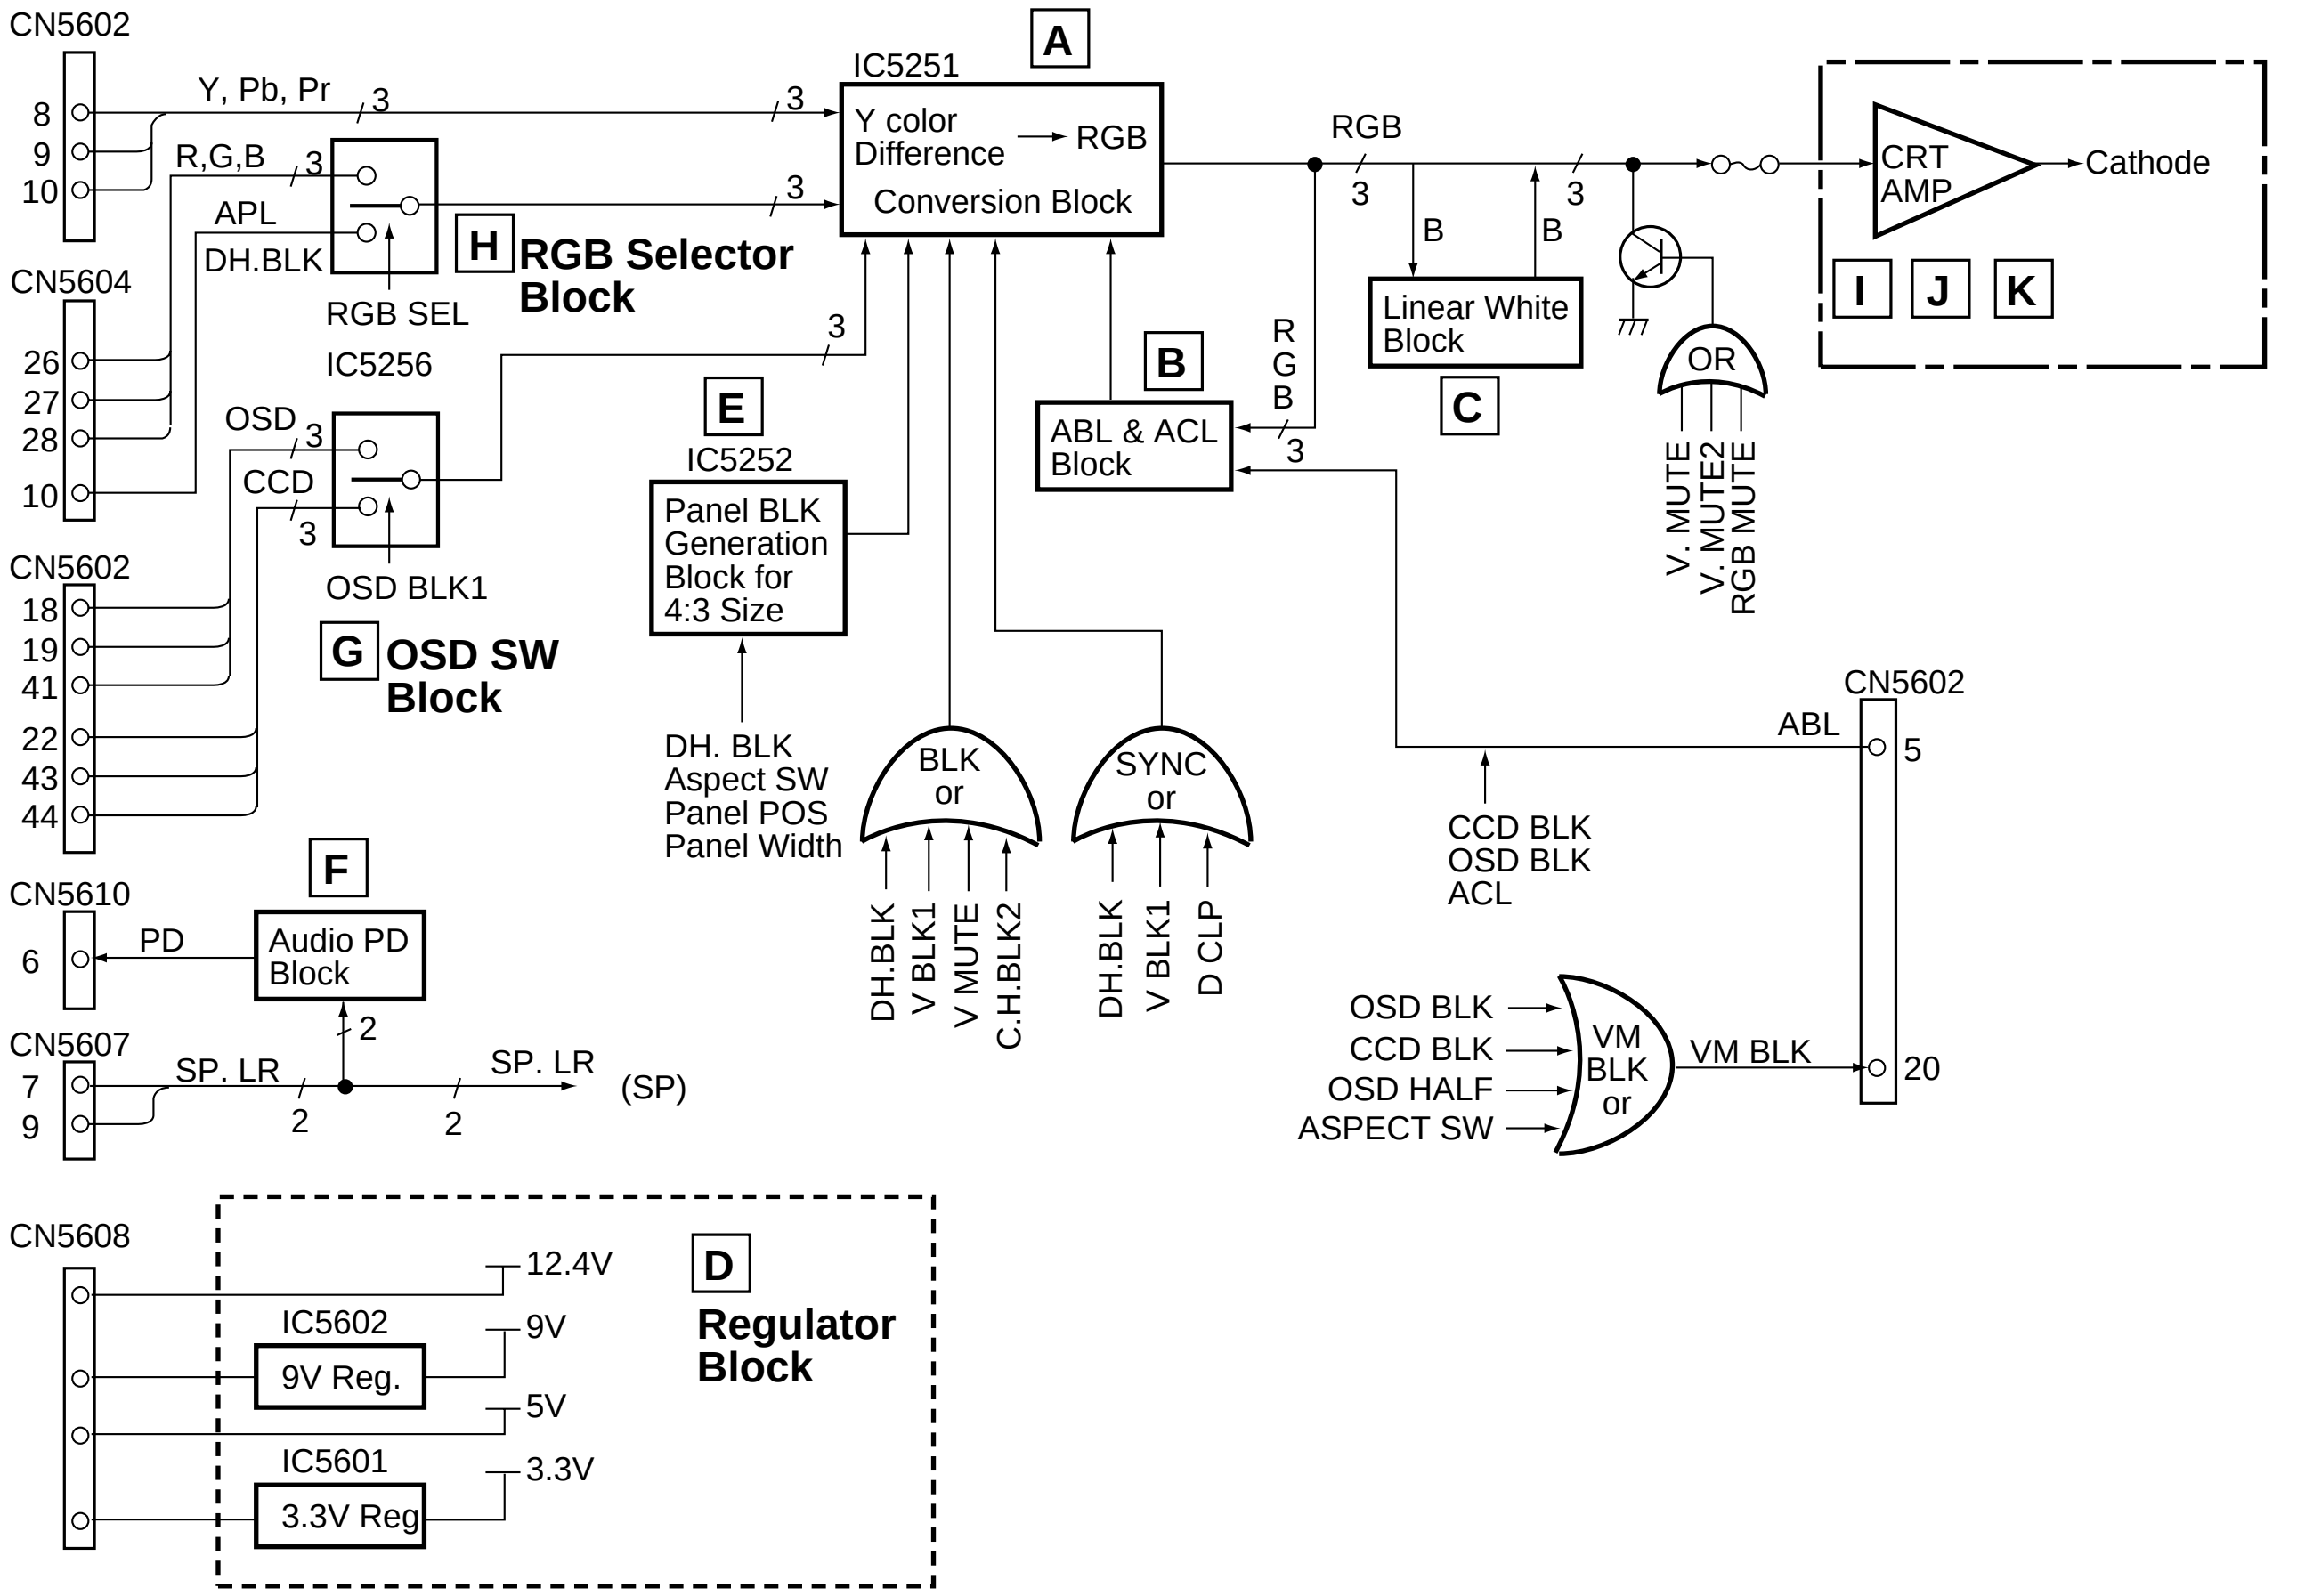
CN5602
8
9
10
Y, Pb, Pr
3
3
R,G,B
3
APL
DH.BLK
3
H RGB Selector Block
RGB SEL
CN5604
26
27
28
10
IC5256
OSD
3
CCD
3
3
OSD BLK1
G OSD SW Block
CN5602
18
19
41
22
43
44
A
IC5251
Y color Difference → RGB
Conversion Block
3
E
IC5252
Panel BLK Generation Block for 4:3 Size
DH. BLK
Aspect SW
Panel POS
Panel Width
BLK or
DH.BLK
V BLK1
V MUTE
C.H.BLK2
SYNC or
DH.BLK
V BLK1
D CLP
B
ABL & ACL Block
R
G
B
3
RGB
3
B
B
3
Linear White Block
C
OR
V. MUTE
V. MUTE2
RGB MUTE
CRT AMP
Cathode
I
J
K
CN5602
ABL
5
CCD BLK
OSD BLK
ACL
OSD BLK
CCD BLK
OSD HALF
ASPECT SW
VM BLK or
VM BLK
20
F
CN5610
6
PD
Audio PD Block
2
CN5607
7
9
SP. LR
2
SP. LR
2
(SP)
CN5608
12.4V
IC5602
9V Reg.
9V
5V
IC5601
3.3V Reg
3.3V
D
Regulator Block

3.1.6 SUB VIDEO SERVICE ASSY

H SUB VIDEO SERVICE ASSY

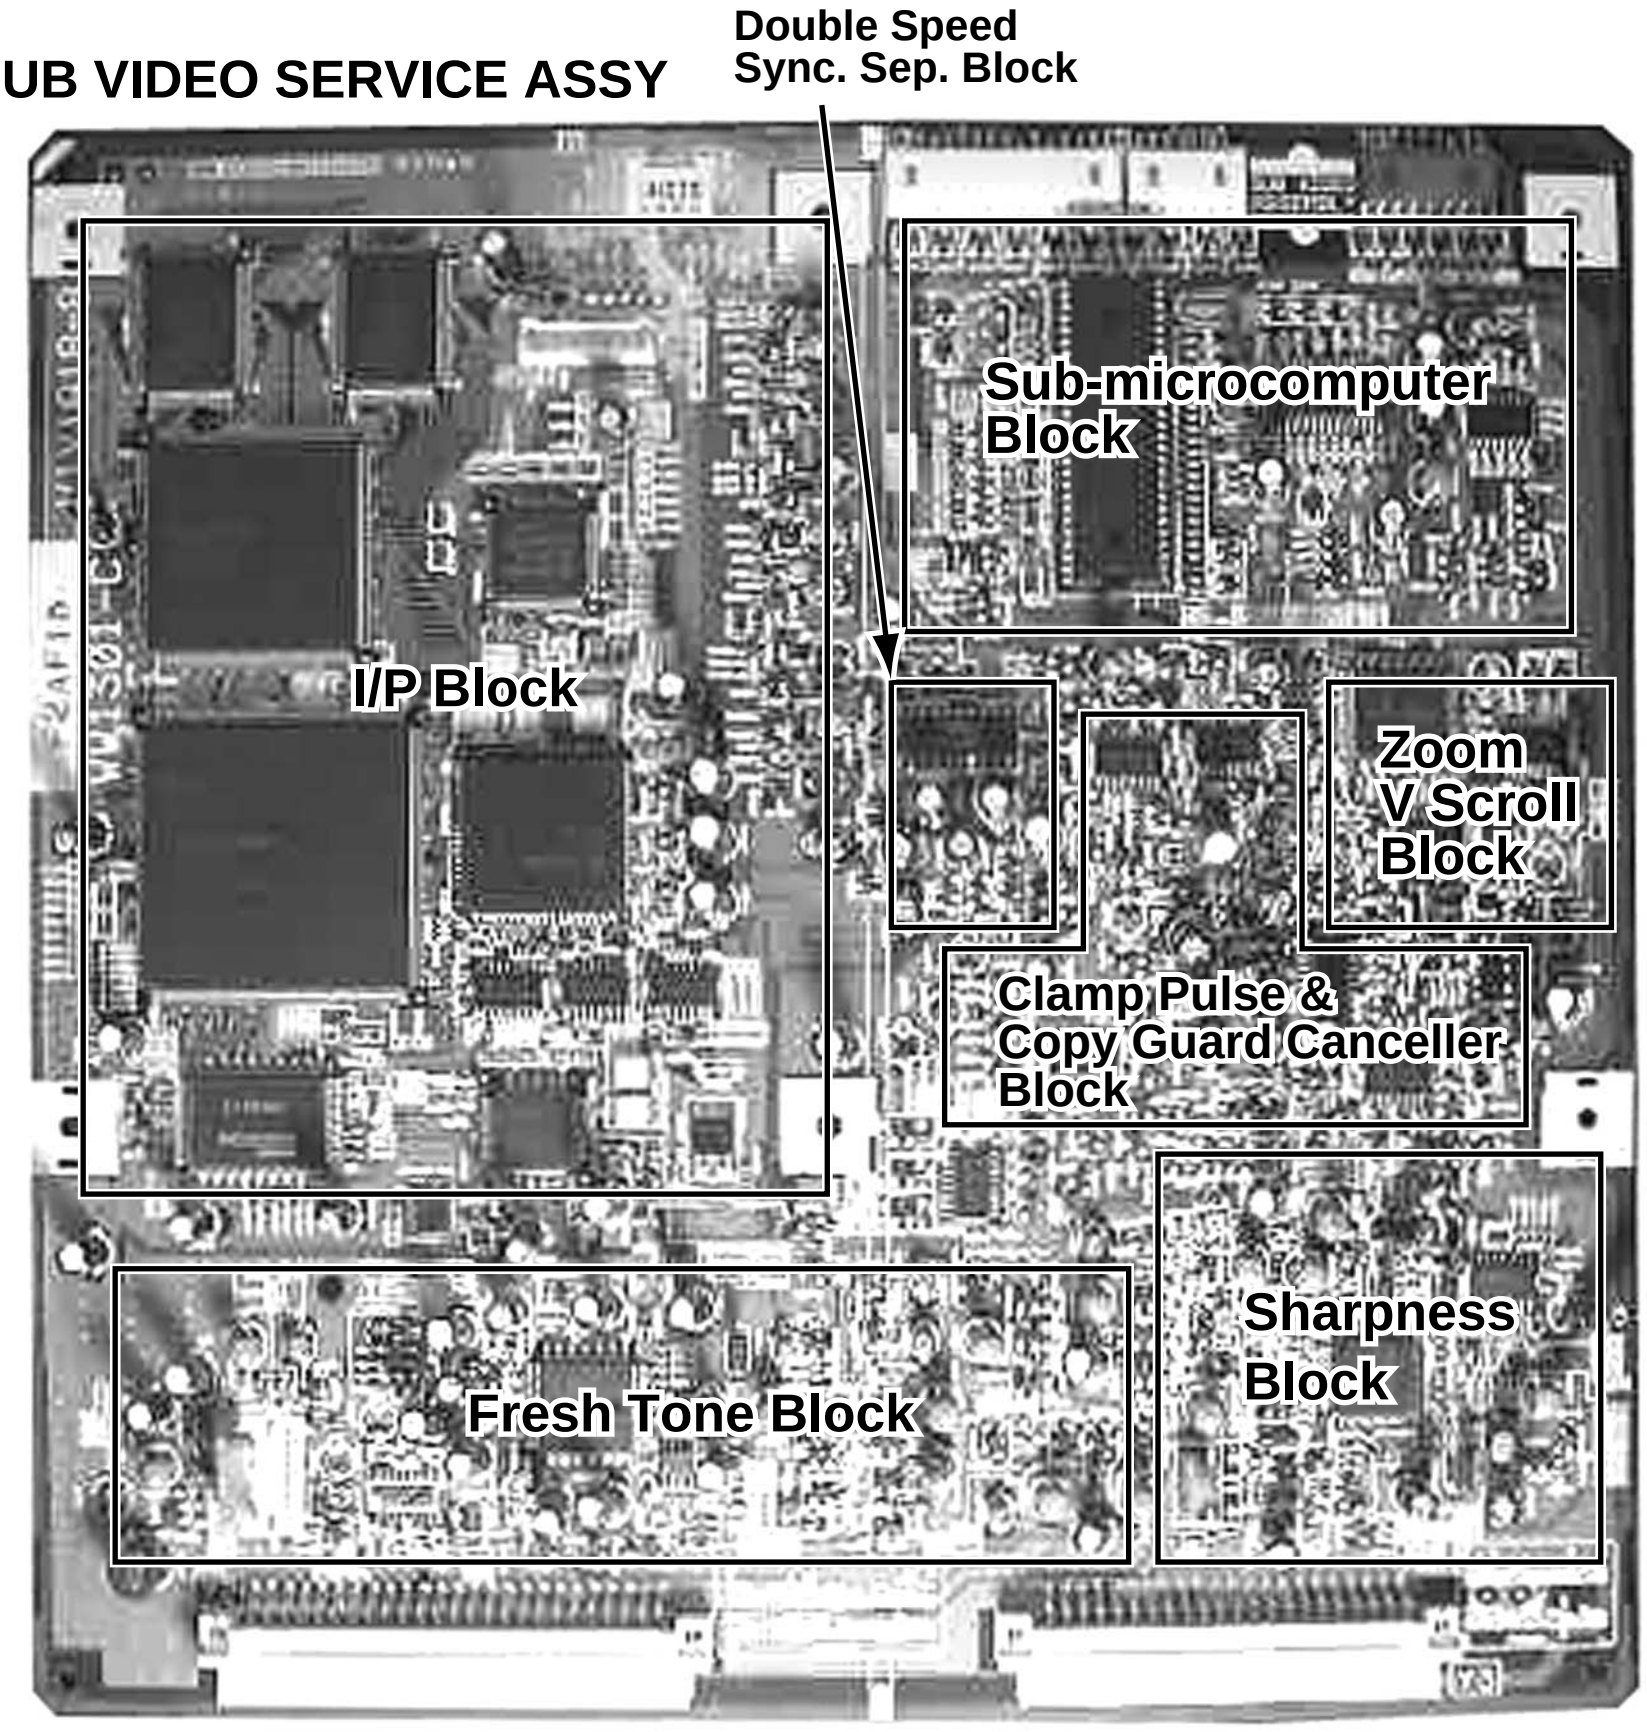
Double Speed
Sync. Sep. Block
Sub-microcomputer Block
I/P Block
Zoom V Scroll Block
Clamp Pulse & Copy Guard Canceller Block
Sharpness Block
Fresh Tone Block

● **Sub Video Block**

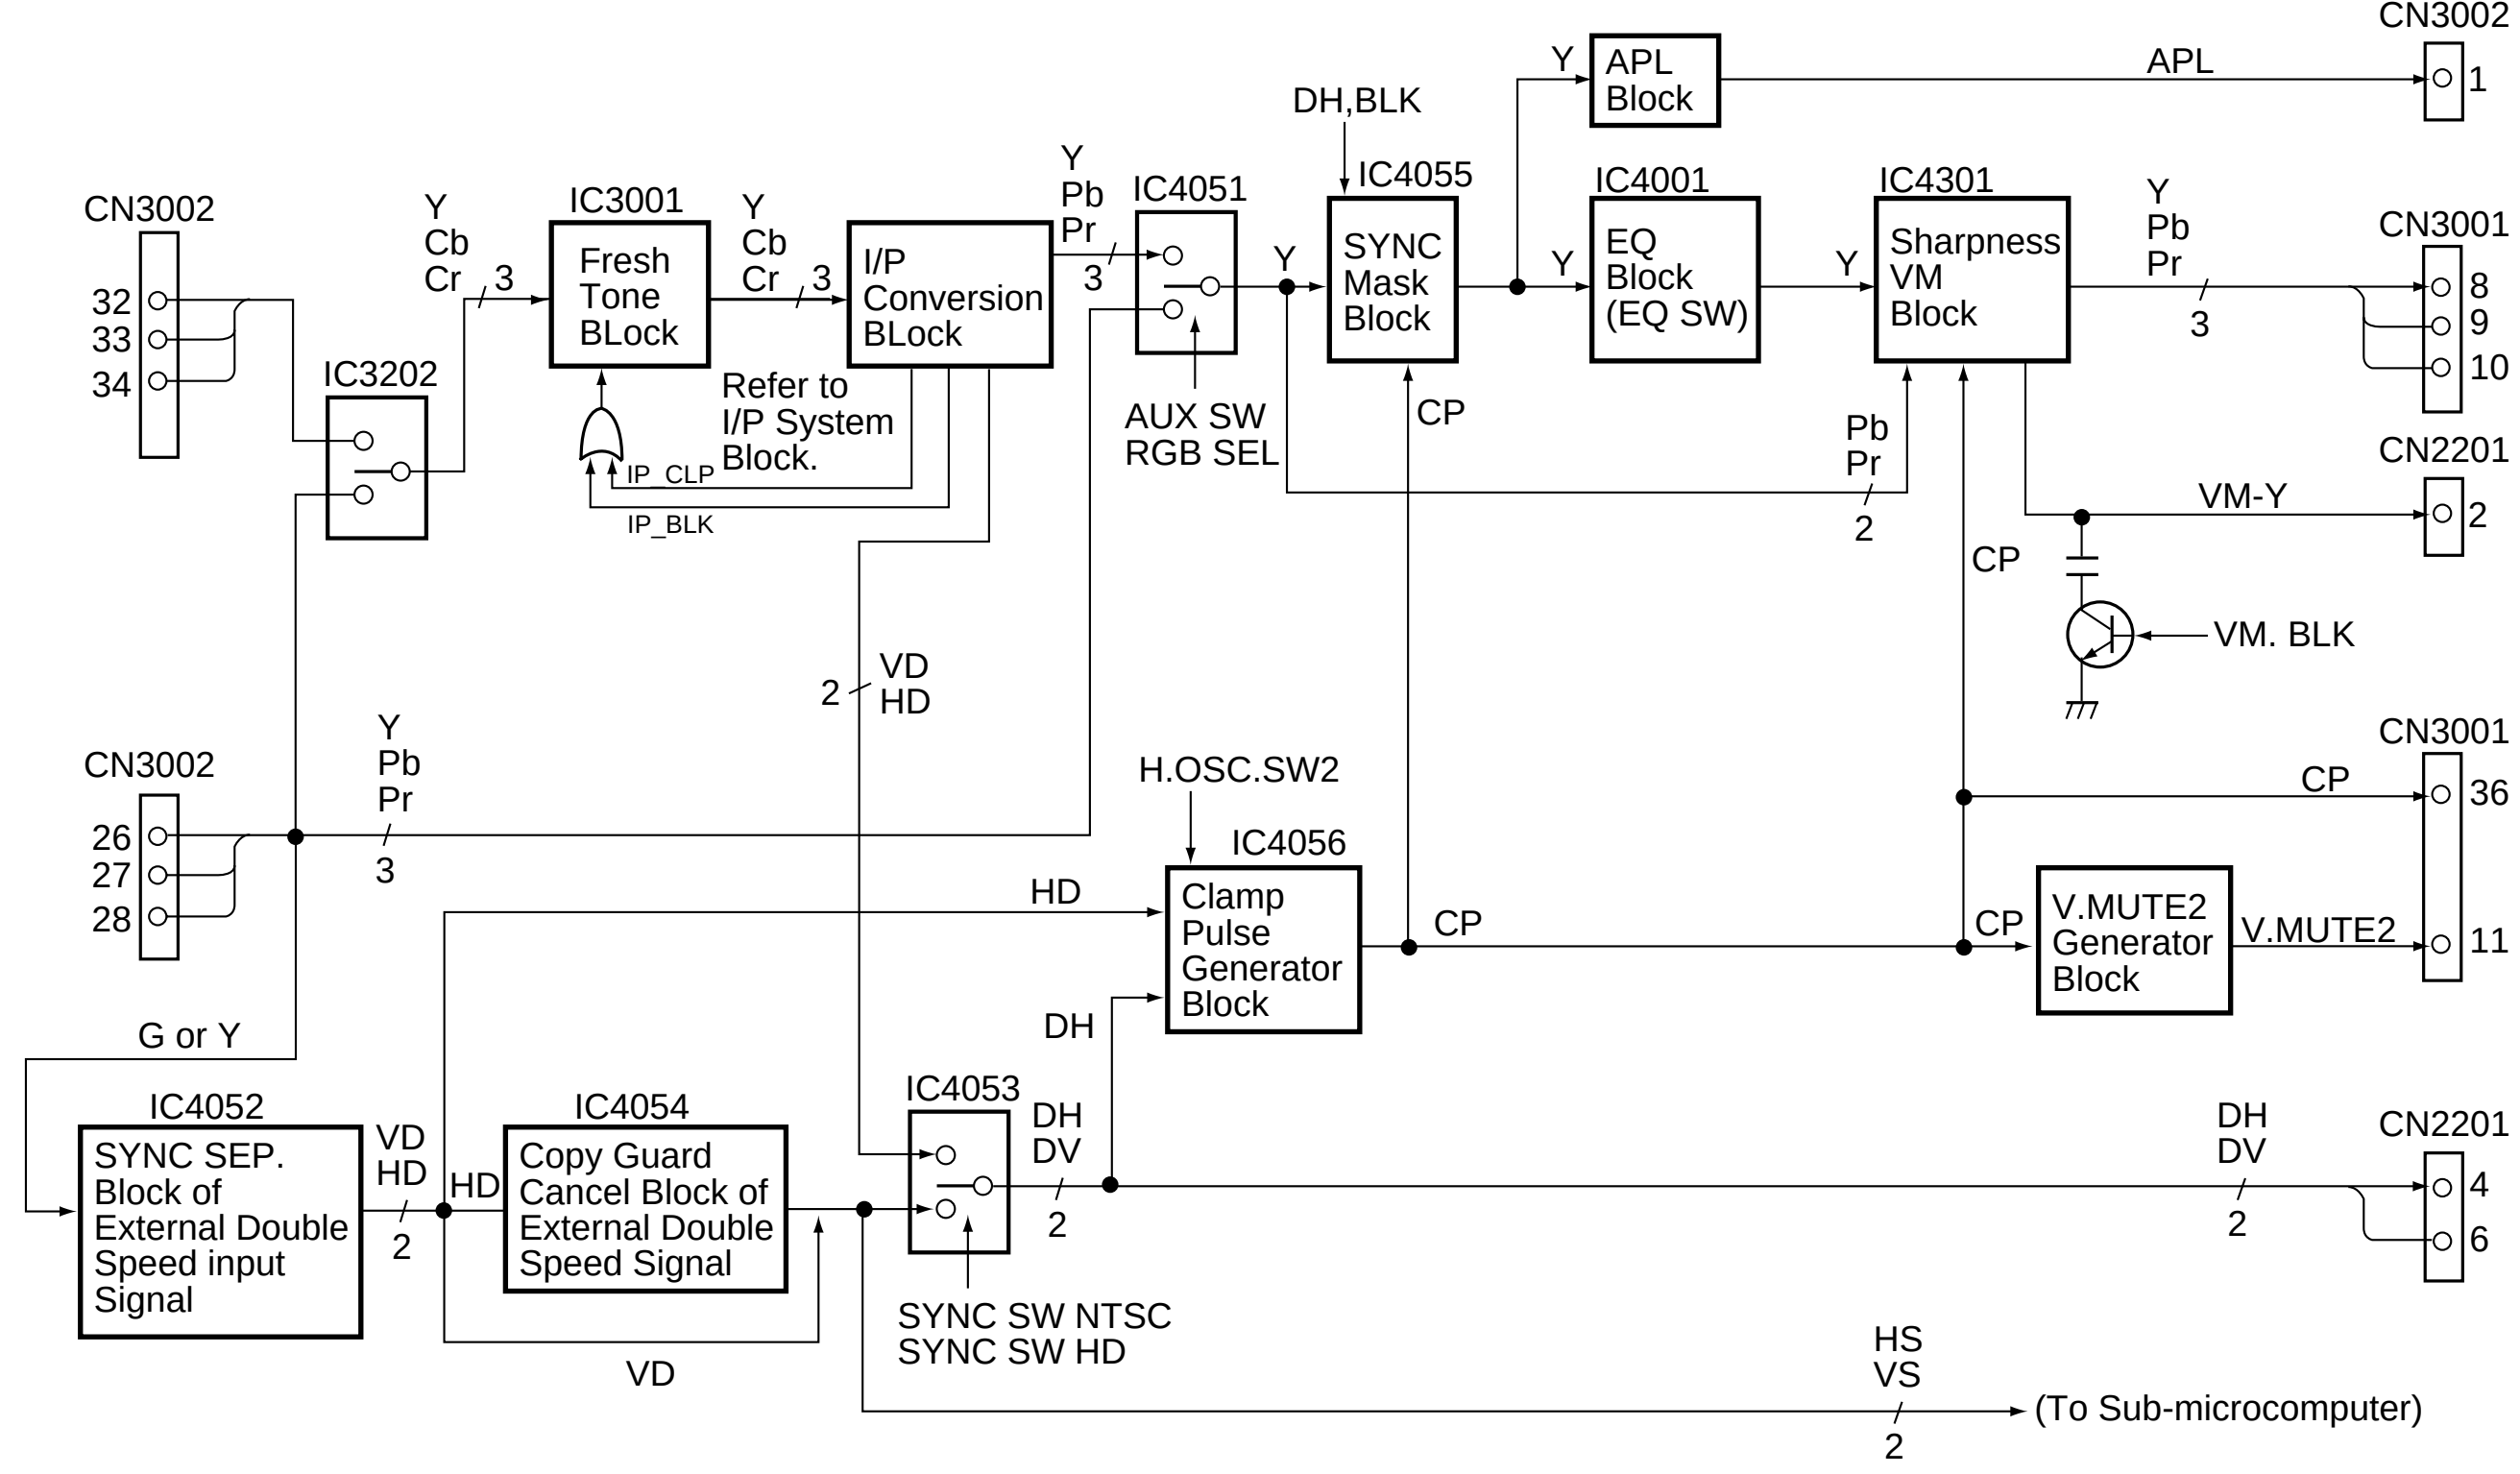
CN3002
32
33
34
IC3202
Y Cb Cr
3
IC3001
Fresh Tone BLock
Y Cb Cr
3
I/P Conversion BLock
IP_CLP
IP_BLK
Refer to I/P System Block.
Y Pb Pr
3
IC4051
AUX SW
RGB SEL
Y
DH,BLK
IC4055
SYNC Mask Block
CP
Y
APL Block
APL
CN3002
1
Y
IC4001
EQ Block (EQ SW)
Y
IC4301
Sharpness VM Block
Pb Pr
2
Y Pb Pr
3
CN3001
8
9
10
CN2201
VM-Y
2
CP
VM. BLK
2
VD HD
CN3002
26
27
28
Y Pb Pr
3
H.OSC.SW2
IC4056
Clamp Pulse Generator Block
HD
CP
CN3001
CP
36
CP
V.MUTE2 Generator Block
V.MUTE2
11
G or Y
IC4052
SYNC SEP. Block of External Double Speed input Signal
VD HD
2
HD
IC4054
Copy Guard Cancel Block of External Double Speed Signal
VD
DH
IC4053
DH DV
2
SYNC SW NTSC
SYNC SW HD
DH DV
2
CN2201
4
6
HS VS
2
(To Sub-microcomputer)

3.1.7 DIGITAL CONV., CONNECTOR and CONV. AMP ASSYS

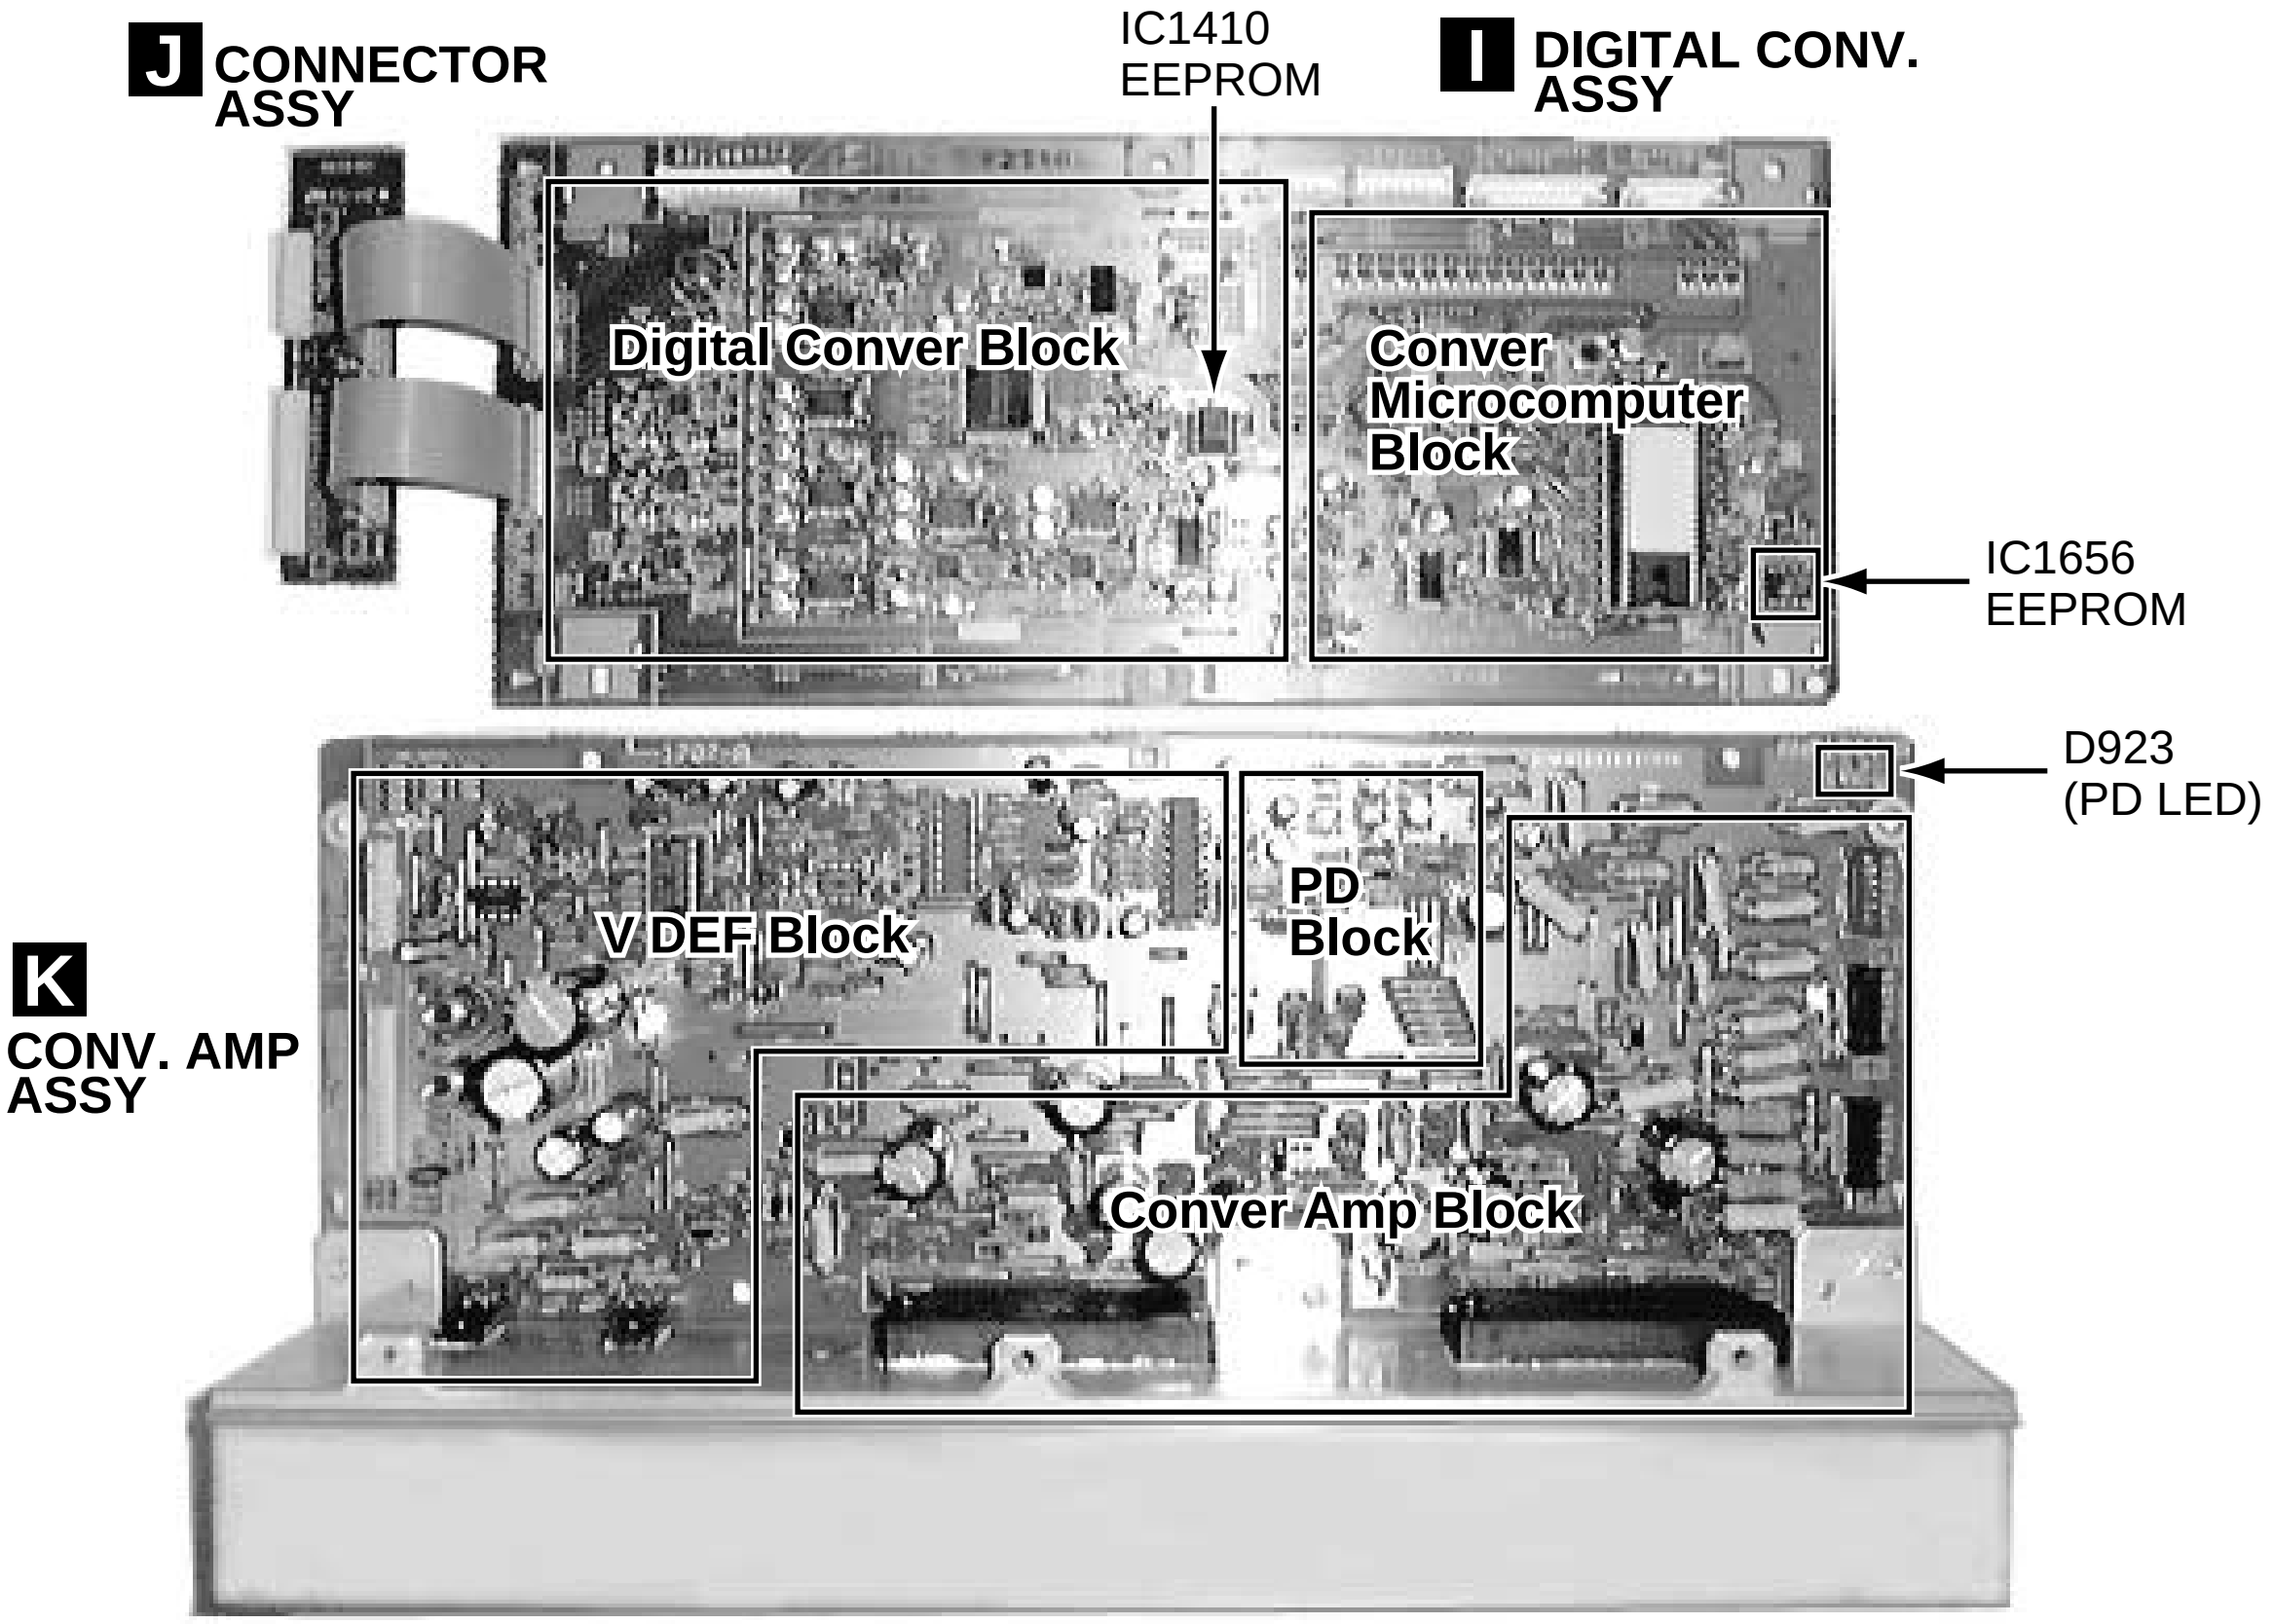
J CONNECTOR ASSY
IC1410 EEPROM
I DIGITAL CONV. ASSY
Digital Conver Block
Conver Microcomputer Block
IC1656 EEPROM
D923 (PD LED)
K CONV. AMP ASSY
V DEF Block
PD Block
Conver Amp Block

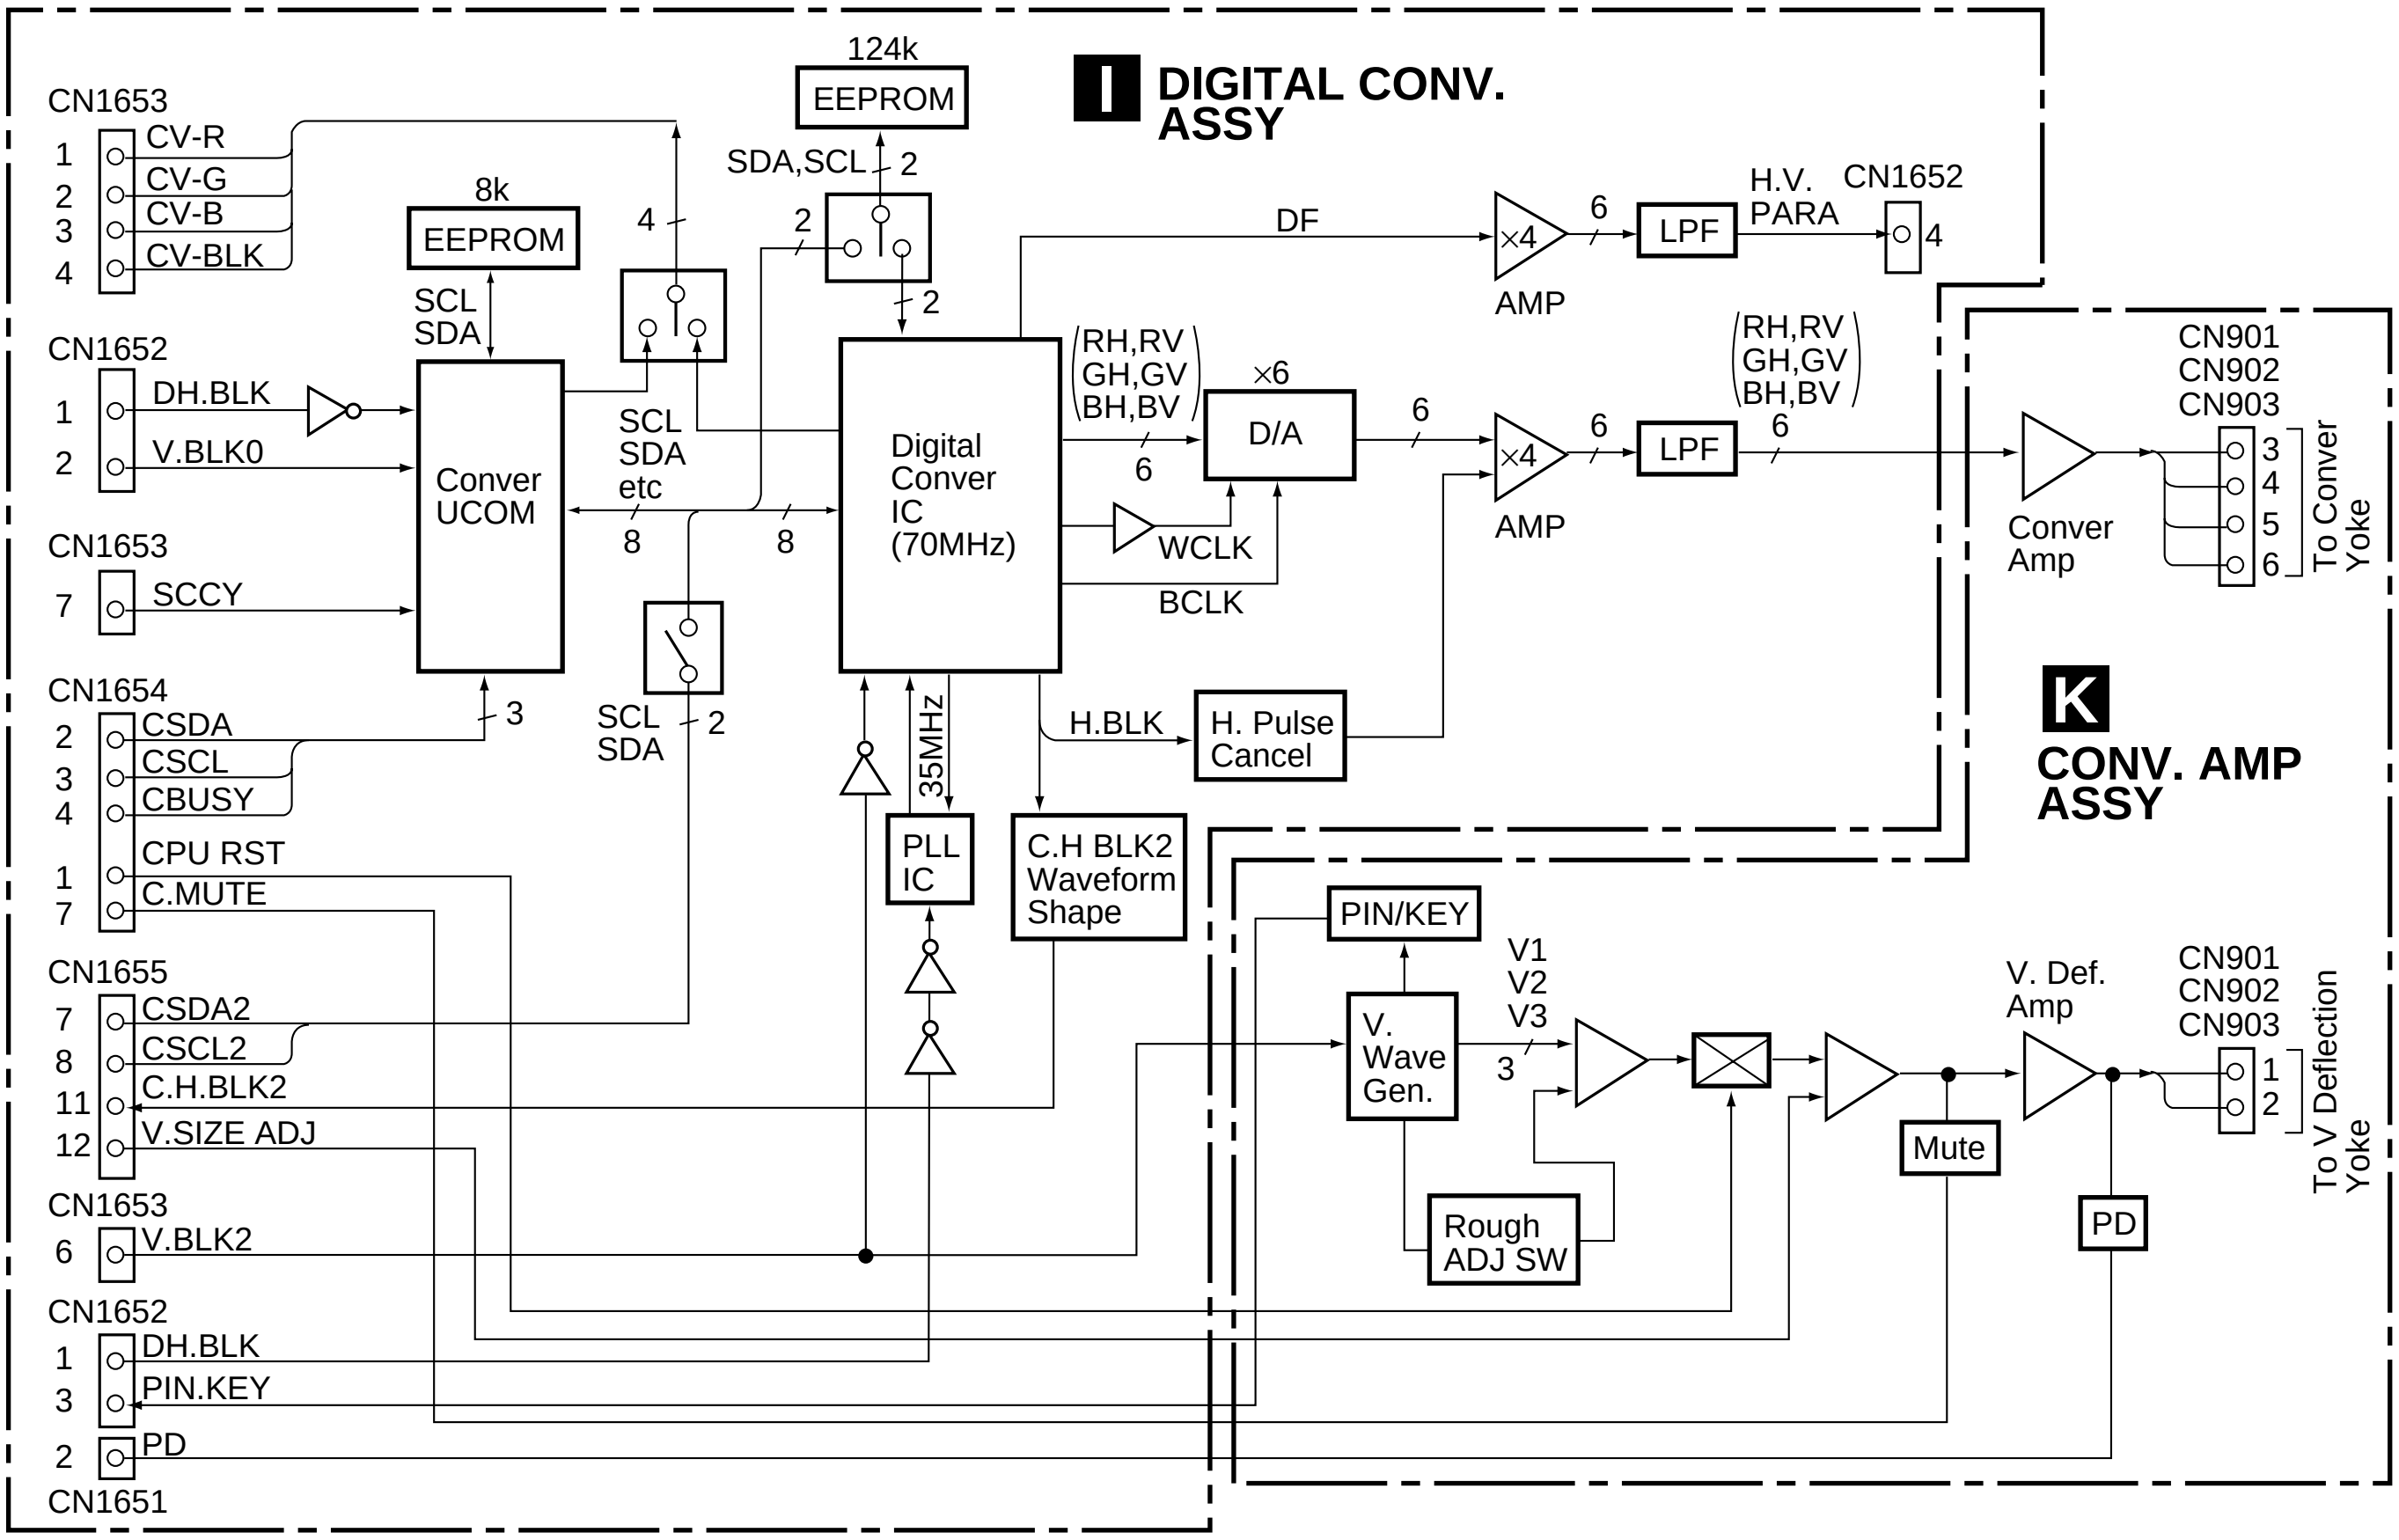
I DIGITAL CONV. ASSY
CN1653
1 CV-R
2 CV-G
3 CV-B
4 CV-BLK
CN1652
1 DH.BLK
2 V.BLK0
CN1653
7 SCCY
CN1654
2 CSDA
3 CSCL
4 CBUSY
1 CPU RST
7 C.MUTE
CN1655
7 CSDA2
8 CSCL2
11 C.H.BLK2
12 V.SIZE ADJ
CN1653
6 V.BLK2
CN1652
1 DH.BLK
3 PIN.KEY
2 PD
CN1651
8k
EEPROM
SCL
SDA
Conver UCOM
4
3
124k
EEPROM
SDA,SCL
2
SCL
SDA
etc
8
8
SCL
SDA
2
Digital Conver IC (70MHz)
35MHz
PLL IC
C.H BLK2 Waveform Shape
H.BLK
H. Pulse Cancel
DF
(RH,RV GH,GV BH,BV)
6
×6
D/A
WCLK
BCLK
×4
AMP
6
LPF
H.V. PARA
CN1652
4
(RH,RV GH,GV BH,BV)
Conver Amp
CN901
CN902
CN903
3
4
5
6
To Conver Yoke
K CONV. AMP ASSY
PIN/KEY
V. Wave Gen.
V1
V2
V3
3
Rough ADJ SW
Mute
V. Def. Amp
PD
CN901
CN902
CN903
1
2
To V Deflection Yoke

3.1.8 DEFLECTION SERVICE ASSY

L DEFLECTION SERVICE ASSY

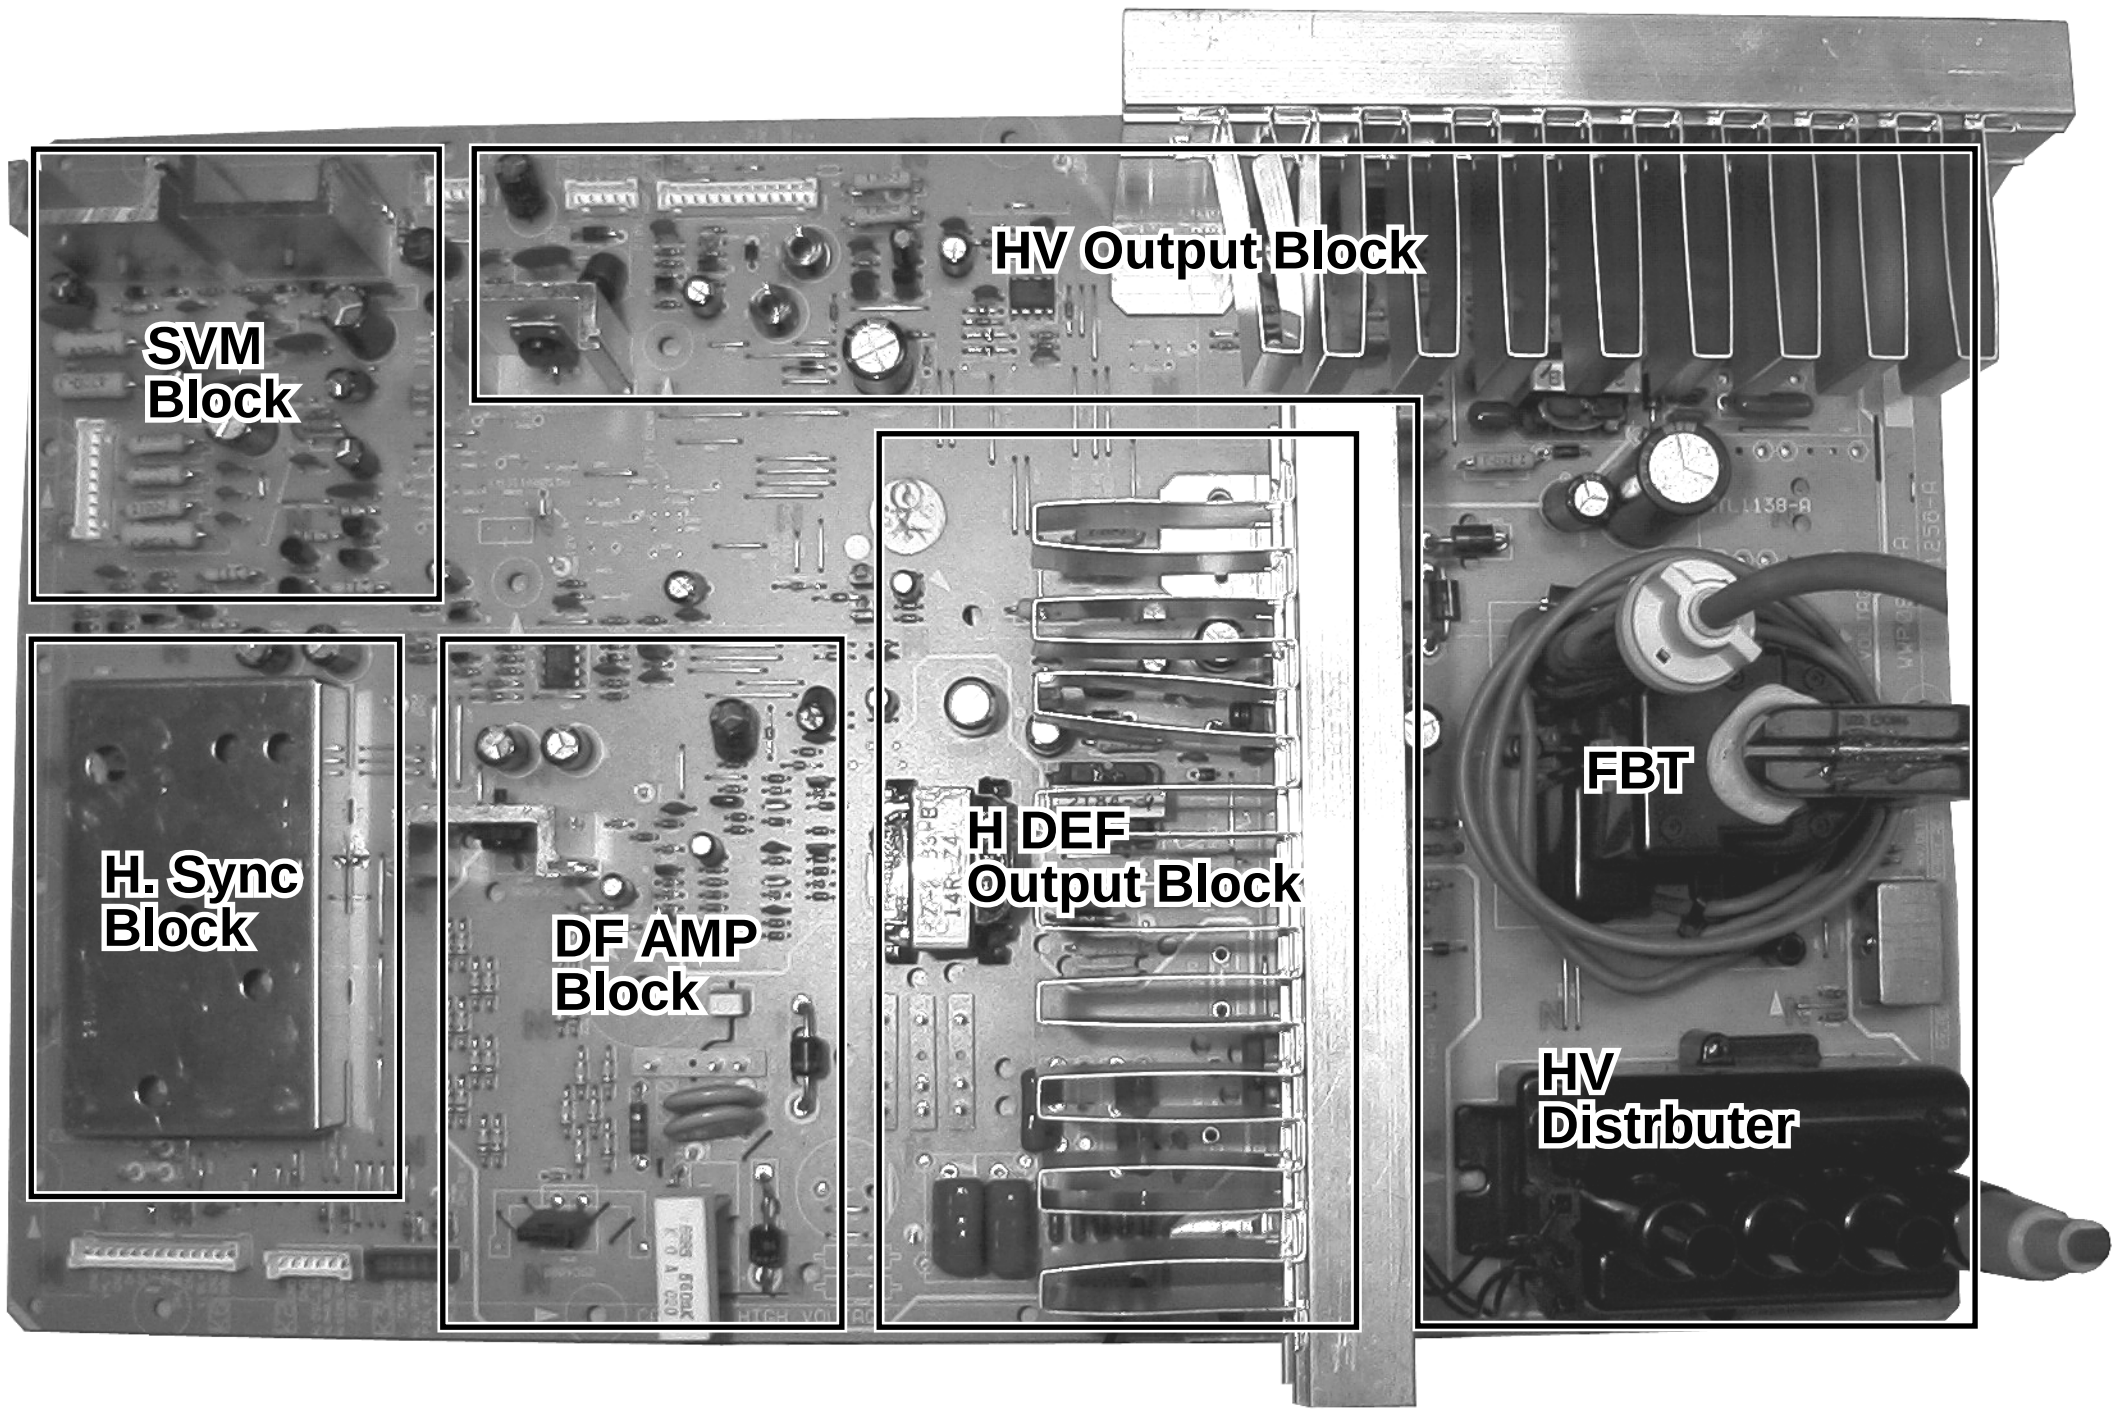
SVM Block
HV Output Block
H. Sync Block
DF AMP Block
H DEF Output Block
FBT
HV Distrbuter

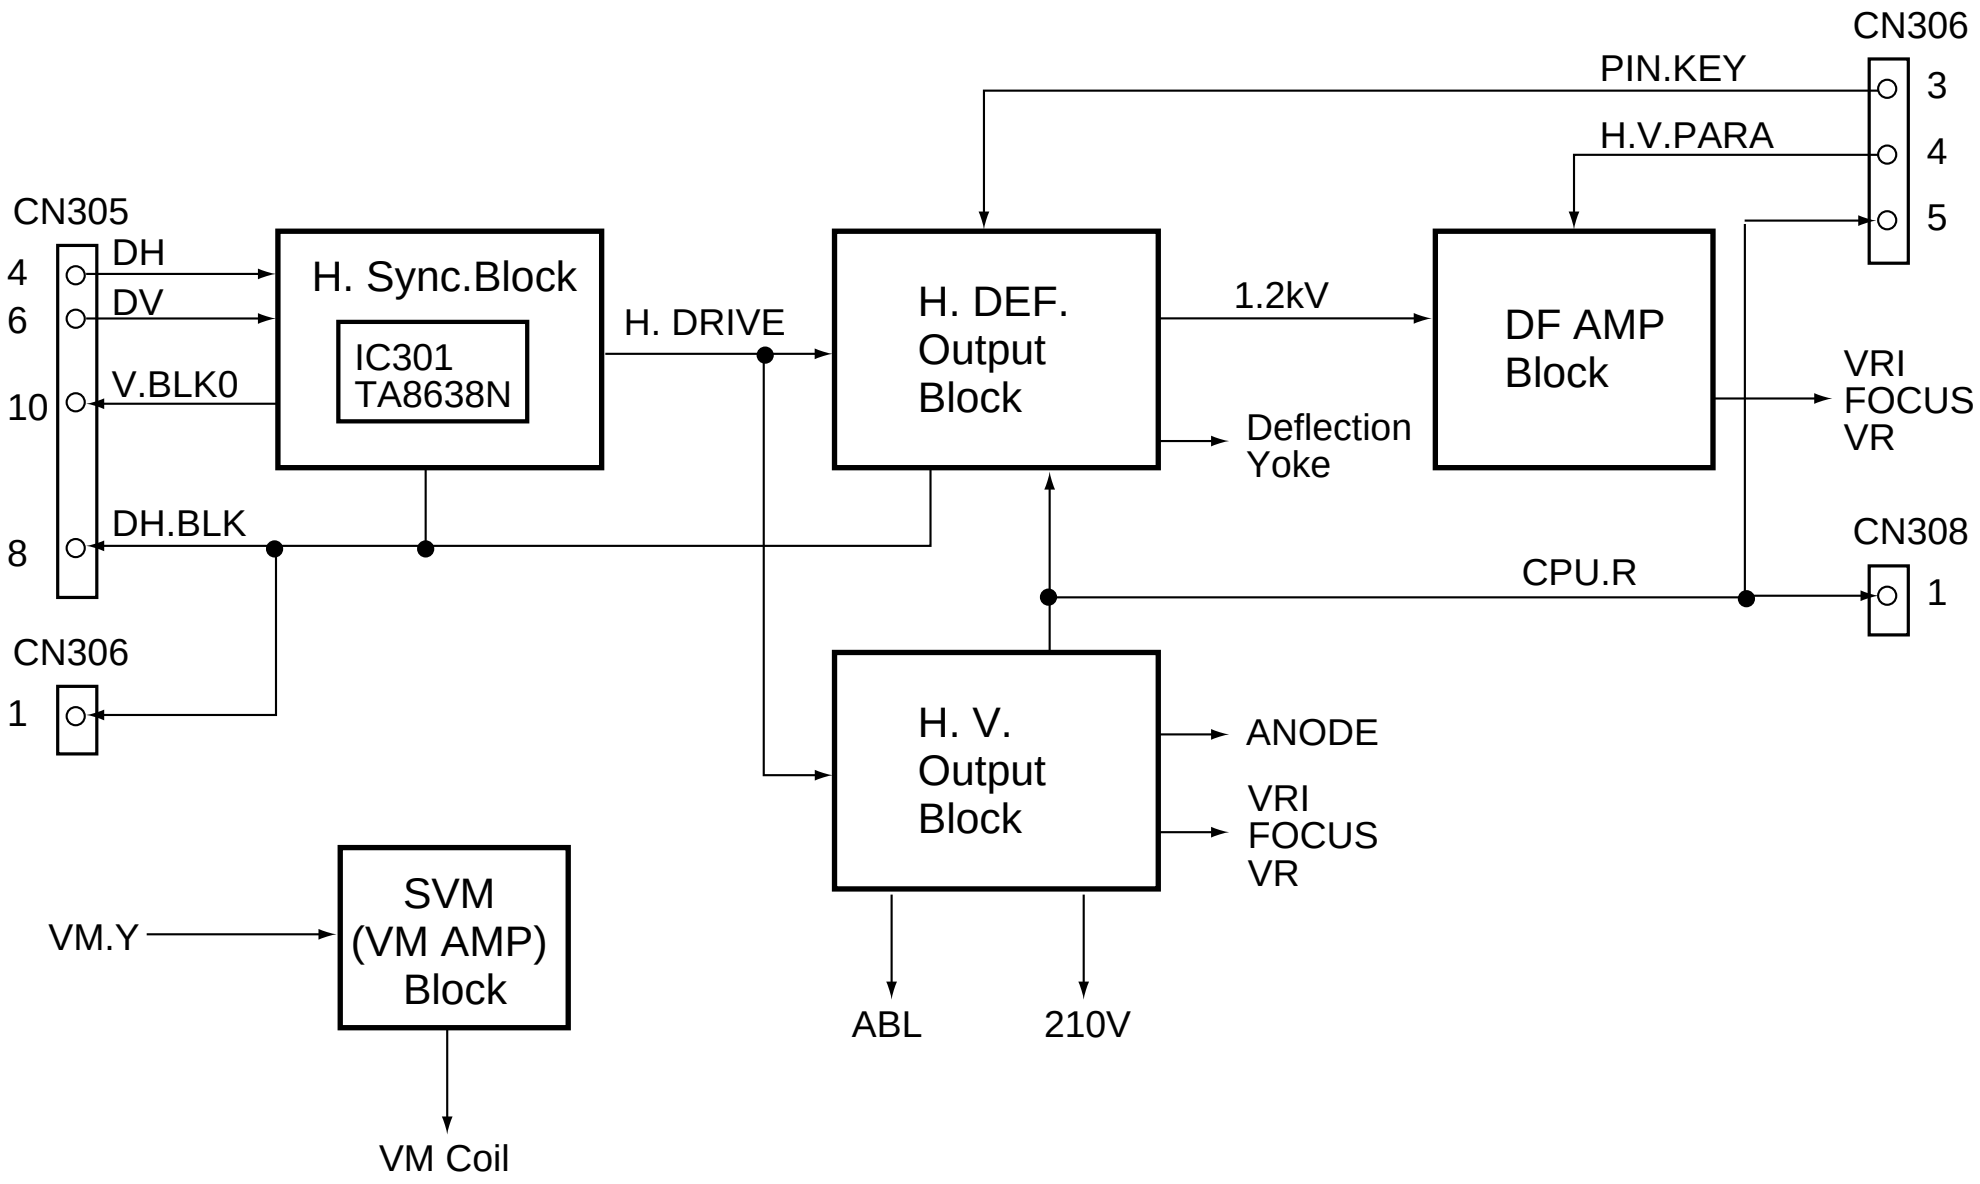
CN306
PIN.KEY
3
H.V.PARA
4
5
CN305
4
DH
6
DV
10
V.BLK0
8
DH.BLK
H. Sync.Block
IC301
TA8638N
H. DRIVE
H. DEF.
Output
Block
1.2kV
DF AMP
Block
VRI
FOCUS
VR
Deflection
Yoke
CN308
CPU.R
1
CN306
1
H. V.
Output
Block
ANODE
VRI
FOCUS
VR
ABL
210V
VM.Y
SVM
(VM AMP)
Block
VM Coil

3.1.9 POWER SUPPLY ASSY

P POWER SUPPLY ASSY

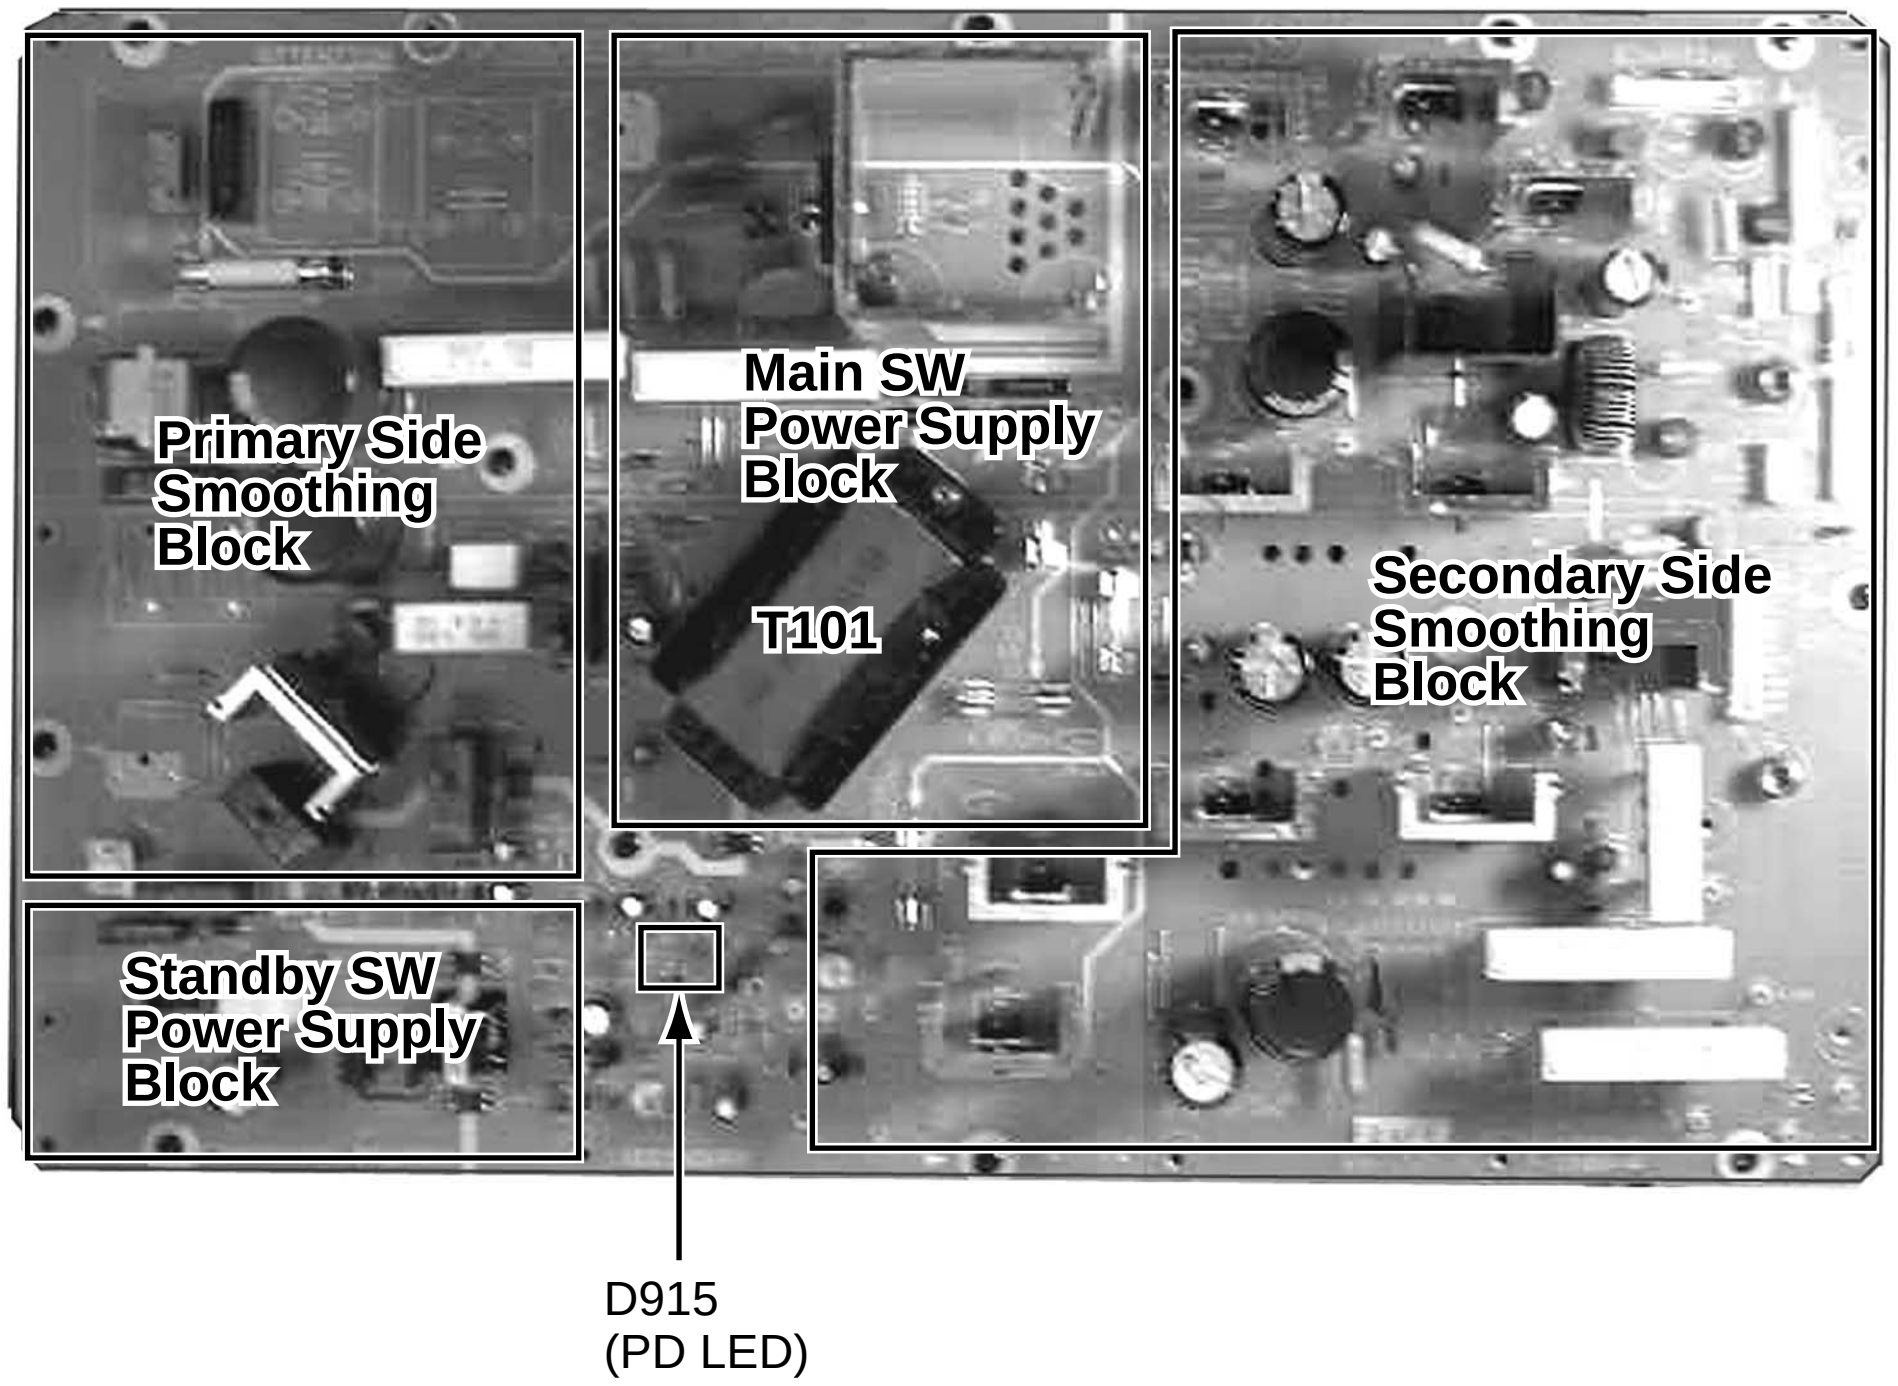
Primary Side Smoothing Block
Main SW Power Supply Block
T101
Secondary Side Smoothing Block
Standby SW Power Supply Block
D915
(PD LED)

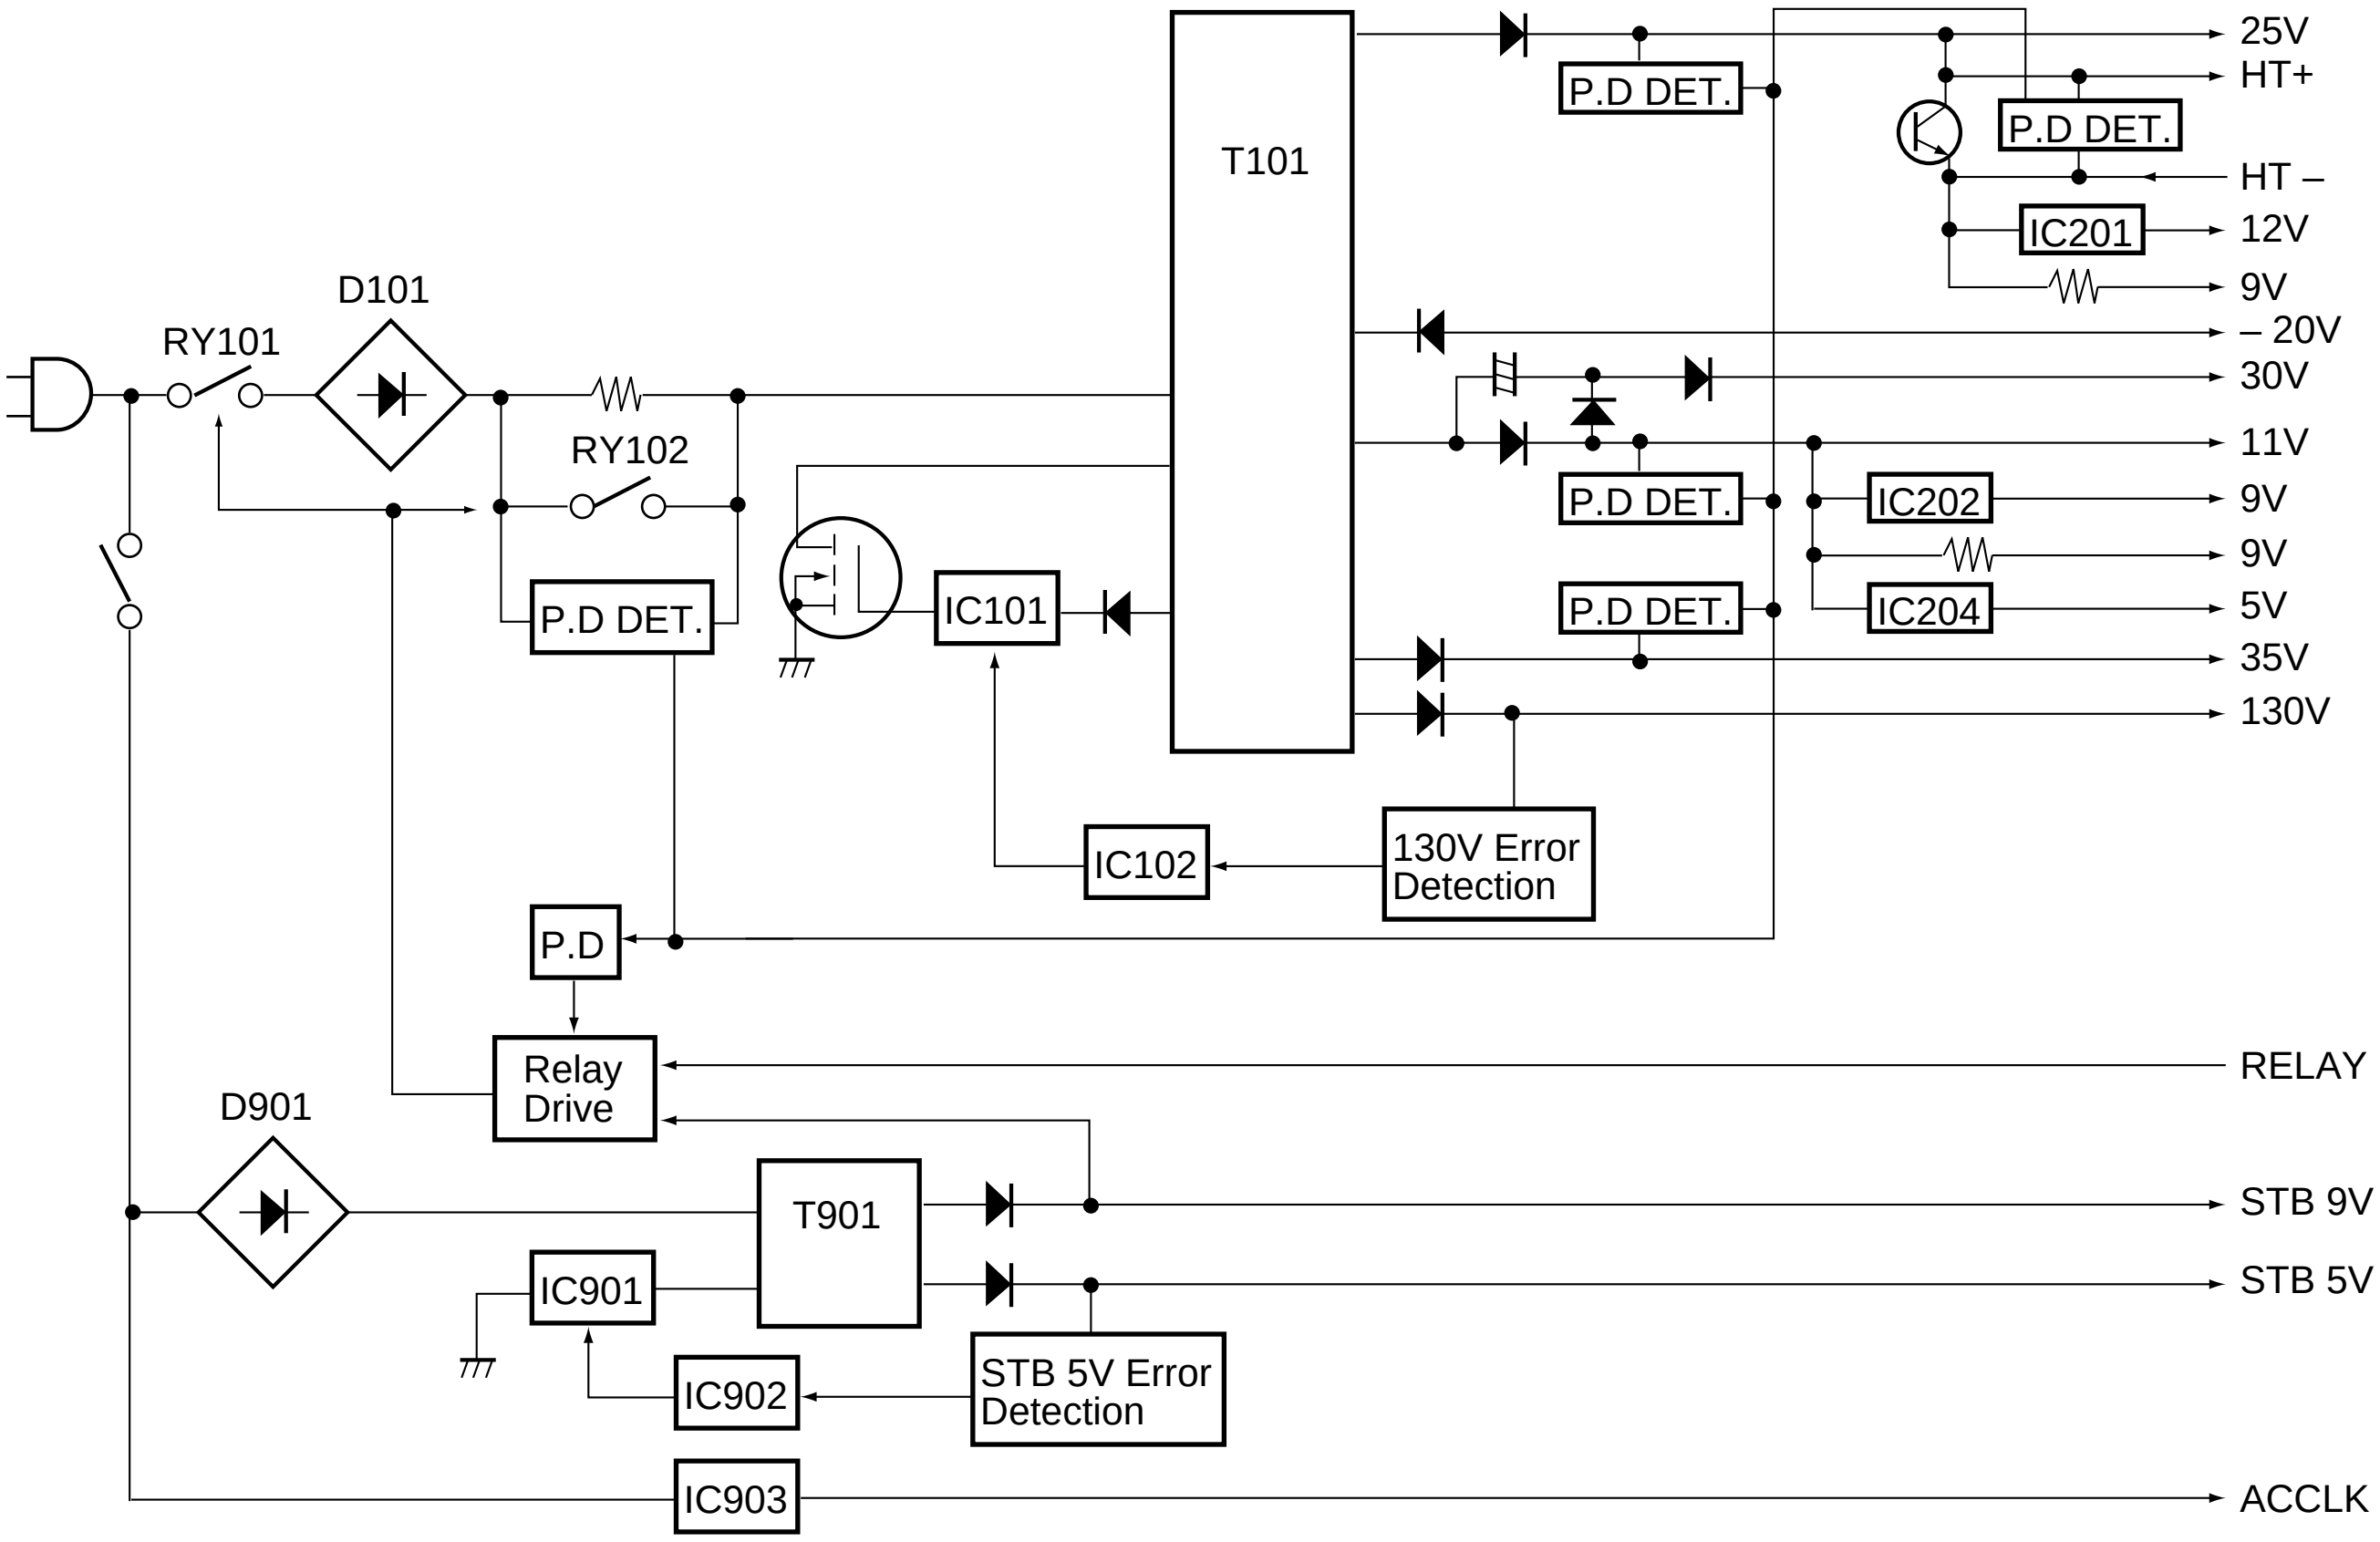
T101
D101
RY101
RY102
P.D DET.
IC101
IC102
130V Error Detection
P.D
Relay Drive
D901
T901
IC901
IC902
STB 5V Error Detection
IC903
P.D DET.
P.D DET.
P.D DET.
P.D DET.
IC201
IC202
IC204
25V
HT+
HT –
12V
9V
– 20V
30V
11V
9V
9V
5V
35V
130V
RELAY
STB 9V
STB 5V
ACCLK

3.2 OVERALL CONNECTION DIAGRAM

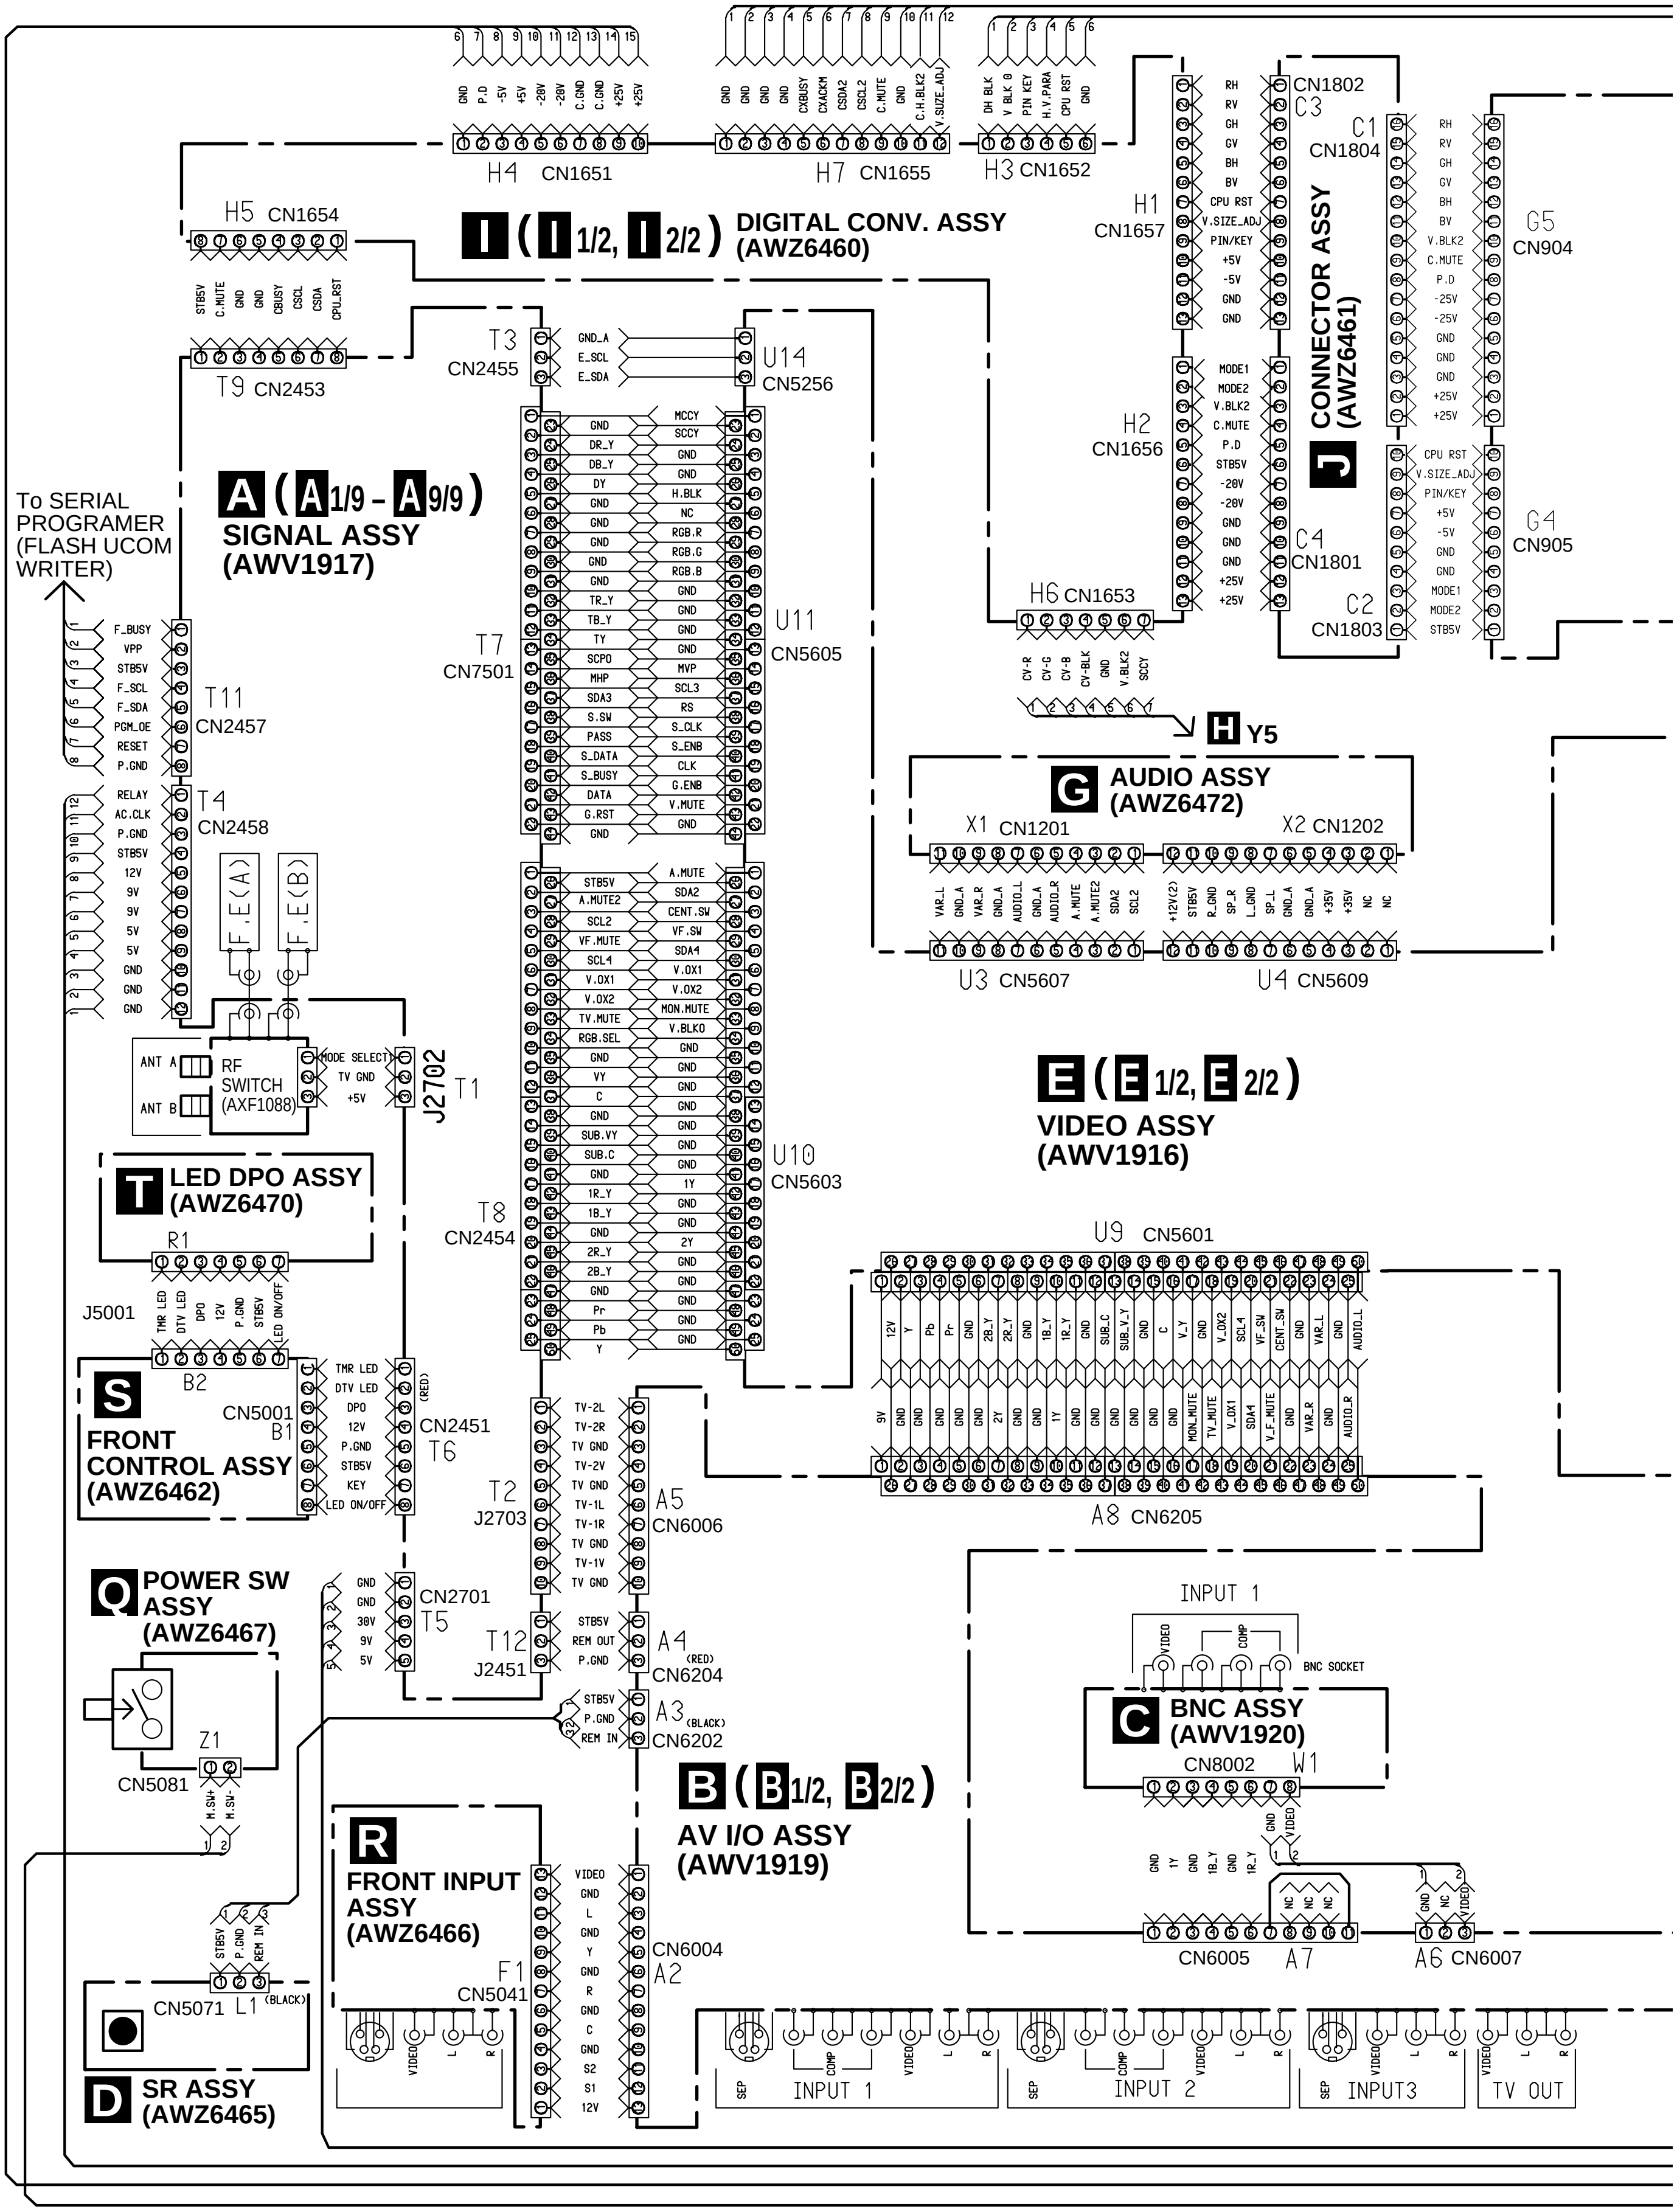
I (I 1/2, I 2/2) DIGITAL CONV. ASSY (AWZ6460)
H4 CN1651
H7 CN1655
H3 CN1652
H5 CN1654
H1 CN1657
H2 CN1656
H6 CN1653
T9 CN2453
T3 CN2455
U14 CN5256
J CONNECTOR ASSY (AWZ6461)
CN1802 C3
C1 CN1804
C4 CN1801
C2 CN1803
G5 CN904
G4 CN905
H Y5
A (A 1/9 – A 9/9) SIGNAL ASSY (AWV1917)
To SERIAL PROGRAMER (FLASH UCOM WRITER)
T11 CN2457
T4 CN2458
T7 CN7501
U11 CN5605
T8 CN2454
U10 CN5603
F.E(A)
F.E(B)
RF SWITCH (AXF1088)
ANT A
ANT B
J2702 T1
G AUDIO ASSY (AWZ6472)
X1 CN1201
X2 CN1202
U3 CN5607
U4 CN5609
E (E 1/2, E 2/2) VIDEO ASSY (AWV1916)
U9 CN5601
A8 CN6205
T LED DPO ASSY (AWZ6470)
R1
J5001
B2
S FRONT CONTROL ASSY (AWZ6462)
CN5001 B1
CN2451 T6
T2 J2703
A5 CN6006
Q POWER SW ASSY (AWZ6467)
CN2701 T5
T12 J2451
A4 (RED) CN6204
A3 (BLACK) CN6202
Z1 CN5081
M.SW+
M.SW-
B (B 1/2, B 2/2) AV I/O ASSY (AWV1919)
C BNC ASSY (AWV1920)
INPUT 1
VIDEO
COMP
BNC SOCKET
CN8002 W1
R FRONT INPUT ASSY (AWZ6466)
F1 CN5041
CN6004 A2
CN6005 A7
A6 CN6007
CN5071 L1 (BLACK)
D SR ASSY (AWZ6465)
SEP
INPUT 1
INPUT 2
INPUT3
TV OUT
VIDEO
L
R

Note : When ordering service parts, be sure to refer to "EXPLODED VIEWS and PARTS LIST" or "PCB PARTS LIST".

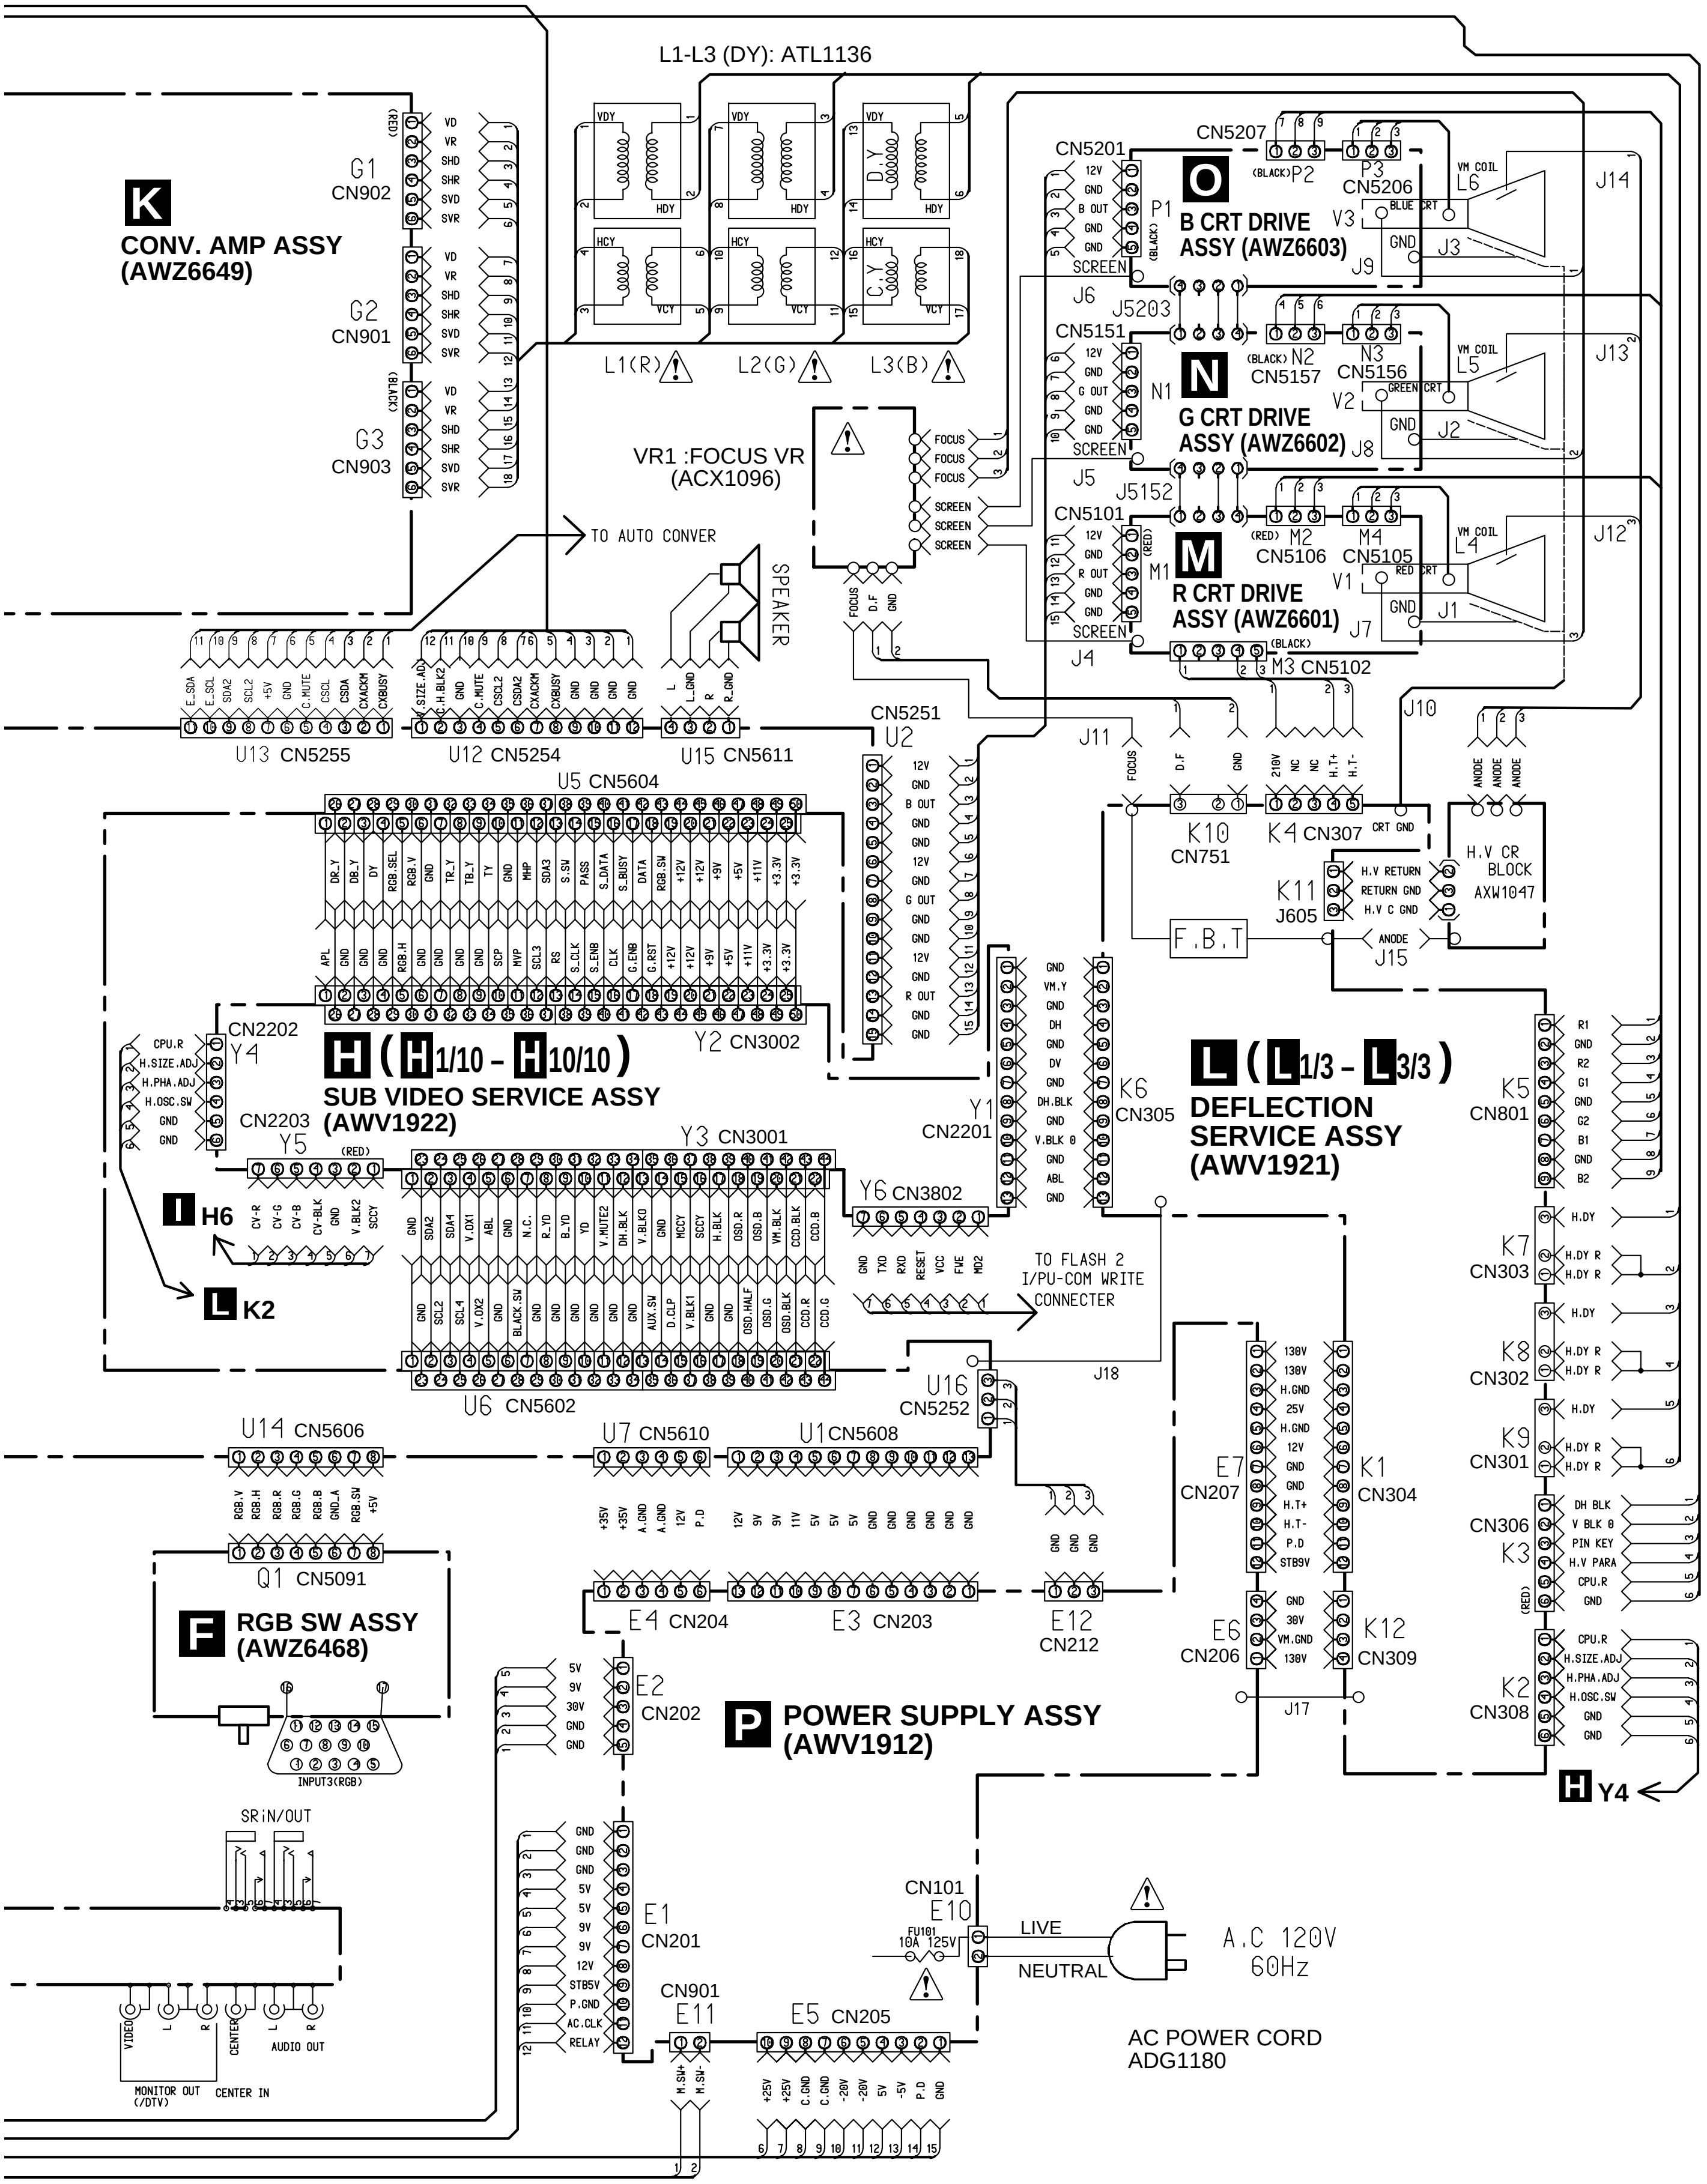
L1-L3 (DY): ATL1136
K
CONV. AMP ASSY
(AWZ6649)
G1 CN902
G2 CN901
G3 CN903
L1(R)
L2(G)
L3(B)
VR1 :FOCUS VR
(ACX1096)
TO AUTO CONVER
SPEAKER
O
B CRT DRIVE
ASSY (AWZ6603)
CN5201
CN5207
CN5206
N
G CRT DRIVE
ASSY (AWZ6602)
CN5151
CN5157
CN5156
M
R CRT DRIVE
ASSY (AWZ6601)
CN5101
CN5106
CN5105
CN5102
U13 CN5255
U12 CN5254
U15 CN5611
CN5251
U2
U5 CN5604
Y2 CN3002
H (H1/10 - H10/10)
SUB VIDEO SERVICE ASSY
(AWV1922)
CN2202 Y4
CN2203 Y5
Y3 CN3001
Y1 CN2201
Y6 CN3802
I H6
L K2
U6 CN5602
U16 CN5252
TO FLASH 2
I/PU-COM WRITE
CONNECTER
J18
L (L1/3 - L3/3)
DEFLECTION
SERVICE ASSY
(AWV1921)
K6 CN305
K10 CN751
K4 CN307
K11 J605
F.B.T
J15
H.V CR BLOCK AXW1047
K5 CN801
K7 CN303
K8 CN302
K9 CN301
K3 CN306
K2 CN308
H Y4
U14 CN5606
U7 CN5610
U1 CN5608
Q1 CN5091
F
RGB SW ASSY
(AWZ6468)
INPUT3(RGB)
E4 CN204
E3 CN203
E12 CN212
E7 CN207
K1 CN304
E6 CN206
K12 CN309
J17
E2 CN202
P
POWER SUPPLY ASSY
(AWV1912)
SRiN/OUT
E1 CN201
MONITOR OUT (/DTV)
CENTER IN
AUDIO OUT
CN901 E11
E5 CN205
CN101 E10
FU101 10A 125V
LIVE
NEUTRAL
A.C 120V 60Hz
AC POWER CORD
ADG1180

3.3 SIGNAL ASSY (1/9)

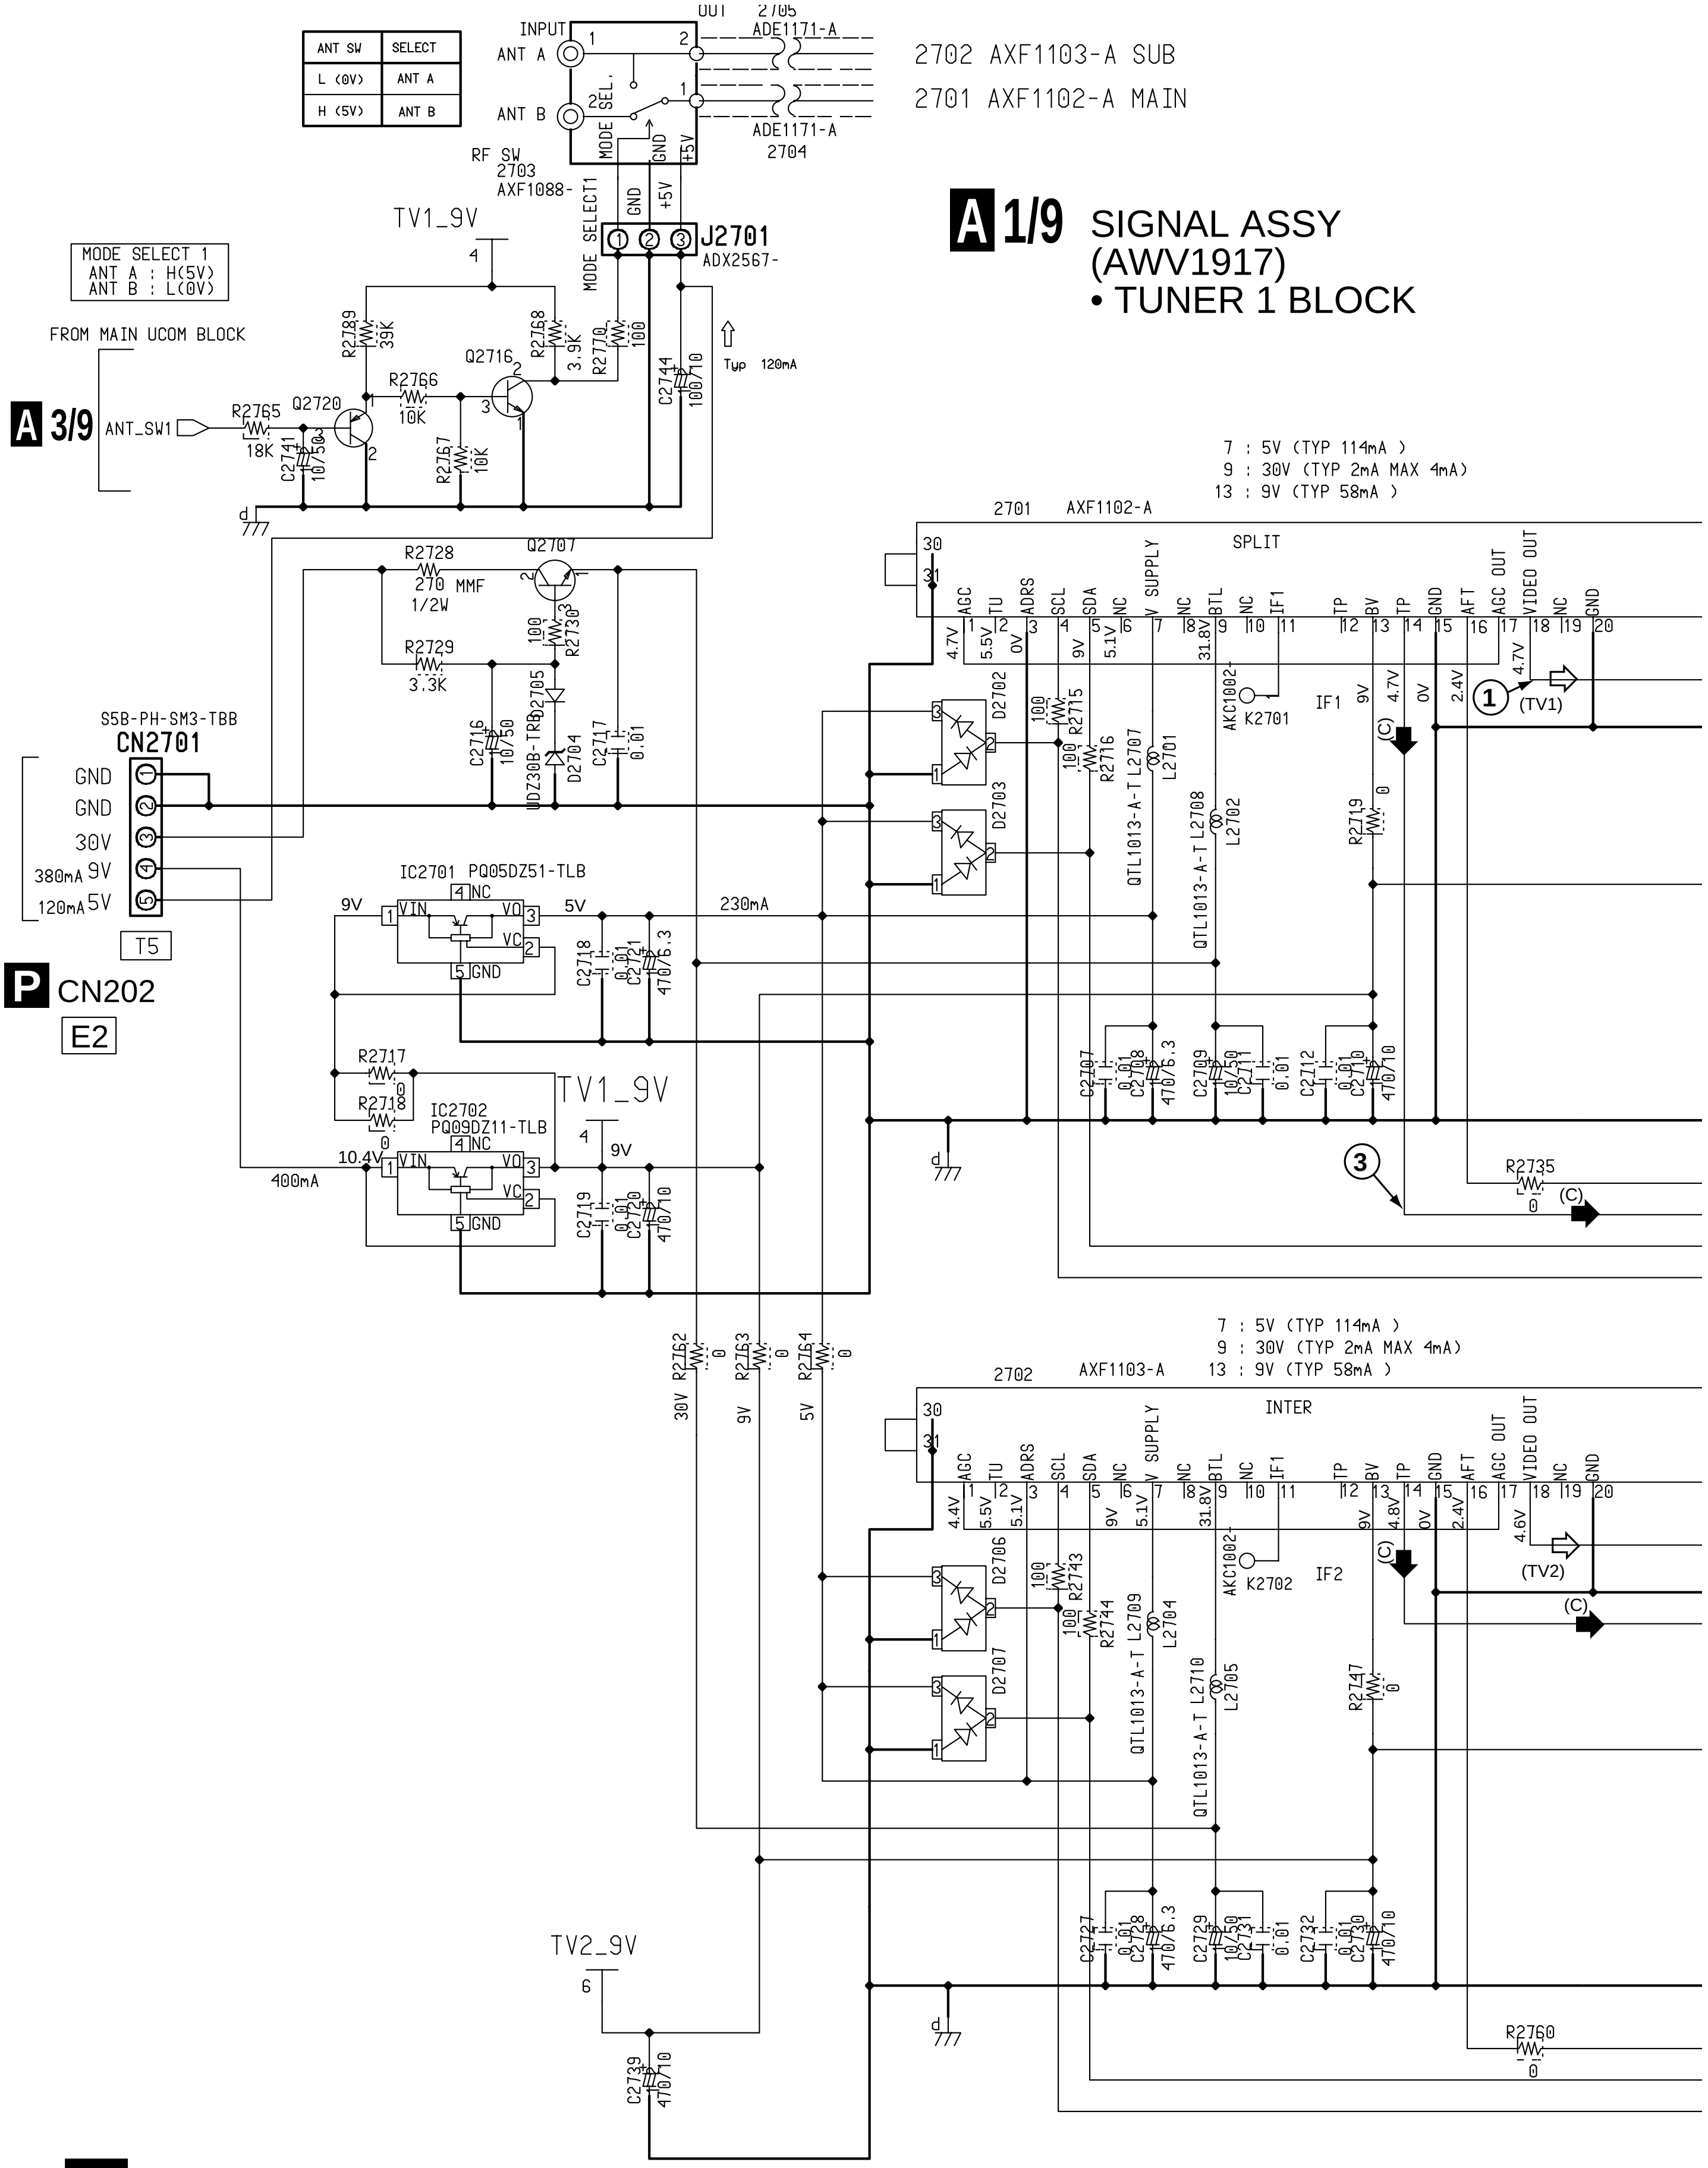
A 1/9 SIGNAL ASSY
(AWV1917)
• TUNER 1 BLOCK
ANT SW | SELECT
L (0V) | ANT A
H (5V) | ANT B
INPUT
ANT A
ANT B
OUT 2705 ADE1171-A
ADE1171-A 2704
2702 AXF1103-A SUB
2701 AXF1102-A MAIN
RF SW 2703 AXF1088-
MODE SEL.
GND +5V
MODE SELECT1
J2701 ADX2567-
MODE SELECT 1
ANT A : H(5V)
ANT B : L(0V)
FROM MAIN UCOM BLOCK
A 3/9 ANT_SW1
TV1_9V
R2789 39K
R2768 3.9K
R2770 100
C2744 100/10
Typ 120mA
Q2716
Q2720
R2765 18K
R2766 10K
R2767 10K
C2741 10/50
R2728 270 MMF 1/2W
Q2707
R2730 100
R2729 3.3K
D2705
UDZ30B-TRB
D2704
C2716 10/50
C2717 0.01
S5B-PH-SM3-TBB
CN2701
GND
GND
30V
380mA 9V
120mA 5V
T5
P CN202
E2
IC2701 PQ05DZ51-TLB
VIN VO VC GND NC
9V 5V 230mA
C2718 0.01
C2721 470/6.3
R2717 0
R2718 0
IC2702 PQ09DZ11-TLB
10.4V 400mA
TV1_9V 9V
C2719 0.01
C2720 470/10
R2762 0 30V
R2763 0 9V
R2764 0 5V
TV2_9V
C2739 470/10
7 : 5V (TYP 114mA)
9 : 30V (TYP 2mA MAX 4mA)
13 : 9V (TYP 58mA)
2701 AXF1102-A
SPLIT
AGC TU ADRS SCL SDA NC V SUPPLY NC BTL NC IF1 TP BV TP GND AFT AGC OUT VIDEO OUT NC GND
D2702
D2703
R2715 100
R2716 100
QTL1013-A-T L2707
L2701
QTL1013-A-T L2708
L2702
AKC1002 K2701
IF1
R2719 0
① (TV1)
(C)
C2707 0.01
C2708 470/6.3
C2709 10/50
C2711 0.01
C2712 0.01
C2710 470/10
③
R2735 0
(C)
2702 AXF1103-A
INTER
D2706
D2707
R2743 100
R2744 100
QTL1013-A-T L2709
L2704
QTL1013-A-T L2710
L2705
AKC1002 K2702
IF2
(TV2)
(C)
R2747 0
C2727 0.01
C2728 470/6.3
C2729 10/50
C2731 0.01
C2732 0.01
C2730 470/10
R2760 0

Notes
1.RESISTORS
Indicated in Ω
tolerance unless otherwise noted k kΩ
2.CAPASITORS
Indicated in capacity(uF)/Voltage unless
otherwise noted p pF
Indication without voltage is 50V except electrolytic capacitor.

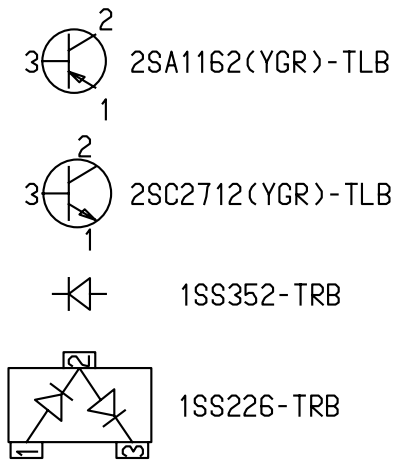
2SA1162(YGR)-TLB
2SC2712(YGR)-TLB
1SS352-TRB
1SS226-TRB
1
2
3

(C) ➡ : COMPOSITE AUDIO SIGNAL ROUTE
(TV1) ⇨ : VIDEO SIGNAL ROUTE (TV1)
(TV2) ⇨ : VIDEO SIGNAL ROUTE (TV2)
➡ : AUDIO SIGNAL ROUTE
(TV1) ➡ : AUDIO SIGNAL ROUTE (TV1)
(TV2) ➡ : AUDIO SIGNAL ROUTE (TV2)

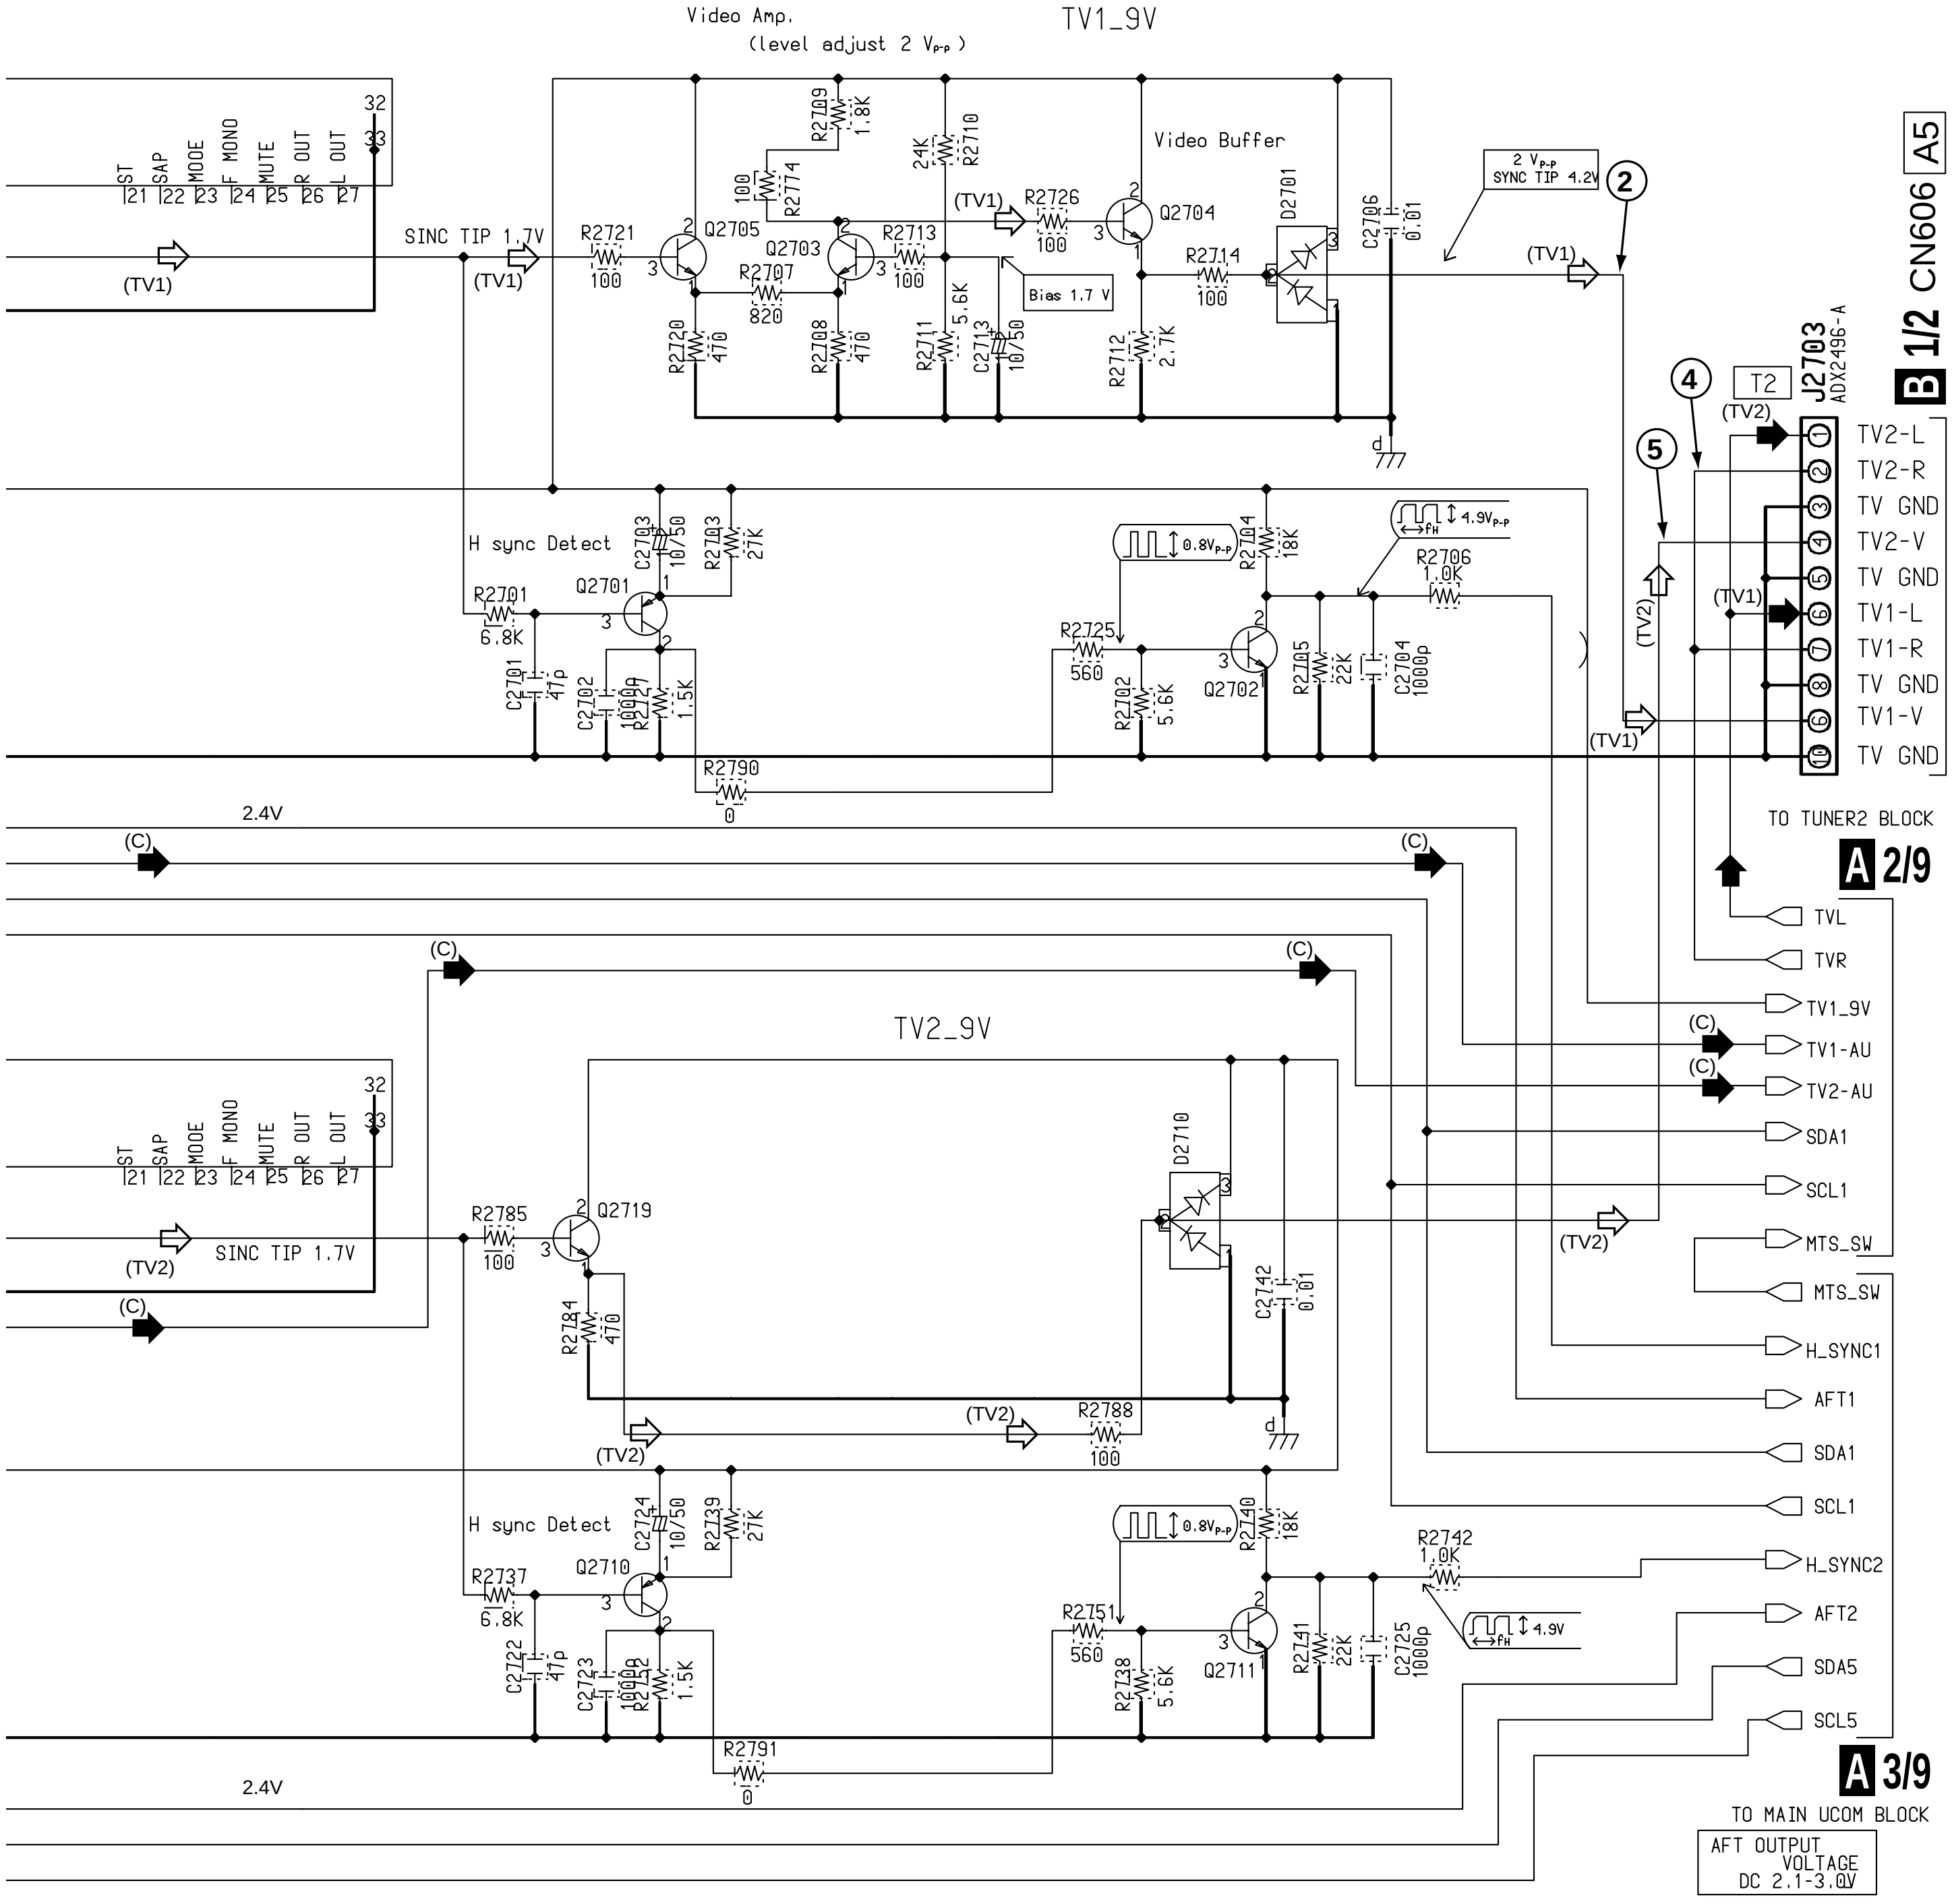
Video Amp.
(level adjust 2 Vp-p)
TV1_9V
Video Buffer
ST
SAP
MODE
F MONO
MUTE
R OUT
L OUT
21 22 23 24 25 26 27
32
33
SINC TIP 1.7V
(TV1)
R2721 100
Q2705
R2709 1.8K
R2774 100
Q2703
R2707 820
R2720 470
R2708 470
24K R2710
R2711 5.6K
C2713 10/50
R2713 100
R2726 100
Bias 1.7 V
Q2704
R2712 2.7K
R2714 100
D2701
C2706 0.01
2 Vp-p SYNC TIP 4.2V
②
④
⑤
T2
J2703 ADX2496-A
B 1/2 CN606 A5
TV2-L
TV2-R
TV GND
TV2-V
TV GND
TV1-L
TV1-R
TV GND
TV1-V
TV GND
(TV2)
H sync Detect
C2703 10/50
R2703 27K
R2701 6.8K
Q2701
C2701 47p
C2702 1000p
R2727 1.5K
R2790 0
0.8Vp-p
R2704 18K
R2725 560
R2702 5.6K
Q2702
R2705 22K
C2704 1000p
4.9Vp-p
fH
R2706 1.0K
2.4V
(C)
TO TUNER2 BLOCK
A 2/9
TVL
TVR
TV1_9V
TV1-AU
TV2-AU
SDA1
SCL1
MTS_SW
MTS_SW
H_SYNC1
AFT1
SDA1
SCL1
H_SYNC2
AFT2
SDA5
SCL5
TV2_9V
D2710
R2785 100
Q2719
SINC TIP 1.7V
R2784 470
C2742 0.01
R2788 100
R2737 6.8K
Q2710
C2724 10/50
R2739 27K
C2722 47p
C2723 1000p
R2752 1.5K
R2791 0
R2740 18K
R2751 560
R2738 5.6K
Q2711
R2741 22K
C2725 1000p
R2742 1.0K
4.9V
A 3/9
TO MAIN UCOM BLOCK
AFT OUTPUT VOLTAGE DC 2.1-3.0V

3.4 SIGNAL ASSY (2/9)

A 2/9 SIGNAL ASSY
(AWV1917)
• TUNER 2 BLOCK

(C) ➡ : COMPOSITE AUDIO SIGNAL ROUTE

➡ : AUDIO SIGNAL ROUTE

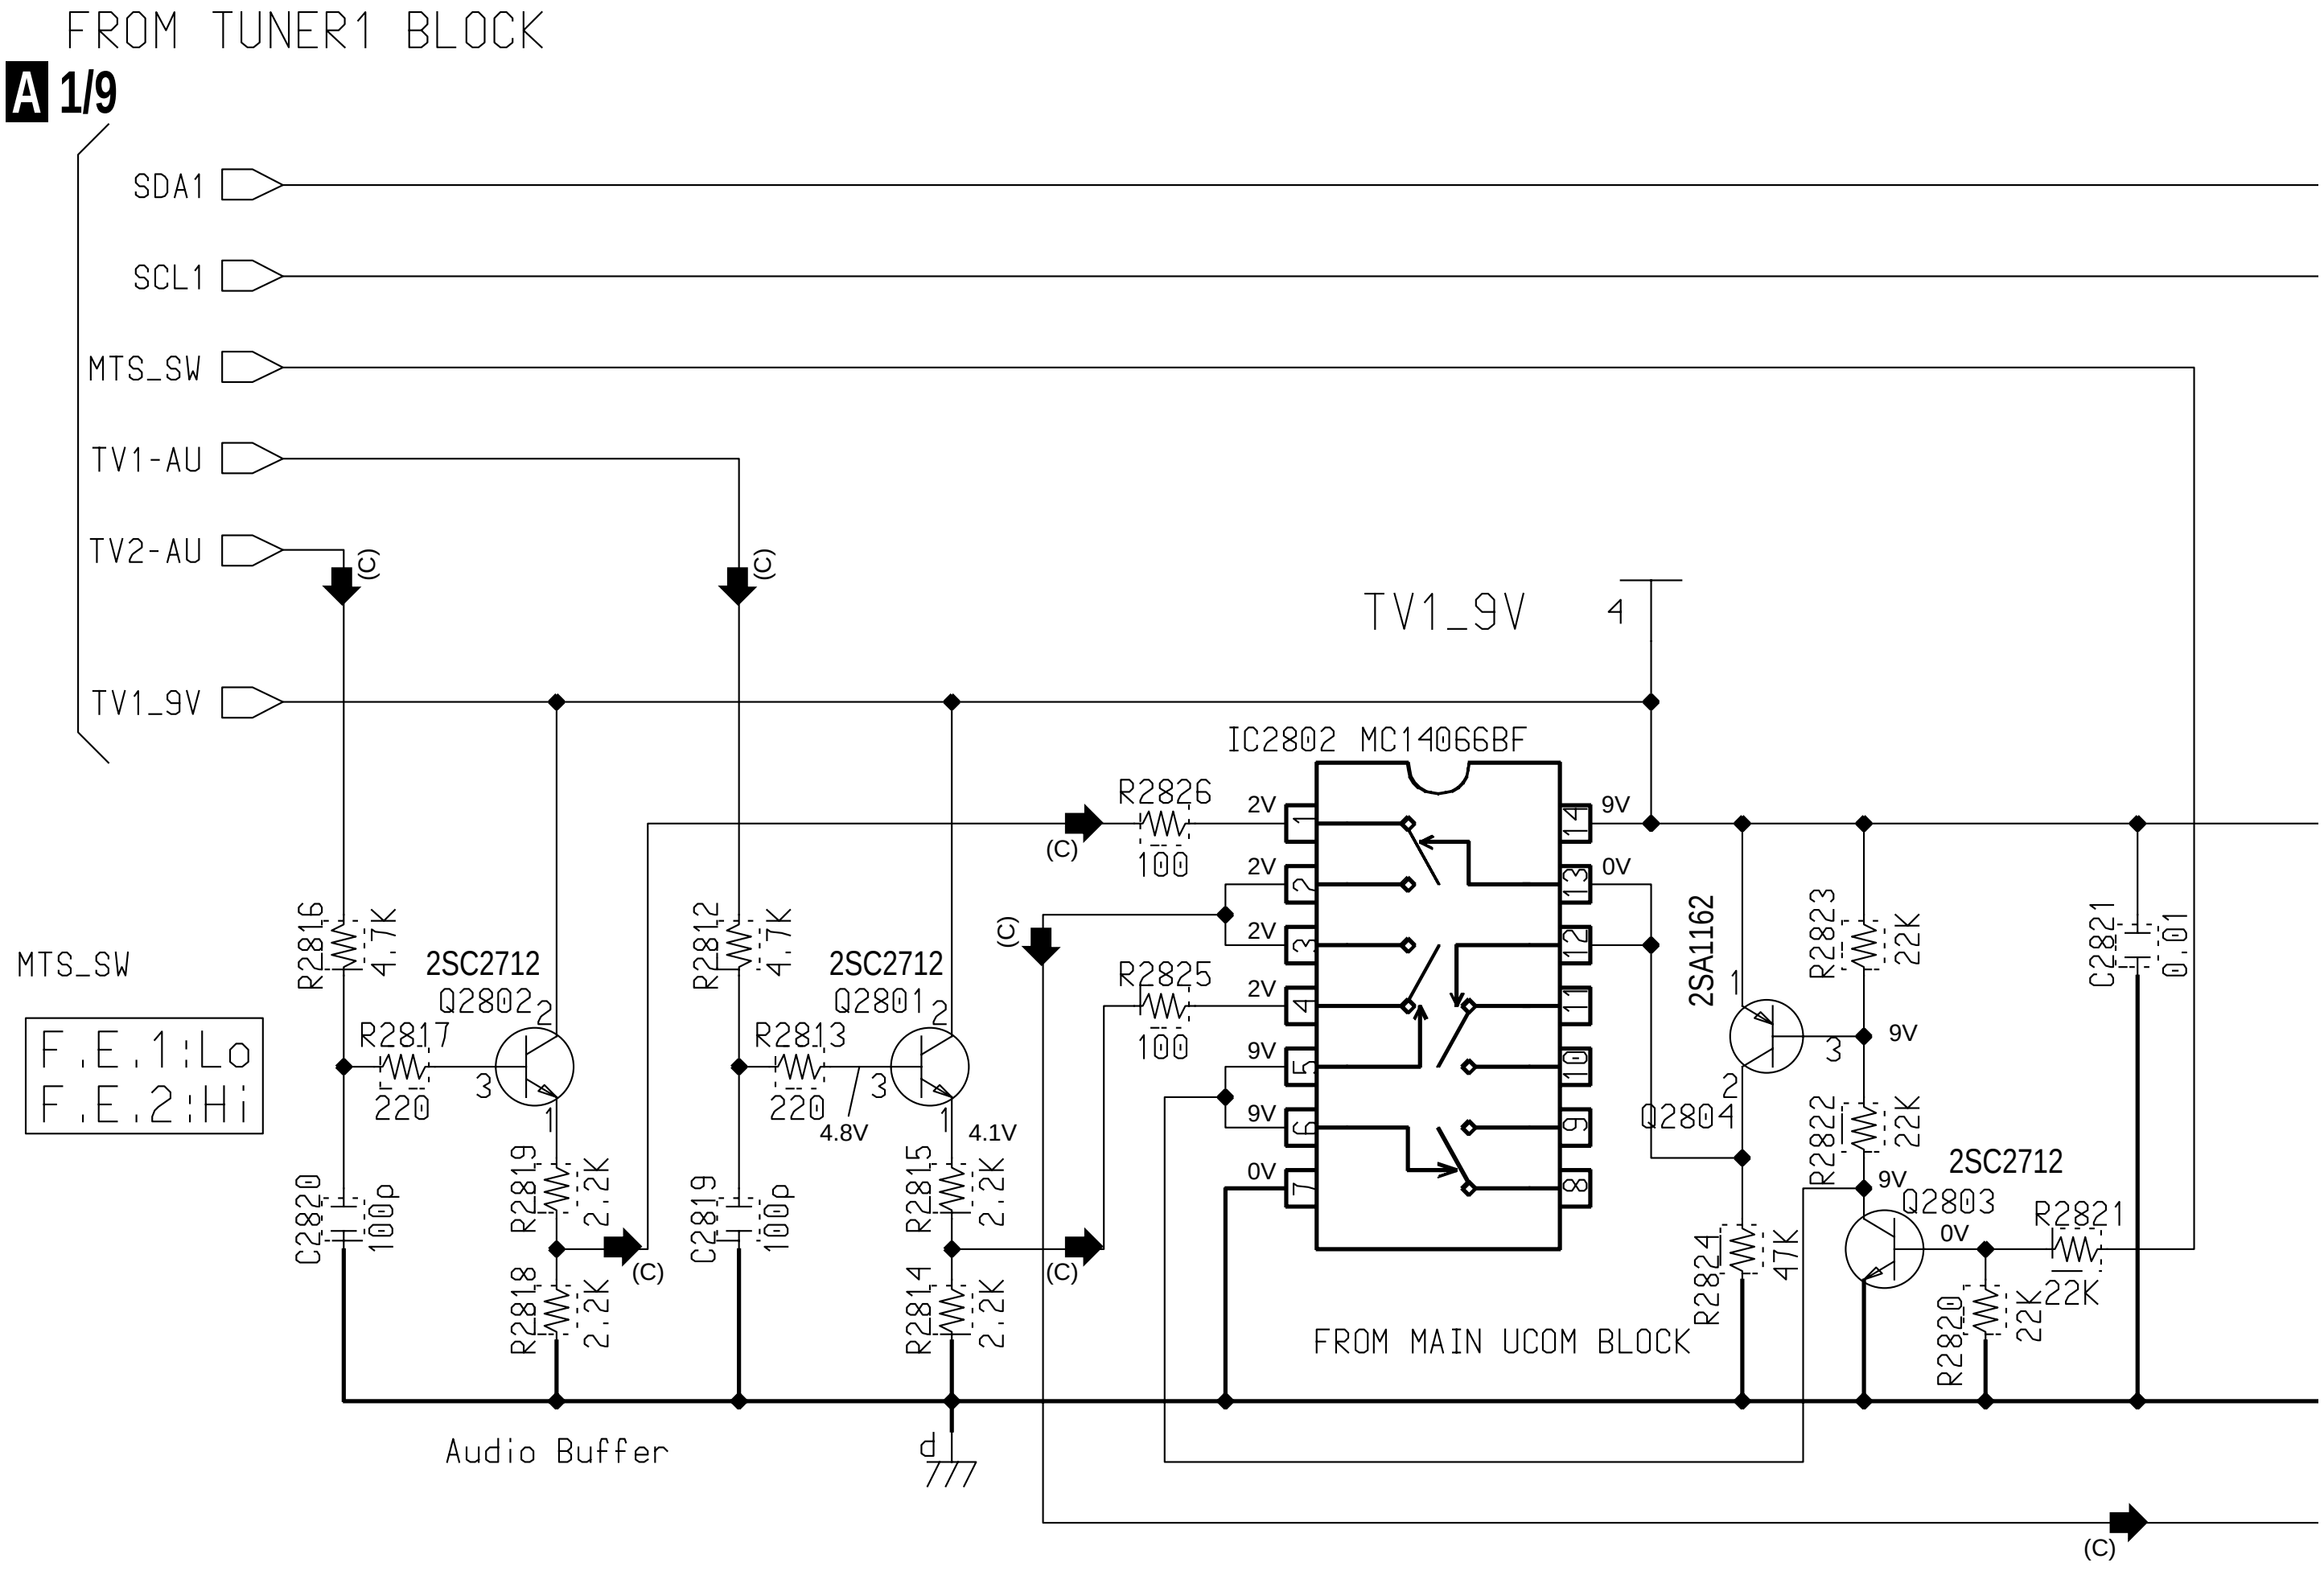
FROM TUNER1 BLOCK
A 1/9
SDA1
SCL1
MTS_SW
TV1-AU
TV2-AU
TV1_9V
(C)
TV1_9V 4
IC2802 MC14066BF
R2826 100
R2825 100
2V 2V 2V 2V 9V 9V 0V
9V 0V
1 2 3 4 5 6 7 8 9 10 11 12 13 14
MTS_SW
F.E.1:Lo
F.E.2:Hi
R2816 4.7K
2SC2712 Q2802
R2817 220
C2820 100p
R2819 2.2K
R2818 2.2K
R2812 4.7K
2SC2712 Q2801
R2813 220
4.8V 4.1V
C2819 100p
R2815 2.2K
R2814 2.2K
Audio Buffer
d
2SA1162 Q2804
R2823 22K
R2822 22K
R2824 47K
9V
2SC2712 Q2803
0V
R2821 22K
R2820 22K
C2821 0.01
FROM MAIN UCOM BLOCK

A 1/9

① **2701-pin 18**
V: 1V/div. H: 10µsec/div.

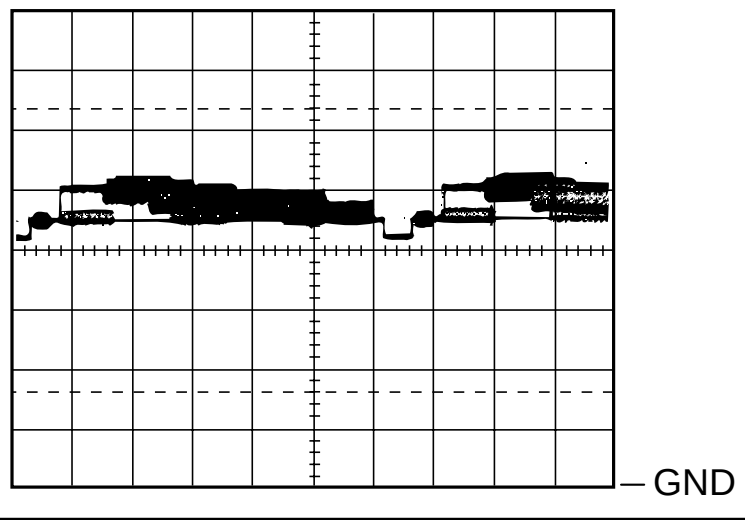

② **J2703-pin 9**
V: 1V/div. H: 10µsec/div.

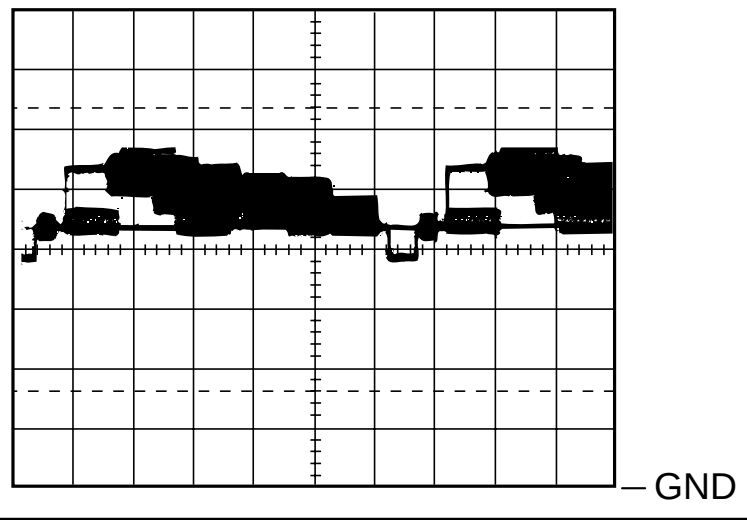

③ **2701-pin 14**
V: 1V/div. H: 200µsec/div.

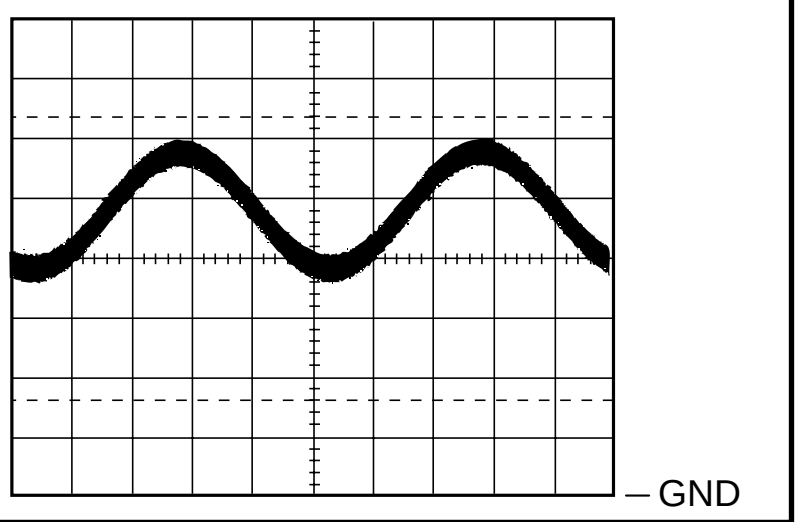

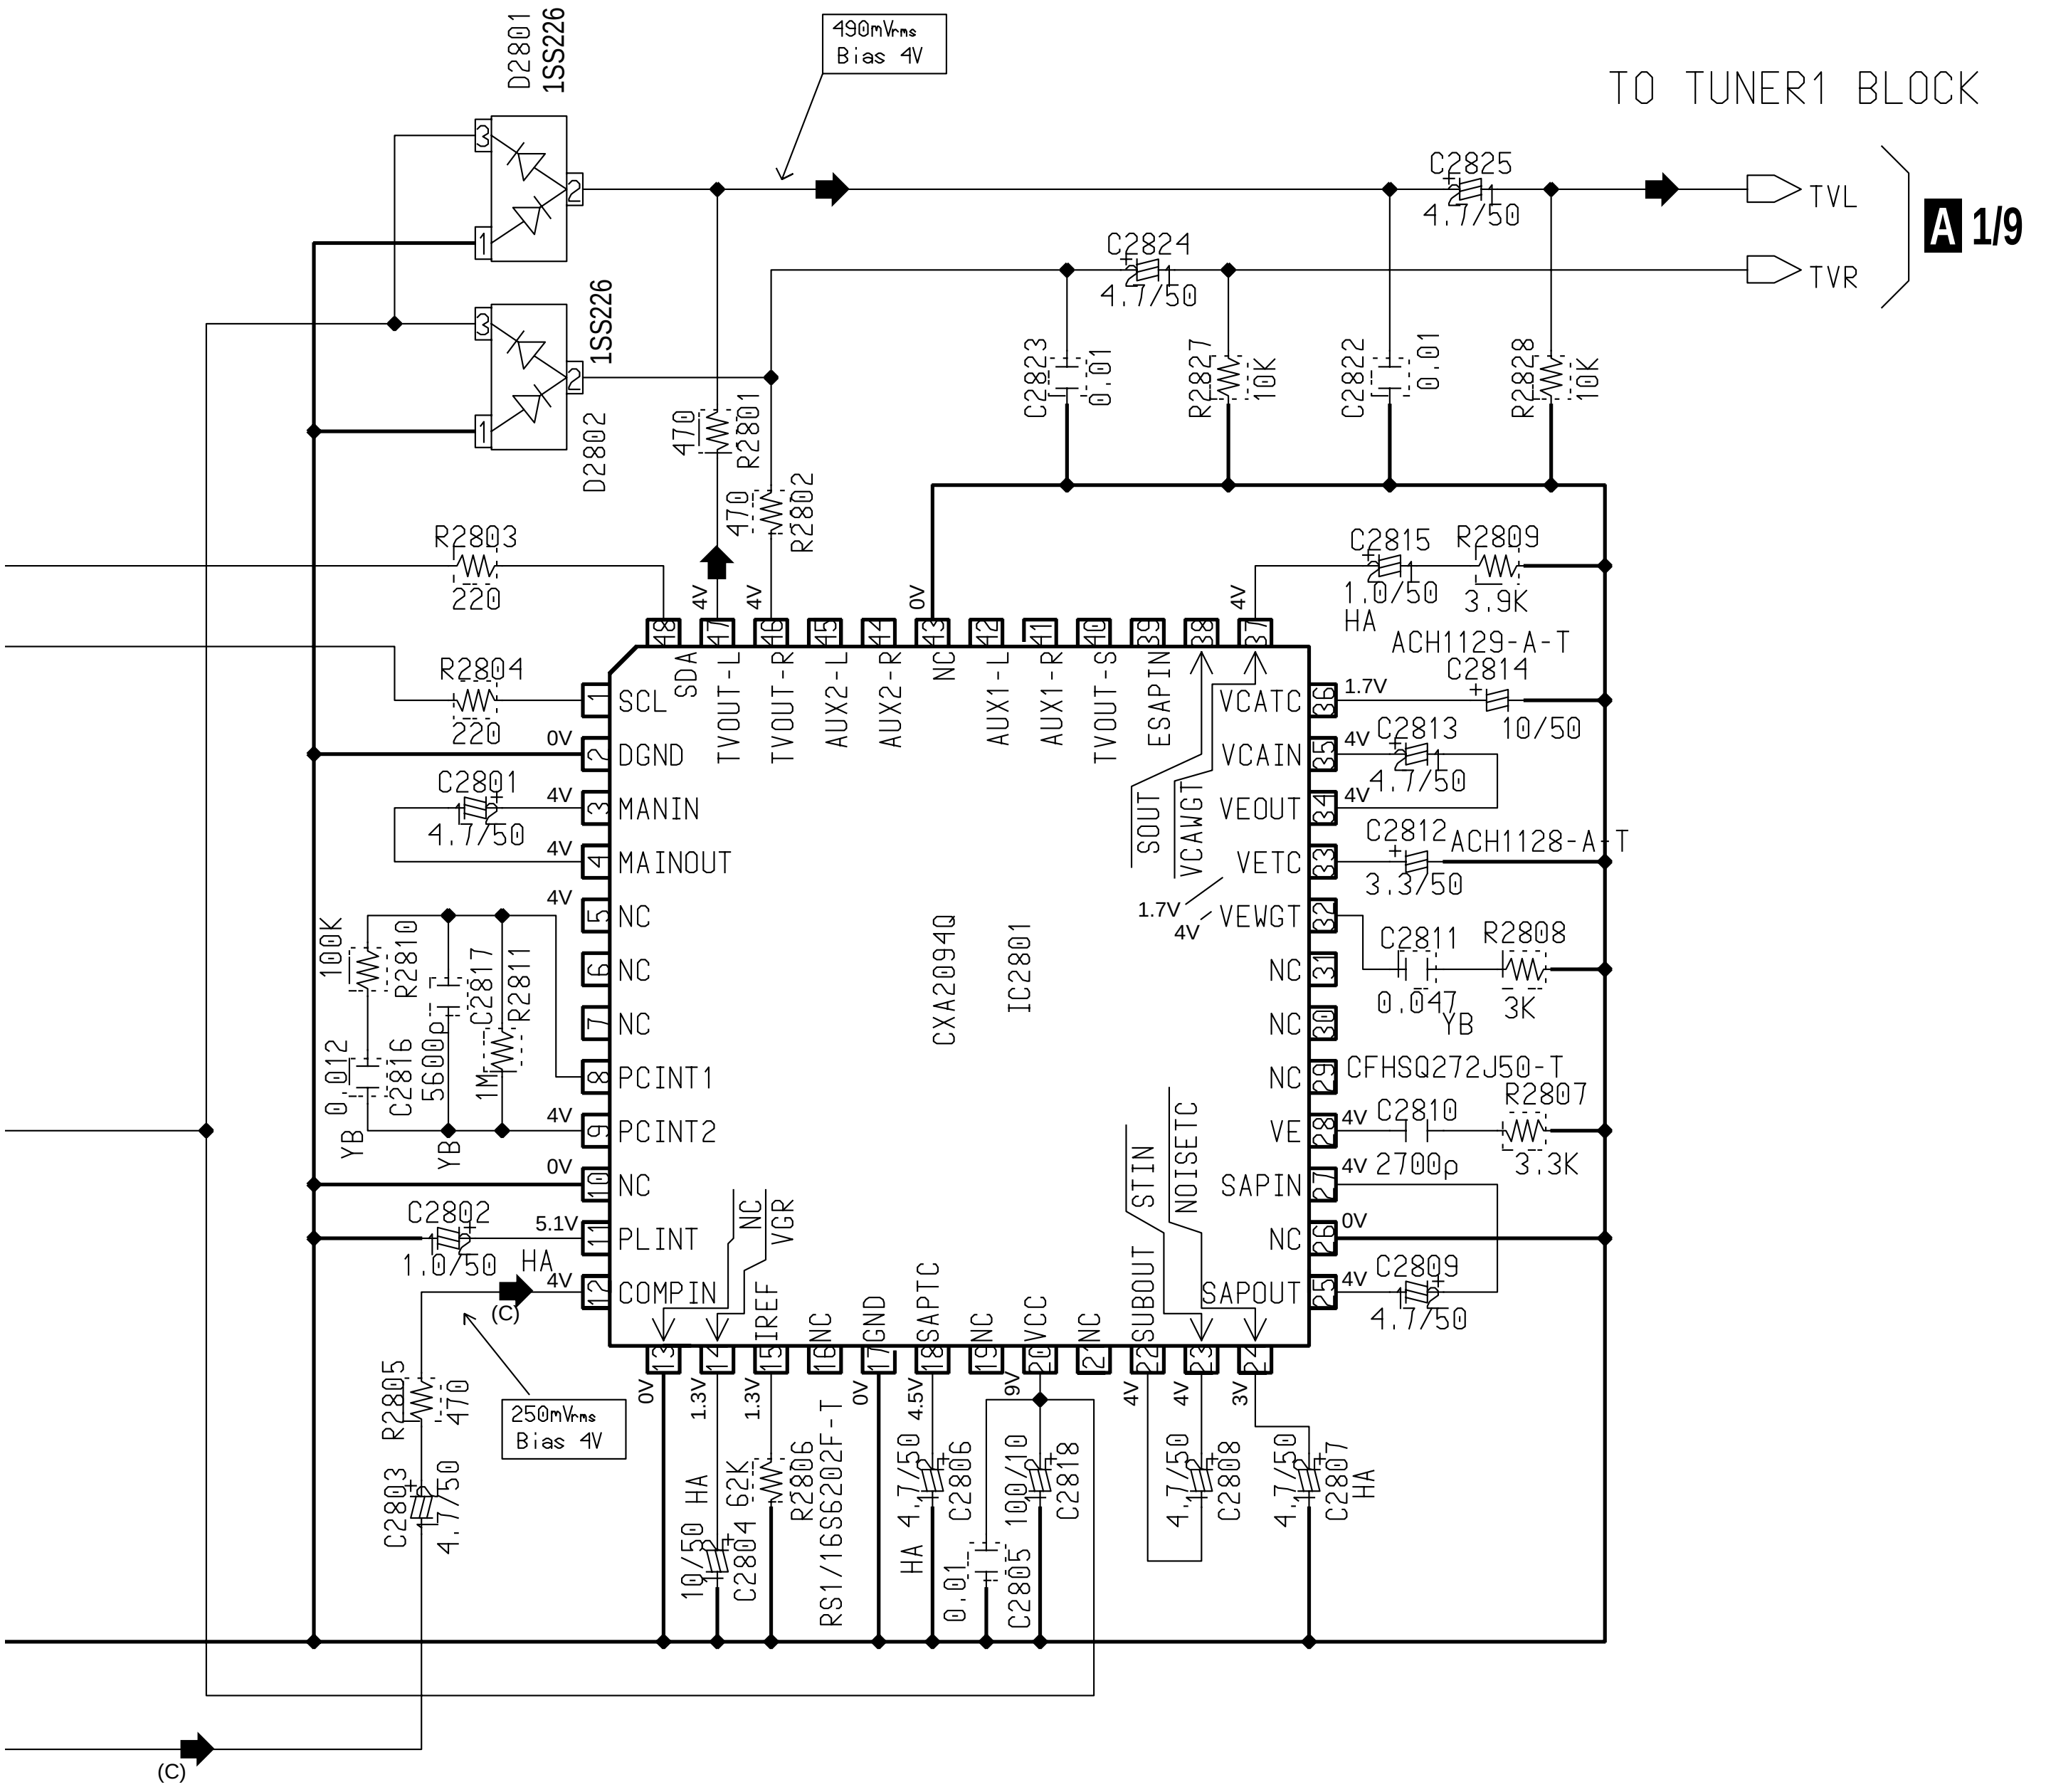
TO TUNER1 BLOCK
TVL
TVR
A 1/9
490mVrms
Bias 4V
D2801
1SS226
D2802
1SS226
C2825
4.7/50
C2824
4.7/50
C2823
0.01
R2827
10K
C2822
0.01
R2828
10K
R2801
470
R2802
470
R2803
220
R2804
220
C2815
1.0/50
HA
R2809
3.9K
ACH1129-A-T
C2814
10/50
C2813
4.7/50
C2812
3.3/50
ACH1128-A-T
C2811
0.047
YB
R2808
3K
CFHSQ272J50-T
C2810
2700p
R2807
3.3K
C2809
4.7/50
C2801
4.7/50
R2810
100K
C2817
5600p
R2811
1M
C2816
0.012
YB
C2802
1.0/50
HA
(C)
250mVrms
Bias 4V
R2805
470
C2803
4.7/50
C2804
10/50
HA
R2806
62K
RS1/16S6202F-T
C2806
4.7/50
HA
C2805
0.01
C2818
100/10
C2808
4.7/50
C2807
4.7/50
HA
CXA2094Q
IC2801
1 SCL
2 DGND
3 MANIN
4 MAINOUT
5 NC
6 NC
7 NC
8 PCINT1
9 PCINT2
10 NC
11 PLINT
12 COMPIN
13 NC
14 VGR
15 IREF
16 NC
17 GND
18 SAPTC
19 NC
20 VCC
21 NC
22 SUBOUT
23 STIN
24 NOISETC
25 SAPOUT
26 NC
27 SAPIN
28 VE
29 NC
30 NC
31 NC
32 VEWGT
33 VETC
34 VEOUT
35 VCAIN
36 VCATC
37 VCAWGT
38 SOUT
39 ESAPIN
40 TVOUT-S
41 AUX1-R
42 AUX1-L
43 NC
44 AUX2-R
45 AUX2-L
46 TVOUT-R
47 TVOUT-L
48 SDA
0V
4V
5.1V
1.3V
4.5V
9V
3V
1.7V
(C)

④ **J2703-pin 2, 7**
V: 1V/div. H: 200µsec/div.

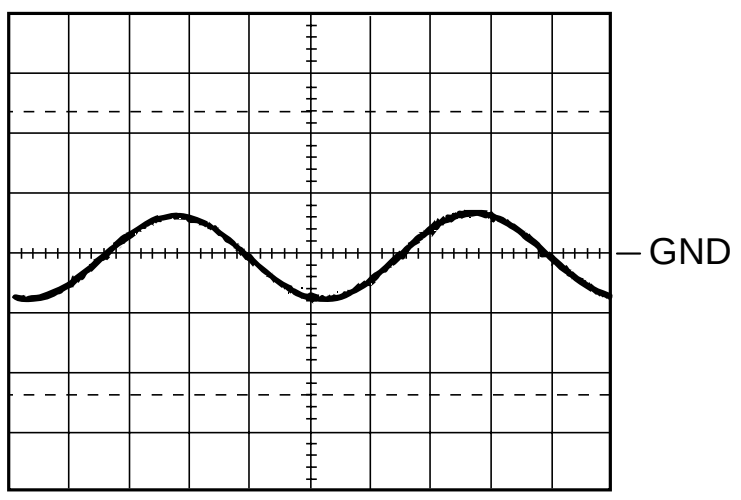

⑤ **J2703-pin 4**
V: 1V/div. H: 10µsec/div.

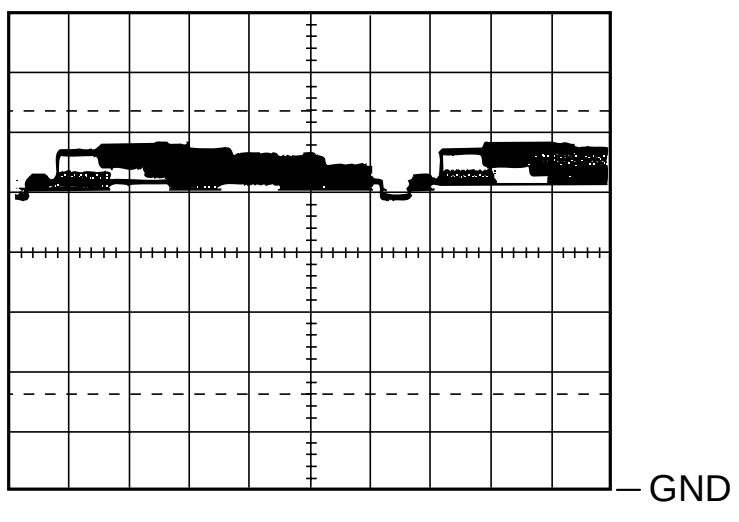

3.5 SIGNAL ASSY (3/9)

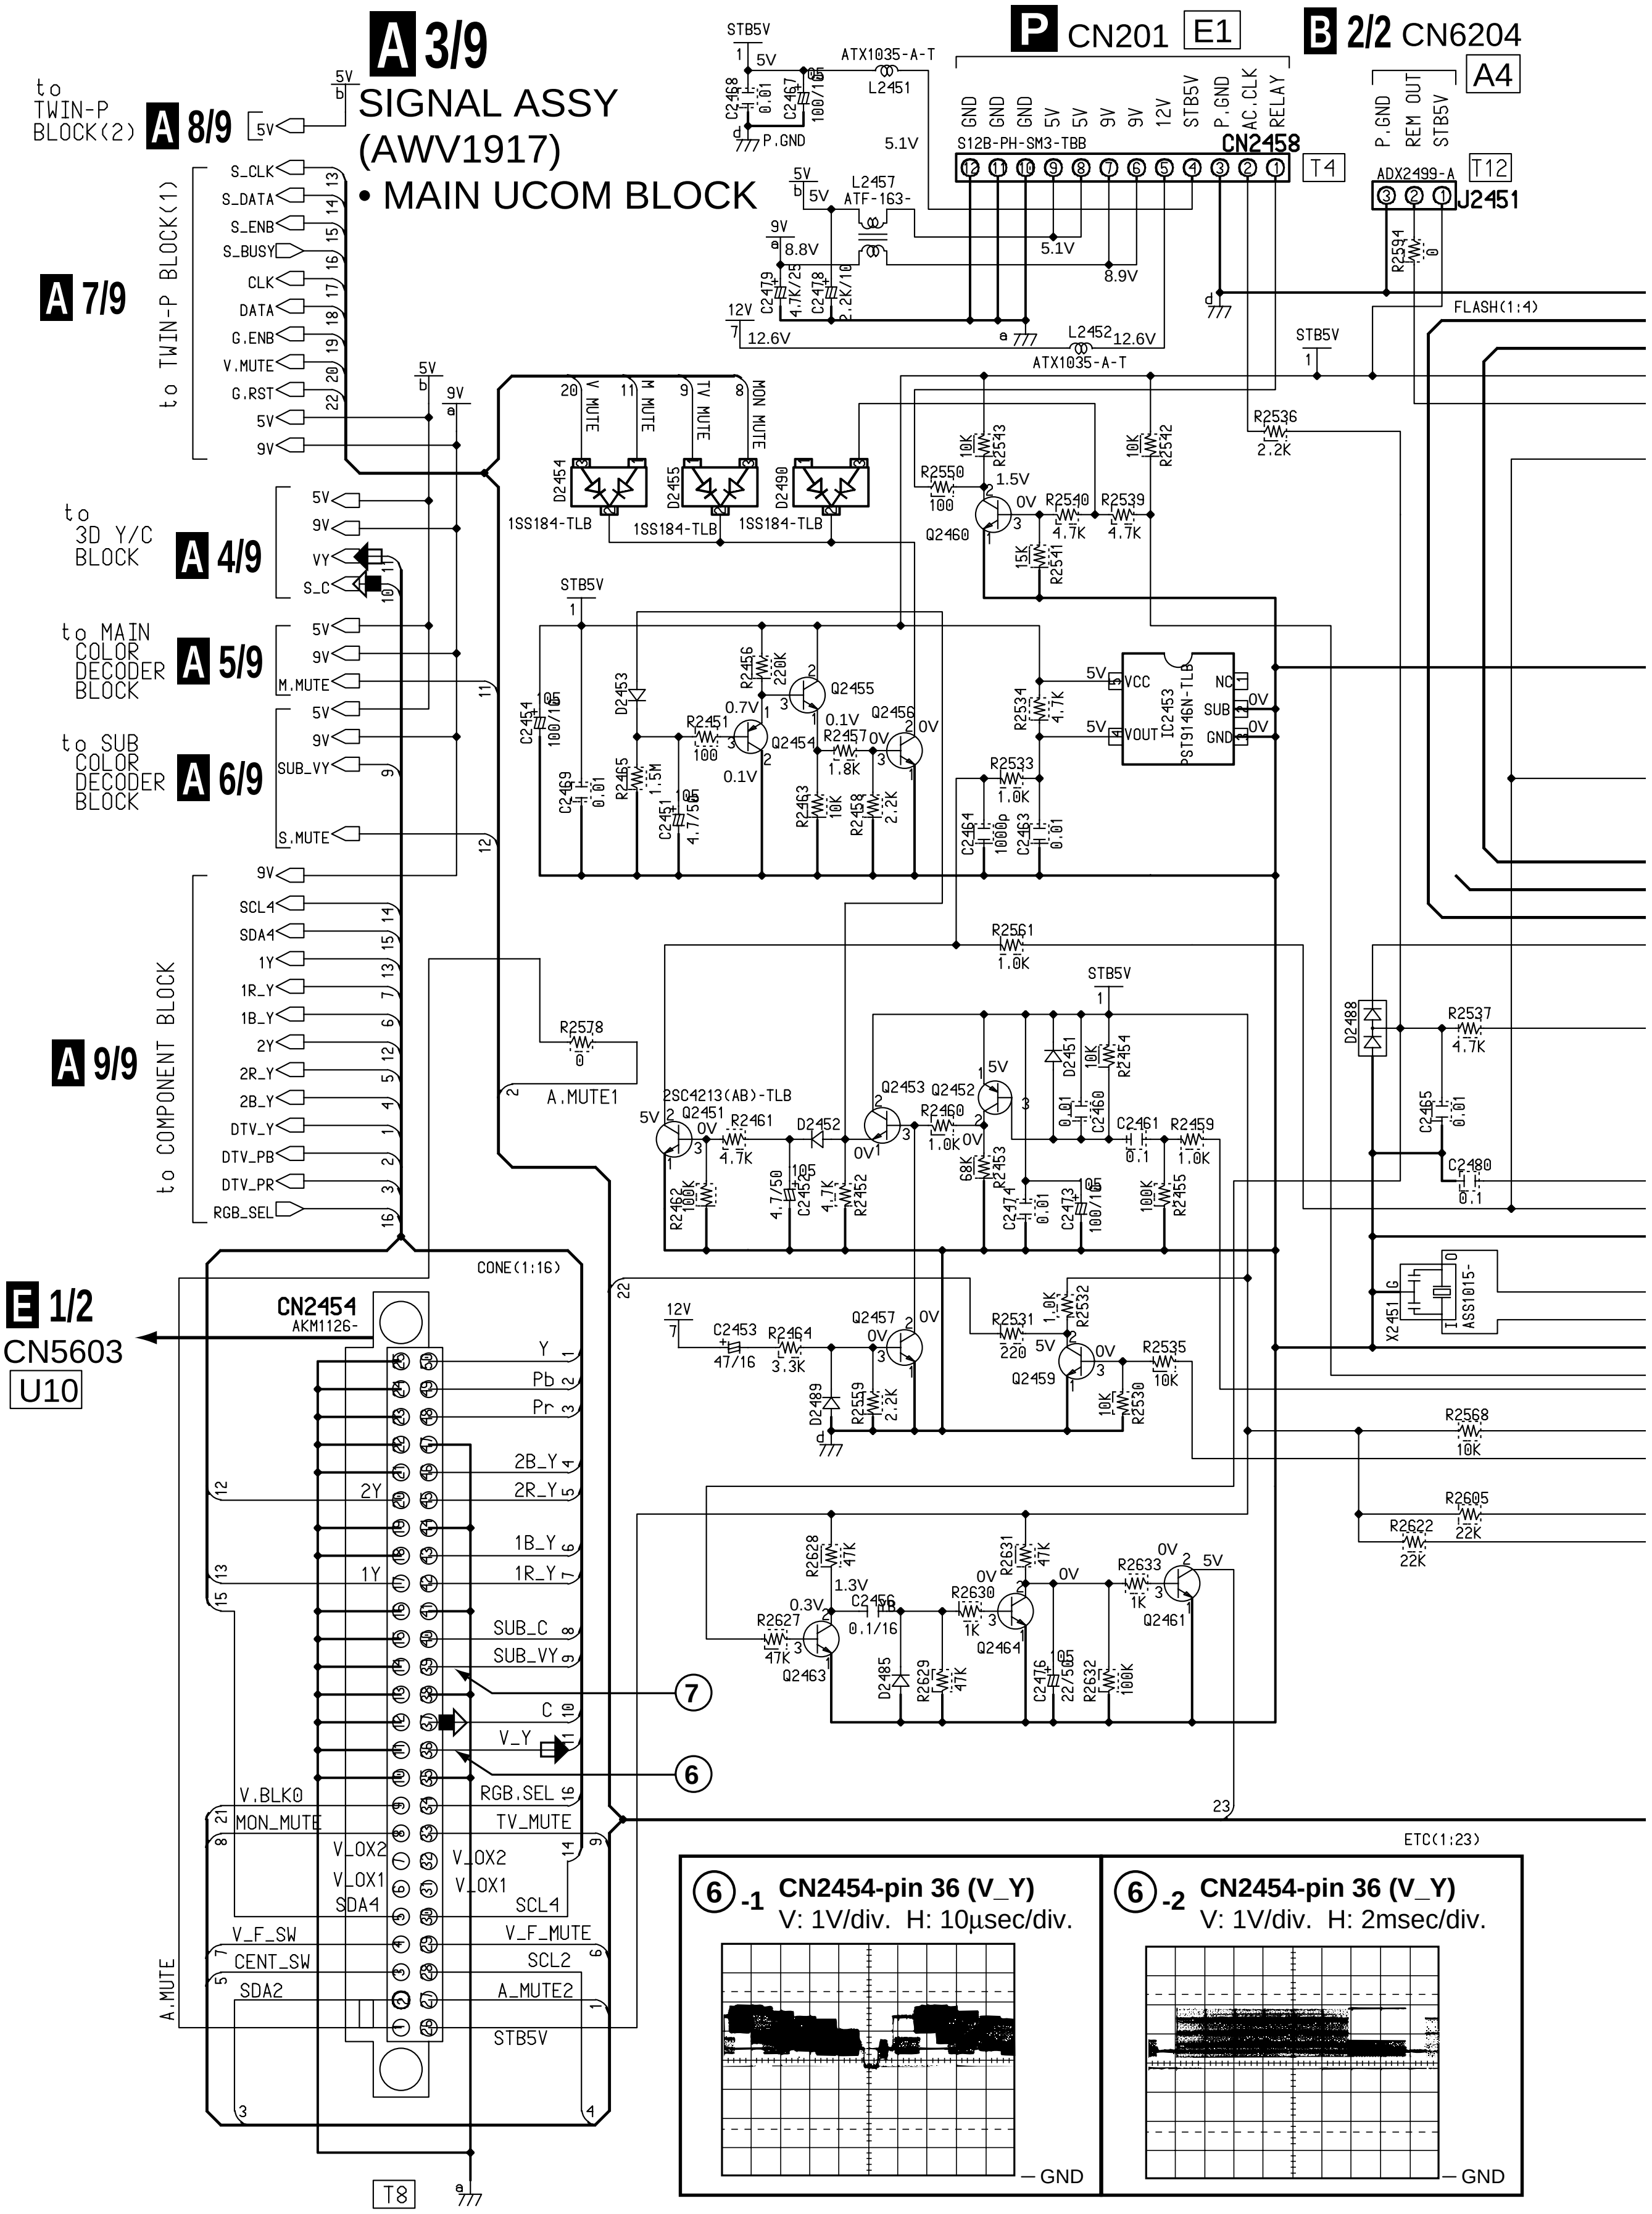
A 3/9
SIGNAL ASSY
(AWV1917)
• MAIN UCOM BLOCK
P CN201 E1
B 2/2 CN6204 A4
CN2458
S12B-PH-SM3-TBB
T4
GND GND GND 5V 5V 9V 9V 12V STB5V P.GND AC.CLK RELAY
P.GND REM OUT STB5V
ADX2499-A
T12
J2451
ATX1035-A-T
L2451
L2457
ATF-163-
L2452
to TWIN-P BLOCK(2) A 8/9
A 7/9
to TWIN-P BLOCK(1)
S_CLK
S_DATA
S_ENB
S_BUSY
CLK
DATA
G.ENB
V.MUTE
G.RST
to 3D Y/C BLOCK A 4/9
to MAIN COLOR DECODER BLOCK A 5/9
M.MUTE
to SUB COLOR DECODER BLOCK A 6/9
SUB_VY
S.MUTE
A 9/9
to COMPONENT BLOCK
SCL4
SDA4
1Y
1R_Y
1B_Y
2Y
2R_Y
2B_Y
DTV_Y
DTV_PB
DTV_PR
RGB_SEL
V MUTE
M MUTE
TV MUTE
MON MUTE
D2454
D2455
D2490
1SS184-TLB
FLASH(1:4)
Q2460
Q2455
Q2454
Q2456
IC2453
PST9146N-TLB
VCC
VOUT
NC
SUB
GND
A.MUTE1
2SC4213(AB)-TLB
Q2451
Q2452
Q2453
Q2457
Q2459
Q2463
Q2464
Q2461
D2488
X2451
ASS1015-
CONE(1:16)
CN2454
AKM1126-
E 1/2
CN5603
U10
Y
Pb
Pr
2B_Y
2R_Y
1B_Y
1R_Y
SUB_C
SUB_VY
C
V_Y
RGB.SEL
TV_MUTE
V.BLK0
MON_MUTE
V_OX2
V_OX1
SDA4
SCL4
V_F_SW
V_F_MUTE
CENT_SW
SCL2
SDA2
A_MUTE2
STB5V
A.MUTE
ETC(1:23)
T8
⑦
⑥
⑥-1 CN2454-pin 36 (V_Y)
V: 1V/div. H: 10µsec/div.
— GND
⑥-2 CN2454-pin 36 (V_Y)
V: 1V/div. H: 2msec/div.
— GND

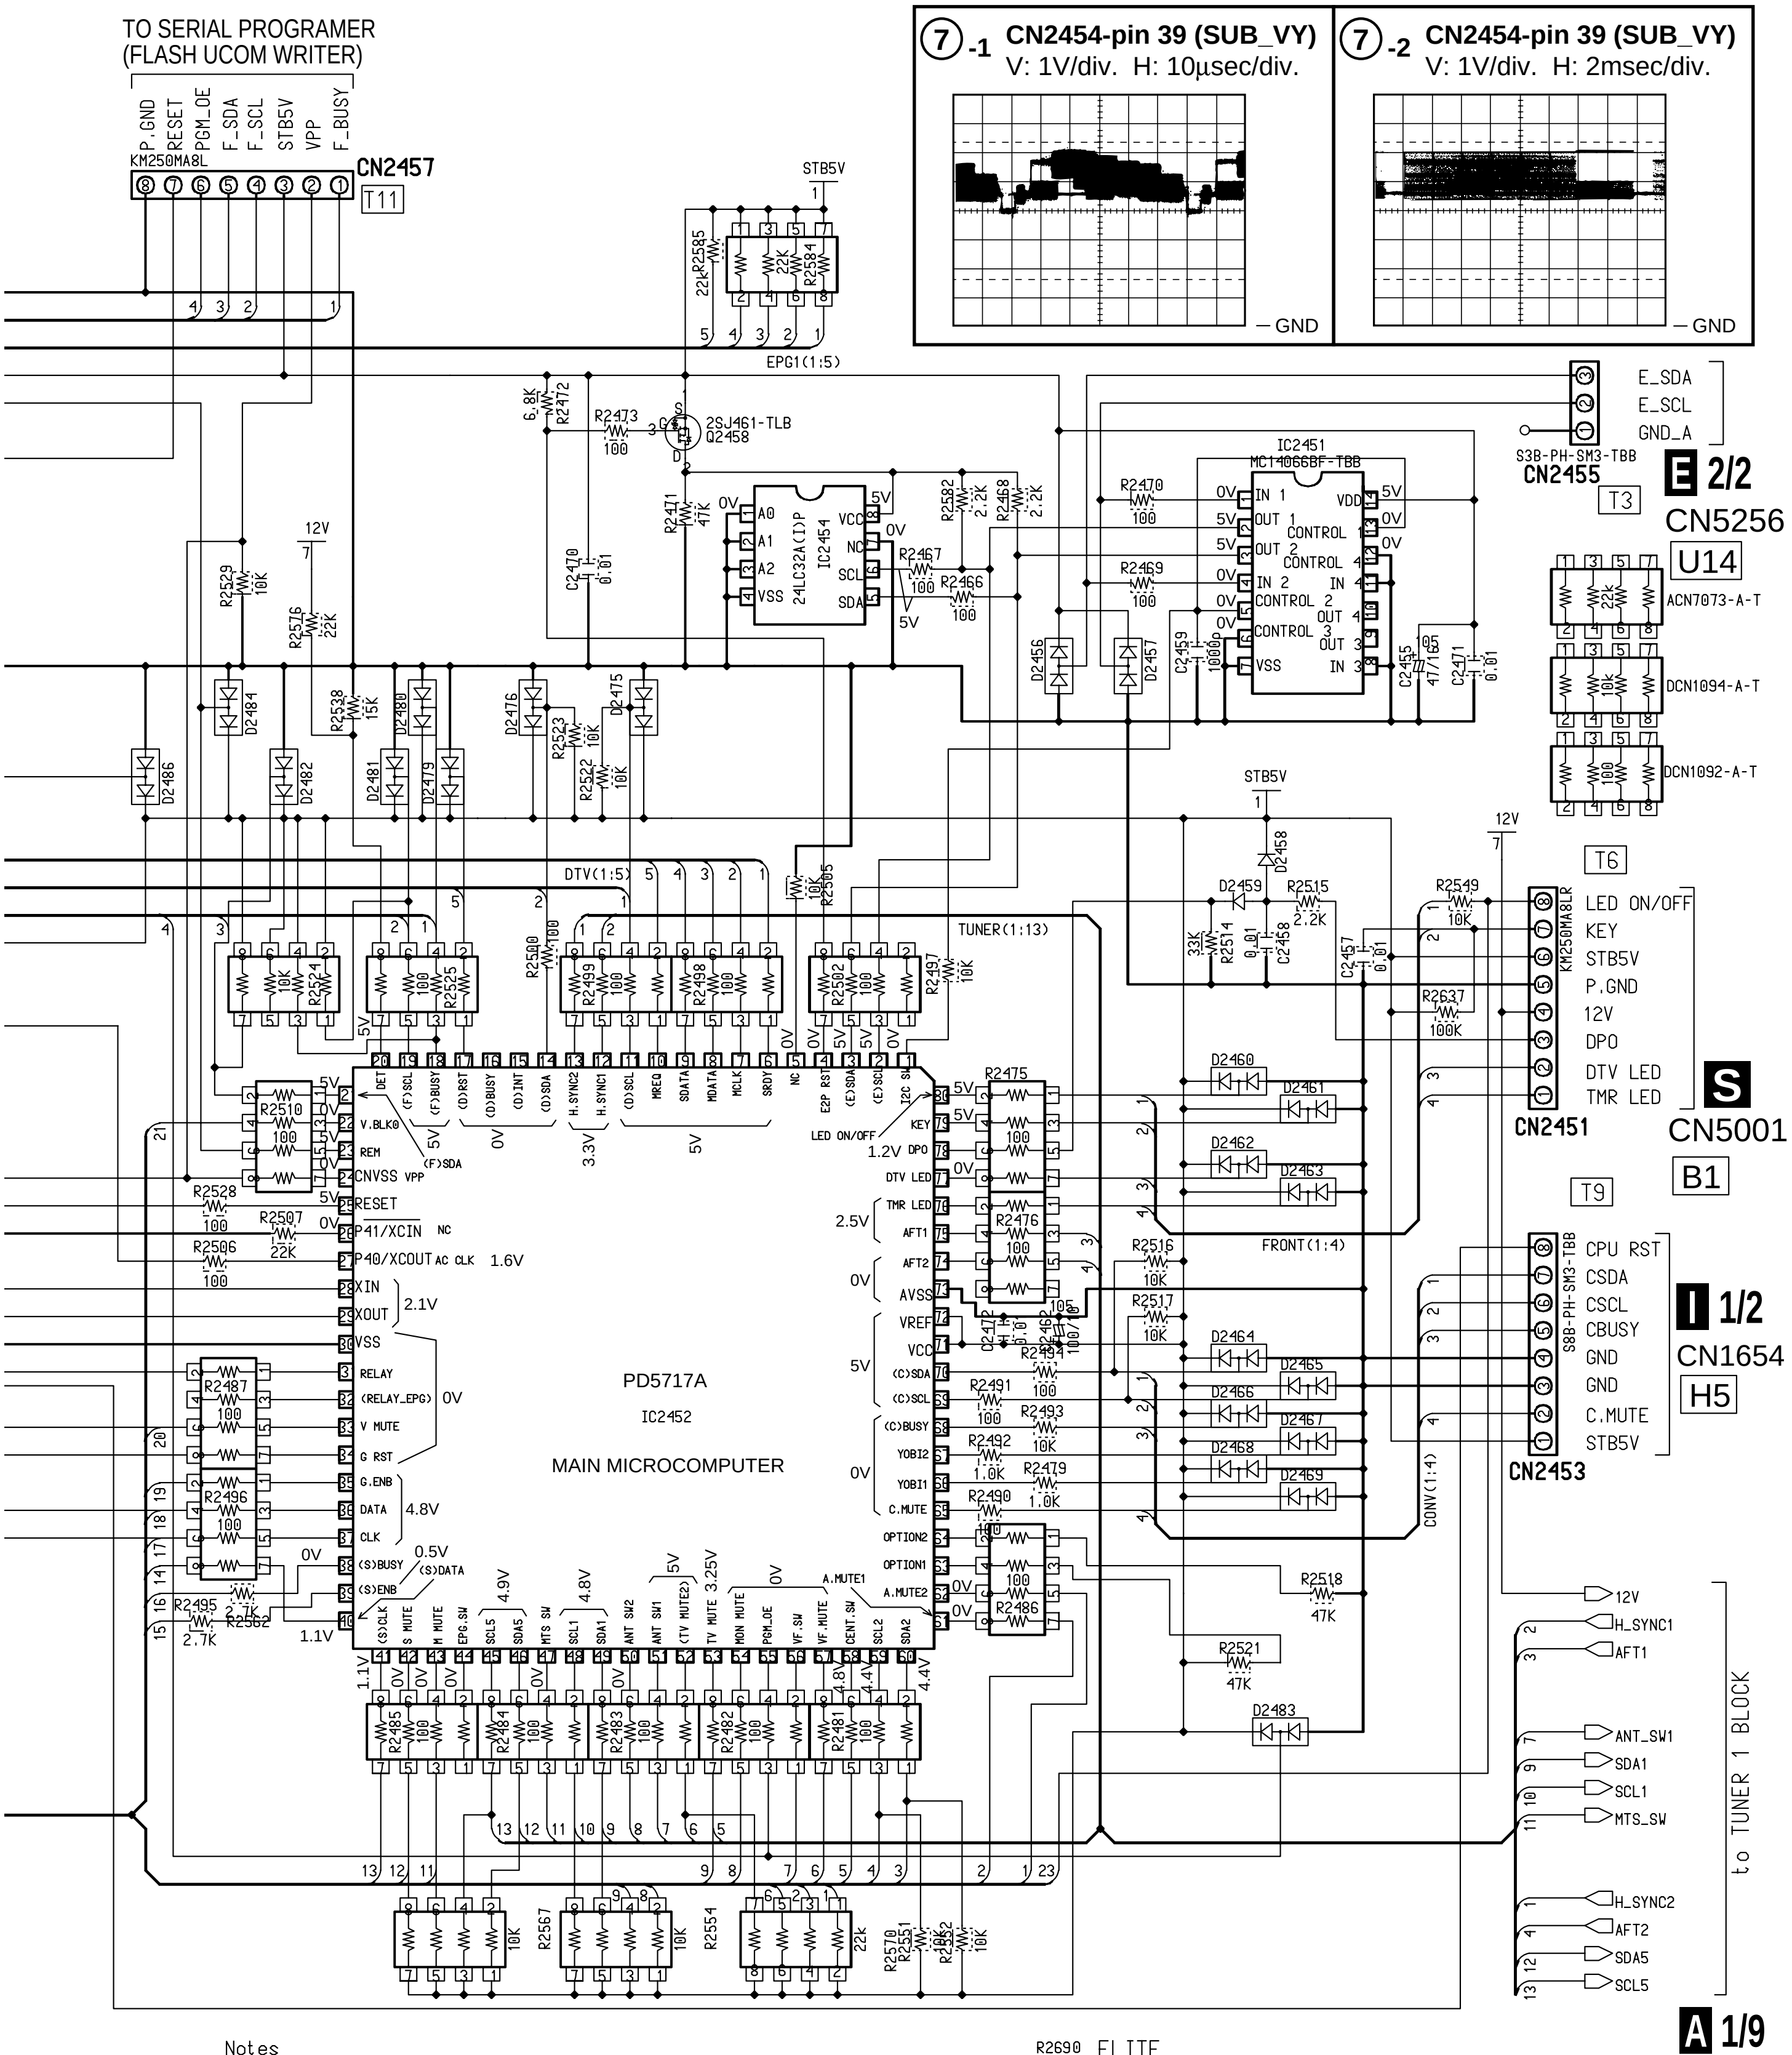

A
B
C
D
TO SERIAL PROGRAMER (FLASH UCOM WRITER)
P.GND
RESET
PGM_OE
F_SDA
F_SCL
STB5V
VPP
F_BUSY
KM250MA8L
CN2457
T11
⑦-1 CN2454-pin 39 (SUB_VY)
V: 1V/div. H: 10µsec/div.
GND
⑦-2 CN2454-pin 39 (SUB_VY)
V: 1V/div. H: 2msec/div.
GND
STB5V
R2585 22k
R2584 22k
EPG1(1:5)
6.8K R2472
R2473 100
2SJ461-TLB Q2458
R2471 47K
C2470 0.01
IC2454 24LC32A(I)P
A0
A1
A2
VSS
VCC
NC
SCL
SDA
R2582 2.2K
R2468 2.2K
R2467 100
R2466 100
IC2451 MC14066BF-TBB
IN 1
OUT 1
OUT 2
IN 2
CONTROL 2
CONTROL 3
VSS
VDD
CONTROL 1
CONTROL 4
IN 4
OUT 4
OUT 3
IN 3
R2470 100
R2469 100
D2456
D2457
C2459 1000p
C2455 47/16
C2471 0.01
E_SDA
E_SCL
GND_A
S3B-PH-SM3-TBB
CN2455
E 2/2
CN5256
T3
U14
ACN7073-A-T
DCN1094-A-T
DCN1092-A-T
12V
R2529 10K
R2576 22K
R2538 15K
D2486
D2484
D2482
D2480
D2481
D2479
D2476
D2475
R2523 10K
R2522 10K
STB5V
D2458
D2459
R2515 2.2K
33K R2514
C2458 0.01
C2457 0.01
R2549 10K
R2637 100K
T6
LED ON/OFF
KEY
STB5V
P.GND
12V
DPO
DTV LED
TMR LED
KM250MA8LR
CN2451
S
CN5001
B1
DTV(1:5)
TUNER(1:13)
R2505 10K
R2524 10K
R2525 100
R2500 100
R2499 100
R2498 100
R2502 100
R2497 10K
R2510 100
R2528 100
R2507 22K
R2506 100
R2487 100
R2496 100
R2495 2.7K
R2562 2.7K
R2475 100
R2476 100
D2460
D2461
D2462
D2463
FRONT(1:4)
R2516 10K
R2517 10K
C2472 105
C2462 100/6
R2494 100
R2491 100
R2493 10K
R2492 1.0K
R2479 1.0K
R2490 100
D2464
D2465
D2466
D2467
D2468
D2469
CONV(1:4)
T9
CPU RST
CSDA
CSCL
CBUSY
GND
GND
C.MUTE
STB5V
S8B-PH-SM3-TBB
CN2453
I 1/2
CN1654
H5
PD5717A
IC2452
MAIN MICROCOMPUTER
DET
(F)SCL
(F)BUSY
(D)RST
(D)BUSY
(D)INT
(D)SDA
H.SYNC2
H.SYNC1
(D)SCL
MREQ
SDATA
MDATA
MCLK
SRDY
NC
E2P RST
(E)SDA
(E)SCL
I2C SW
V.BLKO
REM
CNVSS VPP
(F)SDA
RESET
P41/XCIN NC
P40/XCOUT AC CLK 1.6V
XIN
XOUT 2.1V
VSS
RELAY
(RELAY_EPG) 0V
V MUTE
G RST
G.ENB
DATA 4.8V
CLK
(S)BUSY
(S)DATA
(S)ENB
(S)CLK
S MUTE
M MUTE
EPG.SW
SCL5
SDA5
MTS SW
SCL1
SDA1
ANT SW1
ANT SW2
(TV MUTE2)
TV MUTE
MON MUTE
PGM_OE
VF.SW
VF.MUTE
CENT.SW
SCL2
SDA2
LED ON/OFF
KEY
DPO 1.2V
DTV LED
TMR LED
AFT1 2.5V
AFT2
AVSS 0V
VREF
VCC 5V
(C)SDA
(C)SCL
(C)BUSY
YOBI2
YOBI1 0V
C.MUTE
OPTION2
OPTION1
A.MUTE1
A.MUTE2
R2486 100
R2518 47K
R2521 47K
D2483
R2485 100
R2484 100
R2483 100
R2482 100
R2481 100
R2567 10K
R2554 10K
R2570 22k
R2551 10K
R2552 10K
12V
H_SYNC1
AFT1
ANT_SW1
SDA1
SCL1
MTS_SW
H_SYNC2
AFT2
SDA5
SCL5
to TUNER 1 BLOCK
A 1/9

Notes
1.RESISTORS
Indicated in Ω
tolerance unless otherwise noted k kΩ
2.CAPASITORS
Indicated in capacity(uF)/Voltage unless
otherwise noted p pF
Indication without voltage is 50V
except electrolytic capacitor.

2SC2712(YGR)-TLB
2SA1162(YGR)-TLB
1SS352-TRB
1SS226-TRB

R2690 ELITE
minor

3.6 SIGNAL ASSY (4/9)

A 4/9

SIGNAL ASSY (AWV1917)
• 3D Y/C BLOCK

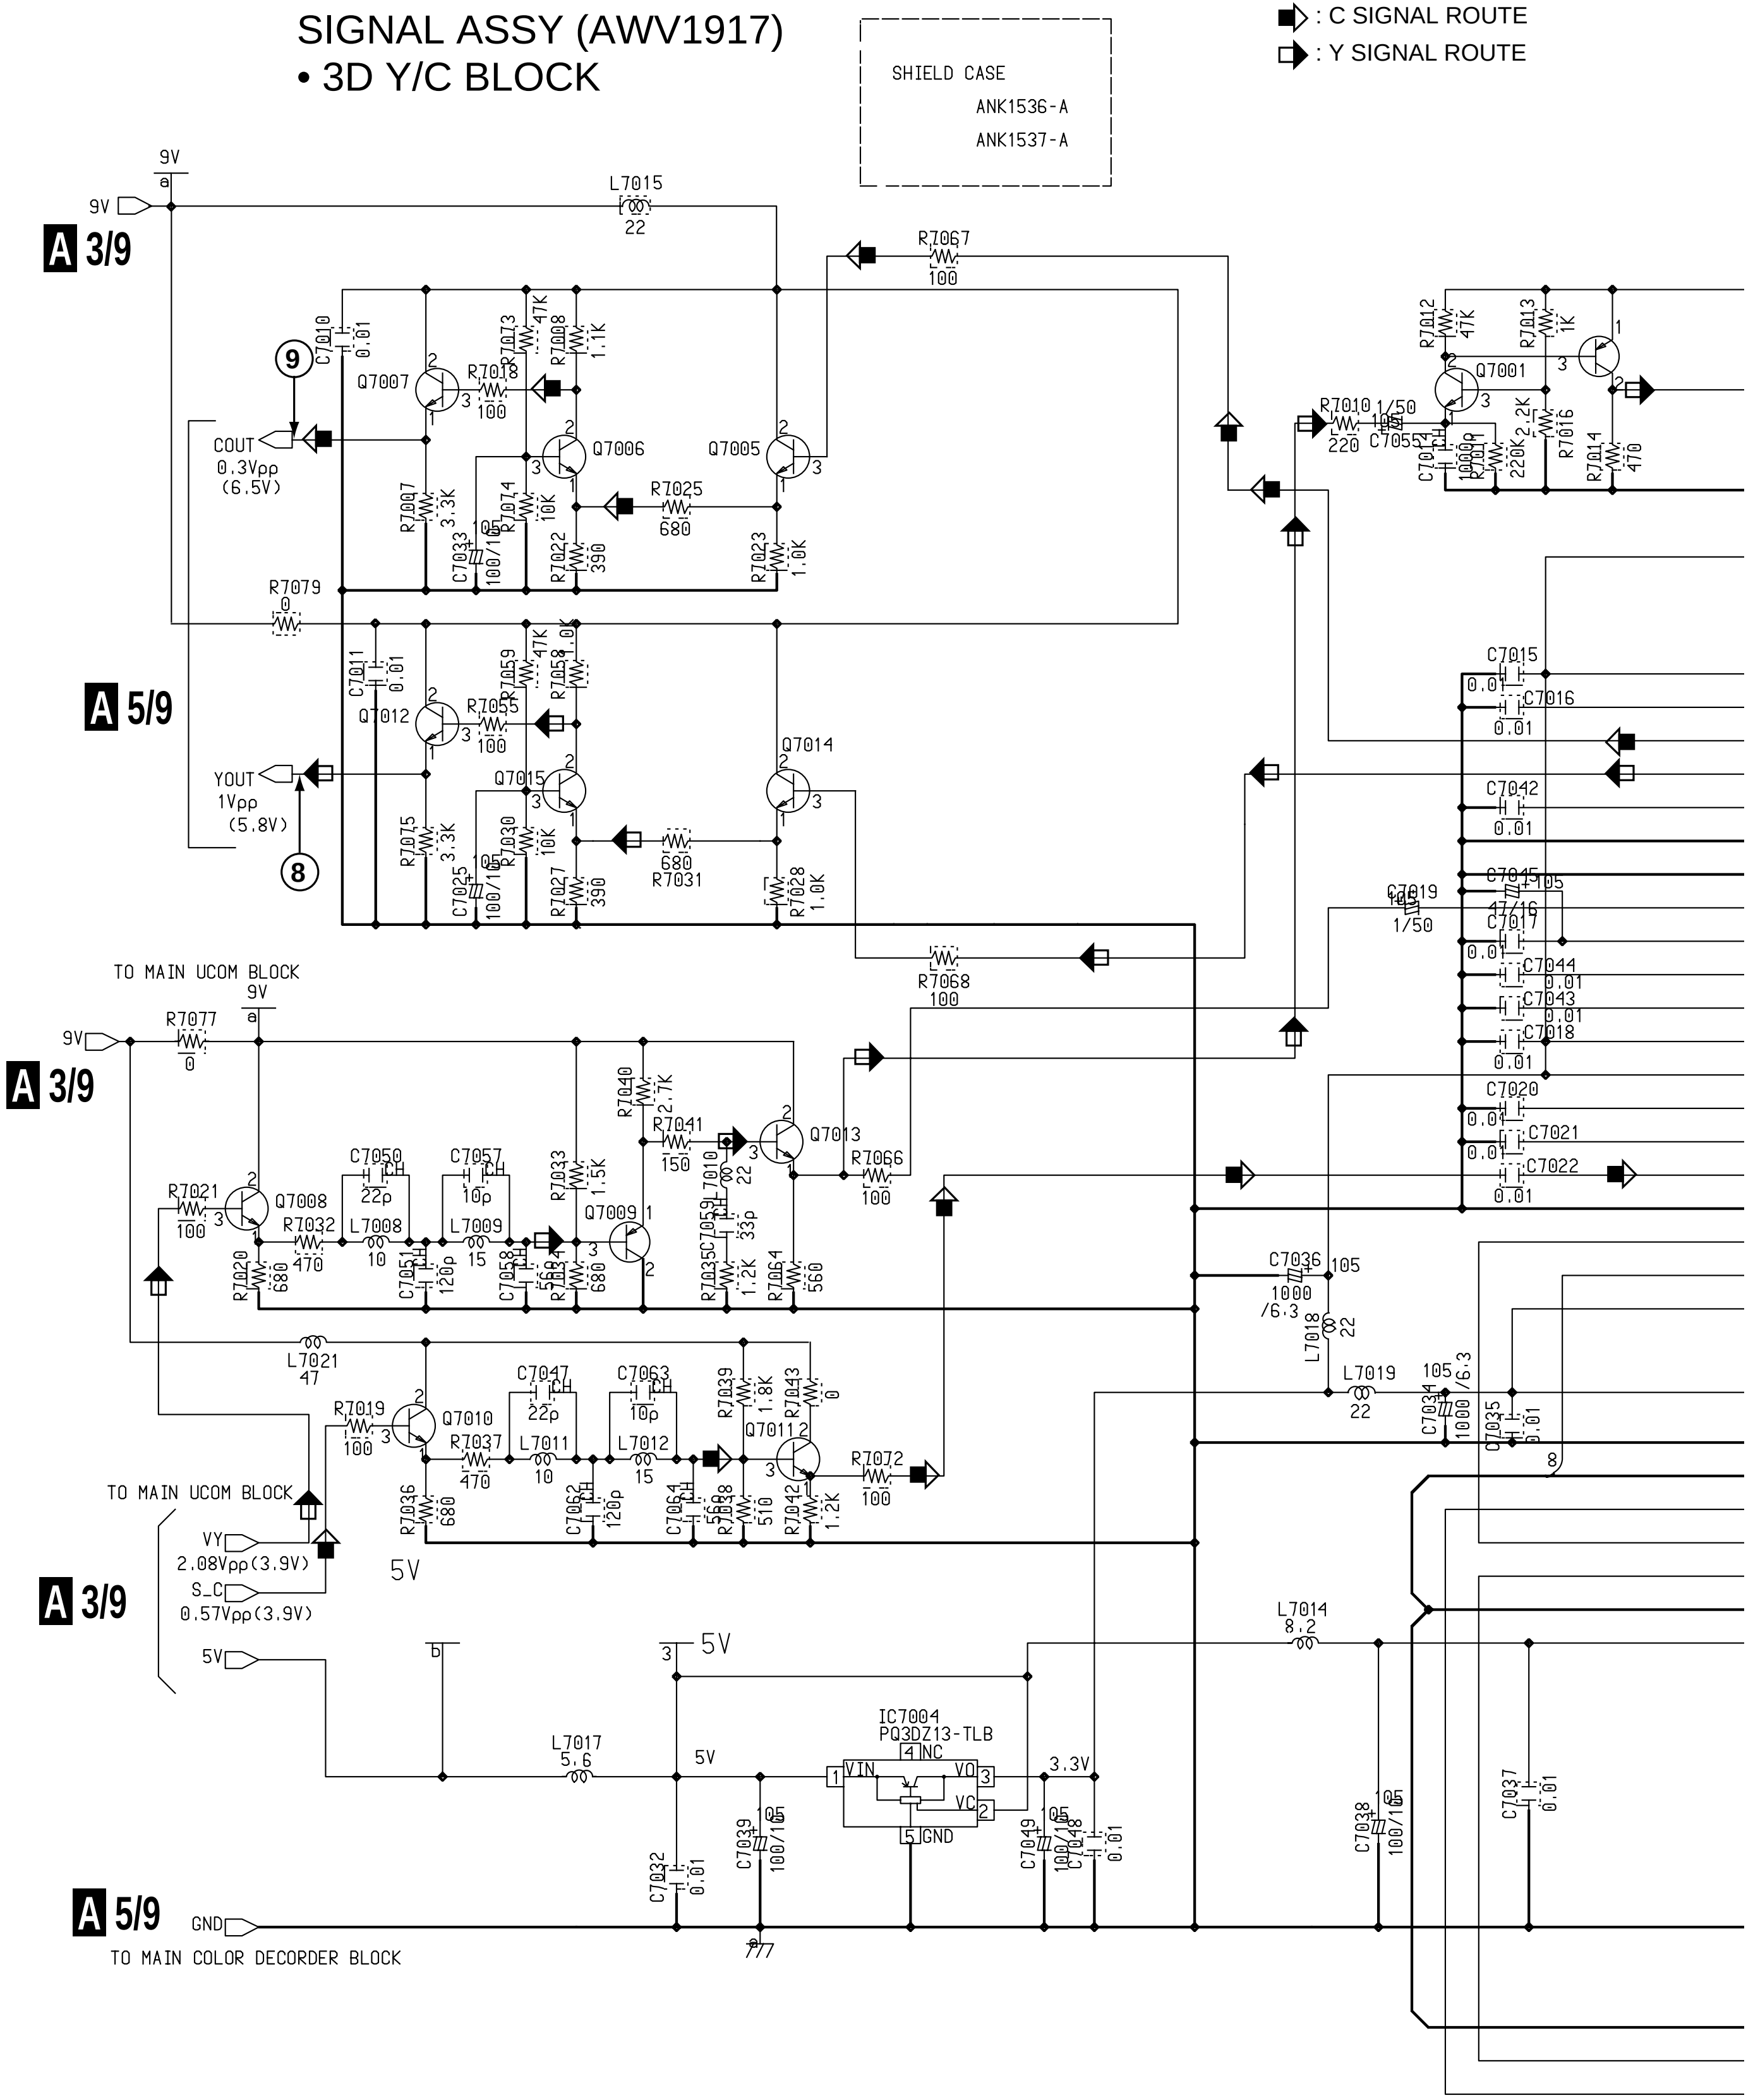
: C SIGNAL ROUTE
: Y SIGNAL ROUTE
SHIELD CASE
ANK1536-A
ANK1537-A
9V
9V
A 3/9
L7015 22
R7067 100
C7010 0.01
9
Q7007
R7018 100
R7073 47K
R7008 1.1K
Q7006
Q7005
COUT 0.3Vpp (6.5V)
R7007 3.3K
C7033 100/16
R7074 10K
R7022 390
R7025 680
R7023 1.0K
R7079 0
C7011 0.01
A 5/9
Q7012
R7055 100
R7059 47K
R7058 1.0K
Q7015
Q7014
YOUT 1Vpp (5.8V)
8
R7075 3.3K
C7025 100/16
R7030 10K
R7027 390
R7031 680
R7028 1.0K
R7068 100
R7012 47K
R7013 1K
Q7001
R7010 220
C7055 1/50
C7012 1000p
R7011 220K
R7016 2.2K
R7014 470
C7015 0.01
C7016 0.01
C7042 0.01
C7045 47/16
C7019 1/50
C7017 0.01
C7044 0.01
C7043 0.01
C7018 0.01
C7020 0.01
C7021 0.01
C7022 0.01
TO MAIN UCOM BLOCK
9V
R7077 0
A 3/9
R7021 100
Q7008
R7032 470
R7020 680
C7050 22p
C7057 10p
L7008 10
L7009 15
C7051 120p
C7058 56p
R7033 1.5K
R7034 680
Q7009
R7040 2.7K
R7041 150
L7010 22
C7059 33p
R7035 1.2K
Q7013
R7066 100
R7064 560
C7036 1000 /6.3
L7018 22
L7021 47
R7019 100
Q7010
R7037 470
R7036 680
C7047 22p
C7063 10p
L7011 10
L7012 15
C7052 120p
C7064 56p
R7038 510
R7039 1.8K
R7043 0
Q7011
R7042 1.2K
R7072 100
L7019 22
C7034 1000 /6.3
C7035 0.01
TO MAIN UCOM BLOCK
VY 2.08Vpp(3.9V)
S_C 0.57Vpp(3.9V)
A 3/9
5V
5V
5V
L7014 8.2
L7017 5.6
5V
IC7004 PQ3DZ13-TLB
VIN VO VC NC GND
3.3V
C7032 0.01
C7039 100/16
C7049 100/16
C7048 0.01
C7038 100/16
C7037 0.01
A 5/9
GND
TO MAIN COLOR DECORDER BLOCK

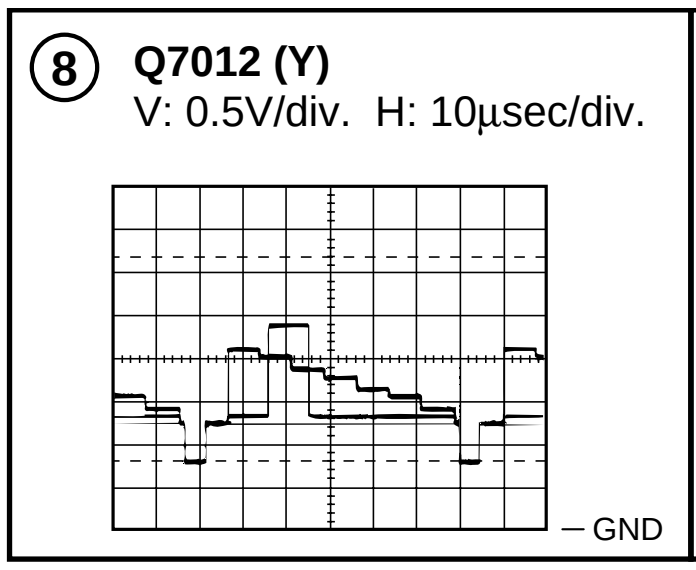

⑧ **Q7012 (Y)**
V: 0.5V/div. H: 10μsec/div.

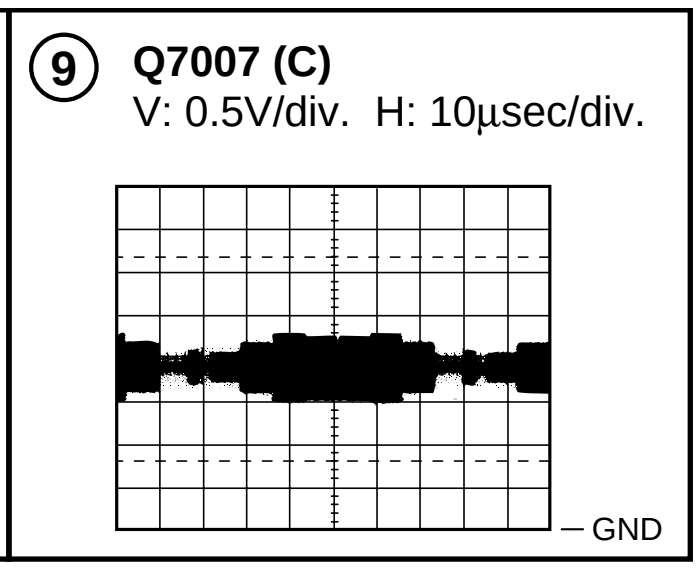

⑨ **Q7007 (C)**
V: 0.5V/div. H: 10μsec/div.

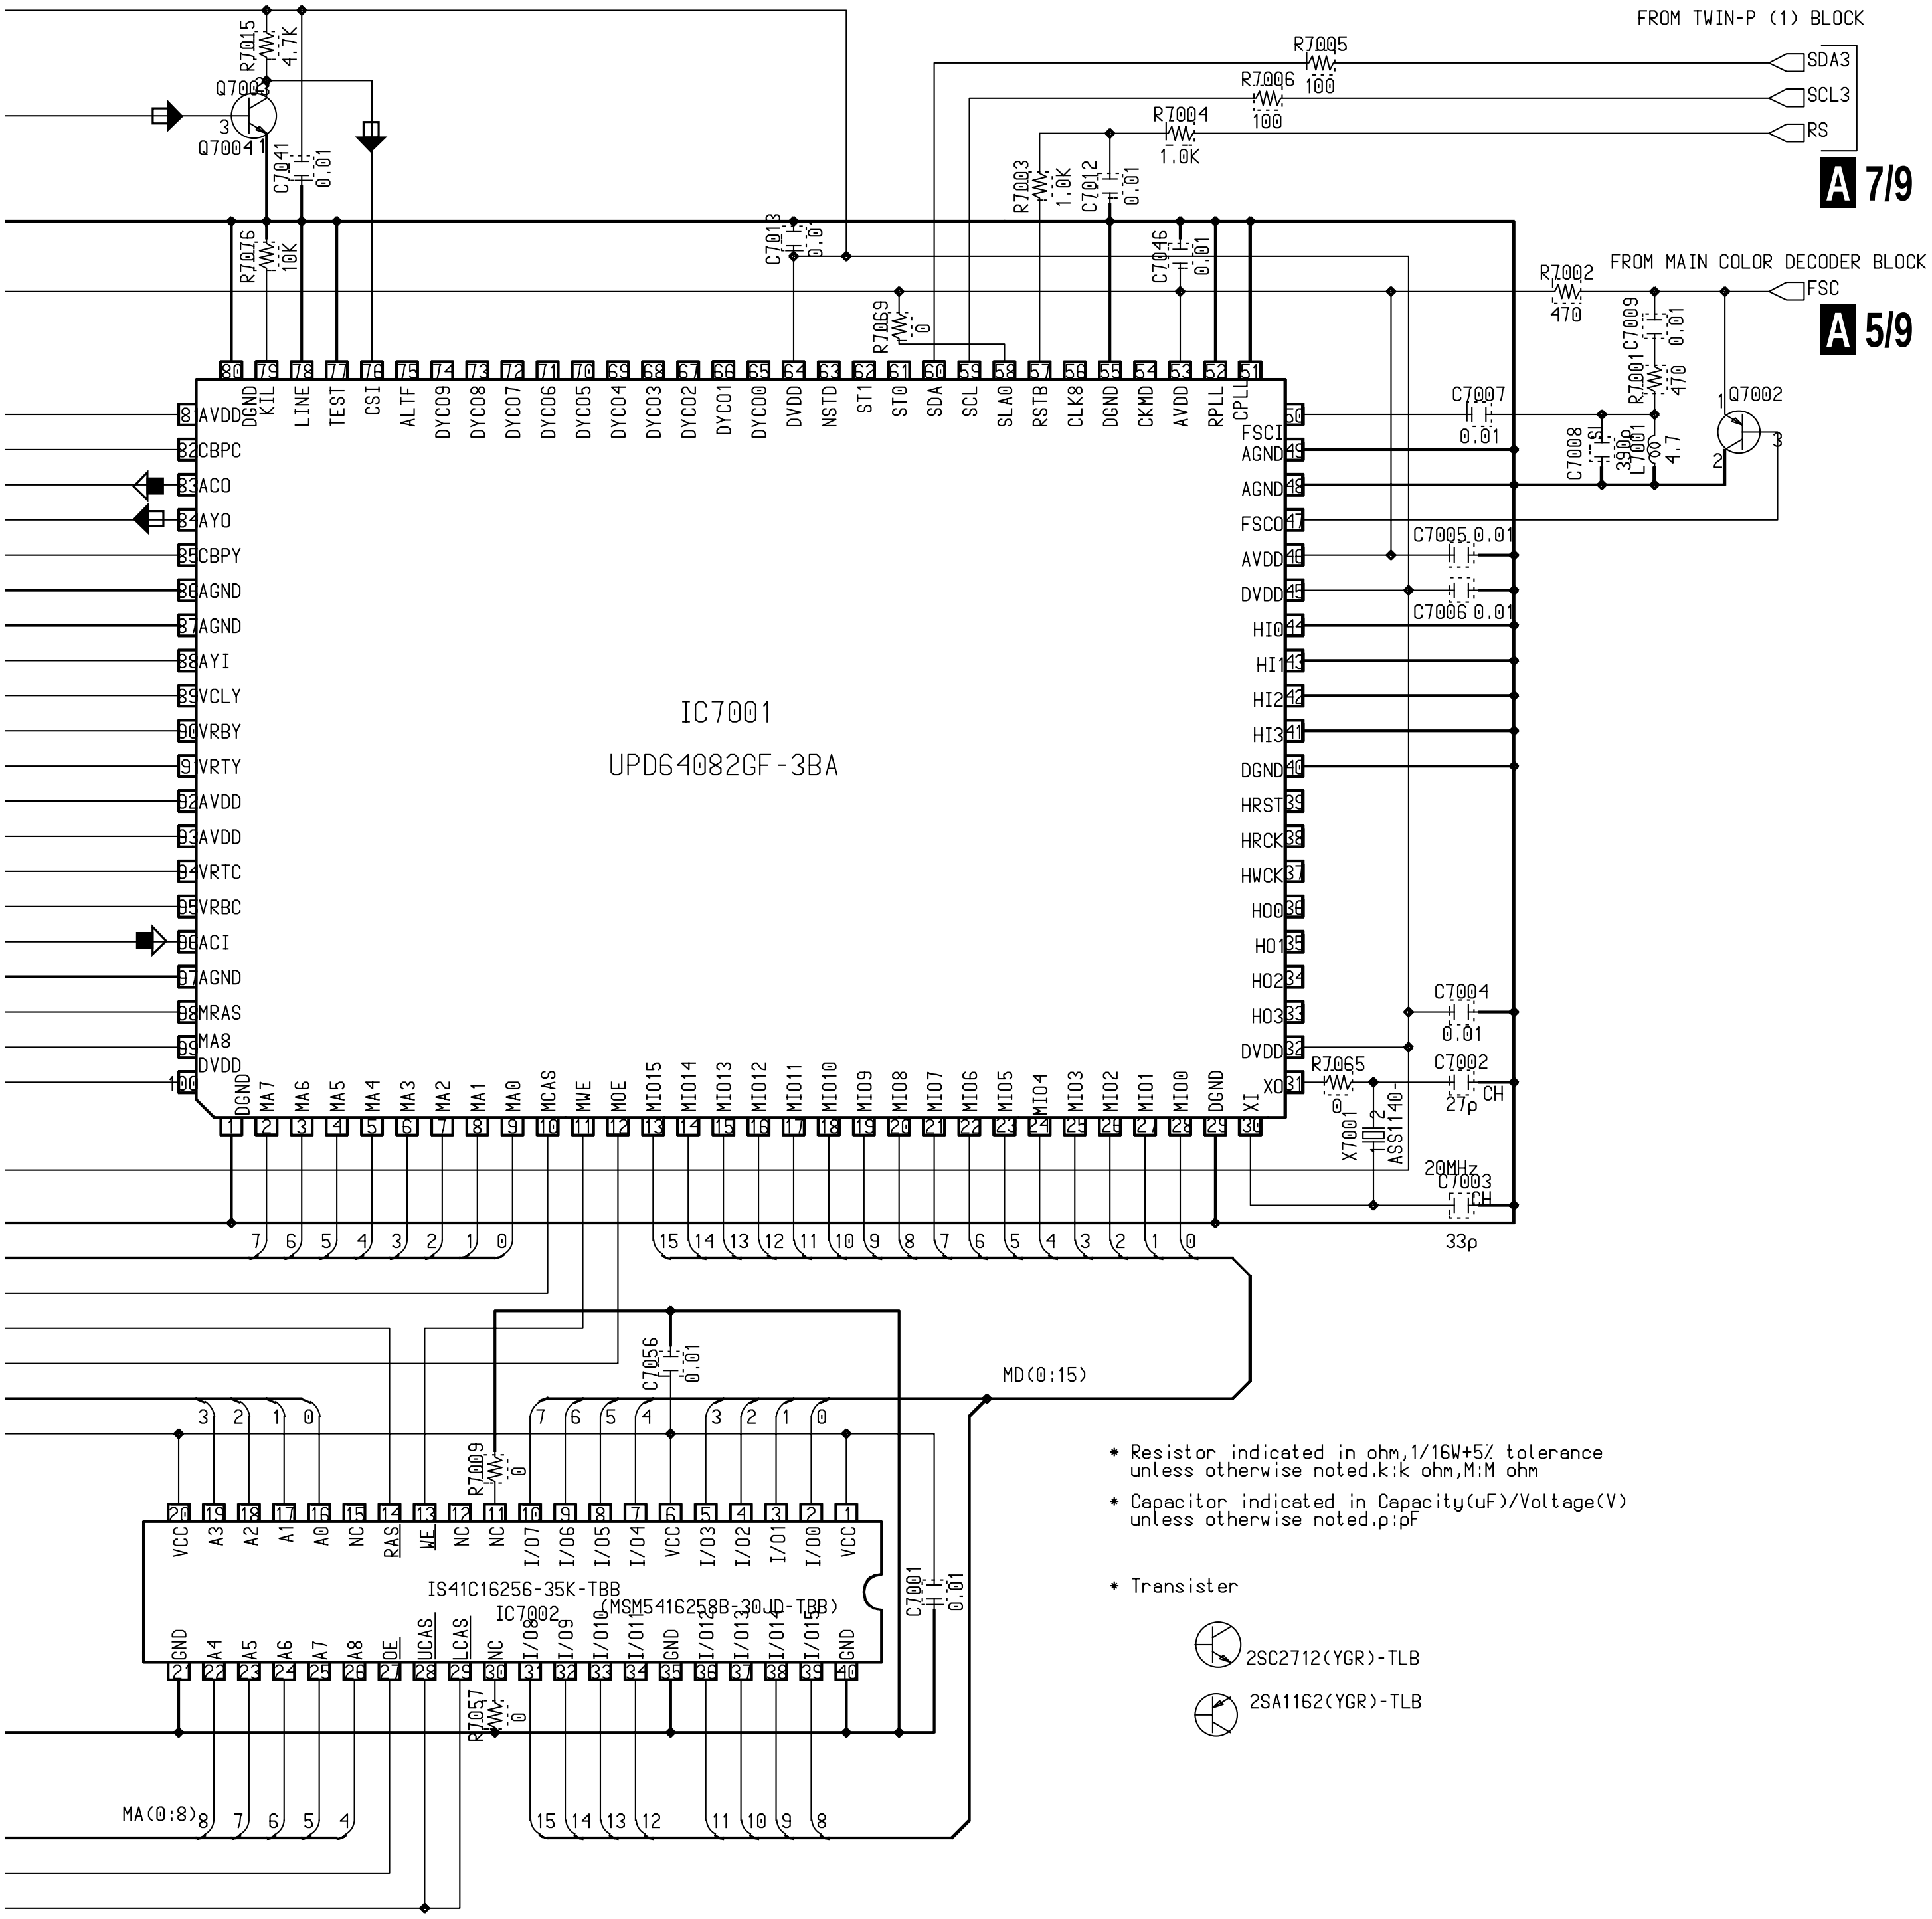

FROM TWIN-P (1) BLOCK
SDA3
SCL3
RS
A 7/9
FROM MAIN COLOR DECODER BLOCK
FSC
A 5/9
R7005 100
R7006 100
R7004 1.0K
R7003 1.0K
C7012 0.01
C7013 0.01
C7046 0.01
R7015 4.7K
Q7003
Q7004
C7041 0.01
R7016 10K
R7069 0
R7002 470
C7009 0.01
R7001 470
L7001 4.7
C7008 390p
Q7002
C7007 0.01
C7005 0.01
C7006 0.01
C7004 0.01
C7002 27p CH
R7065 0
X7001 ASS1140- 20MHz
C7003 CH 33p
IC7001
UPD64082GF-3BA
AVDD CBPC ACO AYO CBPY AGND AGND AYI VCLY VRBY VRTY AVDD AVDD VRTC VRBC ACI AGND MRAS MA8 DVDD
DGND KIL LINE TEST CSI ALTF DYCO9 DYCO8 DYCO7 DYCO6 DYCO5 DYCO4 DYCO3 DYCO2 DYCO1 DYCO0 DVDD NSTD ST1 ST0 SDA SCL SLA0 RSTB CLK8 DGND CKMD AVDD RPLL CPLL
FSCI AGND AGND FSCO AVDD DVDD HI0 HI1 HI2 HI3 DGND HRST HRCK HWCK HO0 HO1 HO2 HO3 DVDD XO
DGND MA7 MA6 MA5 MA4 MA3 MA2 MA1 MA0 MCAS MWE MOE MIO15 MIO14 MIO13 MIO12 MIO11 MIO10 MIO9 MIO8 MIO7 MIO6 MIO5 MIO4 MIO3 MIO2 MIO1 MIO0 DGND XI
MD(0:15)
MA(0:8)
C7056 0.01
R7009 0
R7057 0
C7001 0.01
IS41C16256-35K-TBB
IC7002 (MSM5416258B-30JD-TBB)
VCC A3 A2 A1 A0 NC RAS WE NC NC I/O7 I/O6 I/O5 I/O4 VCC I/O3 I/O2 I/O1 I/O0 VCC
GND A4 A5 A6 A7 A8 OE UCAS LCAS NC I/O8 I/O9 I/O10 GND I/O12 I/O13 I/O14 I/O15 GND
2SC2712(YGR)-TLB
2SA1162(YGR)-TLB

* Resistor indicated in ohm,1/16W+5% tolerance unless otherwise noted.k:k ohm,M:M ohm

* Capacitor indicated in Capacity(uF)/Voltage(V) unless otherwise noted.p:pF

* Transister

3.7 SIGNAL ASSY (5/9)

A 5/9 SIGNAL ASSY
(AWV1917)
• MAIN COLOR DECODER BLOCK

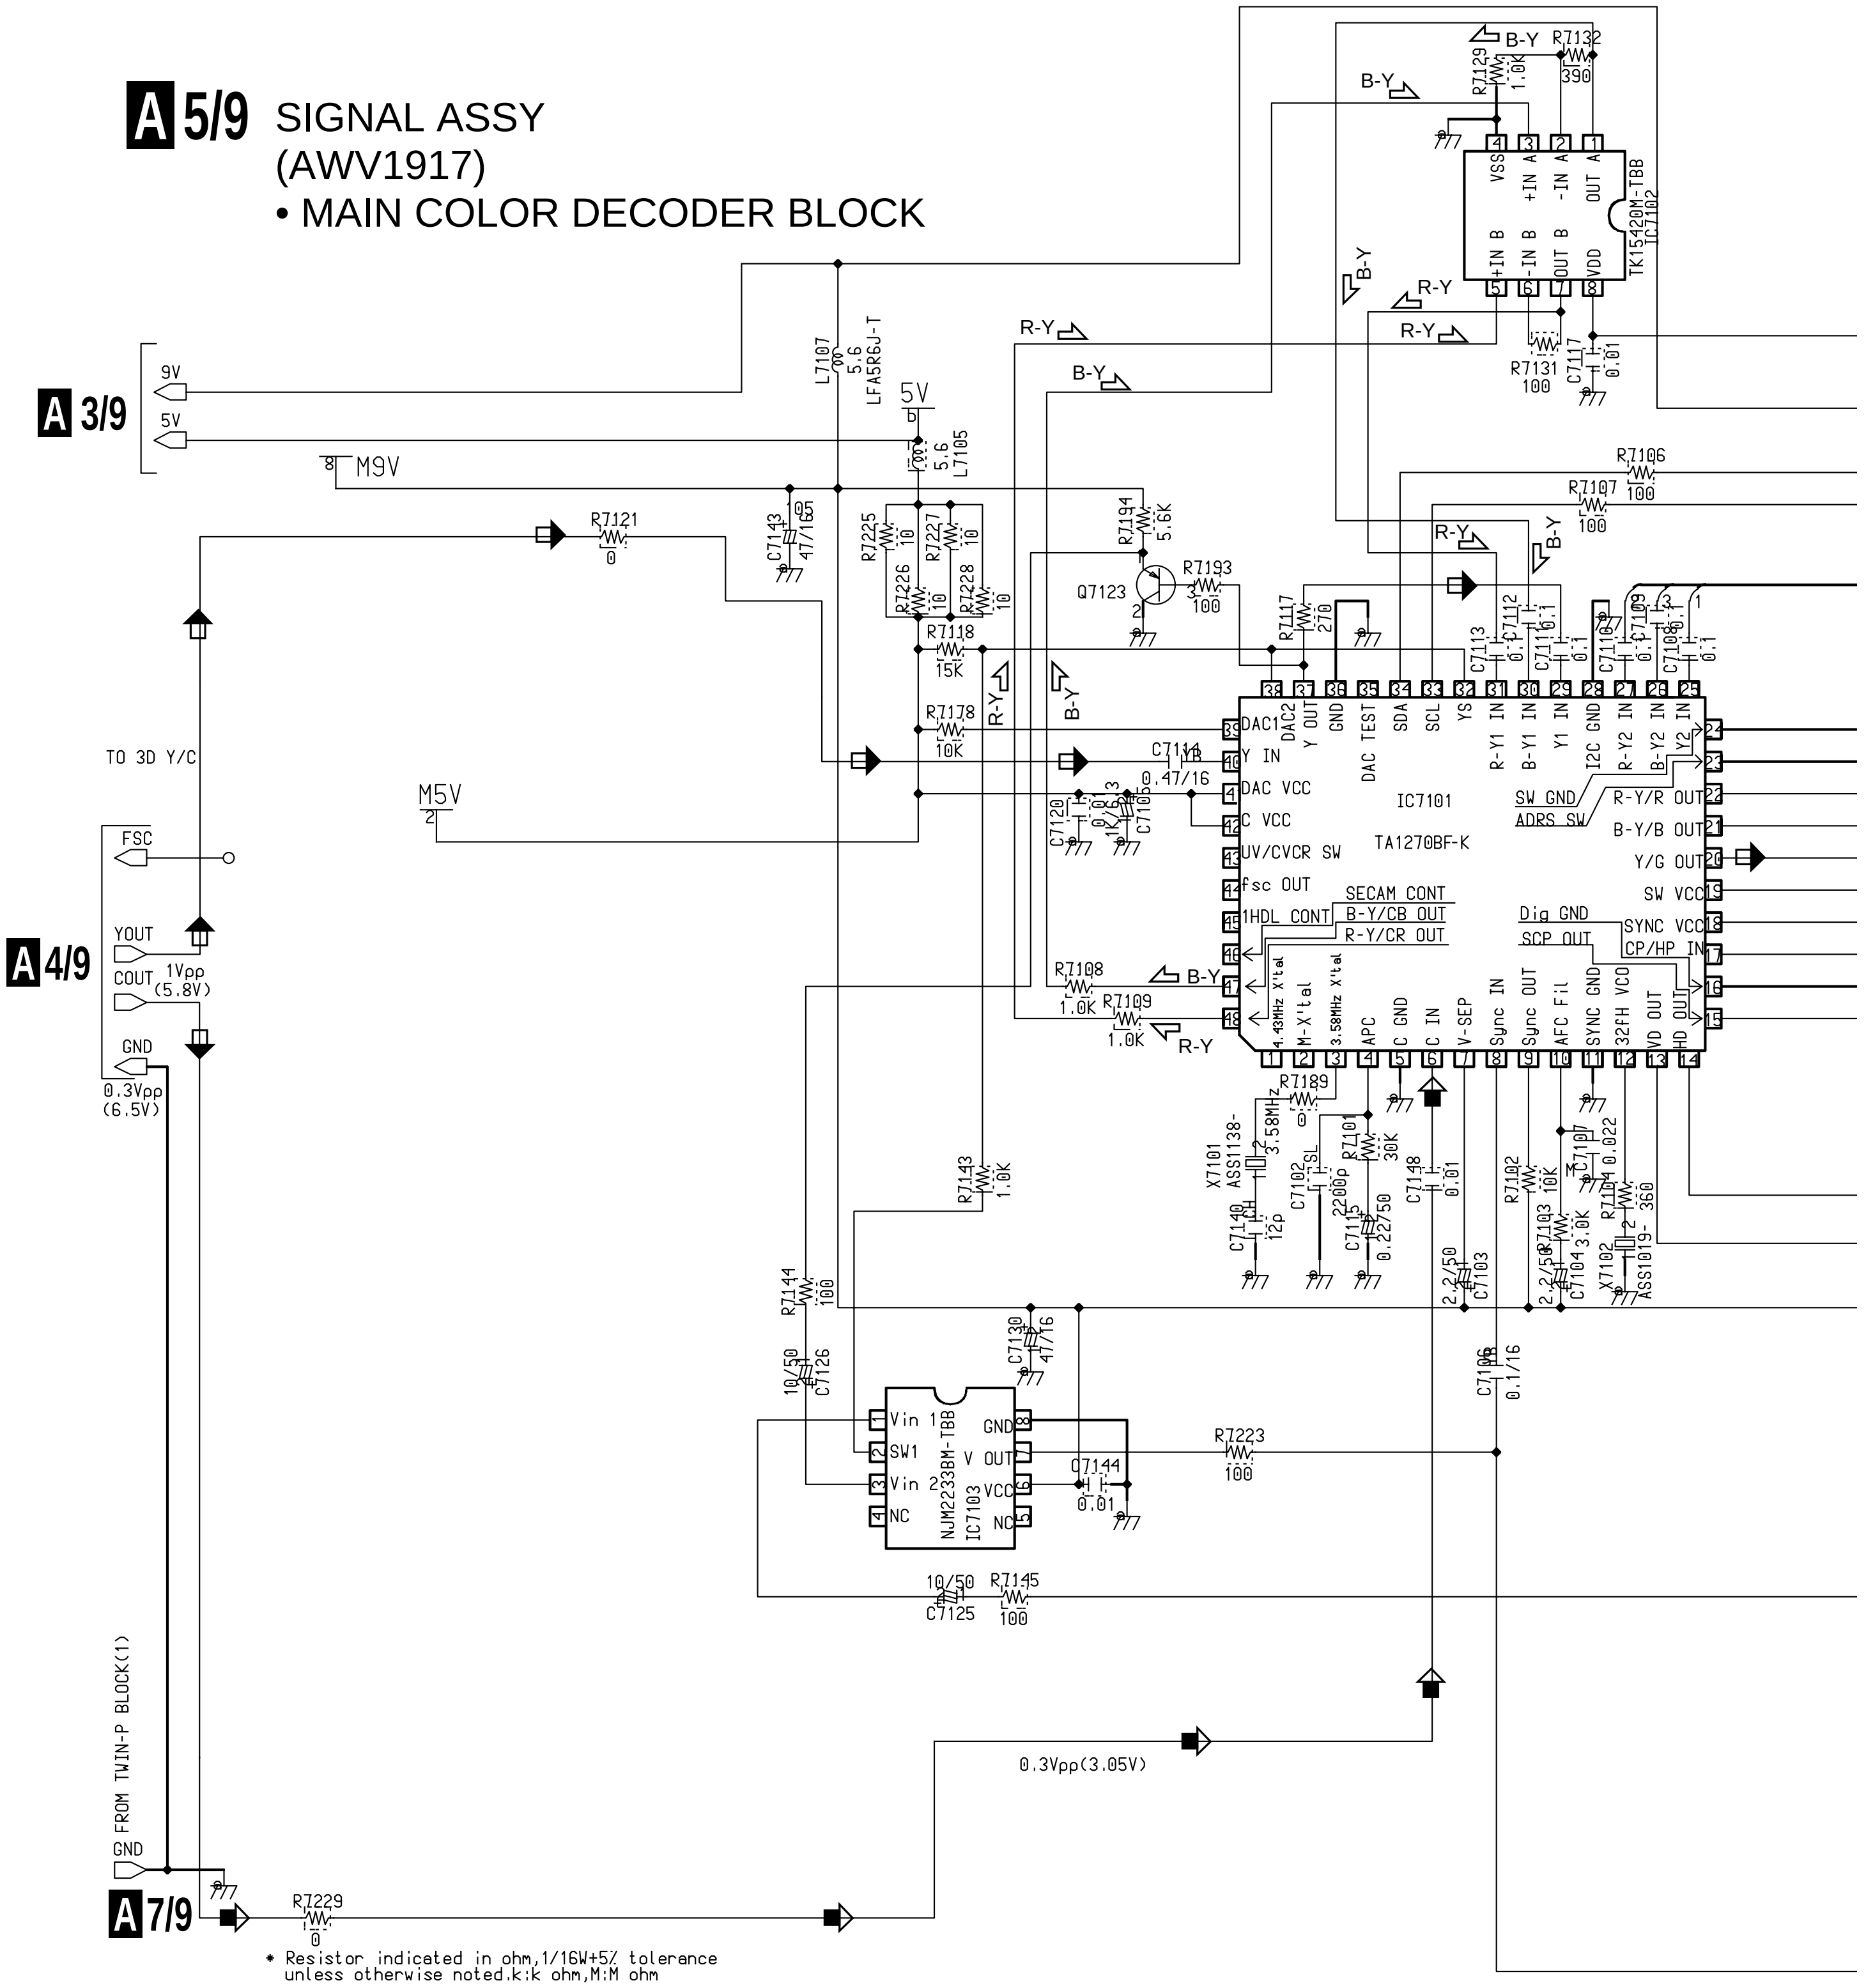
A 3/9
9V
5V
M9V
A 4/9
FSC
YOUT
COUT
1Vpp (5.8V)
GND
0.3Vpp (6.5V)
TO 3D Y/C
M5V
FROM TWIN-P BLOCK(1)
GND
A 7/9
R7229 0
0.3Vpp(3.05V)
L7107 5.6 LFA5R6J-T
5V
L7105 5.6
C7143 47/16
R7121 0
R7225 10
R7226 10
R7227 10
R7228 10
R7118 15K
R7178 10K
R7194 5.6K
Q7123
R7193 100
R7117 270
C7114 0.47/16
C7120
C7105
R7108 1.0K
R7109 1.0K
R-Y
B-Y
R7129 1.0K
R7132 390
TK15420M-TBB IC7102
VSS +IN A -IN A OUT A
+IN B -IN B OUT B VDD
R7131 100
C7117 0.01
R7106 100
R7107 100
C7113 C7112 C7111 C7110 C7109 C7108
IC7101
TA1270BF-K
DAC1 Y IN DAC VCC C VCC UV/CVCR SW fsc OUT 1HDL CONT
DAC2 Y OUT GND DAC TEST SDA SCL YS R-Y1 IN B-Y1 IN Y1 IN I2C GND R-Y2 IN B-Y2 IN Y2 IN
SW GND ADRS SW R-Y/R OUT B-Y/B OUT Y/G OUT SW VCC SYNC VCC CP/HP IN
SECAM CONT B-Y/CB OUT R-Y/CR OUT Dig GND SCP OUT
4.43MHz X'tal M-X'tal 3.58MHz X'tal APC C GND C IN V-SEP Sync IN Sync OUT AFC Fil SYNC GND 32FH VCO VD OUT HD OUT
R7189 0
X7101 ASS1138- 3.58MHz
C7140 12p
C7102 SL 2200p
R7101 30K
C7115 0.22/50
C7148 0.01
C7103 2.2/50
R7102 10K
R7103 3.0K
C7104 2.2/50
C7101 0.022
R7104 360
X7102 ASS1019-
R7143 1.0K
R7144 100
C7126 10/50
C7130 47/16
NJM2233BM-TBB IC7103
Vin 1 SW1 Vin 2 NC GND V OUT VCC NC
C7144 0.01
R7223 100
C7106 0.1/16
C7125 10/50
R7145 100

* Resistor indicated in ohm,1/16W+5% tolerance
unless otherwise noted.k:k ohm,M:M ohm

* Capacitor indicated in Capacity(uF)/Voltage(V)
unless otherwise noted.p:pF

* Transister

2SC2712(YGR)-TLB

2SA1162(YGR)-TLB

1/16W

: C SIGNAL ROUTE
: Y SIGNAL ROUTE
R-Y : R-Y SIGNAL ROUTE
B-Y : B-Y SIGNAL ROUTE

⑩ **Q7115-Emitter (MY) (AC)**
V: 0.2V/div. H: 10µsec/div.

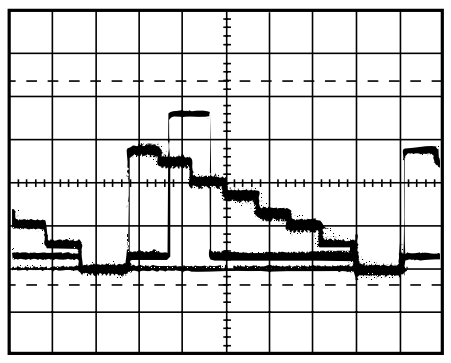

⑪ **Q7104-Emitter (MB-Y) (AC)**
V: 0.2V/div. H: 10µsec/div.

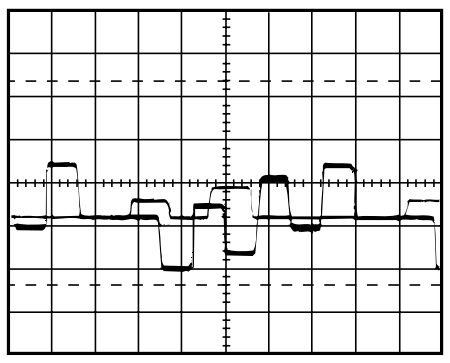

⑫ **Q7105-Emitter (MR-Y) (AC)**
V: 0.2V/div. H: 10µsec/div.

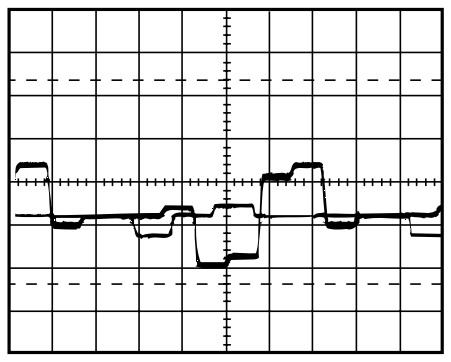

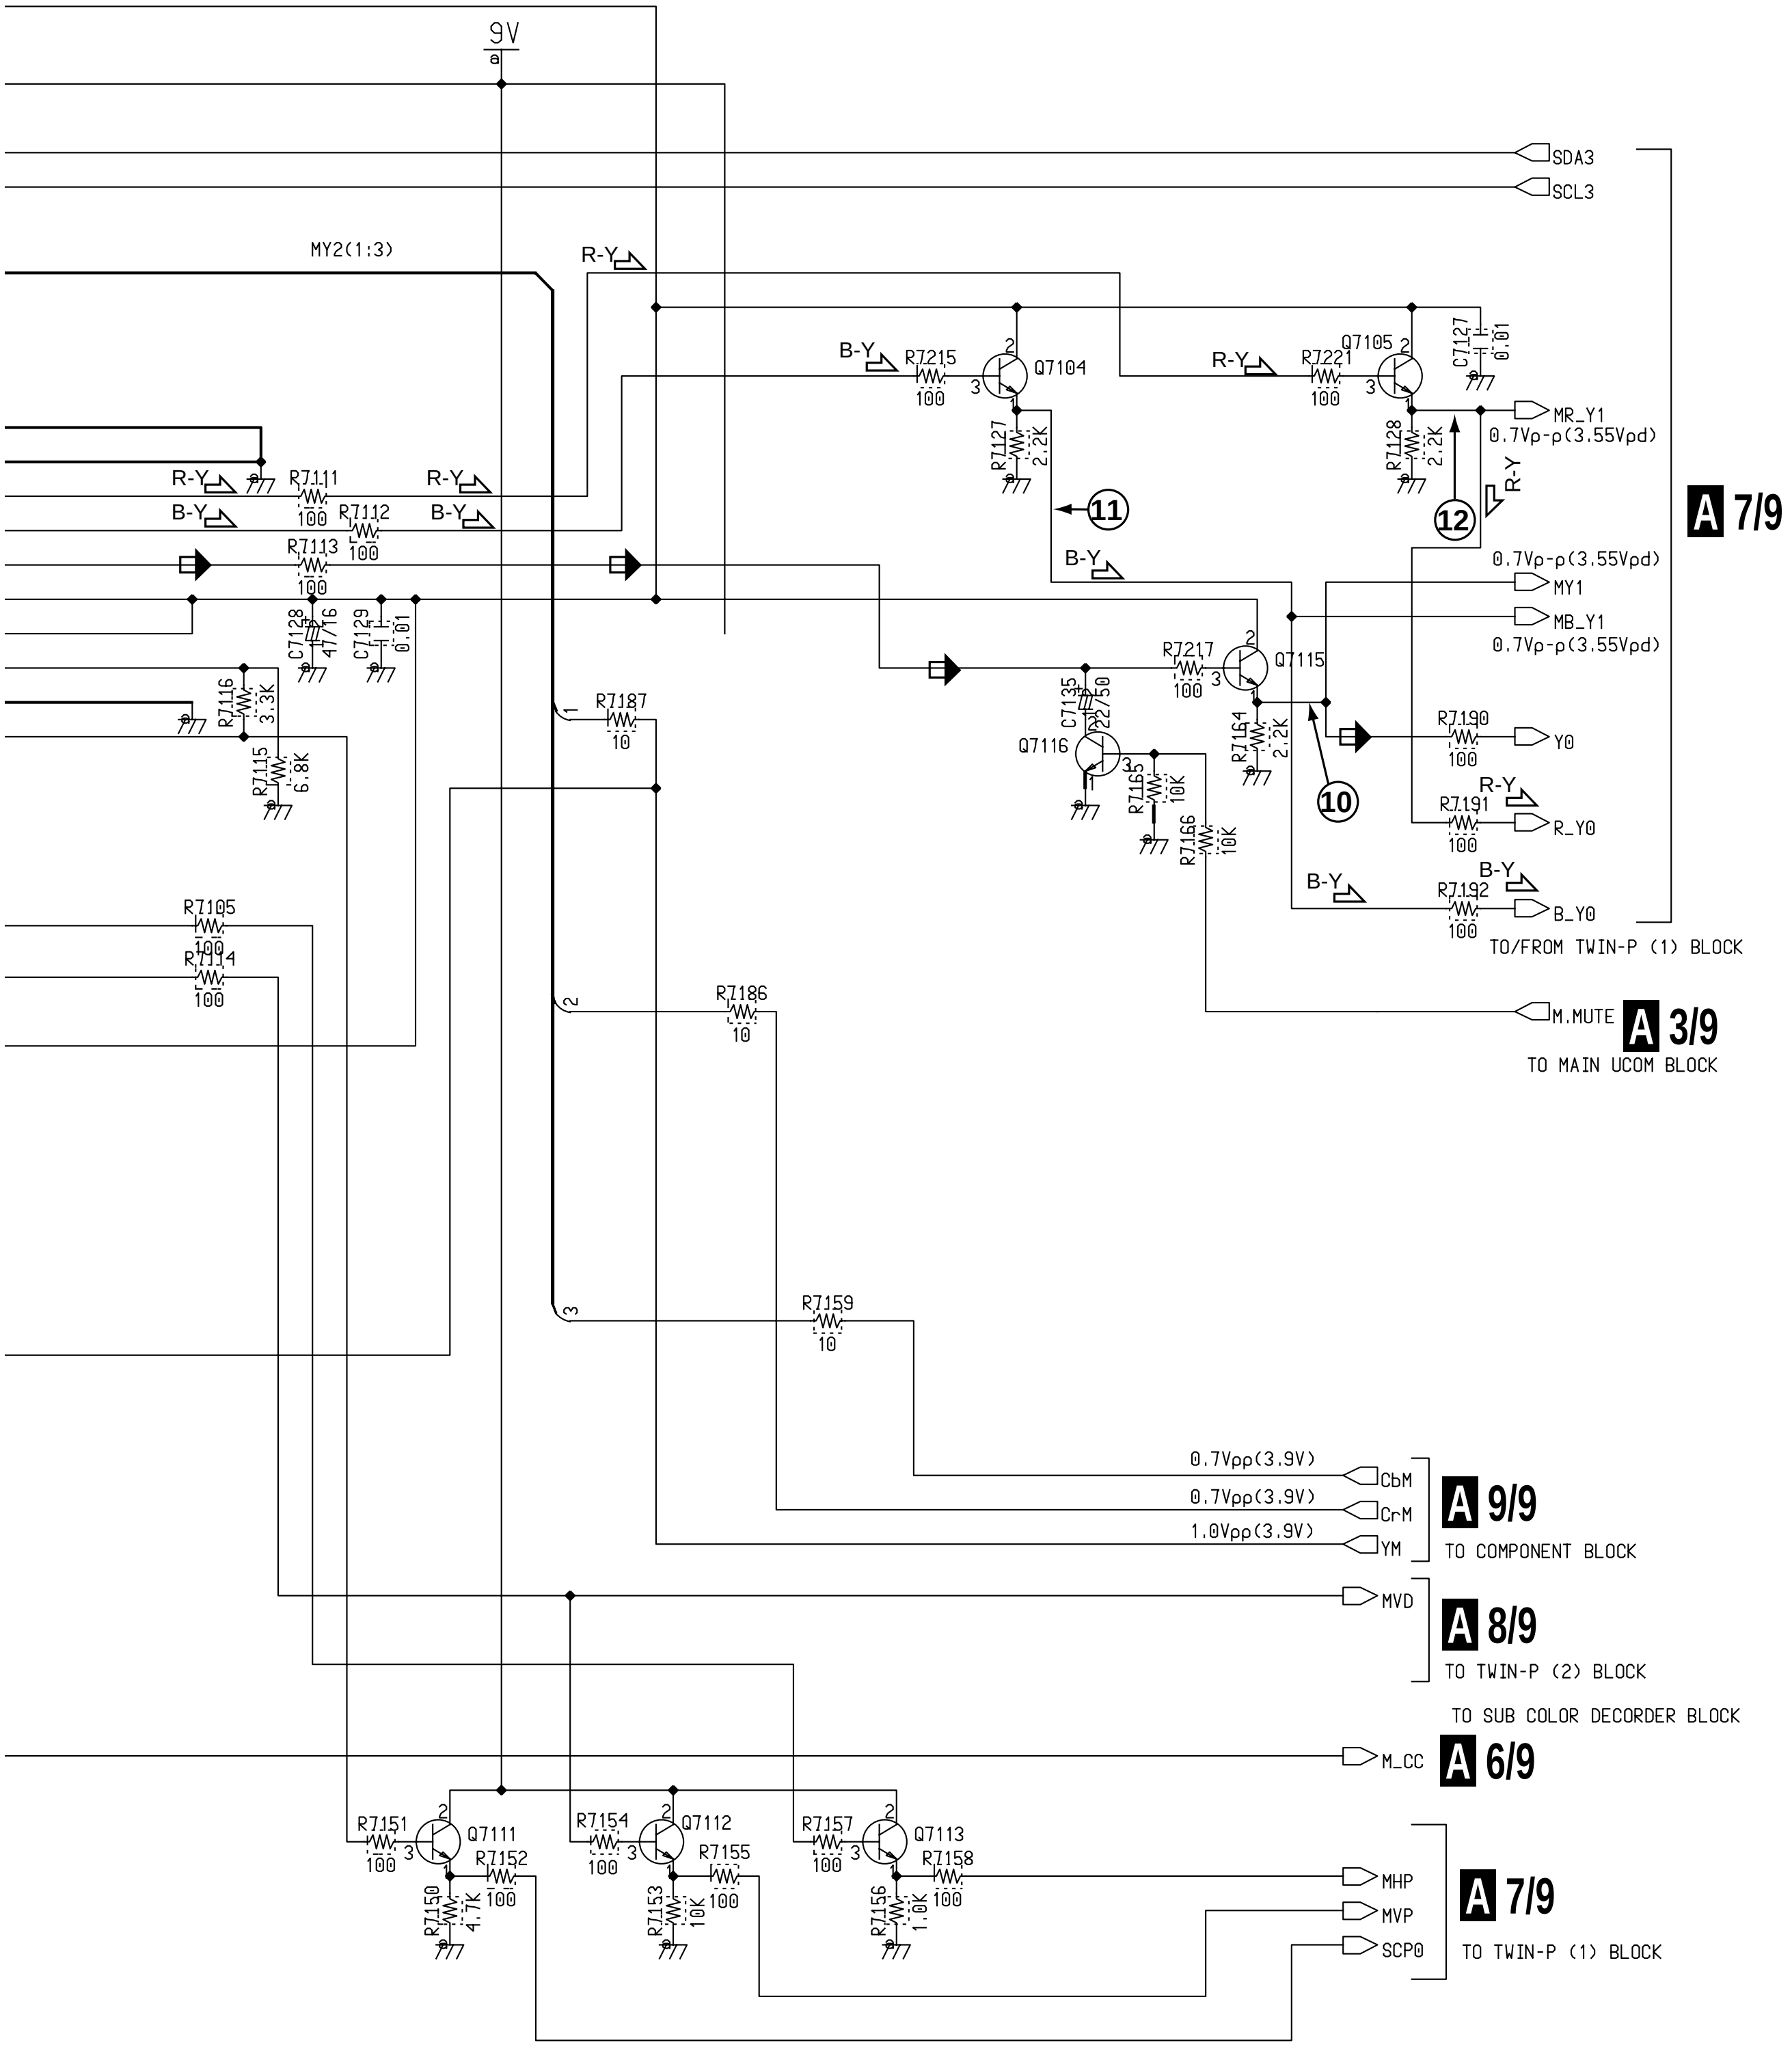

3.8 SIGNAL ASSY (6/9)

A 6/9

SIGNAL ASSY (AWV1917)
- SUB COLOR DECODER BLOCK

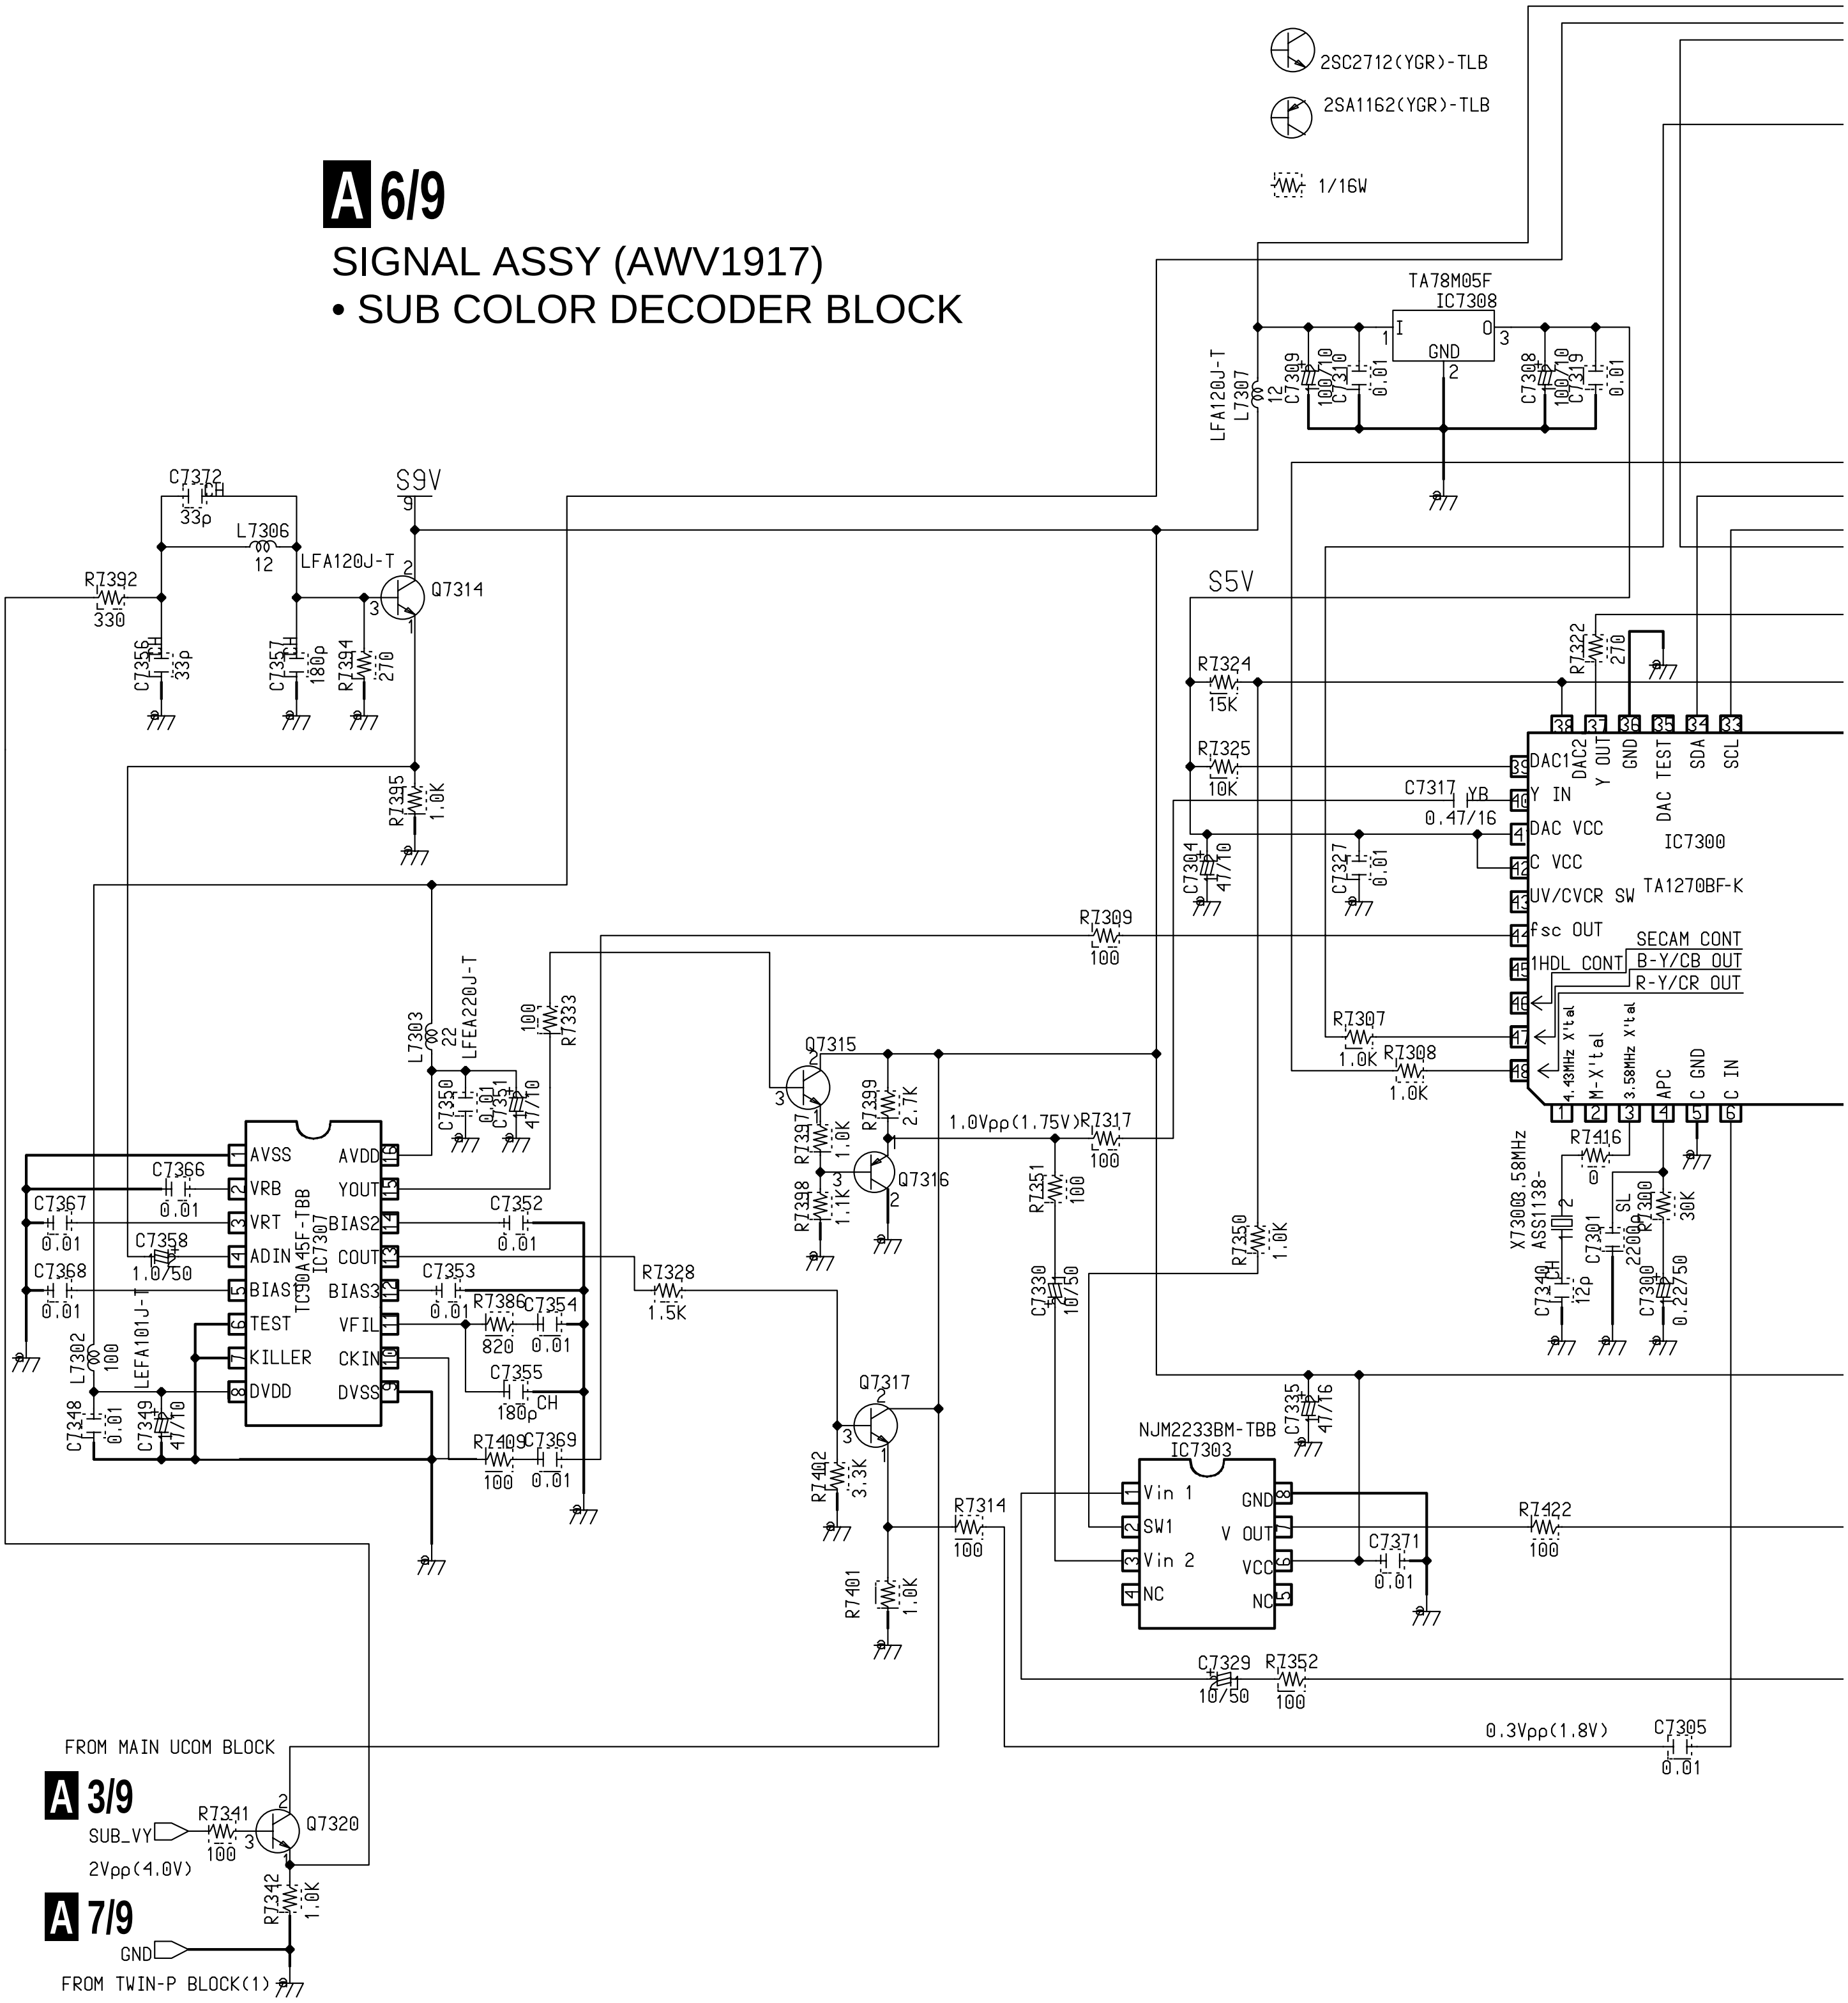

2SC2712(YGR)-TLB
2SA1162(YGR)-TLB
1/16W
TA78M05F
IC7308
I
O
GND
1
2
3
LFA120J-T
L7307
12
C7309
100/10
C7310
0.01
C7308
100/10
C7319
0.01
C7372
CH
33p
S9V
9
L7306
12
LFA120J-T
Q7314
R7392
330
C7356
CH
33p
C7357
CH
180p
R7394
270
R7395
1.0K
S5V
R7324
15K
R7325
10K
R7322
270
C7317
YB
0.47/16
C7304
47/10
C7327
0.01
IC7300
TA1270BF-K
DAC1
Y IN
DAC VCC
C VCC
UV/CVCR SW
fsc OUT
1HDL CONT
SECAM CONT
B-Y/CB OUT
R-Y/CR OUT
DAC2
Y OUT
GND
DAC TEST
SDA
SCL
4.43MHz X'tal
M-X'tal
3.58MHz X'tal
APC
C GND
C IN
R7309
100
R7307
1.0K
R7308
1.0K
R7416
0
X7300
3.58MHz
ASS1138-
C7301
SL
2200p
R7300
30K
C7340
CH
12p
C7300
0.22/50
L7303
22
LFEA220J-T
R7333
100
C7350
0.01
C7351
47/10
IC7307
TC90A45F-TBB
AVSS
VRB
VRT
ADIN
BIAS1
TEST
KILLER
DVDD
AVDD
YOUT
BIAS2
COUT
BIAS3
VFIL
CKIN
DVSS
C7366
0.01
C7367
0.01
C7358
1.0/50
C7368
0.01
C7352
0.01
C7353
0.01
R7386
820
C7354
0.01
C7355
180p
CH
R7409
100
C7369
0.01
L7302
100
LEFA101J-T
C7348
0.01
C7349
47/10
Q7315
Q7316
R7399
2.7K
R7397
1.0K
R7398
1.1K
1.0Vpp(1.75V)
R7317
100
R7351
100
C7330
10/50
R7350
1.0K
R7328
1.5K
Q7317
R7402
3.3K
R7401
1.0K
R7314
100
C7335
47/16
NJM2233BM-TBB
IC7303
Vin 1
SW1
Vin 2
NC
GND
V OUT
VCC
NC
C7371
0.01
R7422
100
C7329
10/50
R7352
100
0.3Vpp(1.8V)
C7305
0.01
FROM MAIN UCOM BLOCK
A 3/9
SUB_VY
2Vpp(4.0V)
R7341
100
Q7320
R7342
1.0K
A 7/9
GND
FROM TWIN-P BLOCK(1)

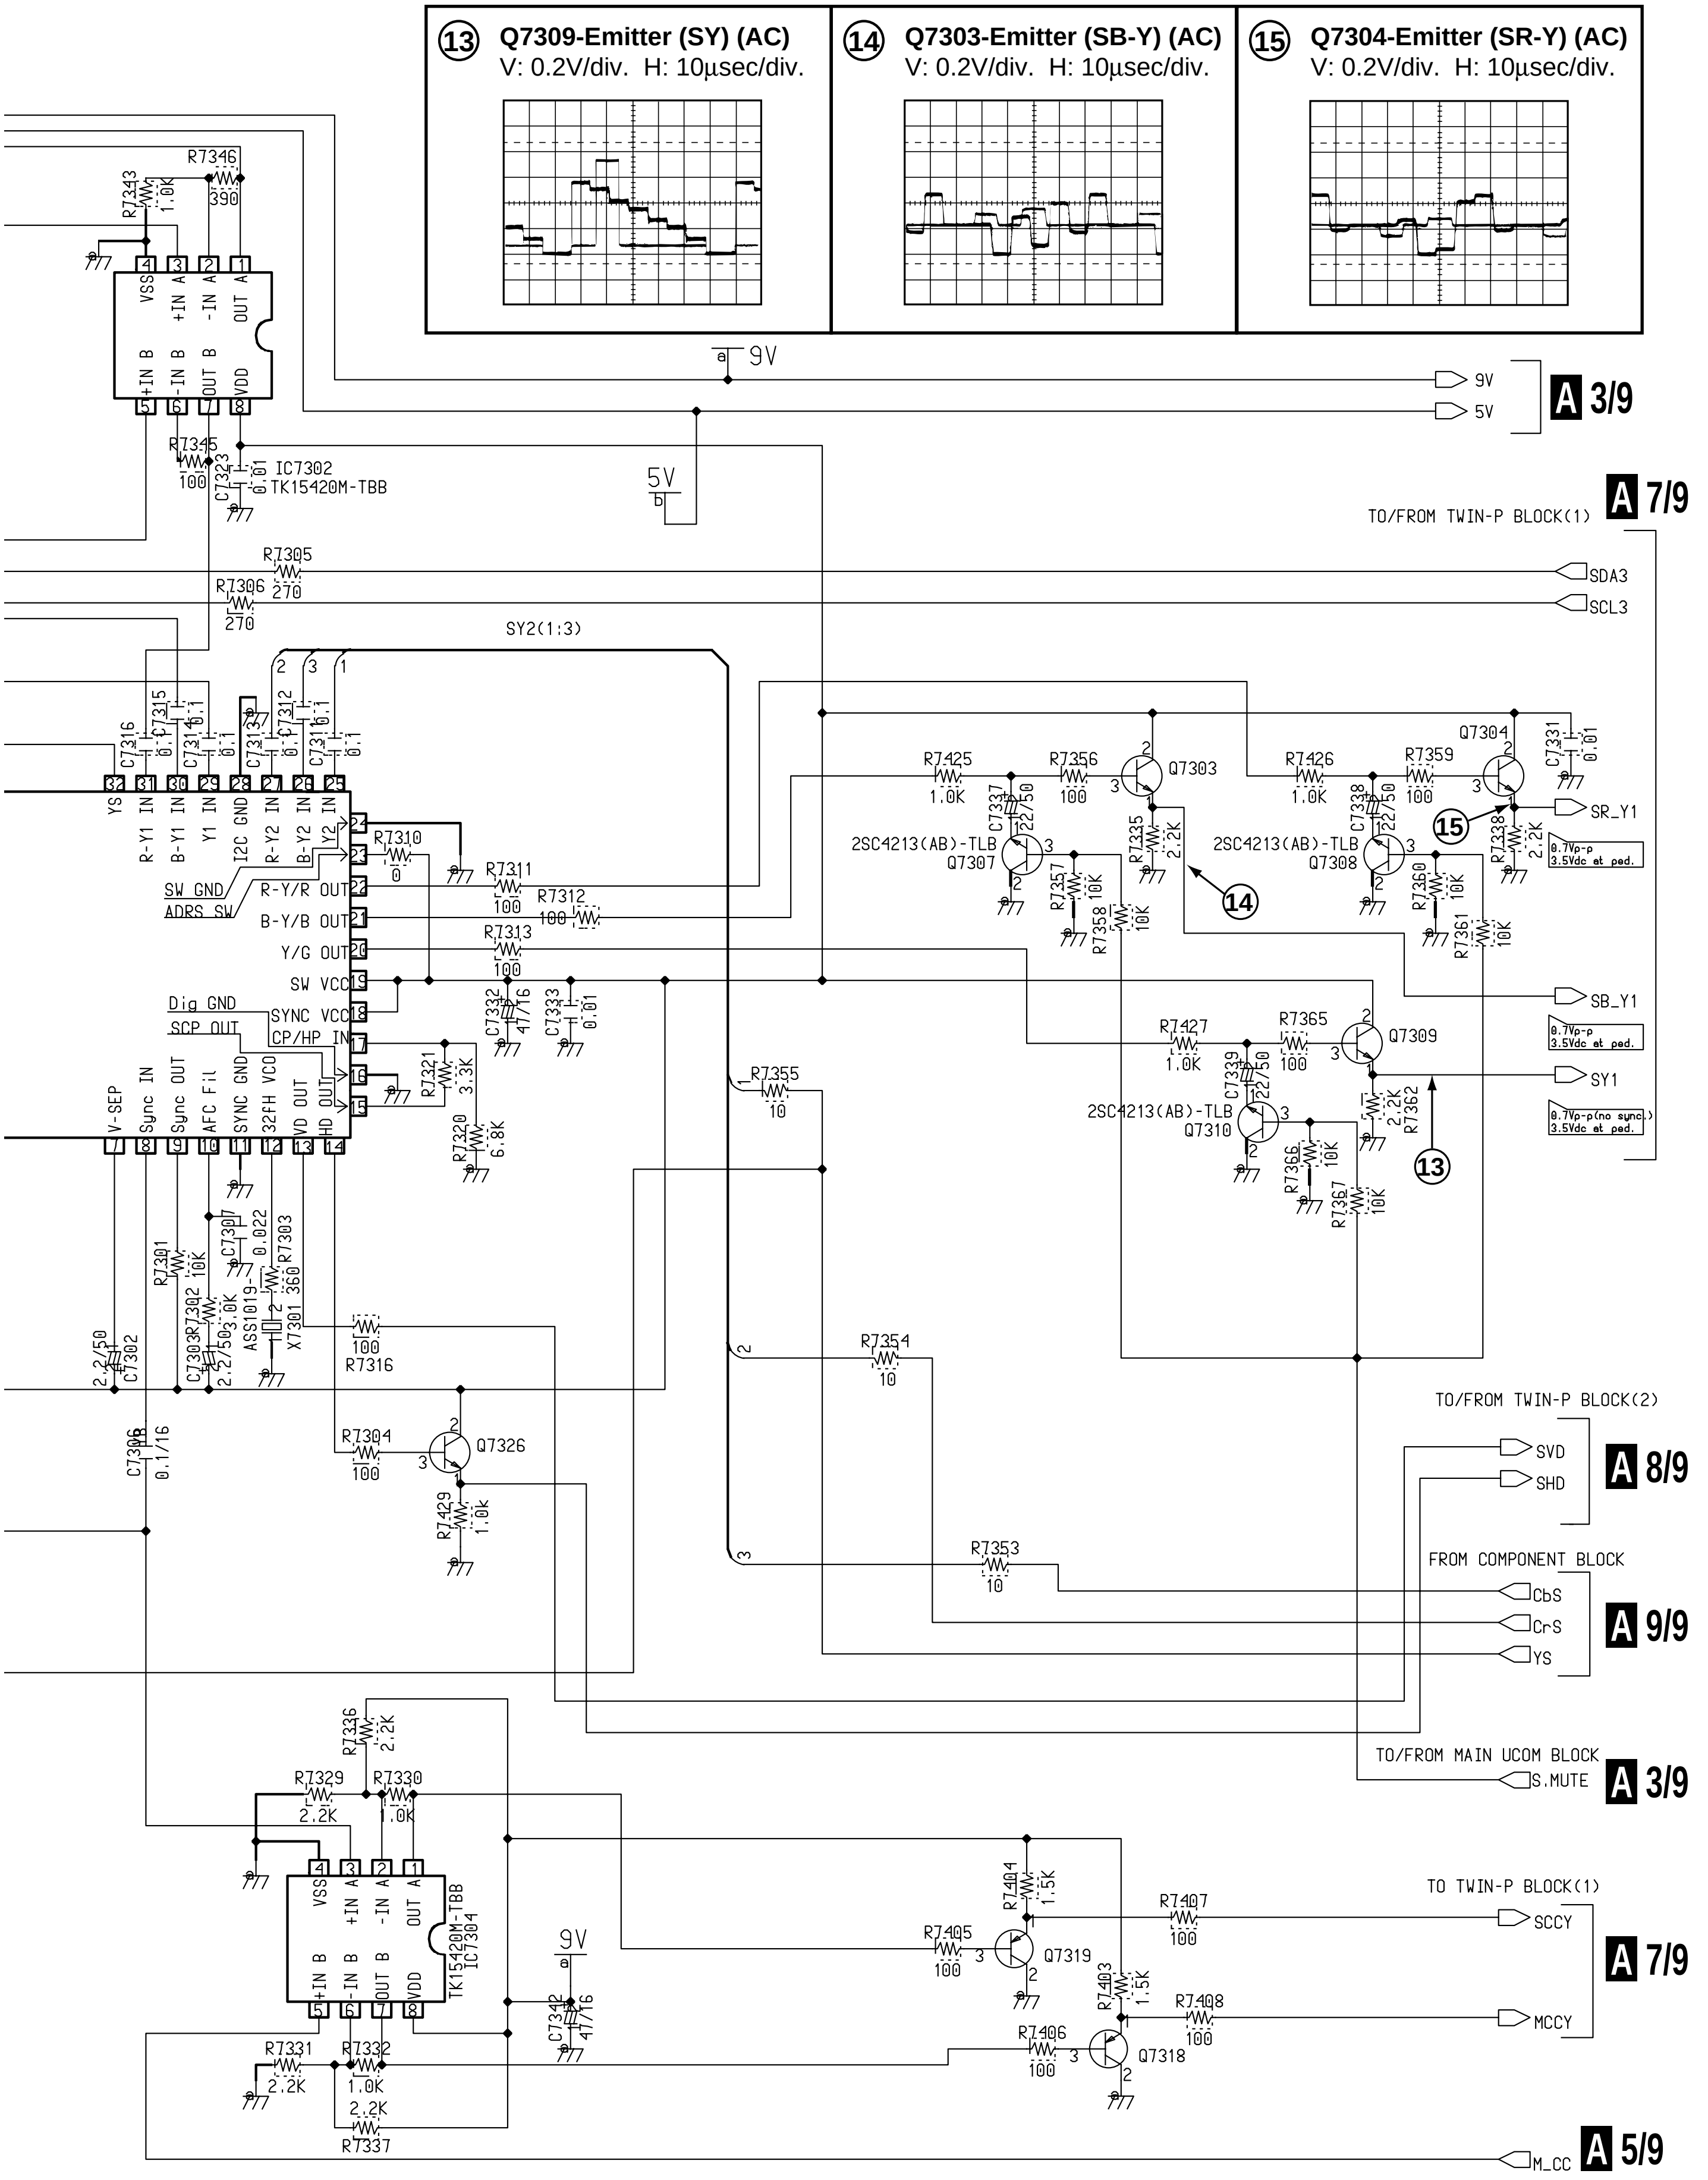

⑬ Q7309-Emitter (SY) (AC)
V: 0.2V/div. H: 10µsec/div.
⑭ Q7303-Emitter (SB-Y) (AC)
V: 0.2V/div. H: 10µsec/div.
⑮ Q7304-Emitter (SR-Y) (AC)
V: 0.2V/div. H: 10µsec/div.
R7346 390
R7343 1.0K
VSS +IN A -IN A OUT A
+IN B -IN B OUT B VDD
R7345 100
C7323 0.01
IC7302 TK15420M-TBB
9V
5V
9V
5V
A 3/9
A 7/9
TO/FROM TWIN-P BLOCK(1)
R7305 270
R7306 270
SDA3
SCL3
SY2(1:3)
C7316 0.1
C7315 0.1
C7314 0.1
C7313
C7312 0.1
C7311 0.1
YS R-Y1 IN B-Y1 IN Y1 IN I2C GND R-Y2 IN B-Y2 IN Y2 IN
R7310 0
SW GND
ADRS SW
R-Y/R OUT
B-Y/B OUT
Y/G OUT
SW VCC
SYNC VCC
CP/HP IN
Dig GND
SCP OUT
R7311 100
R7312 100
R7313 100
C7332 47/16
C7333 0.01
R7321 3.3K
R7320 6.8K
V-SEP Sync IN Sync OUT AFC Fil SYNC GND 32FH VCO VD OUT HD OUT
R7301 10K
R7302 3.0K
C7307 0.022
R7303 360
X7301 ASS1019-
C7303 2.2/50
C7302 2.2/50
C7306 0.1/16
R7316 100
R7304 100
Q7326
R7429 1.0k
R7355 10
R7354 10
R7353 10
R7425 1.0K
R7356 100
Q7303
C7337 22/50
2SC4213(AB)-TLB
Q7307
R7357 10K
R7358 10K
R7335 2.2K
R7426 1.0K
R7359 100
Q7304
C7331 0.01
C7338 22/50
2SC4213(AB)-TLB
Q7308
R7360 10K
R7361 10K
R7336 2.2K
SR_Y1
0.7Vp-p 3.5Vdc at ped.
SB_Y1
0.7Vp-p 3.5Vdc at ped.
R7427 1.0K
R7365 100
Q7309
C7339 22/50
2SC4213(AB)-TLB
Q7310
R7362 2.2K
R7366 10K
R7367 10K
SY1
0.7Vp-p(no sync) 3.5Vdc at ped.
TO/FROM TWIN-P BLOCK(2)
SVD
SHD
A 8/9
FROM COMPONENT BLOCK
CbS
CrS
YS
A 9/9
TO/FROM MAIN UCOM BLOCK
S.MUTE
A 3/9
R7336 2.2K
R7329 2.2K
R7330 1.0K
IC7304 TK15420M-TBB
VSS +IN A -IN A OUT A
+IN B -IN B OUT B VDD
9V
C7342 47/16
R7331 2.2K
R7332 1.0K
R7337 2.2K
R7404 1.5K
R7405 100
Q7319
R7407 100
R7403 1.5K
R7406 100
Q7318
R7408 100
TO TWIN-P BLOCK(1)
SCCY
MCCY
A 7/9
M_CC
A 5/9

3.9 SIGNAL ASSY (7/9)

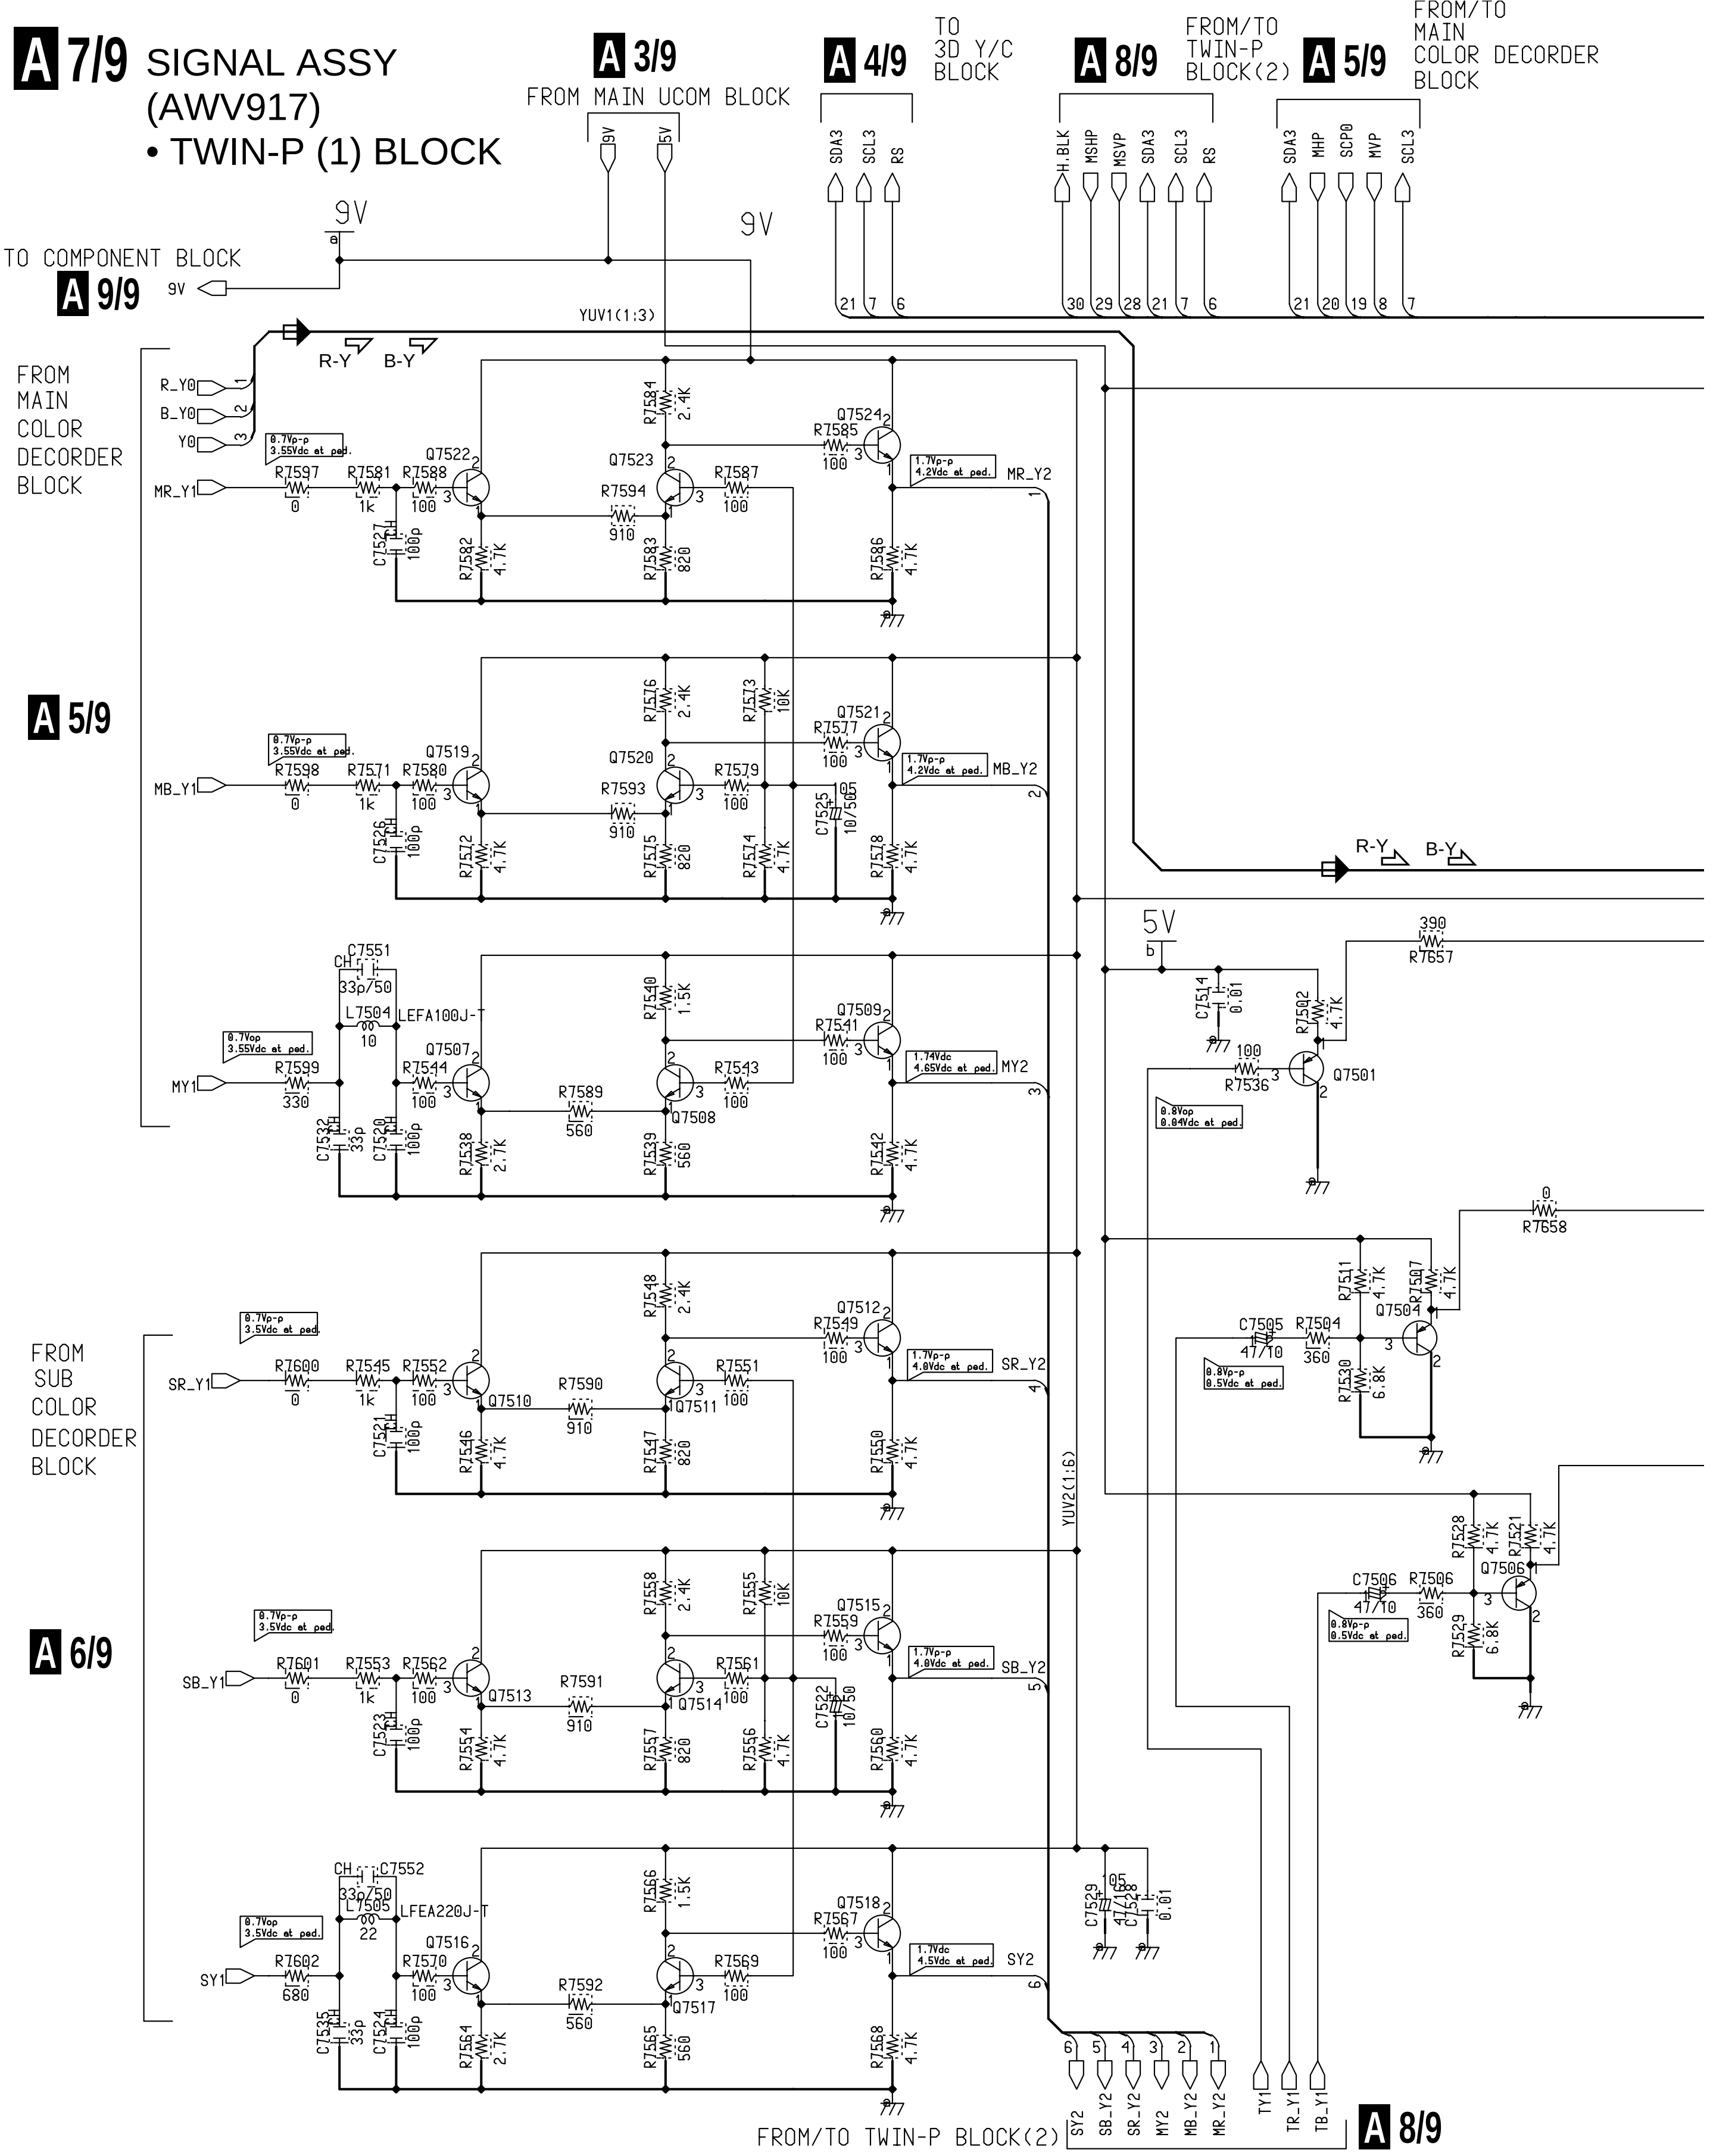
A 7/9
SIGNAL ASSY
(AWV917)
• TWIN-P (1) BLOCK
A 3/9
FROM MAIN UCOM BLOCK
9V
5V
A 4/9
TO
3D Y/C
BLOCK
SDA3
SCL3
RS
A 8/9
FROM/TO
TWIN-P
BLOCK(2)
H.BLK
MSHP
MSVP
SDA3
SCL3
RS
A 5/9
FROM/TO
MAIN
COLOR DECORDER
BLOCK
SDA3
MHP
SCP0
MVP
SCL3
9V
TO COMPONENT BLOCK
A 9/9
9V
YUV1(1:3)
R-Y
B-Y
FROM
MAIN
COLOR
DECORDER
BLOCK
R_Y0
B_Y0
Y0
MR_Y1
0.7Vp-p
3.55Vdc at ped.
R7597
0
R7581
1k
R7588
100
Q7522
C7527
100p
R7582
4.7K
R7584
2.4K
Q7523
R7594
910
R7583
820
R7587
100
Q7524
R7585
100
1.7Vp-p
4.2Vdc at ped.
MR_Y2
R7586
4.7K
A 5/9
MB_Y1
0.7Vp-p
3.55Vdc at ped.
R7598
0
R7571
1k
R7580
100
Q7519
C7526
100p
R7572
4.7K
R7576
2.4K
Q7520
R7593
910
R7575
820
R7573
10K
R7579
100
R7574
4.7K
C7525
10/50
Q7521
R7577
100
1.7Vp-p
4.2Vdc at ped.
MB_Y2
R7578
4.7K
MY1
0.7Vop
3.55Vdc at ped.
C7551
33p/50
L7504
10
LEFA100J-T
R7599
330
C7532
33p
C7520
100p
Q7507
R7544
100
R7538
2.7K
R7540
1.5K
R7589
560
Q7508
R7539
560
R7543
100
Q7509
R7541
100
1.74Vdc
4.65Vdc at ped.
MY2
R7542
4.7K
FROM
SUB
COLOR
DECORDER
BLOCK
SR_Y1
0.7Vp-p
3.5Vdc at ped.
R7600
0
R7545
1k
R7552
100
Q7510
C7521
100p
R7546
4.7K
R7548
2.4K
R7590
910
Q7511
R7547
820
R7551
100
Q7512
R7549
100
1.7Vp-p
4.0Vdc at ped.
SR_Y2
R7550
4.7K
A 6/9
SB_Y1
0.7Vp-p
3.5Vdc at ped.
R7601
0
R7553
1k
R7562
100
Q7513
C7523
100p
R7554
4.7K
R7558
2.4K
R7591
910
Q7514
R7557
820
R7555
10K
R7561
100
R7556
4.7K
C7522
10/50
Q7515
R7559
100
1.7Vp-p
4.0Vdc at ped.
SB_Y2
R7560
4.7K
SY1
0.7Vop
3.5Vdc at ped.
C7552
33p/50
L7505
22
LFEA220J-T
R7602
680
C7535
33p
C7524
100p
Q7516
R7570
100
R7564
2.7K
R7566
1.5K
R7592
560
Q7517
R7565
560
R7569
100
Q7518
R7567
100
1.7Vdc
4.5Vdc at ped.
SY2
R7568
4.7K
YUV2(1:6)
C7529
47/10
C7528
0.01
5V
C7514
0.01
R7502
4.7K
390
R7657
100
R7536
Q7501
0.8Vop
0.04Vdc at ped.
0
R7658
R7511
4.7K
R7507
4.7K
Q7504
C7505
47/10
R7504
360
0.8Vp-p
0.5Vdc at ped.
R7530
6.8K
R7528
4.7K
R7521
4.7K
Q7506
C7506
47/10
R7506
360
0.8Vp-p
0.5Vdc at ped.
R7529
6.8K
SY2
SB_Y2
SR_Y2
MY2
MB_Y2
MR_Y2
TY1
TR_Y1
TB_Y1
FROM/TO TWIN-P BLOCK(2)
A 8/9

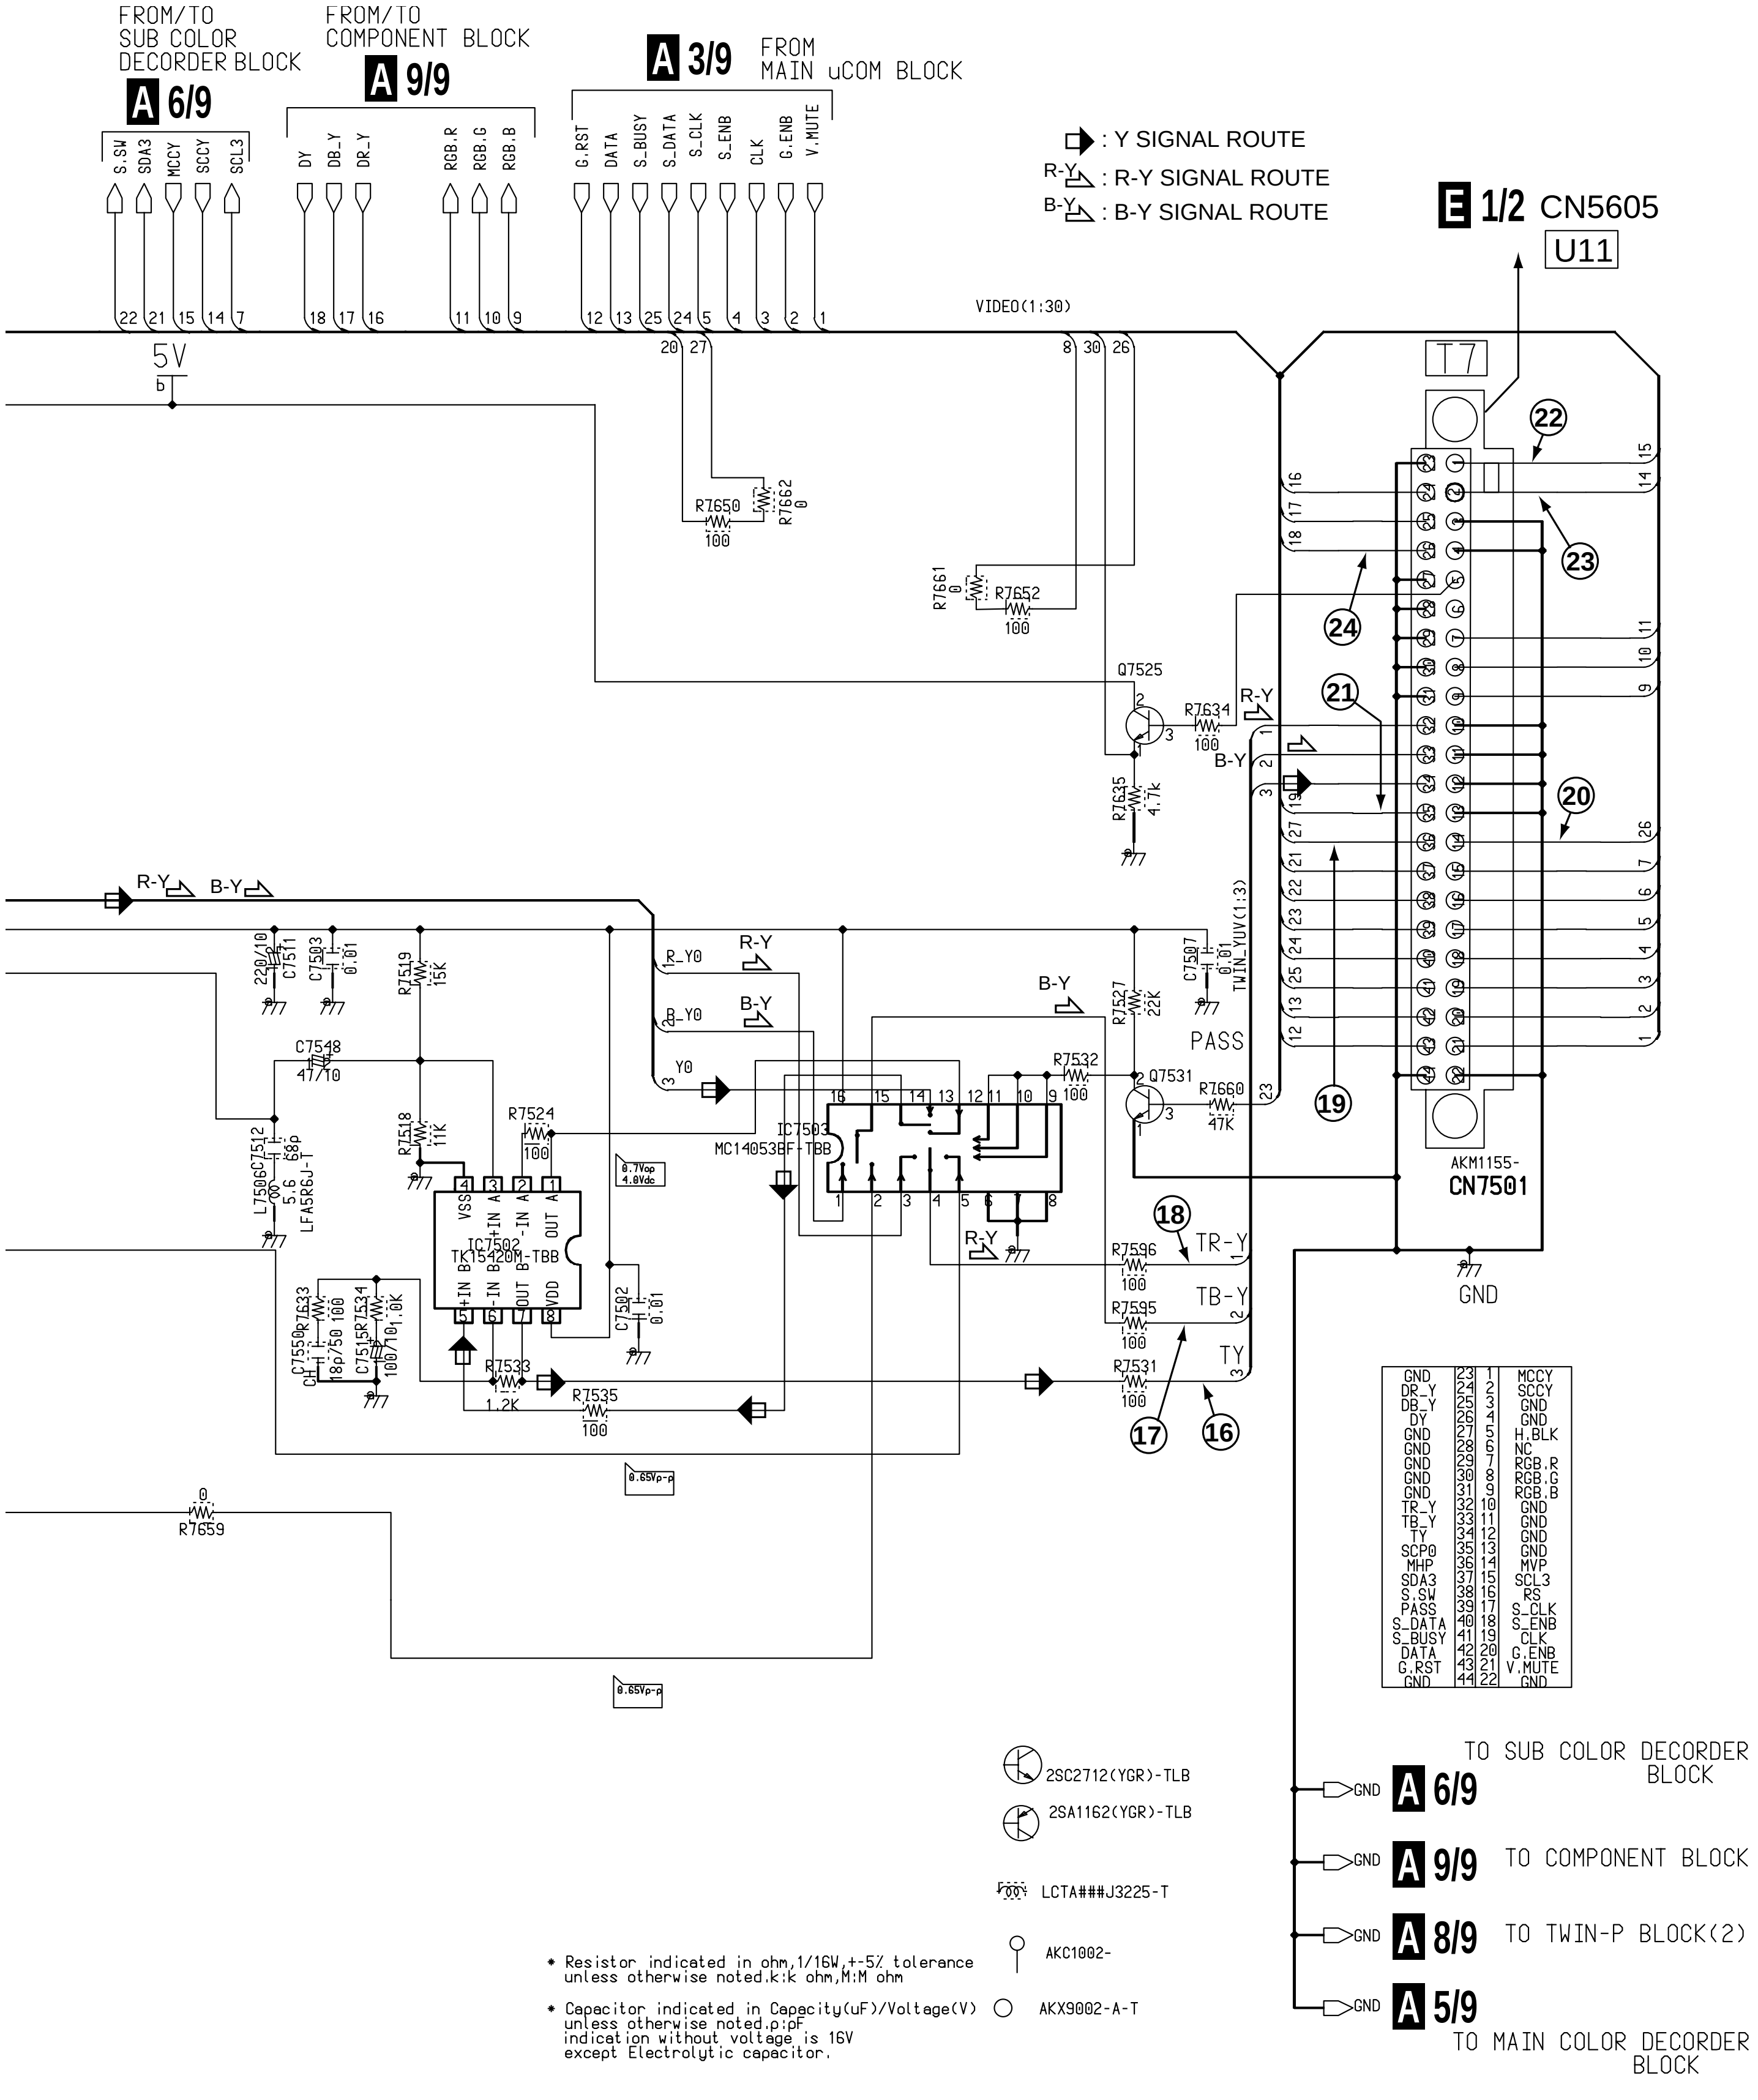
FROM/TO SUB COLOR DECORDER BLOCK
A 6/9
FROM/TO COMPONENT BLOCK
A 9/9
A 3/9 FROM MAIN uCOM BLOCK
S.SW
SDA3
MCCY
SCCY
SCL3
DY
DB_Y
DR_Y
RGB.R
RGB.G
RGB.B
G.RST
DATA
S.BUSY
S_DATA
S_CLK
S_ENB
CLK
G.ENB
V.MUTE
: Y SIGNAL ROUTE
R-Y : R-Y SIGNAL ROUTE
B-Y : B-Y SIGNAL ROUTE
E 1/2 CN5605
U11
VIDEO(1:30)
5V
T7
R7650 100
R7662 0
R7661 0
R7652 100
Q7525
R7634 100
R7635 4.7k
R-Y
B-Y
TWIN_YUV(1:3)
C7507 0.01
R7527 22K
PASS
R7532 100
Q7531
R7660 47K
C7511 220/10
C7503 0.01
R7519 15K
R_Y0
B_Y0
Y0
C7548 47/10
R7518 11K
R7524 100
IC7502 TK15420M-TBB
VSS
+IN A
-IN A
OUT A
+IN B
-IN B
OUT B
VDD
IC7503 MC14053BF-TBB
0.7Vop 4.0Vdc
C7512 68p
L7506 5.6 LFA5R6J-T
C7550 18p/50
R7633 100
C7515 100/10
R7534 1.0K
R7533 1.2K
R7535 100
C7502 0.01
R7596 100
R7595 100
R7531 100
TR-Y
TB-Y
TY
0.65Vp-p
R7659 0
AKM1155-
CN7501
GND
16 17 18 19 20 21 22 23 24
2SC2712(YGR)-TLB
2SA1162(YGR)-TLB
LCTA###J3225-T
AKC1002-
AKX9002-A-T
TO SUB COLOR DECORDER BLOCK
A 6/9
A 9/9 TO COMPONENT BLOCK
A 8/9 TO TWIN-P BLOCK(2)
A 5/9
TO MAIN COLOR DECORDER BLOCK

GND	23	1	MCCY
DR_Y	24	2	SCCY
DB_Y	25	3	GND
DY	26	4	GND
GND	27	5	H.BLK
GND	28	6	NC
GND	29	7	RGB.R
GND	30	8	RGB.G
GND	31	9	RGB.B
TR_Y	32	10	GND
TB_Y	33	11	GND
TY	34	12	GND
SCP0	35	13	GND
MHP	36	14	MVP
SDA3	37	15	SCL3
S.SW	38	16	RS
PASS	39	17	S_CLK
S_DATA	40	18	S_ENB
S_BUSY	41	19	CLK
DATA	42	20	G.ENB
G.RST	43	21	V.MUTE
GND	44	22	GND

* Resistor indicated in ohm,1/16W,+-5% tolerance unless otherwise noted.k:k ohm,M:M ohm

* Capacitor indicated in Capacity(uF)/Voltage(V) unless otherwise noted.p:pF indication without voltage is 16V except Electrolytic capacitor.

A 7/9 SIGNAL ASSY (7/9)

Input signal
Video signal : EIA full color-bar
Picture quality : Standard
Range :DC range (Unless otherwise noted)

⑯ **Foot of R7531 (TY) (AC)**
V: 0.5V/div. H: 10µsec/div.

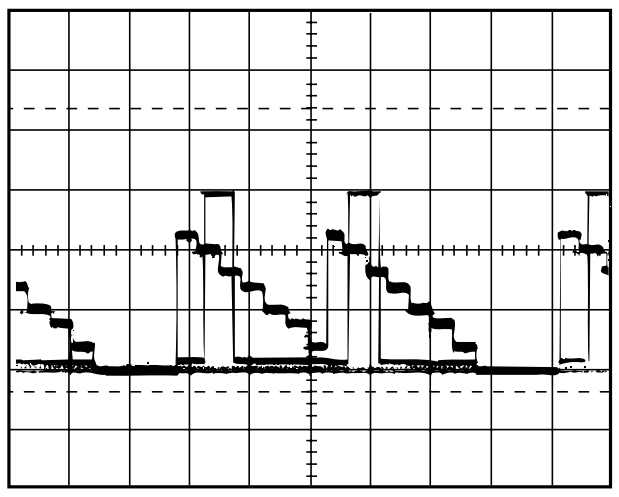

⑰ **Foot of R7595 (TB-Y) (AC)**
V: 0.1V/div. H: 10µsec/div.

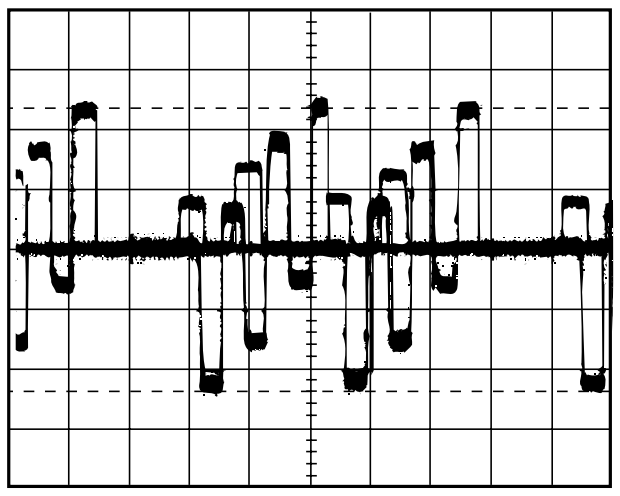

⑱ **Foot of R7596 (TR-Y) (AC)**
V: 0.1V/div. H: 10µsec/div.

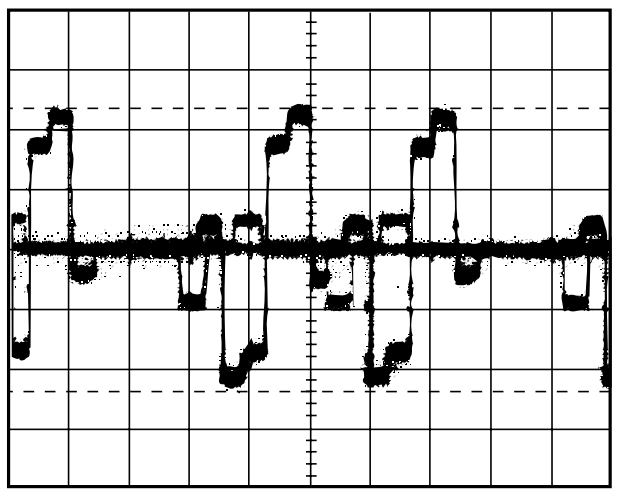

⑲ **CN7501-pin 36 (MHP)**
V: 1V/div. H: 10µsec/div.

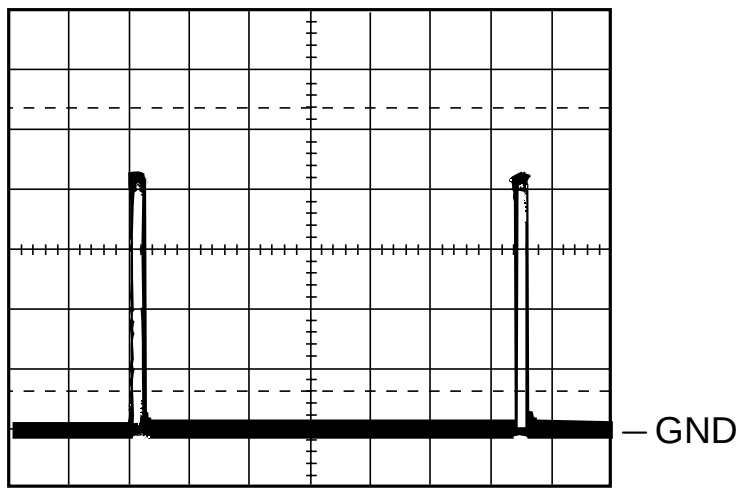

⑳ **CN7501-pin 14 (MVP)**
V: 1V/div. H: 2msec/div.

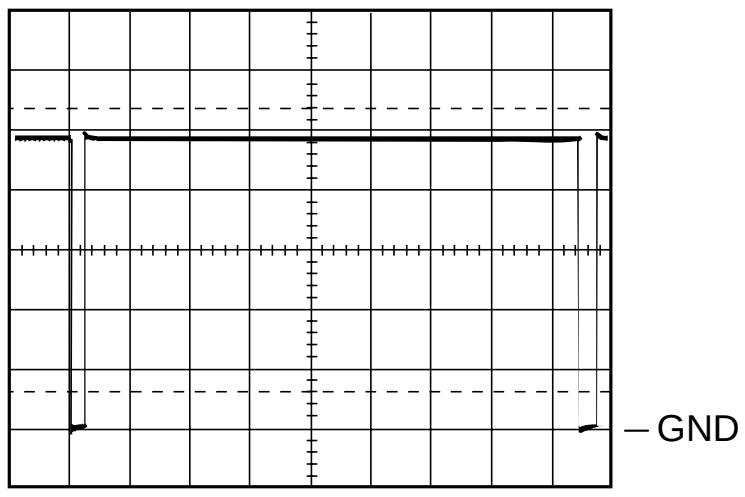

㉑-1 **CN7501-pin 35 (SCP0)**
V: 2V/div. H: 10µsec/div.

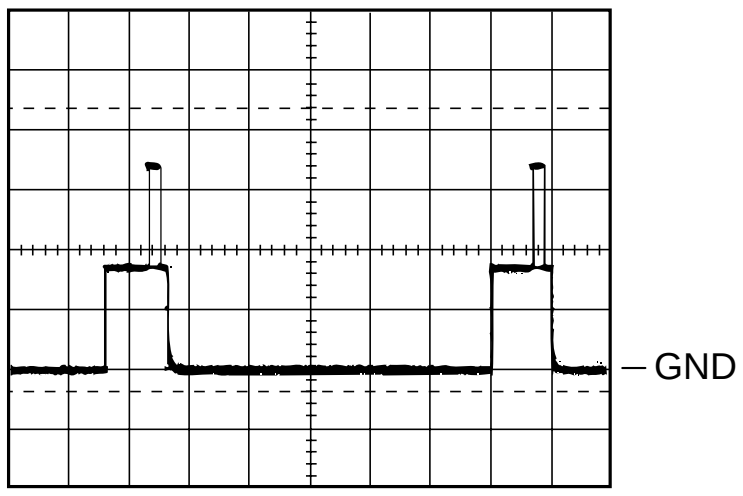

㉑-2 **CN7501-pin 35 (SCP0)**
V: 2V/div. H: 2msec/div.

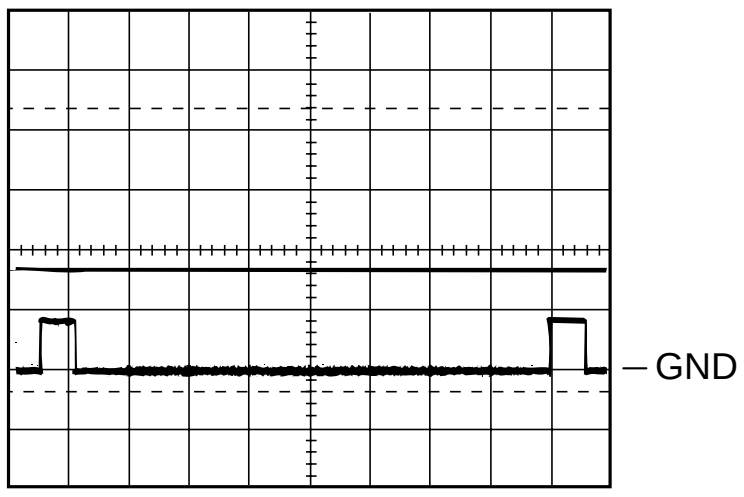

㉒ **CN7501-pin 1 (MCCY)**
V: 0.5V/div. H: 10µsec/div.

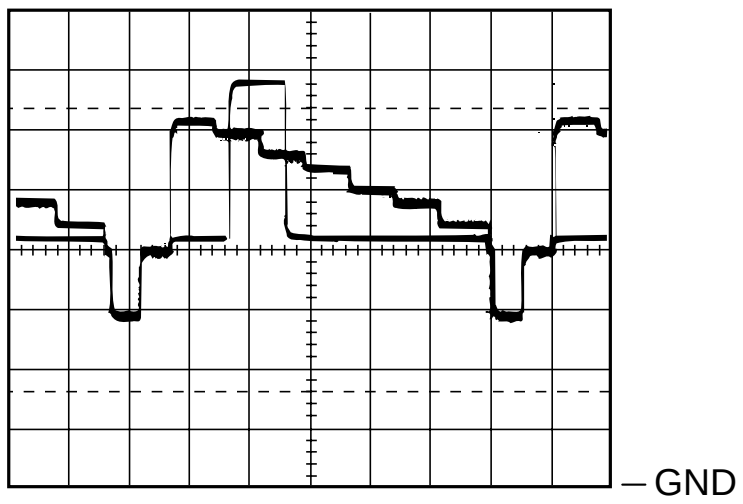

㉓ **CN7501-pin 2 (SCCY)**
V: 0.5V/div. H: 10µsec/div.

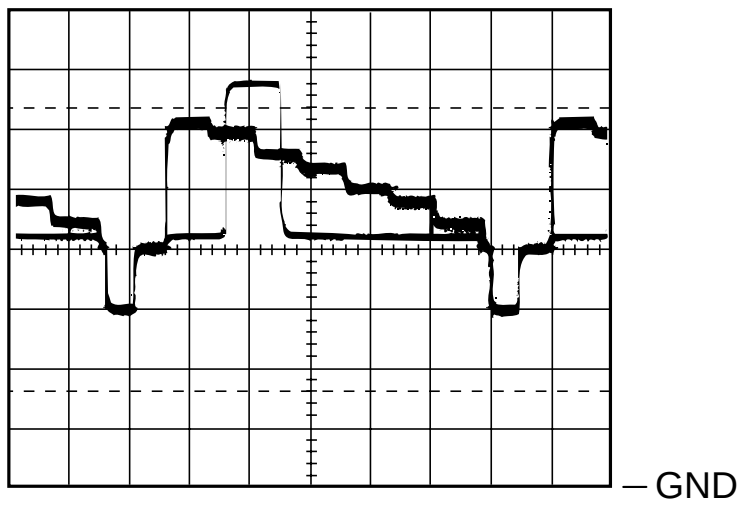

㉔ **CN7501-pin 26 (DYOUT)**
V: 1V/div. H: 10µsec/div.

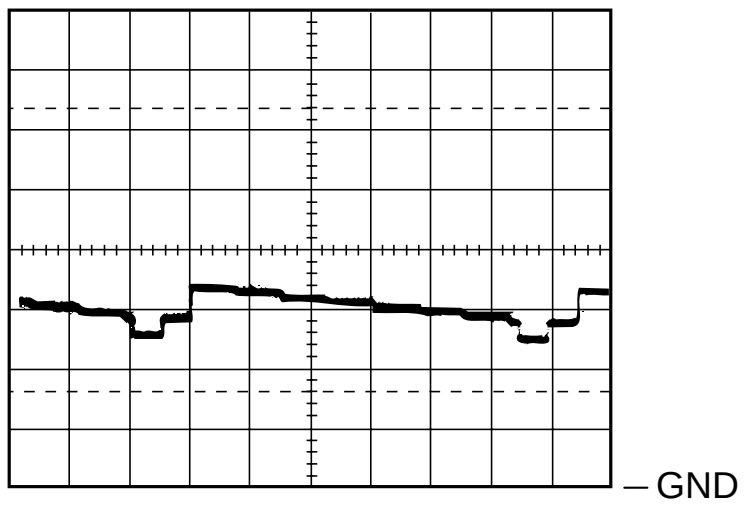

A 7/9 SIGNAL ASSY (7/9)

IC7502 (TK15420M)

Pin No.	Voltage (V)
1	3.8V at ped.
2	3.8V at ped.
3	3.8V at ped.
4	0
5	3.5V at ped.
6	3.5V at ped.
7	3.5V at ped.
8	9

IC7503 (MC14053BF)

Pin No.	Voltage (V)
1	3.65
2	3.65
3	3.65
4	3.65
5	3.65
6	0
7	0
8	0
9	0 (sprit-screens) 9.0 (single-screen)
10	0 (sprit-screens) 9.0 (single-screen)
11	0 (sprit-screens) 9.0 (single-screen)
12	3.65
13	3.65
14	3.65
15	3.65
16	9.0

3.10 SIGNAL ASSY (8/9)

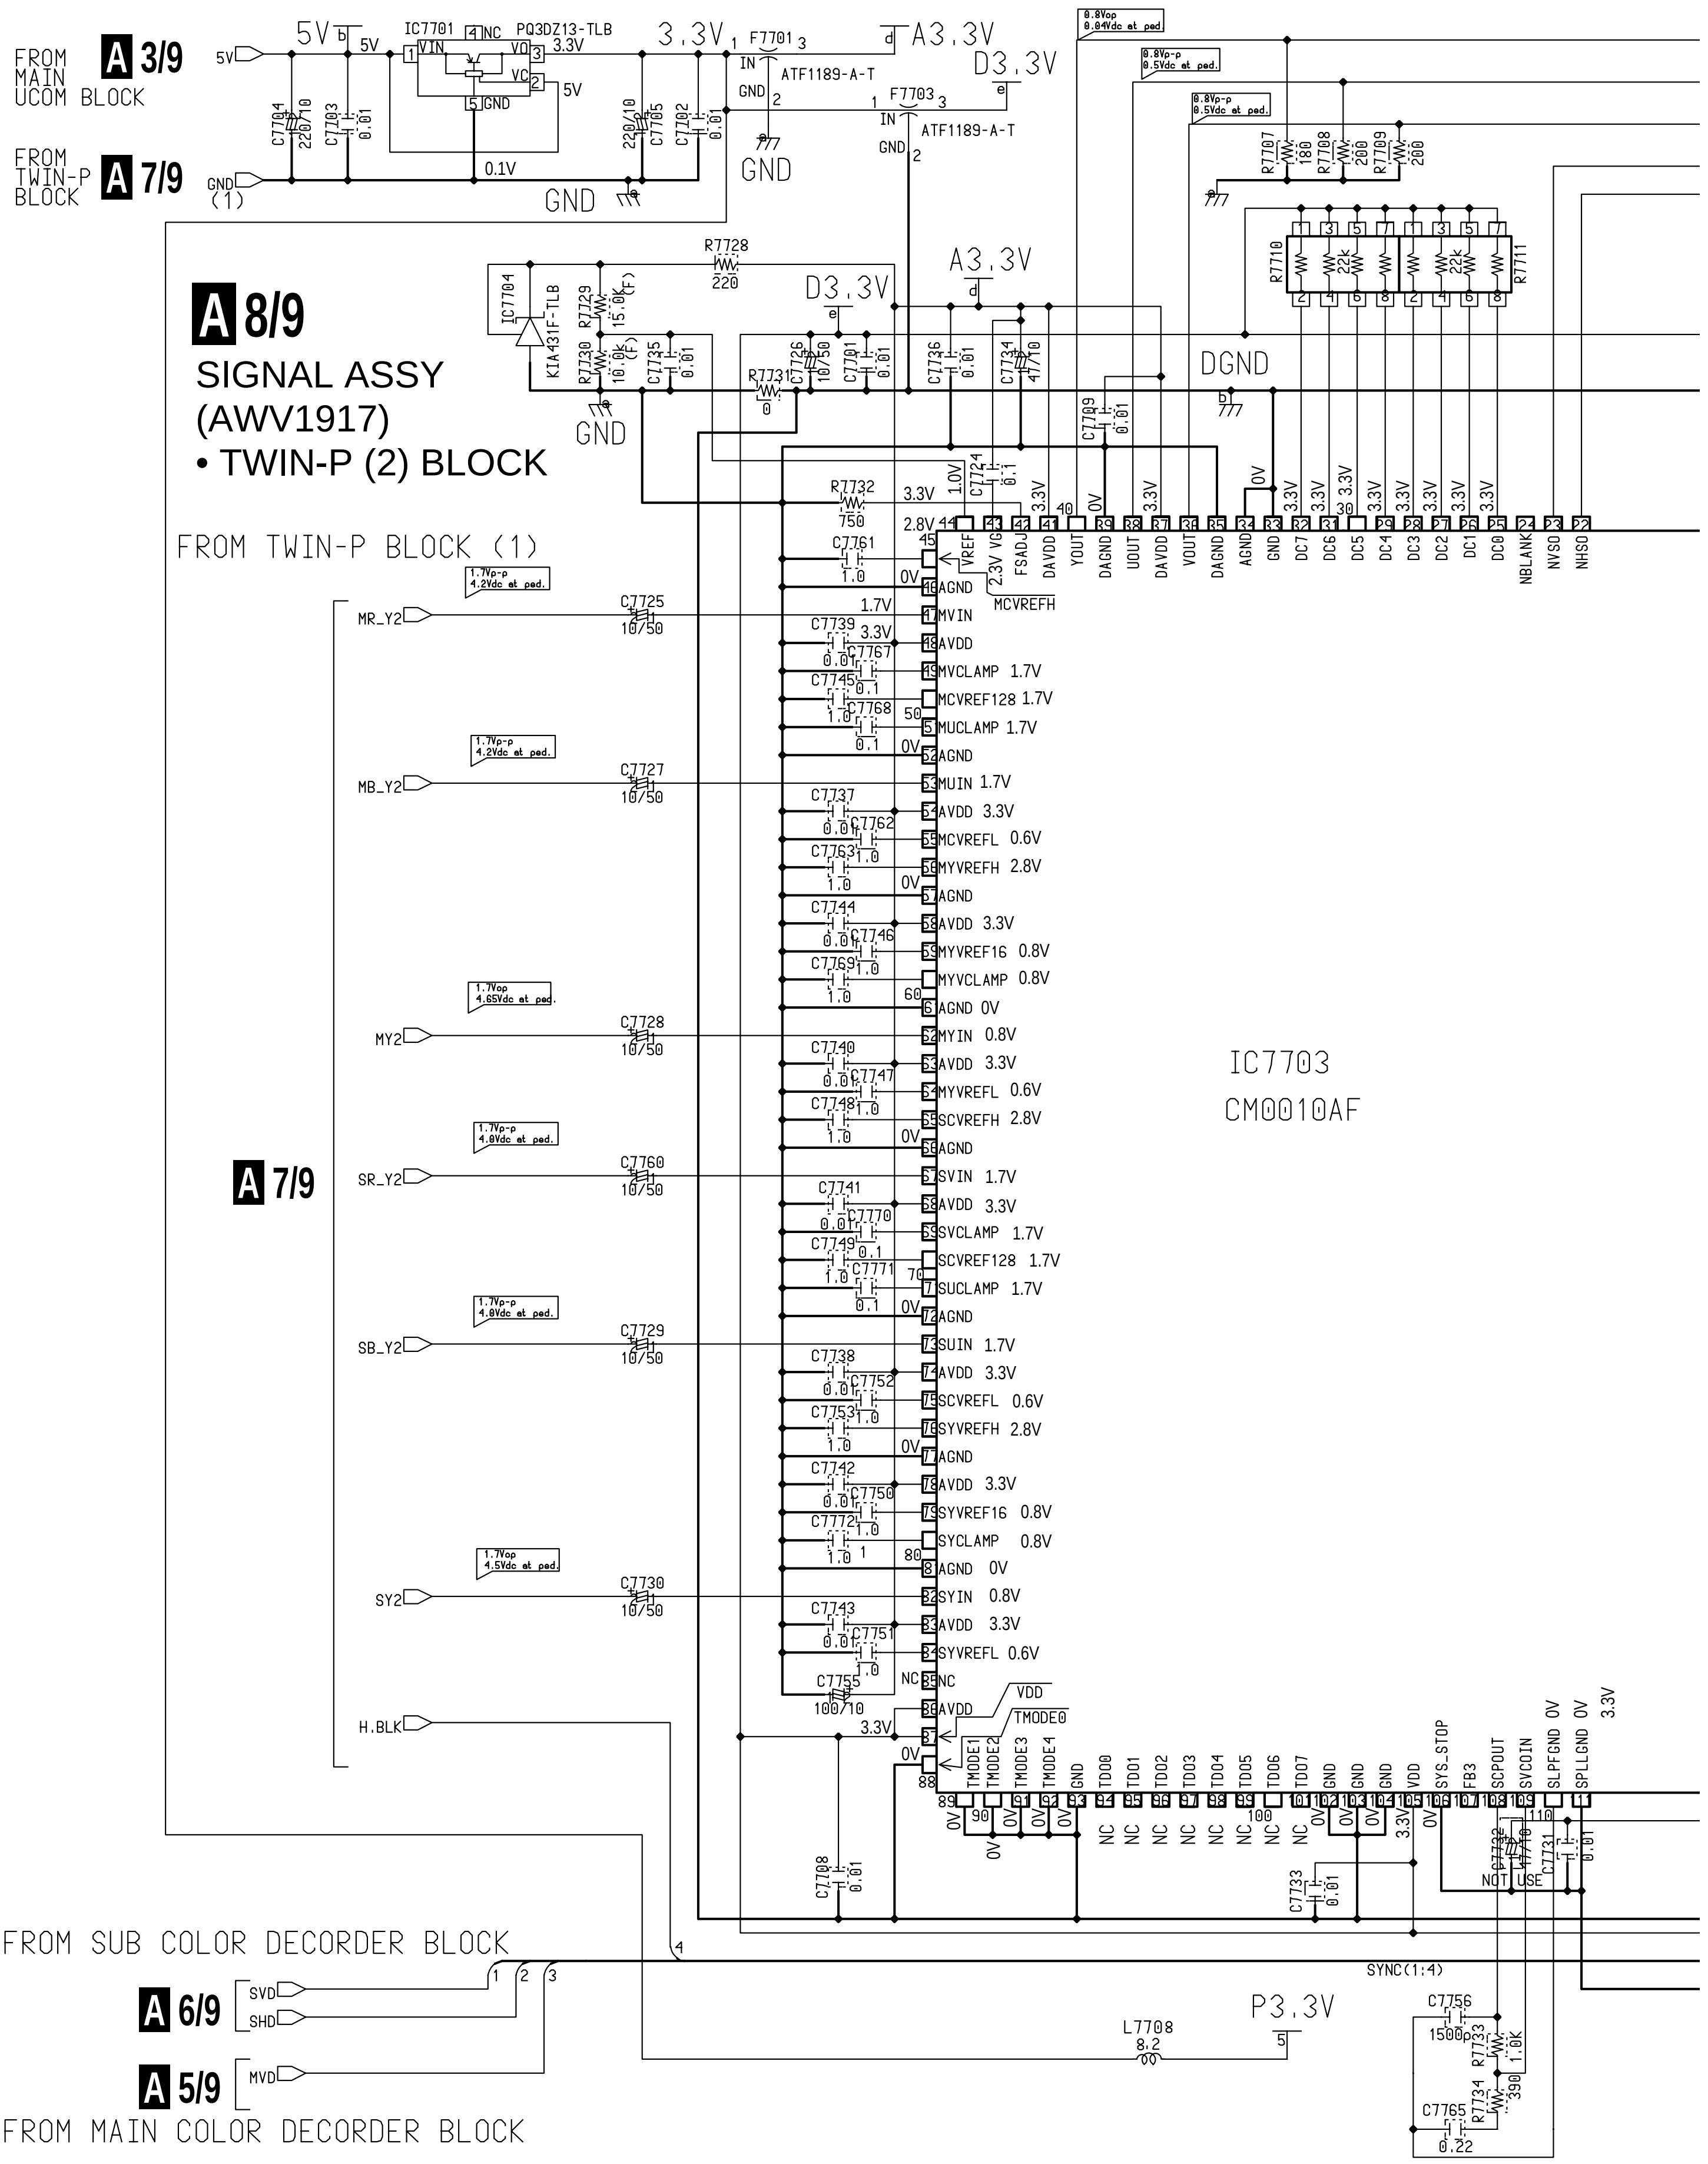
FROM MAIN UCOM BLOCK A 3/9
FROM TWIN-P BLOCK A 7/9
5V
GND (1)
IC7701 PQ3DZ13-TLB
VIN
VO
VC
NC
GND
3.3V
5V
0.1V
C7704 220/10
C7703 0.01
C7705 220/10
C7702 0.01
GND
F7701 ATF1189-A-T
F7703 ATF1189-A-T
IN
A3.3V
D3.3V
A 8/9
SIGNAL ASSY
(AWV1917)
• TWIN-P (2) BLOCK
IC7704 KIA431F-TLB
R7728 220
R7729 15.0K (F)
R7730 10.0K (F)
C7735 0.01
R7731 0
C7726 10/50
C7701 0.01
C7736 0.01
C7734 47/10
C7709 0.01
C7724 0.1
R7732 750
C7761 1.0
DGND
0.8Vop 0.84Vdc at ped.
0.8Vp-p 0.5Vdc at ped.
R7707 180
R7708 200
R7709 200
R7710 22k
R7711 22k
FROM TWIN-P BLOCK (1)
A 7/9
MR_Y2
MB_Y2
MY2
SR_Y2
SB_Y2
SY2
H.BLK
1.7Vp-p 4.2Vdc at ped.
1.7Vop 4.65Vdc at ped.
1.7Vp-p 4.0Vdc at ped.
1.7Vop 4.5Vdc at ped.
C7725 10/50
C7727 10/50
C7728 10/50
C7760 10/50
C7729 10/50
C7730 10/50
C7739 C7767 C7745 C7768 C7737 C7762 C7763 C7744 C7746 C7769 C7740 C7747 C7748 C7741 C7770 C7749 C7771 C7738 C7752 C7753 C7742 C7750 C7772 C7743 C7751
C7755 100/10
IC7703
CM0010AF
VREF VG FSADJ DAVDD YOUT DAGND UOUT DAVDD VOUT DAGND AGND GND DC7 DC6 DC5 DC4 DC3 DC2 DC1 DC0 NBLANK NVSO NHSO
AGND MVIN AVDD MVCLAMP MCVREF128 MUCLAMP AGND MUIN AVDD MCVREFL MYVREFH AGND AVDD MYVREF16 MYVCLAMP AGND MYIN AVDD MYVREFL SCVREFH AGND SVIN AVDD SVCLAMP SCVREF128 SUCLAMP AGND SUIN AVDD SCVREFL SYVREFH AGND AVDD SYVREF16 SYCLAMP AGND SYIN AVDD SYVREFL NC AVDD
MCVREFH
VDD
TMODE0
TMODE1 TMODE2 TMODE3 TMODE4 GND TDO0 TDO1 TDO2 TDO3 TDO4 TDO5 TDO6 TDO7 GND GND GND VDD SYS_STOP FB3 SCPOUT SVCOIN SLPFGND SPLLGND
C7708 0.01
C7733 0.01
C7732 47/10
C7731 0.1
NOT USE
FROM SUB COLOR DECORDER BLOCK
A 6/9
SVD
SHD
A 5/9
MVD
FROM MAIN COLOR DECORDER BLOCK
SYNC(1:4)
L7708 8.2
P3.3V
C7756 1500p
R7733 1.0K
R7734 390
C7765 0.22

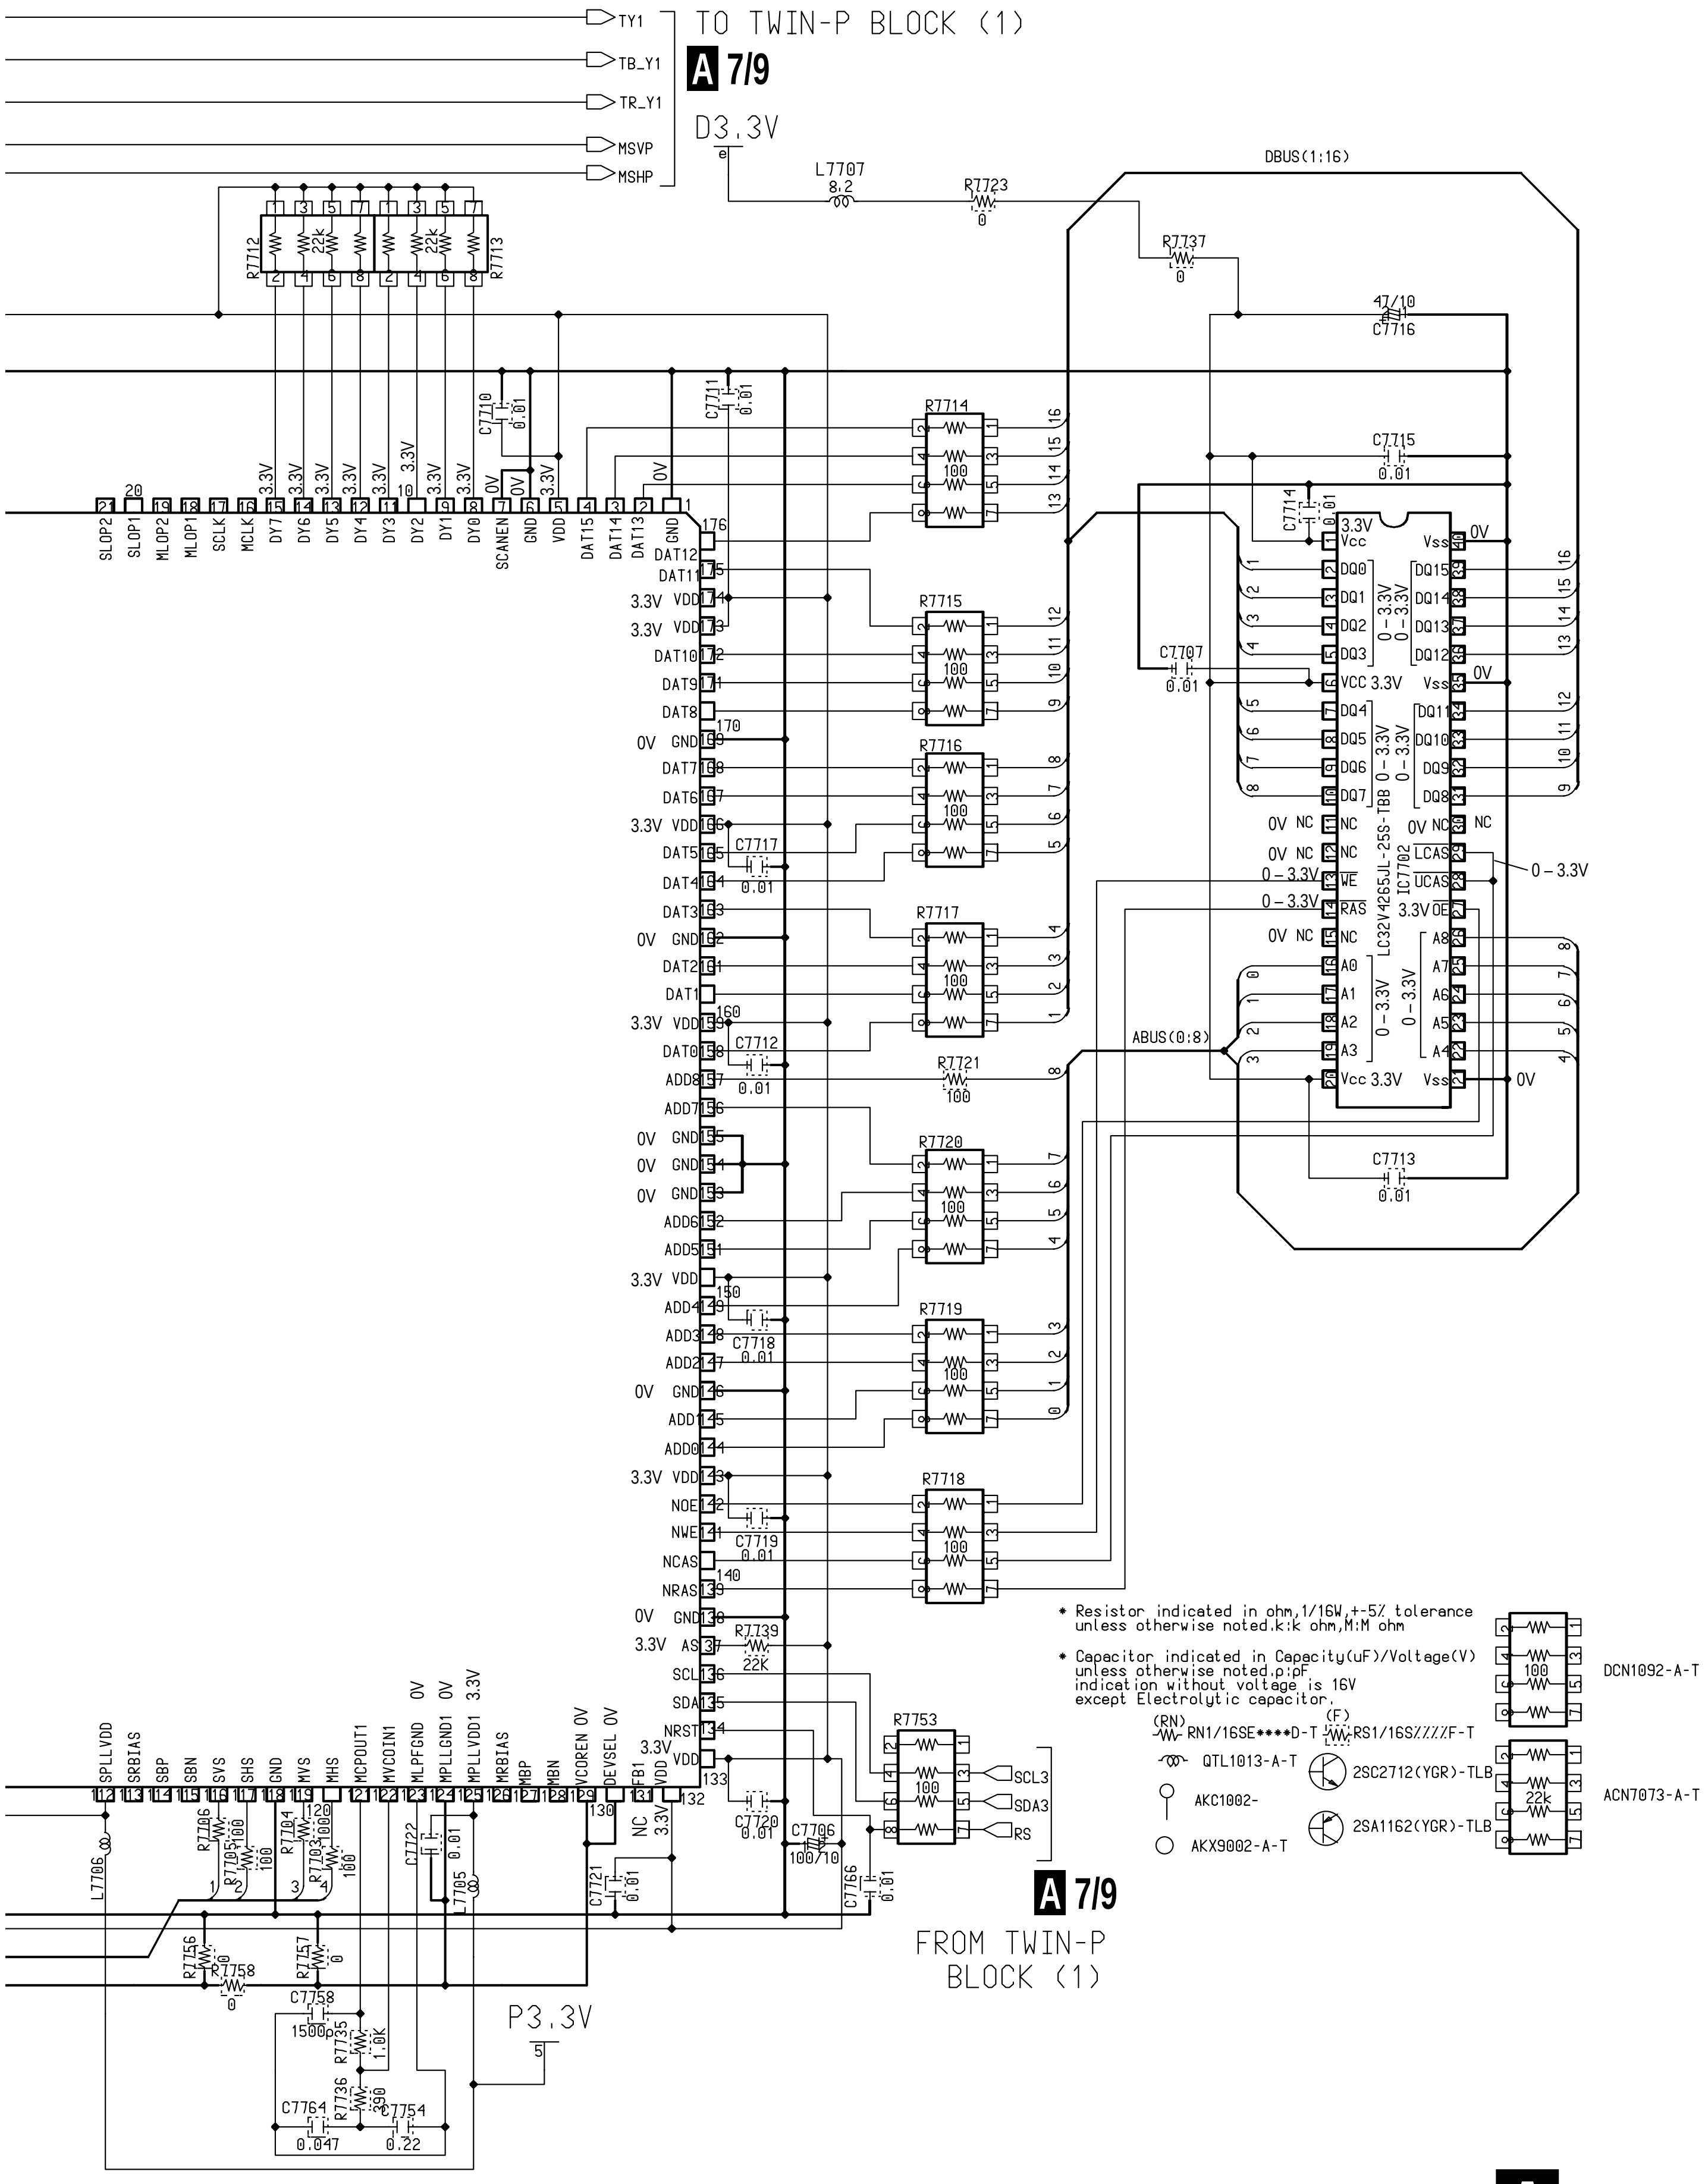
TY1
TB_Y1
TR_Y1
MSVP
MSHP
TO TWIN-P BLOCK (1)
A 7/9
D3.3V
L7707 8.2
R7723 0
DBUS(1:16)
R7737 0
47/10 C7716
R7712
R7713
22k
C7710 0.01
C7711 0.01
C7715 0.01
C7714 0.01
R7714 100
R7715 100
R7716 100
R7717 100
R7720 100
R7719 100
R7718 100
R7721 100
C7707 0.01
C7717 0.01
C7712 0.01
C7718 0.01
C7719 0.01
C7720 0.01
C7713 0.01
IC7702
LC32V4265JL-25S-TBB
3.3V Vcc
Vss 0V
DQ0 DQ1 DQ2 DQ3 DQ4 DQ5 DQ6 DQ7
DQ8 DQ9 DQ10 DQ11 DQ12 DQ13 DQ14 DQ15
0 – 3.3V
NC
WE
RAS
LCAS
UCAS
OE
A0 A1 A2 A3 A4 A5 A6 A7 A8
ABUS(0:8)
SLOP2 SLOP1 MLOP2 MLOP1 SCLK MCLK DY7 DY6 DY5 DY4 DY3 DY2 DY1 DY0 SCANEN GND VDD DAT15 DAT14 DAT13 GND
DAT12 DAT11 VDD VDD DAT10 DAT9 DAT8 GND DAT7 DAT6 VDD DAT5 DAT4 DAT3 GND DAT2 DAT1 VDD DAT0
ADD8 ADD7 GND GND GND ADD6 ADD5 VDD ADD4 ADD3 ADD2 GND ADD1 ADD0 VDD
NOE NWE NCAS NRAS GND AS SCL SDA NRST VDD
R7739 22K
R7753 100
SCL3
SDA3
RS
C7706 100/10
C7766 0.01
C7721 0.01
A 7/9
FROM TWIN-P BLOCK (1)
SPLLVDD SRBIAS SBP SBN SVS SHS GND MVS MHS MCPOUT1 MVCOIN1 MLPFGND MPLLGND1 MPLLVDD1 MRBIAS MBP MBN VCOREN DEVSEL FB1 VDD
NC
L7706
R7706 100
R7705 100
R7704 120
R7703 100
C7722 0.01
L7705
R7756 0
R7757 0
R7758 0
C7758 1500p
R7735 1.0K
R7736 390
C7764 0.047
C7754 0.22
P3.3V
• Resistor indicated in ohm,1/16W,+-5% tolerance unless otherwise noted.k:k ohm,M:M ohm
• Capacitor indicated in Capacity(uF)/Voltage(V) unless otherwise noted.p:pF indication without voltage is 16V except Electrolytic capacitor.
(RN) RN1/16SE****D-T
(F) RS1/16S%%%%F-T
QTL1013-A-T
2SC2712(YGR)-TLB
AKC1002-
2SA1162(YGR)-TLB
AKX9002-A-T
DCN1092-A-T
ACN7073-A-T

3.11 SIGNAL ASSY (9/9)

A 9/9 SIGNAL ASSY (AWV1917)
• COMPONENT BLOCK

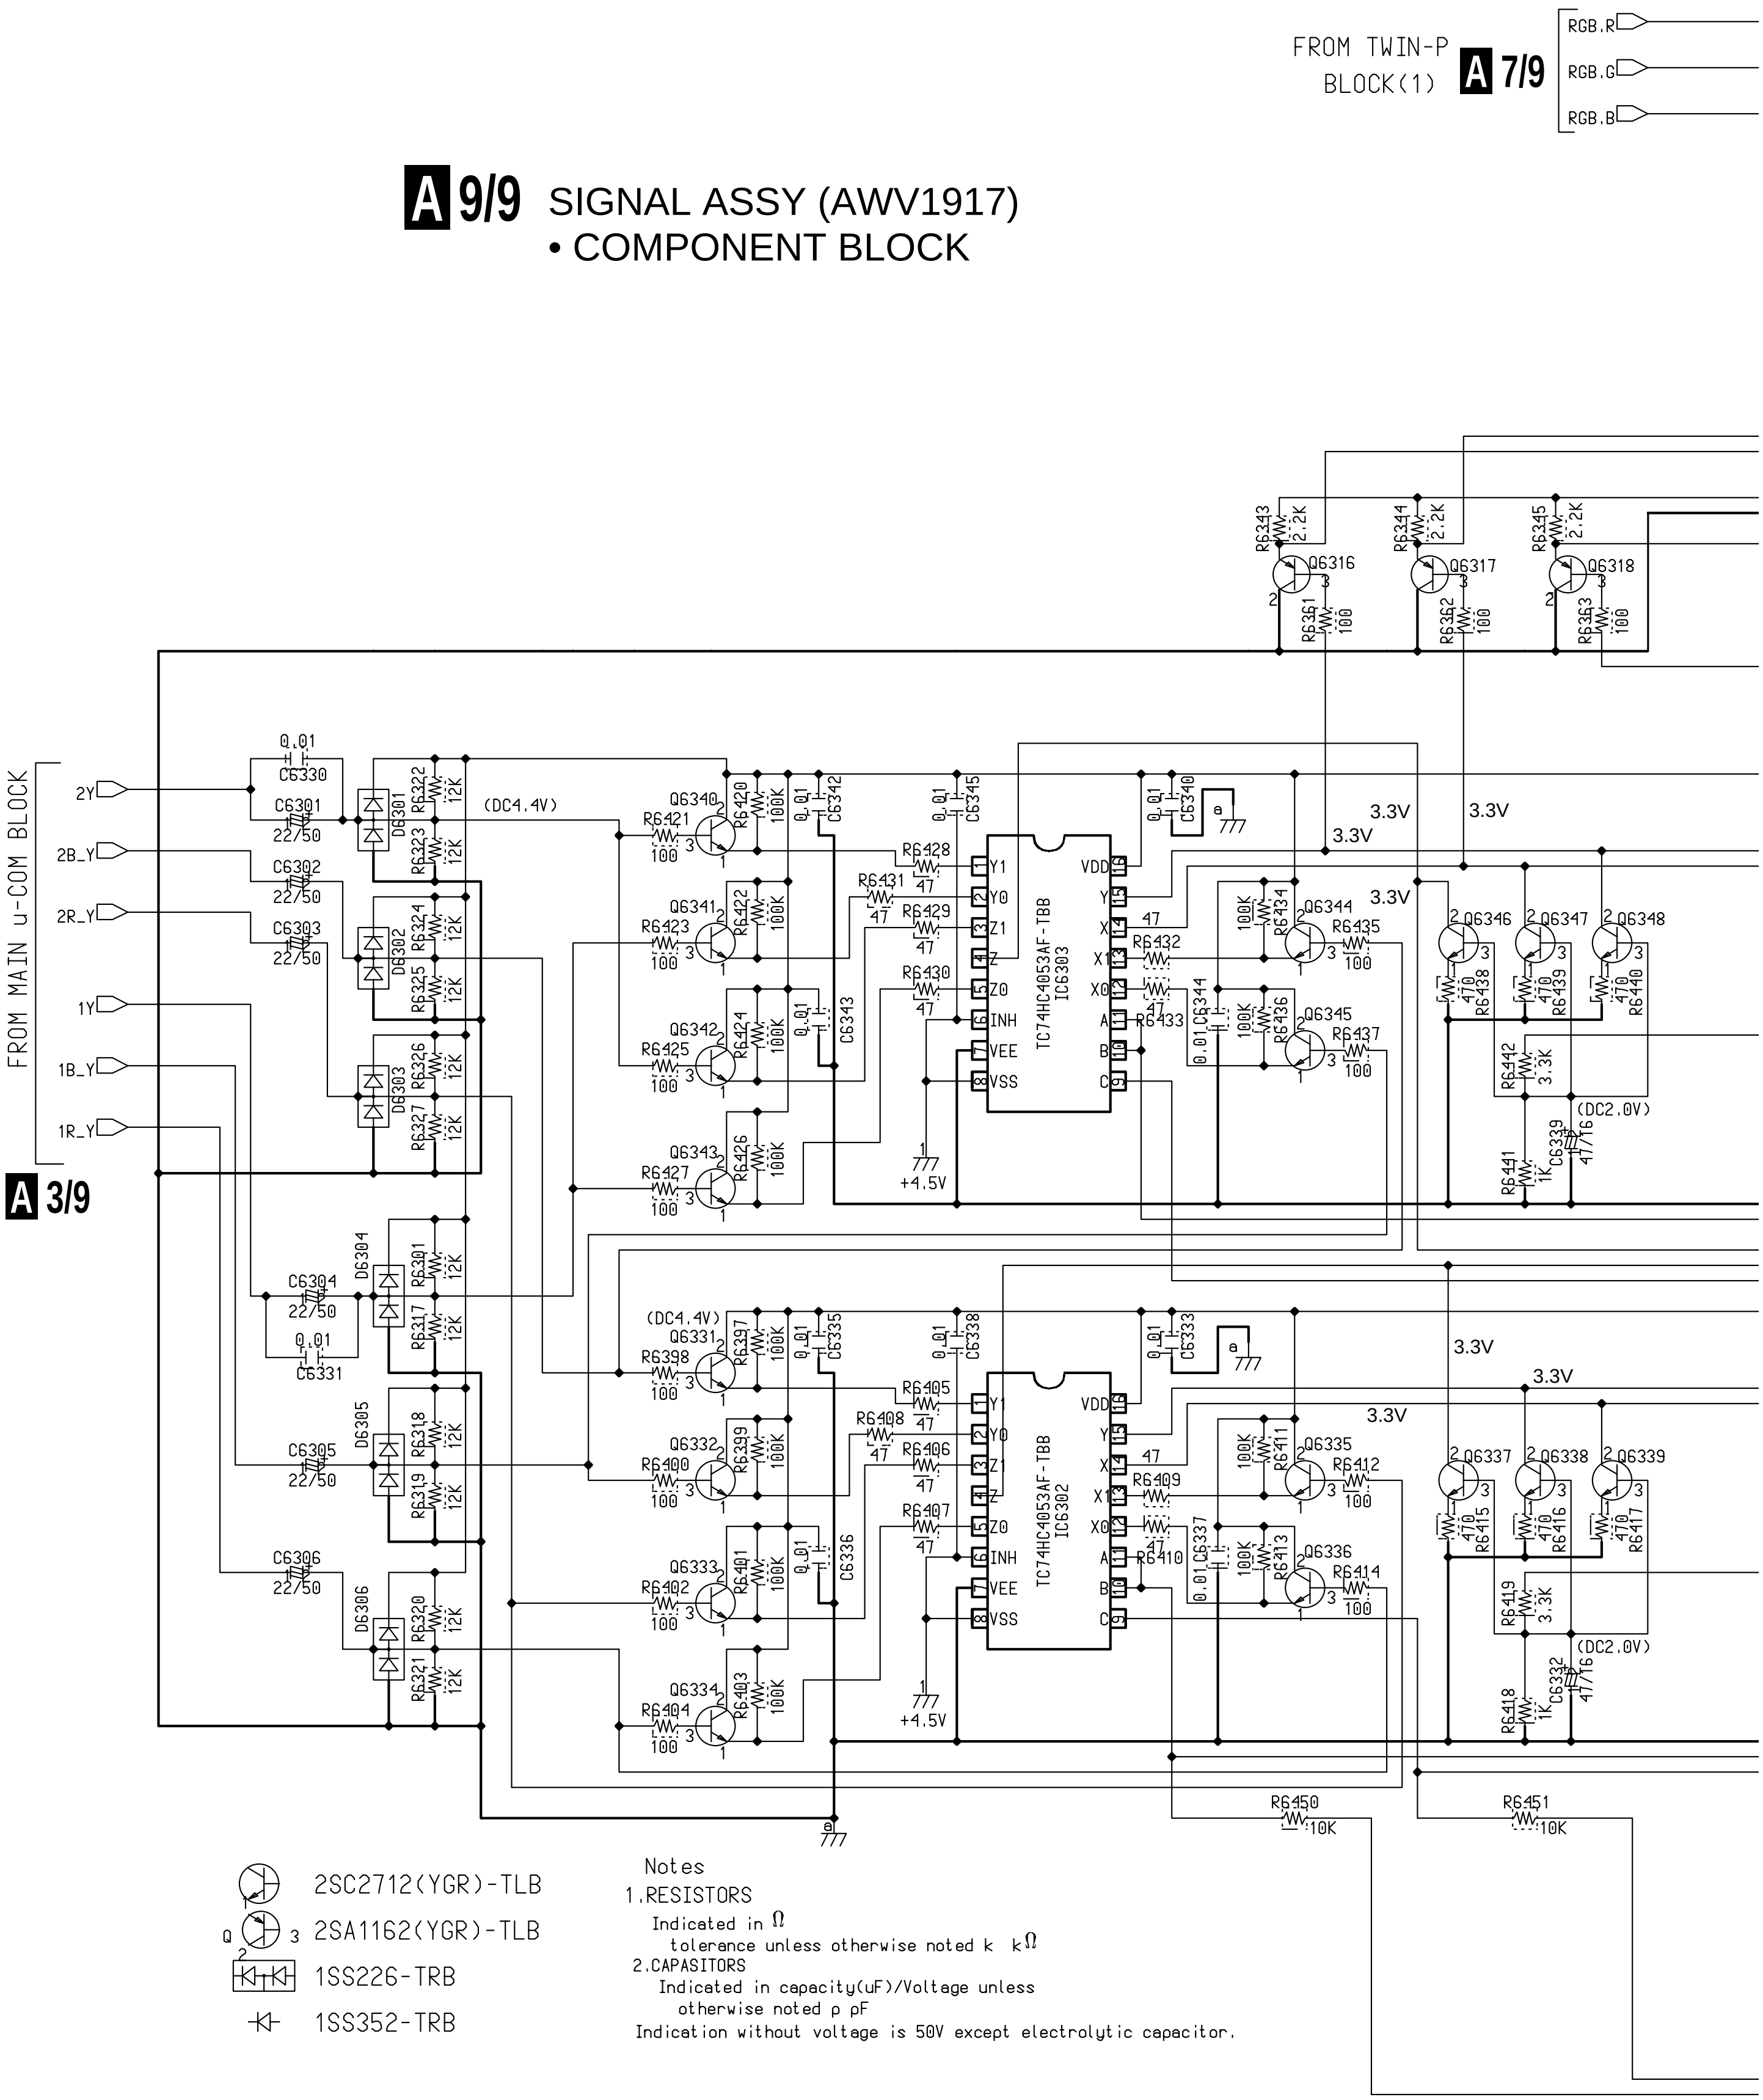
A
B
C
D
FROM TWIN-P BLOCK(1)
A 7/9
RGB.R
RGB.G
RGB.B
R6343 2.2K
R6344 2.2K
R6345 2.2K
Q6316
Q6317
Q6318
R6361 100
R6362 100
R6363 100
FROM MAIN u-COM BLOCK
2Y
2B_Y
2R_Y
1Y
1B_Y
1R_Y
A 3/9
0.01 C6330
C6301 22/50
C6302 22/50
C6303 22/50
D6301
D6302
D6303
R6322 12K
R6323 12K
R6324 12K
R6325 12K
R6326 12K
R6327 12K
(DC4.4V)
Q6340
R6421 100
R6420 100K
0.01 C6342
Q6341
R6423 100
R6422 100K
Q6342
R6425 100
R6424 100K
0.01 C6343
Q6343
R6427 100
R6426 100K
R6428 47
R6431 47
R6429 47
R6430 47
0.01 C6345
+4.5V
TC74HC4053AF-TBB
IC6303
Y1
Y0
Z1
Z
Z0
INH
VEE
VSS
VDD
Y
X
X1
X0
A
B
C
0.01 C6340
47
R6432 47
R6433 47
0.01 C6344
100K R6434
Q6344
R6435 100
100K R6436
Q6345
R6437 100
3.3V
Q6346
Q6347
Q6348
470 R6438
470 R6439
470 R6440
R6442 3.3K
(DC2.0V)
R6441 1K
C6339 47/16
C6304 22/50
0.01 C6331
D6304
R6301 12K
R6317 12K
D6305
C6305 22/50
R6318 12K
R6319 12K
C6306 22/50
D6306
R6320 12K
R6321 12K
(DC4.4V)
Q6331
R6398 100
R6397 100K
0.01 C6335
Q6332
R6400 100
R6399 100K
Q6333
R6402 100
R6401 100K
0.01 C6336
Q6334
R6404 100
R6403 100K
R6405 47
R6408 47
R6406 47
R6407 47
0.01 C6338
+4.5V
TC74HC4053AF-TBB
IC6302
0.01 C6333
47
R6409 47
R6410 47
0.01 C6337
100K R6411
Q6335
R6412 100
100K R6413
Q6336
R6414 100
3.3V
Q6337
Q6338
Q6339
470 R6415
470 R6416
470 R6417
R6419 3.3K
(DC2.0V)
R6418 1K
C6332 47/16
R6450 10K
R6451 10K
2SC2712(YGR)-TLB
2SA1162(YGR)-TLB
1SS226-TRB
1SS352-TRB

Notes
1.RESISTORS
Indicated in Ω
tolerance unless otherwise noted k kΩ
2.CAPASITORS
Indicated in capacity(uF)/Voltage unless
otherwise noted ρ pF
Indication without voltage is 50V except electrolytic capacitor.

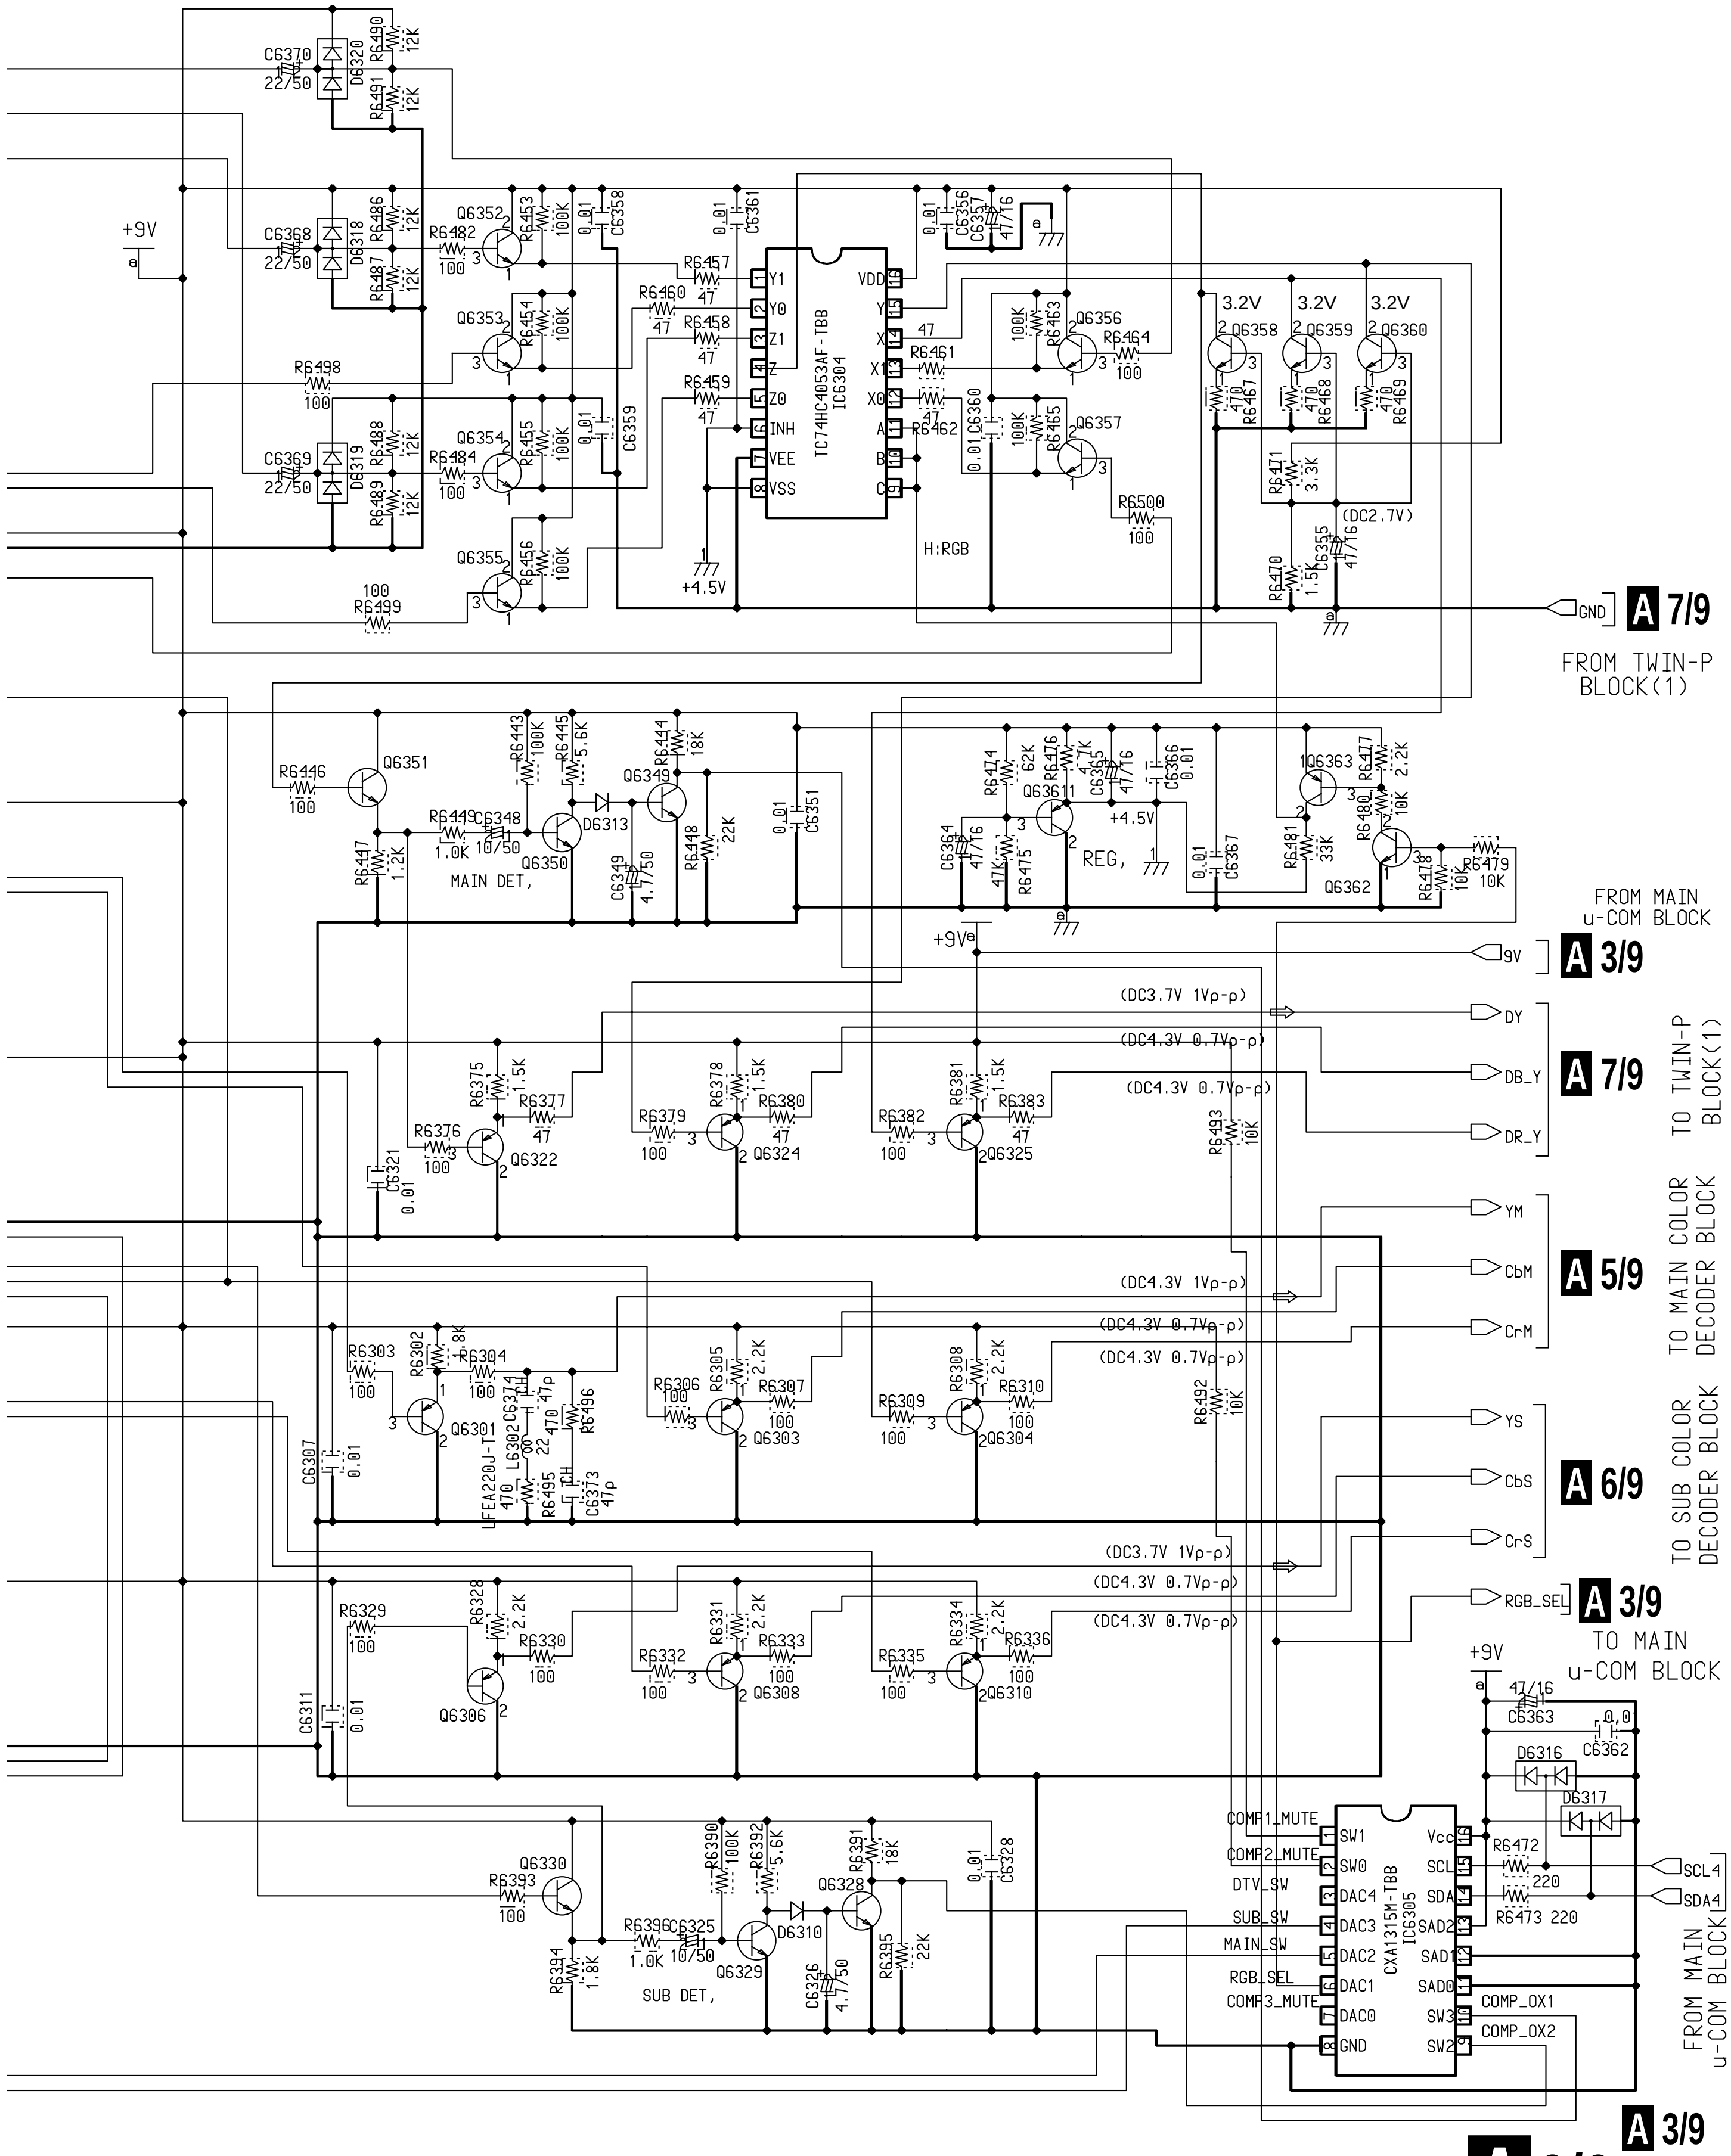
A
B
C
D
C6370 22/50
D6320
R6490 12K
R6491 12K
+9V
C6368 22/50
D6318
R6486 12K
R6487 12K
R6482 100
Q6352
R6453 100K
0.01 C6358
R6498 100
Q6353
R6454 100K
C6369 22/50
D6319
R6488 12K
R6489 12K
R6484 100
Q6354
R6455 100K
0.01 C6359
Q6355
R6456 100K
100 R6499
0.01 C6361
R6457 47
R6460 47
R6458 47
R6459 47
Y1
Y0
Z1
Z
Z0
INH
VEE
VSS
VDD
Y
X
X1
X0
A
B
C
TC74HC4053AF-TBB
IC6304
+4.5V
H:RGB
0.01 C6356
C6357 47/16
47
R6461
R6462 47
0.01 C6360
100K R6463
Q6356
R6464 100
100K R6465
Q6357
R6500 100
3.2V
Q6358
Q6359
Q6360
R6467 470
R6468 470
R6469 470
R6471 3.3K
(DC2.7V)
R6470 1.5K
C6355 47/16
GND
A 7/9
FROM TWIN-P BLOCK(1)
R6446 100
Q6351
R6447 1.2K
R6443 100K
R6445 5.6K
R6449 1.0K
C6348 10/50
Q6350
D6313
MAIN DET,
C6349 4.7/50
R6444 18K
Q6349
R6448 22K
0.01 C6351
R6474 62K
R6476 4.7K
C6365 47/16
0.01 C6366
Q6361
+4.5V
C6364 47/16
47K R6475
REG,
0.01 C6367
Q6363
R6477 2.2K
R6480 10K
R6481 33K
Q6362
R6478 10K
R6479 10K
FROM MAIN u-COM BLOCK
+9V
9V
A 3/9
(DC3.7V 1Vp-p)
(DC4.3V 0.7Vp-p)
DY
DB_Y
DR_Y
A 7/9
TO TWIN-P BLOCK(1)
R6375 1.5K
R6377 47
R6376 100
Q6322
C6321 0.01
R6379 100
R6378 1.5K
R6380 47
Q6324
R6382 100
R6381 1.5K
R6383 47
Q6325
R6493 10K
YM
CbM
CrM
A 5/9
TO MAIN COLOR DECODER BLOCK
(DC4.3V 1Vp-p)
R6303 100
R6302 1.8K
R6304 100
Q6301
C6374 47p
L6302 22
R6496 470
LFEA220J-T
R6495 470
C6373 47p
R6306 100
R6305 2.2K
R6307 100
Q6303
R6309 100
R6308 2.2K
R6310 100
Q6304
R6492 10K
C6307 0.01
YS
CbS
CrS
A 6/9
TO SUB COLOR DECODER BLOCK
R6329 100
R6328 2.2K
R6330 100
Q6306
R6332 100
R6331 2.2K
R6333 100
Q6308
R6335 100
R6334 2.2K
R6336 100
Q6310
C6311 0.01
RGB_SEL
A 3/9
TO MAIN u-COM BLOCK
+9V
47/16 C6363
0.01 C6362
D6316
D6317
Q6330
R6393 100
R6394 1.8K
R6396 1.0K
C6325 10/50
R6390 100K
R6392 5.6K
Q6329
D6310
SUB DET,
C6326 4.7/50
R6391 18K
Q6328
R6395 22K
0.01 C6328
COMP1_MUTE
COMP2_MUTE
DTV_SW
SUB_SW
MAIN_SW
RGB_SEL
COMP3_MUTE
SW1
SW0
DAC4
DAC3
DAC2
DAC1
DAC0
GND
Vcc
SCL
SDA
SAD2
SAD1
SAD0
SW3
SW2
CXA1315M-TBB
IC6305
R6472 220
R6473 220
SCL4
SDA4
COMP_OX1
COMP_OX2
FROM MAIN u-COM BLOCK
A 3/9

A 9/9

3.12 AV I/O (1/2) and BNC ASSYS

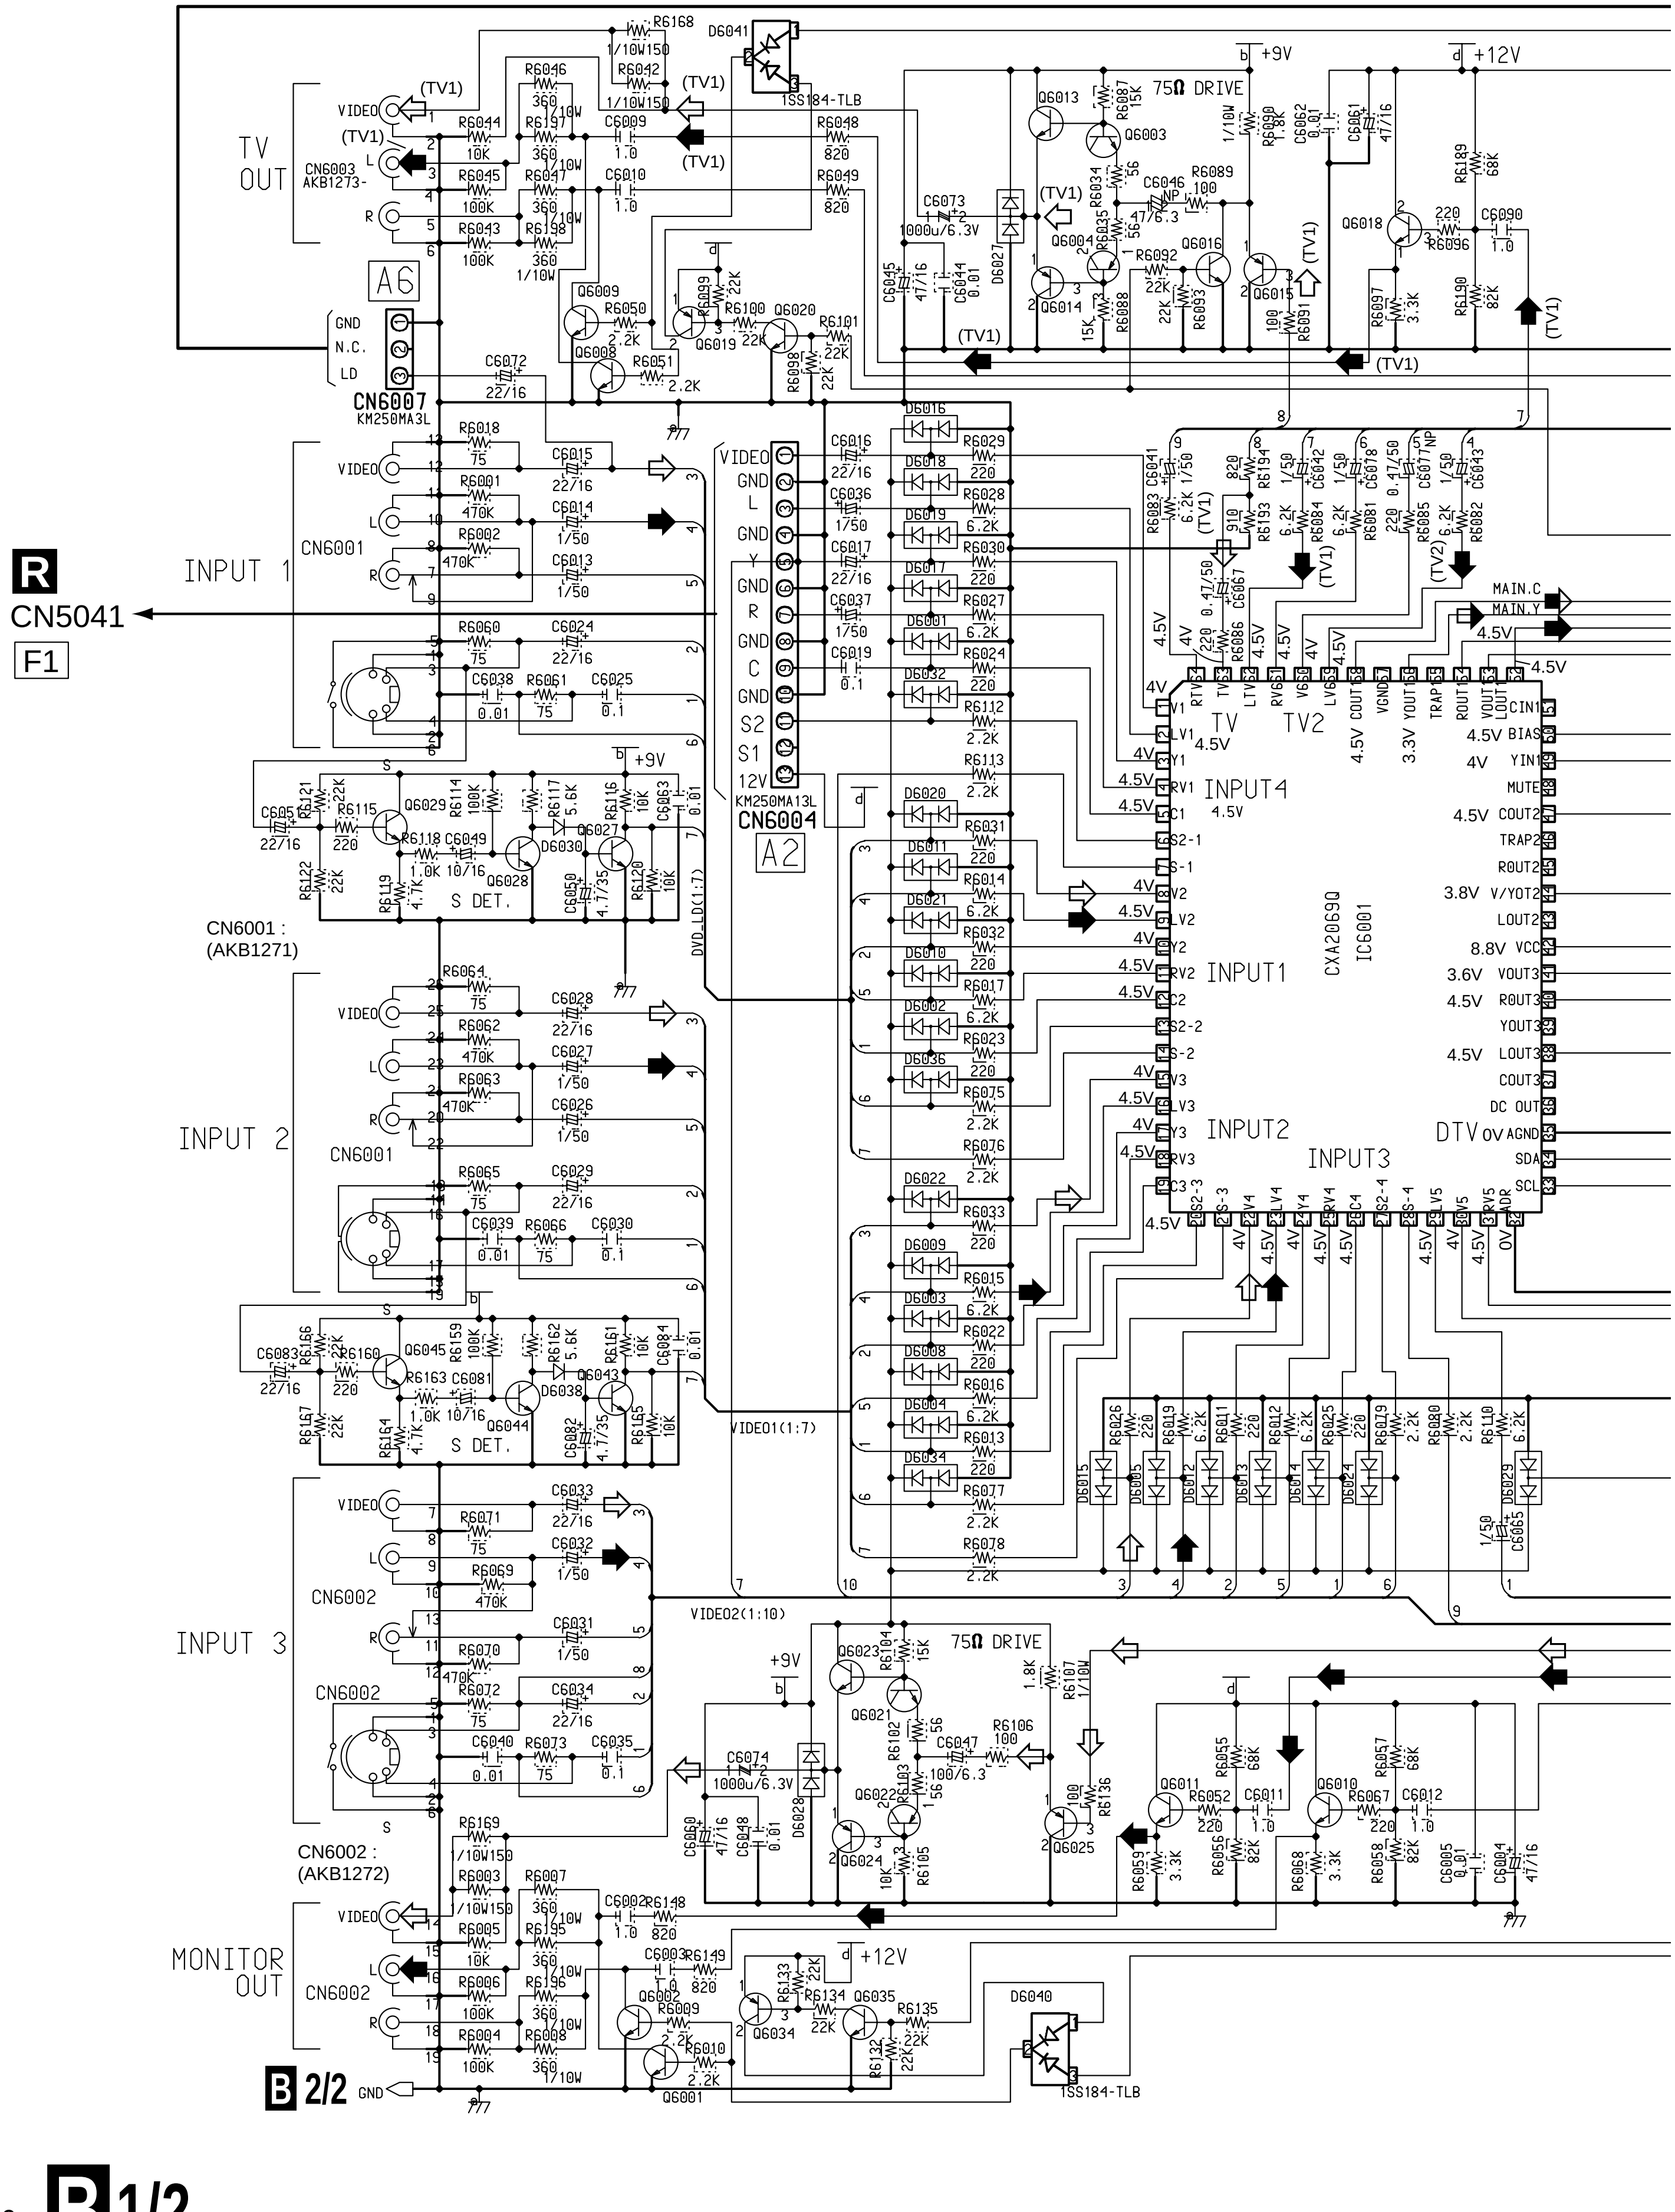
TV OUT
CN6003 AKB1273-
VIDEO
L
R
(TV1)
A6
CN6007 KM250MA3L
GND
N.C.
LD
D6041
1SS184-TLB
R6168
R6046
R6042
R6197
R6047
R6198
R6044 10K
R6045 100K
R6043 100K
C6009 1.0
C6010 1.0
R6048 820
R6049 820
Q6009
Q6008
Q6019
Q6020
R6050 2.2K
R6051 2.2K
R6099 22K
R6100 22K
R6101 22K
R6098 22K
C6072 22/16
Q6013
Q6003
Q6004
Q6014
Q6016
Q6015
Q6018
75Ω DRIVE
+9V
+12V
C6073 1000u/6.3V
D6027
C6045 47/16
C6044 0.01
C6046 47/6.3 NP
R6089 100
R6092 22K
R6090 1.8K
C6062 0.01
C6061 47/16
R6189 68K
R6190 82K
R6097 3.3K
C6090 1.0
R6096 220
R
CN5041
F1
INPUT 1
CN6001
R6018 75
R6001 470K
R6002 470K
C6015 22/16
C6014 1/50
C6013 1/50
R6060 75
C6024 22/16
C6038 0.01
R6061 75
C6025 0.1
Q6029
Q6028
Q6027
D6030
S DET.
R6115 220
R6118 1.0K
C6049 10/16
R6117 5.6K
C6050 4.7/35
CN6001 : (AKB1271)
DVD_LD(1:7)
CN6004 KM250MA13L
A2
VIDEO
GND
L
GND
Y
GND
R
GND
C
GND
S2
S1
12V
D6016
D6018
D6019
D6017
D6001
D6032
D6020
D6011
D6021
D6010
D6002
D6036
D6022
D6009
D6003
D6008
D6004
D6034
INPUT 2
CN6001
R6064 75
R6062 470K
R6063 470K
C6028 22/16
C6027 1/50
C6026 1/50
R6065 75
C6029 22/16
C6039 0.01
R6066 75
C6030 0.1
Q6045
Q6044
Q6043
D6038
S DET.
VIDEO1(1:7)
INPUT 3
CN6002
R6071 75
R6069 470K
R6070 470K
R6072 75
C6033 22/16
C6032 1/50
C6031 1/50
C6034 22/16
C6040 0.01
R6073 75
C6035 0.1
CN6002 : (AKB1272)
VIDEO2(1:10)
IC6001
CXA2069Q
TV
TV2
INPUT4
INPUT1
INPUT2
INPUT3
DTV
MAIN.C
MAIN.Y
CIN1
BIAS
YIN1
MUTE
COUT2
TRAP2
ROUT2
V/YOT2
LOUT2
VCC
VOUT3
ROUT3
YOUT3
LOUT3
COUT3
DC OUT
AGND
SDA
SCL
RTV
TV
LTV
RV6
V6
LV6
COUT
VGND
YOUT
TRAP
ROUT
VOUT
LOUT
4.5V
3.3V
3.8V
8.8V
3.6V
0V
4V
(TV2)
D6015
D6005
D6012
D6013
D6014
D6024
D6029
C6065 1/50
Q6023
Q6021
Q6022
Q6024
Q6025
Q6011
Q6010
C6074 1000u/6.3V
D6028
C6047 100/6.3
R6106 100
R6107 1.8K 1/10W
C6060 47/16
C6048 0.01
C6011 1.0
C6012 1.0
C6005 0.01
C6004 47/16
MONITOR OUT
CN6002
R6169 1/10W150
R6003 1/10W150
R6005 10K
R6006 100K
R6004 100K
R6007 360
R6195 360
R6196 360
R6008 360
C6002 1.0
R6148 820
C6003 1.0
R6149 820
Q6002
Q6001
R6009 2.2K
R6010 2.2K
Q6034
Q6035
R6133 22K
R6134 22K
R6135 22K
R6132 22K
D6040
1SS184-TLB
B 2/2
GND

B 1/2 AV I/O ASSY (AWV1919)
• AV I/O BLOCK

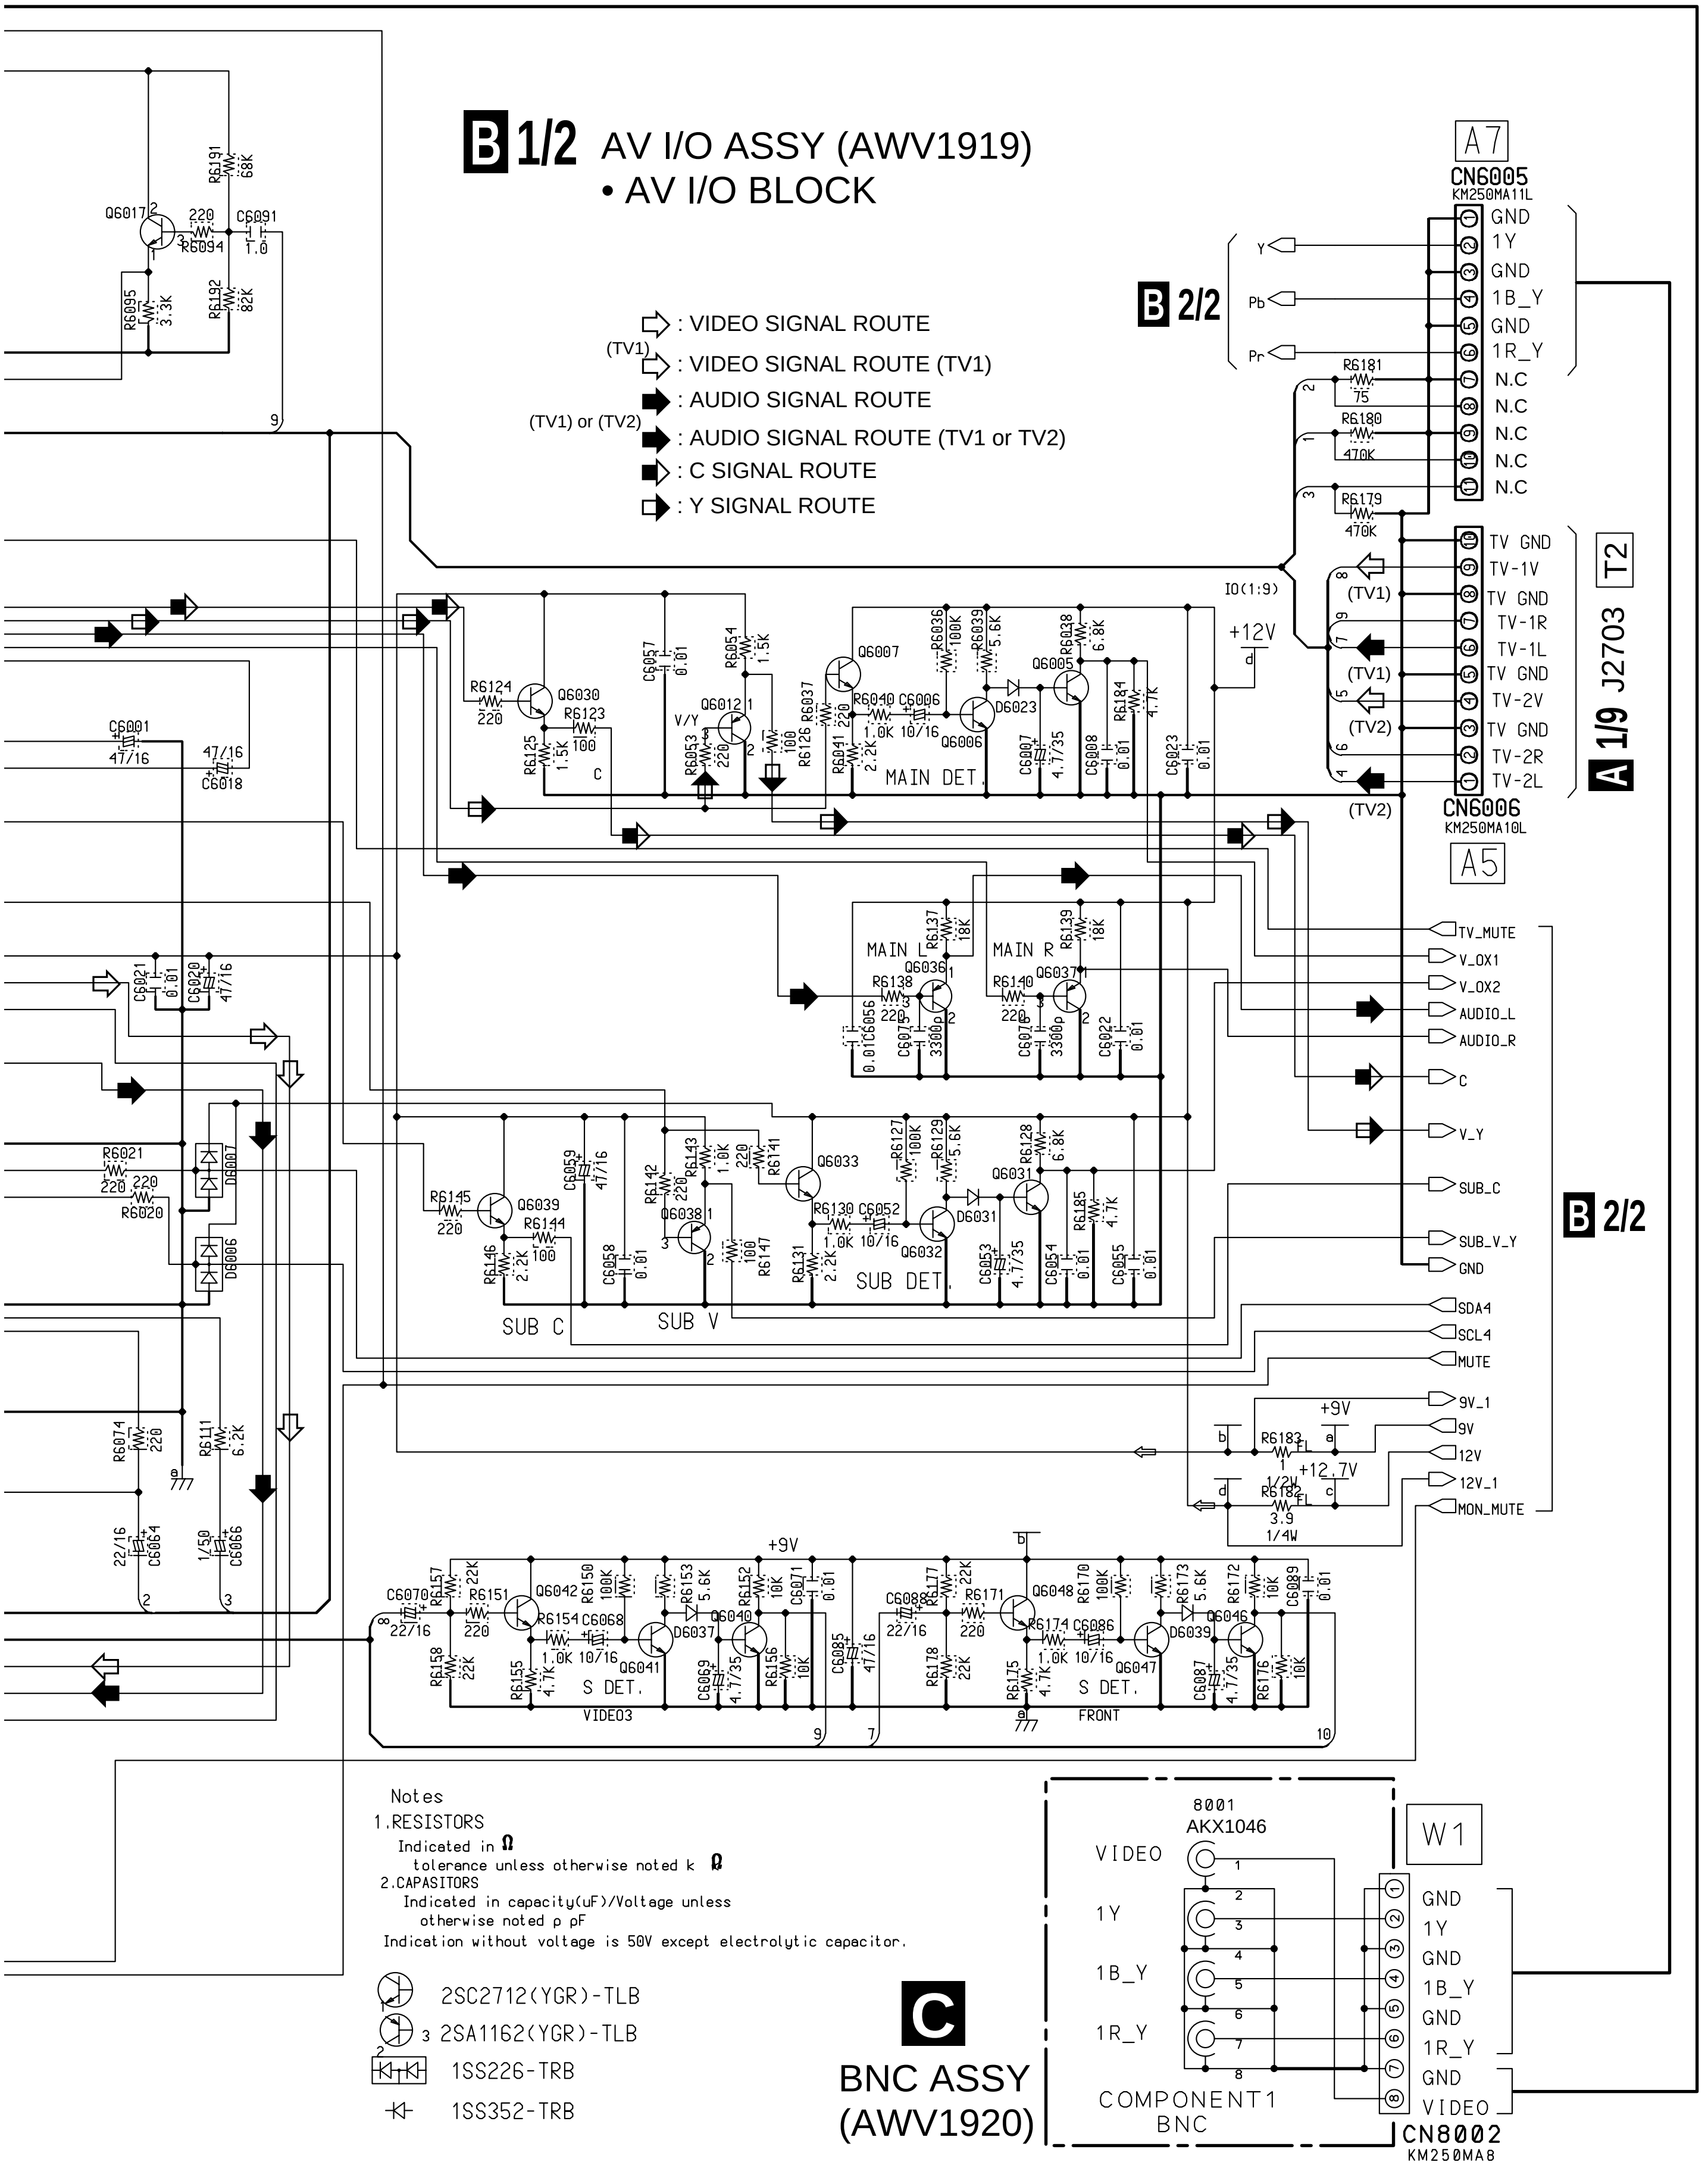
: VIDEO SIGNAL ROUTE
(TV1) : VIDEO SIGNAL ROUTE (TV1)
: AUDIO SIGNAL ROUTE
(TV1) or (TV2) : AUDIO SIGNAL ROUTE (TV1 or TV2)
: C SIGNAL ROUTE
: Y SIGNAL ROUTE
A7
CN6005
KM250MA11L
GND
1Y
GND
1B_Y
GND
1R_Y
N.C
N.C
N.C
N.C
N.C
B 2/2
Y
Pb
Pr
R6181 75
R6180 470K
R6179 470K
TV GND
TV-1V
TV GND
TV-1R
TV-1L
TV GND
TV-2V
TV GND
TV-2R
TV-2L
(TV1)
(TV2)
T2
J2703
A 1/9
CN6006
KM250MA10L
A5
IO(1:9)
+12V
Q6017
R6191 68K
R6094 220
C6091 1.0
R6095 3.3K
R6192 82K
C6001 47/16
C6018 47/16
R6124 220
Q6030
R6123 100
R6125 1.5K
C6057 0.01
R6054 1.5K
Q6012
V/Y
R6053 220
R6037 100
R6126
Q6007
R6036 100K
R6039 5.6K
R6040 1.0K
C6006 10/16
R6041 2.2K
Q6006
D6023
R6038 6.8K
Q6005
R6184 4.7K
C6007 4.7/35
C6008 0.01
C6023 0.01
MAIN DET.
C
MAIN L
R6137 18K
Q6036
R6138 220
C6056 0.01
C6079 3300p
MAIN R
R6139 18K
Q6037
R6140 220
C6080 3300p
C6022 0.01
C6021 0.01
C6020 47/16
TV_MUTE
V_OX1
V_OX2
AUDIO_L
AUDIO_R
C
V_Y
SUB_C
SUB_V_Y
GND
SDA4
SCL4
MUTE
9V_1
9V
12V
12V_1
MON_MUTE
B 2/2
R6021 220
R6020 220
D6007
D6006
R6145 220
Q6039
R6144 100
R6146 2.2K
C6059 47/16
C6058 0.01
R6142 220
R6143 1.0K
Q6038
R6141 220
R6147 100
Q6033
R6127 100K
R6129 5.6K
R6130 1.0K
C6052 10/16
R6131 2.2K
Q6032
D6031
R6128 6.8K
Q6031
R6185 4.7K
C6053 4.7/35
C6054 0.01
C6055 0.01
SUB C
SUB V
SUB DET.
+9V
R6183 FL 1 1/2W
+12.7V
R6182 FL 3.9 1/4W
R6074 220
R6111 6.2K
C6064 22/16
C6066 1/50
+9V
C6070 22/16
R6157 22K
R6151 220
Q6042
R6150 100K
R6154 1.0K
C6068 10/16
R6153 5.6K
D6037
Q6040
R6152 10K
C6071 0.01
R6158 22K
R6155 4.7K
Q6041
C6069 4.7/35
R6156 10K
S DET.
VIDEO3
C6085 47/16
C6088 22/16
R6177 22K
R6171 220
Q6048
R6170 100K
R6174 1.0K
C6086 10/16
R6173 5.6K
D6039
Q6046
R6172 10K
C6089 0.01
R6178 22K
R6175 4.7K
Q6047
C6087 4.7/35
R6176 10K
S DET.
FRONT
8001
AKX1046
VIDEO
1Y
1B_Y
1R_Y
COMPONENT1
BNC
W1
GND
1Y
GND
1B_Y
GND
1R_Y
GND
VIDEO
CN8002
KM250MA8

Notes
1.RESISTORS
Indicated in Ω
tolerance unless otherwise noted k Ω
2.CAPASITORS
Indicated in capacity(uF)/Voltage unless
otherwise noted p pF
Indication without voltage is 50V except electrolytic capacitor.

2SC2712(YGR)-TLB
2SA1162(YGR)-TLB
1SS226-TRB
1SS352-TRB

C BNC ASSY
(AWV1920)

3.13 AV I/O (2/2) and SR ASSYS

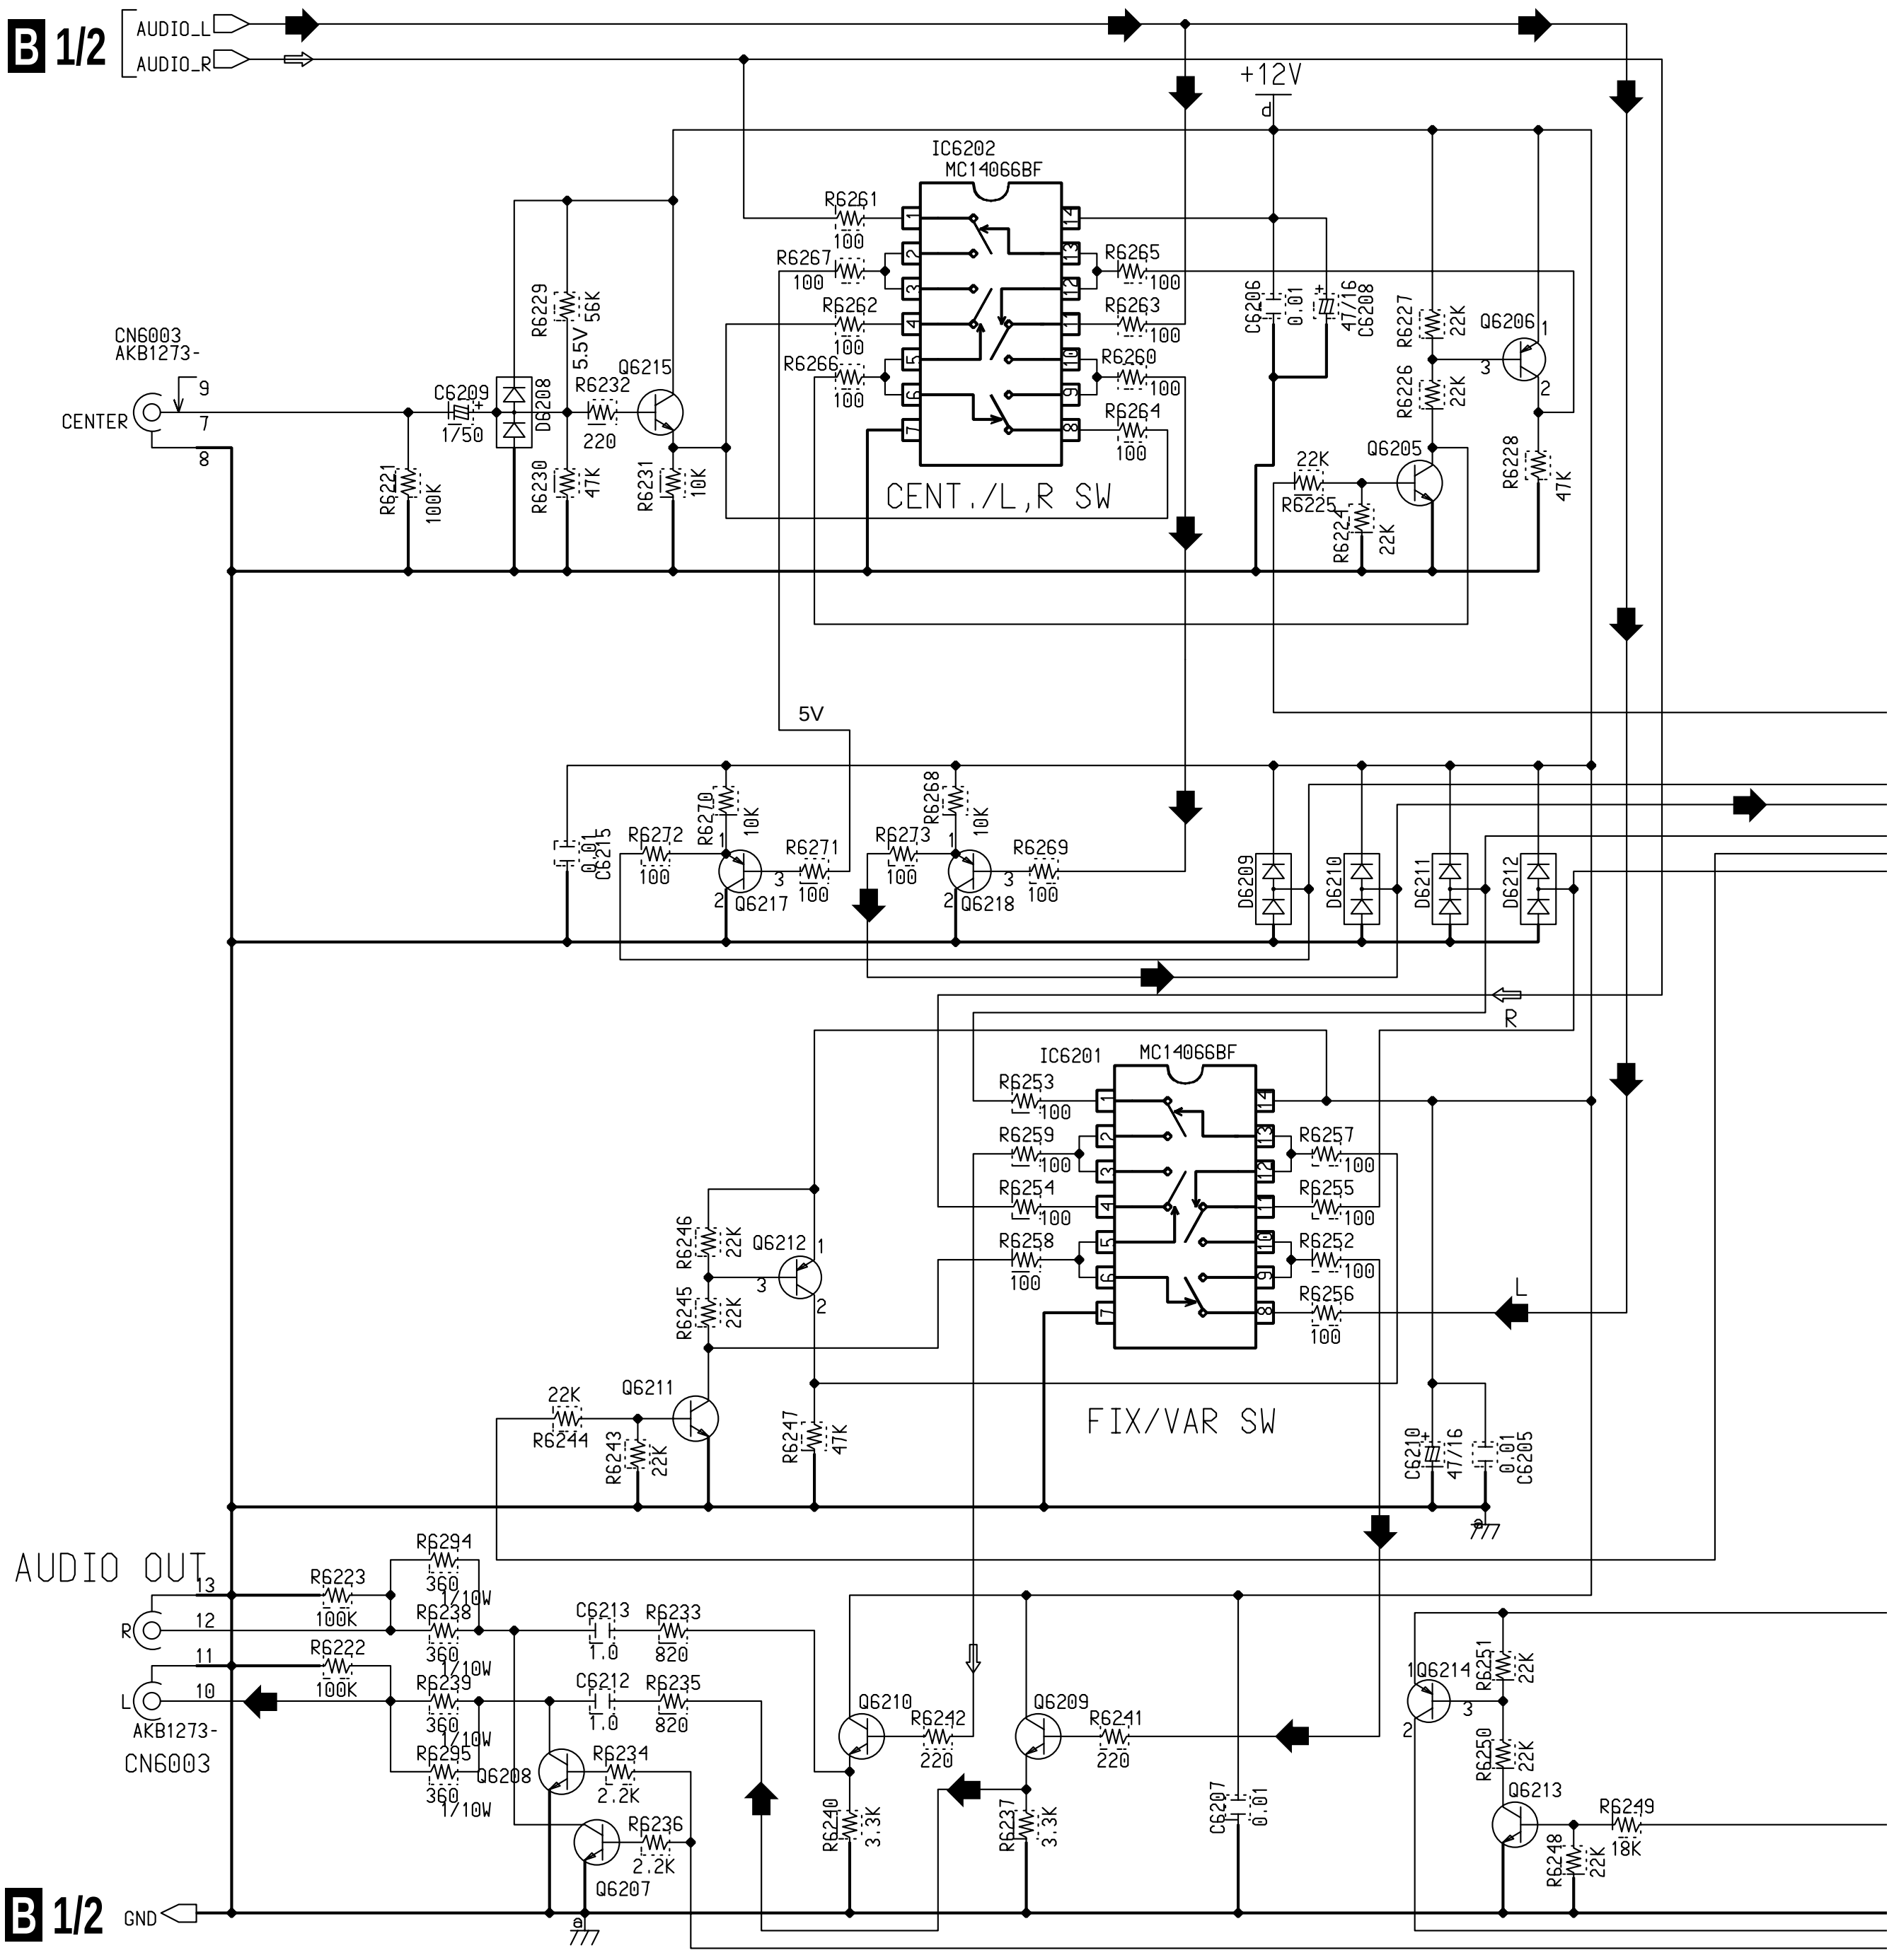
B 1/2
AUDIO_L
AUDIO_R
+12V
IC6202
MC14066BF
CENT./L,R SW
R6261 100
R6267 100
R6262 100
R6266 100
R6265 100
R6263 100
R6260 100
R6264 100
C6206 0.01
C6208 47/16
R6227 22K
R6226 22K
Q6206
Q6205
R6225 22K
R6224 22K
R6228 47K
CN6003
AKB1273-
CENTER
C6209 1/50
D6208
R6229 56K
5.5V
R6232 220
Q6215
R6221 100K
R6230 47K
R6231 10K
5V
C6215 0.01
R6272 100
R6270 10K
Q6217
R6271 100
R6273 100
R6268 10K
Q6218
R6269 100
D6209
D6210
D6211
D6212
R
IC6201
MC14066BF
FIX/VAR SW
R6253 100
R6259 100
R6254 100
R6258 100
R6257 100
R6255 100
R6252 100
R6256 100
L
R6246 22K
R6245 22K
Q6212
Q6211
R6244 22K
R6243 22K
R6247 47K
C6210 47/16
C6205 0.01
AUDIO OUT
R6223 100K
R6222 100K
R6294 360 1/10W
R6238 360 1/10W
R6239 360 1/10W
R6295 360 1/10W
C6213 1.0
R6233 820
C6212 1.0
R6235 820
Q6208
R6234 2.2K
R6236 2.2K
Q6207
Q6210
R6242 220
Q6209
R6241 220
R6240 3.3K
R6237 3.3K
C6207 0.01
Q6214
R6251 22K
R6250 22K
Q6213
R6249 18K
R6248 22K
AKB1273-
CN6003
B 1/2
GND

B 2/2 AV I/O ASSY (AWV1919)
- AV I/O and SR BLOCKS

➡ : AUDIO SIGNAL ROUTE
➡ : C SIGNAL ROUTE
⇨ : Y SIGNAL ROUTE

Notes
1.RESISTORS
Indicated in Ω
tolerance unless otherwise noted k Ω
2.CAPASITORS
Indicated in capacity(uF)/Voltage unless
otherwise noted p pF
Indication without voltage is 50V except electrolytic capacitor.

2SC2712(YGR)-TLB

2SA1162(YGR)-TLB

1SS352-TRB

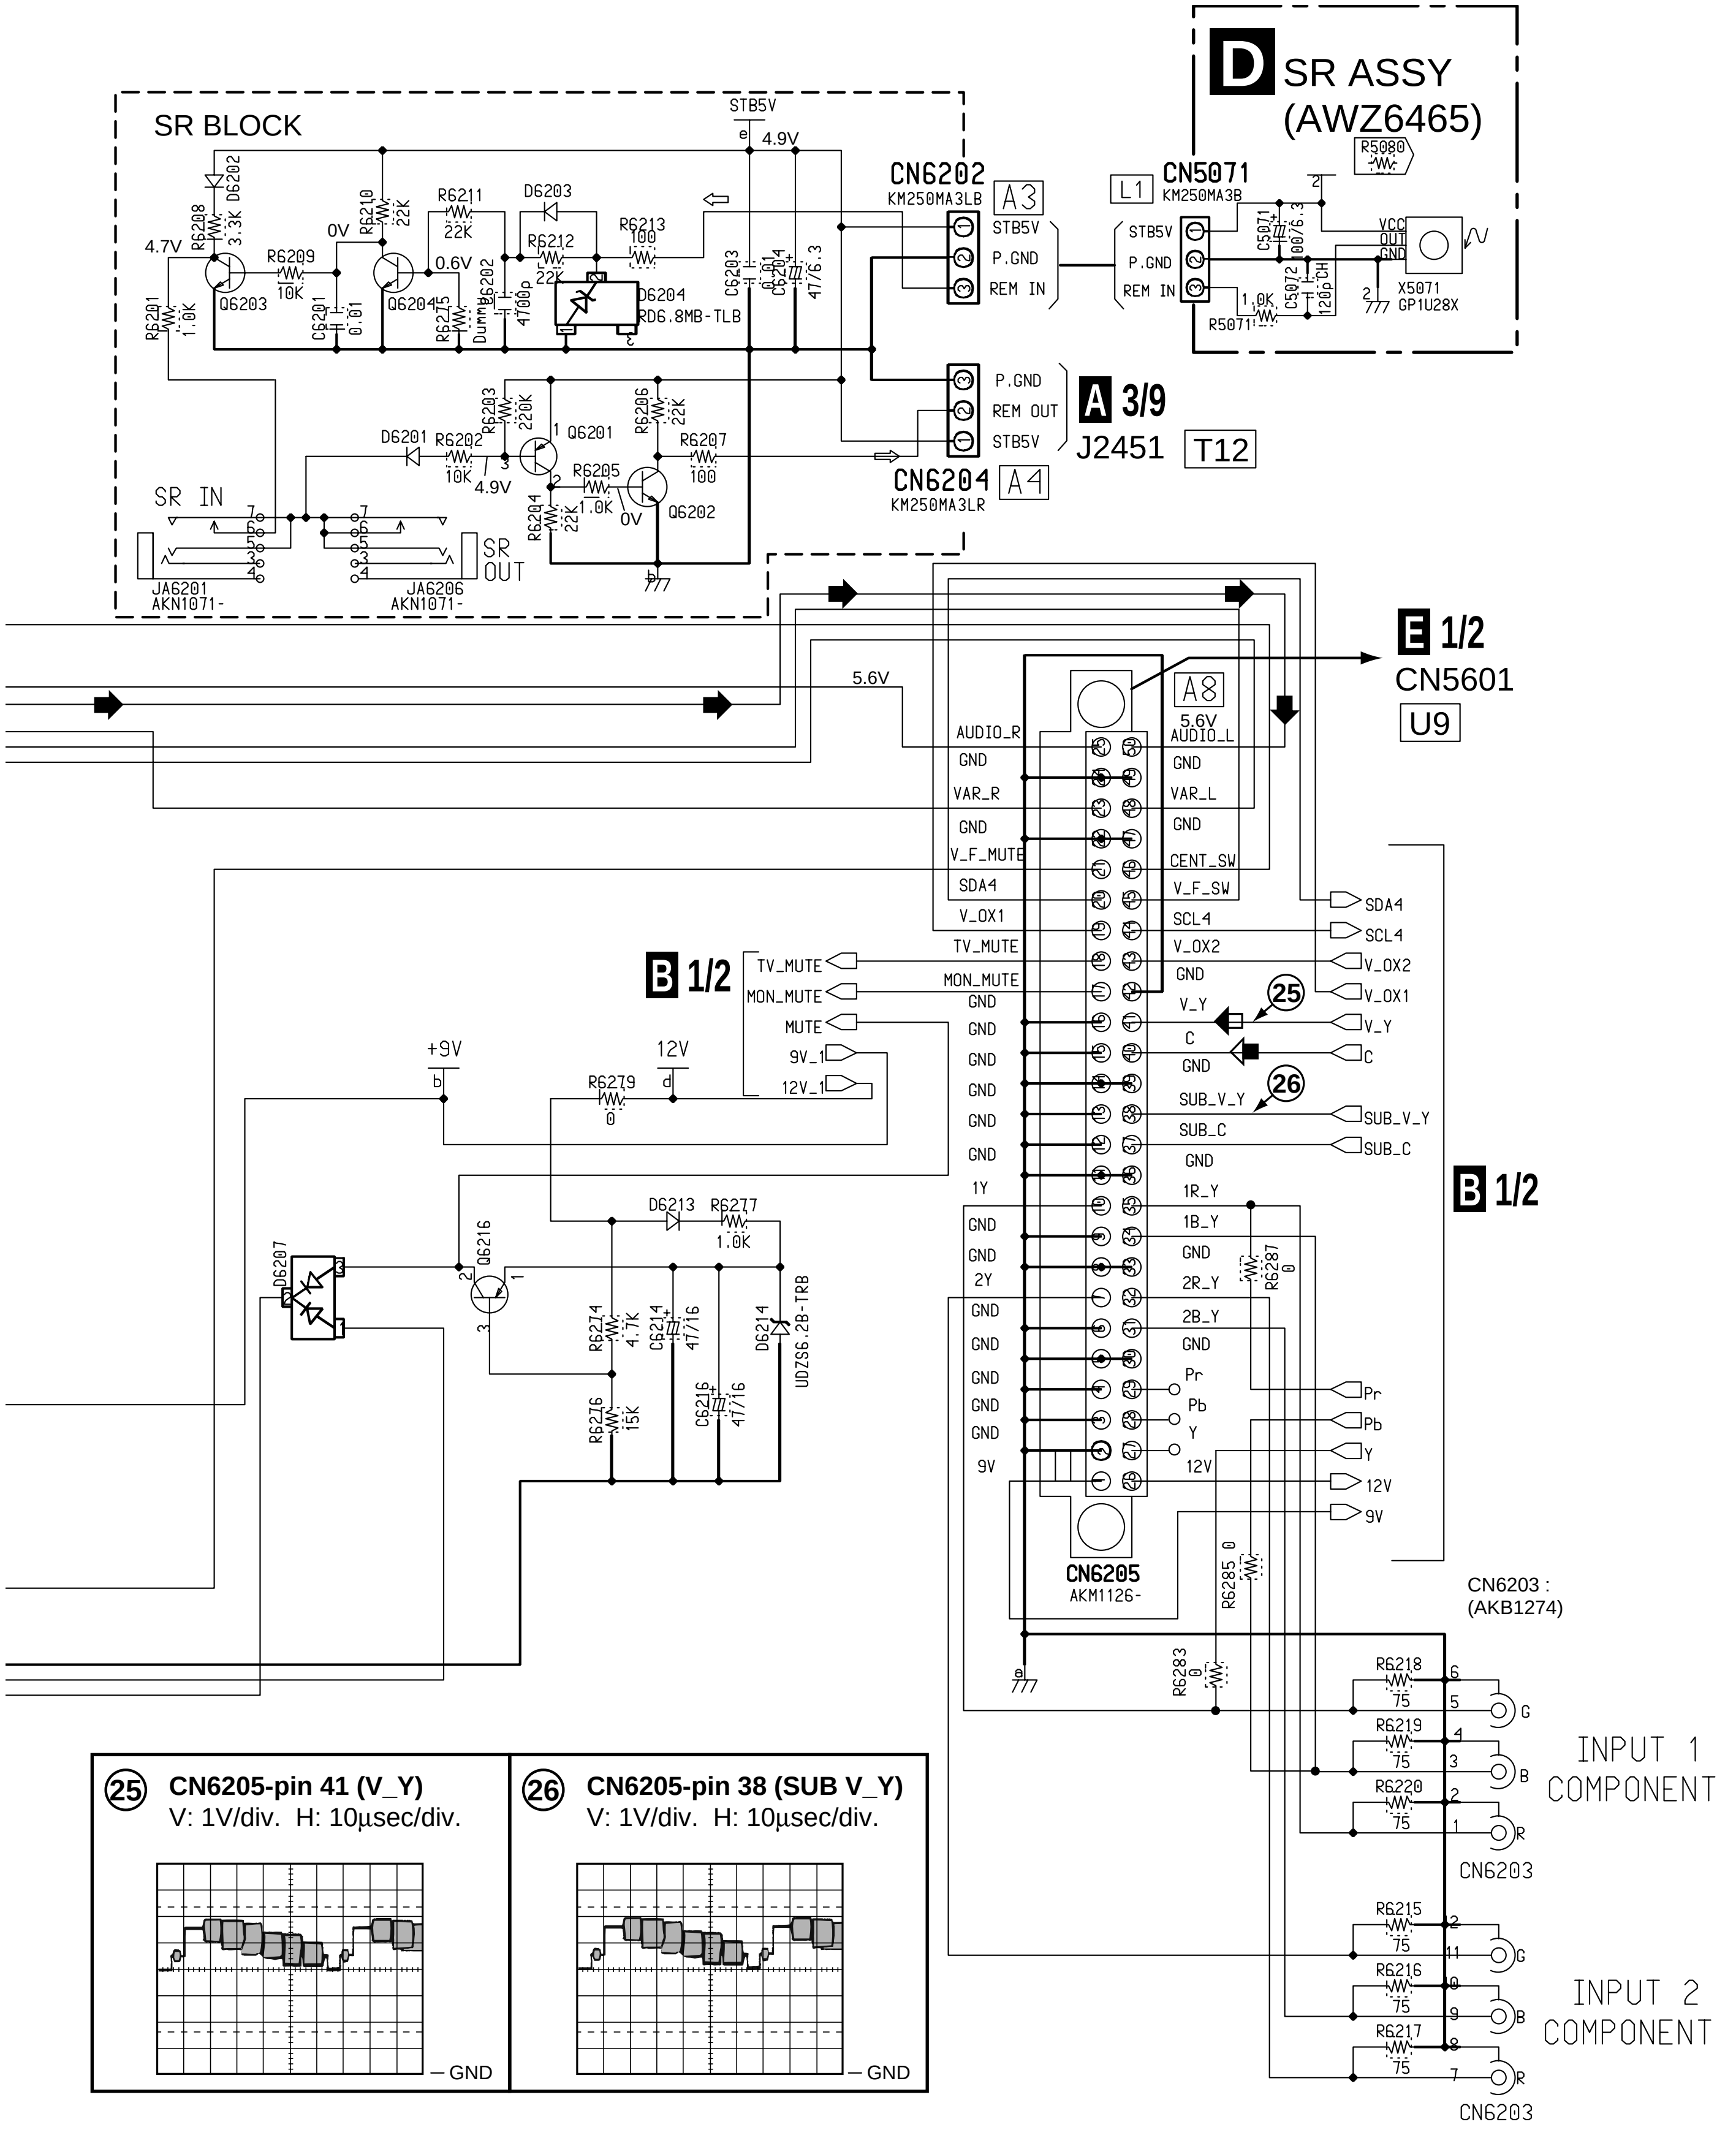
SR BLOCK
D SR ASSY
(AWZ6465)
R5080
CN6202
KM250MA3LB
A3
L1
CN5071
KM250MA3B
STB5V
P.GND
REM IN
VCC
OUT
GND
X5071
GP1U28X
C5071
100/6.3
C5072
120p CH
R5071 1.0K
STB5V
4.9V
4.7V
R6208 3.3K
D6202
R6209 10K
Q6203
0V
R6210 22k
R6211 22K
D6203
R6212 22k
R6213 100
0.6V
Q6204
R6201 1.0K
C6201 0.01
R6215 Dummy
R6202 4700p
D6204
RD6.8MB-TLB
C6203 0.01
C6204 47/6.3
P.GND
REM OUT
STB5V
A 3/9
J2451
T12
CN6204
KM250MA3LR
A4
D6201
R6202 10K
R6203 220K
Q6201
R6206 22K
R6207 100
R6205 1.0K
R6204 22K
4.9V
0V
Q6202
SR IN
SR OUT
JA6201
AKN1071-
JA6206
AKN1071-
E 1/2
CN5601
U9
5.6V
A8
AUDIO_R
GND
VAR_R
GND
V_F_MUTE
SDA4
V_OX1
TV_MUTE
MON_MUTE
GND
GND
GND
GND
GND
GND
1Y
GND
GND
2Y
GND
GND
GND
GND
GND
9V
AUDIO_L
GND
VAR_L
GND
CENT_SW
V_F_SW
SCL4
V_OX2
GND
V_Y
C
GND
SUB_V_Y
SUB_C
GND
1R_Y
1B_Y
GND
2R_Y
2B_Y
GND
Pr
Pb
Y
12V
CN6205
AKM1126-
SDA4
SCL4
V_OX2
V_OX1
V_Y
C
SUB_V_Y
SUB_C
Pr
Pb
Y
12V
9V
25
26
B 1/2
TV_MUTE
MON_MUTE
MUTE
9V_1
12V_1
B 1/2
+9V
12V
R6279 0
D6207
Q6216
D6213
R6277 1.0K
R6274 4.7K
C6214 47/16
D6214
UDZS6.2B-TRB
R6276 15K
C6216 47/16
R6287 0
R6285 0
R6283 0
CN6203 :
(AKB1274)
R6218 75
R6219 75
R6220 75
G
B
R
INPUT 1
COMPONENT
CN6203
R6215 75
R6216 75
R6217 75
INPUT 2
COMPONENT
CN6203
GND
GND

㉕ CN6205-pin 41 (V_Y)
V: 1V/div. H: 10μsec/div.

㉖ CN6205-pin 38 (SUB V_Y)
V: 1V/div. H: 10μsec/div.

3.14 VIDEO (1/2) and RGB SW ASSYS

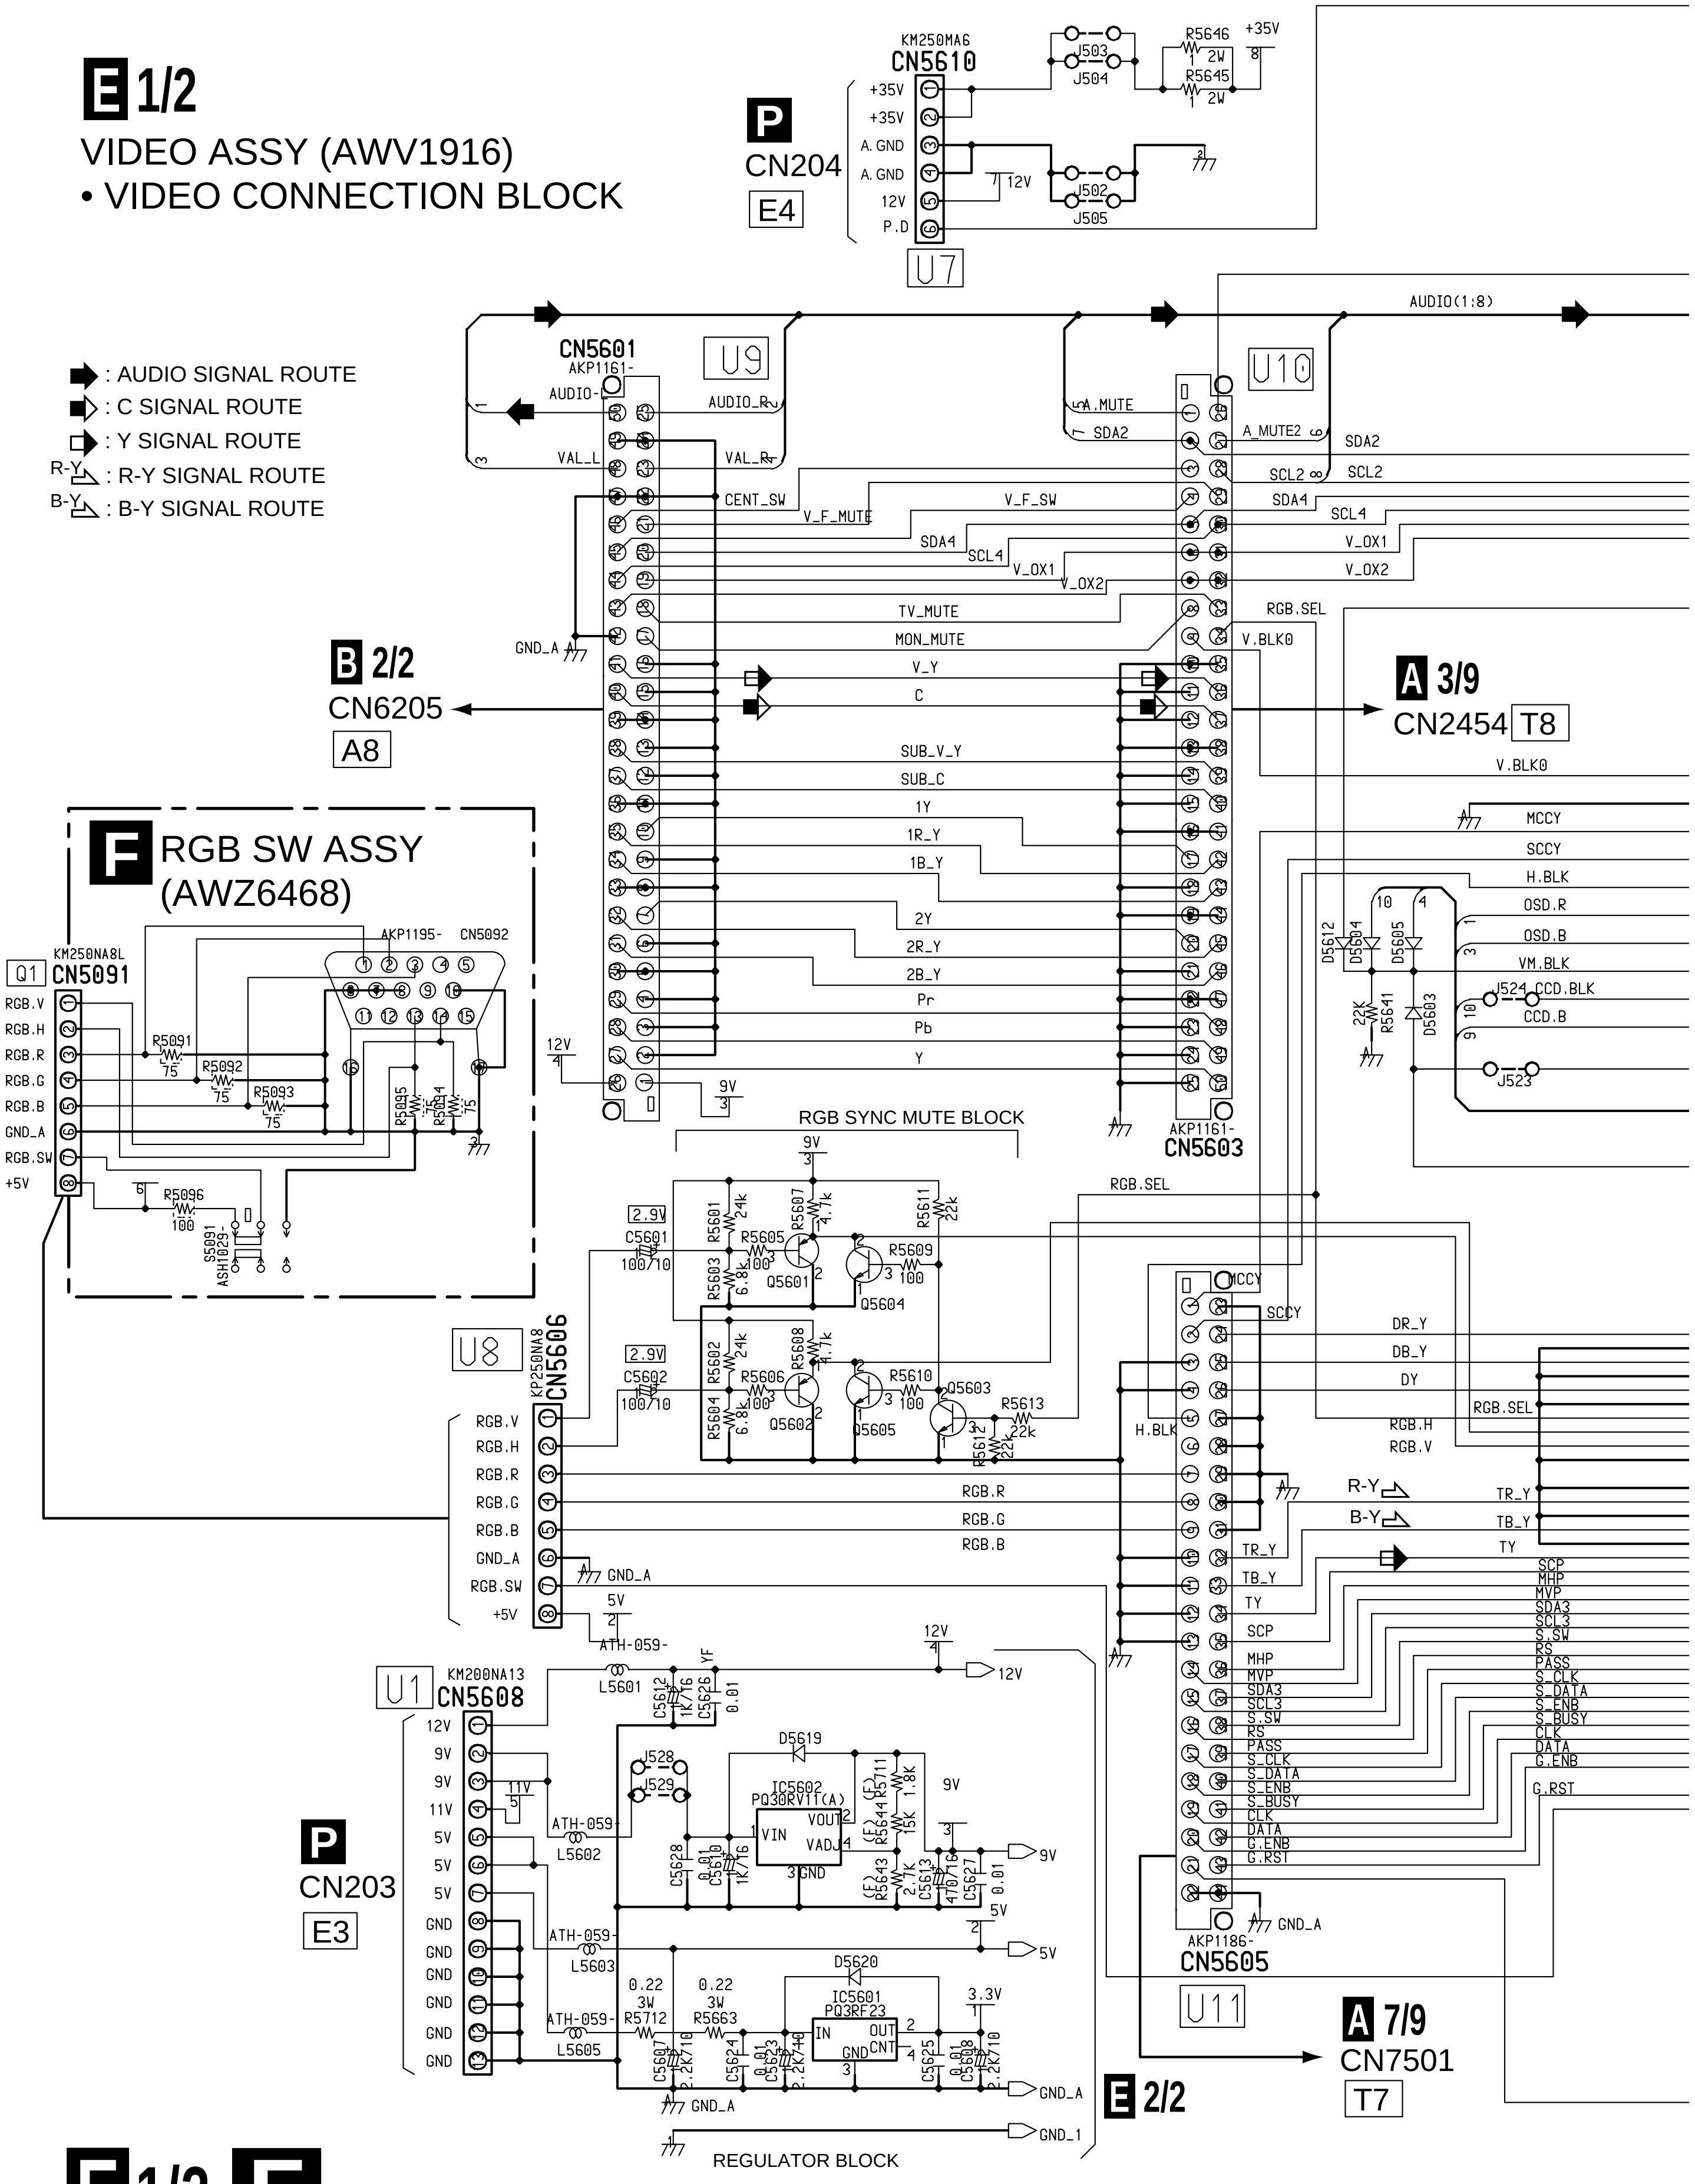
E 1/2
VIDEO ASSY (AWV1916)
• VIDEO CONNECTION BLOCK
P
CN204
E4
KM250MA6
CN5610
+35V
+35V
A. GND
A. GND
12V
P.D
U7
J503
J504
J502
J505
R5646
R5645
2W
+35V
12V
AUDIO(1:8)
: AUDIO SIGNAL ROUTE
: C SIGNAL ROUTE
: Y SIGNAL ROUTE
R-Y : R-Y SIGNAL ROUTE
B-Y : B-Y SIGNAL ROUTE
CN5601
AKP1161-
U9
U10
AUDIO-L
AUDIO_R
VAL_L
VAL_R
CENT_SW
V_F_MUTE
V_F_SW
SDA4
SCL4
V_OX1
V_OX2
TV_MUTE
MON_MUTE
V_Y
C
SUB_V_Y
SUB_C
1Y
1R_Y
1B_Y
2Y
2R_Y
2B_Y
Pr
Pb
Y
GND_A
A.MUTE
SDA2
A_MUTE2
SCL2
SCL4
RGB.SEL
V.BLK0
B 2/2
CN6205
A8
A 3/9
CN2454
T8
AKP1161-
CN5603
MCCY
SCCY
H.BLK
OSD.R
OSD.B
VM.BLK
CCD.BLK
CCD.B
J524
J523
D5612
D5604
D5605
D5603
R5641
22K
F
RGB SW ASSY
(AWZ6468)
KM250NA8L
Q1
CN5091
RGB.V
RGB.H
RGB.R
RGB.G
RGB.B
GND_A
RGB.SW
+5V
AKP1195-
CN5092
R5091
R5092
R5093
R5094
R5095
R5096
75
100
S5091
ASH1029-
RGB SYNC MUTE BLOCK
9V
2.9V
C5601
C5602
100/10
R5601
R5602
R5603
R5604
R5605
R5606
R5607
R5608
R5609
R5610
R5611
R5612
R5613
Q5601
Q5602
Q5603
Q5604
Q5605
24k
4.7k
6.8k
22k
U8
KP250NA8
CN5606
RGB.V
RGB.H
RGB.R
RGB.G
RGB.B
GND_A
RGB.SW
+5V
RGB.R
RGB.G
RGB.B
H.BLK
5V
ATH-059-
U1
KM200NA13
CN5608
12V
9V
9V
11V
5V
5V
5V
GND
L5601
L5602
L5603
L5605
C5612
C5626
C5628
C5610
C5613
C5627
C5607
C5624
C5623
C5625
C5608
D5619
D5620
J528
J529
IC5602
PQ30RV11(A)
VIN
VOUT
VADJ
GND
IC5601
PQ3RF23
IN
OUT
CNT
GND
R5711
R5644
R5643
R5712
R5663
0.22
3W
3.3V
P
CN203
E3
GND_A
GND_1
REGULATOR BLOCK
DR_Y
DB_Y
DY
RGB.SEL
RGB.H
RGB.V
R-Y
B-Y
TR_Y
TB_Y
TY
SCP
MHP
MVP
SDA3
SCL3
S.SW
RS
PASS
S_CLK
S_DATA
S_ENB
S_BUSY
CLK
DATA
G.ENB
G.RST
AKP1186-
CN5605
U11
A 7/9
CN7501
T7
E 2/2

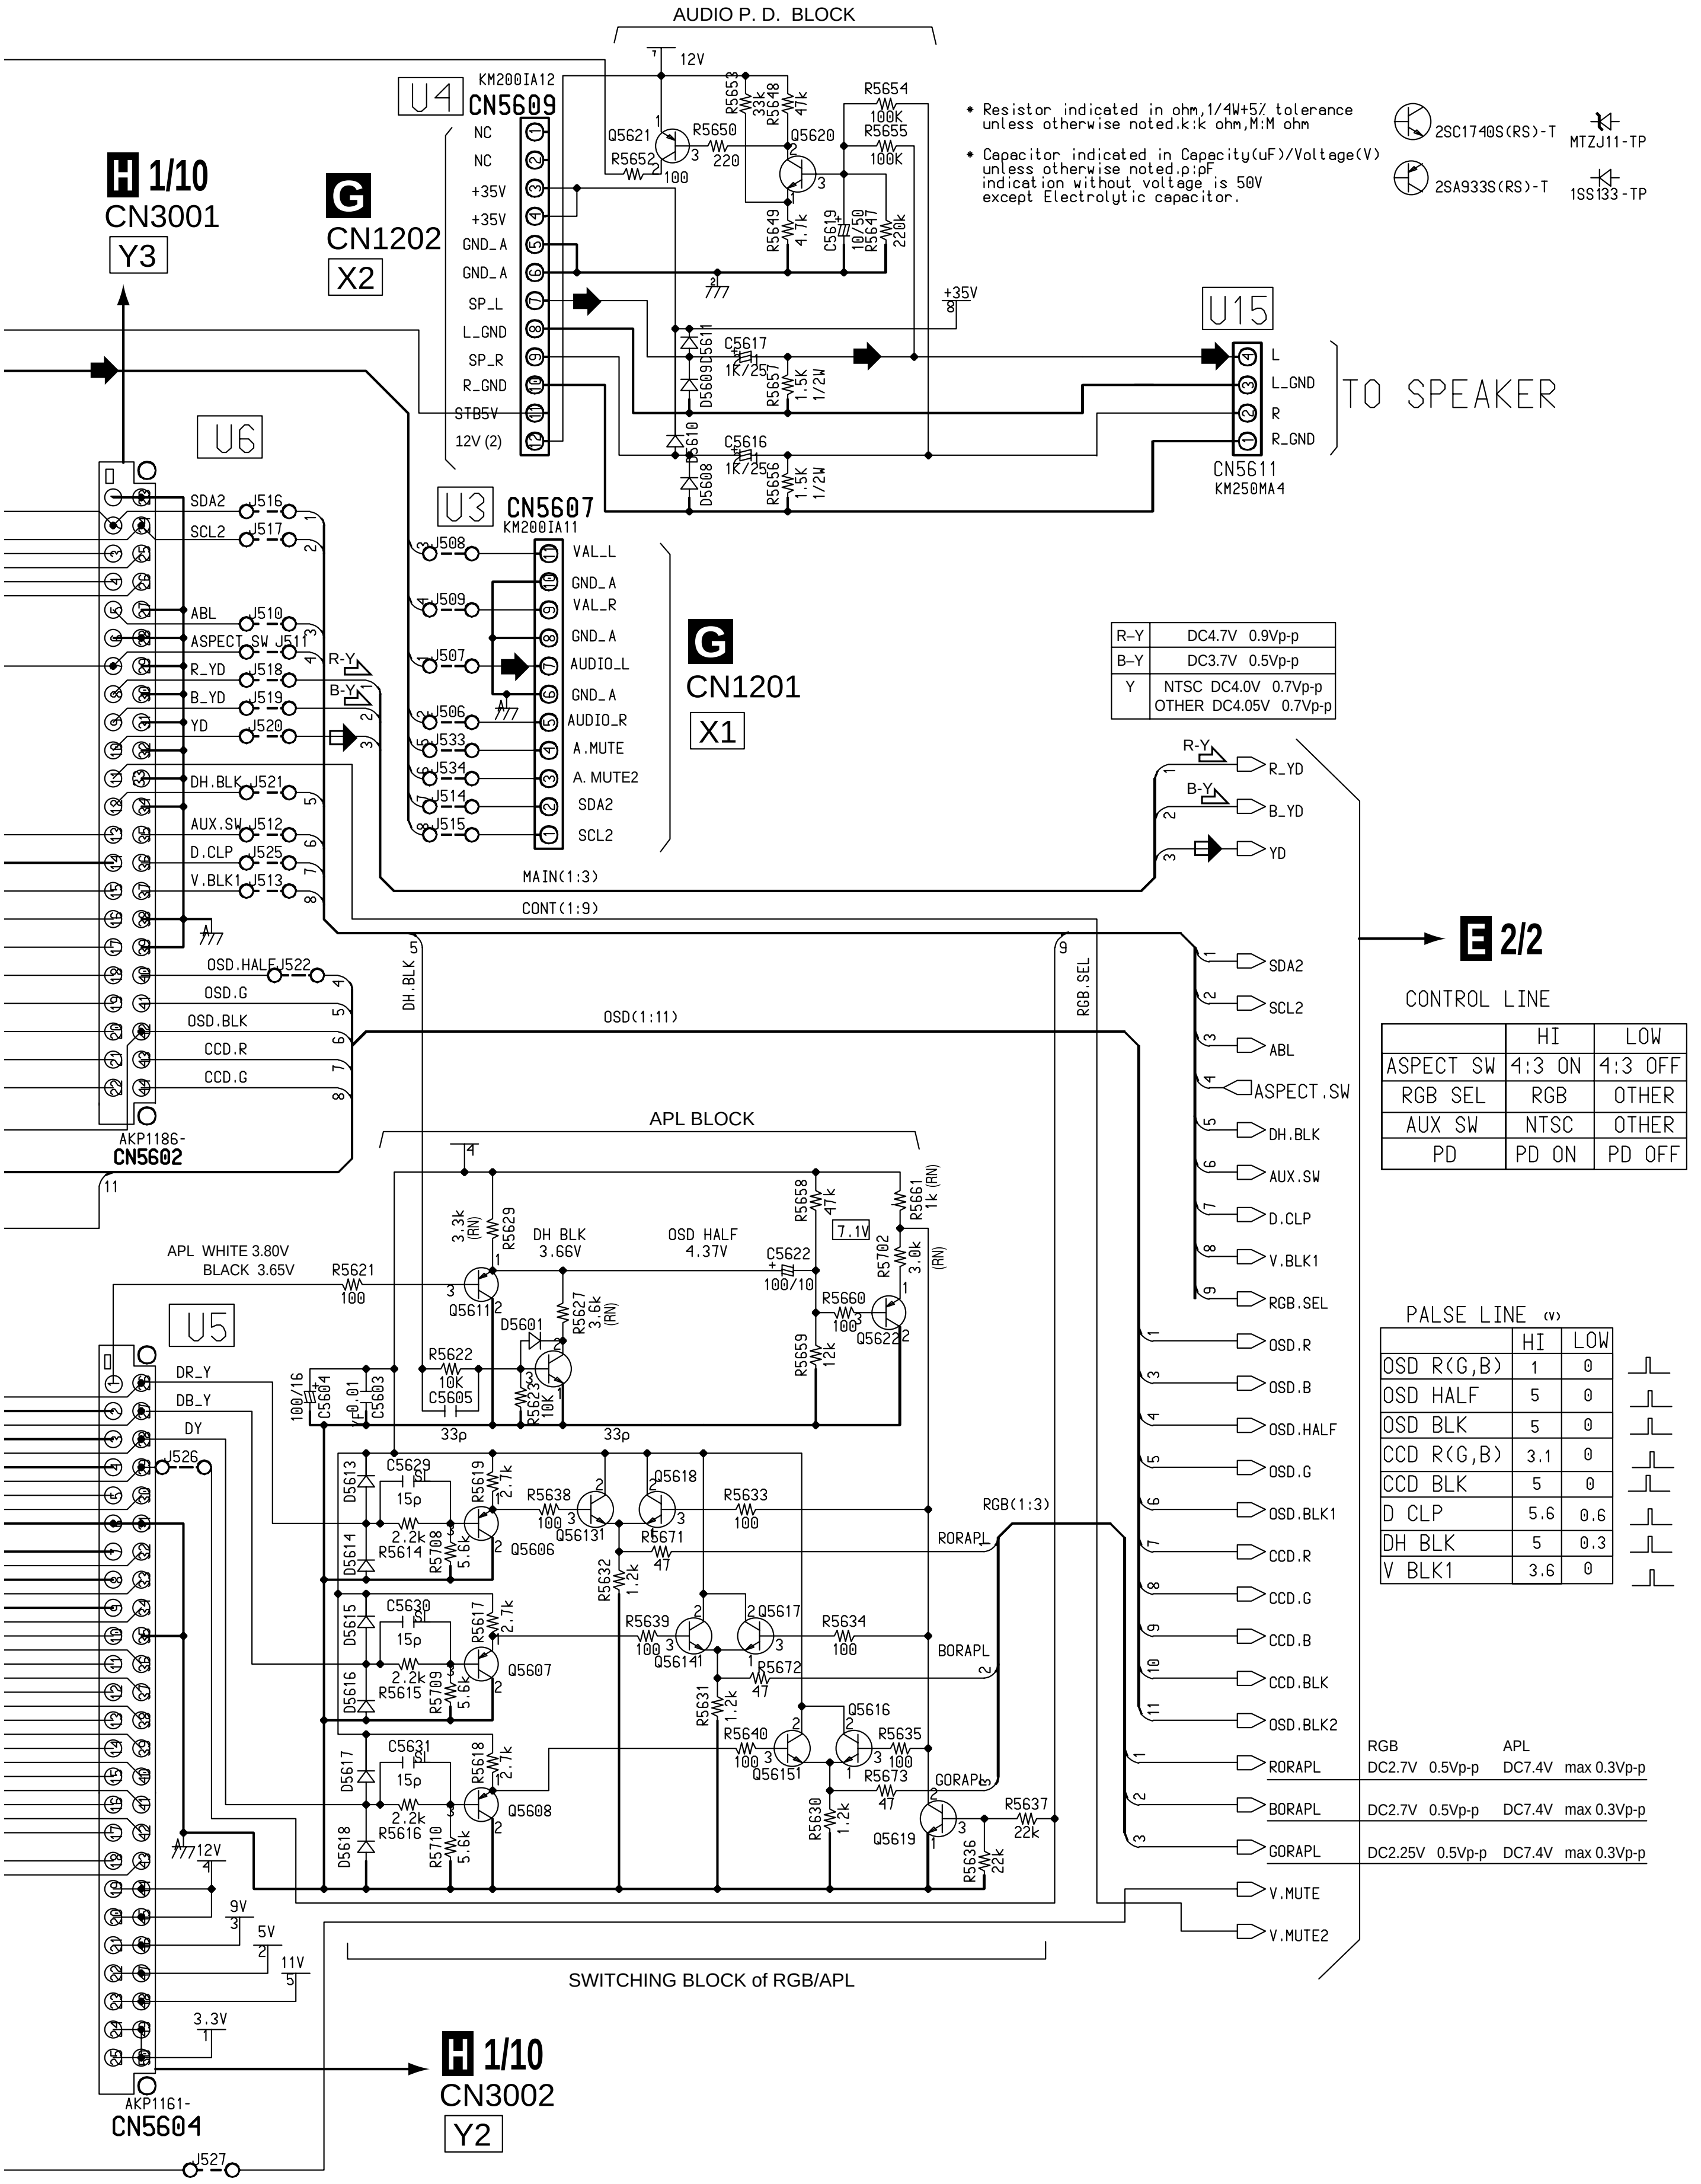
AUDIO P. D. BLOCK
APL BLOCK
SWITCHING BLOCK of RGB/APL
H 1/10
CN3001
Y3
G
CN1202
X2
U4
KM200IA12
CN5609
NC
NC
+35V
+35V
GND_A
GND_A
SP_L
L_GND
SP_R
R_GND
STB5V
12V (2)
12V
Q5621
R5652
100
R5650
220
R5653
33k
R5648
47k
Q5620
R5654
100K
R5655
100K
R5649
4.7k
C5619
10/50
R5647
220k
+35V
D5611
D5609
C5617
1K/25
R5657
1.5k 1/2W
D5610
D5608
C5616
1K/25
R5656
1.5k 1/2W
U15
L
L_GND
R
R_GND
TO SPEAKER
CN5611
KM250MA4
2SC1740S(RS)-T
2SA933S(RS)-T
MTZJ11-TP
1SS133-TP
U6
SDA2
SCL2
ABL
ASPECT SW
R_YD
B_YD
YD
DH.BLK
AUX.SW
D.CLP
V.BLK1
J516
J517
J510
J511
J518
J519
J520
J521
J512
J525
J513
R-Y
B-Y
OSD.HALF
J522
OSD.G
OSD.BLK
CCD.R
CCD.G
AKP1186-
CN5602
U3
CN5607
KM200IA11
J508
J509
J507
J506
J533
J534
J514
J515
VAL_L
GND_A
VAL_R
GND_A
AUDIO_L
GND_A
AUDIO_R
A.MUTE
A. MUTE2
SDA2
SCL2
G
CN1201
X1
MAIN(1:3)
CONT(1:9)
DH.BLK
RGB.SEL
OSD(1:11)
E 2/2
R_YD
B_YD
YD
SDA2
SCL2
ABL
ASPECT.SW
DH.BLK
AUX.SW
D.CLP
V.BLK1
RGB.SEL
OSD.R
OSD.B
OSD.HALF
OSD.G
OSD.BLK1
CCD.R
CCD.G
CCD.B
CCD.BLK
OSD.BLK2
RORAPL
BORAPL
GORAPL
V.MUTE
V.MUTE2
APL WHITE 3.80V
BLACK 3.65V
R5621
100
Q5611
R5629
3.3k (RN)
DH BLK
3.66V
OSD HALF
4.37V
C5622
100/10
R5658
47k
7.1V
R5661
1k (RN)
R5702
3.0k (RN)
R5660
100
Q5622
R5659
12k
D5601
R5627
3.6k (RN)
R5622
10K
C5605
R5623
10K
C5604
100/16
C5603
0.01
33p
33p
U5
DR_Y
DB_Y
DY
J526
D5613
D5614
C5629
15p
2.2k
R5614
R5708
5.6k
R5619
2.7k
Q5606
R5638
100
Q5613
Q5618
R5671
47
R5633
100
R5632
1.2k
RGB(1:3)
RORAPL
D5615
D5616
C5630
15p
2.2k
R5615
R5709
5.6k
R5617
2.7k
Q5607
R5639
100
Q5614
Q5617
R5634
100
R5672
47
R5631
1.2k
BORAPL
D5617
D5618
C5631
15p
2.2k
R5616
R5710
5.6k
R5618
2.7k
Q5608
R5640
100
Q5615
Q5616
R5635
100
R5673
47
R5630
1.2k
GORAPL
R5637
22k
Q5619
R5636
22k
12V
9V
5V
11V
3.3V
AKP1161-
CN5604
J527
H 1/10
CN3002
Y2
RGB
APL
DC2.7V 0.5Vp-p
DC7.4V max 0.3Vp-p
DC2.7V 0.5Vp-p
DC7.4V max 0.3Vp-p
DC2.25V 0.5Vp-p
DC7.4V max 0.3Vp-p

- Resistor indicated in ohm,1/4W±5% tolerance unless otherwise noted.k:k ohm,M:M ohm
- Capacitor indicated in Capacity(uF)/Voltage(V) unless otherwise noted.p:pF indication without voltage is 50V except Electrolytic capacitor.

R–Y	DC4.7V 0.9Vp-p
B–Y	DC3.7V 0.5Vp-p
Y	NTSC DC4.0V 0.7Vp-p OTHER DC4.05V 0.7Vp-p

CONTROL LINE

	HI	LOW
ASPECT SW	4:3 ON	4:3 OFF
RGB SEL	RGB	OTHER
AUX SW	NTSC	OTHER
PD	PD ON	PD OFF

PALSE LINE (V)

	HI	LOW
OSD R(G,B)	1	0
OSD HALF	5	0
OSD BLK	5	0
CCD R(G,B)	3.1	0
CCD BLK	5	0
D CLP	5.6	0.6
DH BLK	5	0.3
V BLK1	3.6	0

3.15 VIDEO ASSY (2/2)

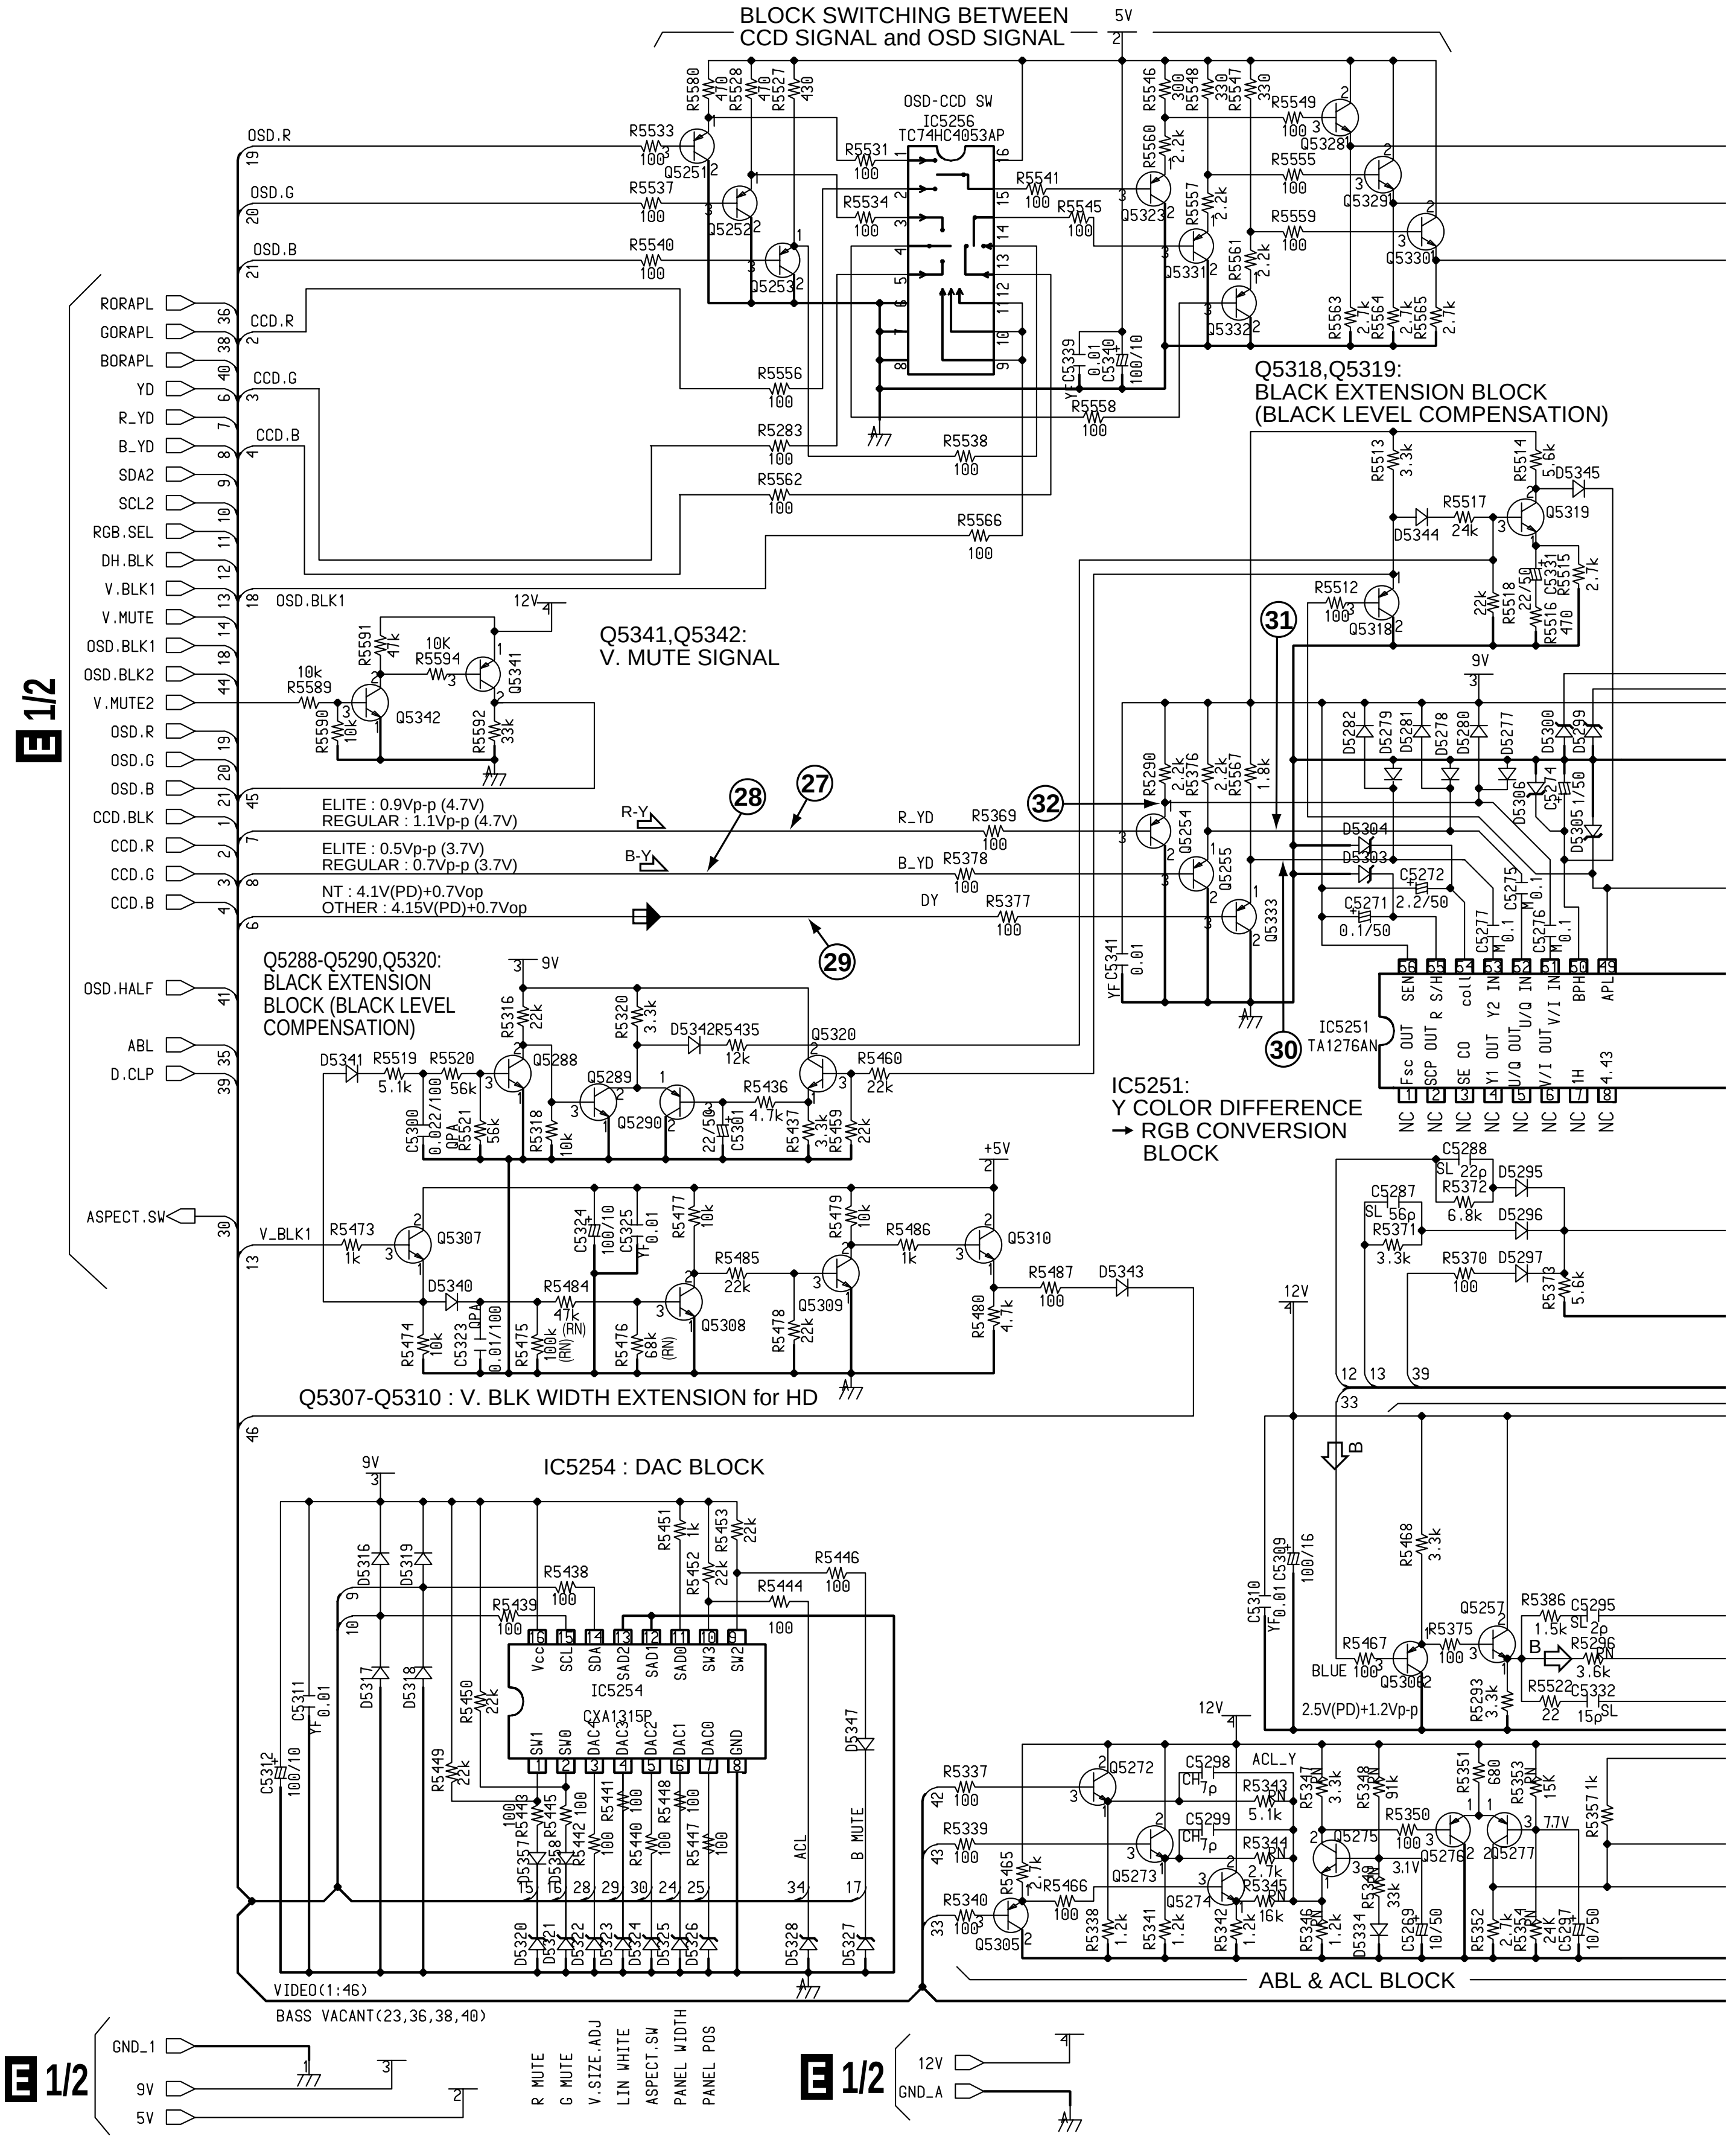
BLOCK SWITCHING BETWEEN CCD SIGNAL and OSD SIGNAL
OSD-CCD SW
IC5256
TC74HC4053AP
Q5318,Q5319:
BLACK EXTENSION BLOCK
(BLACK LEVEL COMPENSATION)
Q5341,Q5342:
V. MUTE SIGNAL
ELITE : 0.9Vp-p (4.7V)
REGULAR : 1.1Vp-p (4.7V)
ELITE : 0.5Vp-p (3.7V)
REGULAR : 0.7Vp-p (3.7V)
NT : 4.1V(PD)+0.7Vop
OTHER : 4.15V(PD)+0.7Vop
Q5288-Q5290,Q5320:
BLACK EXTENSION
BLOCK (BLACK LEVEL
COMPENSATION)
IC5251
TA1276AN
IC5251:
Y COLOR DIFFERENCE
→ RGB CONVERSION
BLOCK
Q5307-Q5310 : V. BLK WIDTH EXTENSION for HD
IC5254 : DAC BLOCK
IC5254
CXA1315P
2.5V(PD)+1.2Vp-p
ABL & ACL BLOCK
VIDEO(1:46)
BASS VACANT(23,36,38,40)
E 1/2
RORAPL
GORAPL
BORAPL
YD
R_YD
B_YD
SDA2
SCL2
RGB.SEL
DH.BLK
V.BLK1
V.MUTE
OSD.BLK1
OSD.BLK2
V.MUTE2
OSD.R
OSD.G
OSD.B
CCD.BLK
CCD.R
CCD.G
CCD.B
OSD.HALF
ABL
D.CLP
ASPECT.SW
V_BLK1
GND_1
9V
5V
12V
GND_A
R MUTE
G MUTE
V.SIZE.ADJ
LIN WHITE
ASPECT.SW
PANEL WIDTH
PANEL POS
ACL
B MUTE
BLUE
R-Y
B-Y
R_YD
B_YD
DY
27
28
29
30
31
32
1
2
3
4
A
B
C
D

E 2/2

: Y SIGNAL ROUTE
R-Y : R-Y SIGNAL ROUTE
B-Y : B-Y SIGNAL ROUTE
R, G or B : R, G or B SIGNAL ROUTE

E 2/2 VIDEO ASSY (AWV1916)
• VIDEO BLOCK

IC5252.Q5301 :
PANEL BLK GENERATION
BLOCK for SCREEN SIZE 4:3

VR5251,VR5252: For 4:3 PANEL WIDTH ADJ

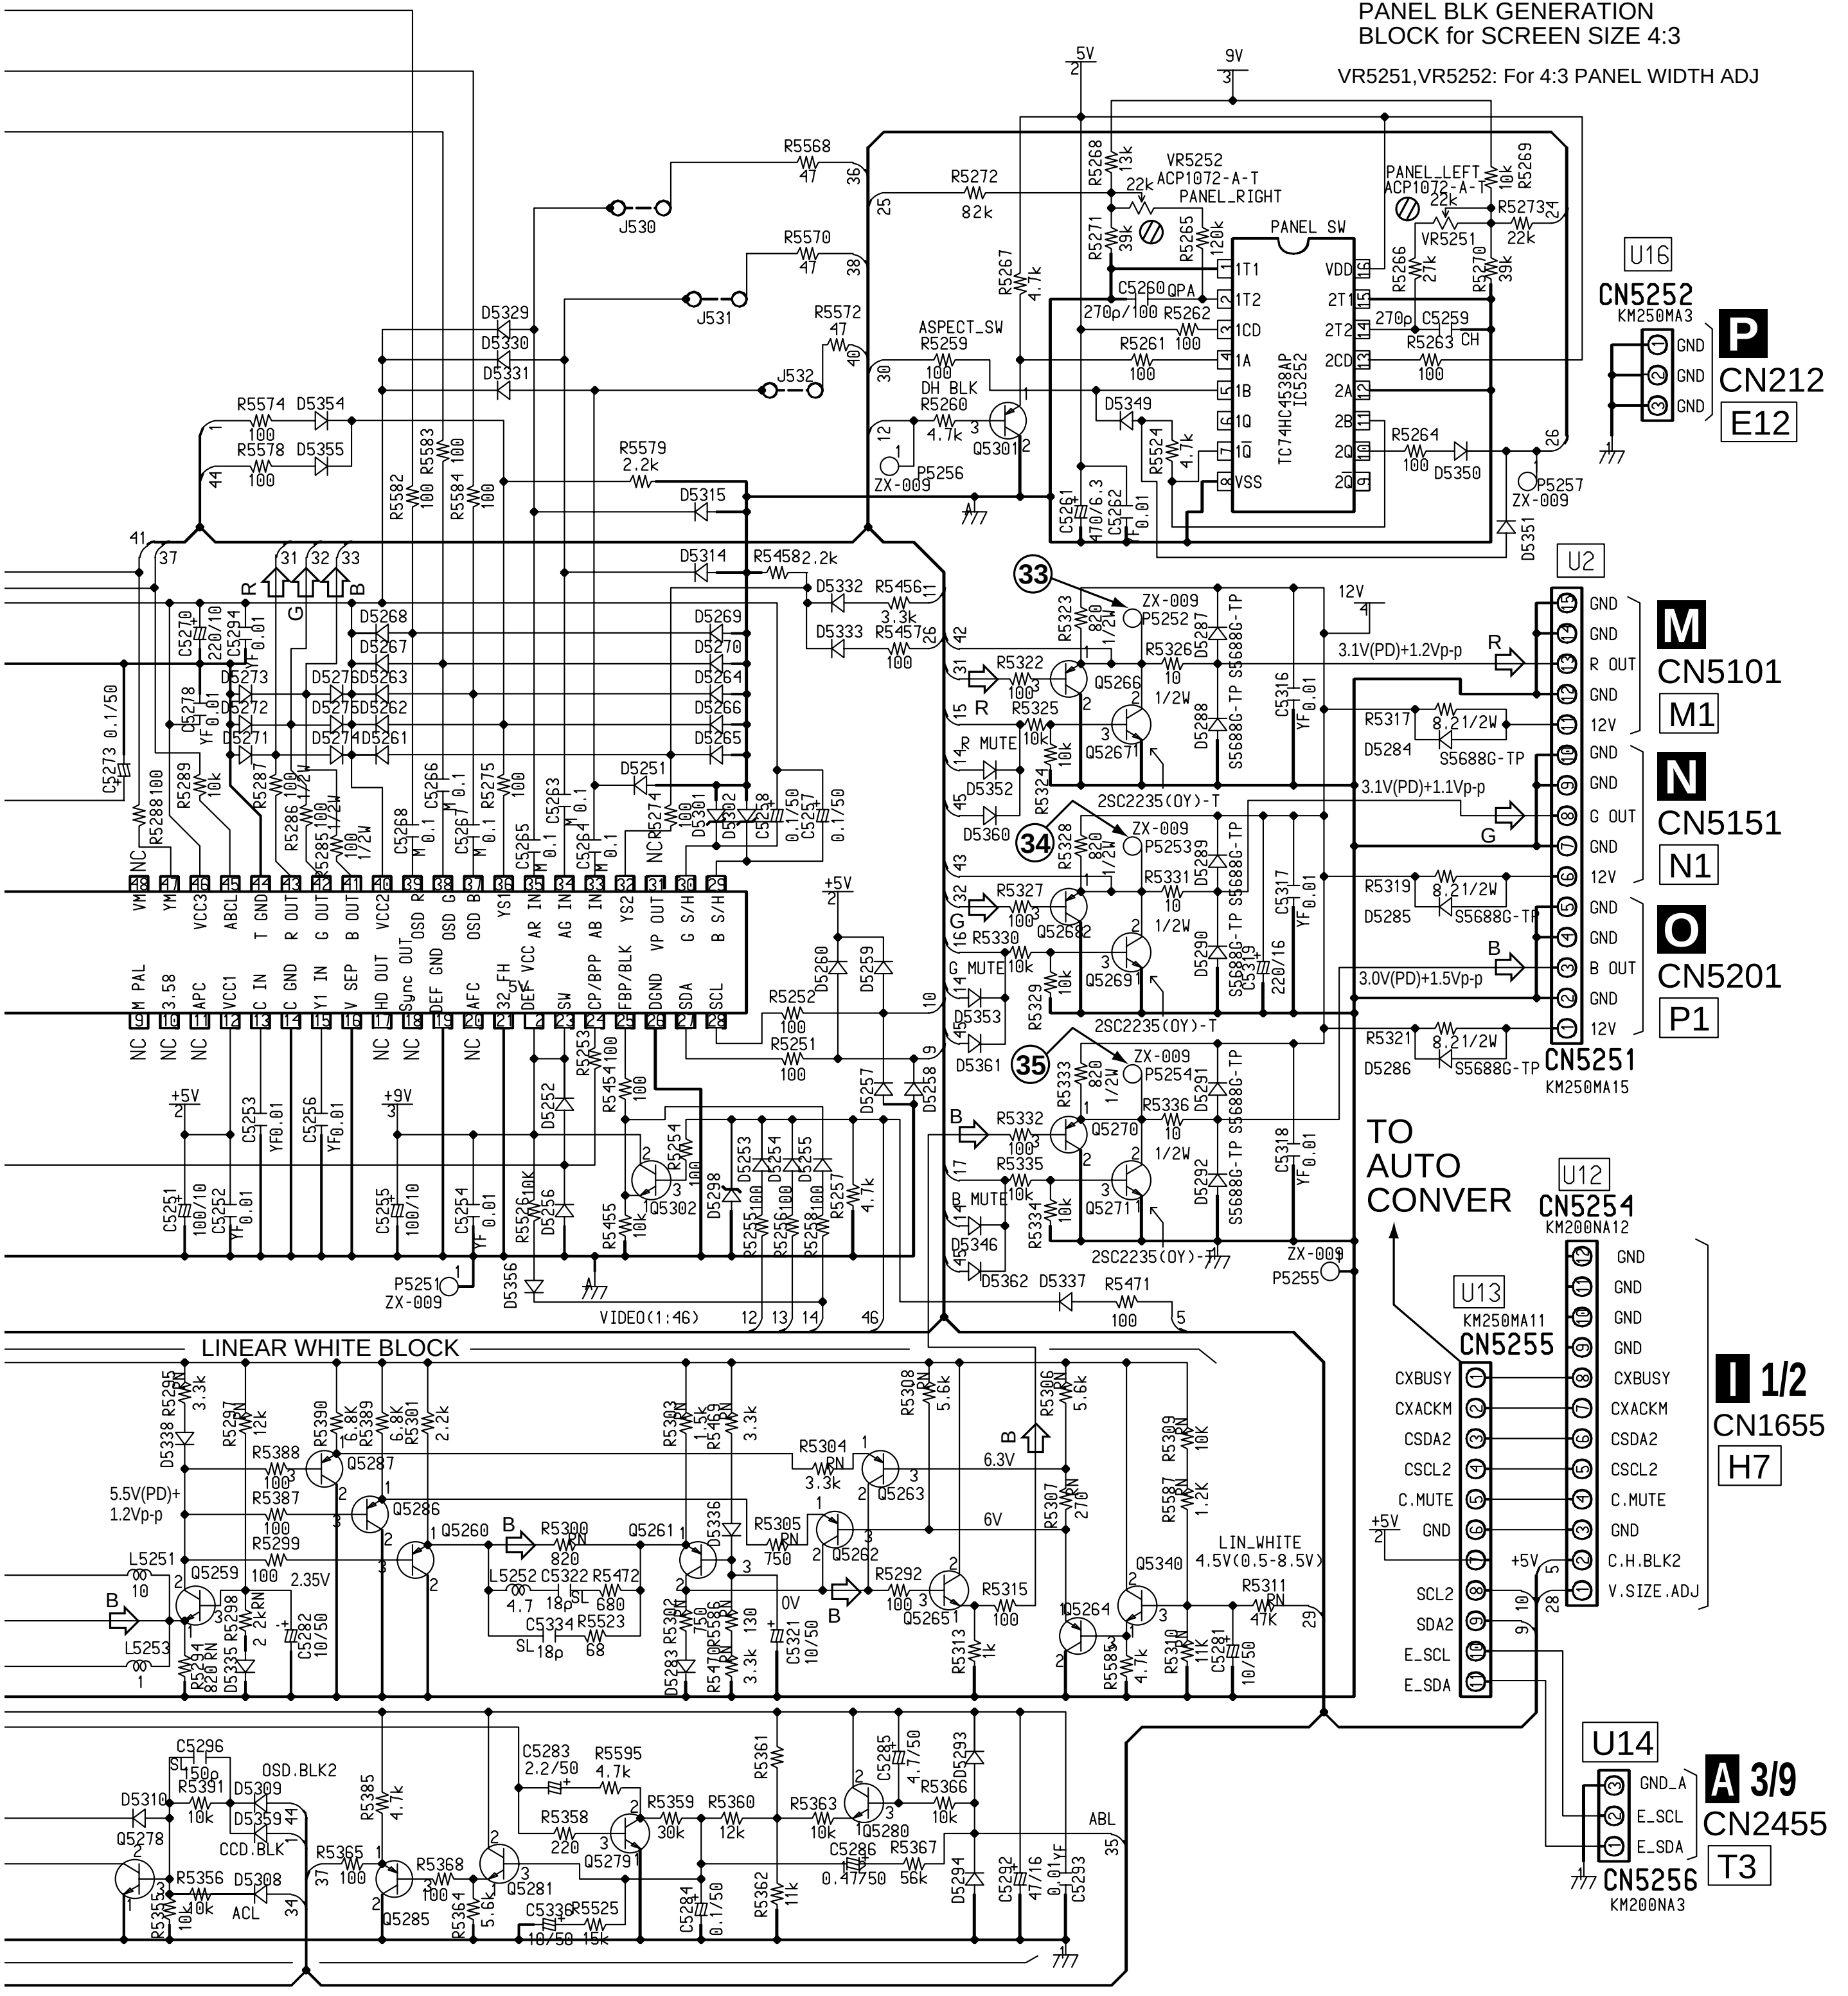
A
B
C
D
TC74HC4538AP IC5252
PANEL SW
VR5252 ACP1072-A-T PANEL_RIGHT
PANEL_LEFT ACP1072-A-T VR5251
ASPECT_SW
DH BLK
J530
J531
J532
5V
9V
+5V
+9V
12V
U16
CN5252 KM250MA3
P CN212 E12
U2
M CN5101 M1
N CN5151 N1
O CN5201 P1
CN5251 KM250MA15
R OUT
G OUT
B OUT
GND
12V
3.1V(PD)+1.2Vp-p
3.1V(PD)+1.1Vp-p
3.0V(PD)+1.5Vp-p
2SC2235(OY)-T
MUTE
TO AUTO CONVER
U12
CN5254 KM200NA12
U13
KM250MA11 CN5255
CXBUSY
CXACKM
CSDA2
CSCL2
C.MUTE
C.H.BLK2
V.SIZE.ADJ
SCL2
SDA2
E_SCL
E_SDA
I 1/2 CN1655 H7
U14
A 3/9 CN2455 T3
CN5256 KM200NA3
GND_A
VIDEO(1:46)
LINEAR WHITE BLOCK
5.5V(PD)+1.2Vp-p
LIN_WHITE 4.5V(0.5-8.5V)
OSD.BLK2
CCD.BLK
ACL
ABL
6.3V
6V
2.35V
0V
ZX-009
VM
YM
VCC3
ABCL
T GND
R OUT
G OUT
B OUT
VCC2
OSD R
OSD G
OSD B
YS1
AR IN
AG IN
AB IN
YS2
VP OUT
G S/H
B S/H
M PAL
3.58
APC
VCC1
C IN
C GND
Y1 IN
V SEP
HD OUT
Sync OUT
DEF GND
AFC
32 FH
DEF VCC
SW
CP/BPP
FBP/BLK
DGND
SDA
SCL

- Resistor indicated in ohm,1/4W±5% tolerance unless otherwise noted.k:k ohm,M:M ohm
- Capacitor indicated in Capacity(uF)/Voltage(V) unless otherwise noted.p:pF indication without voltage is 50V except Electrolytic capacitor.

2SC1740S(RS)-T
MTZJ11-TP
2SA933S(RS)-T
1SS133-TP

This sheet name is 11ku-video3

E 2/2 VIDEO ASSY (2/2)

Input signal
Video signal : EIA full color-bar
Picture quality : Standard
Range :DC range (Unless otherwise noted)

㉗ Foot of R5369 (Sharpness output R-Y)
V: 1V/div. H: 10µsec/div.

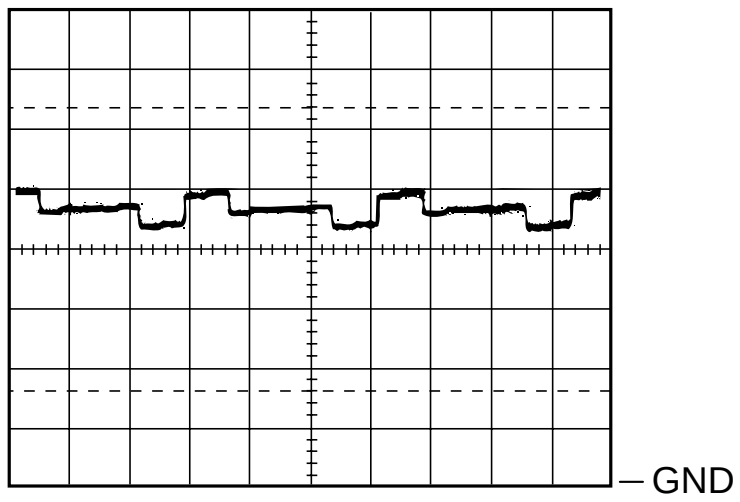

㉘ Foot of R5378 (Sharpness output B-Y)
V: 1V/div. H: 10µsec/div.

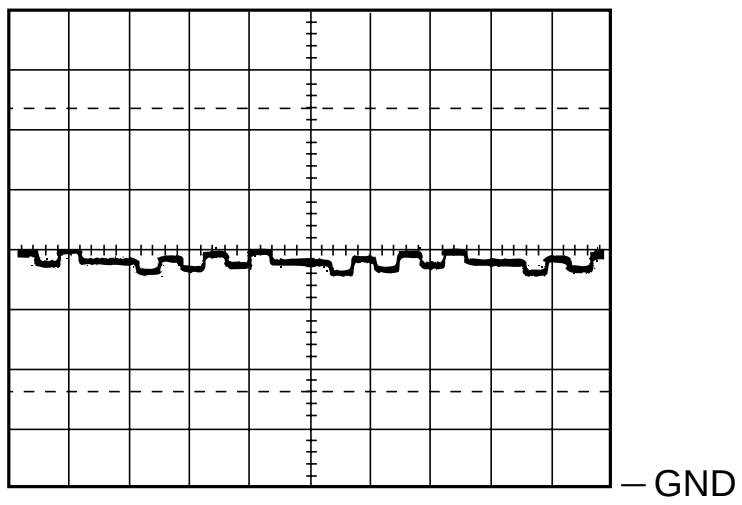

㉙ Foot of R5377 (Sharpness output Y)
V: 1V/div. H: 10µsec/div.

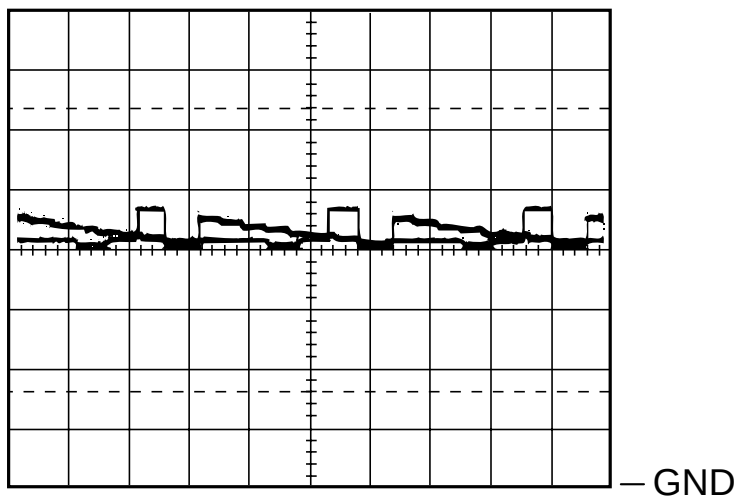

㉚ Q5333 Emitter (Y input)
V: 1V/div. H: 10µsec/div.

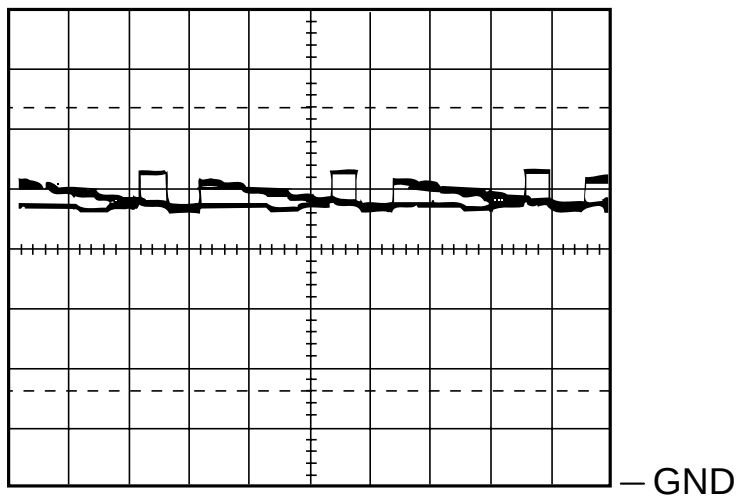

㉛ Q5255 Emitter (B-Y input)
V: 1V/div. H: 10µsec/div.

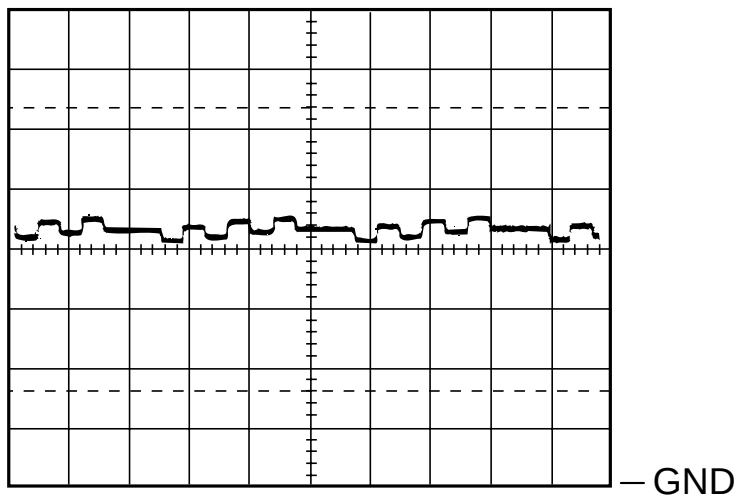

㉜ Q5254 Emitter (R-Y input)
V: 1V/div. H: 10µsec/div.

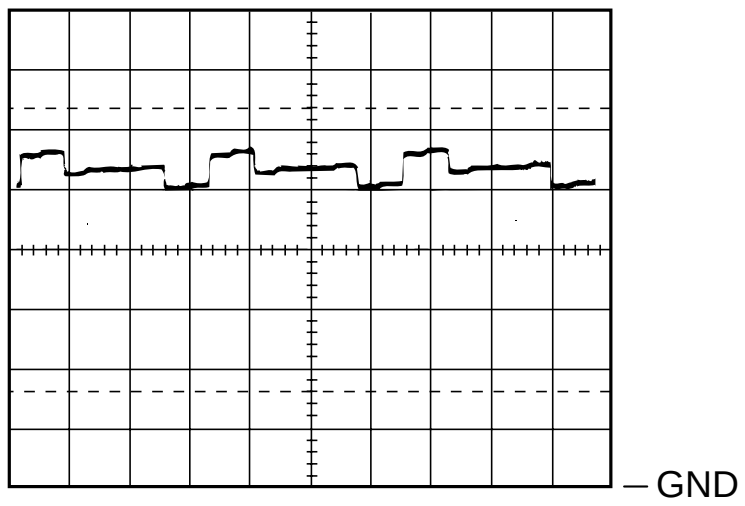

㉝ P5252 (R OUT)
V: 1V/div. H: 10µsec/div.

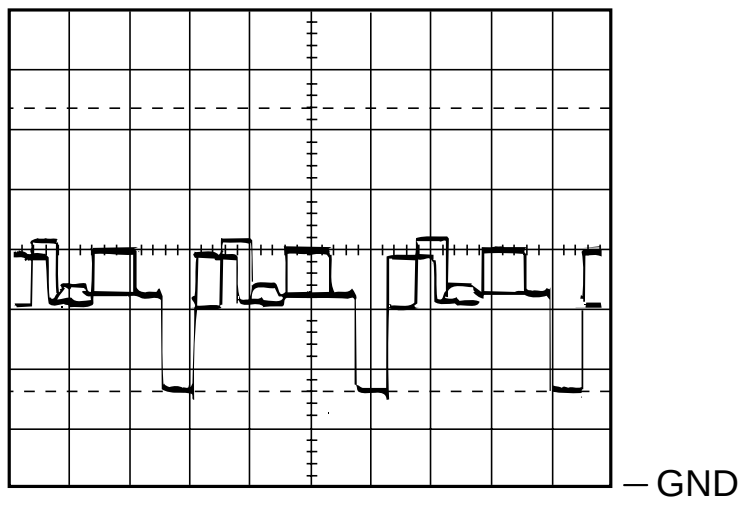

㉞ P5253 (G OUT)
V: 1V/div. H: 10µsec/div.

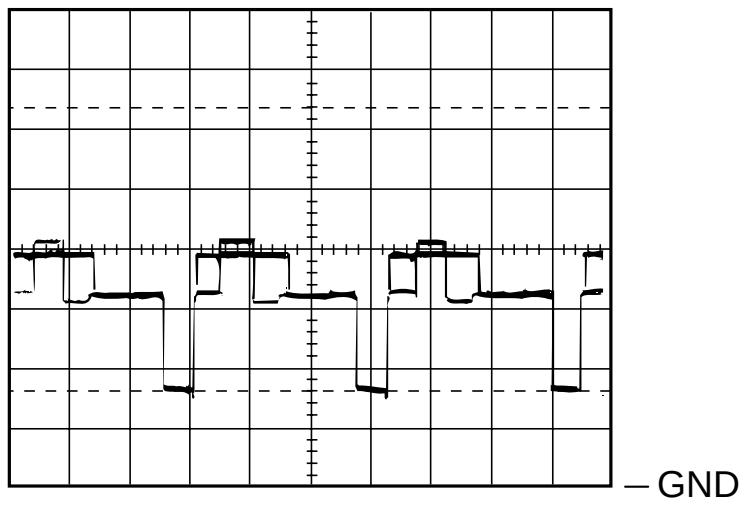

㉟ P5254 (B OUT)
V: 1V/div. H: 10µsec/div.

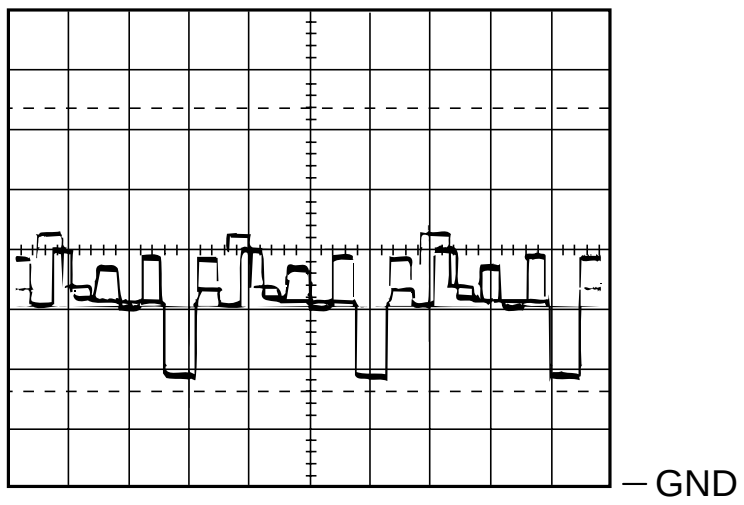

G AUDIO ASSY

Input signal
Video signal : EIA full color-bar , Picture quality : Standard
f = 1kHz , Vol. : MAX (Unless otherwise noted) Vin = 0.4rms
Range :DC range (Unless otherwise noted)

㊱-1 **CN1201-pin 11**
V: 5V/div. H: 0.2msec/div.

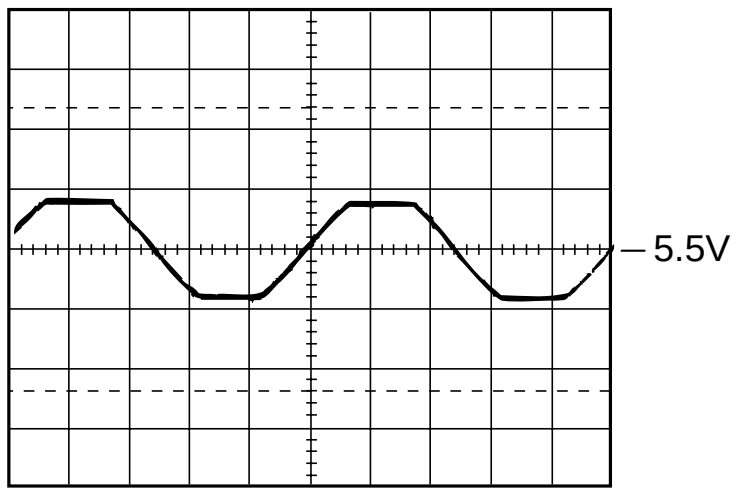

㊱-2 **CN1201-pin 11**
V: 2V/div. H: 0.2msec/div.
• Vol : 40

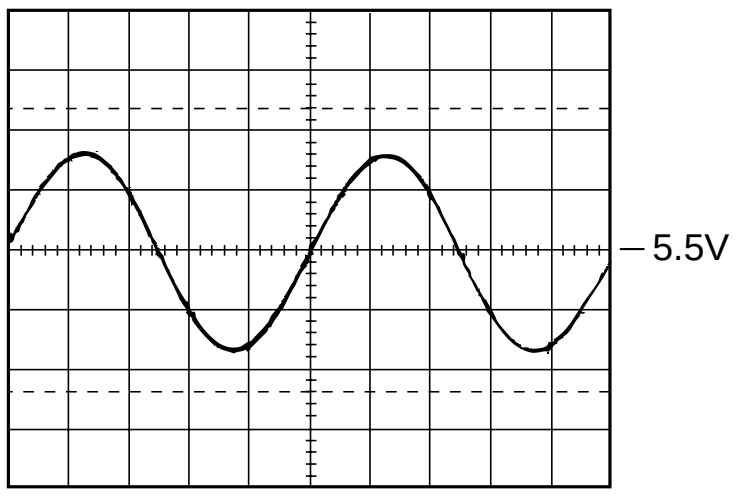

㊲ **CN1201-pin 7**
V: 0.2V/div. H: 0.2msec/div.

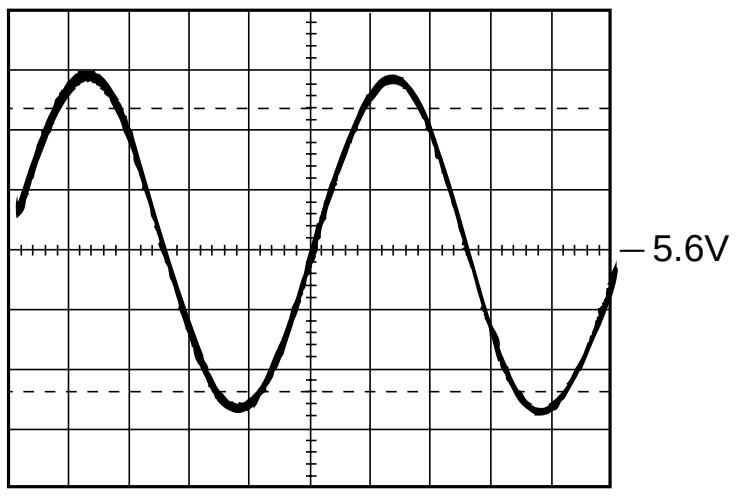

㊳ **IC1201-pin 26**
V: 0.2V/div. H: 0.2msec/div.

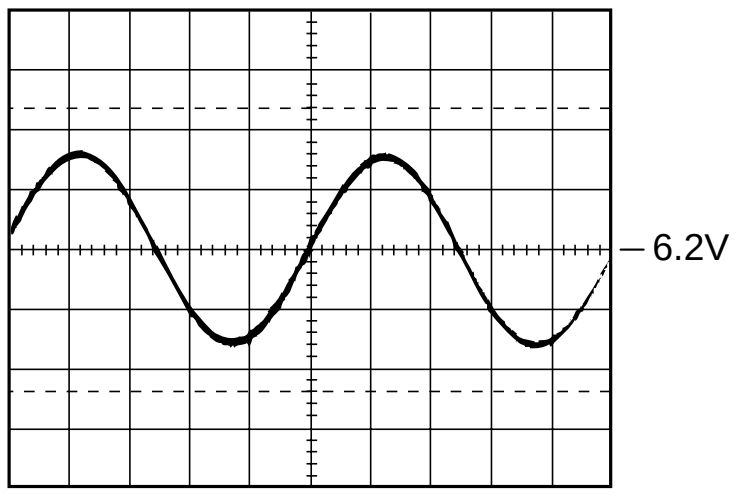

㊴ **IC1201-pin 14, 17**
V: 0.2V/div. H: 0.2msec/div.

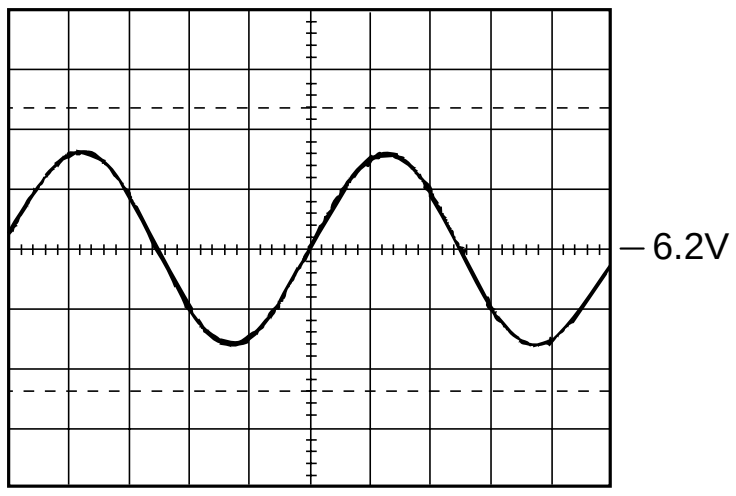

㊵ **C1229 + (plus) side**
V: 0.2V/div. H: 0.2msec/div.

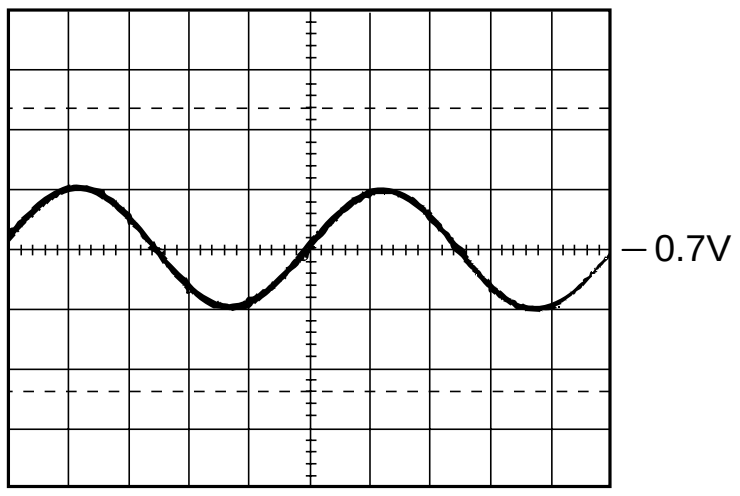

㊶ **Q1201 Base**
V: 0.2V/div. H: 0.2msec/div.

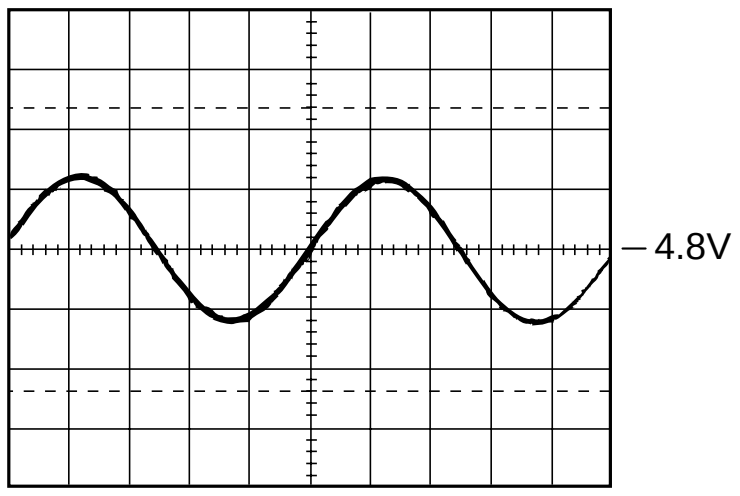

㊷ **C1241 – (minus) side**
V: 0.2V/div. H: 0.2msec/div.

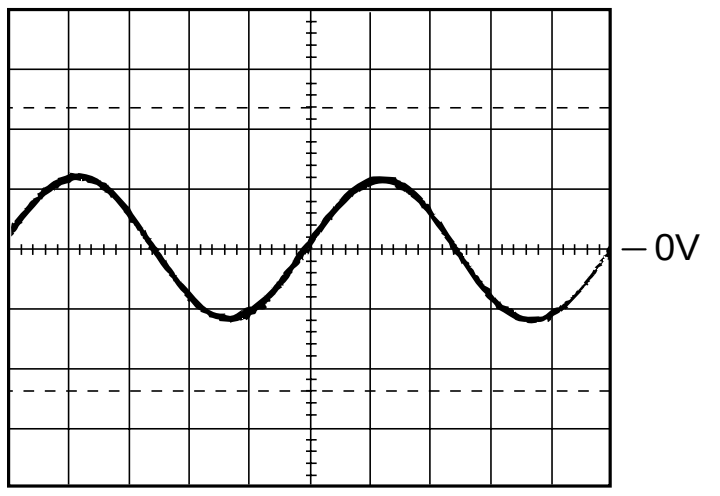

㊸ **CN1202-pin 7**
V: 5V/div. H: 0.2msec/div.

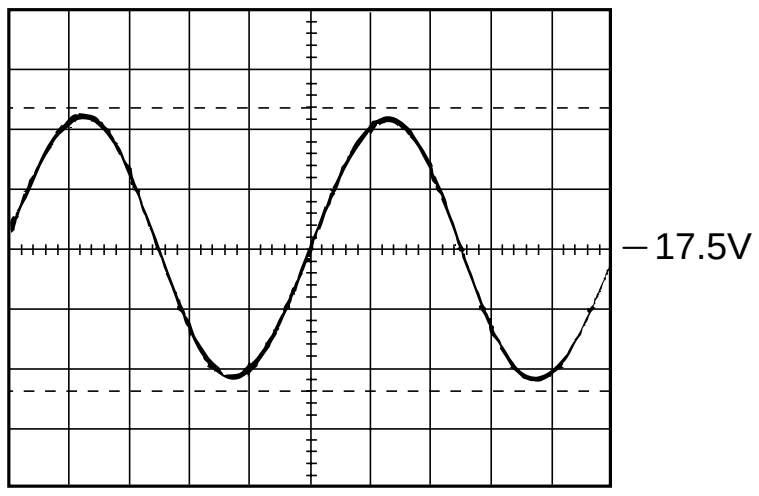

IC1201 (UPC1853CT-01)

Pin No.	Voltage(V)	Pin No.	Voltage(V)
1	0	16	6.2
2	6.2	17	6.2
3	6.2	18	6.2
4	6.2	19	4.8
5	6.2	20	-
6	6.2	21	-
7	6.2	22	5.1
8	6.2	23	0
9	6.2	24	6.2
10	6.2	25	6.2
11	6.2	26	6.2
12	6.2	27	6.2
13	6.2	28	6.2
14	6.2	29	6.2
15	12.4	30	6.2

IC1202 (LA4280-P)

Pin No.	Voltage (V)
1	0.8
2	1.1
3	0.7
4	17.5
5	0
6	0.7
7	1.1
8	0.8
9	0
10	0
11	17.5
12	35.5
13	17.5
14	0

3.16 AUDIO ASSY

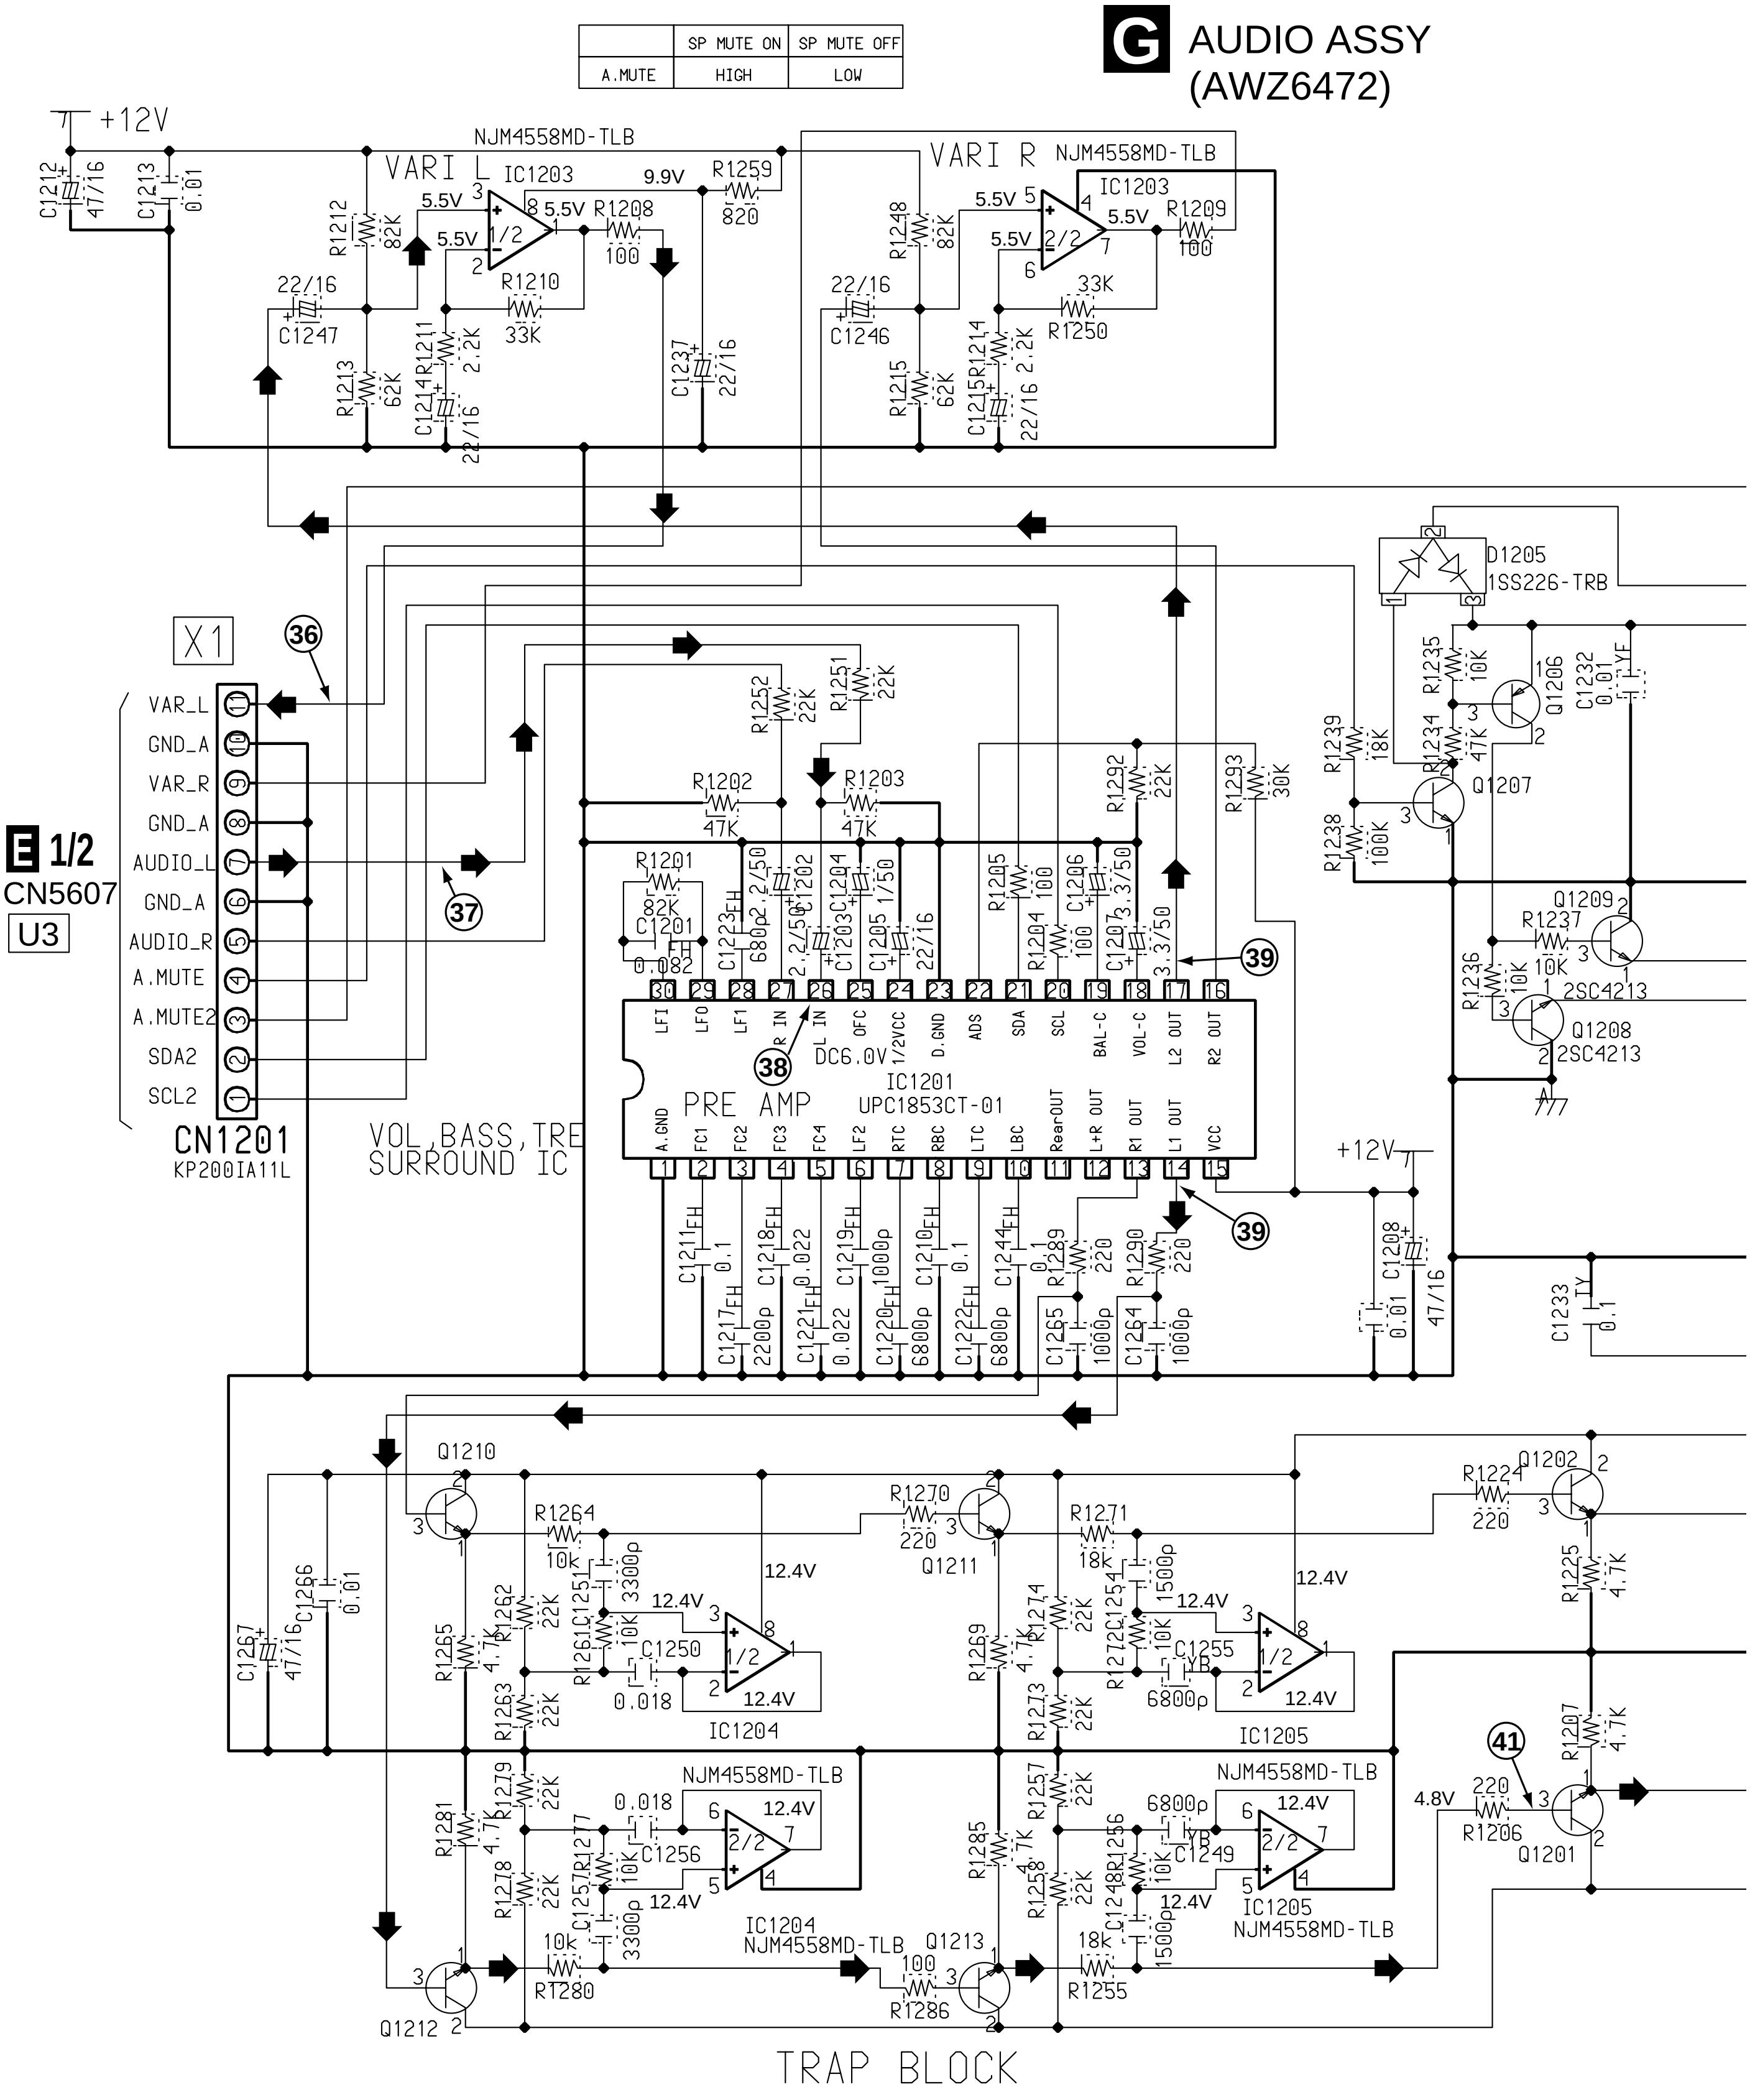

	SP MUTE ON	SP MUTE OFF
A.MUTE	HIGH	LOW

G AUDIO ASSY
(AWZ6472)
+12V
C1212 47/16
C1213 0.01
NJM4558MD-TLB
VARI L
IC1203
9.9V
R1259 820
5.5V
1/2
R1208 100
R1212 82K
R1210 33K
22/16
C1247
R1211 2.2K
R1213 62K
C1214 22/16
C1237 22/16
VARI R
NJM4558MD-TLB
IC1203
2/2
R1209 100
R1248 82K
33K
R1250
C1246
R1214 2.2K
R1215 62K
C1215 22/16
D1205
1SS226-TRB
X1
36
VAR_L
GND_A
VAR_R
GND_A
AUDIO_L
GND_A
AUDIO_R
A.MUTE
A.MUTE2
SDA2
SCL2
E 1/2
CN5607
U3
CN1201
KP200IA11L
37
R1252 22K
R1251 22K
R1202 47K
R1203 47K
R1201 82K
C1201 0.082
C1223 680p
C1202 2.2/50
C1204 2.2/50
C1203
C1205 1/50
22/16
R1205 100
R1204 100
C1206 3.3/50
C1207 3.3/50
R1292 22K
R1293 30K
39
38
LFI LFO LF1 R IN L IN OFC 1/2VCC D.GND ADS SDA SCL BAL-C VOL-C L2 OUT R2 OUT
DC6.0V
IC1201
PRE AMP
UPC1853CT-01
A.GND FC1 FC2 FC3 FC4 LF2 RTC RBC LTC LBC RearOUT L+R OUT R1 OUT L1 OUT VCC
VOL,BASS,TRE
SURROUND IC
C1211 0.1
C1218 0.022
C1219 1000p
C1210 0.1
C1244 0.1
C1217 2200p
C1221 0.022
C1220 6800p
C1222 6800p
R1289 220
R1290 220
C1265 1000p
C1264 1000p
+12V
C1208 47/16
0.01
C1233 0.1
R1235 10K
Q1206
C1232 0.01
R1234 47K
R1239 18K
Q1207
R1238 100K
Q1209
R1237 10K
R1236 10K
2SC4213
Q1208
2SC4213
Q1210
R1264 10k
C1251 3300p
12.4V
R1261 10K
C1250 0.018
R1262 22K
R1265 4.7K
R1263 22K
IC1204
C1266 0.01
C1267 47/16
R1270 220
Q1211
R1271 18K
C1254 1500p
R1272 10K
C1255 6800p
R1274 22K
R1269 4.7K
R1273 22K
IC1205
Q1202
R1224 220
R1225 4.7K
41
R1207 4.7K
4.8V
R1206 220
Q1201
NJM4558MD-TLB
R1279 22K
R1281 4.7K
R1277 10K
C1256 0.018
C1257 3300p
R1278 22K
R1280 10k
Q1212
IC1204
NJM4558MD-TLB
Q1213
R1286 100
R1257 22K
R1285 4.7K
R1256 10K
C1249 6800p
C1248 1500p
R1258 22K
R1255 18K
IC1205
NJM4558MD-TLB
TRAP BLOCK

➡ : AUDIO SIGNAL ROUTE

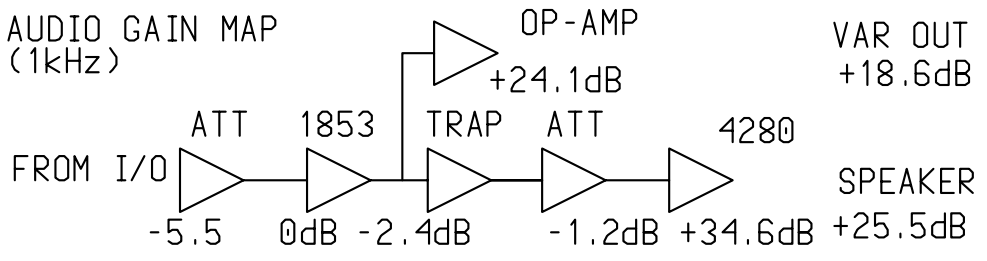
AUDIO GAIN MAP
(1kHz)
OP-AMP
+24.1dB
VAR OUT
+18.6dB
ATT
1853
TRAP
ATT
4280
FROM I/O
SPEAKER
+25.5dB
-5.5
0dB
-2.4dB
-1.2dB
+34.6dB

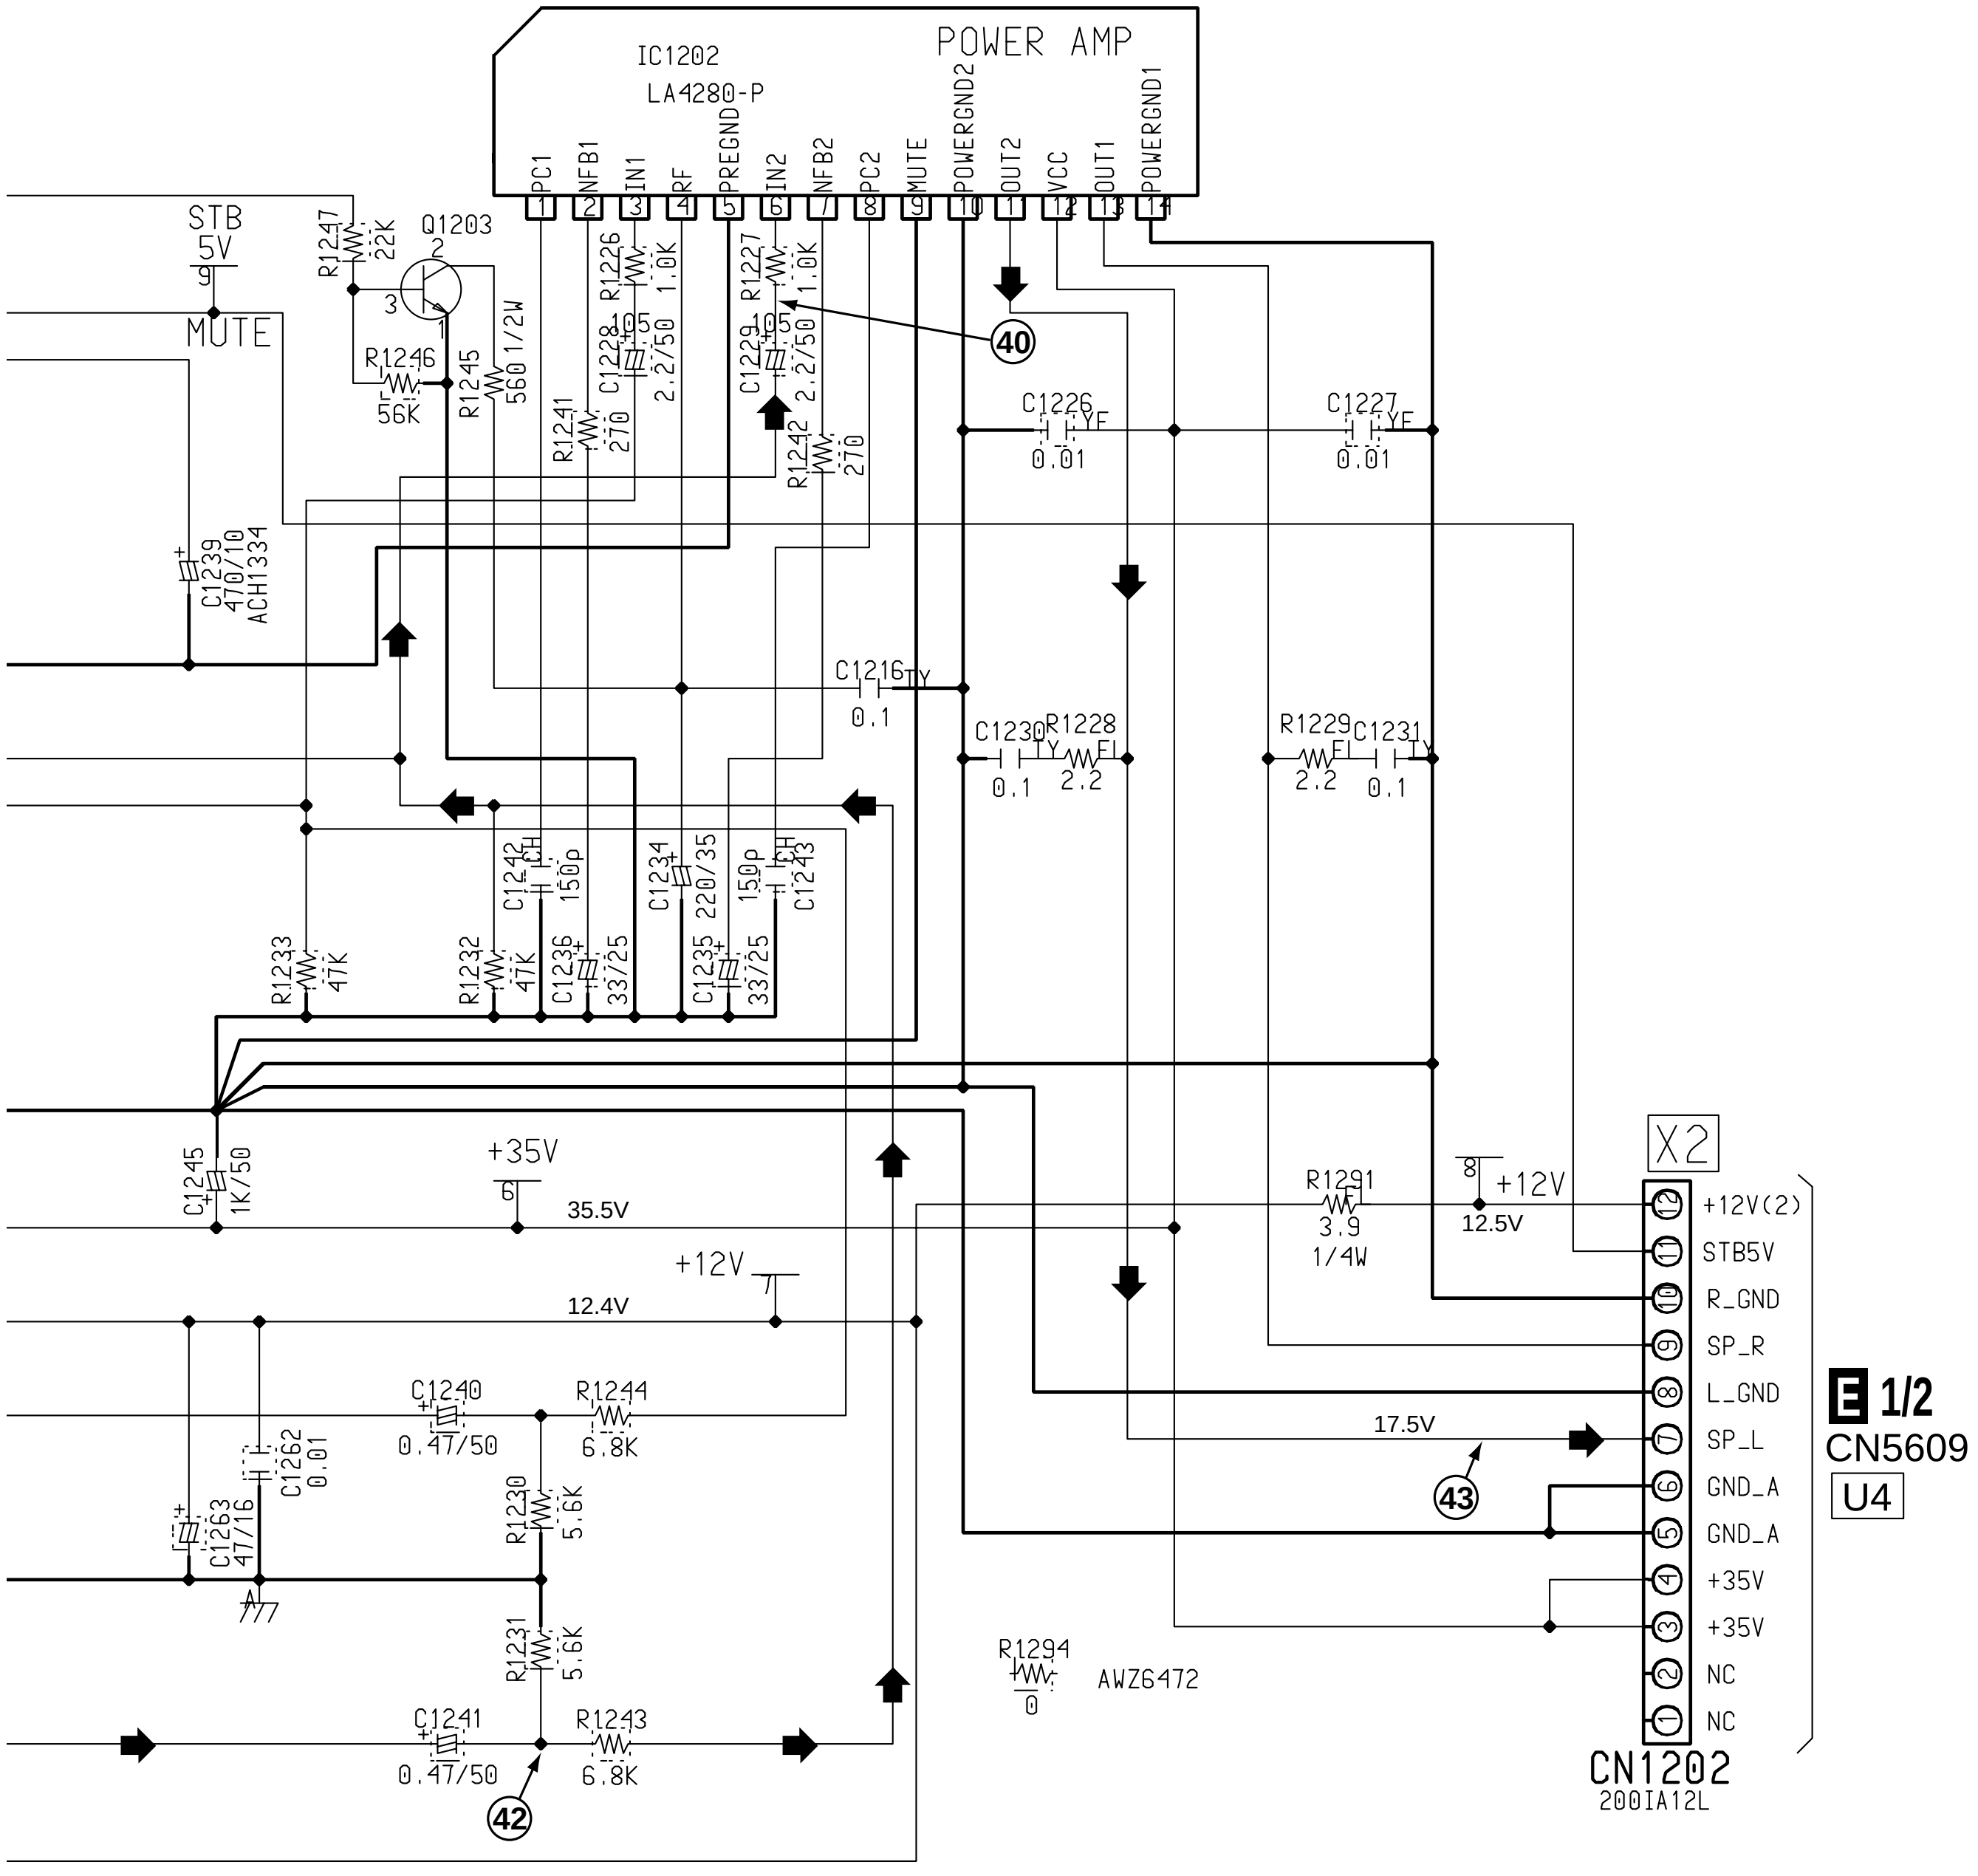
IC1202
LA4280-P
POWER AMP
PC1
NFB1
IN1
RF
PREGND
IN2
NFB2
PC2
MUTE
POWERGND2
OUT2
VCC
OUT1
POWERGND1
1
2
3
4
5
6
7
8
9
10
11
12
13
14
STB
5V
9
MUTE
R1247
22K
Q1203
R1246
56K
R1245
560 1/2W
R1226
1.0K
R1227
1.0K
C1228
105
2.2/50
C1229
105
2.2/50
R1241
270
R1242
270
40
C1226
YF
0.01
C1227
YF
0.01
C1239
470/10
ACH1334
C1216
TY
0.1
C1230
TY
0.1
R1228
FL
2.2
R1229
FL
2.2
C1231
TY
0.1
C1242
CH
150p
C1234
220/35
C1243
CH
150p
R1233
47K
R1232
47K
C1236
33/25
C1235
33/25
C1245
1K/50
+35V
6
35.5V
+12V
7
12.4V
R1291
3.9
1/4W
8
+12V
12.5V
X2
+12V(2)
STB5V
R_GND
SP_R
L_GND
SP_L
GND_A
GND_A
+35V
+35V
NC
NC
12
11
10
9
8
7
6
5
4
3
2
1
E 1/2
CN5609
U4
CN1202
200IA12L
17.5V
43
C1240
0.47/50
R1244
6.8K
C1262
0.01
C1263
47/16
R1230
5.6K
R1231
5.6K
R1294
0
AWZ6472
C1241
0.47/50
R1243
6.8K
42

Notes

1.RESISTORS

Indicated in Ω

tolerance unless otherwise noted k Ω

2.CAPASITORS

Indicated in capacity(uF)/Voltage unless otherwise noted p pF

Indication without voltage is 50V except electrolytic capacitor.

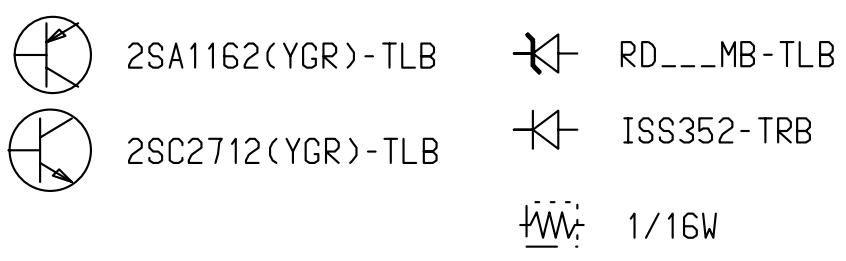
2SA1162(YGR)-TLB
2SC2712(YGR)-TLB
RD___MB-TLB
ISS352-TRB
1/16W

3.17 SUB VIDEO SERVICE ASSY (1/10)

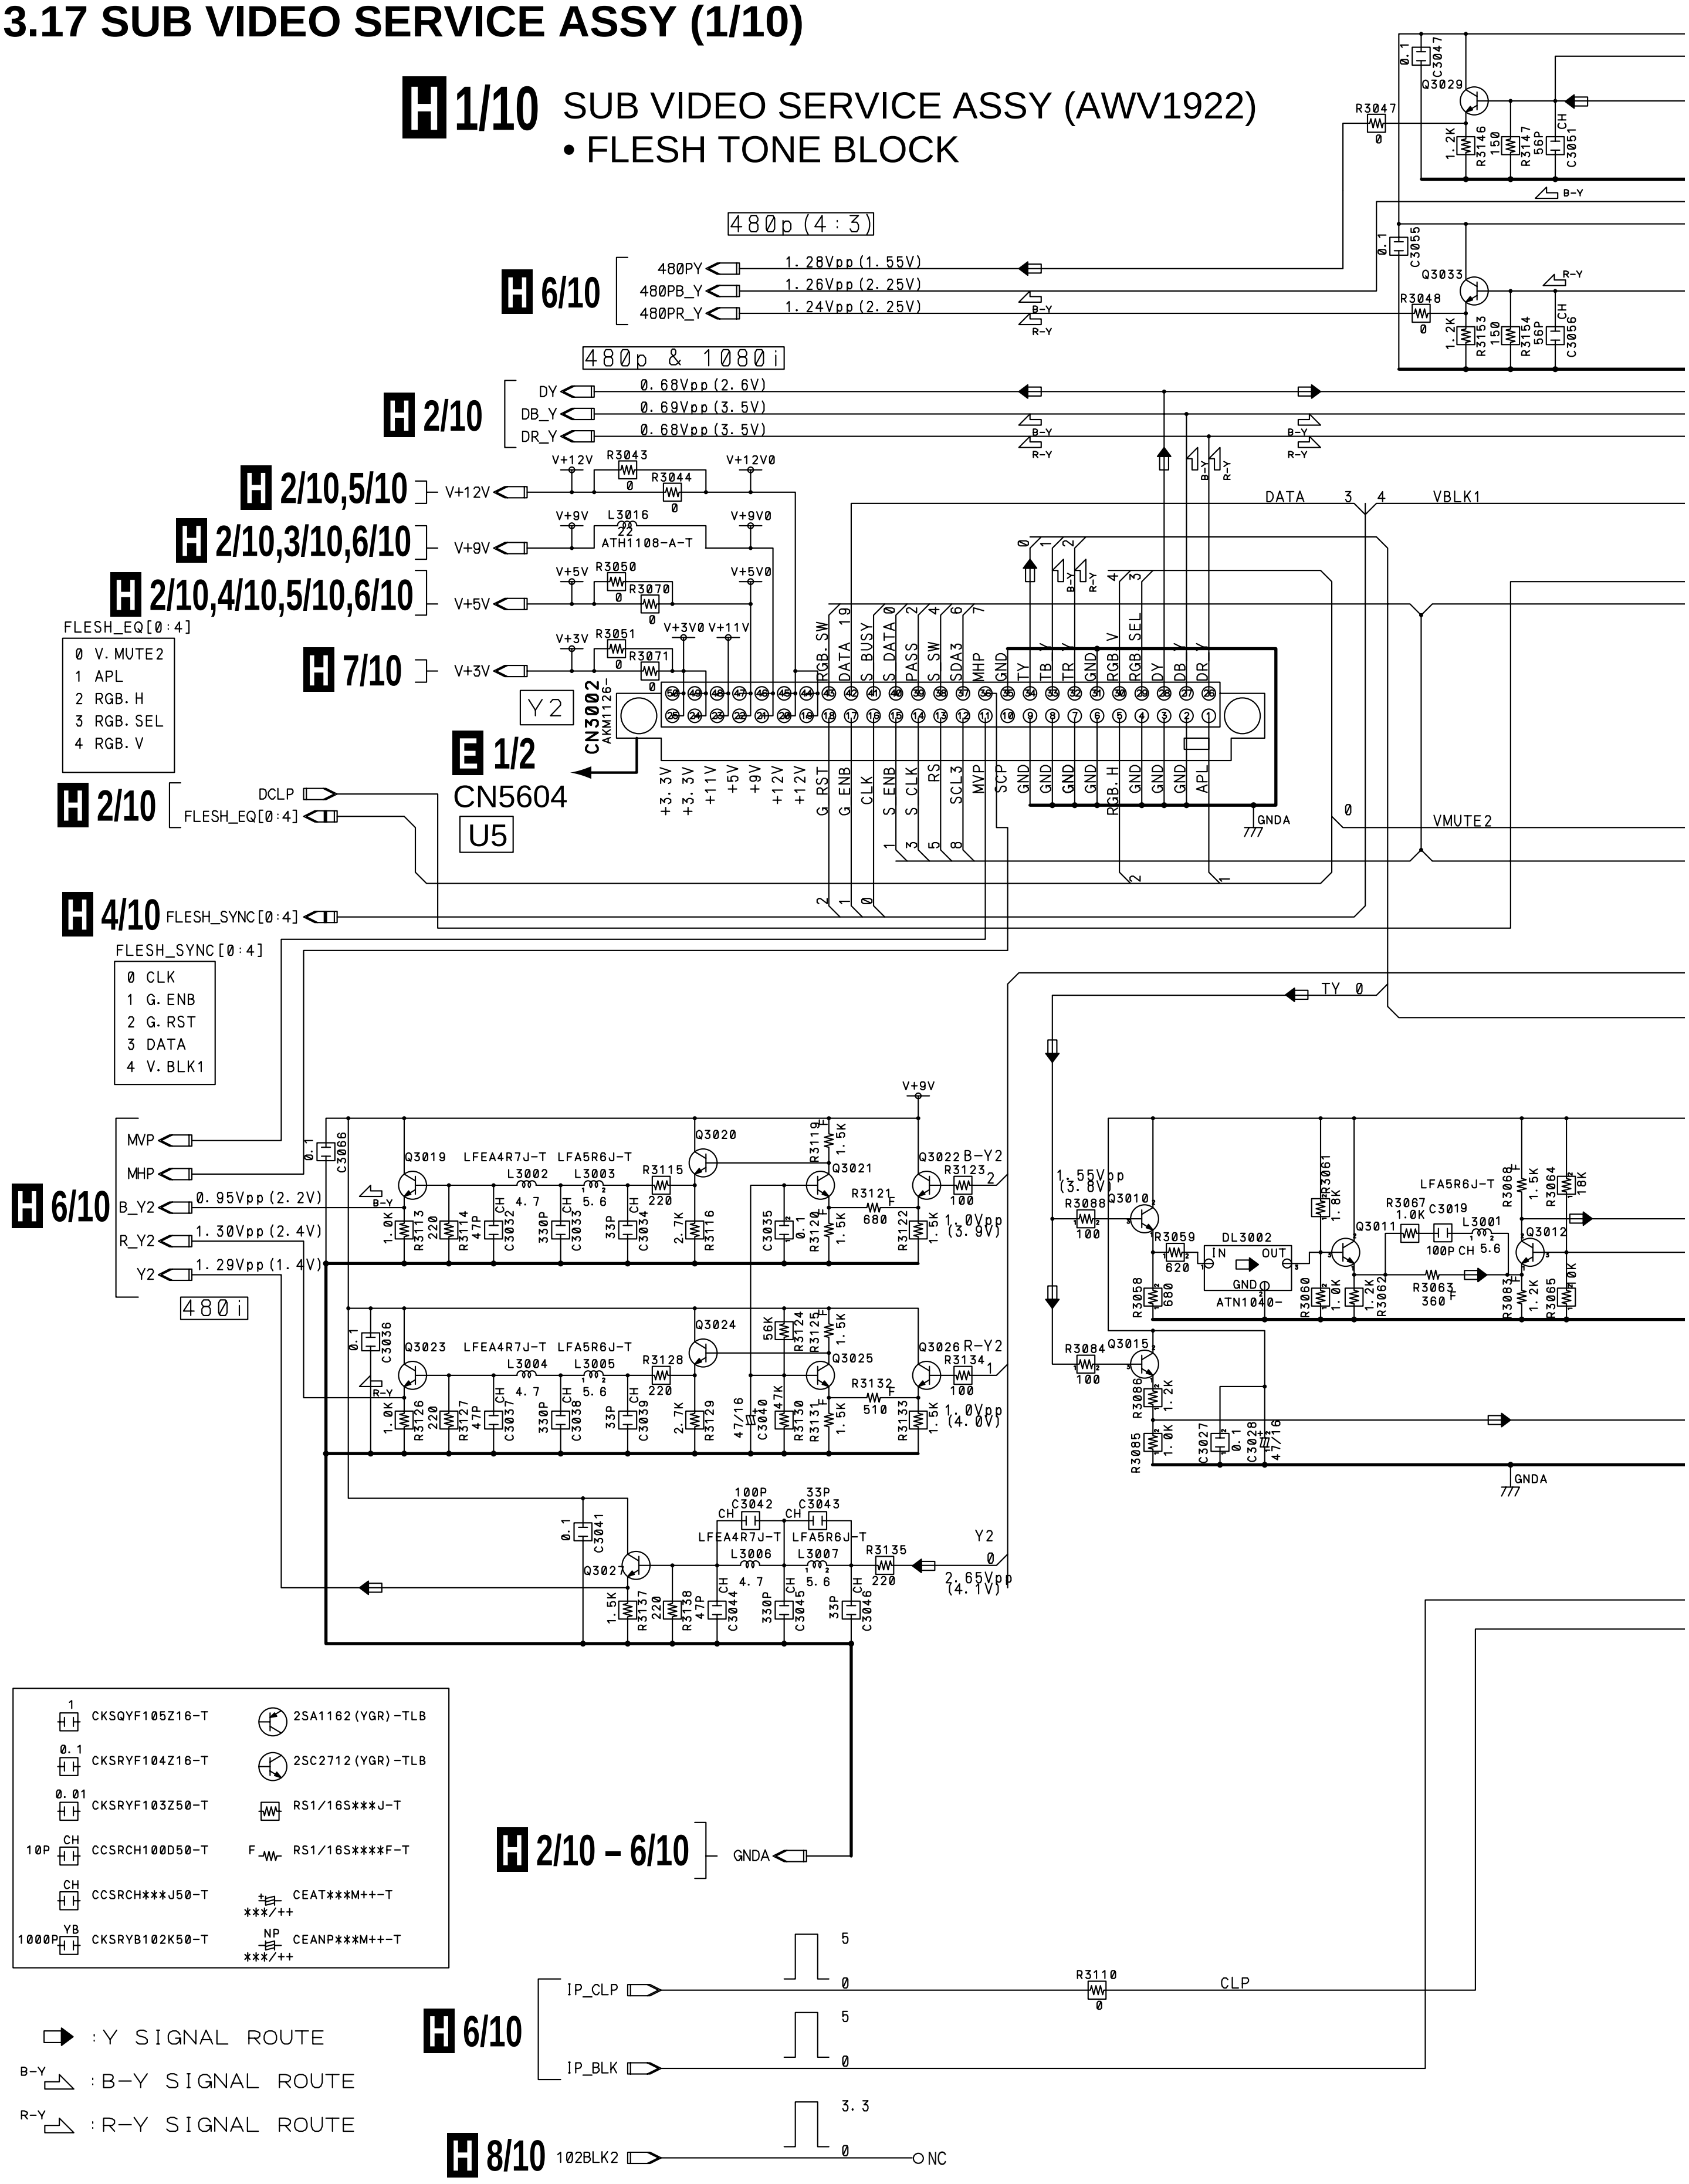
H 1/10
SUB VIDEO SERVICE ASSY (AWV1922)
• FLESH TONE BLOCK
480p (4:3)
H 6/10
480PY 1.28Vpp (1.55V)
480PB_Y 1.26Vpp (2.25V)
480PR_Y 1.24Vpp (2.25V)
480p & 1080i
H 2/10
DY 0.68Vpp (2.6V)
DB_Y 0.69Vpp (3.5V)
DR_Y 0.68Vpp (3.5V)
H 2/10,5/10 V+12V
H 2/10,3/10,6/10 V+9V
H 2/10,4/10,5/10,6/10 V+5V
H 7/10 V+3V
FLESH_EQ[0:4]
0 V.MUTE2
1 APL
2 RGB.H
3 RGB.SEL
4 RGB.V
H 2/10 DCLP FLESH_EQ[0:4]
CN3002 AKM1126-
Y2
E 1/2
CN5604
U5
H 4/10 FLESH_SYNC[0:4]
FLESH_SYNC[0:4]
0 CLK
1 G.ENB
2 G.RST
3 DATA
4 V.BLK1
DATA VBLK1
VMUTE2
TY 0
GNDA
H 6/10
MVP
MHP
B_Y2 0.95Vpp (2.2V)
R_Y2 1.30Vpp (2.4V)
Y2 1.29Vpp (1.4V)
480i
Q3019 Q3020 Q3021 Q3022 Q3023 Q3024 Q3025 Q3026 Q3027
Q3029 Q3033 Q3010 Q3011 Q3012 Q3015
DL3002 ATN1040-
1.0Vpp (3.9V)
1.0Vpp (4.0V)
2.65Vpp (4.1V)
1.55Vpp (3.8V)
CKSQYF105Z16-T
CKSRYF104Z16-T
CKSRYF103Z50-T
CCSRCH100D50-T
CCSRCH***J50-T
CKSRYB102K50-T
2SA1162(YGR)-TLB
2SC2712(YGR)-TLB
RS1/16S***J-T
RS1/16S****F-T
CEAT***M++-T
CEANP***M++-T
H 2/10 – 6/10 GNDA
H 6/10 IP_CLP IP_BLK
CLP
H 8/10 102BLK2 NC
: Y SIGNAL ROUTE
: B-Y SIGNAL ROUTE
: R-Y SIGNAL ROUTE

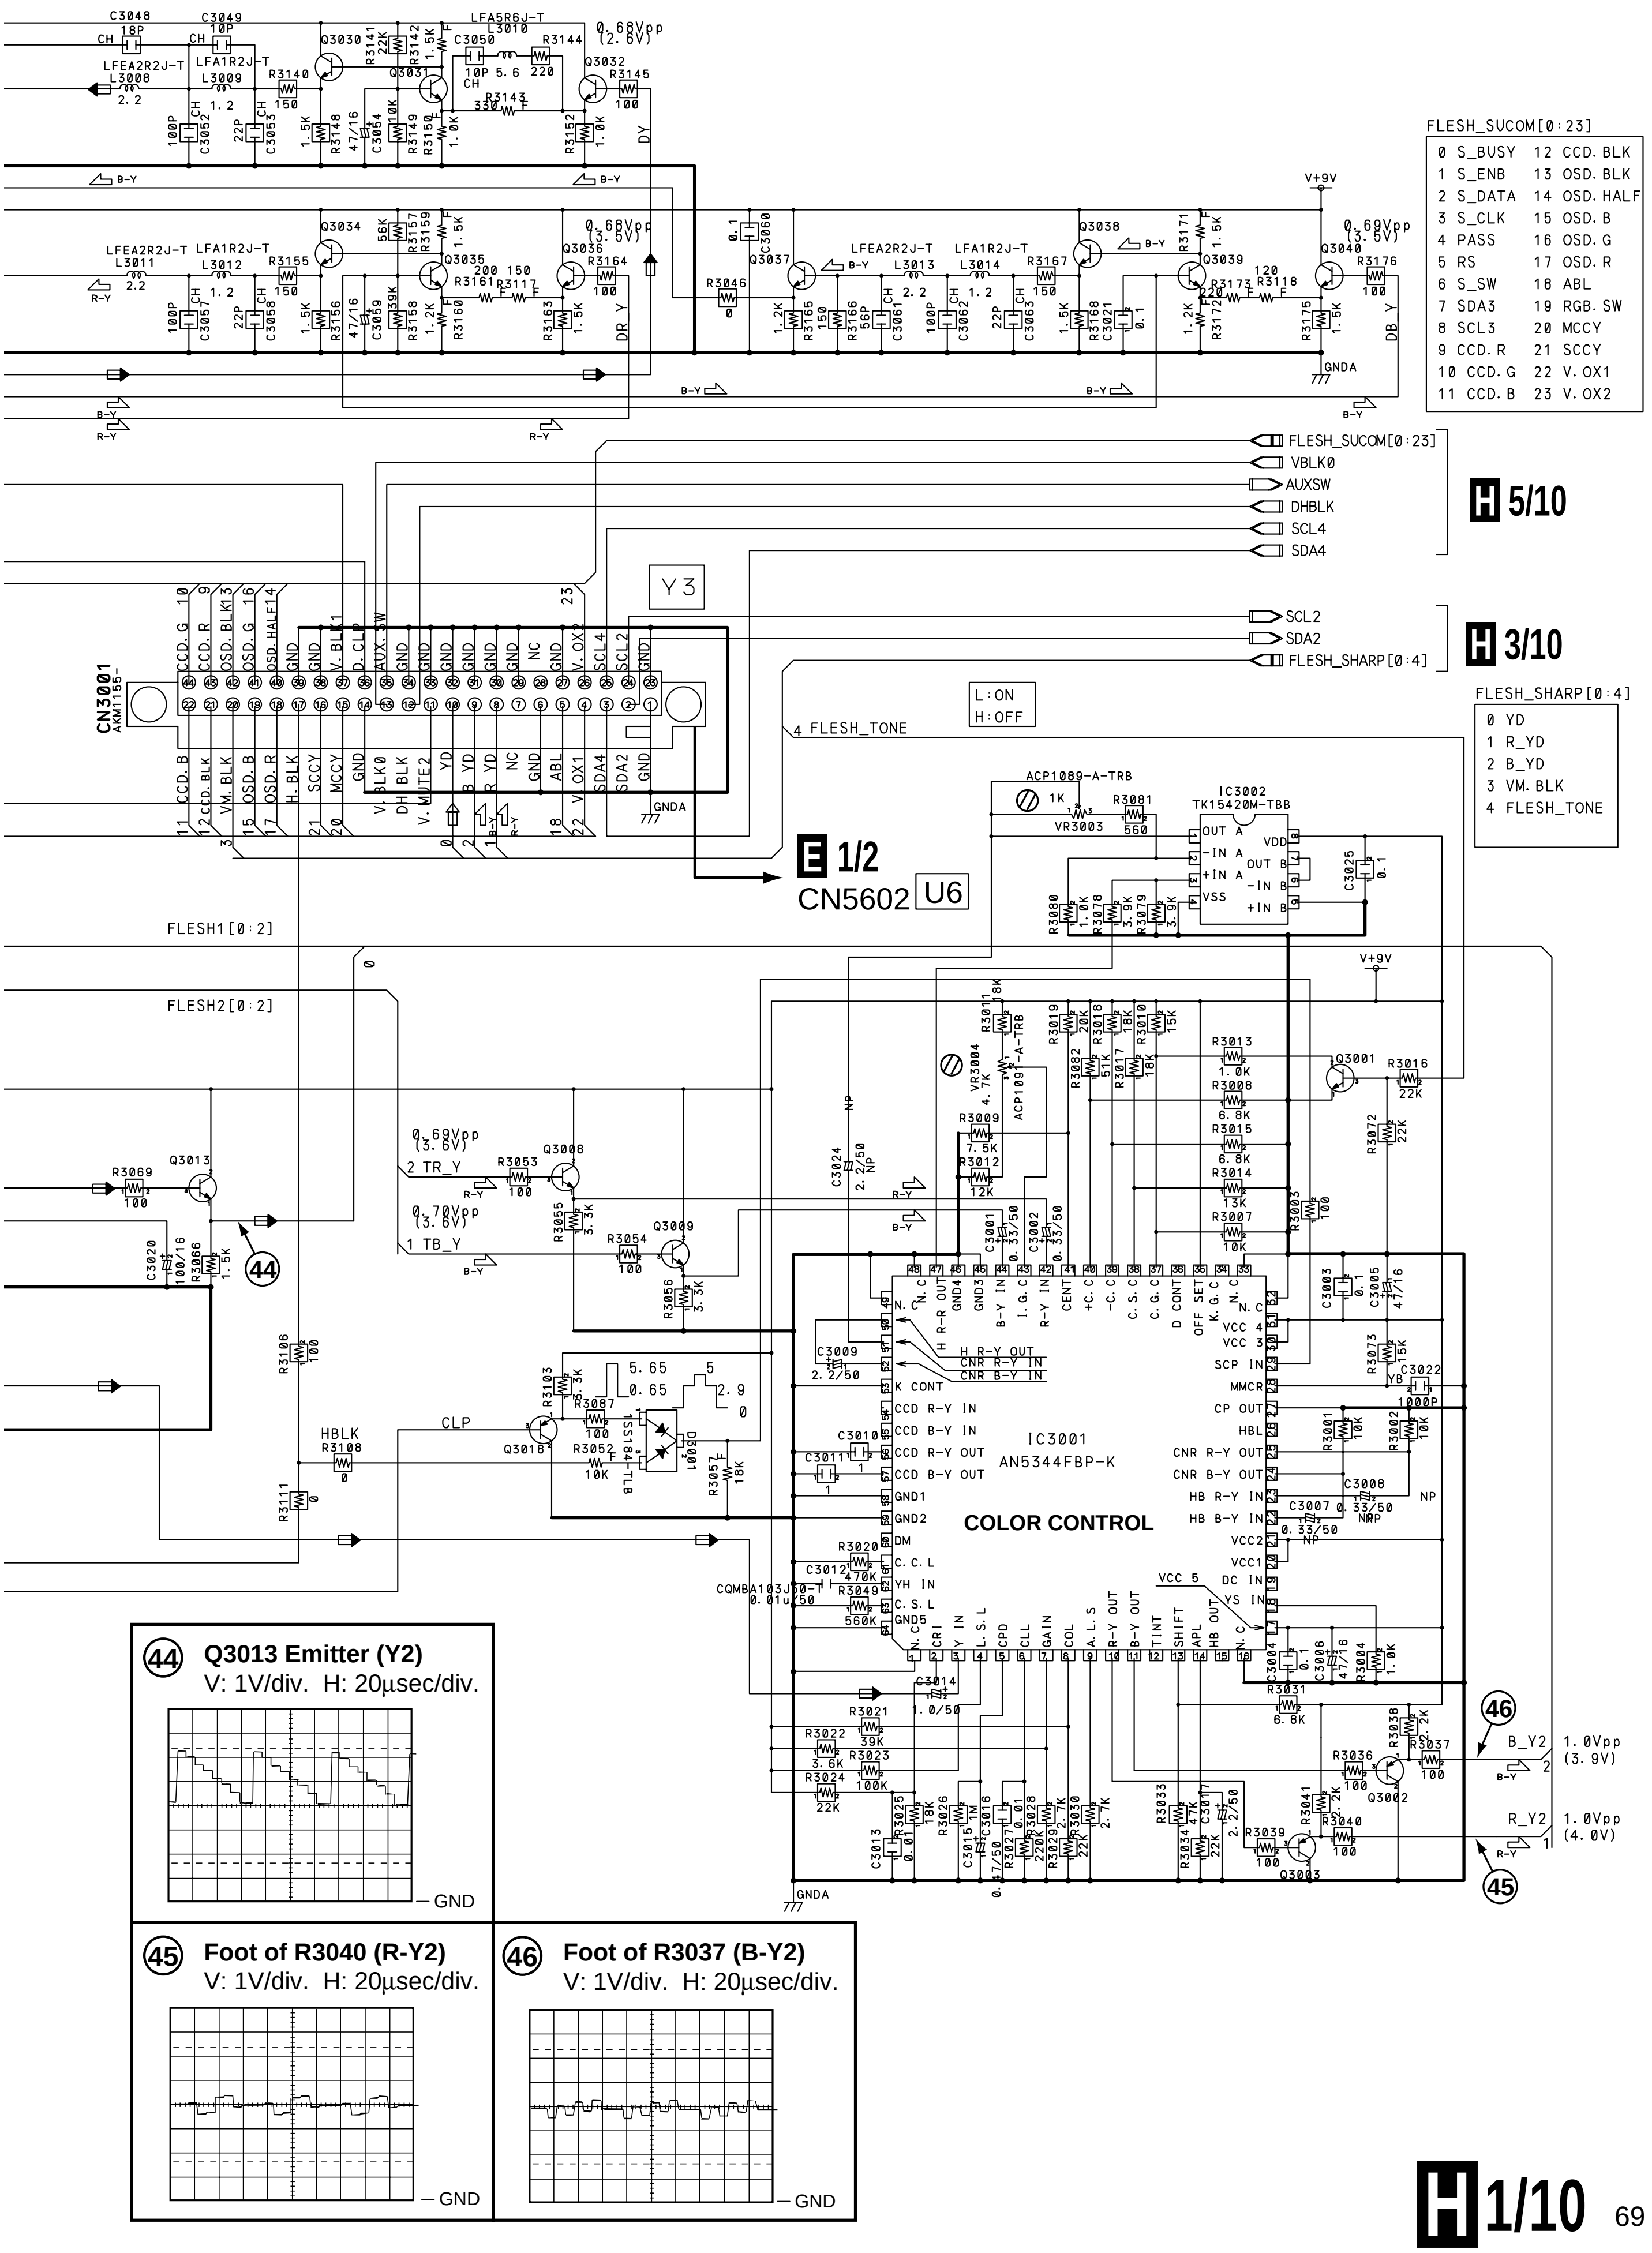
FLESH_SUCOM[0:23]
0 S_BUSY
1 S_ENB
2 S_DATA
3 S_CLK
4 PASS
5 RS
6 S_SW
7 SDA3
8 SCL3
9 CCD.R
10 CCD.G
11 CCD.B
12 CCD.BLK
13 OSD.BLK
14 OSD.HALF
15 OSD.B
16 OSD.G
17 OSD.R
18 ABL
19 RGB.SW
20 MCCY
21 SCCY
22 V.OX1
23 V.OX2
FLESH_SUCOM[0:23]
VBLK0
AUXSW
DHBLK
SCL4
SDA4
H 5/10
SCL2
SDA2
FLESH_SHARP[0:4]
H 3/10
FLESH_SHARP[0:4]
0 YD
1 R_YD
2 B_YD
3 VM.BLK
4 FLESH_TONE
L:ON
H:OFF
4 FLESH_TONE
Y3
CN3001
AKM1155-
E 1/2
CN5602 U6
ACP1089-A-TRB
VR3003
IC3002
TK15420M-TBB
FLESH1[0:2]
FLESH2[0:2]
IC3001
AN5344FBP-K
COLOR CONTROL
0.68Vpp (2.6V)
0.68Vpp (3.5V)
0.69Vpp (3.5V)
0.69Vpp (3.6V)
0.70Vpp (3.6V)
2 TR_Y
1 TB_Y
HBLK
CLP
B_Y2
1.0Vpp (3.9V)
R_Y2
1.0Vpp (4.0V)
GNDA
V+9V
DY
DR Y
DB Y
44
45
46

44 Q3013 Emitter (Y2)
V: 1V/div. H: 20µsec/div.

— GND

45 Foot of R3040 (R-Y2)
V: 1V/div. H: 20µsec/div.

— GND

46 Foot of R3037 (B-Y2)
V: 1V/div. H: 20µsec/div.

— GND

3.18 SUB VIDEO SERVICE ASSY (2/10)

H 2/10 SUB VIDEO SERVICE ASSY (AWV1922)
• CLAMP and EQ BLOCKS

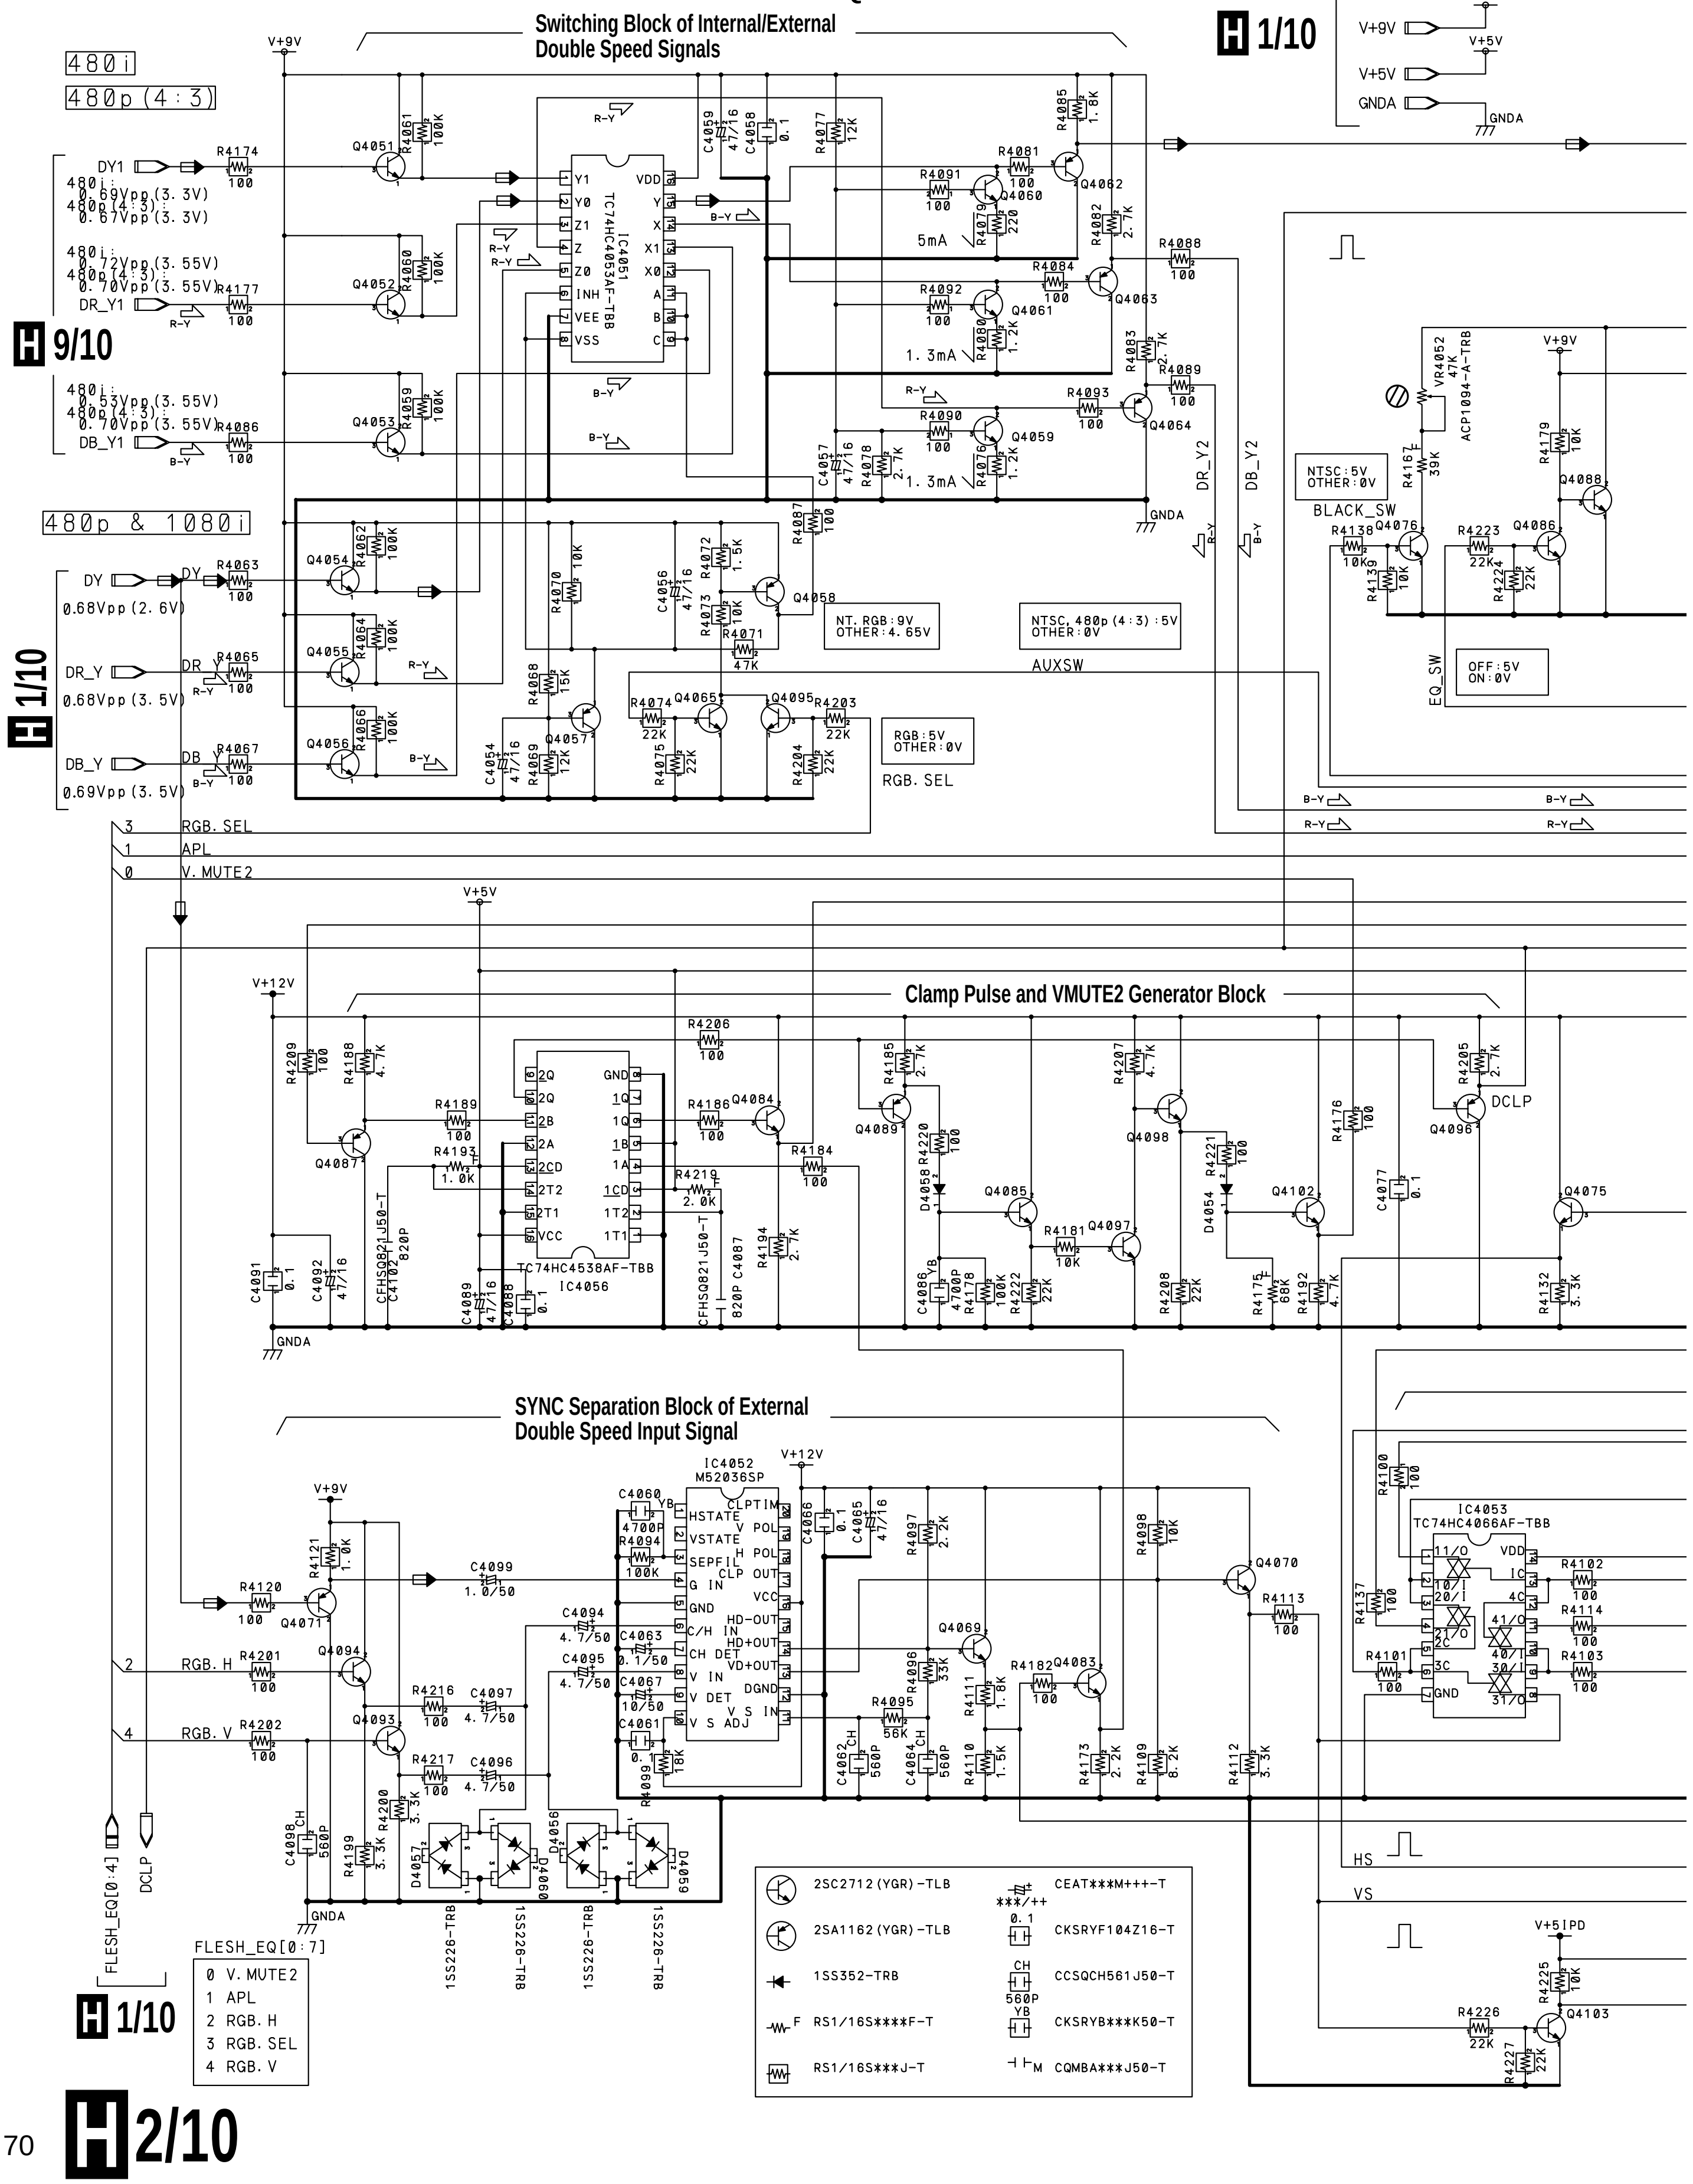
1
2
3
4
A
B
C
D
Switching Block of Internal/External Double Speed Signals
H 1/10
V+12V
V+9V
V+5V
GNDA
480i
480p (4:3)
DY1
480i: 0.69Vpp (3.3V)
480p (4:3): 0.67Vpp (3.3V)
480i: 0.72Vpp (3.55V)
480p (4:3): 0.70Vpp (3.55V)
DR_Y1
480i: 0.53Vpp (3.55V)
480p (4:3): 0.70Vpp (3.55V)
DB_Y1
H 9/10
R4174 100
R4177 100
R4086 100
Q4051
Q4052
Q4053
R4061 100K
R4060 100K
R4059 100K
IC4051 TC74HC4053AF-TBB
Y1 Y0 Z1 Z Z0 INH VEE VSS VDD Y X X1 X0 A B C
R-Y
B-Y
C4059 47/16
C4058 0.1
R4077 12K
R4085 1.8K
R4081 100
Q4062
R4091 100
Q4060
R4079 220
5mA
R4082 2.7K
R4088 100
R4084 100
Q4063
R4092 100
Q4061
R4080 1.2K
1.3mA
R4083 2.7K
R4089 100
R4093 100
Q4064
R4090 100
Q4059
R4076 1.2K
C4057 47/16
R4078 2.7K
1.3mA
GNDA
DR_Y2
DB_Y2
480p & 1080i
DY
0.68Vpp (2.6V)
DR_Y
0.68Vpp (3.5V)
DB_Y
0.69Vpp (3.5V)
H 1/10
R4063 100
R4065 100
R4067 100
Q4054
Q4055
Q4056
R4062 100K
R4064 100K
R4066 100K
R4070 10K
C4056 47/16
R4072 1.5K
R4073 10K
R4087 100
Q4058
R4071 47K
NT. RGB: 9V
OTHER: 4.65V
NTSC, 480p (4:3): 5V
OTHER: 0V
AUXSW
R4068 15K
Q4057
R4074 22K
Q4065
Q4095
R4203 22K
C4054 47/16
R4069 12K
R4075 22K
R4204 22K
RGB: 5V
OTHER: 0V
RGB.SEL
3 RGB.SEL
1 APL
0 V.MUTE2
V+5V
NTSC: 5V
OTHER: 0V
BLACK_SW
VR4052 47K ACP1094-A-TRB
R4167 39K
V+9V
R4179 10K
Q4088
R4138 10K
Q4076
R4139 10K
R4223 22K
Q4086
R4224 22K
EQ_SW
OFF: 5V
ON: 0V
Clamp Pulse and VMUTE2 Generator Block
V+12V
R4209 100
R4188 4.7K
Q4067
R4189 100
R4193 1.0K
IC4056 TC74HC4538AF-TBB
2Q 2Q 2B 2A 2CD 2T2 2T1 VCC GND 1Q 1Q 1B 1A 1CD 1T2 1T1
R4206 100
R4186 100
Q4084
R4184 100
R4219 2.0K
C4091 0.1
C4092 47/16
CFHSQ821J50-T C4102 820P
C4089 47/16
C4088 0.1
CFHSQ821J50-T C4087 820P
R4194 2.7K
GNDA
R4185 2.7K
Q4089
R4220 100
D4058
Q4085
R4181 10K
Q4097
C4086 YB 4700P
R4178 100K
R4222 22K
R4207 4.7K
Q4098
R4221 100
D4054
Q4102
R4208 22K
R4175 6.8K
R4192 4.7K
R4176 100
C4077 0.1
R4205 2.7K
Q4096
DCLP
Q4075
R4132 3.3K
SYNC Separation Block of External Double Speed Input Signal
V+9V
R4121 1.0K
R4120 100
Q4071
IC4052 M52036SP
C4060 YB 4700P
R4094 100K
C4099 1.0/50
HSTATE VSTATE SEPFIL G IN GND C/H IN CH DET V IN V DET V S ADJ CLPTIM V POL H POL CLP OUT VCC HD-OUT HD+OUT VD+OUT DGND V S IN
C4094 4.7/50
C4063 0.1/50
C4095 4.7/50
C4067 10/50
C4061 0.1
V+12V
C4066 0.1
C4065 47/16
R4097 2.2K
R4098 10K
Q4070
R4113 100
2 RGB.H
R4201 100
Q4094
R4216 100
C4097 4.7/50
4 RGB.V
R4202 100
Q4093
R4217 100
C4096 4.7/50
R4200 3.3K
R4199 3.3K
C4098 CH 560P
GNDA
R4099 18K
R4096 33K
Q4069
R4095 56K
C4062 CH 560P
C4064 CH 560P
R4111 1.8K
R4110 1.5K
R4182 100
Q4083
R4173 2.2K
R4109 8.2K
R4112 3.3K
D4057 D4060 D4056 D4059
1SS226-TRB
R4100 100
IC4053 TC74HC4066AF-TBB
1I/O 1O/I 2O/I 2I/O 2C 3C GND VDD 1C 4C 4I/O 4O/I 3O/I 3I/O
R4137 100
R4101 100
R4102 100
R4114 100
R4103 100
HS
VS
V+5IPD
R4225 10K
R4226 22K
Q4103
R4227 22K
FLESH_EQ[0:4]
DCLP
FLESH_EQ[0:7]
0 V.MUTE2
1 APL
2 RGB.H
3 RGB.SEL
4 RGB.V
H 1/10
2SC2712(YGR)-TLB
2SA1162(YGR)-TLB
1SS352-TRB
F RS1/16S∗∗∗∗F-T
RS1/16S∗∗∗J-T
CEAT∗∗∗M+++-T
∗∗∗/++
0.1 CKSRYF104Z16-T
CH 560P CCSQCH561J50-T
YB CKSRYB∗∗∗K50-T
M CQMBA∗∗∗J50-T

H 2/10

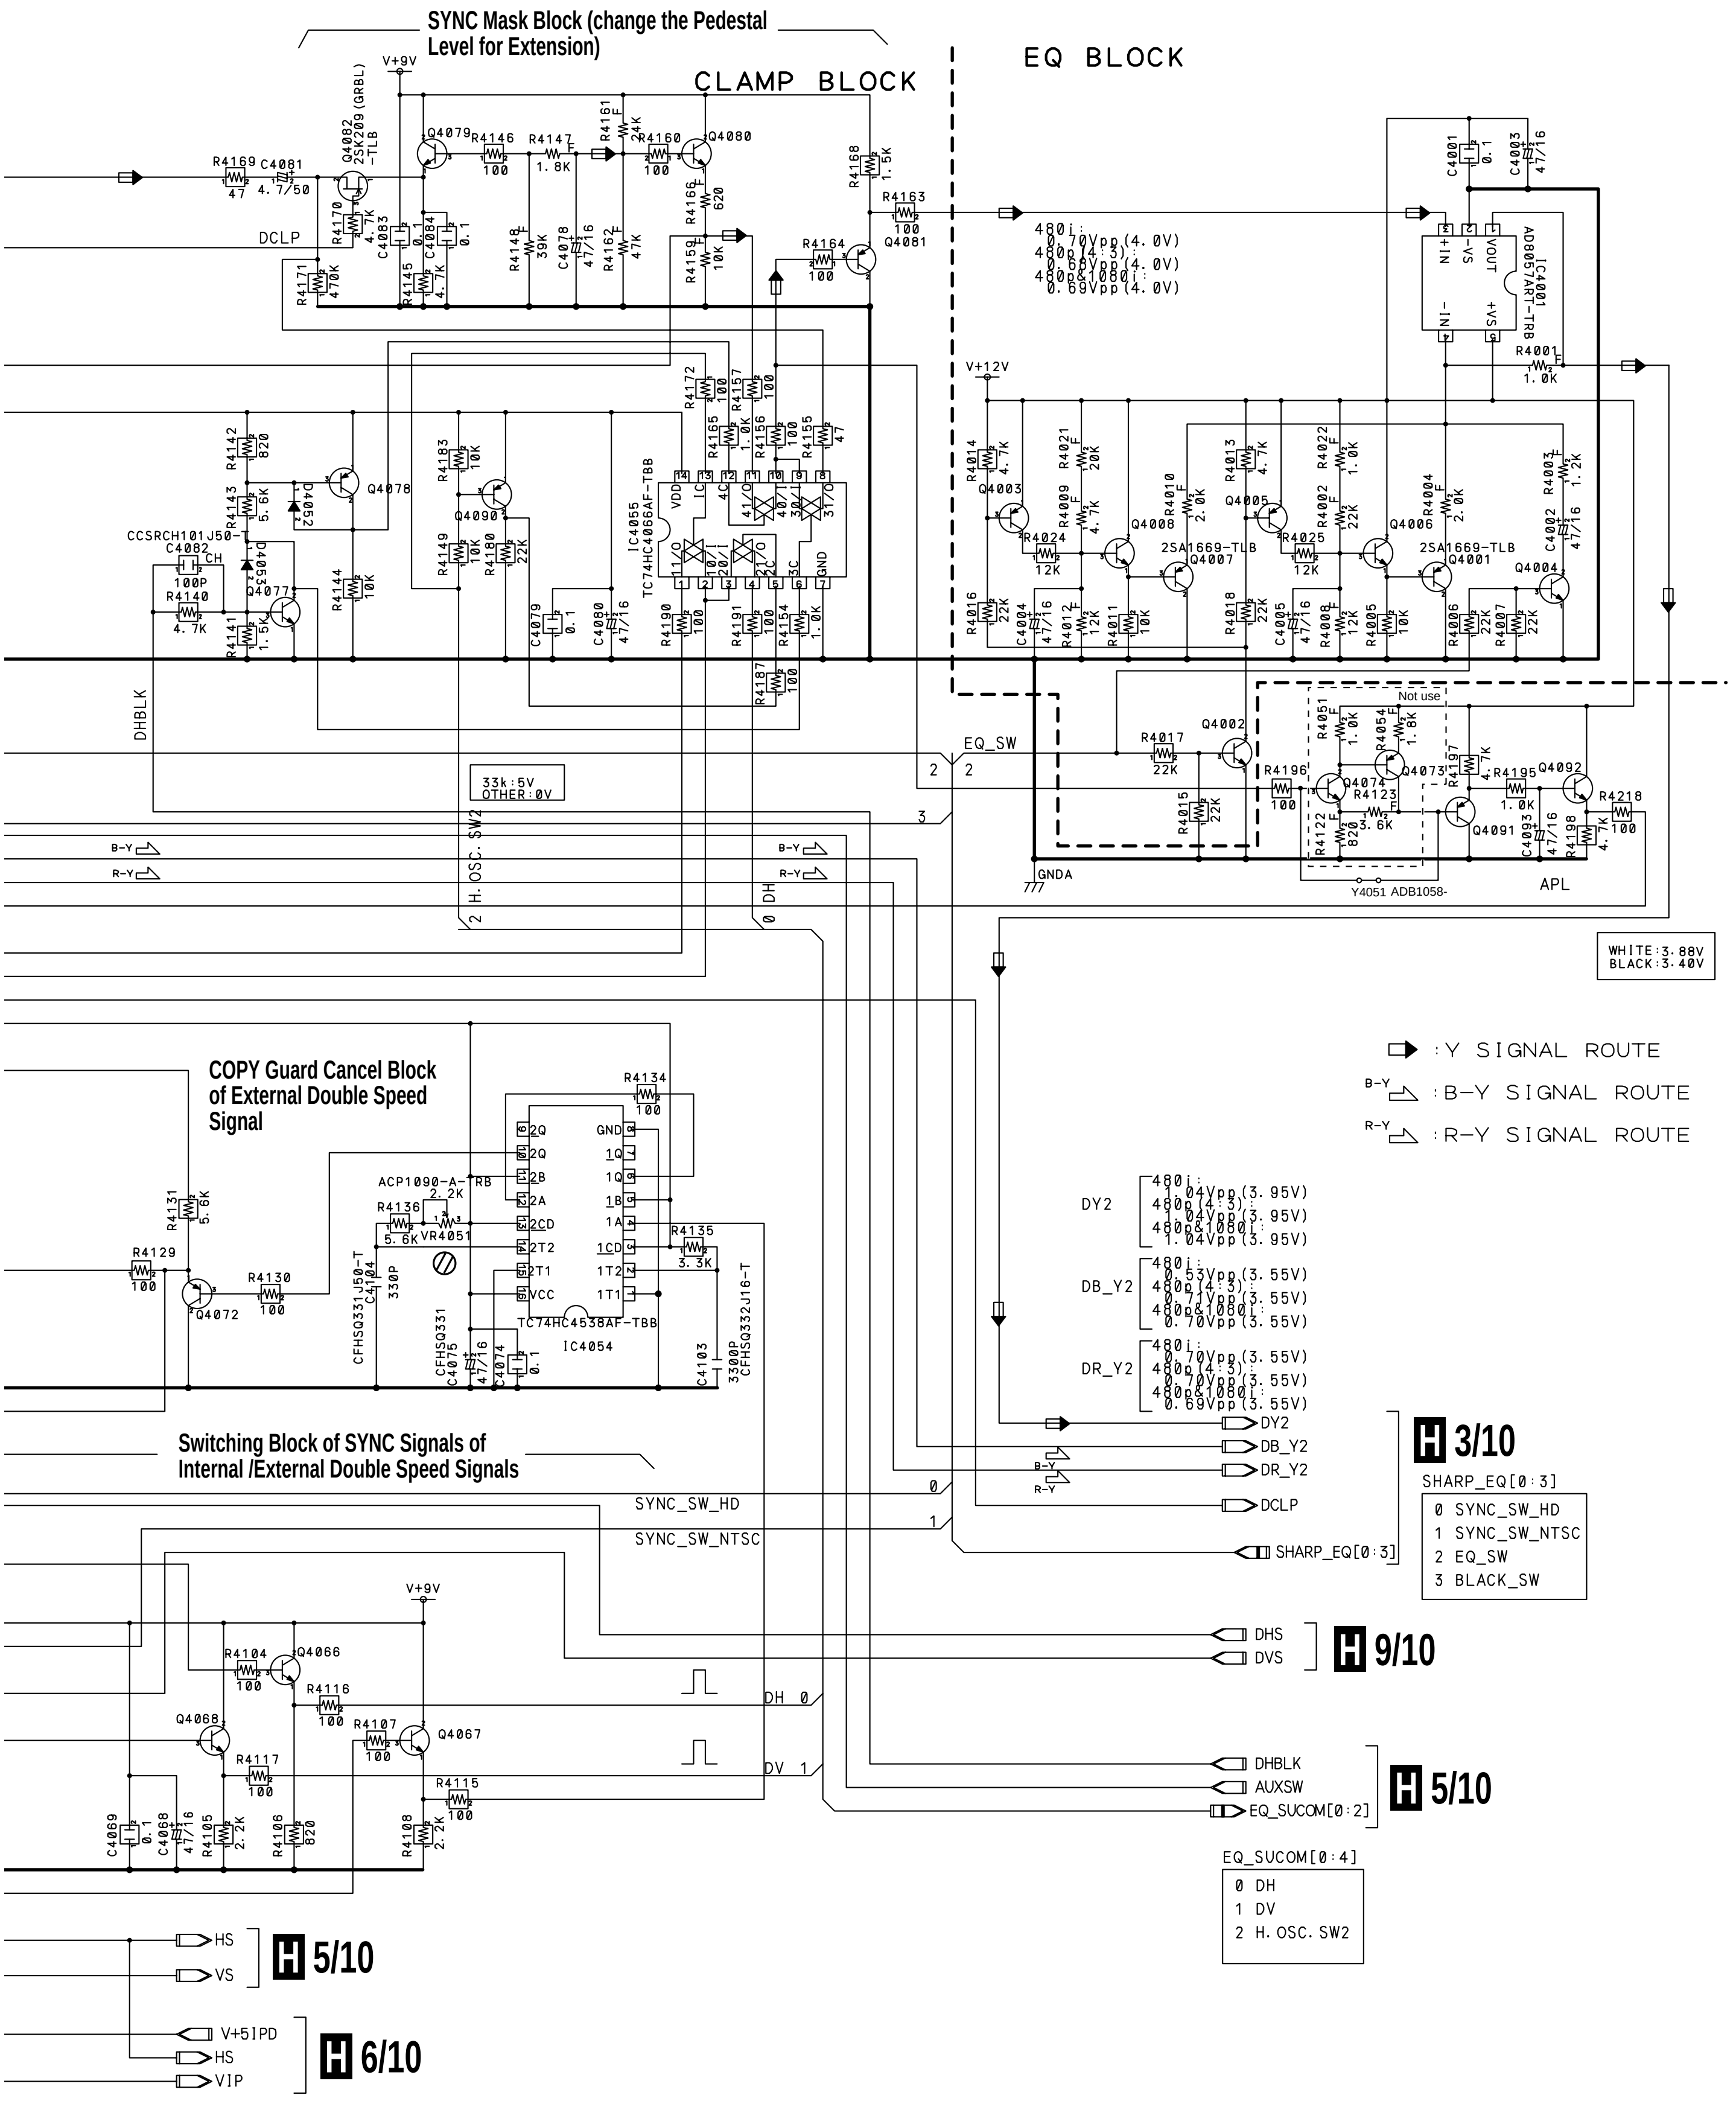
SYNC Mask Block (change the Pedestal Level for Extension)
CLAMP BLOCK
EQ BLOCK
COPY Guard Cancel Block of External Double Speed Signal
Switching Block of SYNC Signals of Internal /External Double Speed Signals
V+9V
V+12V
DCLP
DHBLK
EQ_SW
GNDA
Not use
Y4051 ADB1058-
APL
WHITE:3.88V
BLACK:3.40V
33k:5V
OTHER:0V
H.OSC.SW2
DH
B-Y
R-Y
480i: 0.70Vpp(4.0V)
480p(4:3): 0.68Vpp(4.0V)
480p&1080i: 0.69Vpp(4.0V)
IC4001 AD8057ART-TRB
IC4055 TC74HC4066AF-TBB
IC4054 TC74HC4538AF-TBB
VR4051 ACP1090-A-RB
:Y SIGNAL ROUTE
:B-Y SIGNAL ROUTE
:R-Y SIGNAL ROUTE
DY2 480i: 1.04Vpp(3.95V) 480p(4:3): 1.04Vpp(3.95V) 480p&1080i: 1.04Vpp(3.95V)
DB_Y2 480i: 0.53Vpp(3.55V) 480p(4:3): 0.71Vpp(3.55V) 480p&1080i: 0.70Vpp(3.55V)
DR_Y2 480i: 0.70Vpp(3.55V) 480p(4:3): 0.70Vpp(3.55V) 480p&1080i: 0.69Vpp(3.55V)
DY2
DB_Y2
DR_Y2
DCLP
SHARP_EQ[0:3]
H 3/10
SHARP_EQ[0:3]
0 SYNC_SW_HD
1 SYNC_SW_NTSC
2 EQ_SW
3 BLACK_SW
SYNC_SW_HD
SYNC_SW_NTSC
DHS
DVS
H 9/10
DH 0
DV 1
DHBLK
AUXSW
EQ_SUCOM[0:2]
H 5/10
EQ_SUCOM[0:4]
0 DH
1 DV
2 H.OSC.SW2
HS
VS
H 5/10
V+5IPD
HS
VIP
H 6/10

3.19 SUB VIDEO SERVICE ASSY (3/10)

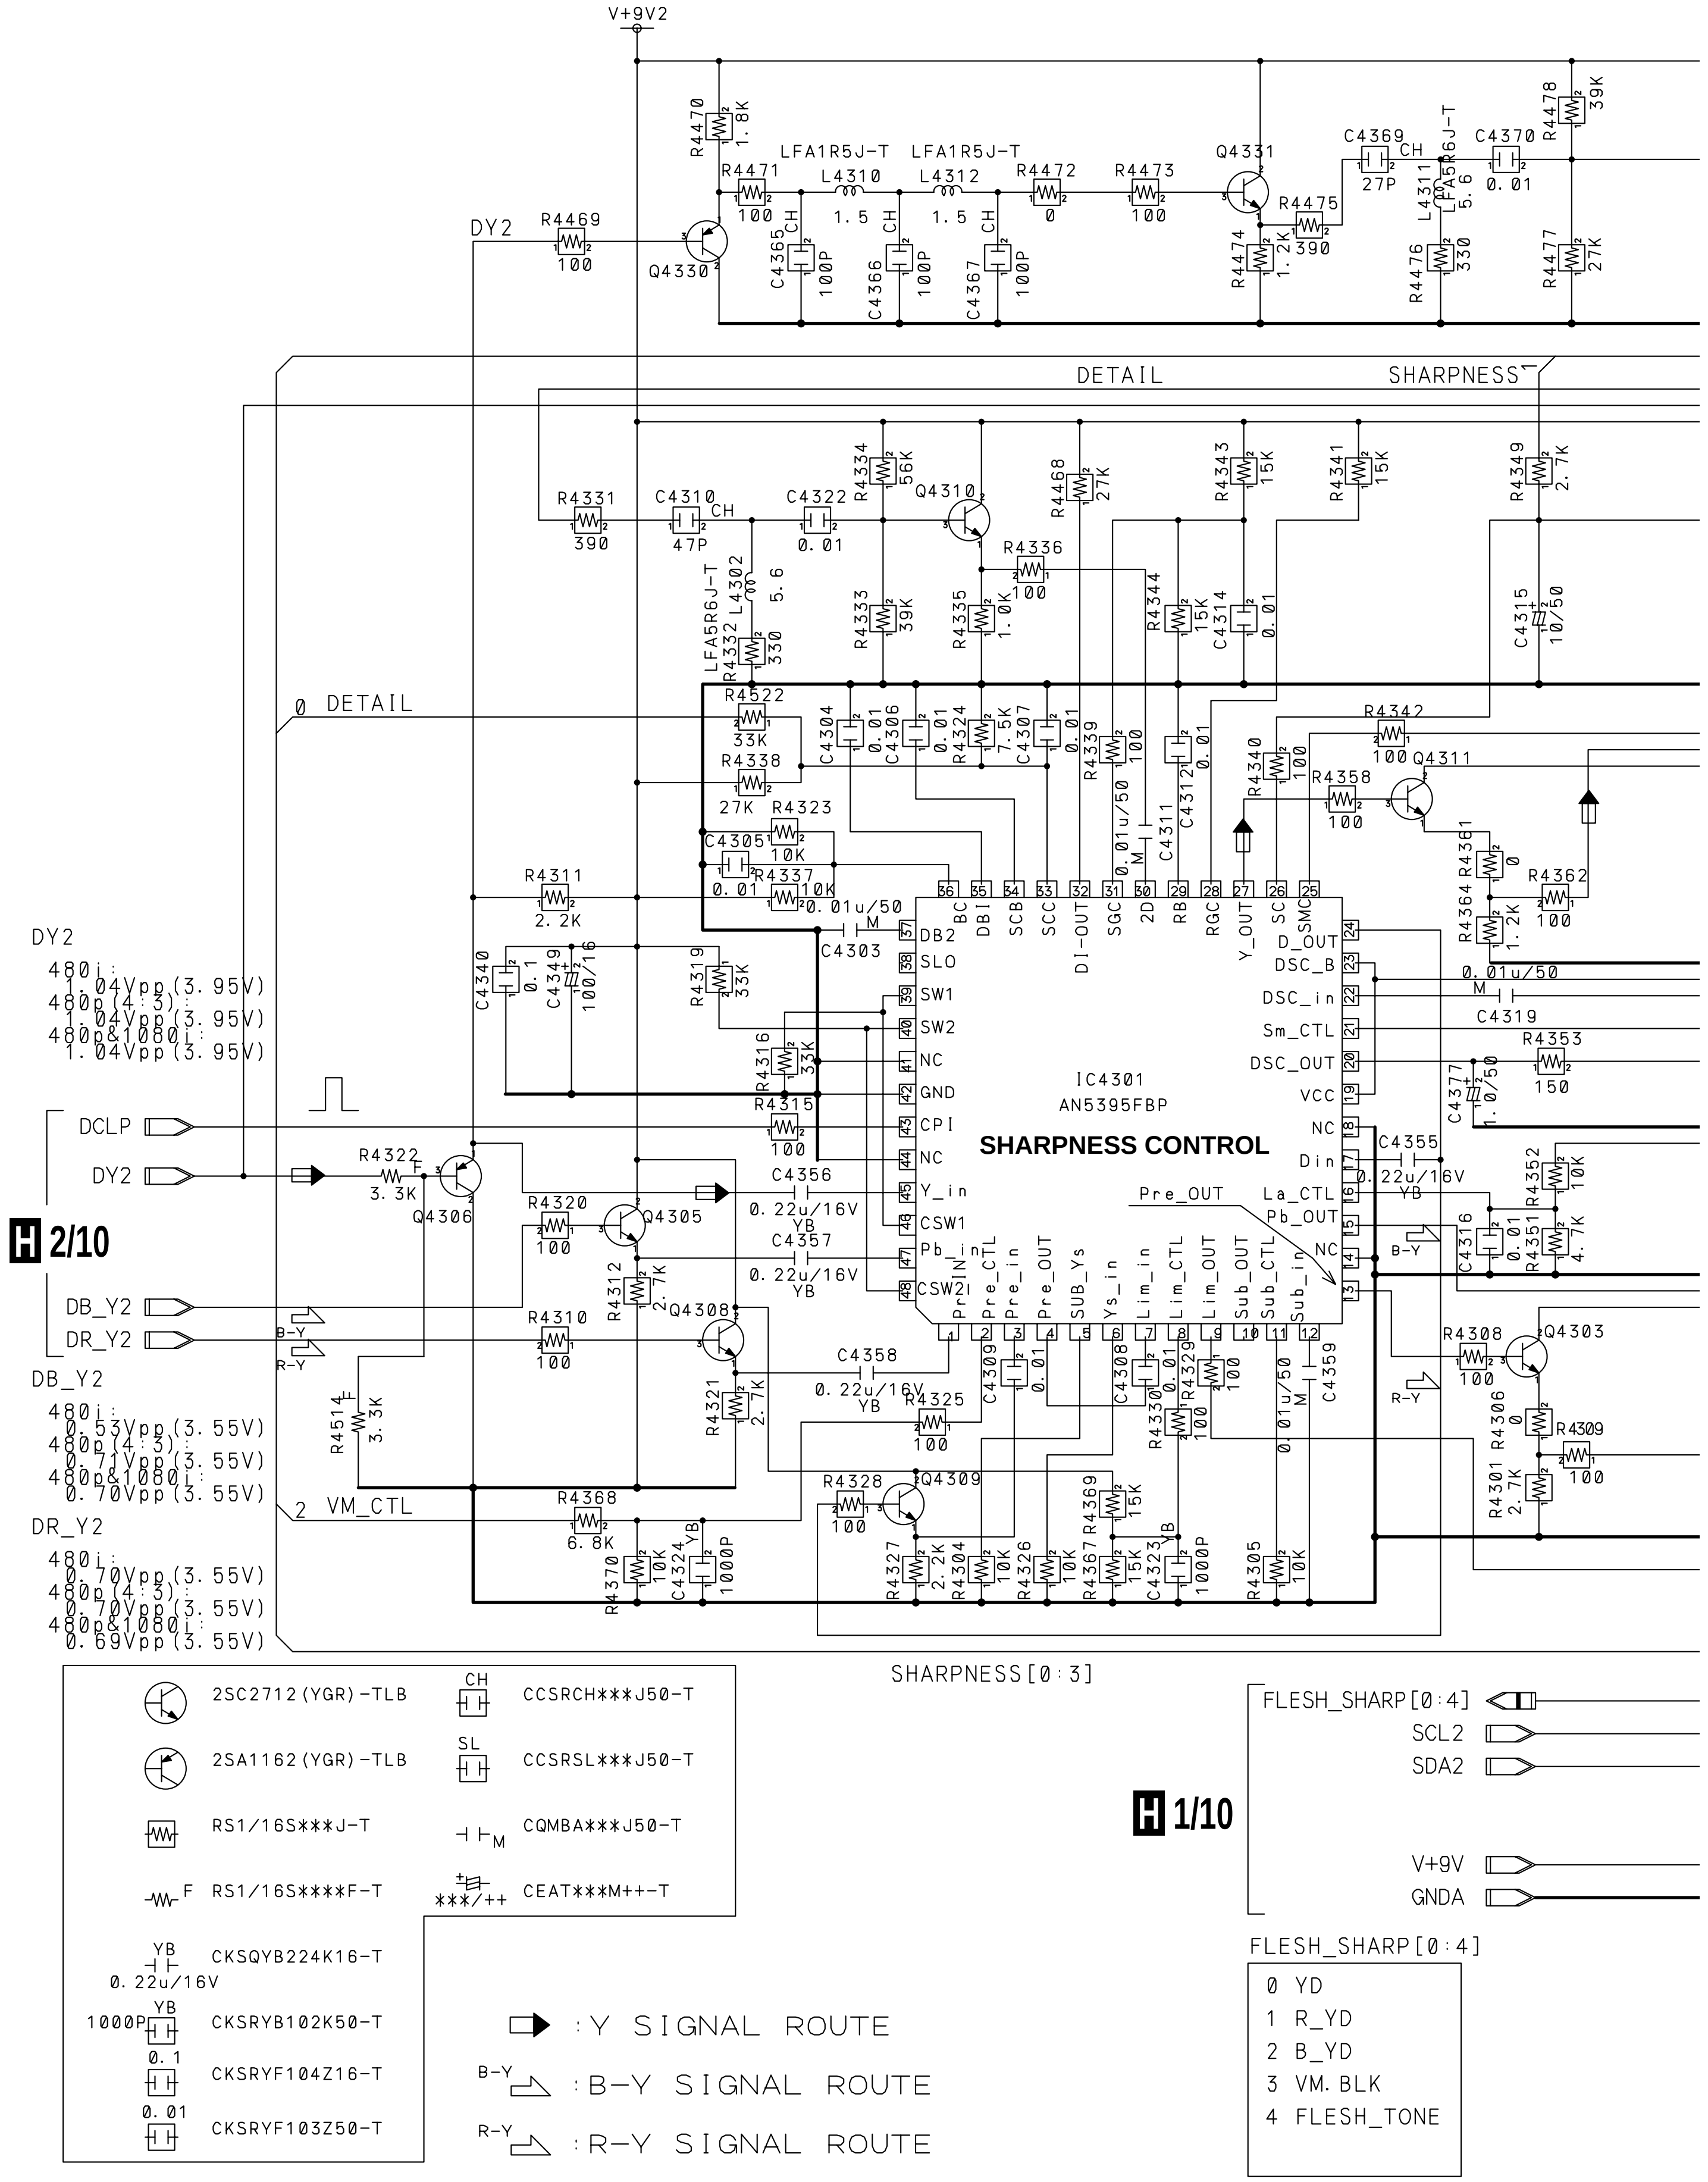
1
2
3
4
A
B
C
D
V+9V2
DY2
R4469 100
Q4330
R4470 1.8K
R4471 100
LFA1R5J-T L4310 1.5
LFA1R5J-T L4312 1.5
C4365 CH 100P
C4366 CH 100P
C4367 CH 100P
R4472 0
R4473 100
Q4331
R4474 1.2K
R4475 390
C4369 CH 27P
LFA5R6J-T L4311 5.6
R4476 330
C4370 0.01
R4478 39K
R4477 27K
DETAIL
SHARPNESS
R4331 390
C4310 CH 47P
C4322 0.01
LFA5R6J-T L4302 5.6
R4332 330
R4334 56K
R4333 39K
Q4310
R4335 1.0K
R4336 100
R4468 27K
R4344 15K
C4314 0.01
R4343 15K
R4341 15K
R4349 2.7K
C4315 10/50
0 DETAIL
R4522 33K
R4338 27K
R4323 10K
C4305 0.01
R4337 10K
C4304 0.01
C4306 0.01
R4324 7.5K
C4307 0.01
R4339 100
C4311 0.01u/50 M
C4312 0.01
R4340 100
R4342 100
R4358 100
Q4311
R4361 0
R4364 1.2K
R4362 100
R4311 2.2K
C4303 0.01u/50 M
C4340 0.1
C4349 100/16
R4319 33K
R4316 33K
R4315 100
IC4301
AN5395FBP
SHARPNESS CONTROL
BC
DBI
SCB
SCC
DI-OUT
SGC
2D
RB
RGC
Y_OUT
SC
SMC
DB2
SLO
SW1
SW2
NC
GND
CPI
NC
Y_in
CSW1
Pb_in
CSW2
D_OUT
DSC_B
DSC_in
Sm_CTL
DSC_OUT
VCC
NC
Din
La_CTL
Pb_OUT
NC
Pr_IN
Pre_CTL
Pre_in
Pre_OUT
SUB_Ys
Ys_in
Lim_in
Lim_CTL
Lim_OUT
Sub_OUT
Sub_CTL
Sub_in
Pre_OUT
C4319 0.01u/50 M
R4353 150
C4377 1.0/50
C4355 0.22u/16V YB
R4352 10K
C4316 0.01
R4351 4.7K
B-Y
R-Y
R4308 100
Q4303
R4306 0
R4309 100
R4301 2.7K
DY2
480i:
1.04Vpp(3.95V)
480p(4:3):
1.04Vpp(3.95V)
480p&1080i:
1.04Vpp(3.95V)
DCLP
DY2
R4322 F 3.3K
Q4306
R4320 100
Q4305
C4356 0.22u/16V YB
C4357 0.22u/16V YB
R4312 2.7K
Q4308
H 2/10
DB_Y2
DR_Y2
R4310 100
R4514 F 3.3K
C4358 0.22u/16V YB
R4321 2.7K
R4325 100
C4309 0.01
C4308 0.01
R4329 100
R4330 100
C4359 0.01u/50 M
DB_Y2
480i:
0.53Vpp(3.55V)
480p(4:3):
0.71Vpp(3.55V)
480p&1080i:
0.70Vpp(3.55V)
2 VM_CTL
R4368 6.8K
R4328 100
Q4309
R4370 10K
C4324 YB 1000P
R4327 2.2K
R4304 10K
R4326 10K
R4369 15K
R4367 15K
C4323 YB 1000P
R4305 10K
DR_Y2
480i:
0.70Vpp(3.55V)
480p(4:3):
0.70Vpp(3.55V)
480p&1080i:
0.69Vpp(3.55V)
SHARPNESS[0:3]
FLESH_SHARP[0:4]
SCL2
SDA2
H 1/10
V+9V
GNDA
2SC2712(YGR)-TLB
2SA1162(YGR)-TLB
RS1/16S***J-T
F RS1/16S****F-T
CH CCSRCH***J50-T
SL CCSRSL***J50-T
M CQMBA***J50-T
/++ CEATM++-T
YB 0.22u/16V CKSQYB224K16-T
1000P YB CKSRYB102K50-T
0.1 CKSRYF104Z16-T
0.01 CKSRYF103Z50-T
:Y SIGNAL ROUTE
B-Y :B-Y SIGNAL ROUTE
R-Y :R-Y SIGNAL ROUTE
FLESH_SHARP[0:4]
0 YD
1 R_YD
2 B_YD
3 VM.BLK
4 FLESH_TONE

H 3/10 SUB VIDEO SERVICE ASSY (AWV1922)
• SHARPNESS BLOCK

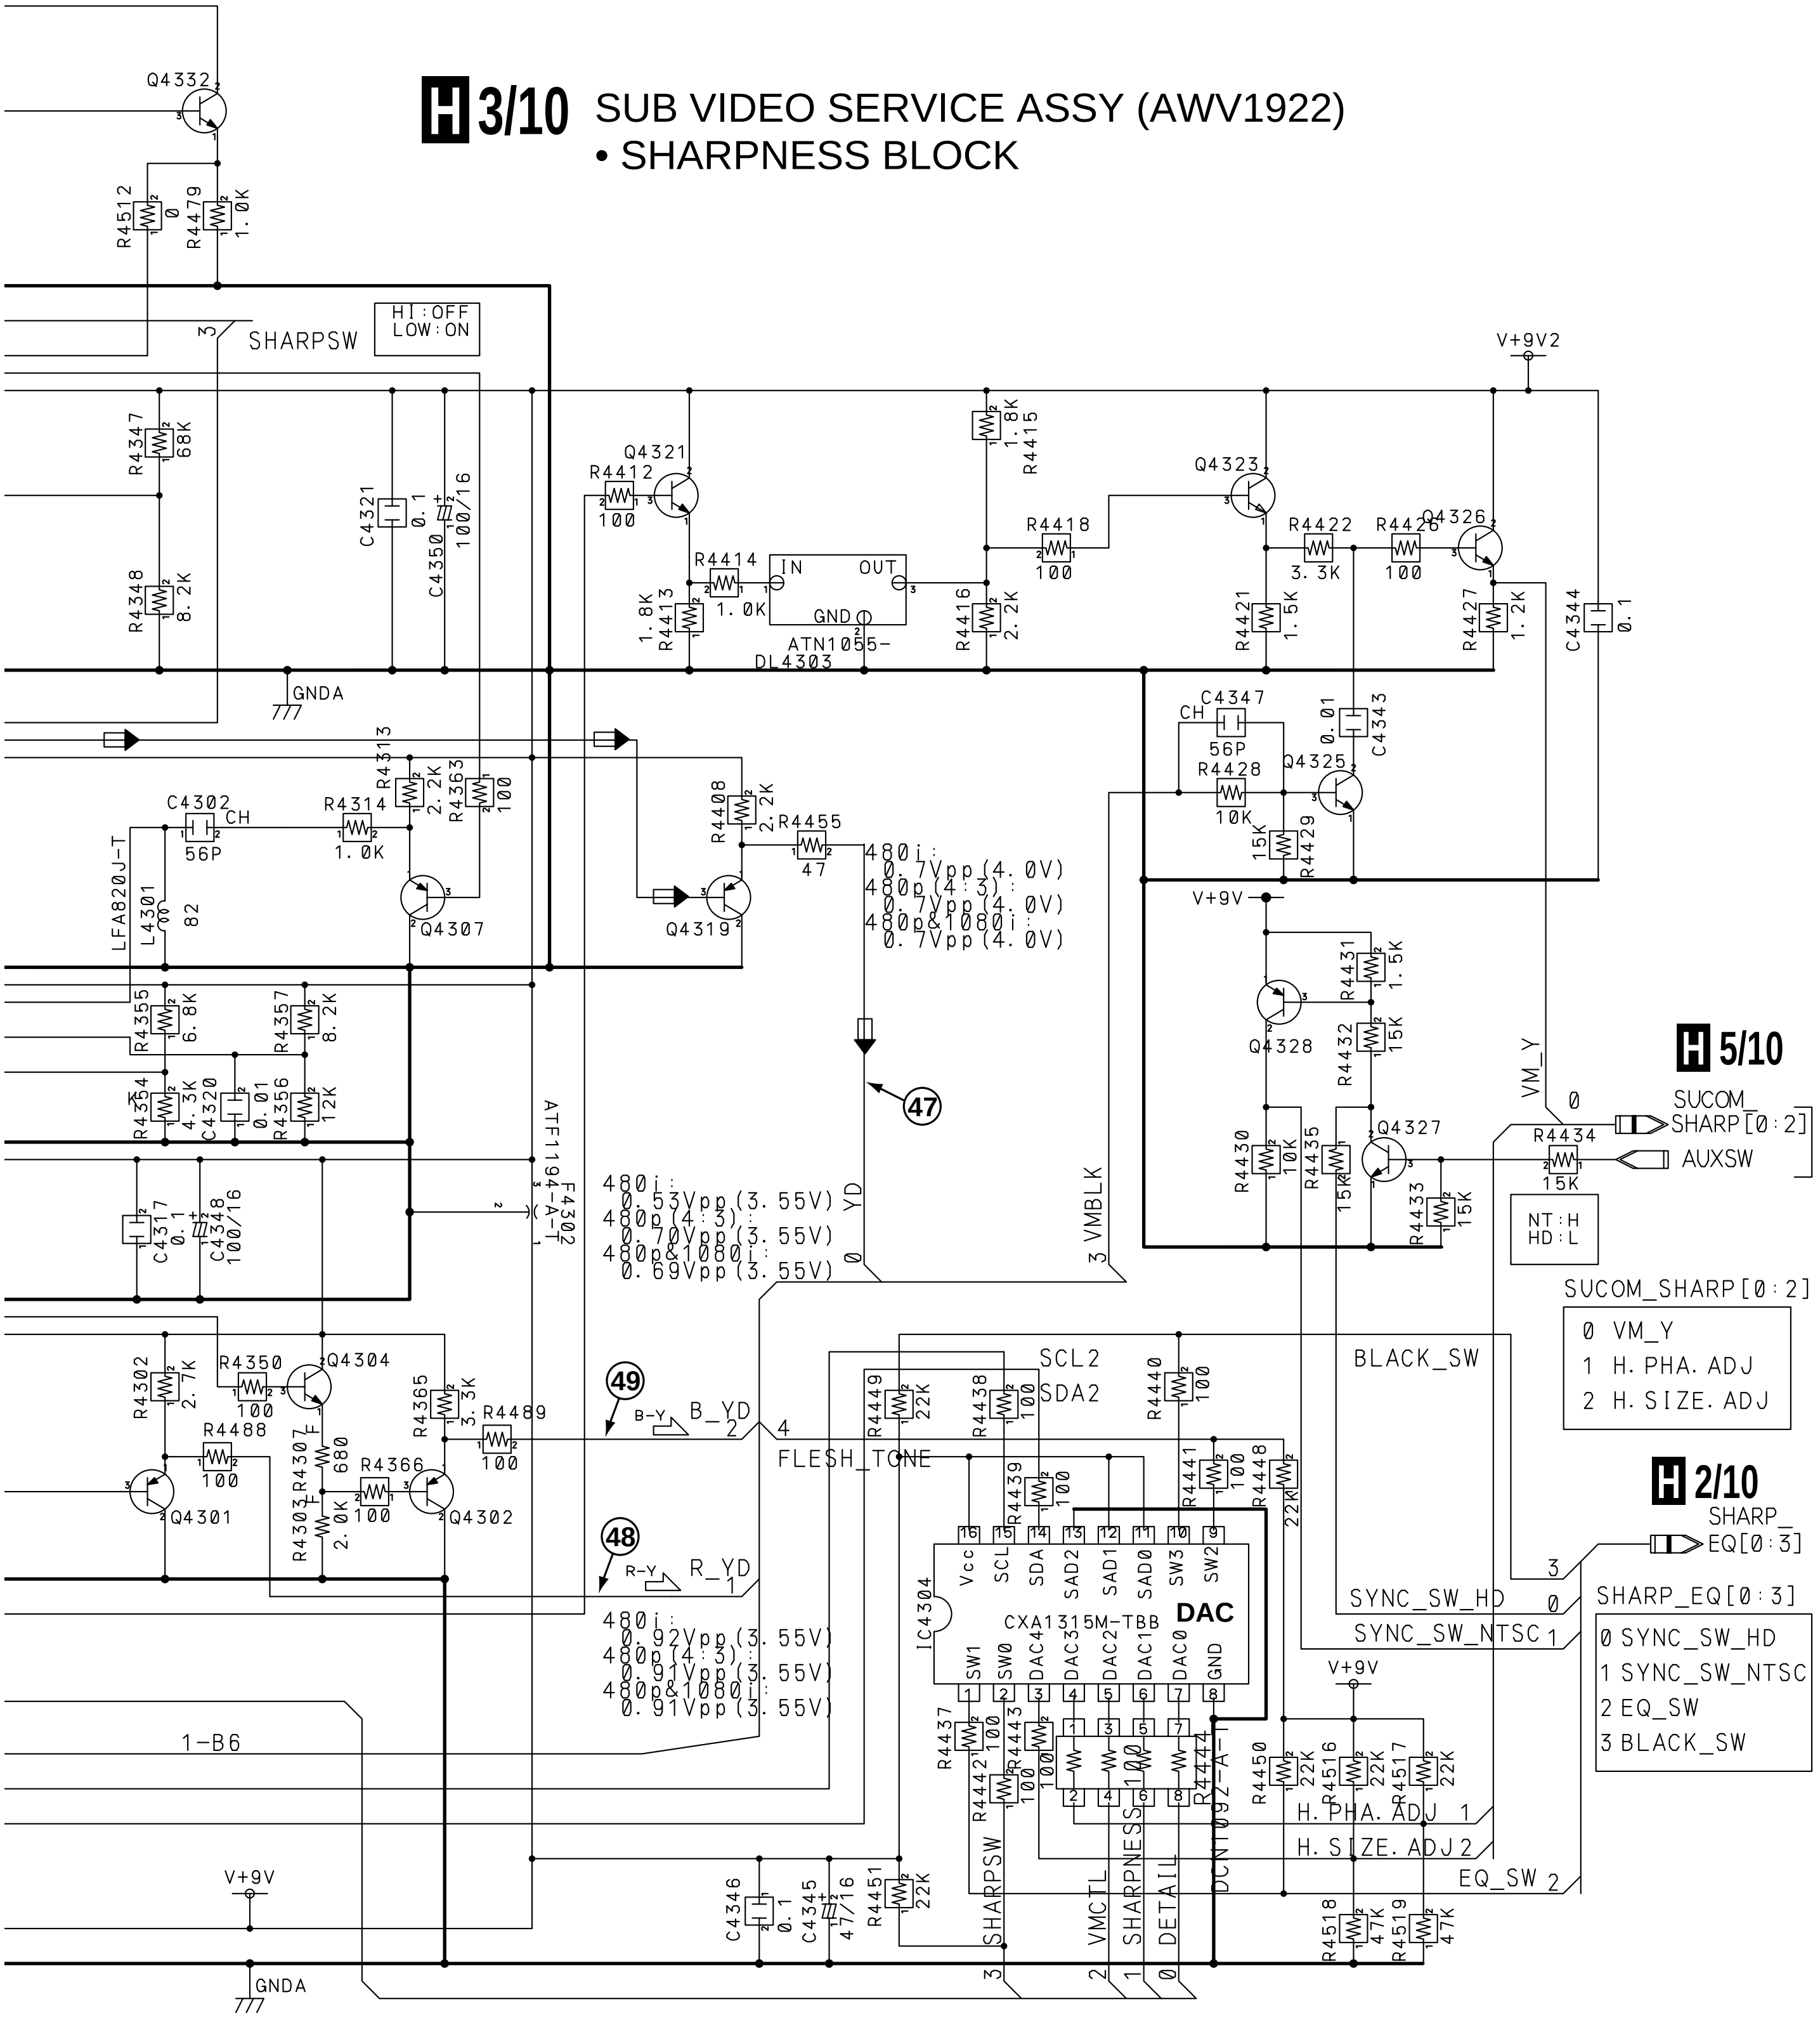
A
B
C
D
Q4332
R4512 0
R4479 1.0K
SHARPSW
HI:OFF LOW:ON
V+9V2
R4347 68K
R4348 8.2K
C4321 0.1
C4350 100/16
GNDA
Q4321
R4412 100
R4414 1.0K
R4413 1.8K
IN OUT GND
ATN1055-
DL4303
R4415 1.8K
R4418 100
R4416 2.2K
Q4323
R4422 3.3K
R4426 100
Q4326
R4421 1.5K
R4427 1.2K
C4344 0.1
C4347 CH 56P
R4428 10K
Q4325
R4429 15K
C4343 0.01
V+9V
Q4328
R4431 1.5K
R4432 15K
R4430 10K
R4435 15K
Q4327
R4433 15K
R4434 15K
VM_Y
0
H 5/10
SUCOM_SHARP[0:2]
AUXSW
NT:H HD:L
SUCOM_SHARP[0:2]
0 VM_Y
1 H.PHA.ADJ
2 H.SIZE.ADJ
C4302 CH 56P
R4314 1.0K
R4313 2.2K
R4363 100
Q4307
LFA820J-T
L4301 82
R4408 2.2K
R4455 47
Q4319
480i: 0.7Vpp(4.0V)
480p(4:3): 0.7Vpp(4.0V)
480p&1080i: 0.7Vpp(4.0V)
47
R4355 6.8K
R4357 8.2K
R4354 4.3K
C4320 0.01
R4356 12K
C4317 0.1
C4318 100/16
ATF1194-A-T
F4302
480i: 0.53Vpp(3.55V)
480p(4:3): 0.70Vpp(3.55V)
480p&1080i: 0.69Vpp(3.55V)
YD 0
3 VMBLK
R4302 2.7K
R4350 100
Q4304
R4488 100
R4307 680
R4303 2.0K
Q4301
R4366 100
Q4302
R4365 3.3K
R4489 100
49
B-Y
B_YD 2
48
R-Y
R_YD 1
480i: 0.92Vpp(3.55V)
480p(4:3): 0.91Vpp(3.55V)
480p&1080i: 0.91Vpp(3.55V)
4 FLESH_TONE
SCL2
SDA2
R4449 22K
R4438 100
R4440 100
R4439 100
R4441 100
R4448 22K
BLACK_SW
H 2/10
SHARP_EQ[0:3]
3
SYNC_SW_HD 0
SYNC_SW_NTSC 1
SHARP_EQ[0:3]
0 SYNC_SW_HD
1 SYNC_SW_NTSC
2 EQ_SW
3 BLACK_SW
IC4304
CXA1315M-TBB
DAC
Vcc SCL SDA SAD2 SAD1 SAD0 SW3 SW2
SW1 SW0 DAC4 DAC3 DAC2 DAC1 DAC0 GND
R4437 100
R4443 100
R4442 100
R4444
DCN1092-A-T
R4450 22K
R4516 22K
R4517 22K
H.PHA.ADJ 1
H.SIZE.ADJ 2
EQ_SW 2
1-B6
V+9V
GNDA
C4346 0.1
C4345 47/16
R4451 22K
3 SHARPSW
2 VMCTL
1 SHARPNESS
0 DETAIL
R4518 47K
R4519 47K

(47) Foot of R4455 (YD)
V: 1V/div. H: 10µsec/div.

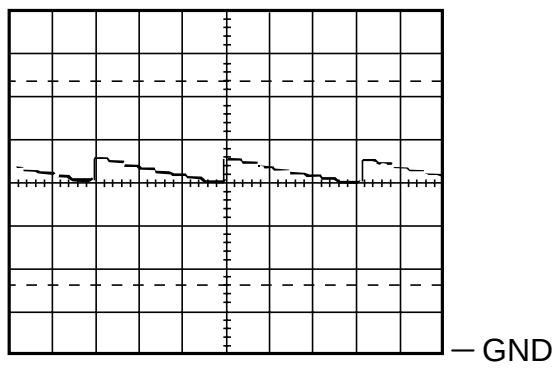

(48) Foot of R4488 (R-YD)
V: 1V/div. H: 10µsec/div.

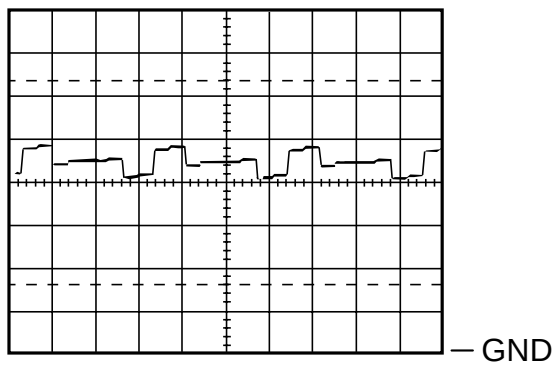

(49) Foot of R4489 (B-YD)
V: 1V/div. H: 10µsec/div.

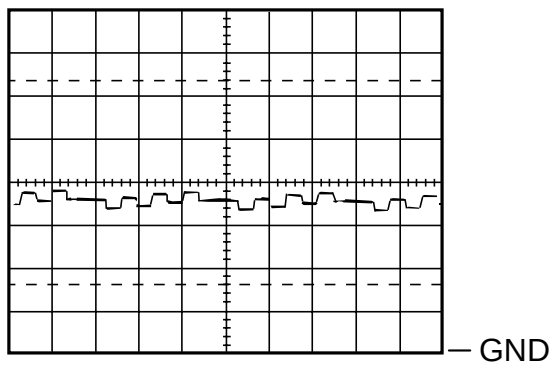

3.20 SUB VIDEO SERVICE ASSY (4/10)

H 4/10 SUB VIDEO SERVICE ASSY (AWV1922)
- SYNC BLOCK

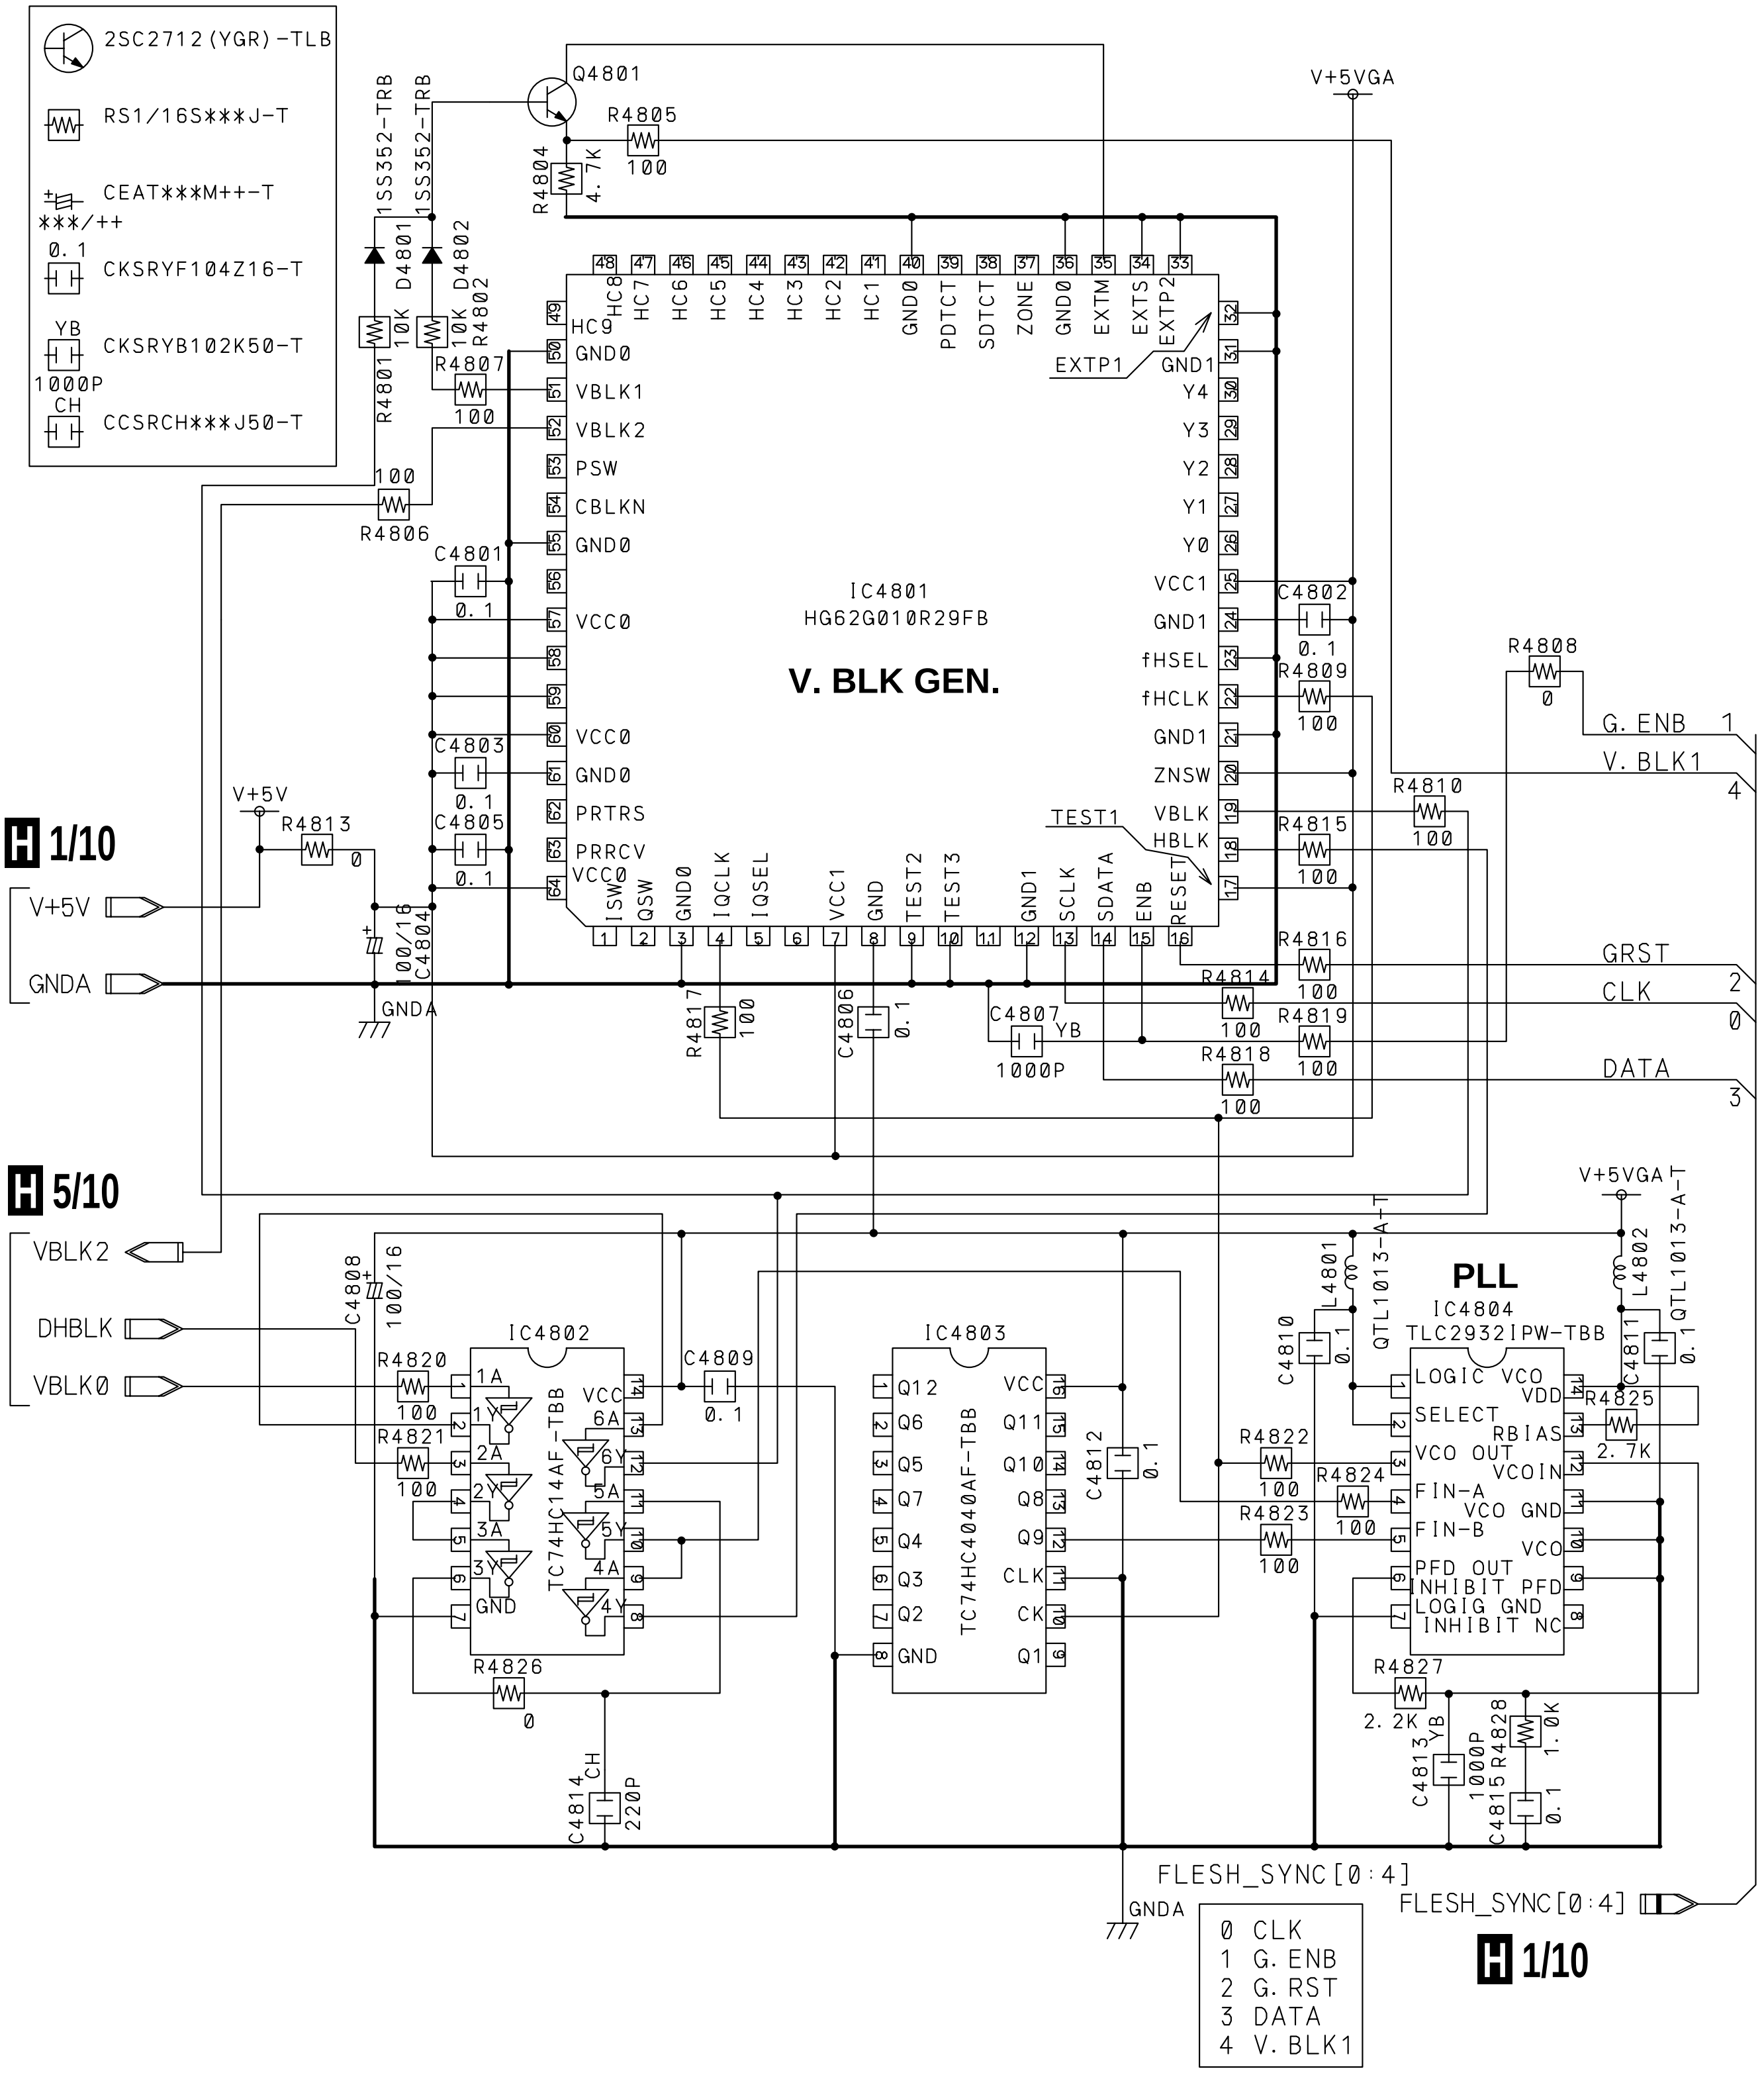
2SC2712(YGR)-TLB
RS1/16S✱✱✱J-T
CEAT✱✱✱M++-T
✱✱✱/++
0.1
CKSRYF104Z16-T
YB
CKSRYB102K50-T
1000P
CH
CCSRCH✱✱✱J50-T
Q4801
R4805 100
R4804 4.7K
V+5VGA
1SS352-TRB
D4801
D4802
R4801 10K
R4802 10K
R4807 100
R4806 100
C4801 0.1
C4802 0.1
C4803 0.1
C4805 0.1
C4804 100/16
R4813 0
V+5V
GNDA
IC4801
HG62G010R29FB
V. BLK GEN.
HC8 HC7 HC6 HC5 HC4 HC3 HC2 HC1 GND0 PDTCT SDTCT ZONE GND0 EXTM EXTS EXTP2
HC9 GND0 VBLK1 VBLK2 PSW CBLKN GND0 VCC0 VCC0 GND0 PRTRS PRRCV VCC0
EXTP1 GND1 Y4 Y3 Y2 Y1 Y0 VCC1 GND1 fHSEL fHCLK GND1 ZNSW VBLK HBLK RESET
TEST1
ISW QSW GND0 IQCLK IQSEL VCC1 GND TEST2 TEST3 GND1 SCLK SDATA ENB
R4808 0
R4809 100
R4810 100
R4815 100
R4816 100
R4814 100
R4819 100
R4818 100
R4817 100
C4806 0.1
C4807 YB 1000P
G. ENB 1
V. BLK1 4
GRST 2
CLK 0
DATA 3
H 1/10
V+5V
GNDA
H 5/10
VBLK2
DHBLK
VBLK0
C4808 100/16
IC4802
TC74HC14AF-TBB
1A 1Y 2A 2Y 3A 3Y GND VCC 6A 6Y 5A 5Y 4A 4Y
R4820 100
R4821 100
R4826 0
C4809 0.1
C4814 CH 220P
IC4803
TC74HC4040AF-TBB
Q12 Q6 Q5 Q7 Q4 Q3 Q2 GND VCC Q11 Q10 Q8 Q9 CLK CK Q1
C4812 0.1
PLL
IC4804
TLC2932IPW-TBB
LOGIC VCO VDD SELECT RBIAS VCO OUT VCOIN FIN-A VCO GND FIN-B VCO PFD OUT INHIBIT PFD LOGIG GND INHIBIT NC
L4801 QTL1013-A-T
L4802 QTL1013-A-T
C4810 0.1
C4811 0.1
R4822 100
R4823 100
R4824 100
R4825 2.7K
R4827 2.2K
C4813 YB 1000P
R4828 1.0K
C4815 0.1
FLESH_SYNC[0:4]
FLESH_SYNC[0:4]
GNDA
0 CLK
1 G. ENB
2 G. RST
3 DATA
4 V. BLK1
H 1/10

3.21 SUB VIDEO SERVICE ASSY (5/10)

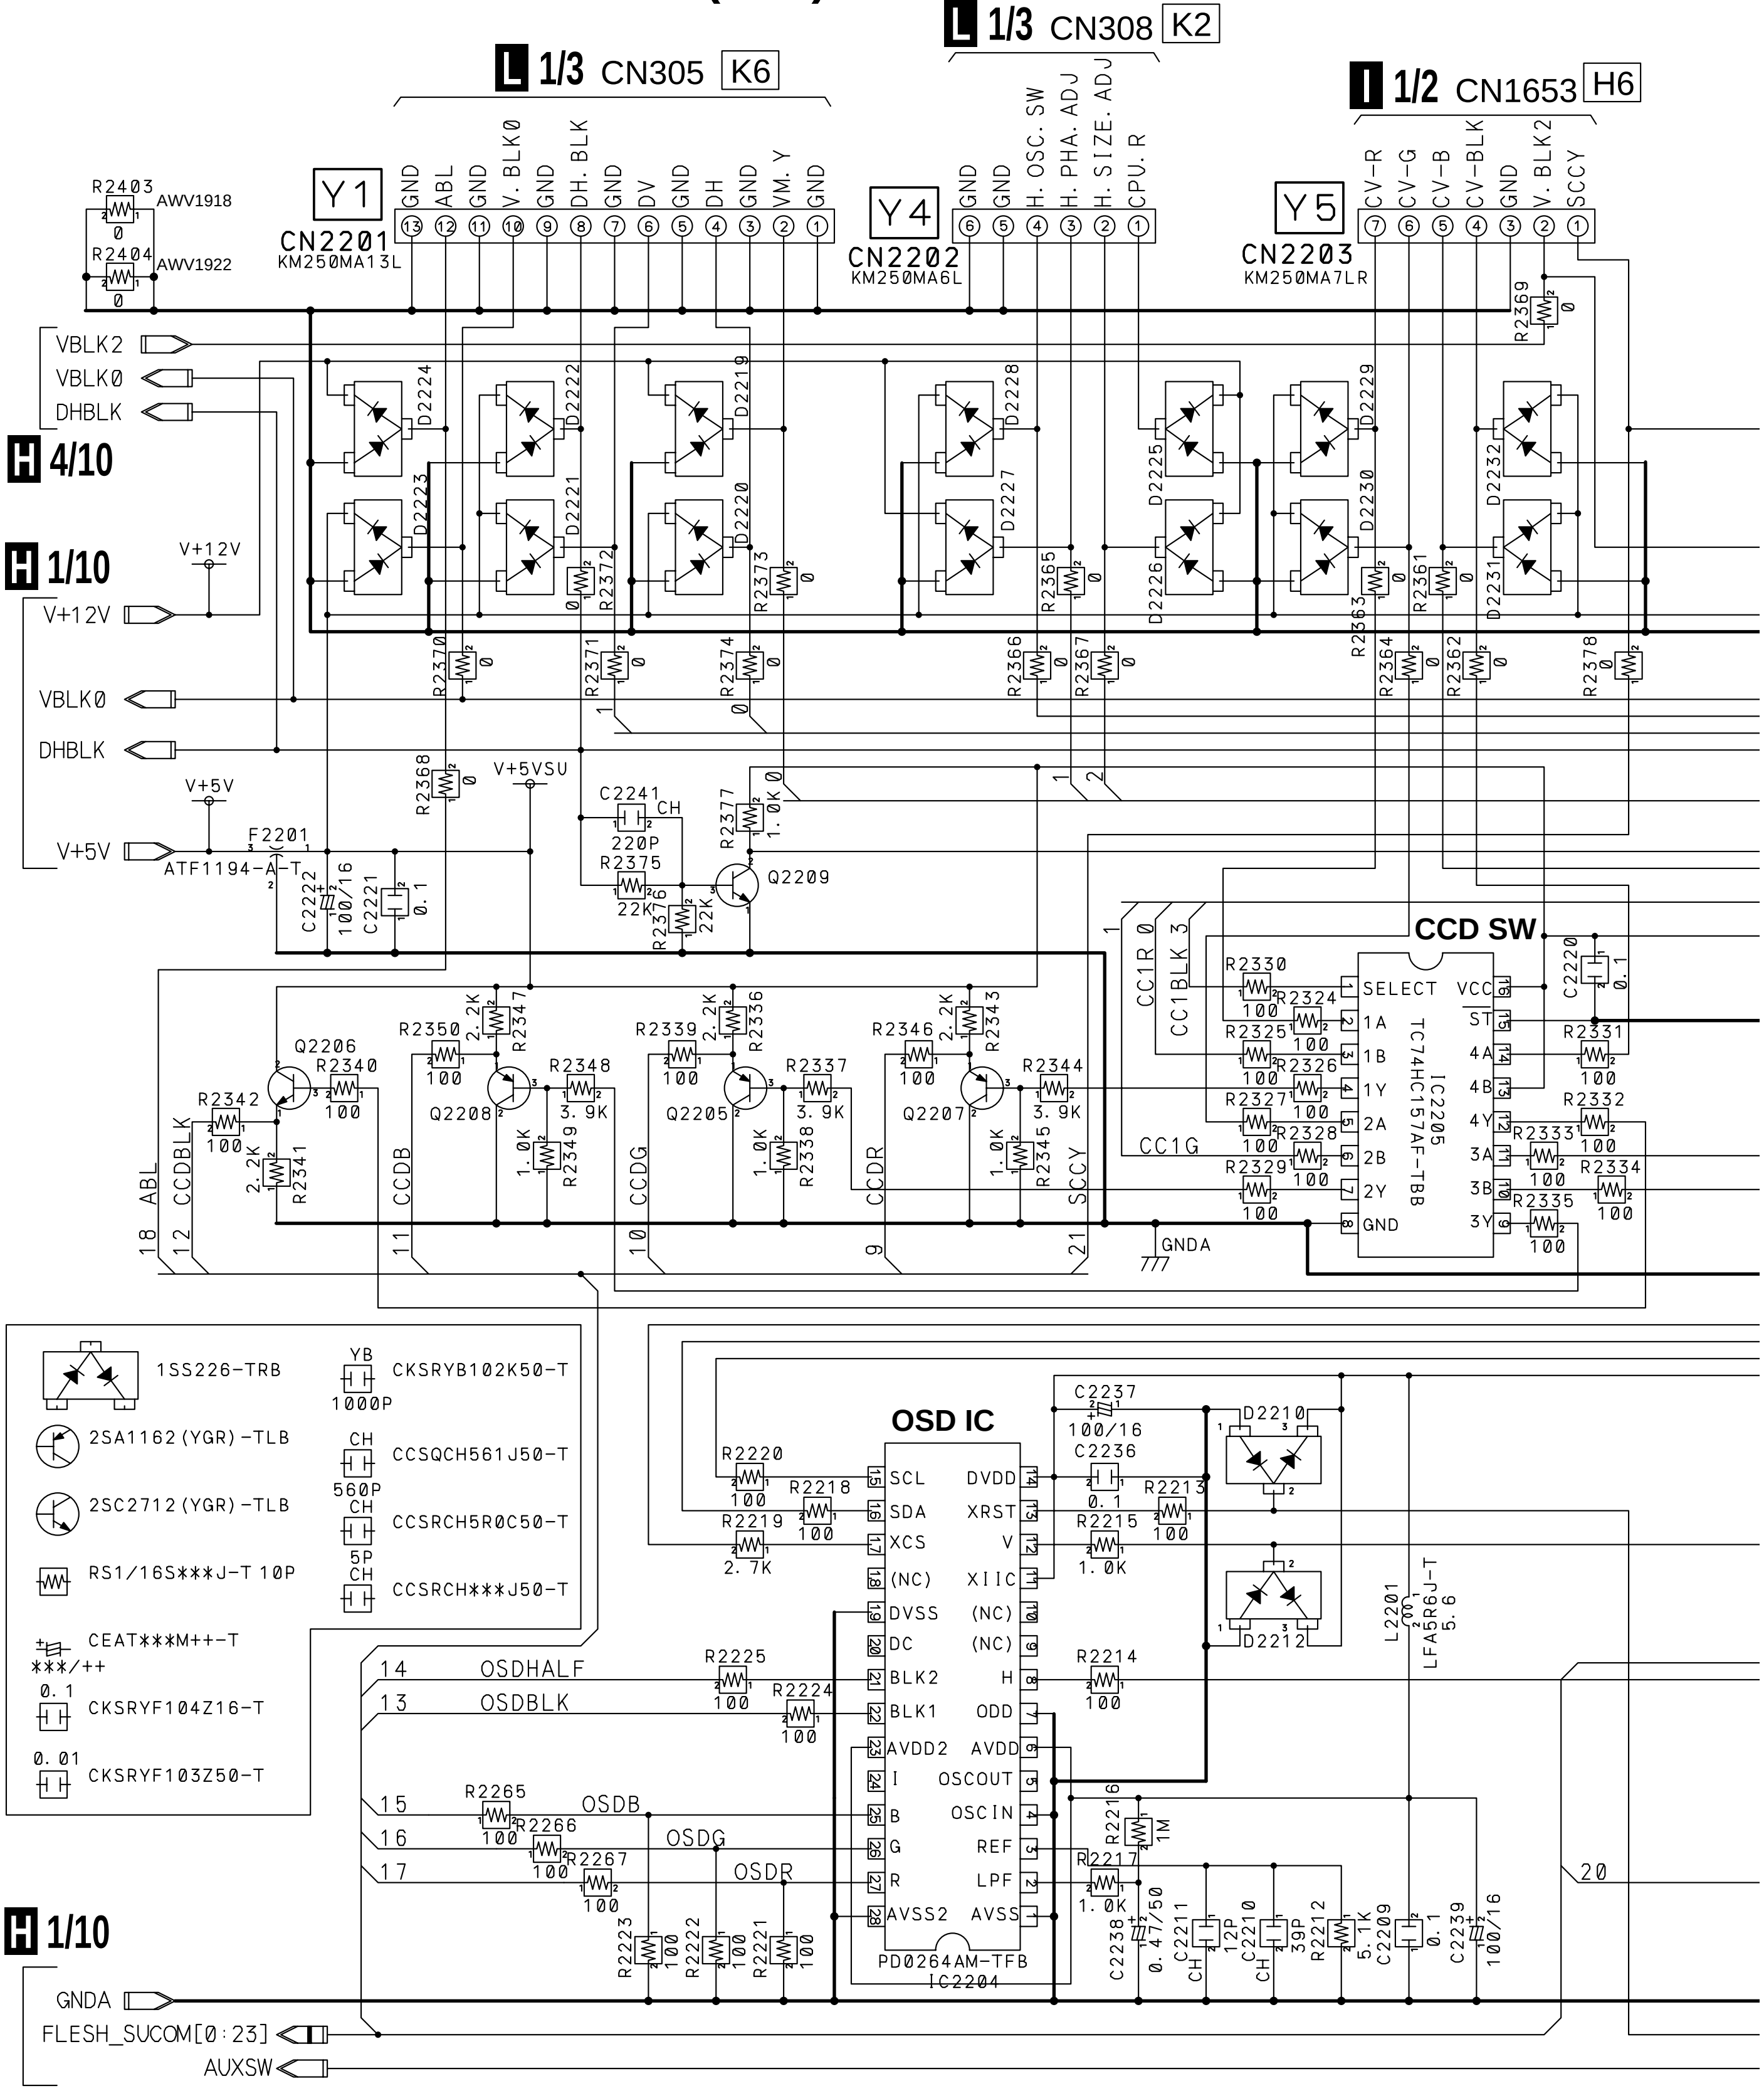
L 1/3 CN305 K6
L 1/3 CN308 K2
I 1/2 CN1653 H6
Y1 CN2201 KM250MA13L
GND ABL GND V.BLK0 GND DH.BLK GND DV GND DH GND VM.Y GND
Y4 CN2202 KM250MA6L
GND GND H.OSC.SW H.PHA.ADJ H.SIZE.ADJ CPU.R
Y5 CN2203 KM250MA7LR
CV-R CV-G CV-B CV-BLK GND V.BLK2 SCCY
R2403 AWV1918 0
R2404 AWV1922 0
VBLK2
VBLK0
DHBLK
H 4/10
H 1/10
V+12V
VBLK0
DHBLK
V+5V
F2201 ATF1194-A-T
C2222 100/16
C2221 0.1
V+5VSU
C2241 CH 220P
R2375 22K
R2376 22K
R2377 1.0K
Q2209
R2368 0
D2224 D2223 D2222 D2221 D2219 D2220 D2228 D2227 D2225 D2226 D2229 D2230 D2232 D2231
R2372 0 R2373 0 R2365 0 R2363 0 R2361 0 R2369 0
R2370 0 R2371 0 R2374 0 R2366 0 R2367 0 R2364 0 R2362 0 R2378 0
Q2206 Q2208 Q2205 Q2207
R2342 100 R2340 100 R2341 2.2K
R2350 100 R2347 2.2K R2348 3.9K R2349 1.0K
R2339 100 R2336 2.2K R2337 3.9K R2338 1.0K
R2346 100 R2343 2.2K R2344 3.9K R2345 1.0K
18 ABL 12 CCDBLK 11 CCDB 10 CCDG 9 CCDR 21 SCCY
1 CC1R 0 CC1BLK 3 CC1G
CCD SW
IC2205 TC74HC157AF-TBB
SELECT 1A 1B 1Y 2A 2B 2Y GND VCC ST 4A 4B 4Y 3A 3B 3Y
R2330 R2324 100 R2325 100 R2326 100 R2327 100 R2328 100 R2329 100
R2331 100 R2332 100 R2333 100 R2334 100 R2335 100
C2220 0.1
GNDA
1SS226-TRB
2SA1162(YGR)-TLB
2SC2712(YGR)-TLB
RS1/16S***J-T 10P
CEAT***M++-T ***/++
0.1 CKSRYF104Z16-T
0.01 CKSRYF103Z50-T
YB 1000P CKSRYB102K50-T
CH 560P CCSQCH561J50-T
CH 5P CCSRCH5R0C50-T
CH CCSRCH***J50-T
OSD IC
IC2204 PD0264AM-TFB
SCL SDA XCS (NC) DVSS DC BLK2 BLK1 AVDD2 I B G R AVSS2
DVDD XRST V XIIC (NC) (NC) H ODD AVDD OSCOUT OSCIN REF LPF AVSS
R2220 100 R2218 100 R2219 2.7K
C2237 100/16 C2236 0.1 R2213 100 R2215 1.0K R2214 100
D2210 D2212
L2201 LFA5R6J-T 5.6
14 OSDHALF 13 OSDBLK
R2225 100 R2224 100
15 OSDB 16 OSDG 17 OSDR
R2265 100 R2266 100 R2267 100
R2223 100 R2222 100 R2221 100
R2216 1M R2217 1.0K
C2238 0.47/50 C2211 CH 12P C2210 CH 39P R2212 5.1K C2209 0.1 C2239 100/16
20
H 1/10
GNDA
FLESH_SUCOM[0:23]
AUXSW

FLESH_SUCOM[0:23]

0	S_BUSY	3	S_CLK	6	S_SW	9	CCD.R	12	CCD.BLK	15	OSD.B	18	ABL
1	S_ENB	4	PASS	7	SDA3	10	CCD.G	13	OSD.BLK	16	OSD.G	19	RGB.SW
2	S_DATA	5	RS	8	SCL3	11	CCD.B	14	OSD.HALF	17	OSD.R	20	MCCY

21	SCCY
22	V.OX1
23	V.OX2

H 5/10 SUB VIDEO SERVICE ASSY (AWV1922)
• SUB UCOM BLOCK

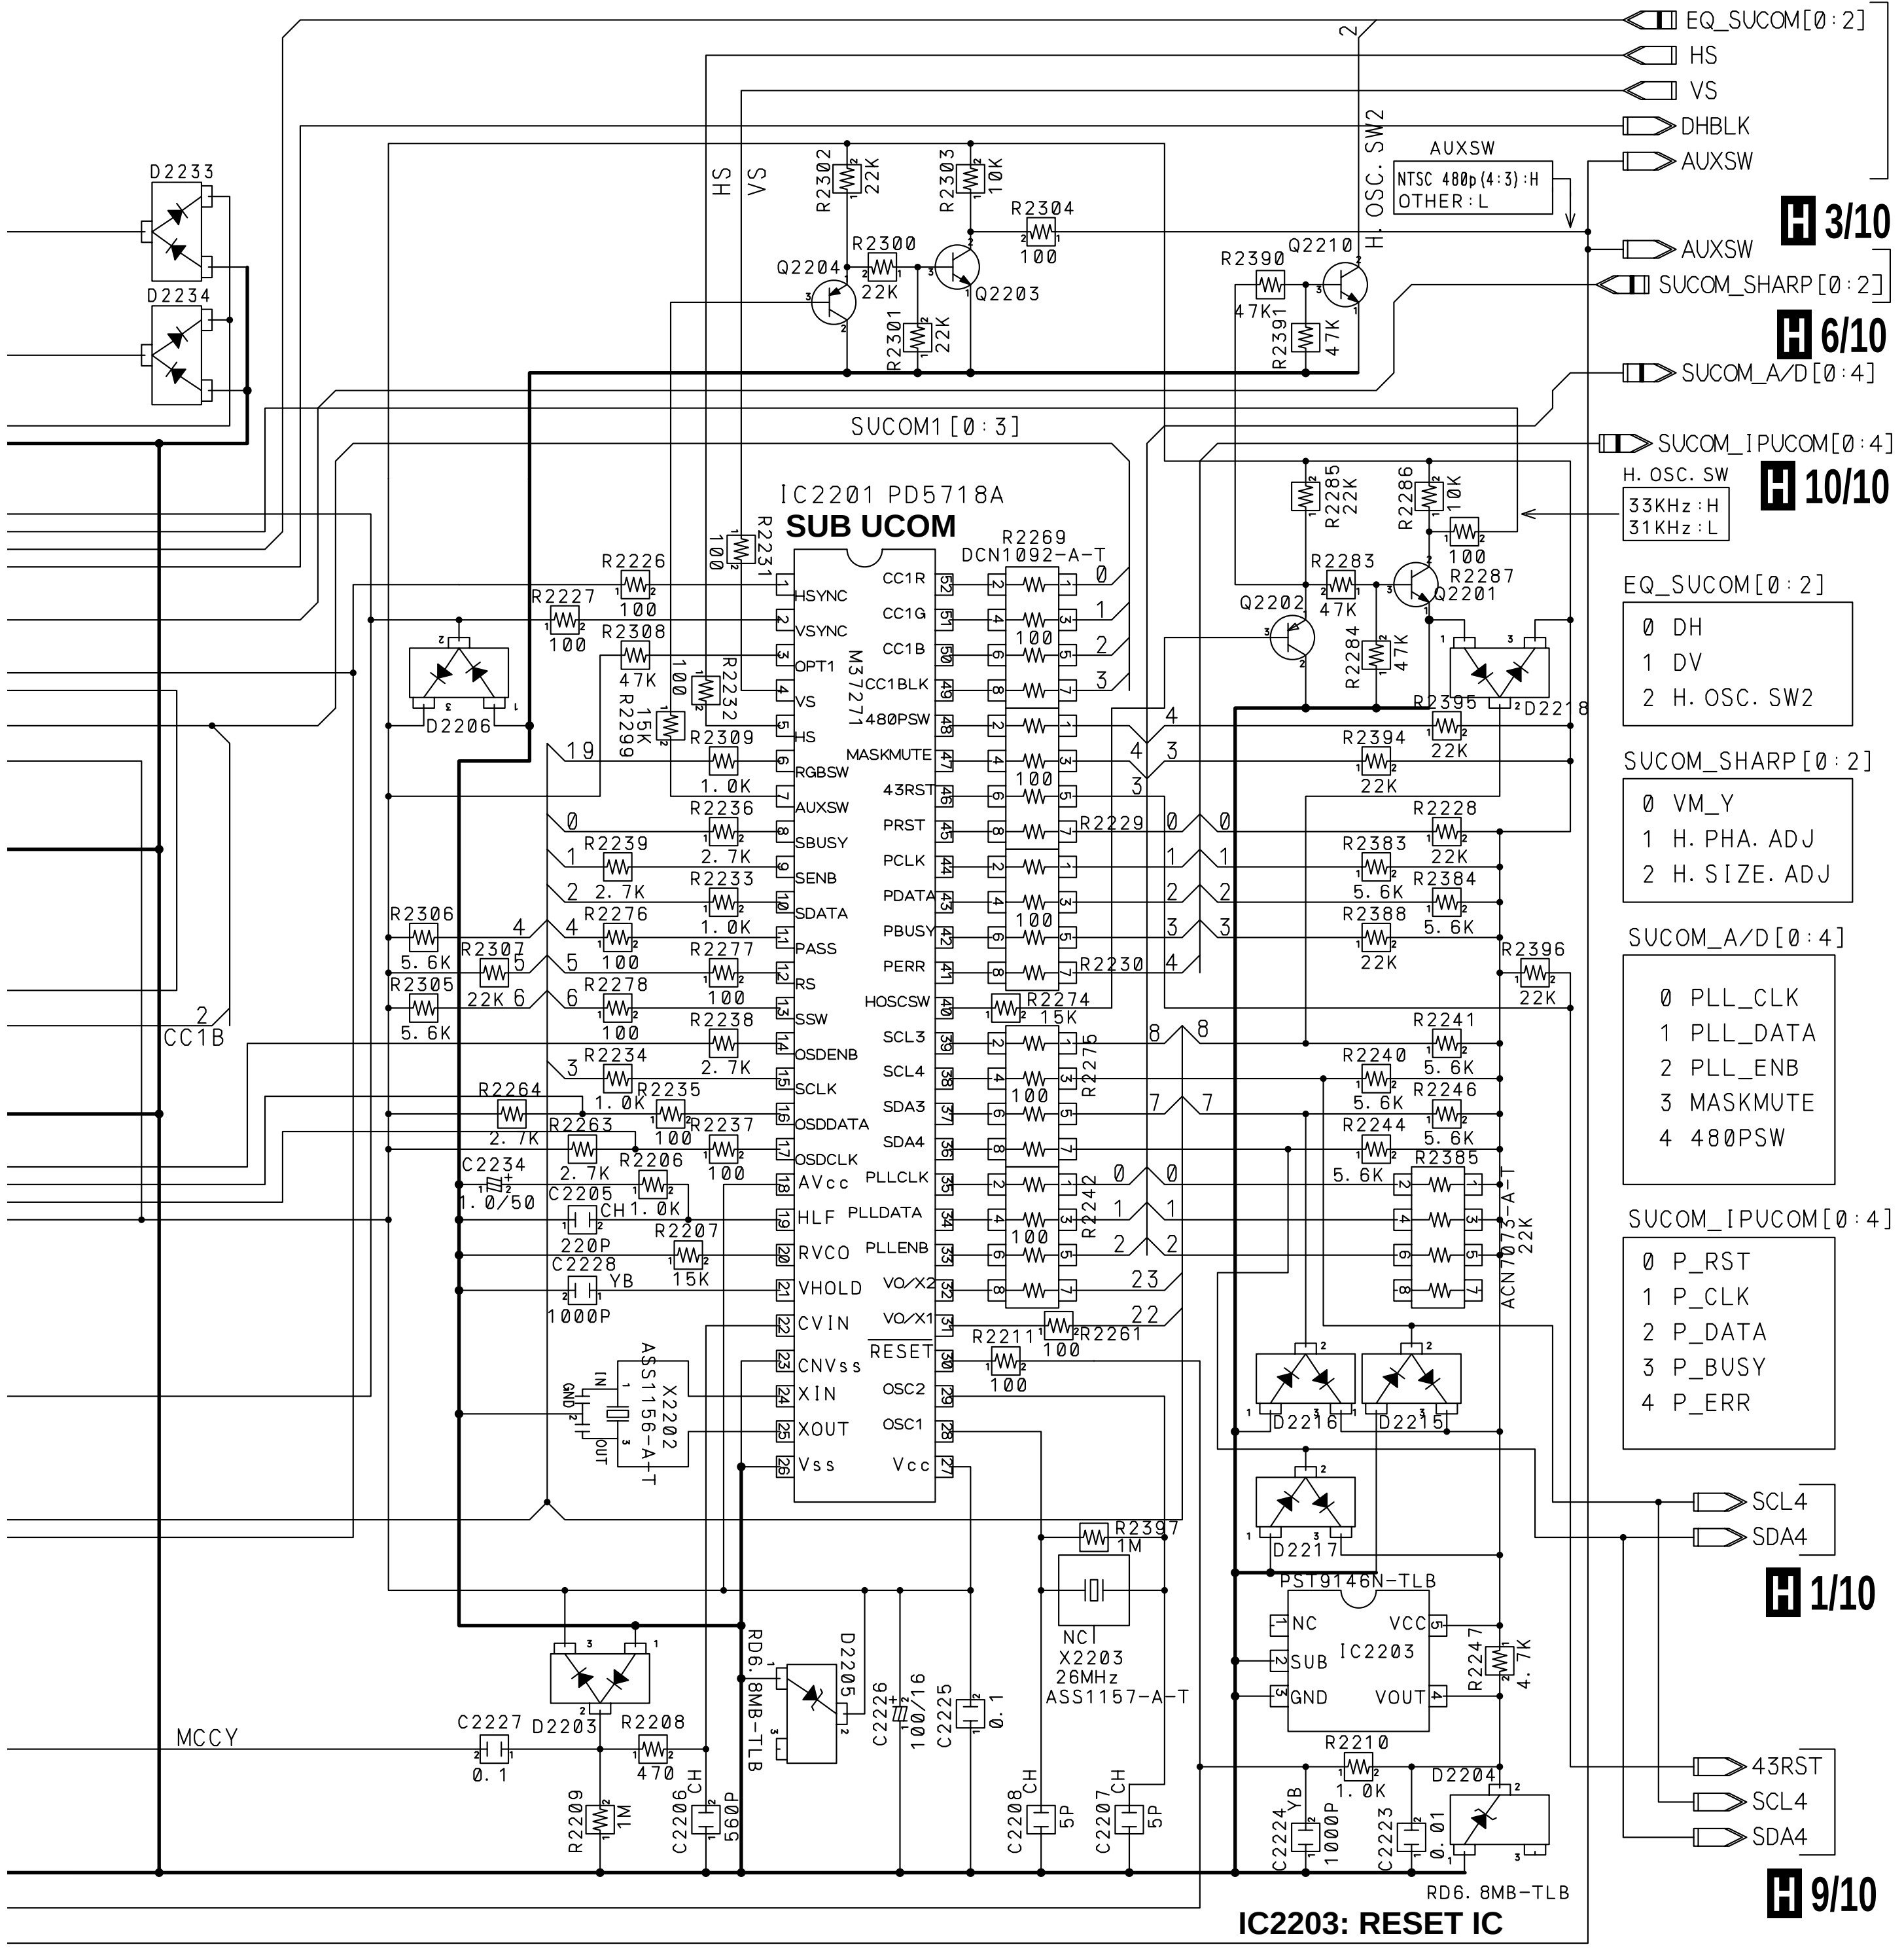
H 2/10
EQ_SUCOM[0:2]
HS
VS
DHBLK
AUXSW
H 3/10
AUXSW
SUCOM_SHARP[0:2]
H 6/10
SUCOM_A/D[0:4]
SUCOM_IPUCOM[0:4]
H 10/10
H. OSC. SW
33KHz:H
31KHz:L
AUXSW
NTSC 480p(4:3):H
OTHER:L
H. OSC. SW2
EQ_SUCOM[0:2]
0 DH
1 DV
2 H. OSC. SW2
SUCOM_SHARP[0:2]
0 VM_Y
1 H. PHA. ADJ
2 H. SIZE. ADJ
SUCOM_A/D[0:4]
0 PLL_CLK
1 PLL_DATA
2 PLL_ENB
3 MASKMUTE
4 480PSW
SUCOM_IPUCOM[0:4]
0 P_RST
1 P_CLK
2 P_DATA
3 P_BUSY
4 P_ERR
SCL4
SDA4
H 1/10
43RST
SCL4
SDA4
H 9/10
D2233
D2234
D2206
D2203
D2205
D2204
D2215
D2216
D2217
D2218
Q2201
Q2202
Q2203
Q2204
Q2210
R2302 22K
R2303 10K
R2304 100
R2300 22K
R2301 22K
R2390 47K
R2391 47K
R2285 22K
R2286 10K
R2287 100
R2283 47K
R2284 47K
SUCOM1[0:3]
IC2201 PD5718A
SUB UCOM
M37271
R2269 DCN1092-A-T
R2231 100
R2226 100
R2227 100
R2308 47K
R2232 100
R2299 15K
R2309 1.0K
R2236 2.7K
R2239
R2233 1.0K
R2276 100
R2277 100
R2278 100
R2238 2.7K
R2234 1.0K
R2235 100
R2237 100
R2264 2.7K
R2263 2.7K
R2206 1.0K
R2207 15K
R2306 5.6K
R2307 22K
R2305 5.6K
C2234 1.0/50
C2205 CH 220P
C2228 YB 1000P
X2202 ASS1156-A-T
HSYNC
VSYNC
OPT1
VS
HS
RGBSW
AUXSW
SBUSY
SENB
SDATA
PASS
RS
SSW
OSDENB
SCLK
OSDDATA
OSDCLK
AVcc
HLF
RVCO
VHOLD
CVIN
CNVss
XIN
XOUT
Vss
CC1R
CC1G
CC1B
CC1BLK
480PSW
MASKMUTE
43RST
PRST
PCLK
PDATA
PBUSY
PERR
HOSCSW
SCL3
SCL4
SDA3
SDA4
PLLCLK
PLLDATA
PLLENB
VO/X2
VO/X1
RESET
OSC2
OSC1
Vcc
R2229
R2230
R2274 15K
R2275
R2242
R2211 100
R2261
R2394 22K
R2395
R2228 22K
R2383 5.6K
R2384 5.6K
R2388 22K
R2396 22K
R2241 5.6K
R2240 5.6K
R2246 5.6K
R2244 5.6K
R2385 ACN7013-A-T 22K
R2397 1M
X2203 26MHz ASS1157-A-T
NC
PST9146N-TLB
IC2203
NC
SUB
GND
VCC
VOUT
R2247 4.7K
R2210 1.0K
C2224 YB 1000P
C2223 0.01
RD6.8MB-TLB
C2227 0.1
R2208 470
R2209 1M
C2206 CH 560P
RD6.8MB-TLB
C2226 100/16
C2225 0.1
C2208 CH 5P
C2207 CH 5P
CC1B
MCCY
IC2203: RESET IC

PRO-720HD, PRO-620HD, PRO-520HD

3.22 SUB VIDEO SERVICE ASSY (6/10)

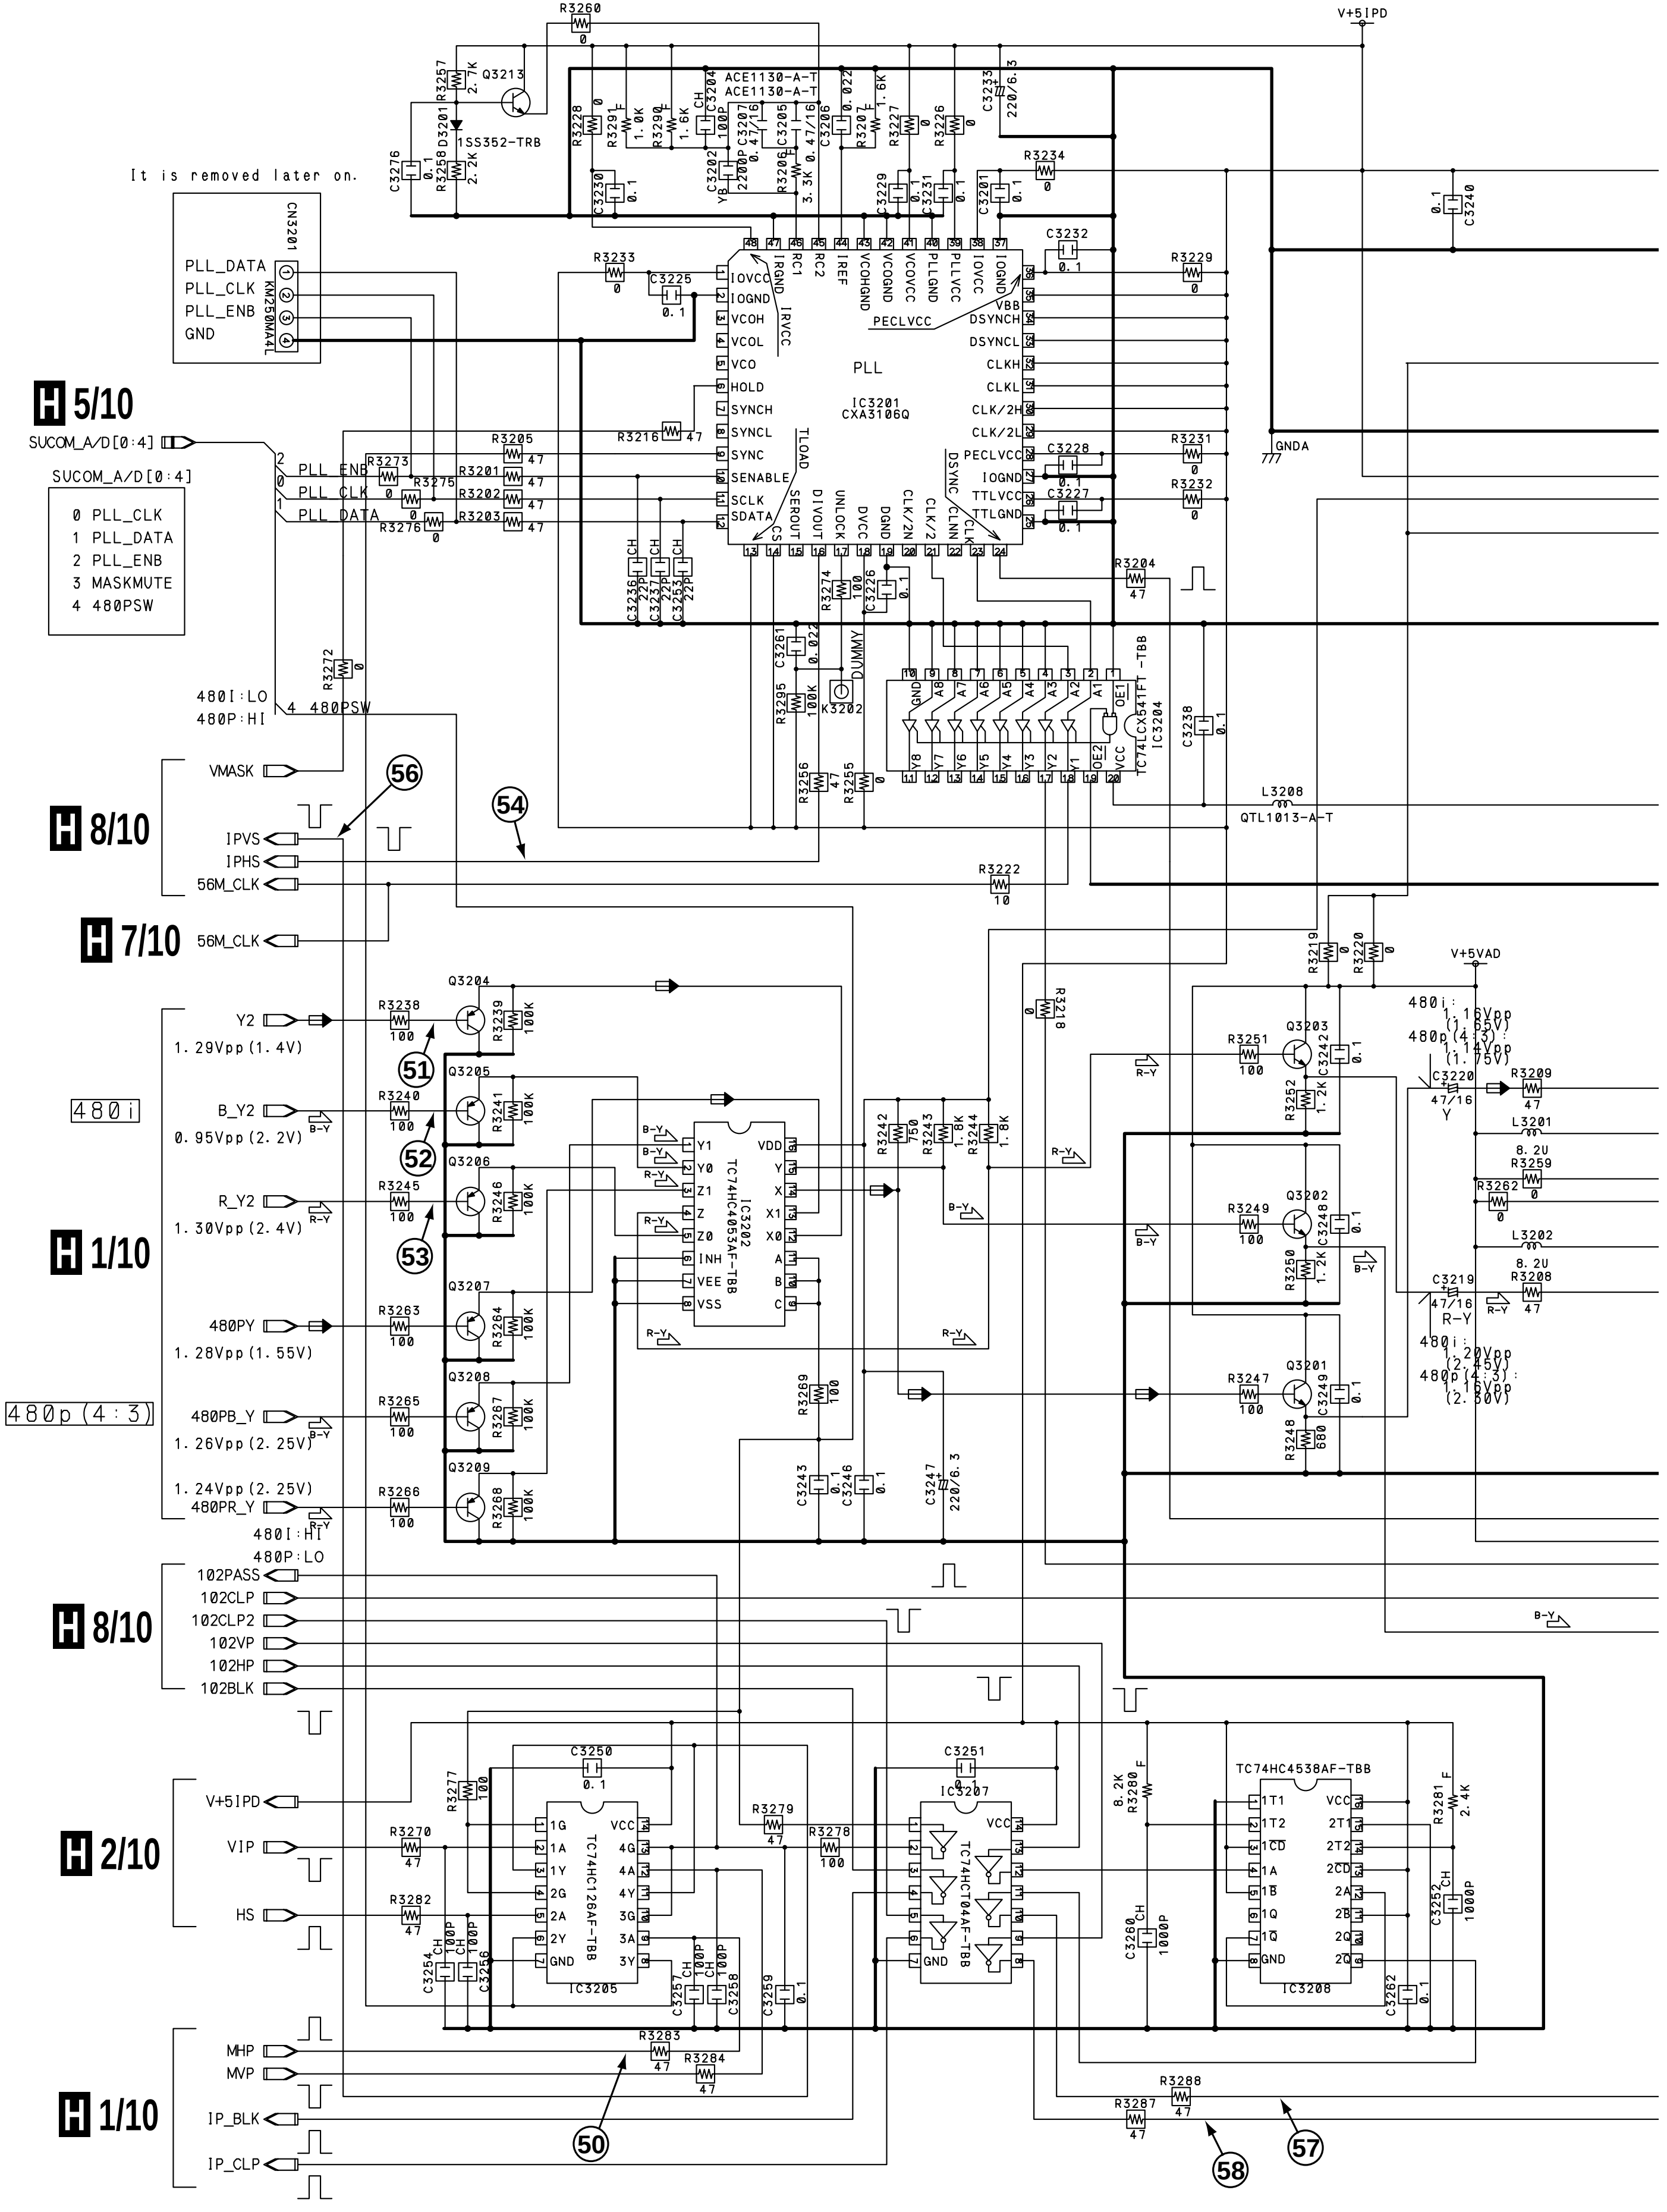
A
B
C
D
It is removed later on.
CN3201
KM250NA4L
PLL_DATA
PLL_CLK
PLL_ENB
GND
H 5/10
SUCOM_A/D[0:4]
0 PLL_CLK
1 PLL_DATA
2 PLL_ENB
3 MASKMUTE
4 480PSW
R3260 0
R3257 2.7K
Q3213
D3201 1SS352-TRB
R3258 2.2K
C3276 0.1
IC3201 CXA3106Q
PLL
ACE1130-A-T
C3233 220/6.3
V+5IPD
R3234 0
C3240 0.1
C3232 0.1
R3229 0
R3233 0
C3225 0.1
R3216 47
R3205 47
R3201 47
R3202 47
R3203 47
R3273
R3275 0
R3276 0
R3231 0
R3232 0
C3228 0.1
C3227 0.1
GNDA
R3204 47
R3274 100
C3226 0.1
C3261 0.022
DUMMY
K3202
R3295 100K
IC3204 TC74LCX541FT-TBB
C3238 0.1
L3208 QTL1013-A-T
R3272 0
480I:LO
480P:HI
4 480PSW
VMASK
H 8/10
IPVS
IPHS
56M_CLK
H 7/10
56M_CLK
R3256 47
R3255 0
R3222 10
(56)
(54)
Y2
1.29Vpp(1.4V)
480i
B_Y2
0.95Vpp(2.2V)
R_Y2
1.30Vpp(2.4V)
H 1/10
480PY
1.28Vpp(1.55V)
480p(4:3)
480PB_Y
1.26Vpp(2.25V)
1.24Vpp(2.25V)
480PR_Y
480I:HI
480P:LO
Q3204
Q3205
Q3206
Q3207
Q3208
Q3209
R3238 100
R3239 100K
R3240 100
R3241 100K
R3245 100
R3246 100K
R3263 100
R3264 100K
R3265 100
R3267 100K
R3266 100
R3268 100K
(51)
(52)
(53)
IC3202 TC74HC4053AF-TBB
R3269 100
C3243 0.1
C3246 0.1
C3247 220/6.3
R3242 750
R3243 1.8K
R3244 1.8K
R3218 0
R3219 0
R3220 0
V+5VAD
Q3203
Q3202
Q3201
R3251 100
R3252 1.2K
C3242 0.1
R3249 100
R3250 1.2K
C3248 0.1
R3247 100
R3248 680
C3249 0.1
480i: 1.16Vpp (1.55V)
480p(4:3): 1.14Vpp (1.75V)
C3220 47/16
Y
R3209 47
L3201 8.2U
R3259 47
R3262 0
L3202 8.2U
R3208 47
C3219 47/16
R-Y
480i: 1.20Vpp (2.25V)
480p(4:3): 1.16Vpp (2.50V)
B-Y
102PASS
102CLP
H 8/10
102CLP2
102VP
102HP
102BLK
V+5IPD
H 2/10
VIP
HS
R3270 47
R3282 47
R3277 100
C3250 0.1
IC3205 TC74HC126AF-TBB
C3254 100P
C3256 100P
C3257 100P
C3258 100P
C3259 0.1
R3279 47
R3278 100
C3251 0.1
IC3207 TC74HCT04AF-TBB
R3280 8.2K F
C3260 1000P
TC74HC4538AF-TBB
IC3208
R3281 2.4K F
C3252 1000P
C3262 0.1
MHP
MVP
H 1/10
IP_BLK
IP_CLP
R3283 47
R3284 47
(50)
R3287 47
R3288 47
(58)
(57)

H 6/10

H 6/10

SUB VIDEO SERVICE ASSY (AWV1922)
• I/P BLOCK (1/5); A/D & PLL

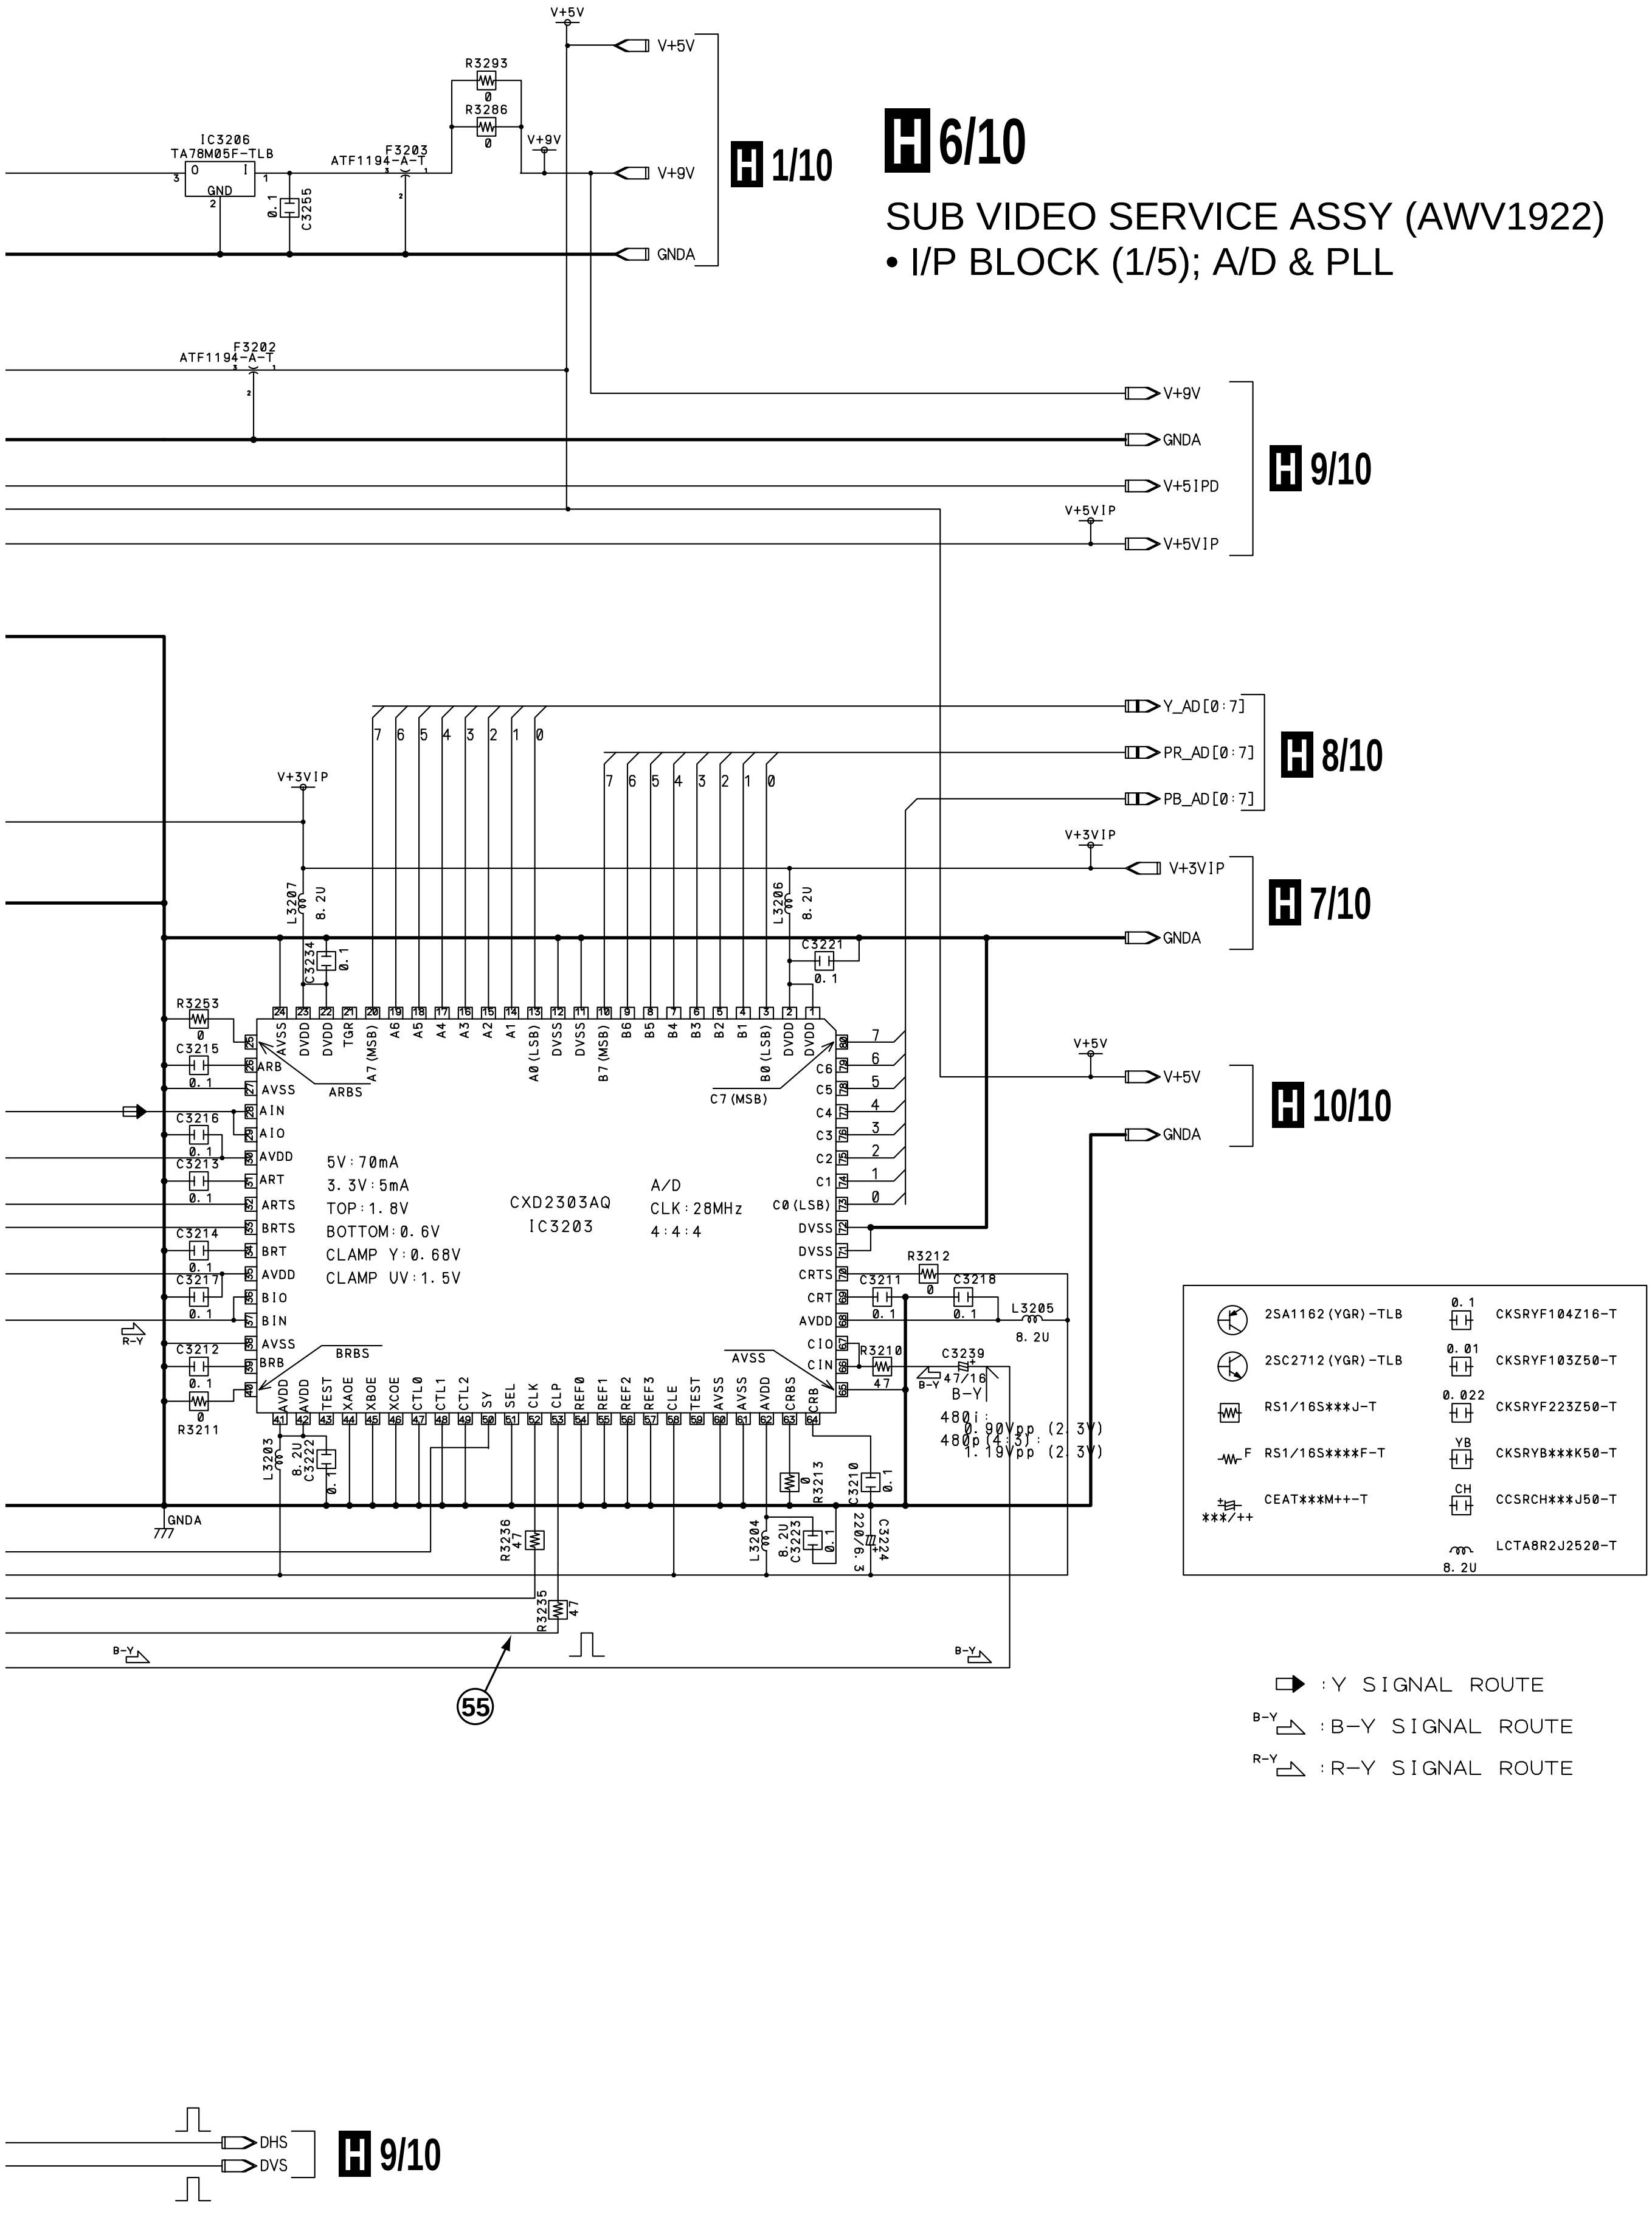
V+5V
R3293
0
R3286
0
V+9V
IC3206
TA78M05F-TLB
O I
GND
0.1
C3255
F3203
ATF1194-A-T
V+5V
V+9V
GNDA
H 1/10
F3202
ATF1194-A-T
V+9V
GNDA
V+5IPD
V+5VIP
V+5VIP
H 9/10
Y_AD[0:7]
PR_AD[0:7]
PB_AD[0:7]
H 8/10
7 6 5 4 3 2 1 0
7 6 5 4 3 2 1 0
V+3VIP
V+3VIP
V+3VIP
H 7/10
L3207
8.2U
L3206
8.2U
C3234
0.1
C3221
0.1
GNDA
R3253
0
C3215
0.1
C3216
0.1
C3213
0.1
C3214
0.1
C3217
0.1
C3212
0.1
R3211
0
AVSS DVDD DVDD TGR A7(MSB) A6 A5 A4 A3 A2 A1 A0(LSB) DVSS DVSS B7(MSB) B6 B5 B4 B3 B2 B1 B0(LSB) DVDD DVDD
ARB AVSS AIN AIO AVDD ART ARTS BRTS BRT AVDD BIO BIN AVSS BRB
ARBS
C7(MSB)
C6 C5 C4 C3 C2 C1 C0(LSB) DVSS DVSS CRTS CRT AVDD CIO CIN CRB
5V:70mA
3.3V:5mA
TOP:1.8V
BOTTOM:0.6V
CLAMP Y:0.68V
CLAMP UV:1.5V
CXD2303AQ
IC3203
A/D
CLK:28MHz
4:4:4
V+5V
V+5V
GNDA
H 10/10
R-Y
BRBS
AVSS
AVDD AVDD TEST XAOE XBOE XCOE CTL0 CTL1 CTL2 SY SEL CLK CLP REF0 REF1 REF2 REF3 CLE TEST AVSS AVSS AVDD CRBS CRB
R3212
0
C3211
0.1
C3218
0.1
L3205
8.2U
R3210
47
C3239
47/16
B-Y
B-Y
480i:
0.90Vpp (2.3V)
480p(4:3):
1.19Vpp (2.3V)
L3203
8.2U
C3222
0.1
GNDA
R3236
47
R3213
0
C3210
0.1
L3204
8.2U
C3223
0.1
C3224
220/6.3
R3235
47
B-Y
B-Y
55
DHS
DVS
H 9/10

	2SA1162(YGR)-TLB	0.1	CKSRYF104Z16-T
	2SC2712(YGR)-TLB	0.01	CKSRYF103Z50-T
	RS1/16S***J-T	0.022	CKSRYF223Z50-T
F	RS1/16S****F-T	YB	CKSRYB***K50-T
***/++	CEAT***M++-T	CH	CCSRCH***J50-T
		8.2U	LCTA8R2J2520-T

:Y SIGNAL ROUTE
B-Y :B-Y SIGNAL ROUTE
R-Y :R-Y SIGNAL ROUTE

3.23 SUB VIDEO SERVICE ASSY (7/10)

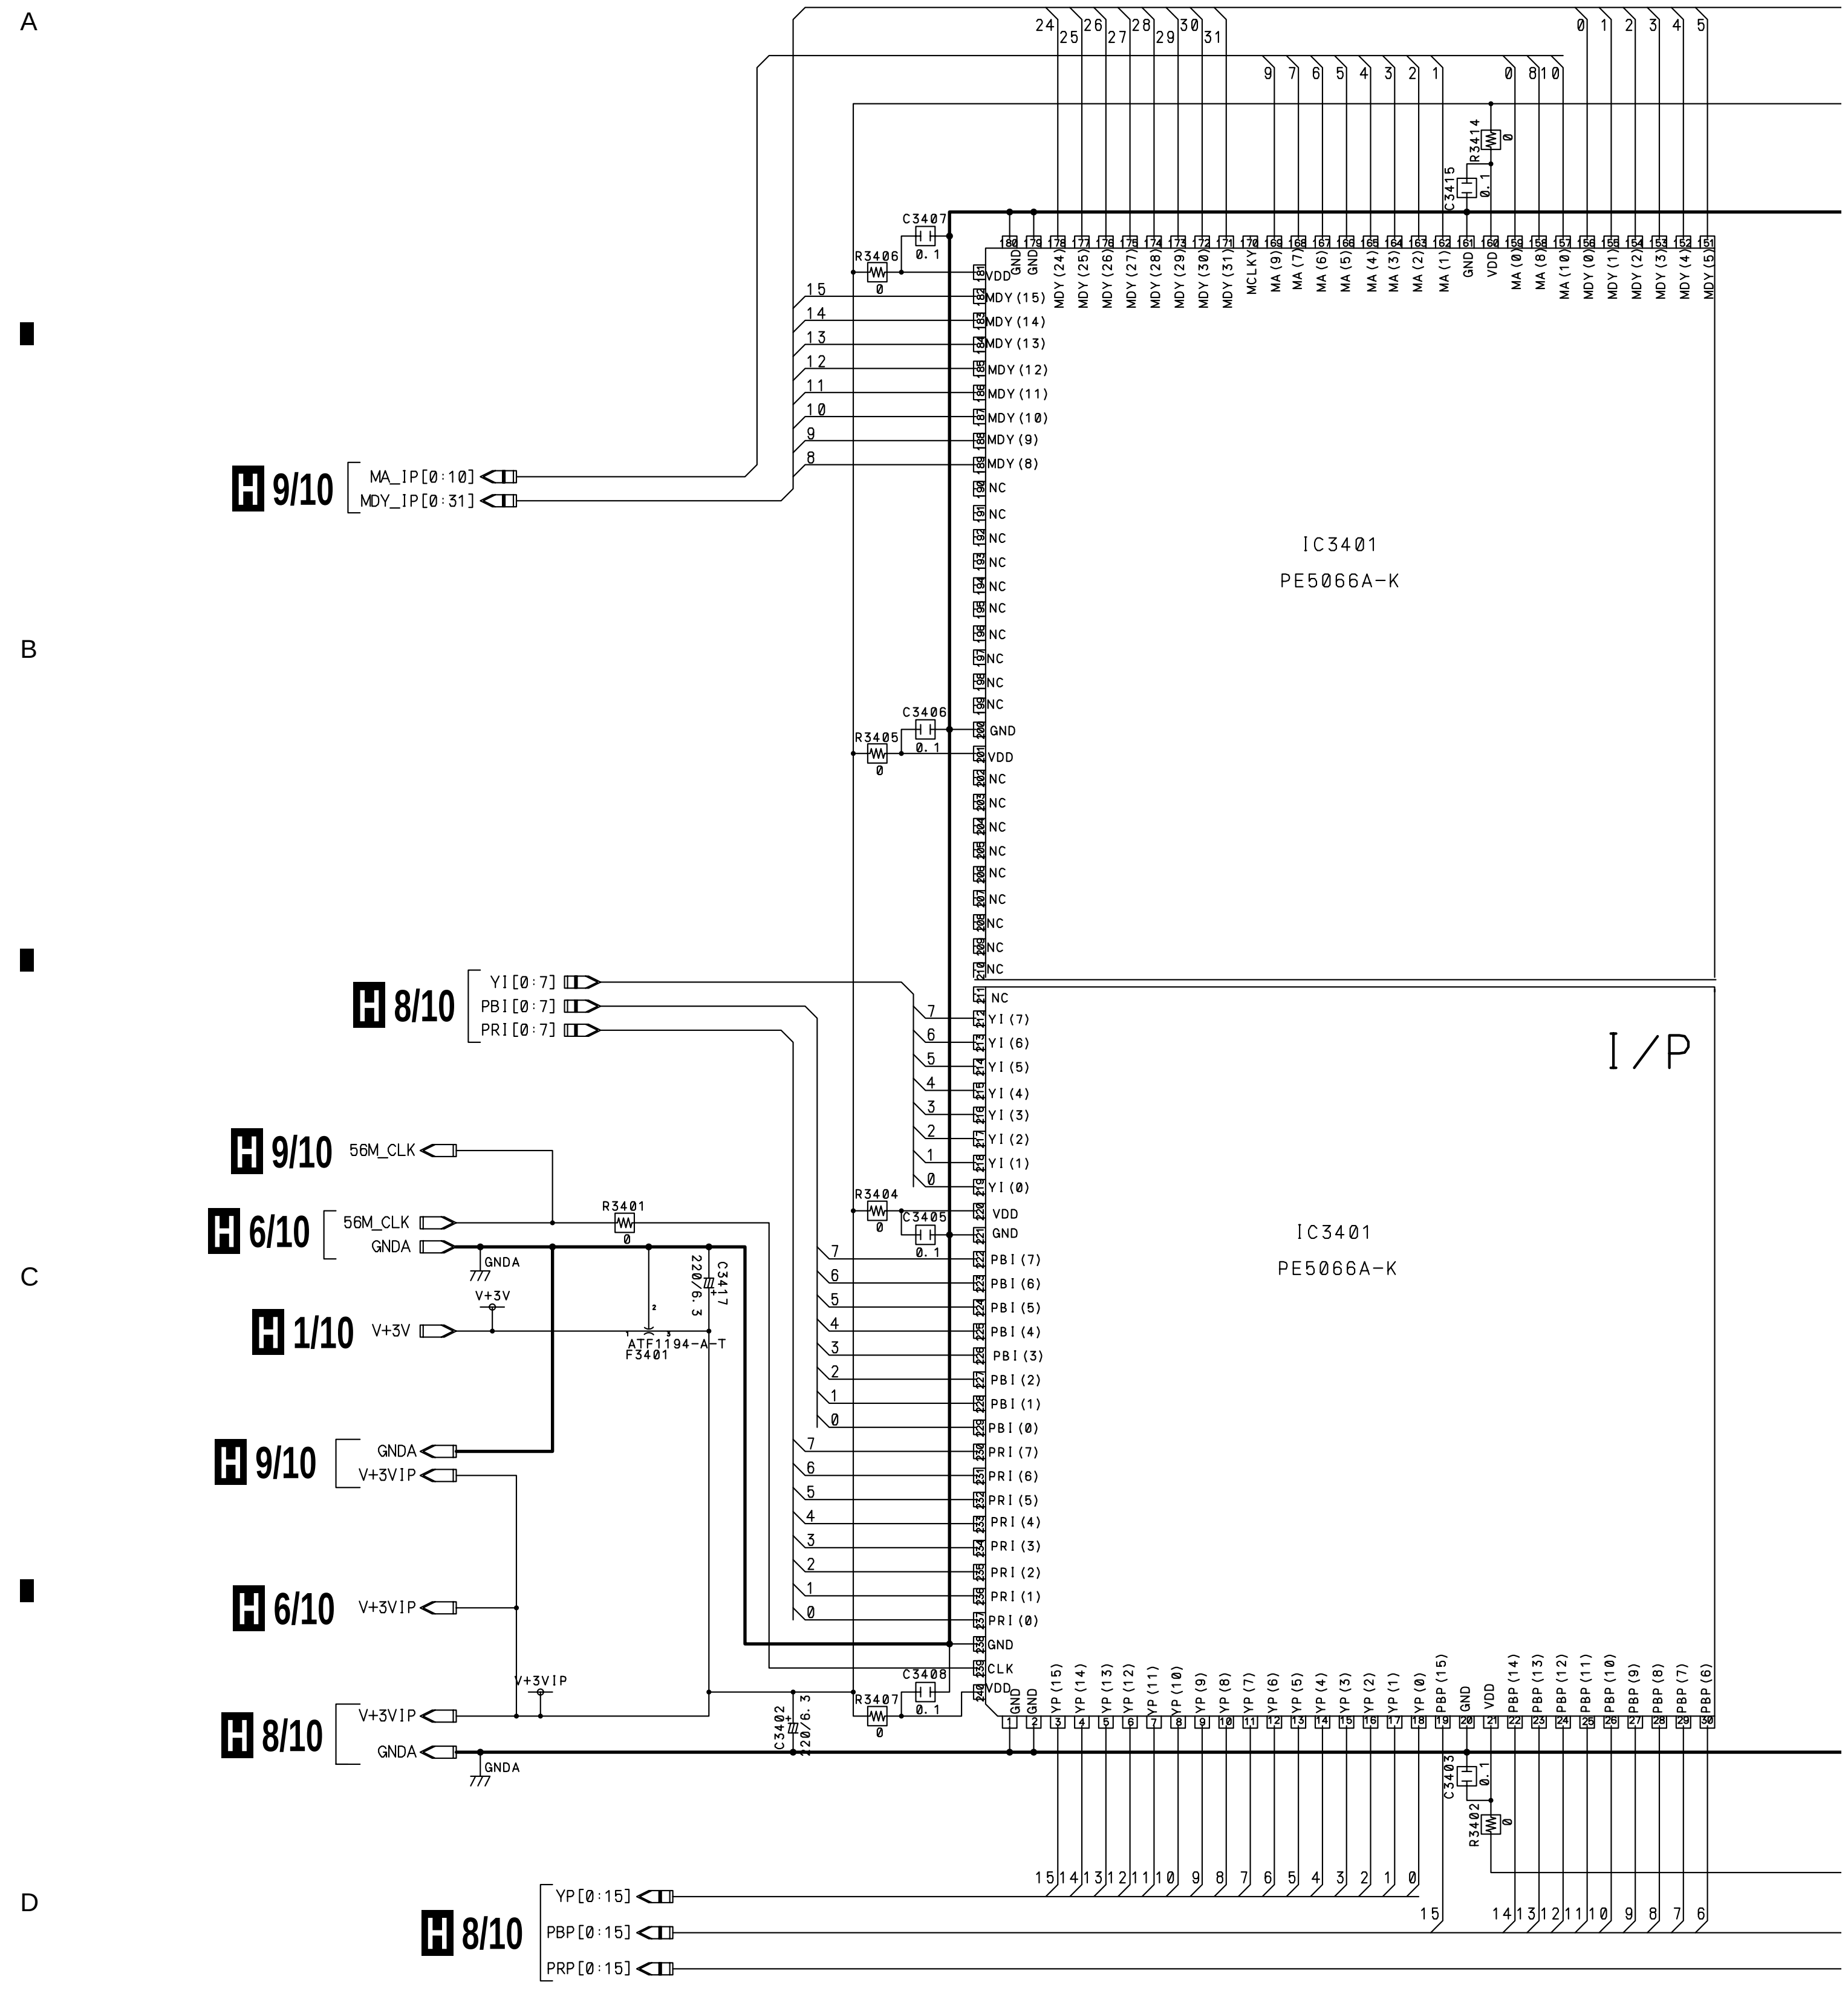
A
B
C
D
H 9/10
MA_IP[0:10]
MDY_IP[0:31]
H 8/10
YI[0:7]
PBI[0:7]
PRI[0:7]
H 9/10
56M_CLK
H 6/10
56M_CLK
GNDA
GNDA
H 1/10
V+3V
R3401
0
C3417
220/6.3
ATF1194-A-T
F3401
H 9/10
GNDA
V+3VIP
H 6/10
V+3VIP
V+3VIP
H 8/10
V+3VIP
GNDA
GNDA
C3402
220/6.3
R3406
0
C3407
0.1
R3405
0
C3406
0.1
R3404
0
C3405
0.1
R3407
0
C3408
0.1
R3414
0
C3415
0.1
C3403
0.1
R3402
0
IC3401
PE5066A-K
I/P
VDD
GND
MDY(15)
MDY(14)
MDY(13)
MDY(12)
MDY(11)
MDY(10)
MDY(9)
MDY(8)
NC
MDY(24)
MDY(25)
MDY(26)
MDY(27)
MDY(28)
MDY(29)
MDY(30)
MDY(31)
MCLKY
MA(9)
MA(7)
MA(6)
MA(5)
MA(4)
MA(3)
MA(2)
MA(1)
MA(0)
MA(8)
MA(10)
MDY(0)
MDY(1)
MDY(2)
MDY(3)
MDY(4)
MDY(5)
YI(7)
YI(6)
YI(5)
YI(4)
YI(3)
YI(2)
YI(1)
YI(0)
PBI(7)
PBI(6)
PBI(5)
PBI(4)
PBI(3)
PBI(2)
PBI(1)
PBI(0)
PRI(7)
PRI(6)
PRI(5)
PRI(4)
PRI(3)
PRI(2)
PRI(1)
PRI(0)
CLK
YP(15)
YP(14)
YP(13)
YP(12)
YP(11)
YP(10)
YP(9)
YP(8)
YP(7)
YP(6)
YP(5)
YP(4)
YP(3)
YP(2)
YP(1)
YP(0)
PBP(15)
PBP(14)
PBP(13)
PBP(12)
PBP(11)
PBP(10)
PBP(9)
PBP(8)
PBP(7)
PBP(6)
H 8/10
YP[0:15]
PBP[0:15]
PRP[0:15]

H 7/10 SUB VIDEO SERVICE ASSY (AWV1922)

• I/P BLOCK (2/5); IC101

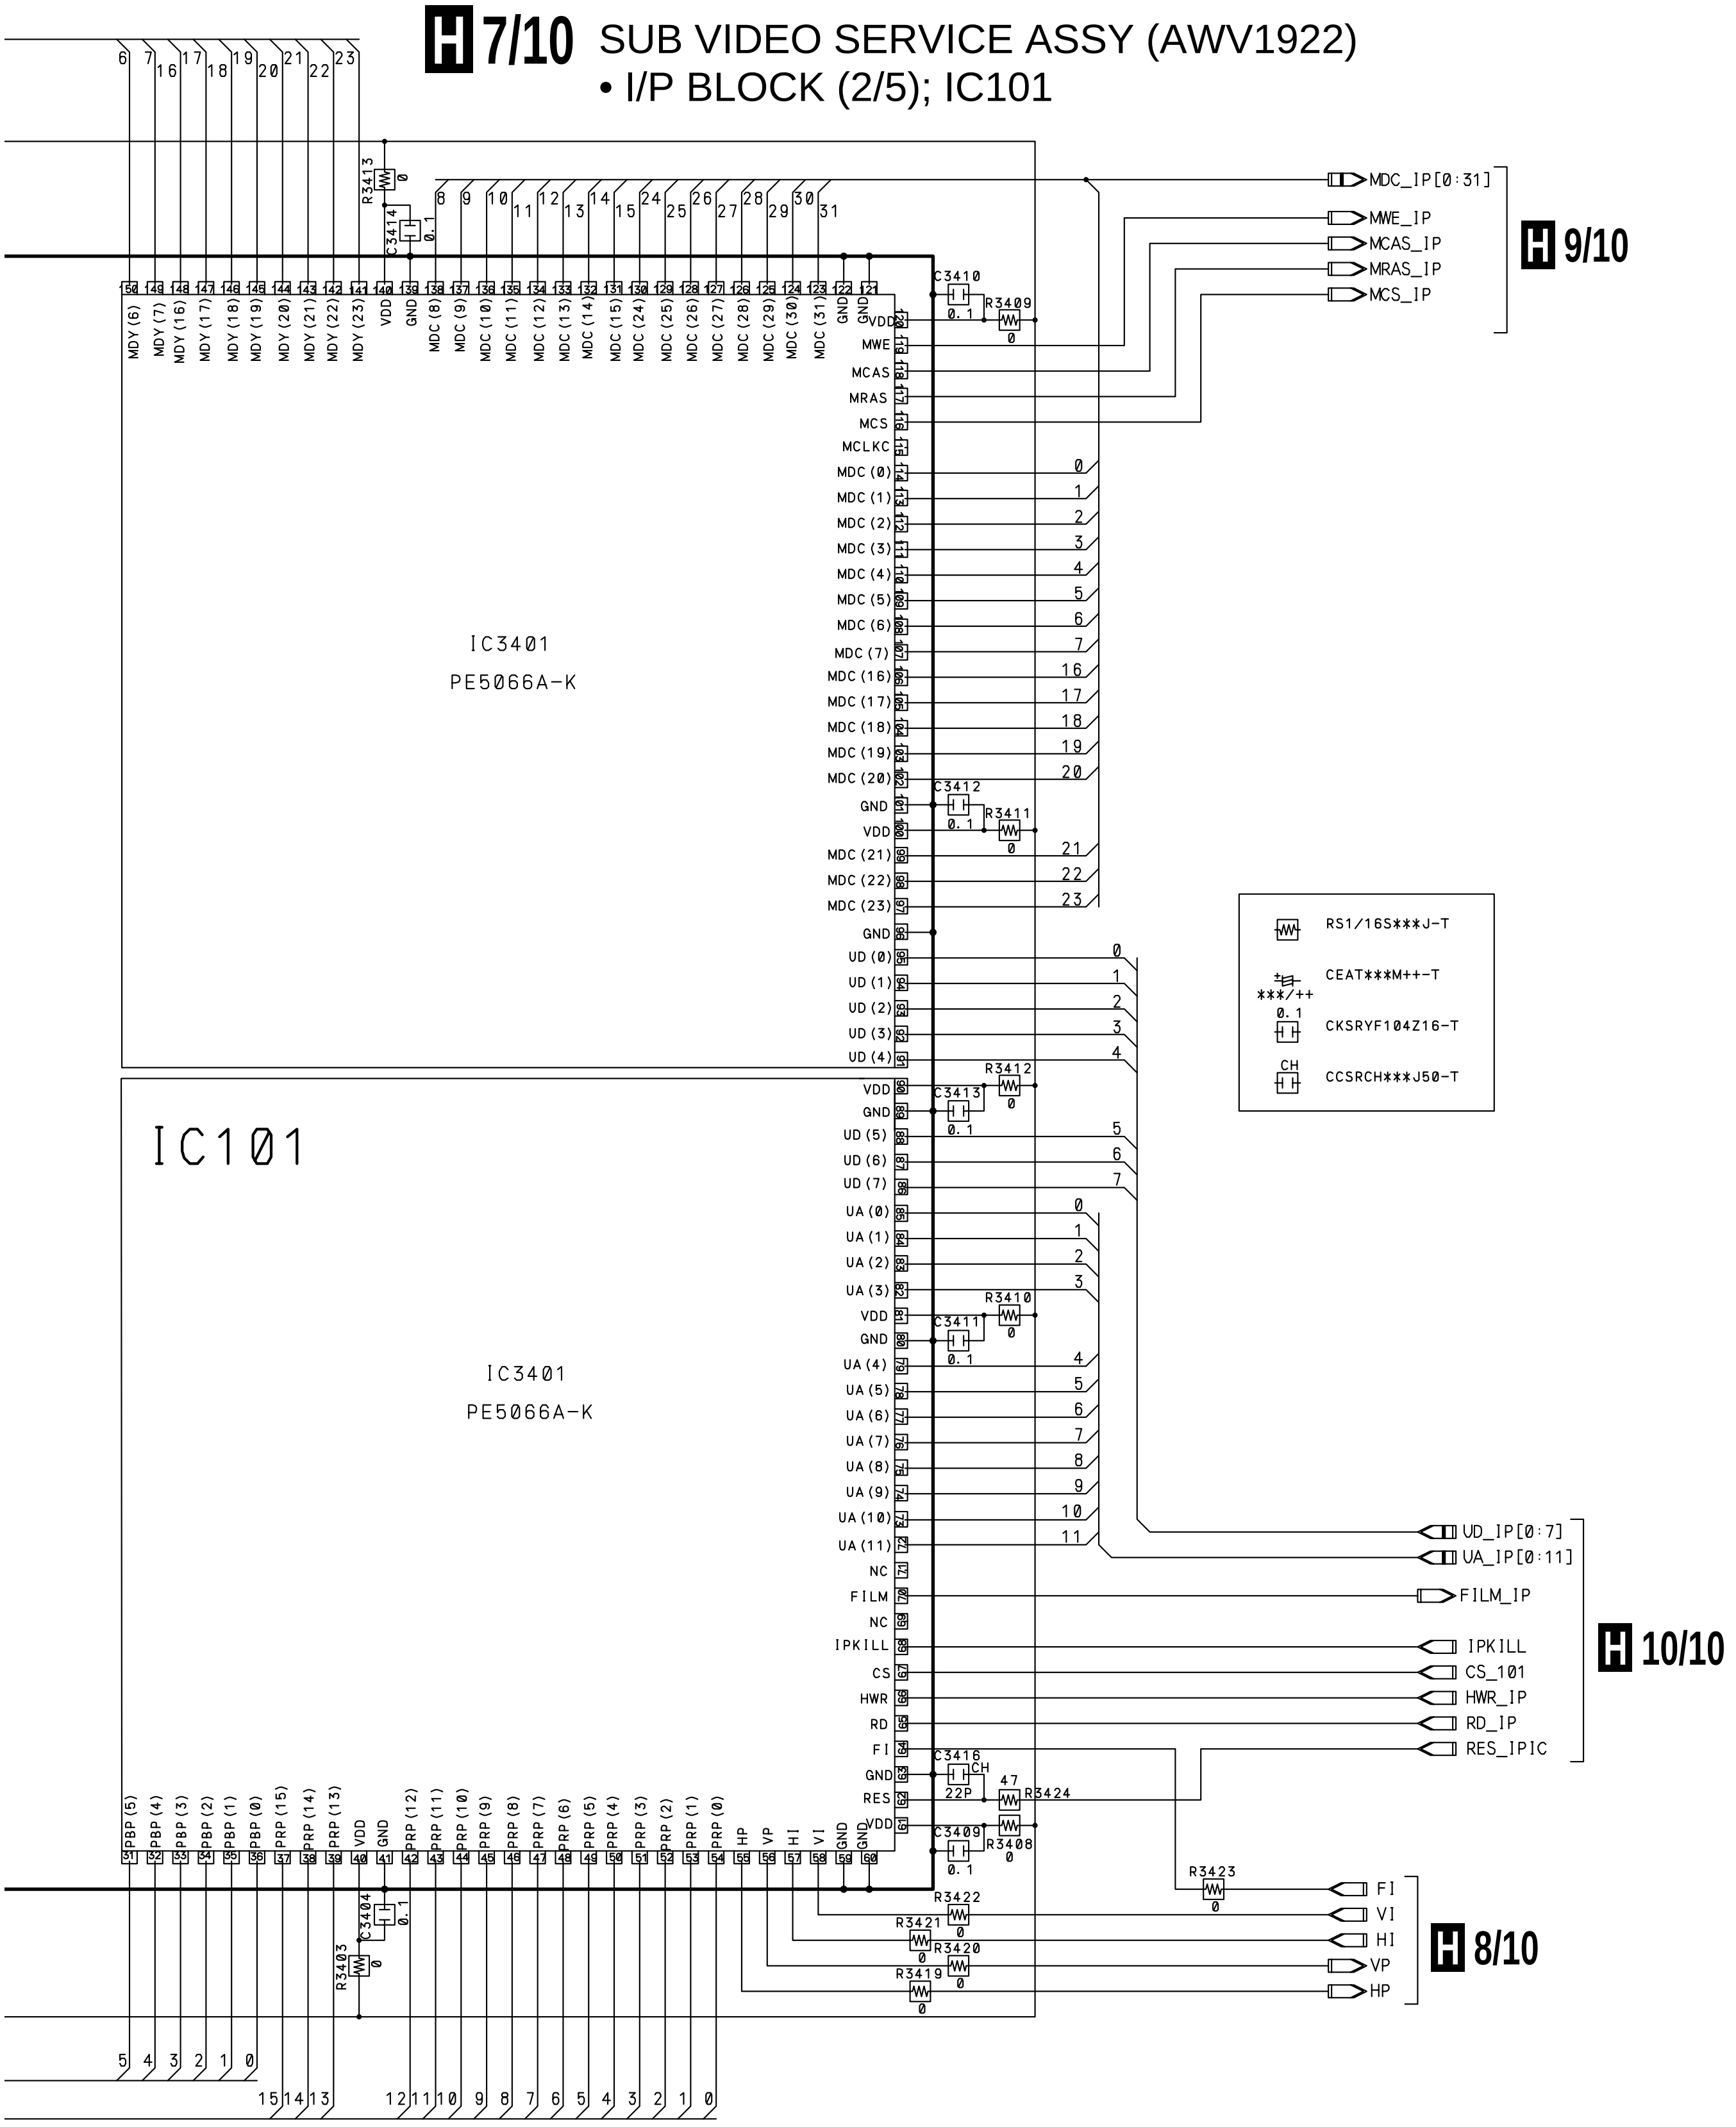
IC101
IC3401
PE5066A-K
MDY(6) MDY(7) MDY(16) MDY(17) MDY(18) MDY(19) MDY(20) MDY(21) MDY(22) MDY(23)
VDD GND
MDC(8) MDC(9) MDC(10) MDC(11) MDC(12) MDC(13) MDC(14) MDC(15) MDC(24) MDC(25) MDC(26) MDC(27) MDC(28) MDC(29) MDC(30) MDC(31)
MWE MCAS MRAS MCS MCLKC
MDC(0) MDC(1) MDC(2) MDC(3) MDC(4) MDC(5) MDC(6) MDC(7) MDC(16) MDC(17) MDC(18) MDC(19) MDC(20) MDC(21) MDC(22) MDC(23)
UD(0) UD(1) UD(2) UD(3) UD(4) UD(5) UD(6) UD(7)
UA(0) UA(1) UA(2) UA(3) UA(4) UA(5) UA(6) UA(7) UA(8) UA(9) UA(10) UA(11)
NC FILM NC IPKILL CS HWR RD FI RES
PBP(5) PBP(4) PBP(3) PBP(2) PBP(1) PBP(0)
PRP(15) PRP(14) PRP(13) PRP(12) PRP(11) PRP(10) PRP(9) PRP(8) PRP(7) PRP(6) PRP(5) PRP(4) PRP(3) PRP(2) PRP(1) PRP(0)
HP VP HI VI
C3410 0.1 R3409 0
C3412 0.1 R3411 0
C3413 0.1 R3412 0
C3411 0.1 R3410 0
C3416 CH 22P 47 R3424
C3409 0.1 R3408 0
R3413 0 C3414 0.1
C3404 0.1 R3403 0
R3423 0 R3422 0 R3421 0 R3420 0 R3419 0
MDC_IP[0:31]
MWE_IP
MCAS_IP
MRAS_IP
MCS_IP
H 9/10
UD_IP[0:7]
UA_IP[0:11]
FILM_IP
IPKILL
CS_101
HWR_IP
RD_IP
RES_IPIC
H 10/10
FI
VI
HI
VP
HP
H 8/10
RS1/16S***J-T
/++ CEATM++-T
0.1 CKSRYF104Z16-T
CH CCSRCH***J50-T

3.24 SUB VIDEO SERVICE ASSY (8/10)

H 8/10

SUB VIDEO SERVICE ASSY
(AWV1922)
- I/P BLOCK (3/5); IC102

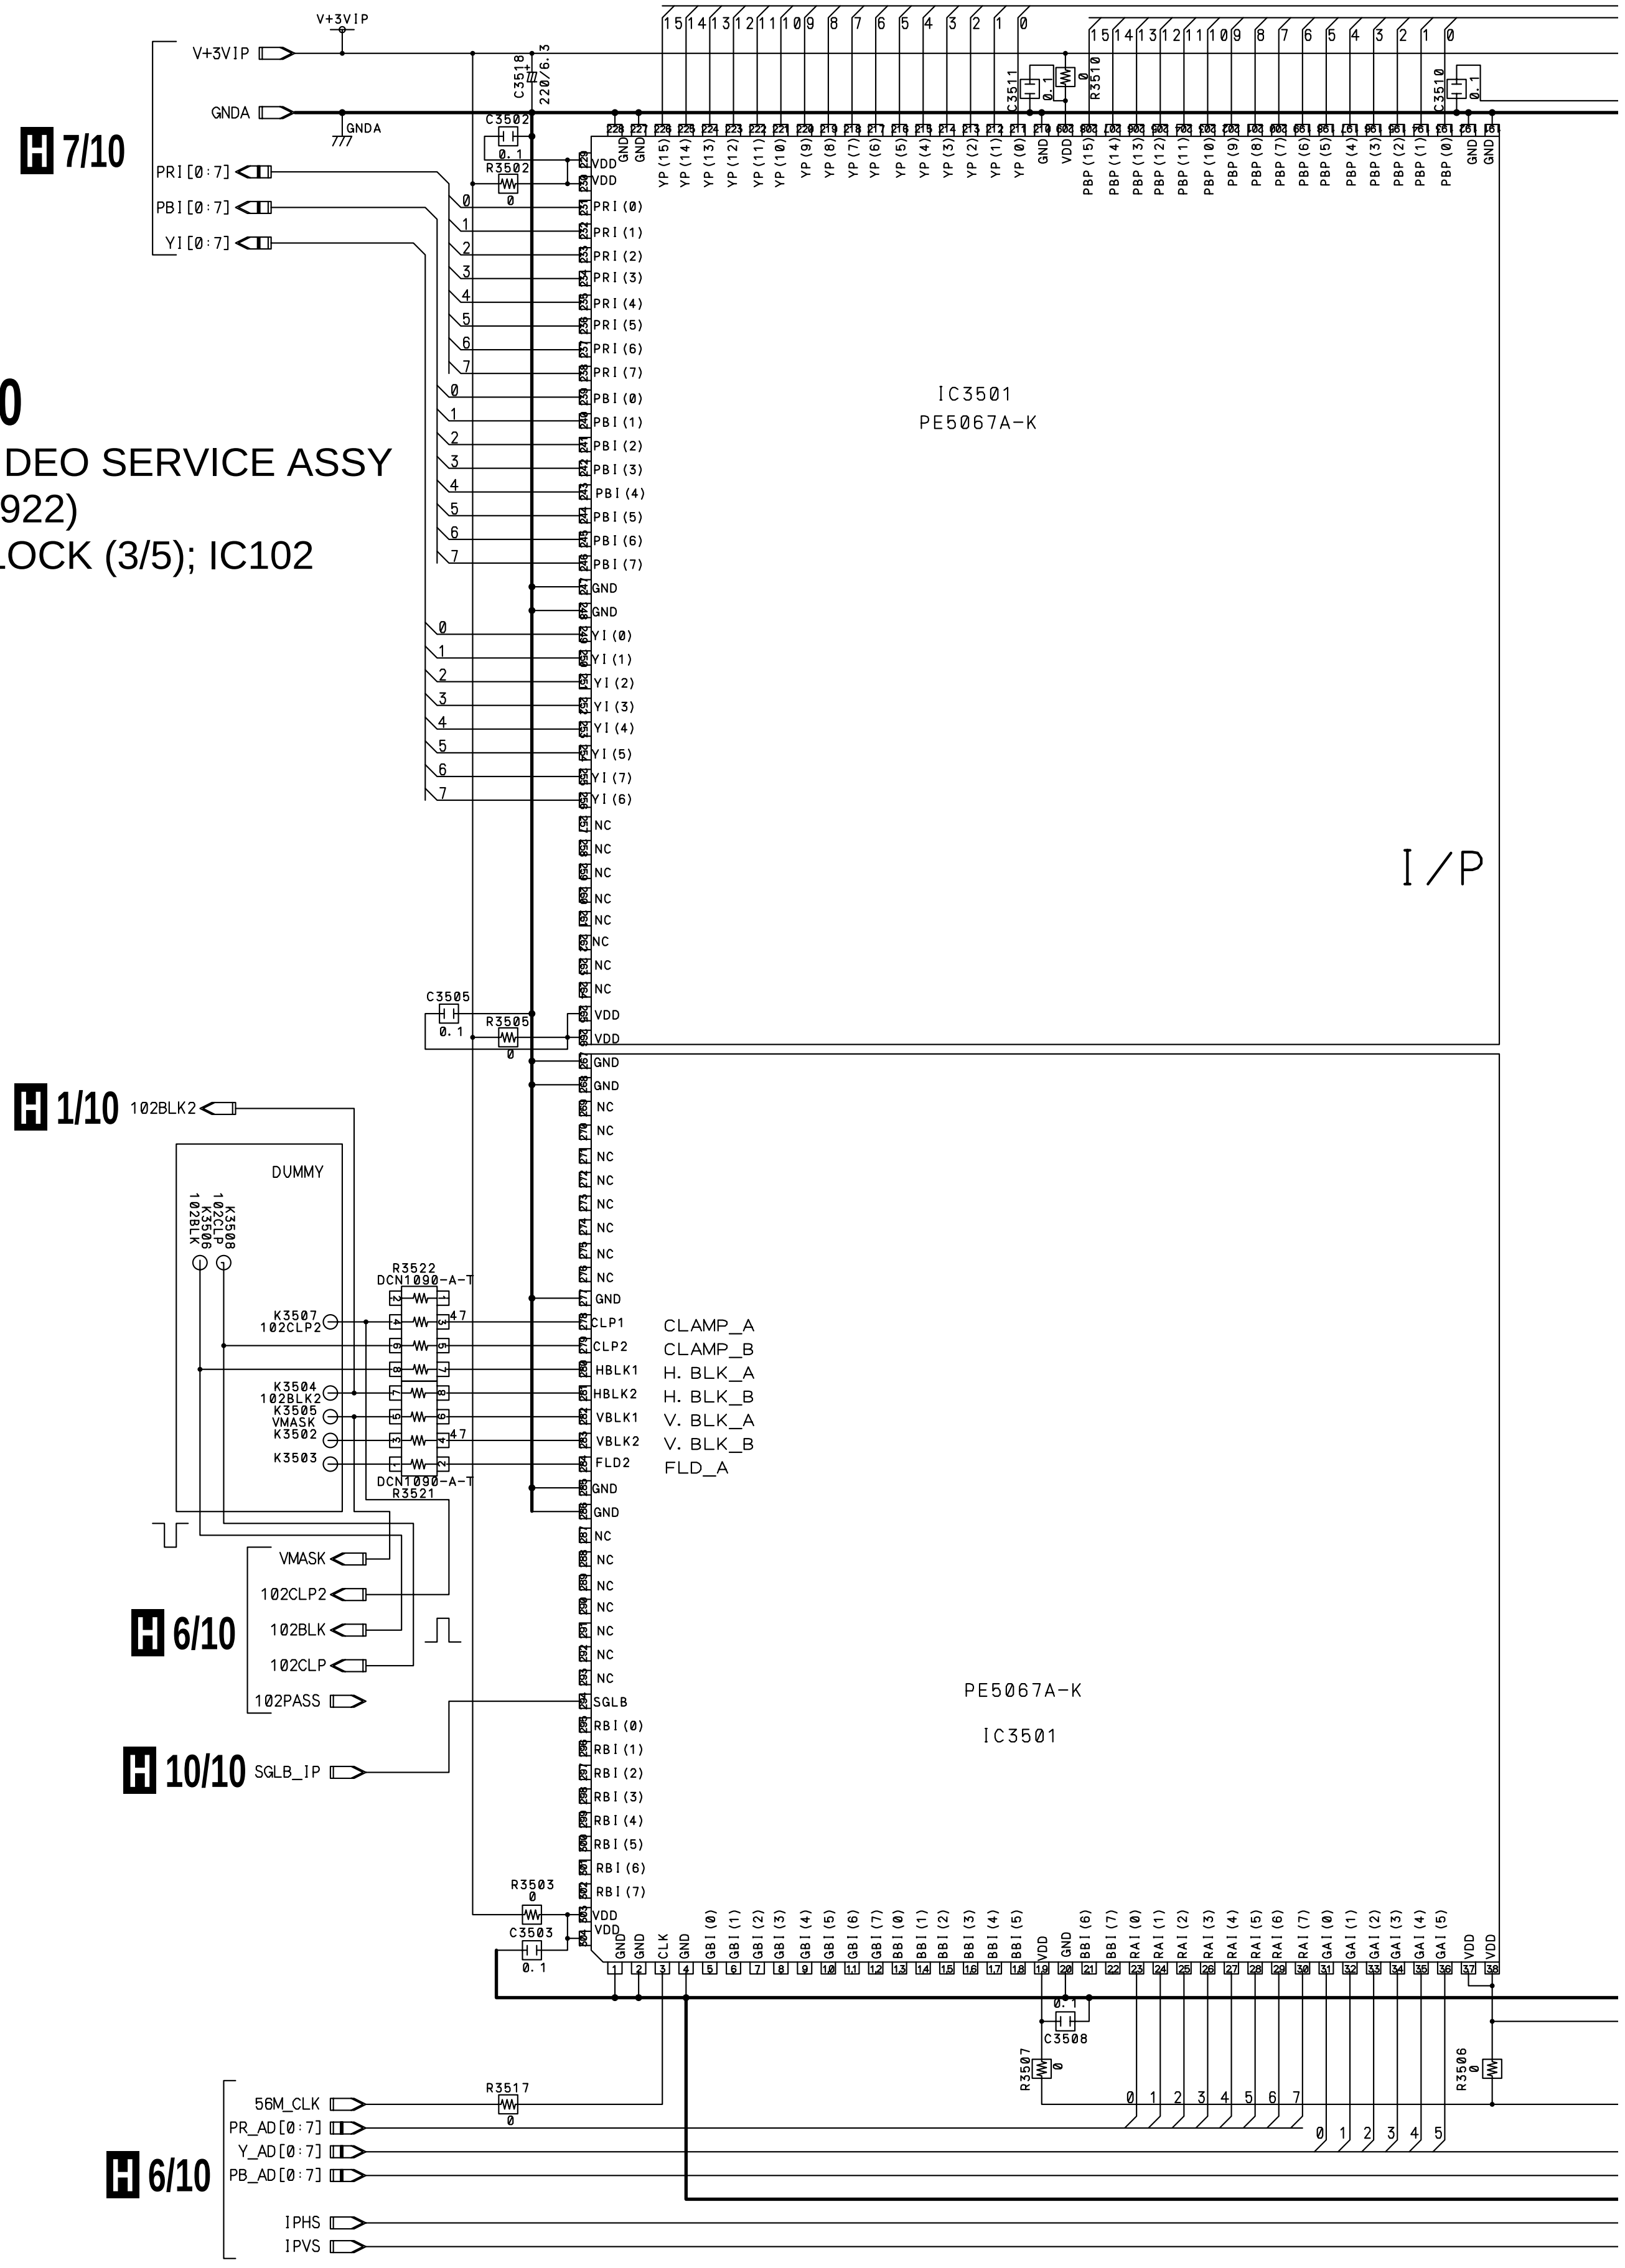

V+3VIP
GNDA
H 7/10
PRI[0:7]
PBI[0:7]
YI[0:7]
C3518 220/6.3
C3502 0.1
R3502 0
C3511 0.1
R3510 0
C3510 0.1
IC3501
PE5067A-K
I/P
C3505 0.1
R3505 0
H 1/10
102BLK2
DUMMY
K3508 102CLP
K3506 102BLK
K3507 102CLP2
K3504 102BLK2
K3505 VMASK
K3502
K3503
R3522 DCN1090-A-T
R3521 DCN1090-A-T
47
CLAMP_A
CLAMP_B
H. BLK_A
H. BLK_B
V. BLK_A
V. BLK_B
FLD_A
CLP1
CLP2
HBLK1
HBLK2
VBLK1
VBLK2
FLD2
SGLB
H 6/10
VMASK
102CLP2
102BLK
102CLP
102PASS
H 10/10
SGLB_IP
R3503 0
C3503 0.1
C3508 0.1
R3507 0
R3506 0
R3517 0
H 6/10
56M_CLK
PR_AD[0:7]
Y_AD[0:7]
PB_AD[0:7]
IPHS
IPVS

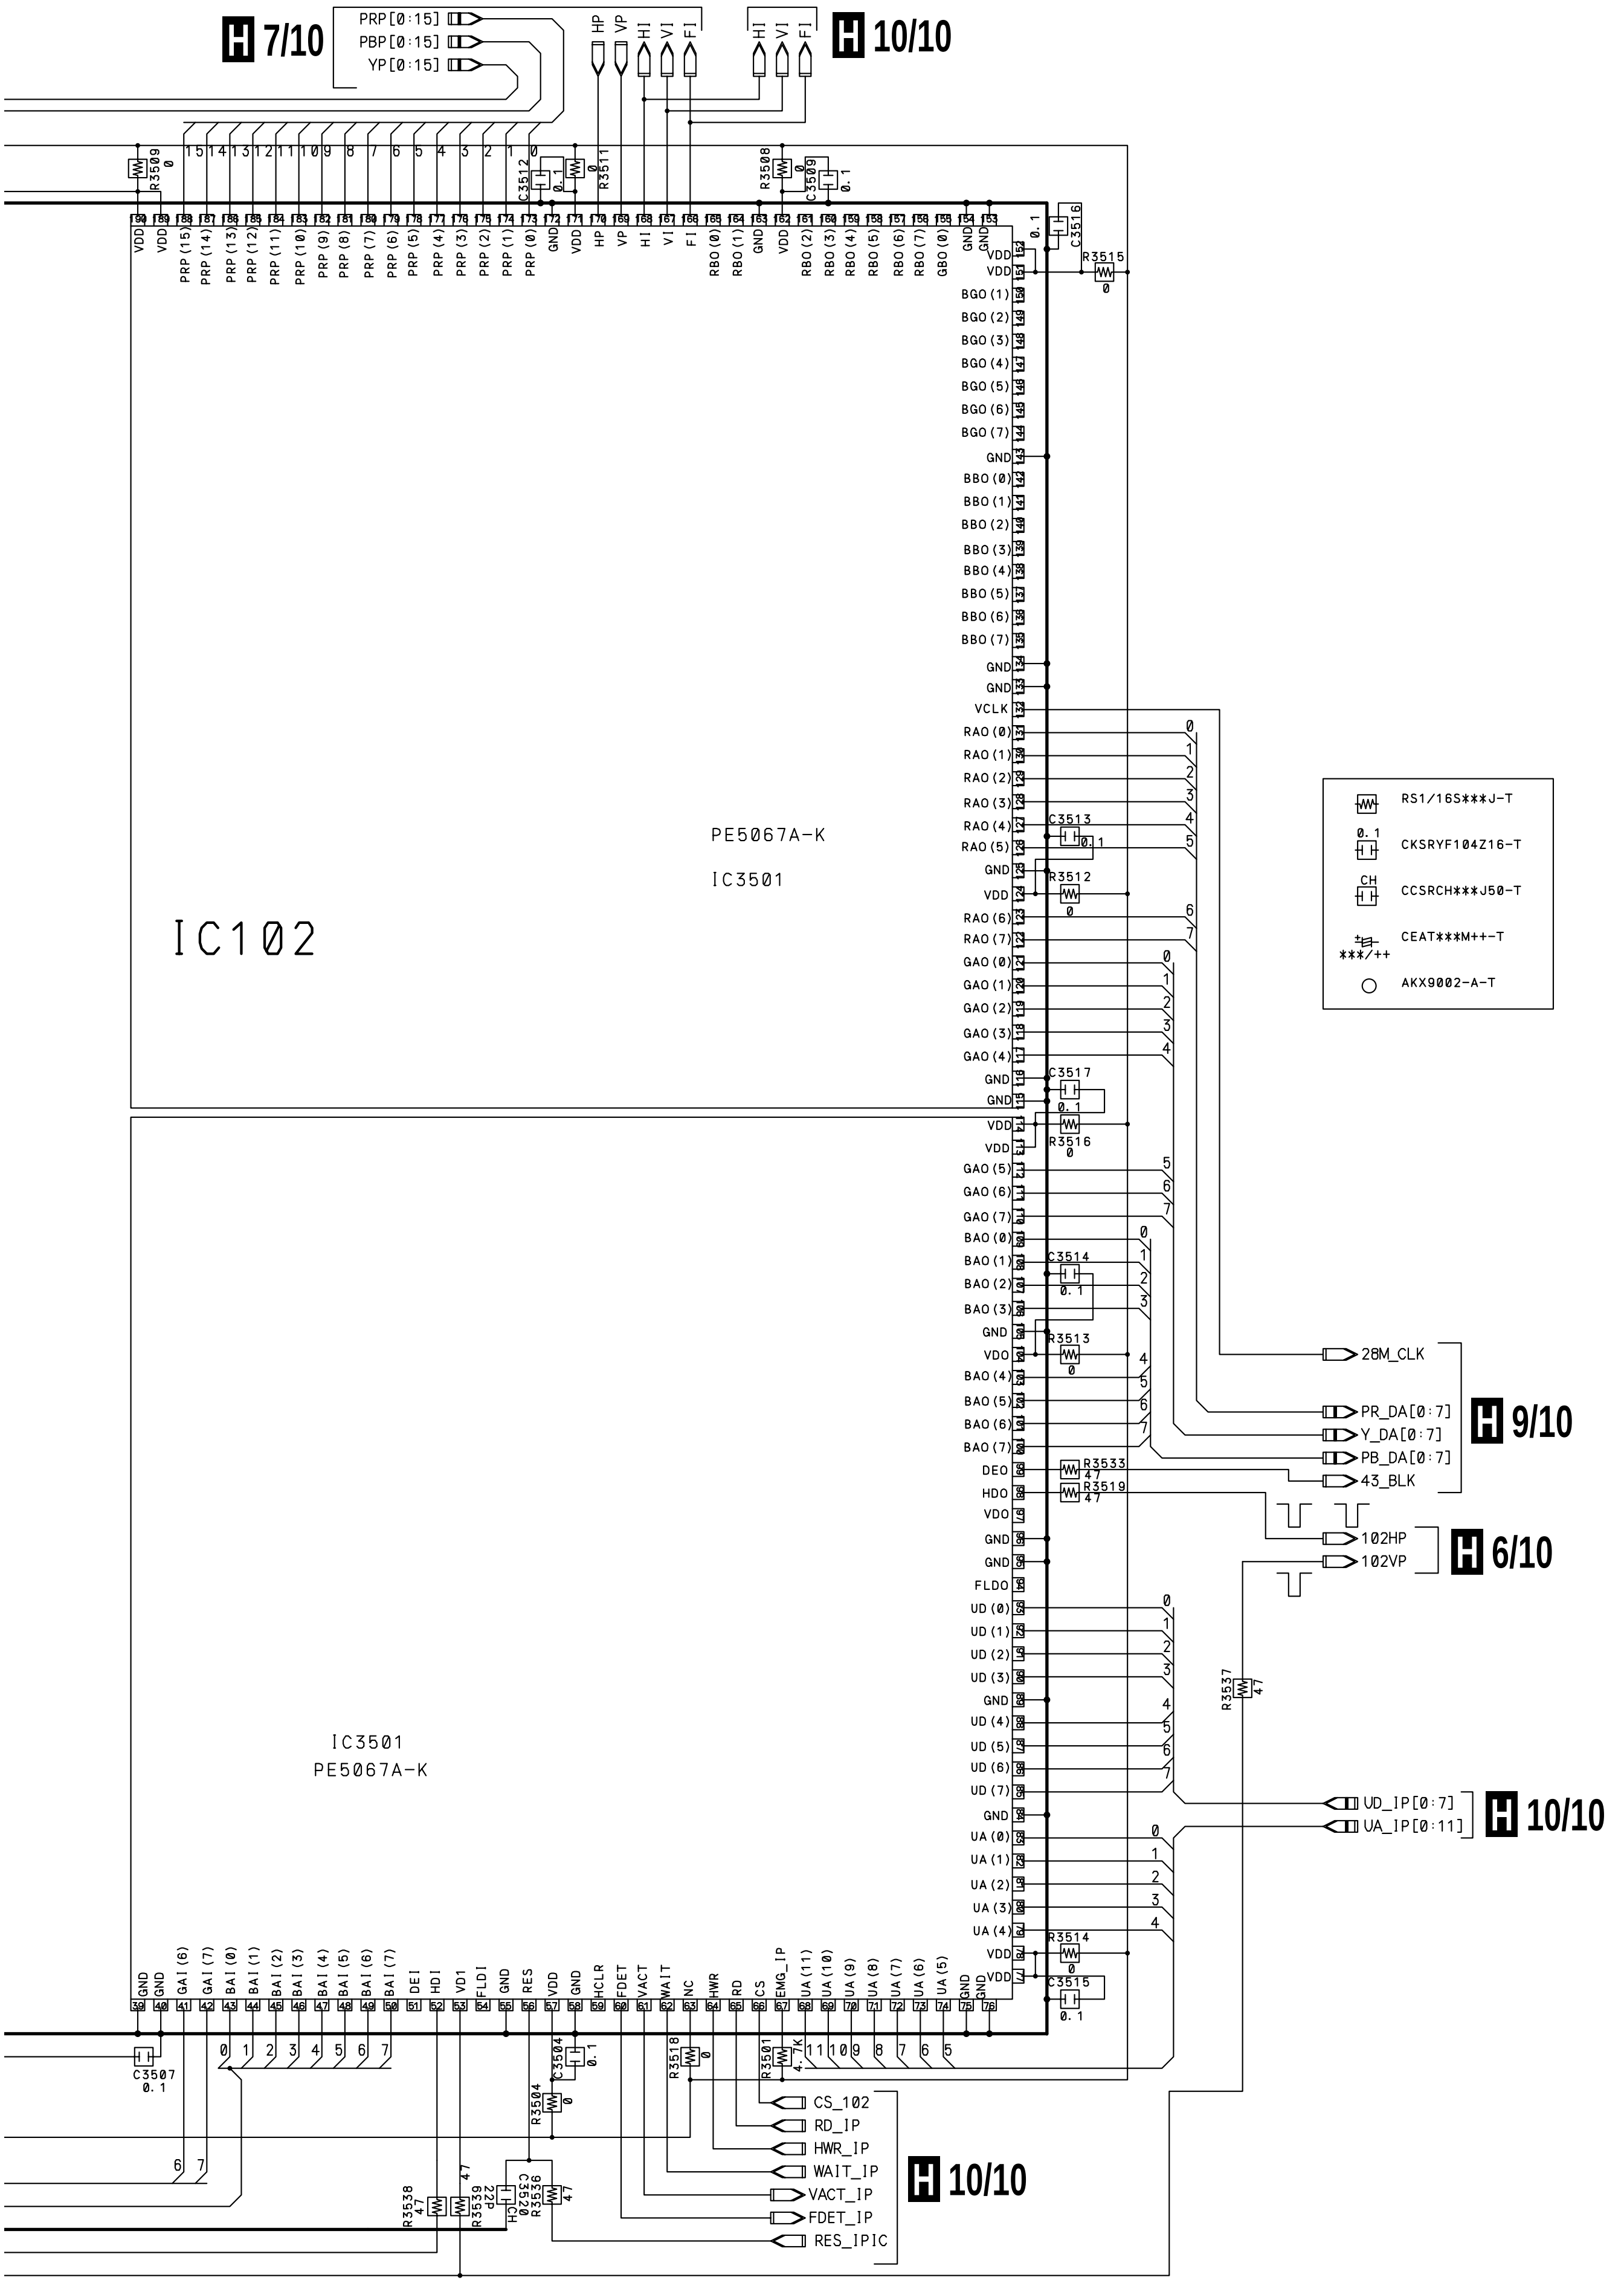
H 7/10
PRP[0:15]
PBP[0:15]
YP[0:15]
HP
VP
HI
VI
FI
H 10/10
IC102
PE5067A-K
IC3501
R3509 0
C3512
R3511 0
R3508 0
C3509 0.1
C3516 0.1
R3515 0
C3513 0.1
R3512 0
C3517 0.1
R3516 0
C3514 0.1
R3513 0
R3533 47
R3519 47
R3514 0
C3515 0.1
C3507 0.1
C3504 0.1
R3504 0
R3518 0
R3501 4.7K
R3538 47
R3539 47
C3502 22P
R3536 47
R3537 47
RS1/16S***J-T
CKSRYF104Z16-T
CCSRCH***J50-T
CEAT***M++-T
AKX9002-A-T
28M_CLK
PR_DA[0:7]
Y_DA[0:7]
PB_DA[0:7]
43_BLK
H 9/10
102HP
102VP
H 6/10
UD_IP[0:7]
UA_IP[0:11]
H 10/10
CS_102
RD_IP
HWR_IP
WAIT_IP
VACT_IP
FDET_IP
RES_IPIC
H 10/10
VCLK
RAO(0)–RAO(7)
GAO(0)–GAO(7)
BAO(0)–BAO(7)
BGO(1)–BGO(7)
BBO(0)–BBO(7)
RBO(0)–RBO(7)
GBO(0)
DEO
HDO
VDO
FLDO
UD(0)–UD(7)
UA(0)–UA(11)
GAI(6)
GAI(7)
BAI(0)–BAI(7)
DEI
HDI
VDI
FLDI
RES
HCLR
FDET
VACT
WAIT
NC
HWR
RD
CS
EMG_IP
VDD
GND

3.25 SUB VIDEO SERVICE ASSY (9/10)

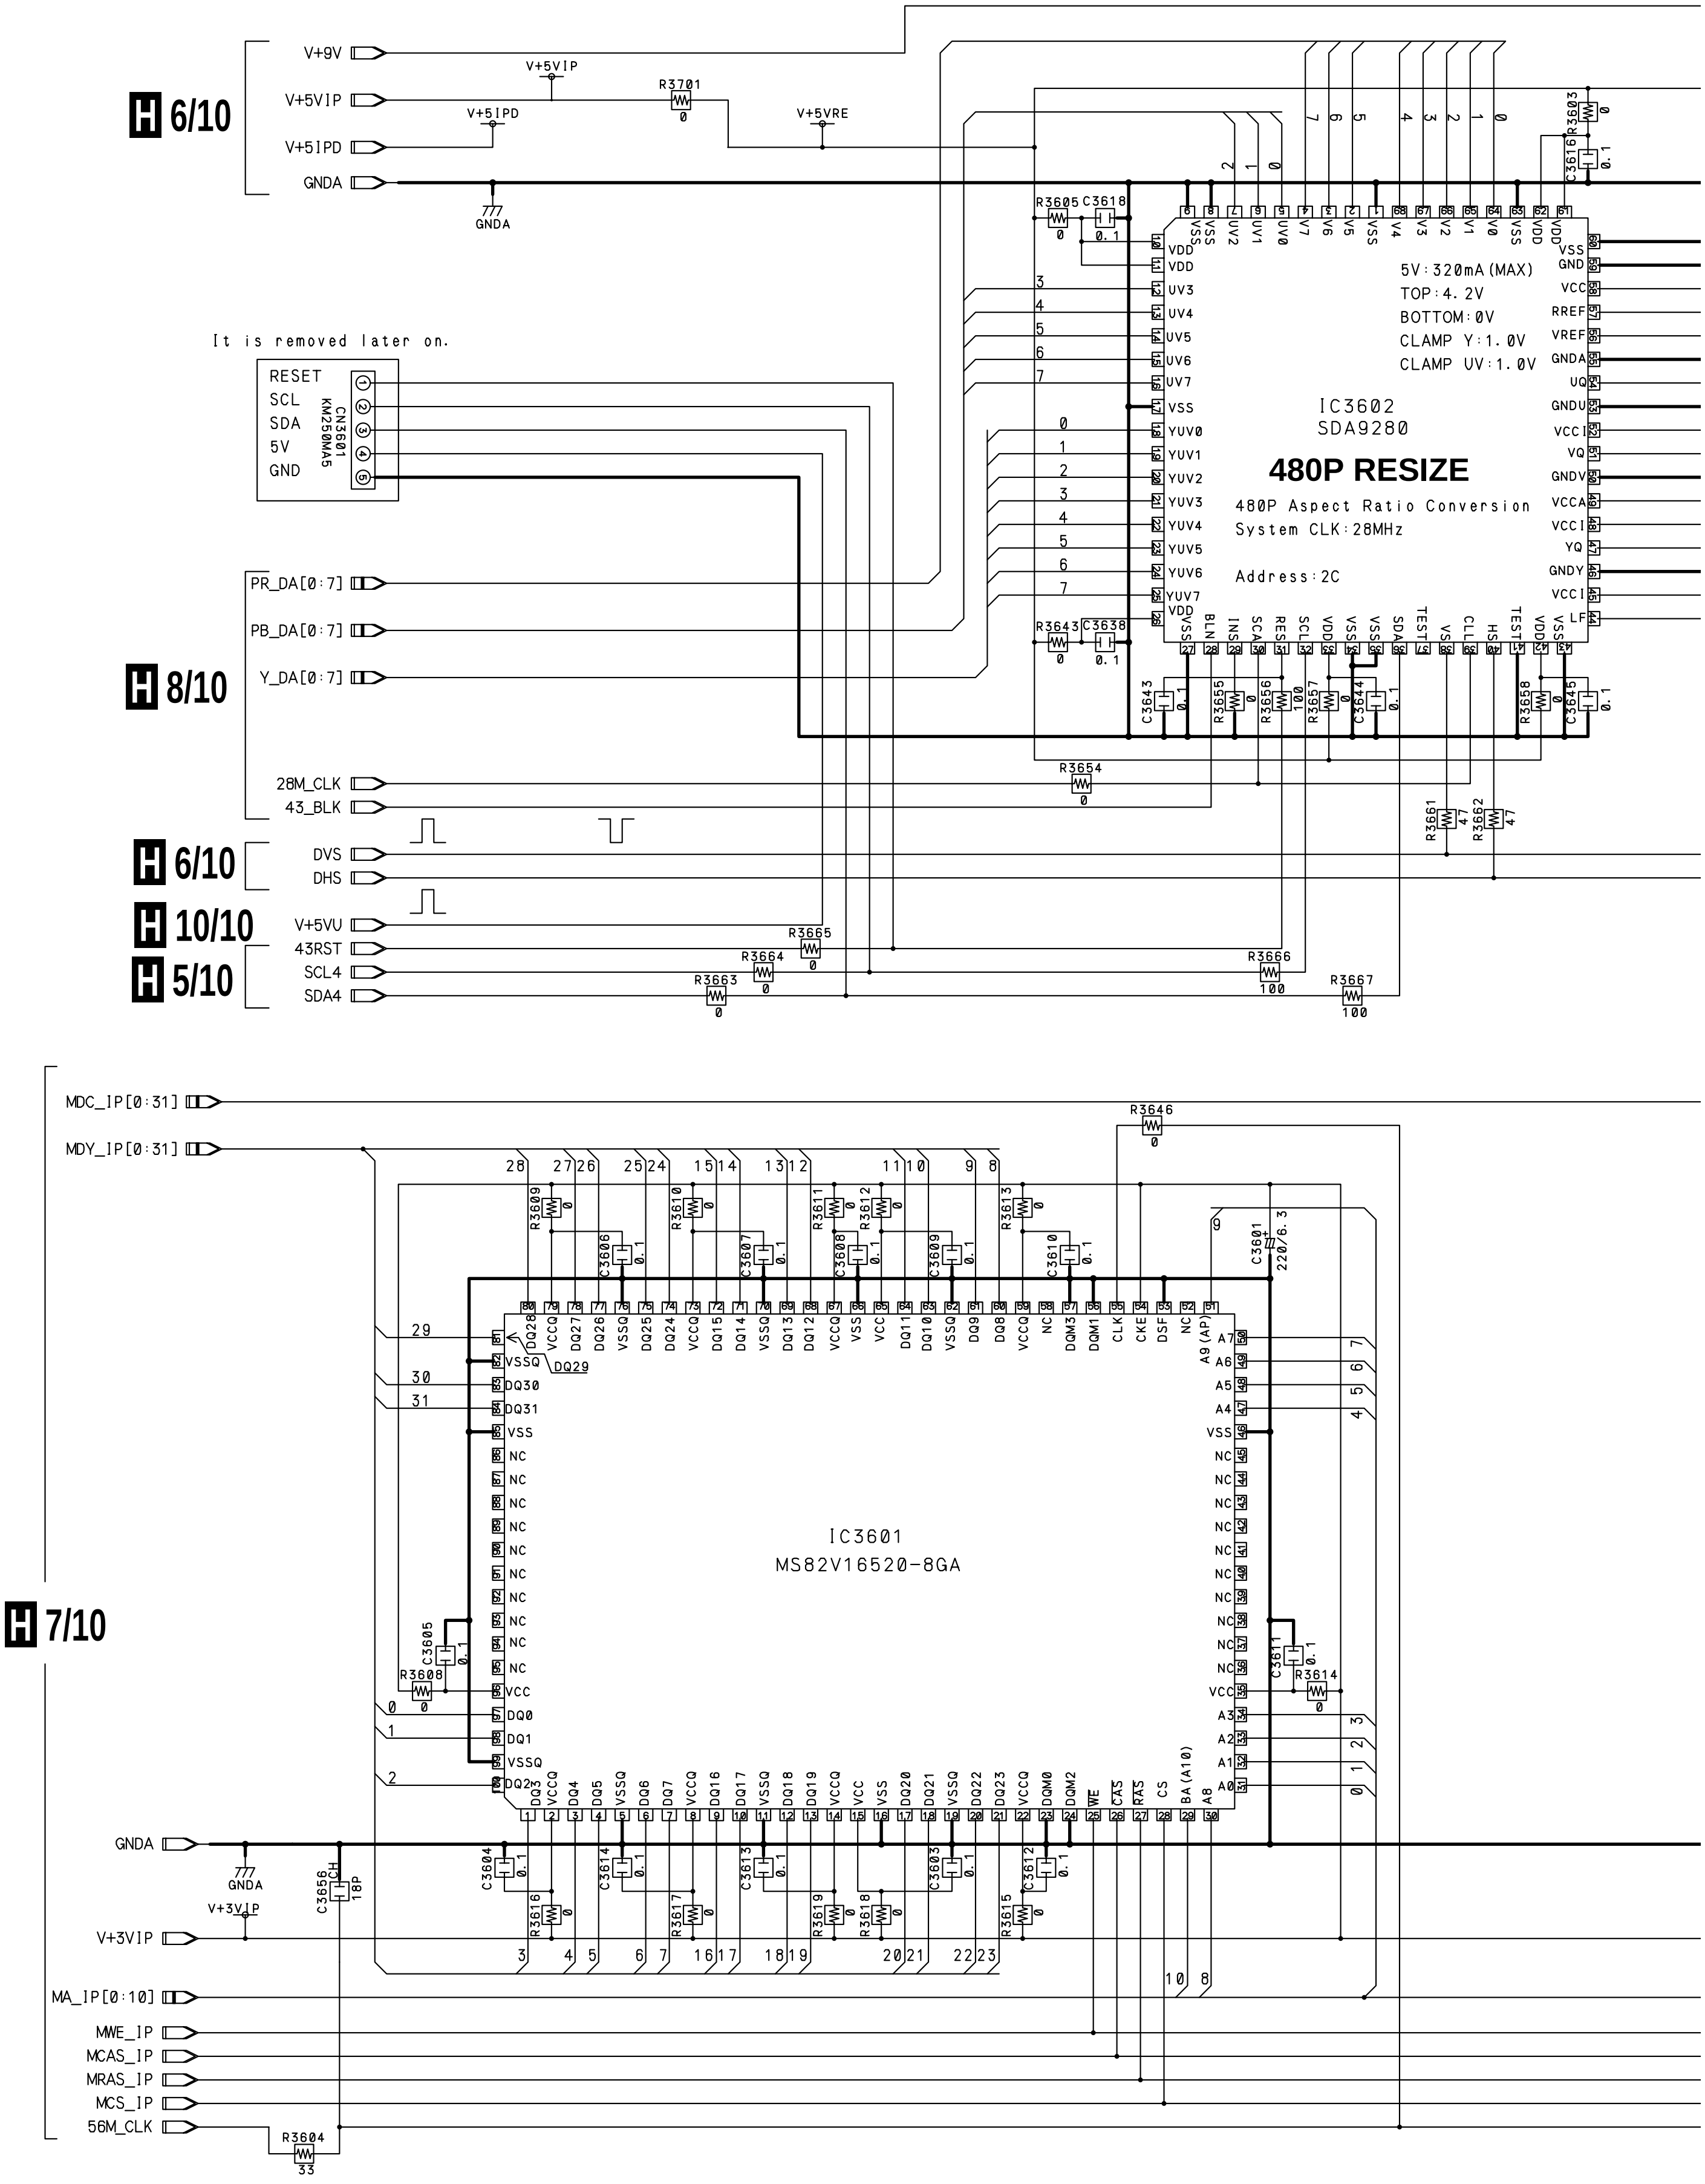
H 6/10
V+9V
V+5VIP
V+5IPD
GNDA
R3701 0
V+5VRE
It is removed later on.
RESET
SCL
SDA
5V
GND
CN3601 KM250MA5
PR_DA[0:7]
PB_DA[0:7]
Y_DA[0:7]
H 8/10
28M_CLK
43_BLK
H 6/10
DVS
DHS
H 10/10
V+5VU
43RST
H 5/10
SCL4
SDA4
R3665 0
R3664 0
R3663 0
R3666 100
R3667 100
R3654 0
R3661 47
R3662 47
R3605 0
C3618 0.1
R3643 0
C3638 0.1
C3643 0.1
R3655 0
R3656 100
R3657 0
C3644 0.1
R3658 0
C3645 0.1
R3603 0
C3616 0.1
5V:320mA(MAX)
TOP:4.2V
BOTTOM:0V
CLAMP Y:1.0V
CLAMP UV:1.0V
IC3602
SDA9280
480P RESIZE
480P Aspect Ratio Conversion
System CLK:28MHz
Address:2C
MDC_IP[0:31]
MDY_IP[0:31]
R3646 0
R3609 0
R3610 0
R3611 0
R3612 0
R3613 0
C3606 0.1
C3607 0.1
C3608 0.1
C3609 0.1
C3610 0.1
C3601 220/6.3
IC3601
MS82V16520-8GA
H 7/10
C3605 0.1
R3608 0
C3611 0.1
R3614 0
GNDA
V+3VIP
C3656 CH 18P
C3604 0.1
C3614 0.1
C3613 0.1
C3603 0.1
C3612 0.1
R3616 0
R3617 0
R3619 0
R3618 0
R3615 0
MA_IP[0:10]
MWE_IP
MCAS_IP
MRAS_IP
MCS_IP
56M_CLK
R3604 33

H 9/10 SUB VIDEO SERVICE ASSY (AWV1922)

• I/P BLOCK (4/5); RESIZE & SGRAM

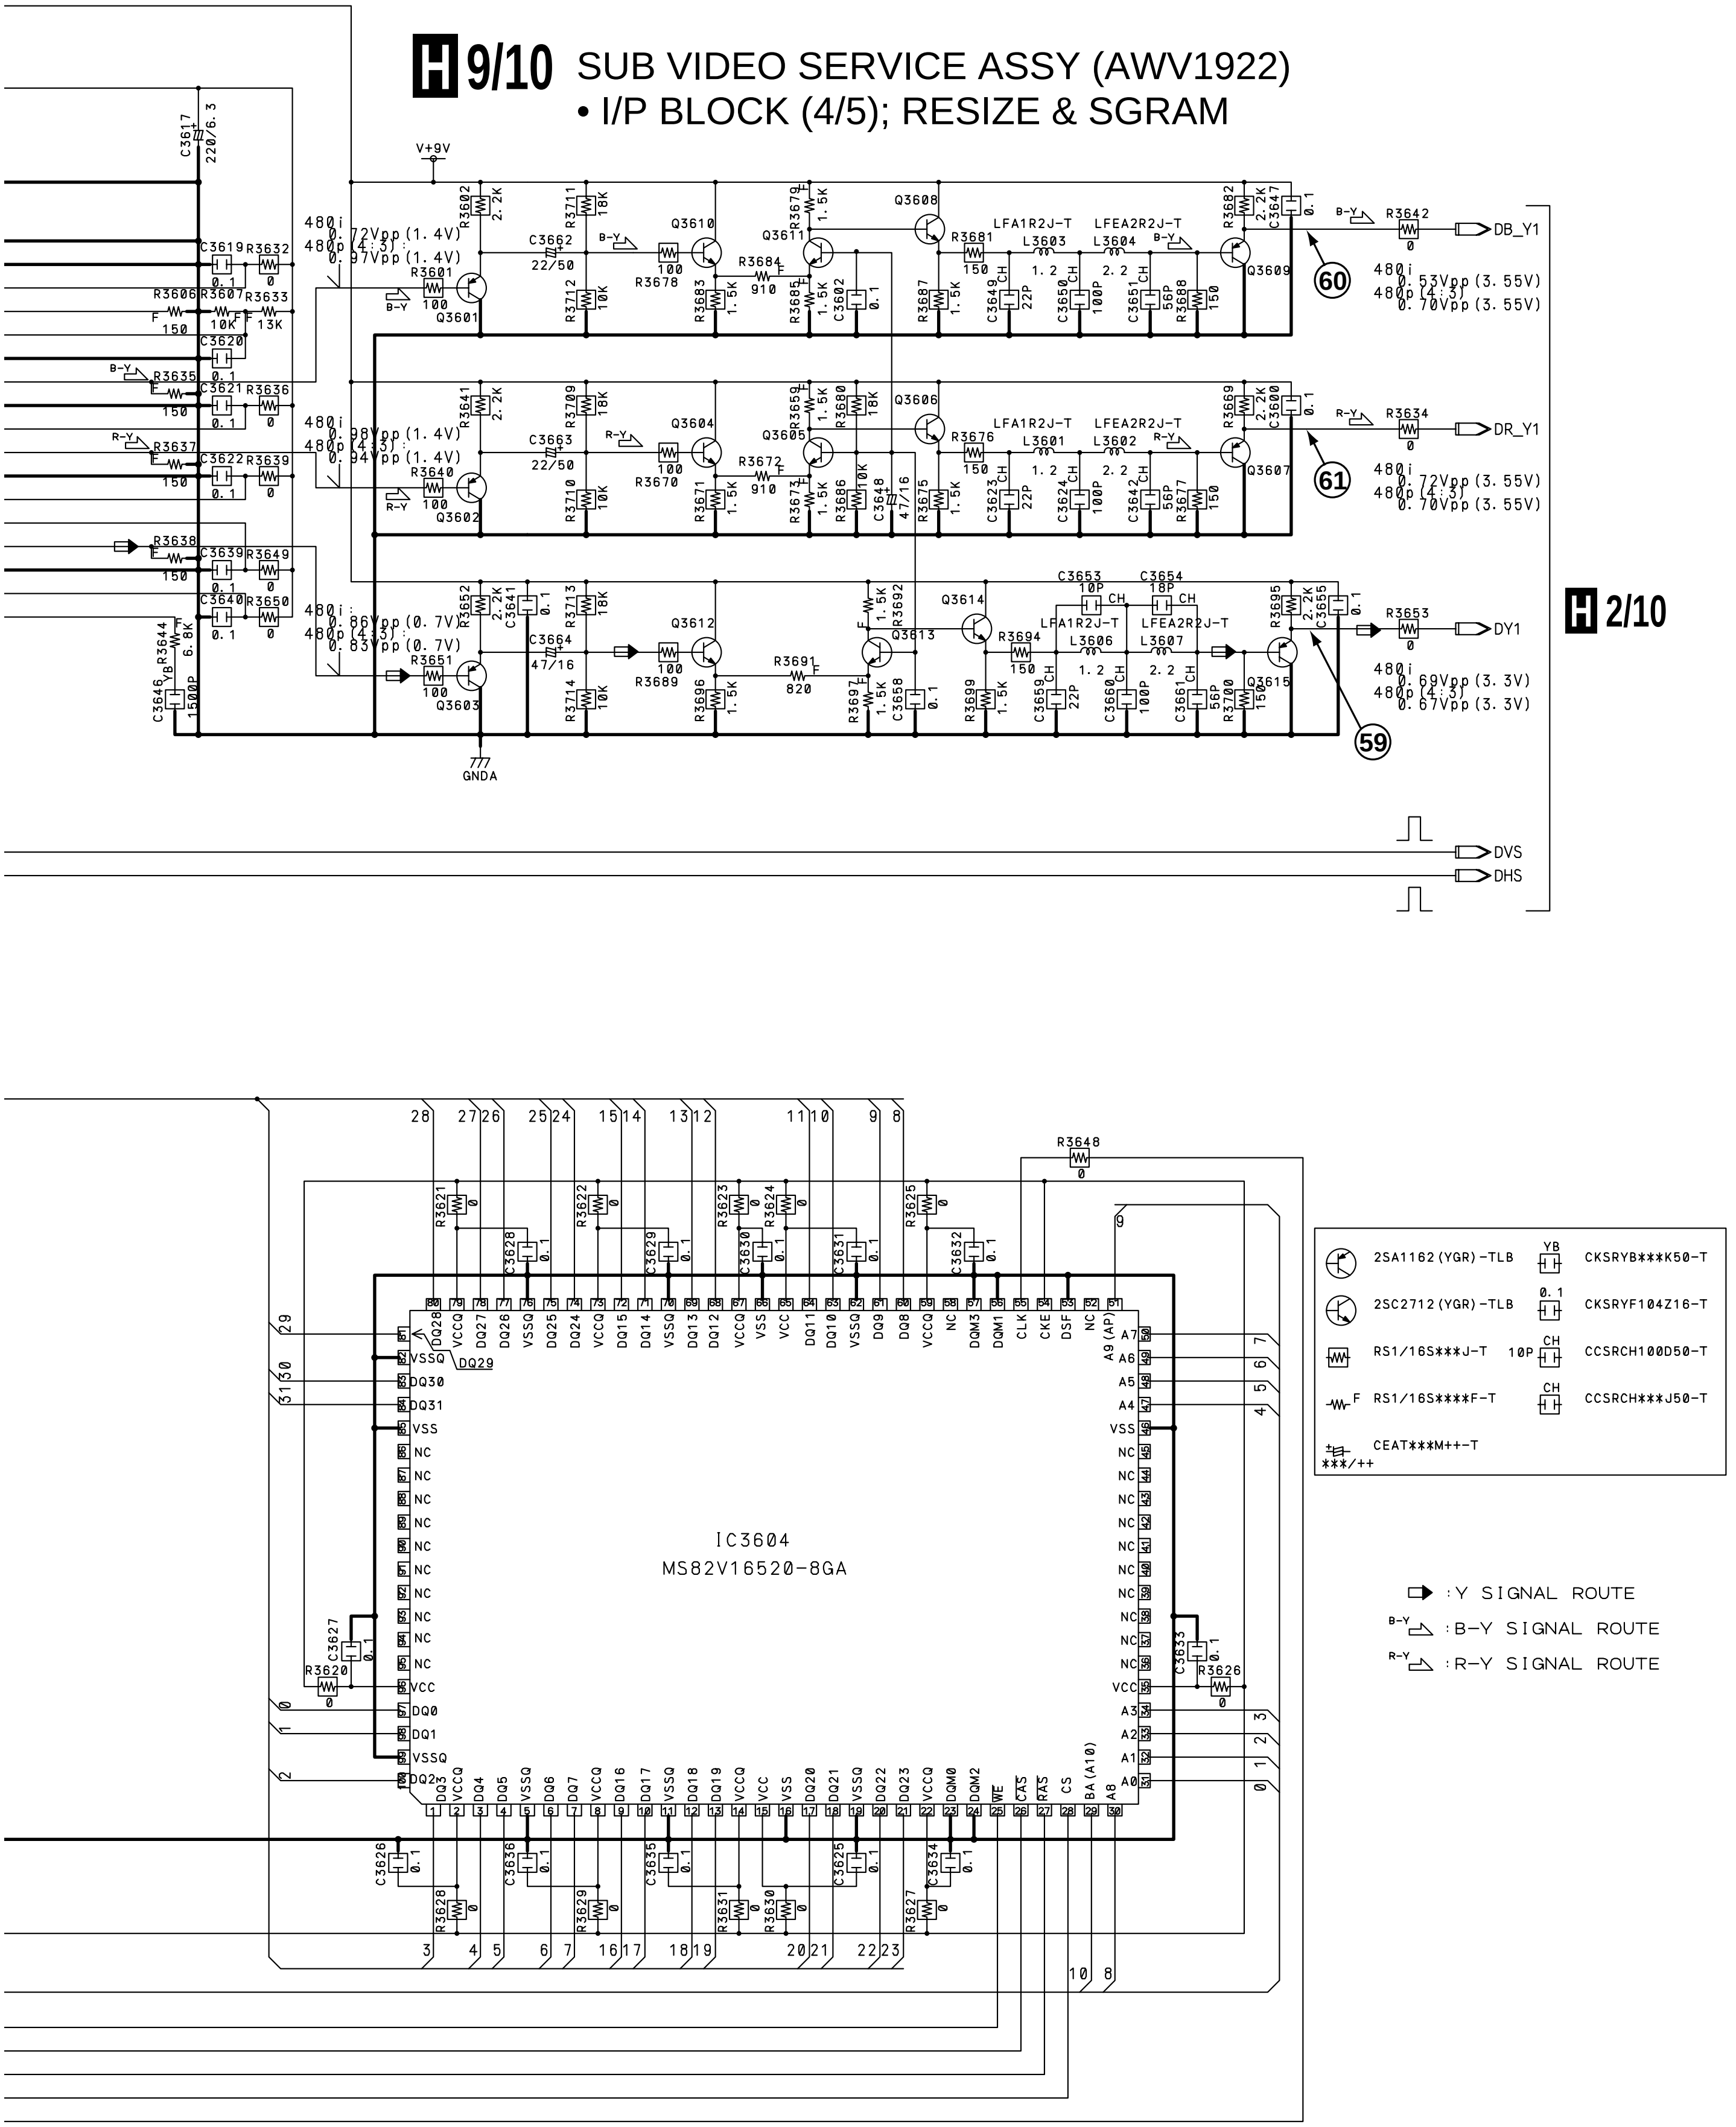
V+9V
C3617 220/6.3
480i 0.72Vpp(1.4V)
480p(4:3): 0.97Vpp(1.4V)
480i 0.98Vpp(1.4V)
480p(4:3): 0.94Vpp(1.4V)
480i 0.86Vpp(0.7V)
480p(4:3): 0.83Vpp(0.7V)
Q3601 Q3602 Q3603 Q3604 Q3605 Q3606 Q3607 Q3608 Q3609 Q3610 Q3611 Q3612 Q3613 Q3614 Q3615
LFA1R2J-T L3603 1.2
LFEA2R2J-T L3604 2.2
LFA1R2J-T L3601 1.2
LFEA2R2J-T L3602 2.2
LFA1R2J-T L3606 1.2
LFEA2R2J-T L3607 2.2
C3653 10P CH
C3654 18P CH
R3642 0
R3634 0
R3653 0
DB_Y1
DR_Y1
DY1
60
61
59
480i 0.53Vpp(3.55V)
480p(4:3): 0.70Vpp(3.55V)
480i 0.72Vpp(3.55V)
480p(4:3): 0.70Vpp(3.55V)
480i 0.69Vpp(3.3V)
480p(4:3): 0.67Vpp(3.3V)
GNDA
DVS
DHS
H 2/10
IC3604
MS82V16520-8GA
R3648 0
2SA1162(YGR)-TLB
2SC2712(YGR)-TLB
RS1/16S***J-T
RS1/16S****F-T
CEAT***M++-T
***/++
YB CKSRYB***K50-T
0.1 CKSRYF104Z16-T
10P CH CCSRCH100D50-T
CH CCSRCH***J50-T
:Y SIGNAL ROUTE
B-Y :B-Y SIGNAL ROUTE
R-Y :R-Y SIGNAL ROUTE

3.26 SUB VIDEO SERVICE ASSY (10/10)

H 10/10

SUB VIDEO SERVICE ASSY
(AWV1922)
- I/P BLOCK (5/5); I/P-UCOM

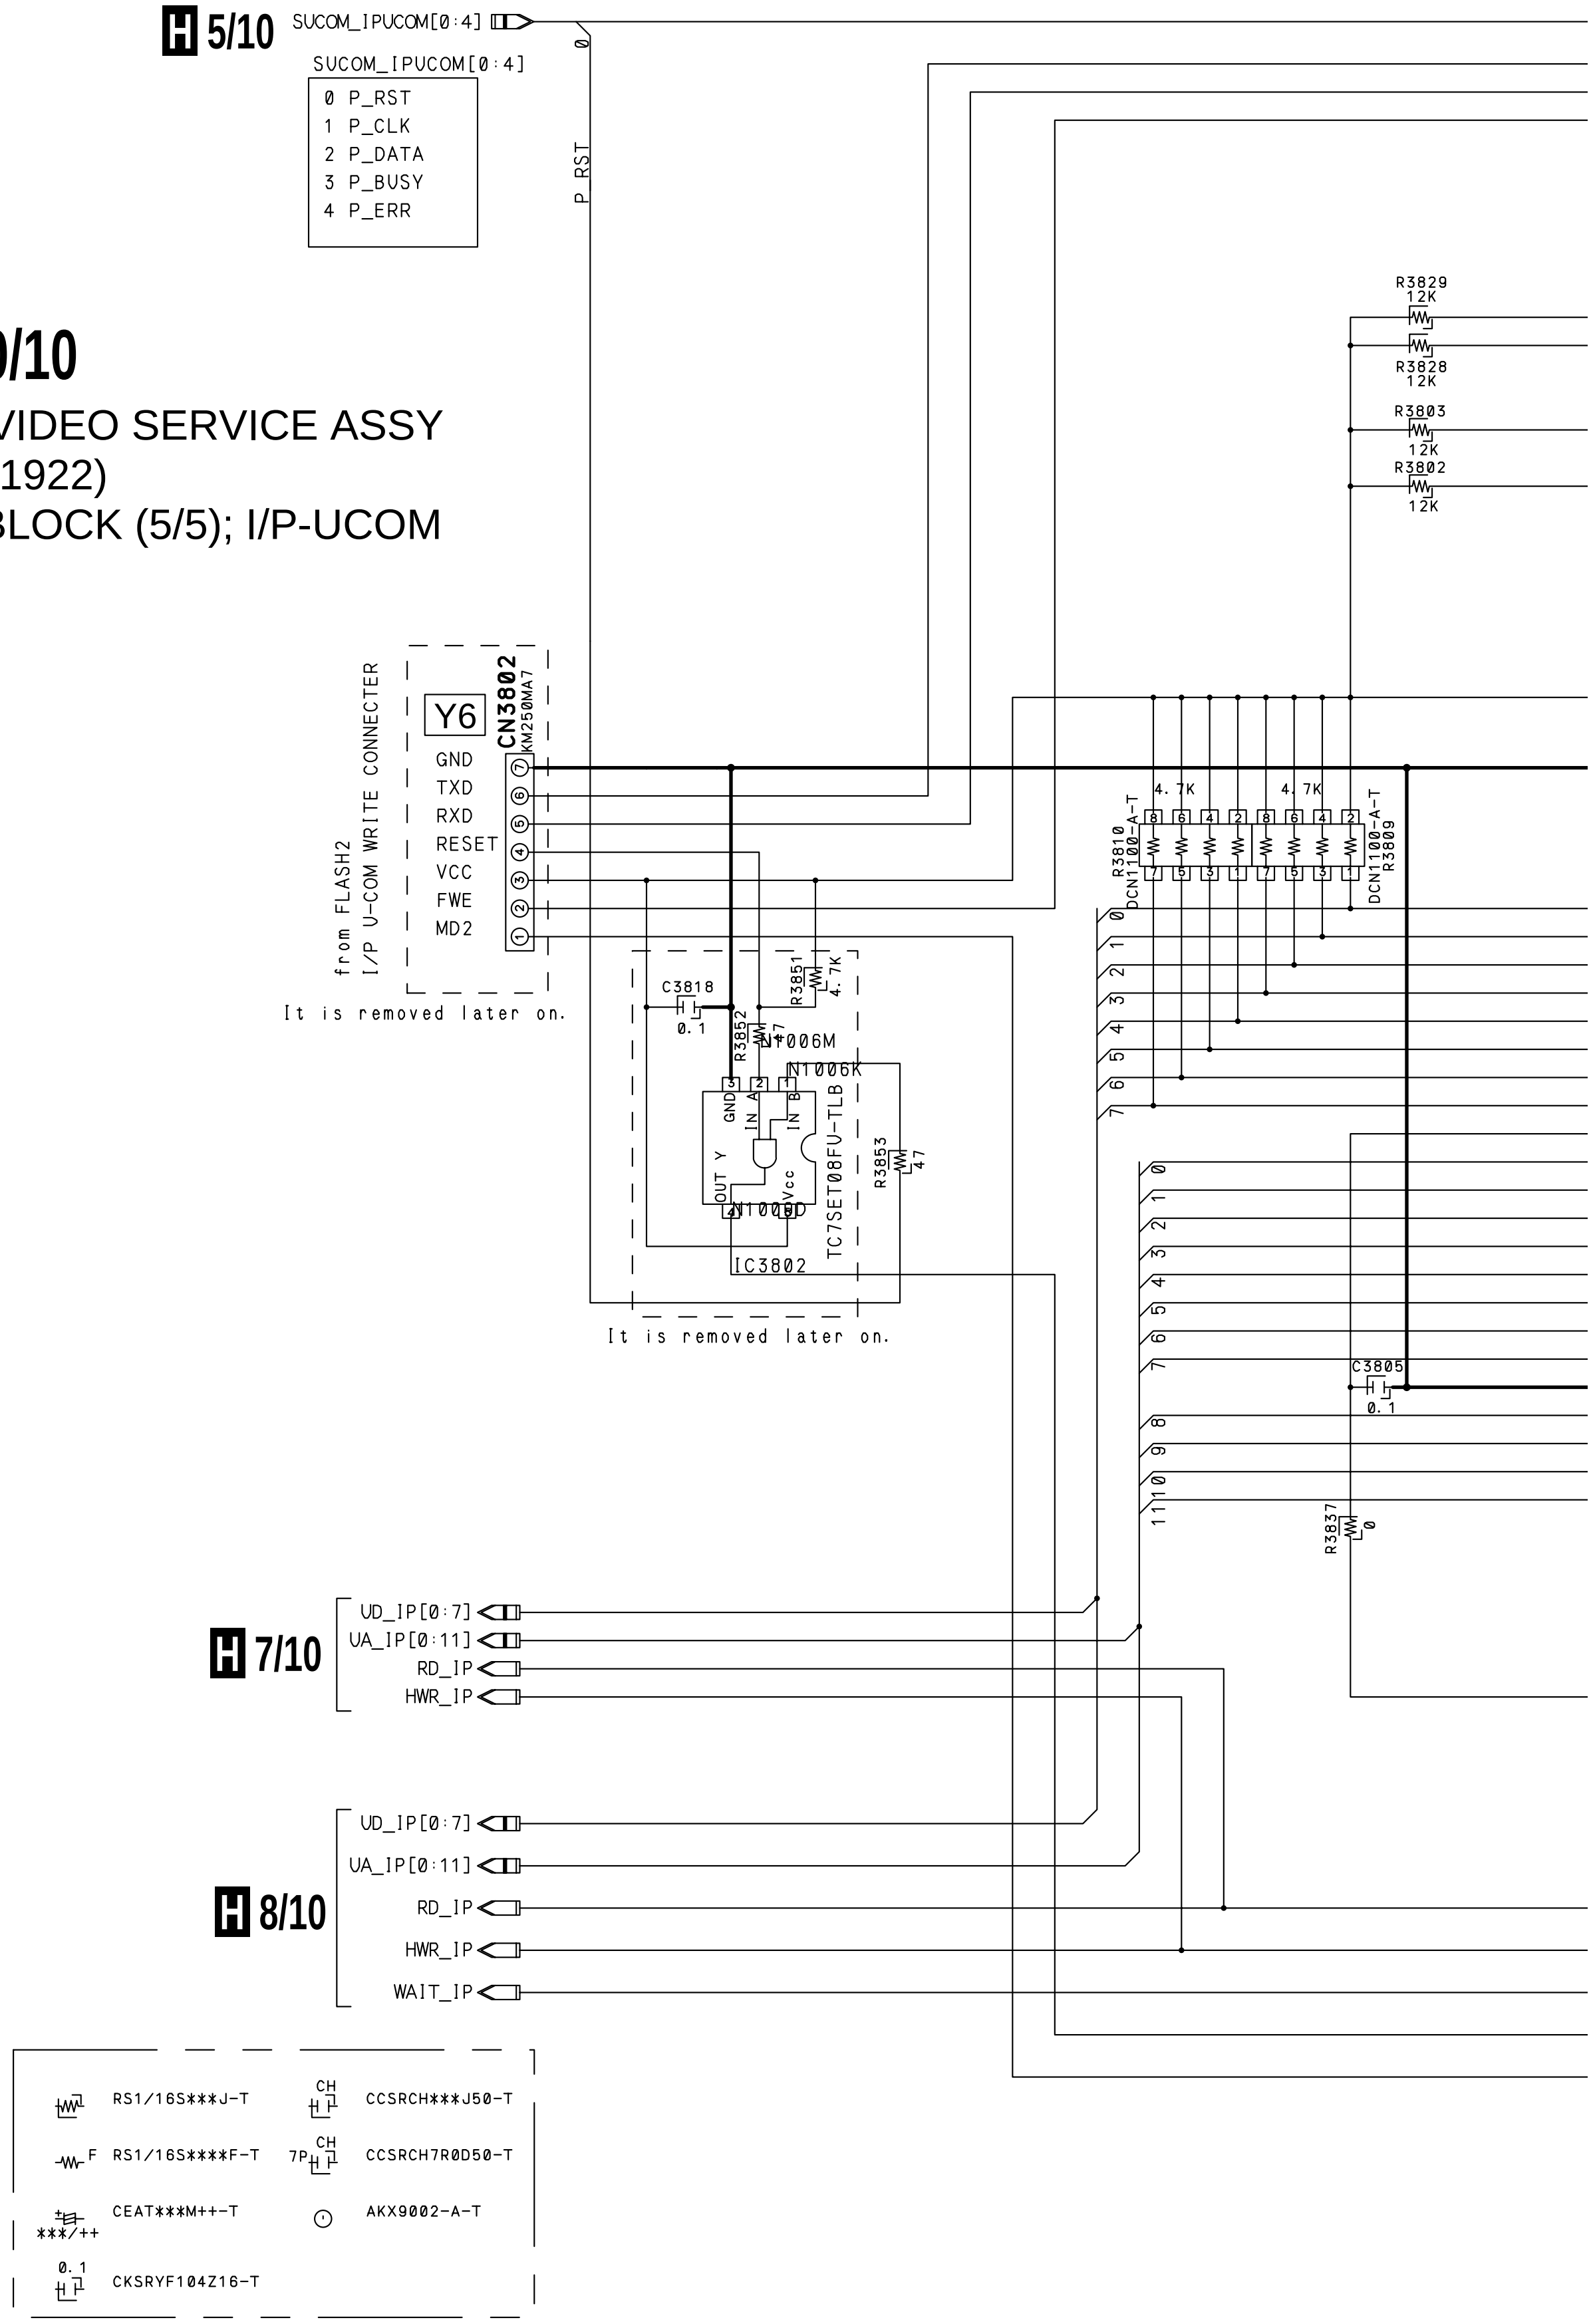
H 5/10
SUCOM_IPUCOM[0:4]
SUCOM_IPUCOM[0:4]
0 P_RST
1 P_CLK
2 P_DATA
3 P_BUSY
4 P_ERR
P_RST
0
R3829
12K
R3828
12K
R3803
12K
R3802
12K
Y6
CN3802
KM250MA7
GND
TXD
RXD
RESET
VCC
FWE
MD2
from FLASH2
I/P U-COM WRITE CONNECTER
It is removed later on.
4.7K
4.7K
R3810
DCN1100-A-T
DCN1100-A-T
R3809
C3818
0.1
R3851
4.7K
R3852
47
N1006M
N1006K
GND
IN A
IN B
OUT Y
Vcc
N1009D
TC7SET08FU-TLB
R3853
47
IC3802
It is removed later on.
C3805
0.1
R3837
0
H 7/10
UD_IP[0:7]
UA_IP[0:11]
RD_IP
HWR_IP
H 8/10
UD_IP[0:7]
UA_IP[0:11]
RD_IP
HWR_IP
WAIT_IP
RS1/16S***J-T
CCSRCH***J50-T
RS1/16S****F-T
CCSRCH7R0D50-T
CEAT***M++-T
***/++
AKX9002-A-T
0.1
CKSRYF104Z16-T

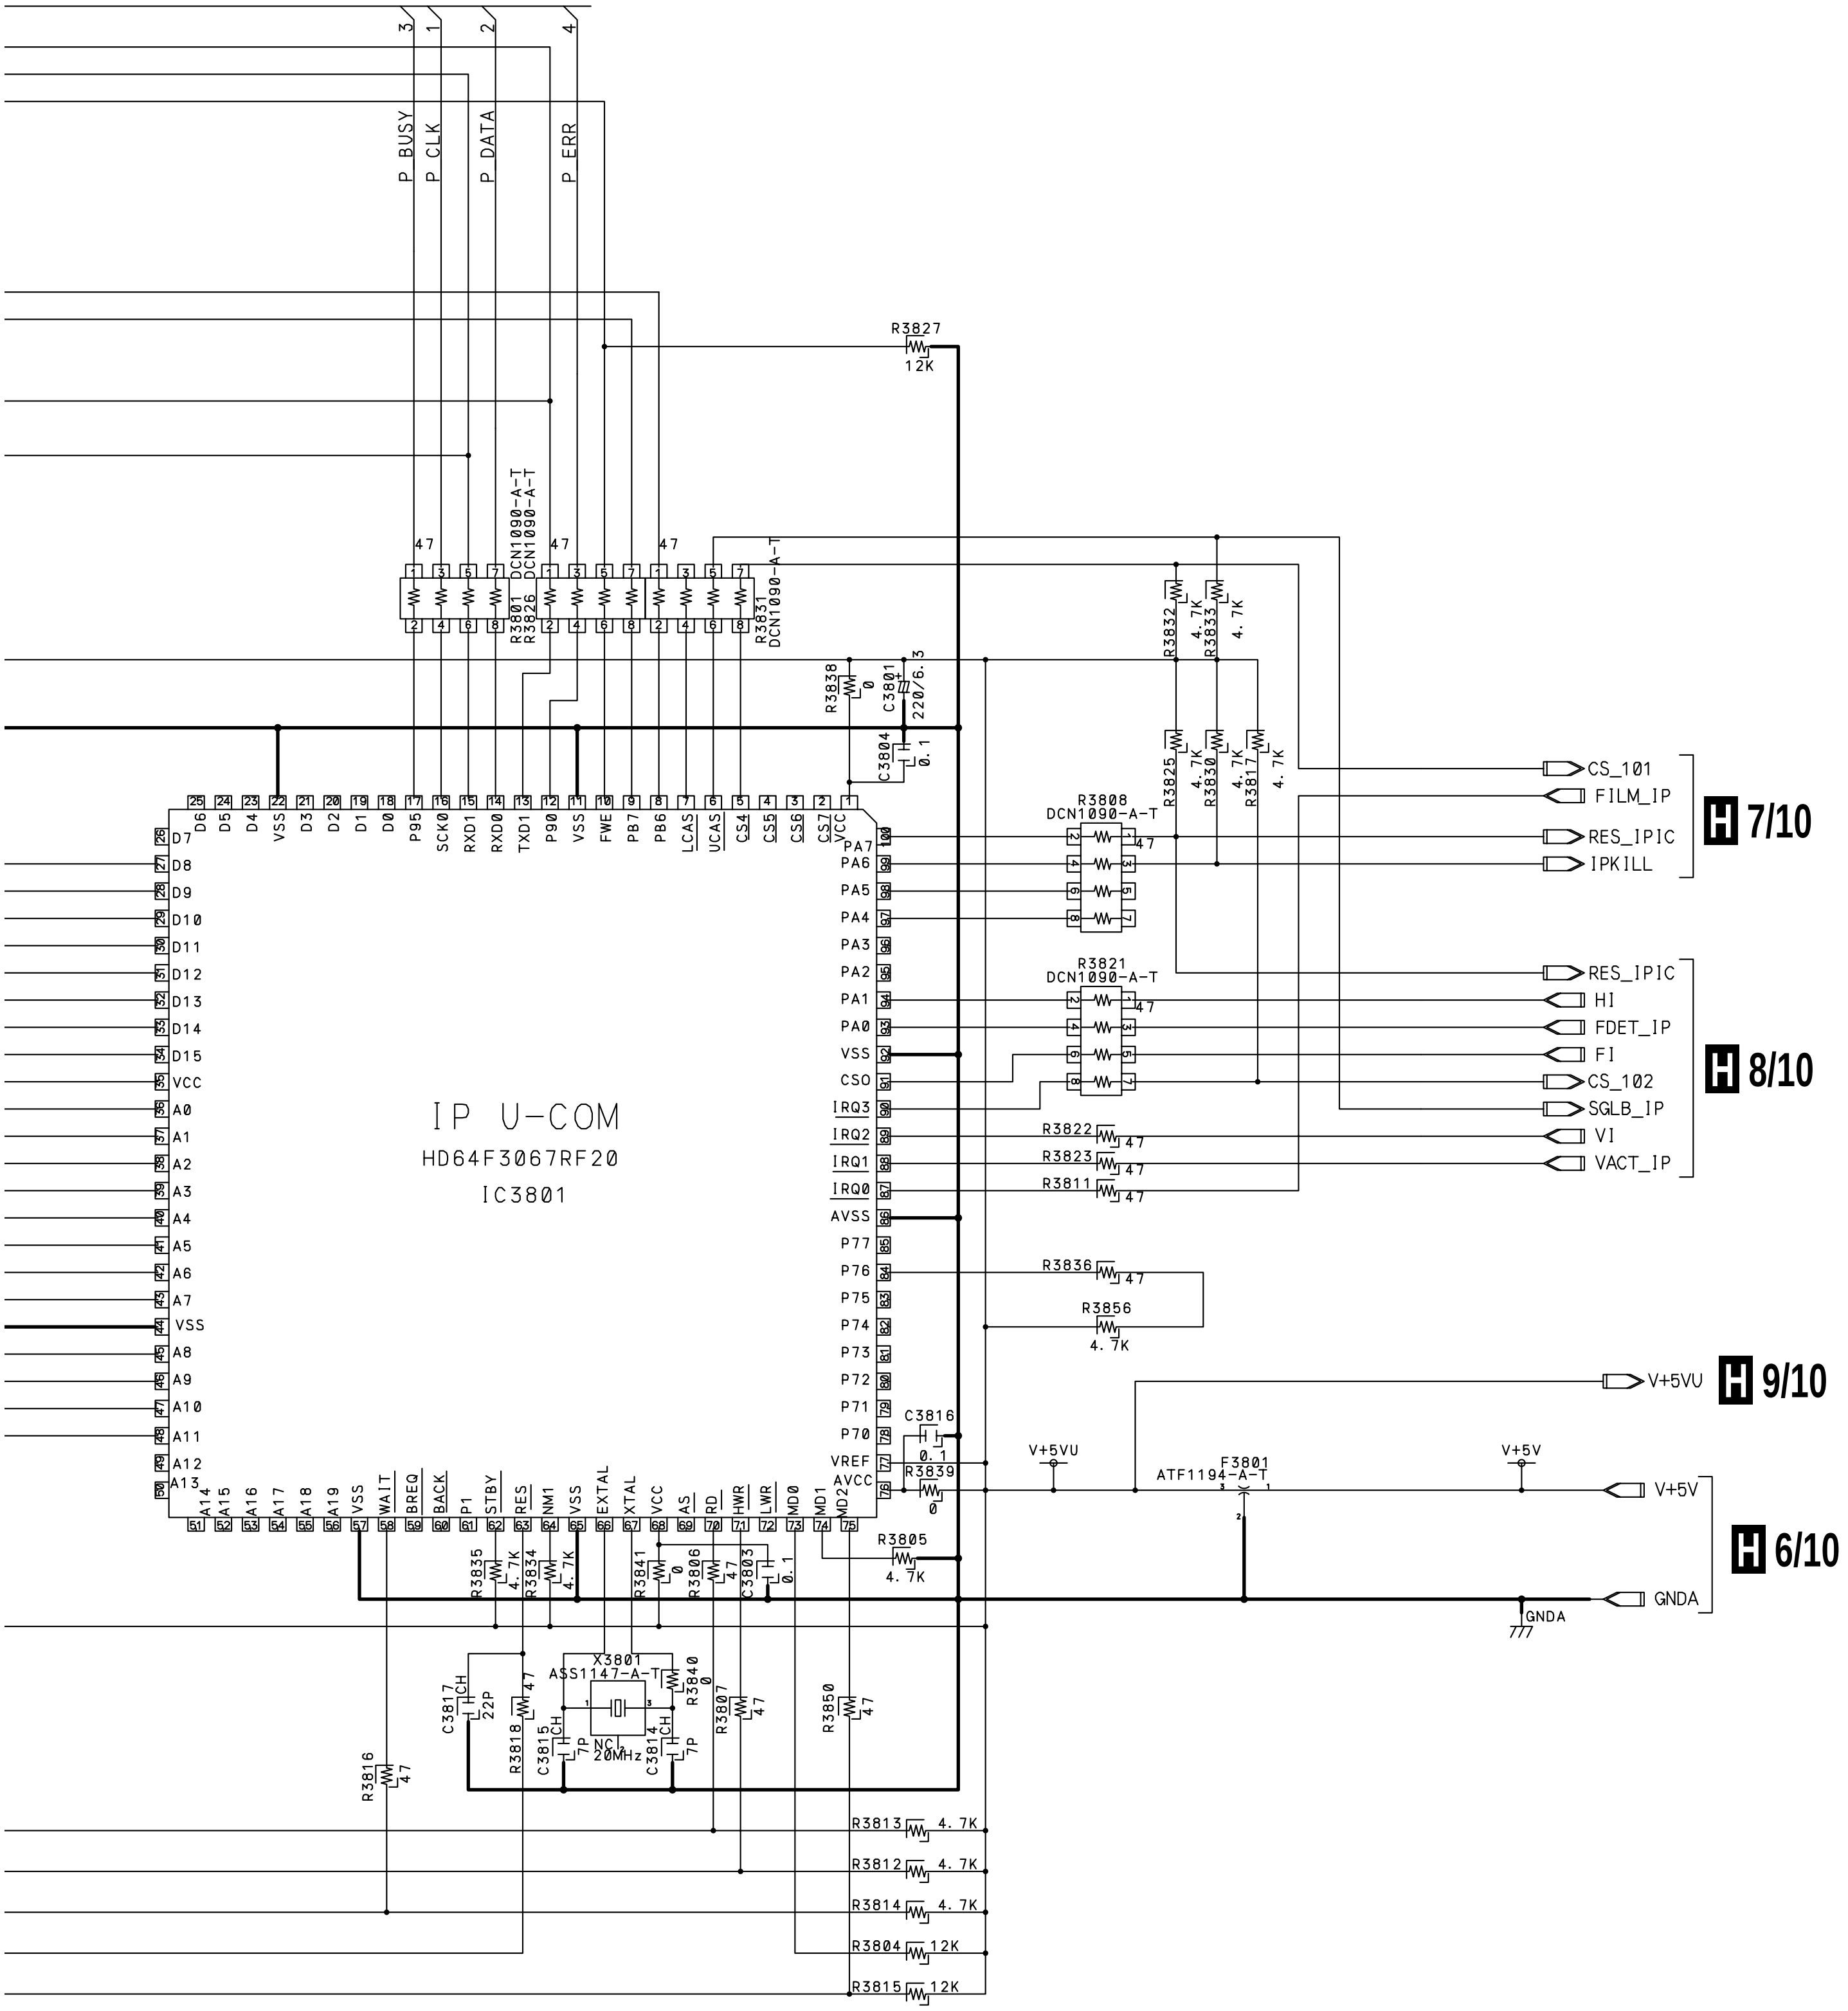
P BUSY
P CLK
P DATA
P ERR
3
1
2
4
R3827
12K
R3801
R3826
DCN1090-A-T
R3831
DCN1090-A-T
47
R3838
0
C3801
220/6.3
C3804
0.1
R3832
R3833
4.7K
R3825
R3830
R3817
4.7K
R3808
DCN1090-A-T
R3821
DCN1090-A-T
47
IP U-COM
HD64F3067RF20
IC3801
D7
D8
D9
D10
D11
D12
D13
D14
D15
VCC
A0
A1
A2
A3
A4
A5
A6
A7
VSS
A8
A9
A10
A11
A12
A13
D6
D5
D4
VSS
D3
D2
D1
D0
P95
SCK0
RXD1
RXD0
TXD1
P90
VSS
FWE
PB7
PB6
LCAS
UCAS
CS4
CS5
CS6
CS7
VCC
PA7
PA6
PA5
PA4
PA3
PA2
PA1
PA0
VSS
CS0
IRQ3
IRQ2
IRQ1
IRQ0
AVSS
P77
P76
P75
P74
P73
P72
P71
P70
VREF
AVCC
MD2
MD1
MD0
LWR
HWR
RD
AS
VCC
XTAL
EXTAL
VSS
NMI
RES
STBY
P1
BACK
BREQ
WAIT
VSS
A19
A18
A17
A16
A15
A14
R3822
R3823
R3811
47
R3836
47
R3856
4.7K
C3816
0.1
R3839
0
R3805
4.7K
V+5VU
V+5V
F3801
ATF1194-A-T
GNDA
CS_101
FILM_IP
RES_IPIC
IPKILL
H 7/10
RES_IPIC
HI
FDET_IP
FI
CS_102
SGLB_IP
VI
VACT_IP
H 8/10
V+5VU
H 9/10
V+5V
GNDA
H 6/10
R3835
4.7K
R3834
4.7K
R3841
0
R3806
0
C3803
0.1
X3801
ASS1147-A-T
20MHz
NC
R3840
0
C3817
CH
22P
R3818
47
C3815
CH
7P
C3814
CH
7P
R3807
47
R3850
47
R3816
47
R3813
4.7K
R3812
4.7K
R3814
4.7K
R3804
12K
R3815
12K

H 6/10, 9/10

SUB VIDEO SERVICE ASSY (6/10 and 9/10)

Input signal
Video signal : EIA full field color-bar
Picture quality : Standard
Range :DC range (Unless otherwise noted)

㊿ **Foot of R3283 (MHP)**
V: 2V/div. H: 10µsec/div.
(51) **Q3204 Base (Y2)**
V: 0.5V/div. H: 10µsec/div.

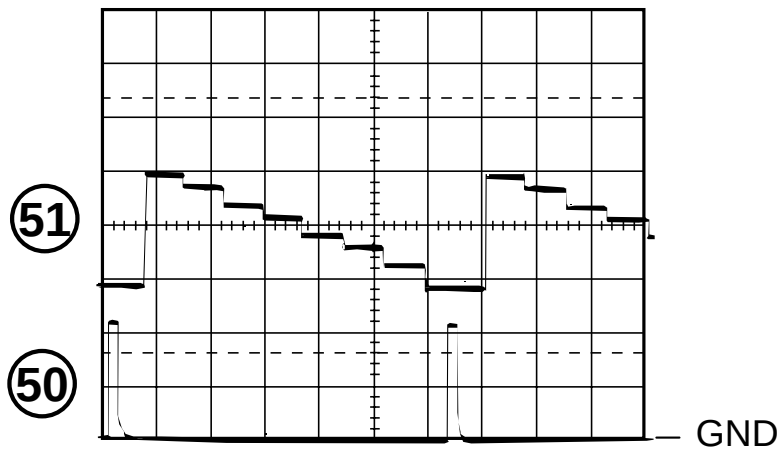

㊿ **Foot of R3283 (MHP)**
V: 2V/div. H: 10µsec/div.
(55) **Foot of R3235 (102CLP)**
V: 1V/div. H: 10µsec/div.

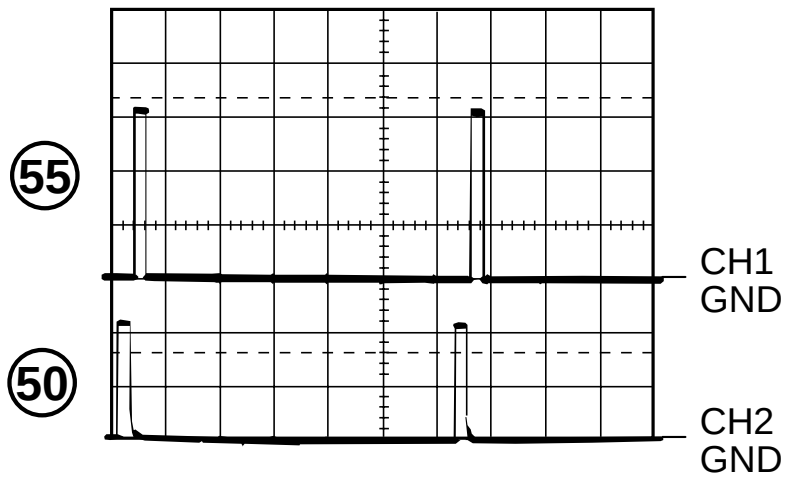

㊿ **Foot of R3283 (MHP)**
V: 2V/div. H: 10µsec/div.
(59) **Q3615 Emitter (DY1)**
V: 1V/div. H: 10µsec/div.

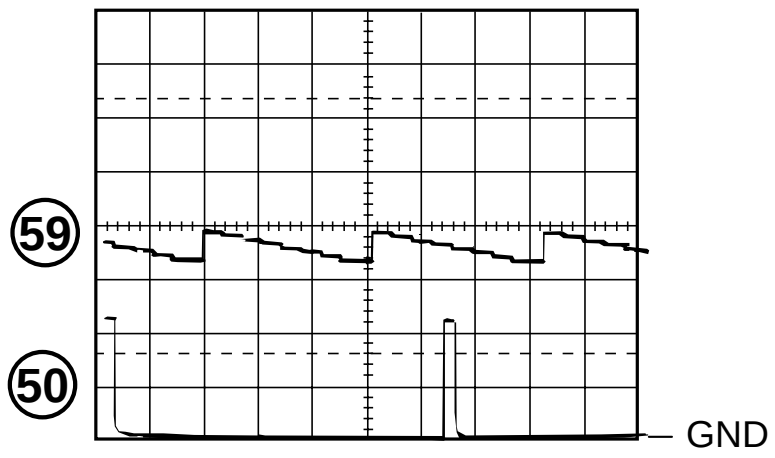

㊿ **Foot of R3283 (MHP)**
V: 2V/div. H: 10µsec/div.
(52) **Q3205 Base (B-Y2)**
V: 0.5V/div. H: 10µsec/div.

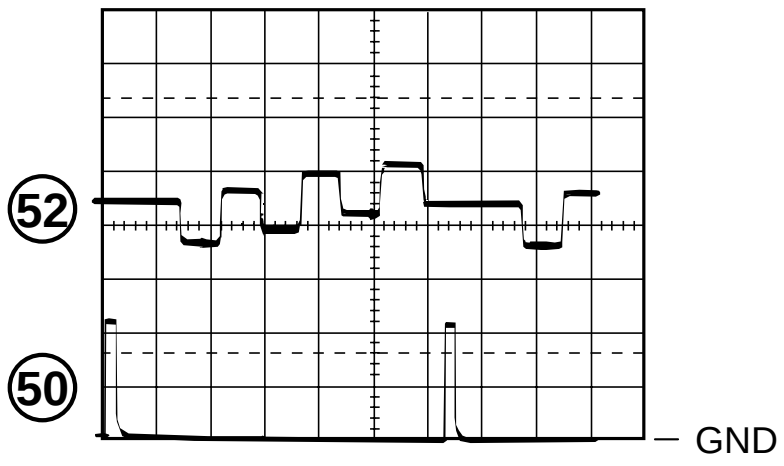

(51) **Q3204 Base (Y2)**
V: 1V/div. H: 2msec/div.
(56) **IC3205-pins 3 and 11 (IPVS)**
V: 2V/div. H: 2msec/div.

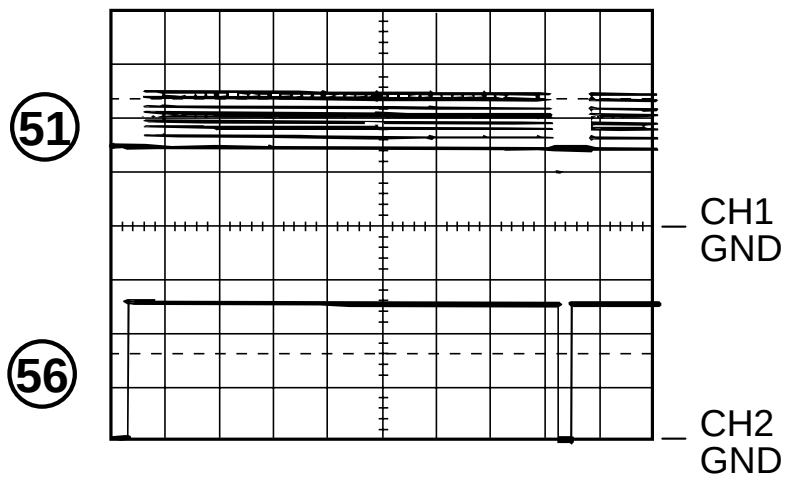

㊿ **Foot of R3283 (MHP)**
V: 2V/div. H: 10µsec/div.
(60) **Q3609 Emitter (DB_Y1)**
V: 1V/div. H: 10µsec/div.

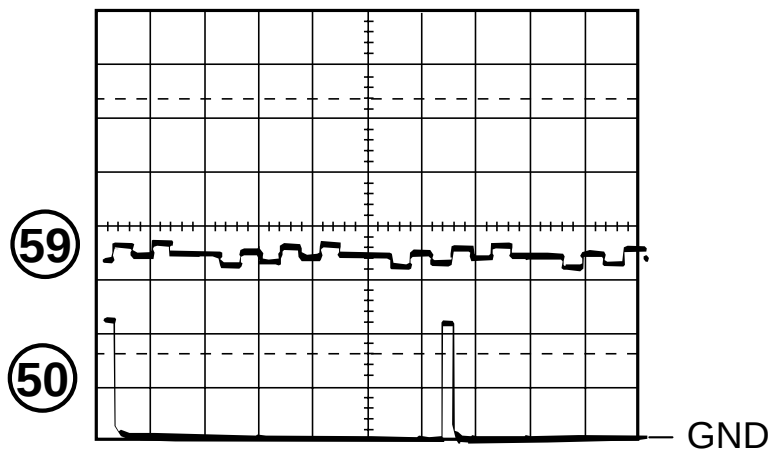

㊿ **Foot of R3283 (MHP)**
V: 2V/div. H: 10µsec/div.
(53) **Q3206 Base (R-Y2)**
V: 0.5V/div. H: 10µsec/div.

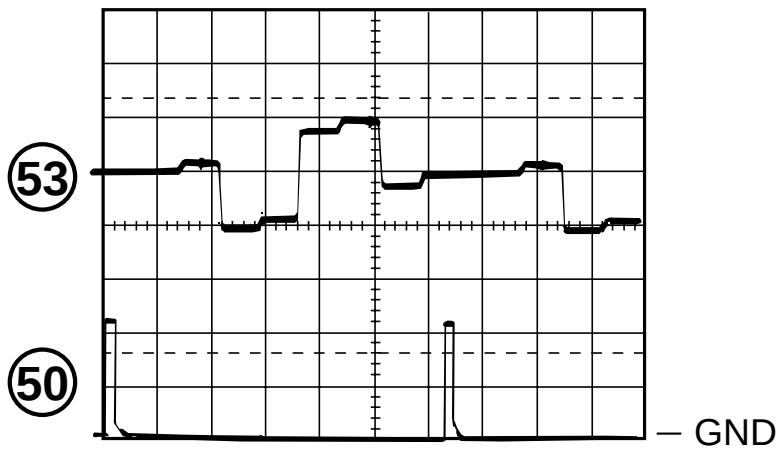

㊿ **Foot of R3283 (MHP)**
V: 2V/div. H: 10µsec/div.
(57) **Foot of R3286 (DHS)**
V: 2V/div. H: 10µsec/div.

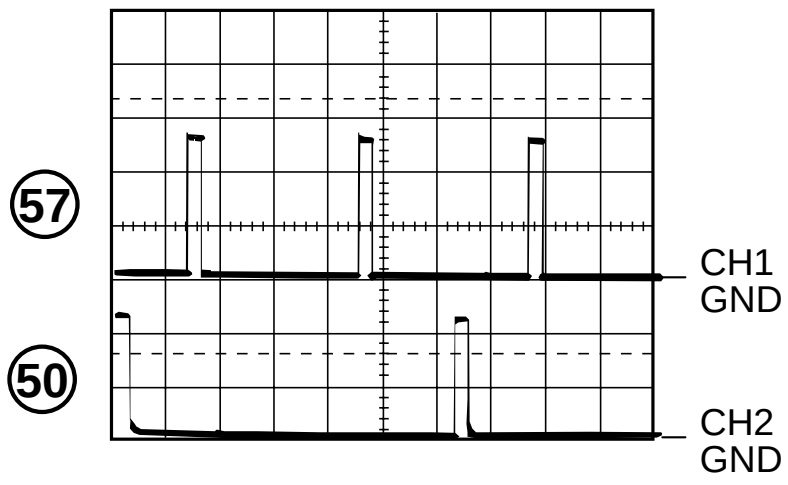

㊿ **Foot of R3283 (MHP)**
V: 2V/div. H: 10µsec/div.
(61) **Q3607 Emitter (DR_Y1)**
V: 1V/div. H: 10µsec/div.

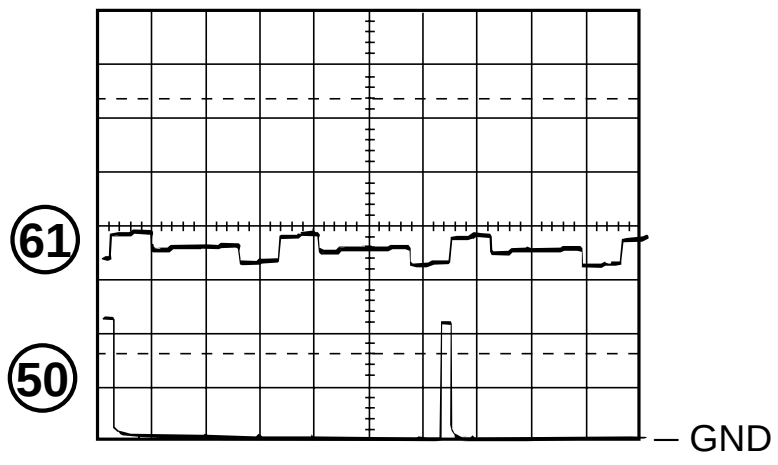

㊿ **Foot of R3283 (MHP)**
V: 2V/div. H: 10µsec/div.
(54) **Foot of R3256 (IPHS)**
V: 1V/div. H: 10µsec/div.

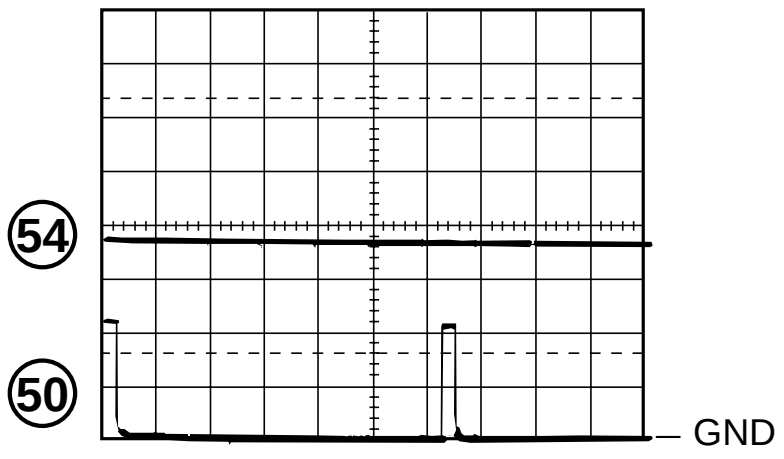

(51) **Q3204 Base (Y2)**
V: 1V/div. H: 2msec/div.
(58) **Foot of R3284 (DVS)**
V: 2V/div. H: 2msec/div.

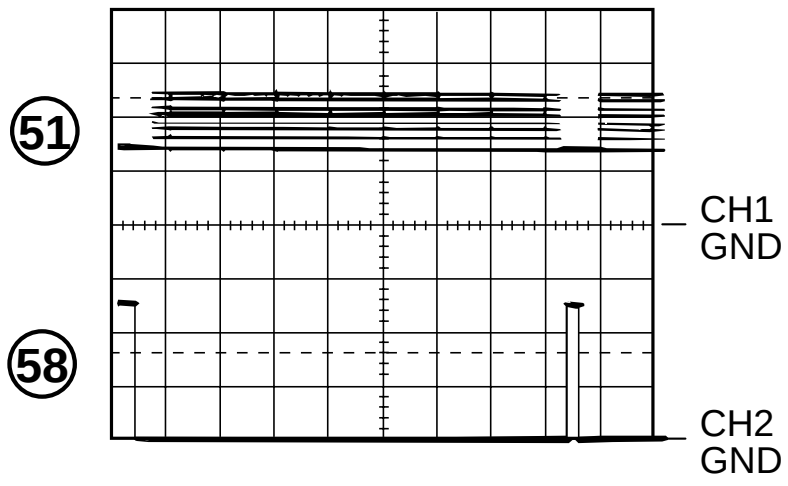

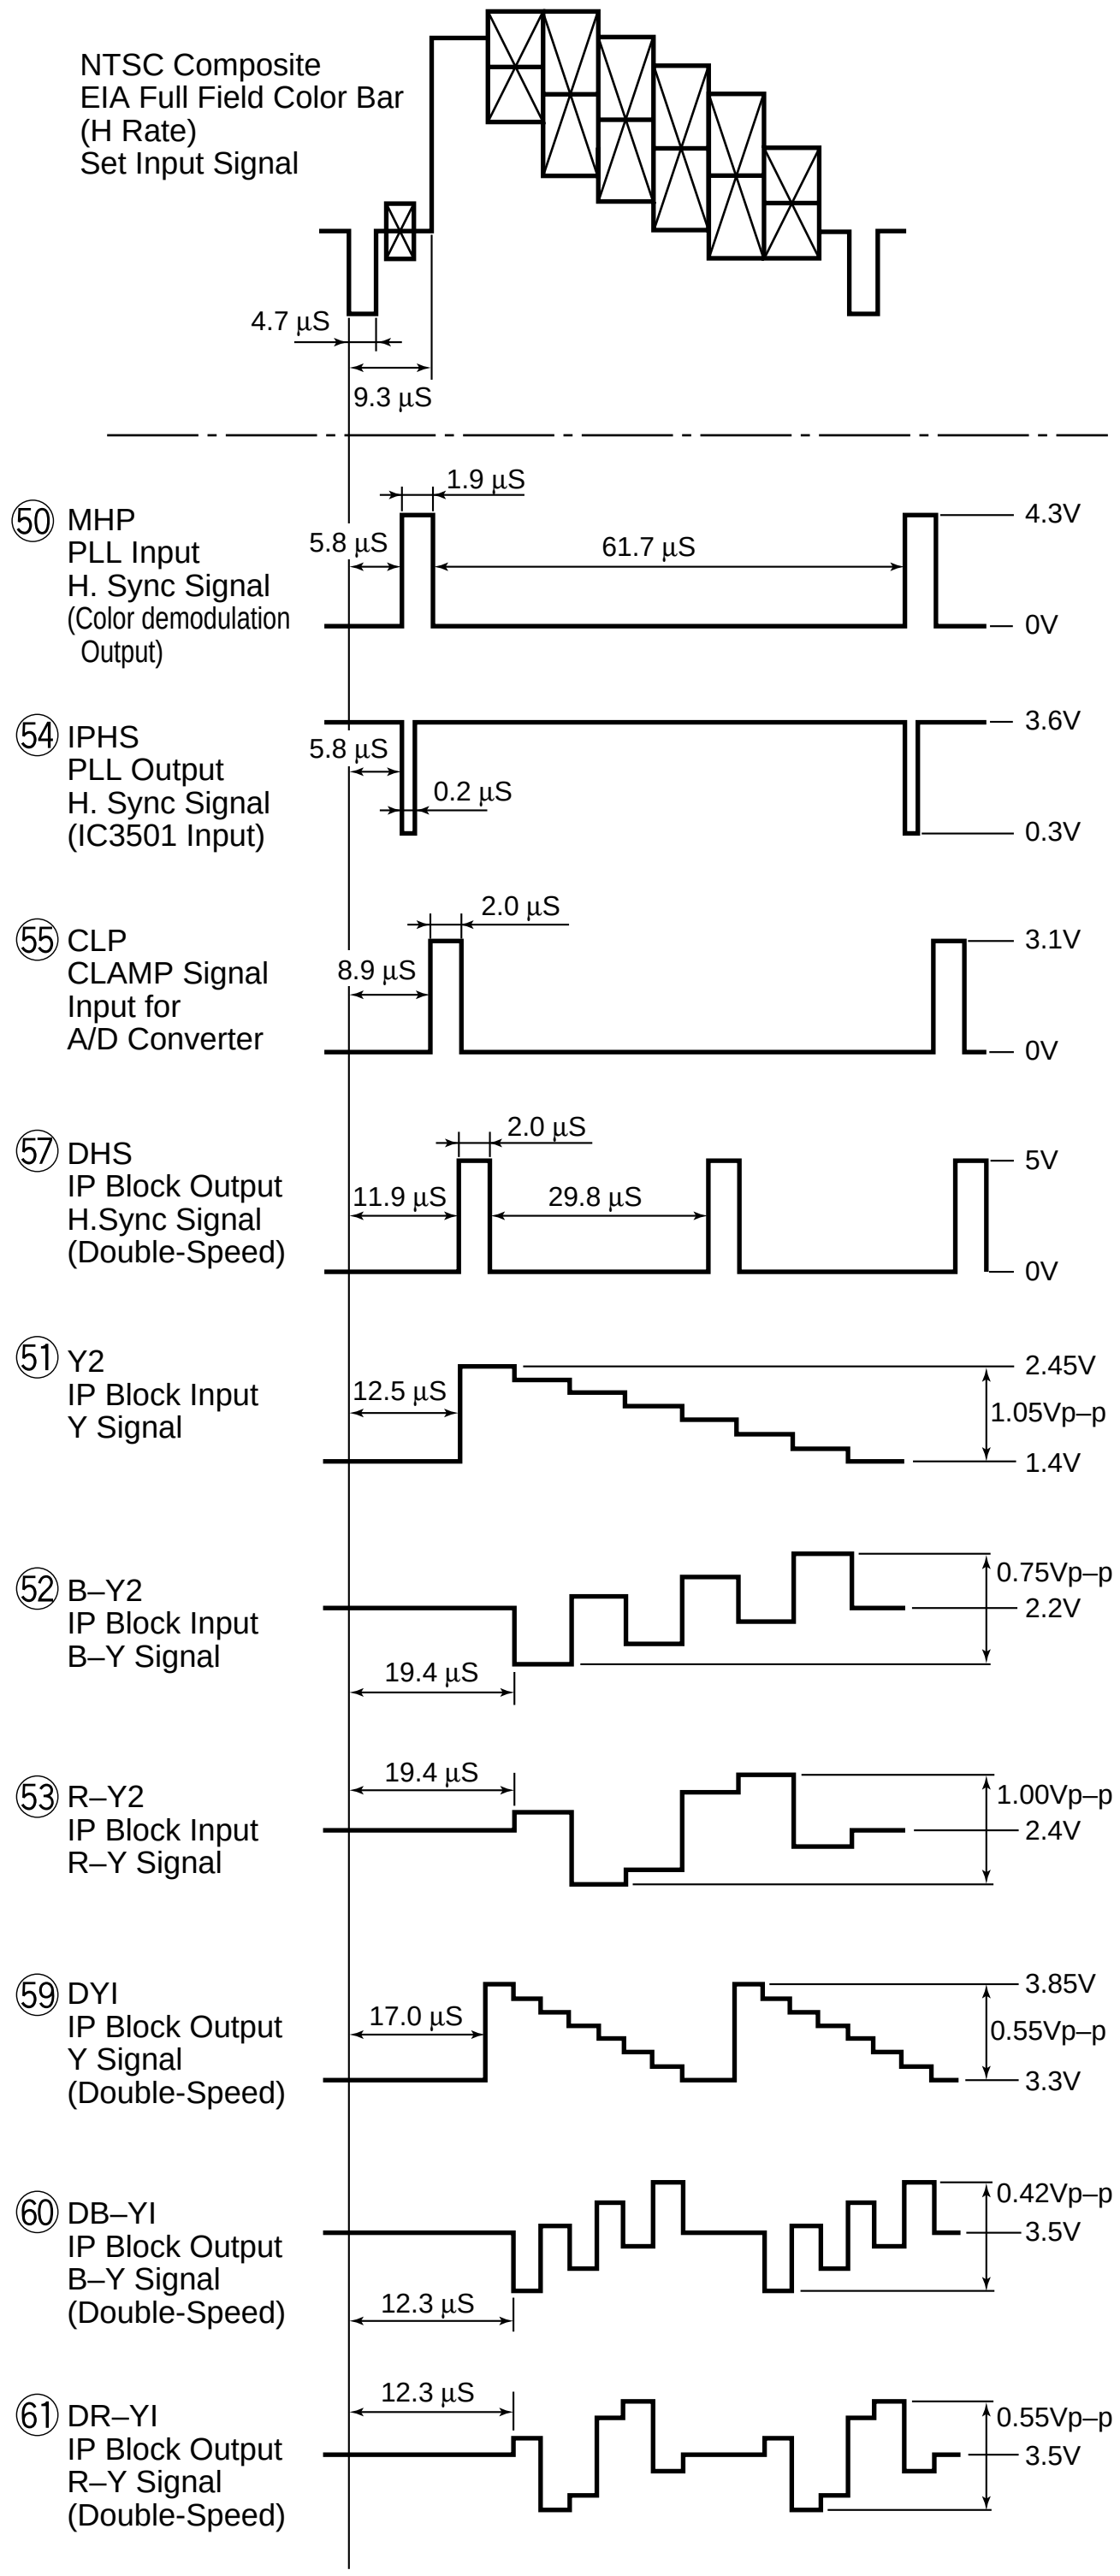
NTSC Composite
EIA Full Field Color Bar
(H Rate)
Set Input Signal
4.7 µS
9.3 µS
(50) MHP
PLL Input
H. Sync Signal
(Color demodulation Output)
5.8 µS
1.9 µS
61.7 µS
4.3V
0V
(54) IPHS
PLL Output
H. Sync Signal
(IC3501 Input)
5.8 µS
0.2 µS
3.6V
0.3V
(55) CLP
CLAMP Signal
Input for
A/D Converter
8.9 µS
2.0 µS
3.1V
0V
(57) DHS
IP Block Output
H.Sync Signal
(Double-Speed)
11.9 µS
2.0 µS
29.8 µS
5V
0V
(51) Y2
IP Block Input
Y Signal
12.5 µS
2.45V
1.05Vp–p
1.4V
(52) B–Y2
IP Block Input
B–Y Signal
19.4 µS
0.75Vp–p
2.2V
(53) R–Y2
IP Block Input
R–Y Signal
19.4 µS
1.00Vp–p
2.4V
(59) DYI
IP Block Output
Y Signal
(Double-Speed)
17.0 µS
3.85V
0.55Vp–p
3.3V
(60) DB–YI
IP Block Output
B–Y Signal
(Double-Speed)
12.3 µS
0.42Vp–p
3.5V
(61) DR–YI
IP Block Output
R–Y Signal
(Double-Speed)
12.3 µS
0.55Vp–p
3.5V

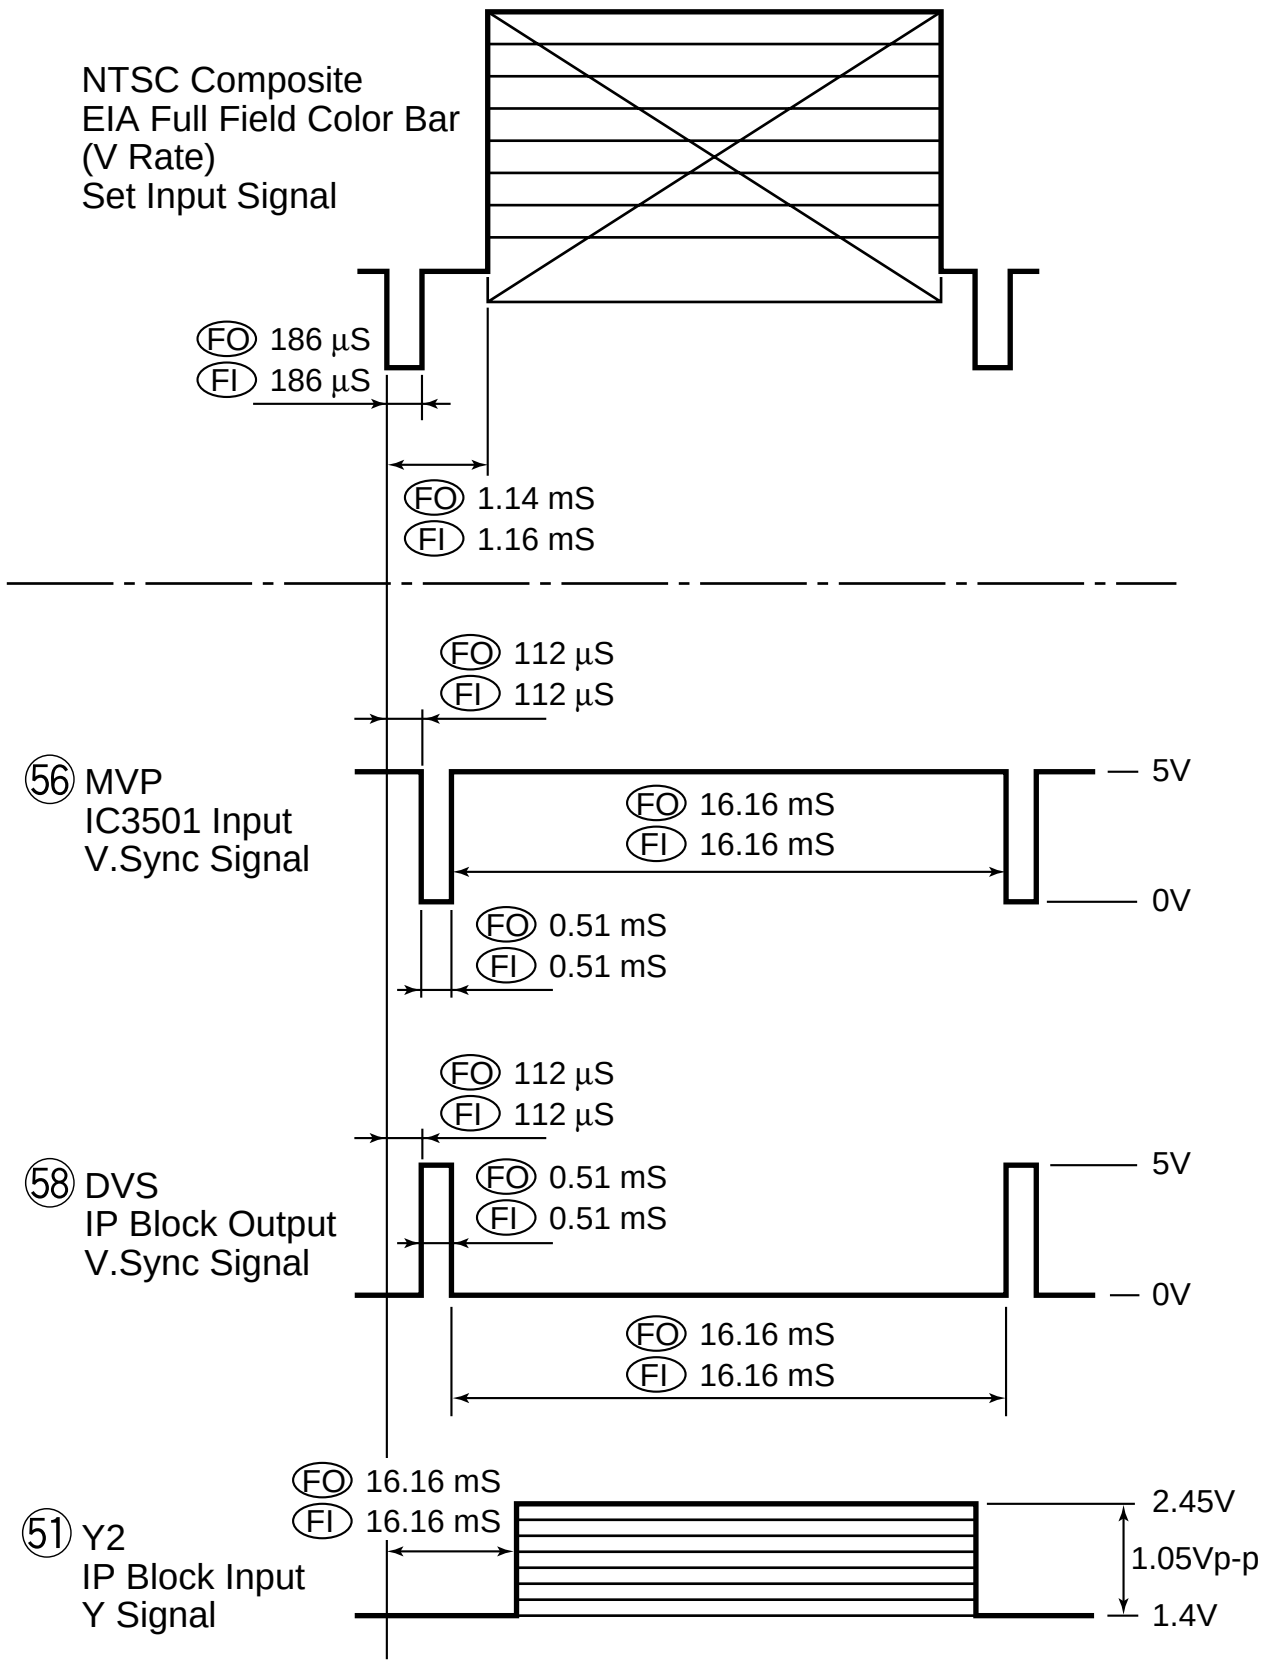
NTSC Composite
EIA Full Field Color Bar
(V Rate)
Set Input Signal
FO 186 µS
FI 186 µS
FO 1.14 mS
FI 1.16 mS
FO 112 µS
FI 112 µS
(56) MVP
IC3501 Input
V.Sync Signal
FO 16.16 mS
FI 16.16 mS
FO 0.51 mS
FI 0.51 mS
5V
0V
FO 112 µS
FI 112 µS
(58) DVS
IP Block Output
V.Sync Signal
FO 0.51 mS
FI 0.51 mS
FO 16.16 mS
FI 16.16 mS
5V
0V
(51) Y2
IP Block Input
Y Signal
FO 16.16 mS
FI 16.16 mS
2.45V
1.05Vp-p
1.4V

3.27 DIGITAL CONV. (1/2) and CONNECTOR ASSYS

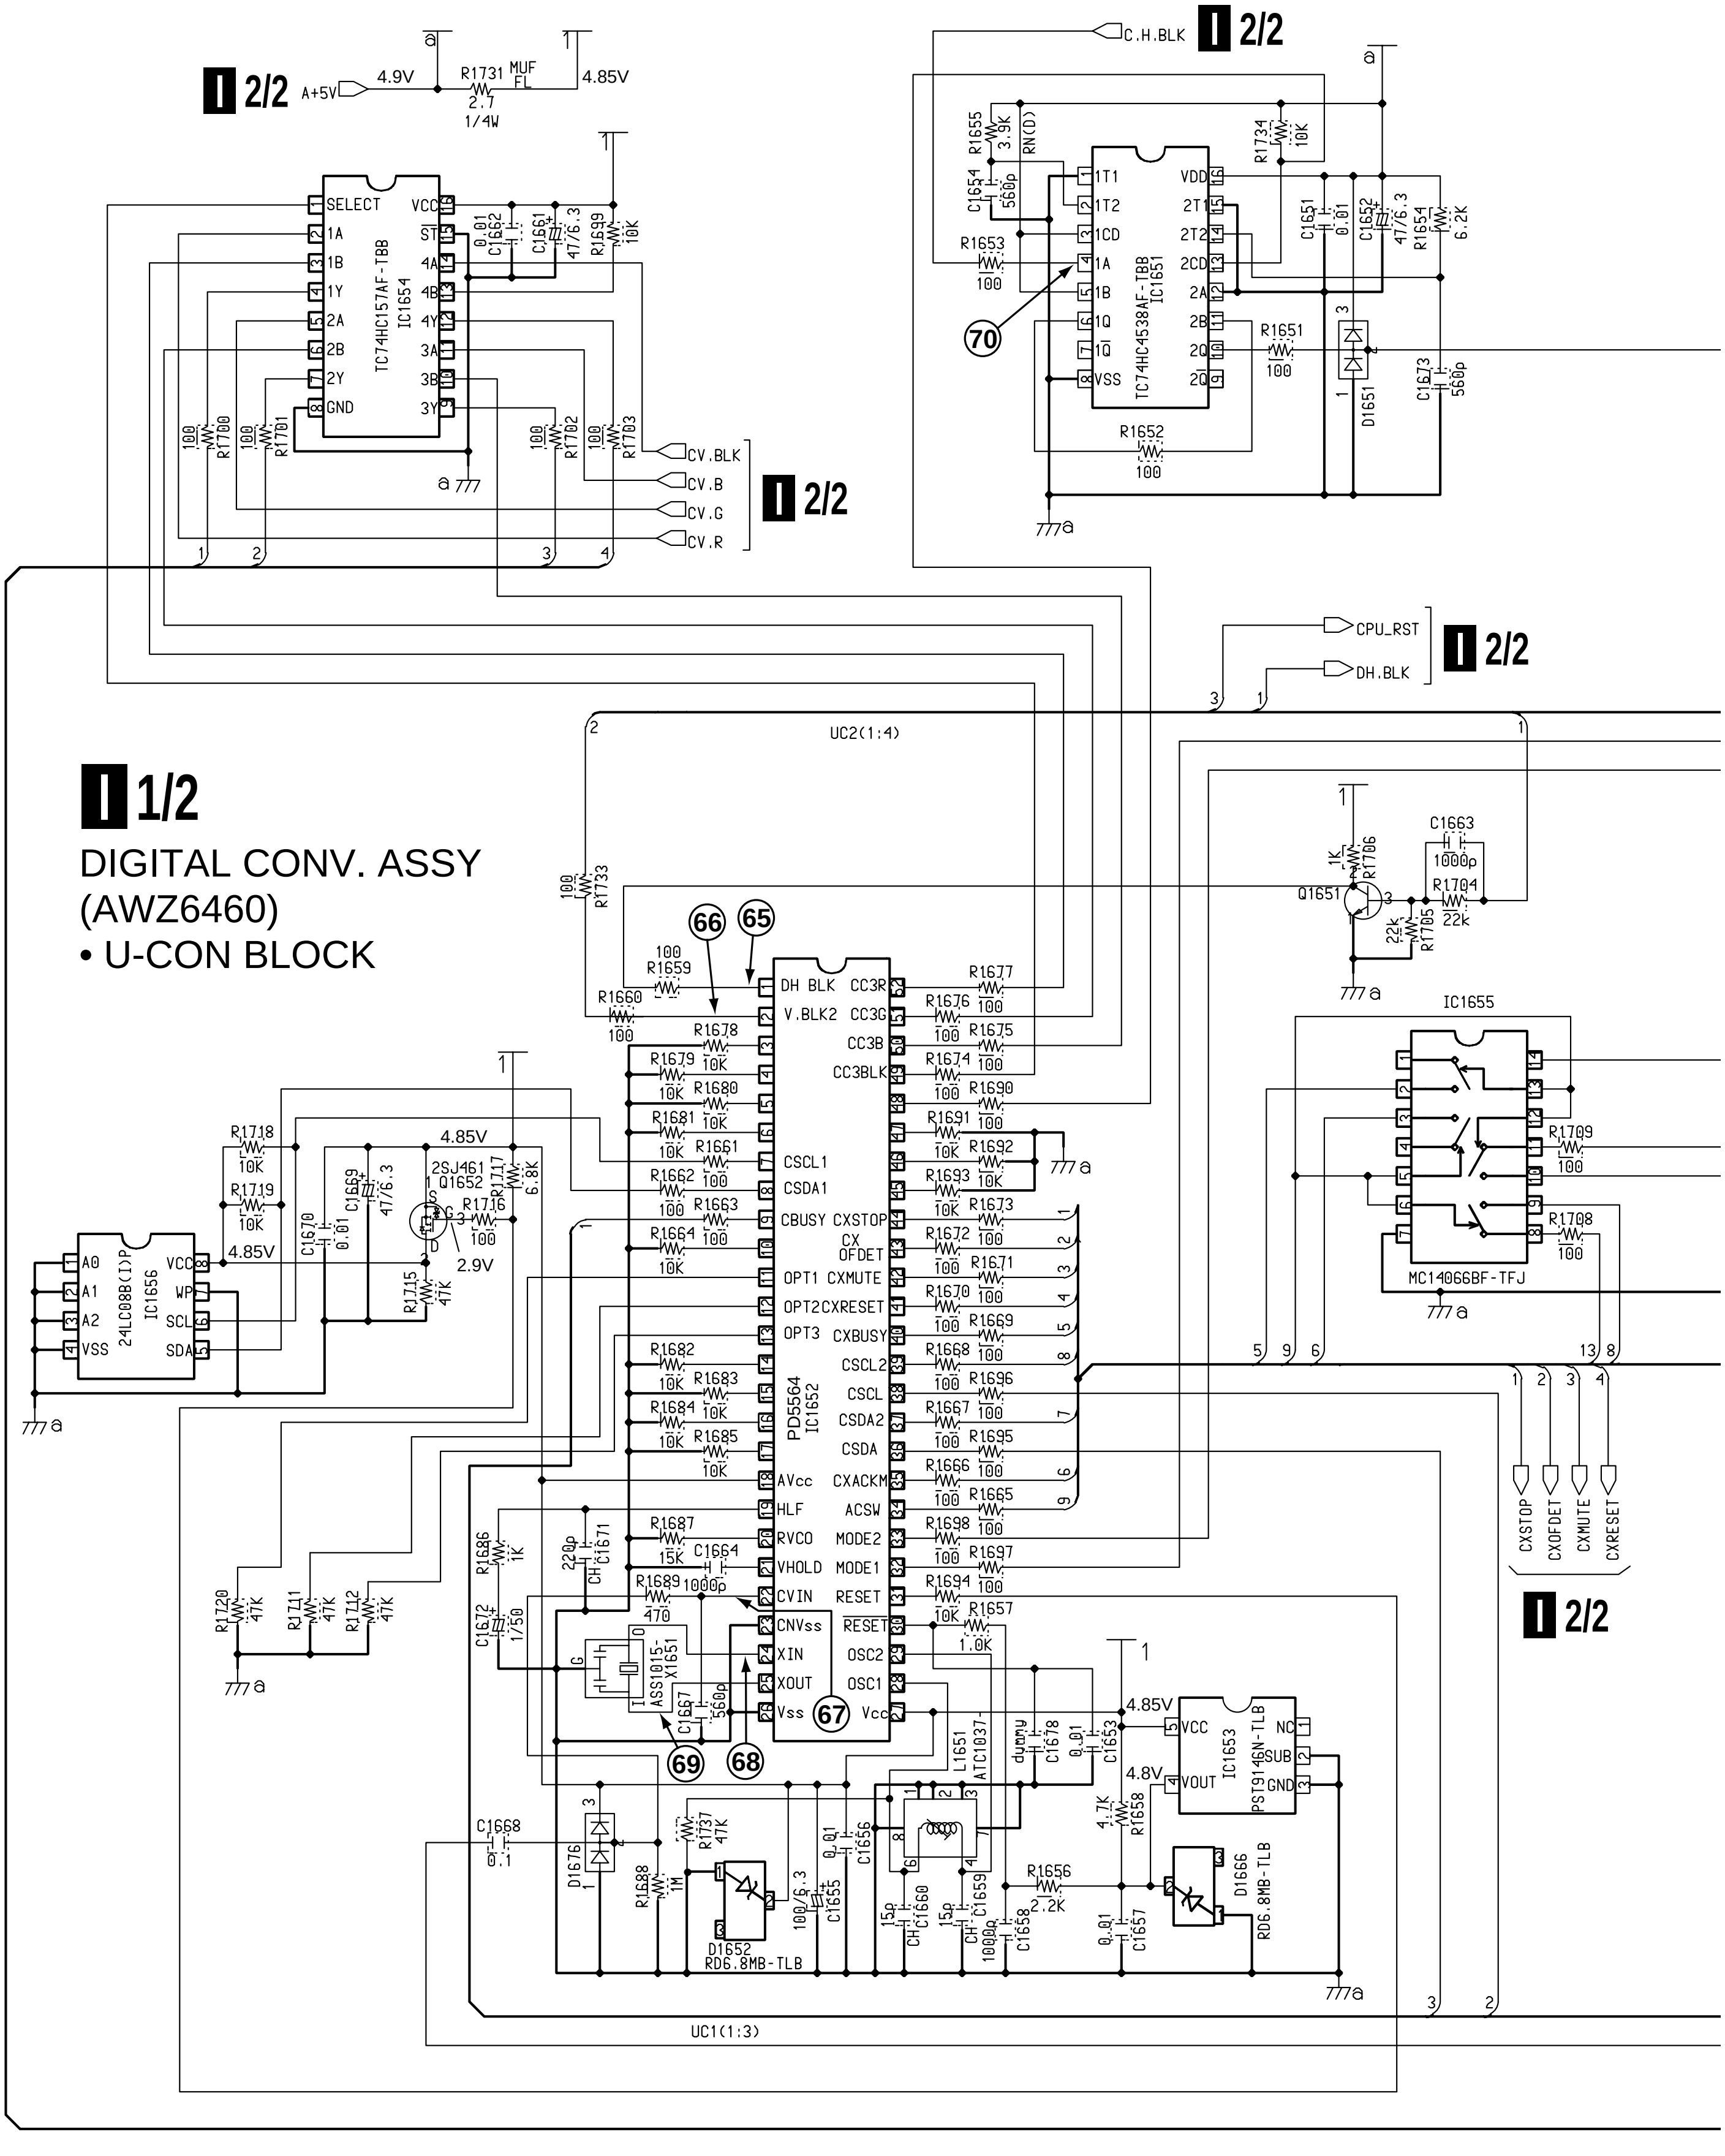

I 1/2

DIGITAL CONV. ASSY
(AWZ6460)
• U-CON BLOCK

I 2/2
A+5V
4.9V
R1731 2.7 1/4W
MUF FL
4.85V
IC1654
TC74HC157AF-TBB
SELECT
1A
1B
1Y
2A
2B
2Y
GND
VCC
ST
4A
4B
4Y
3A
3B
3Y
C1662 0.01
C1661 47/6.3
R1699 10K
R1700 100
R1701 100
R1702 100
R1703 100
CV.BLK
CV.B
CV.G
CV.R
C.H.BLK
IC1651
TC74HC4538AF-TBB
1T1
1T2
1CD
1A
1B
1Q
1Q̄
VSS
VDD
2T1
2T2
2CD
2A
2B
2Q
2Q̄
R1655 3.9K
RN(D)
C1654 560p
R1653 100
R1734 10K
C1651 0.01
C1652 47/6.3
R1654 6.2K
R1651 100
R1652 100
D1651
C1673 560p
70
CPU_RST
DH.BLK
UC2(1:4)
R1733 100
Q1651
R1706 1K
C1663 1000p
R1704 22k
R1705 22k
66
65
R1659 100
R1660 100
IC1652
PD5564
DH BLK
V.BLK2
CSCL1
CSDA1
CBUSY
OPT1
OPT2
OPT3
AVcc
HLF
RVCO
VHOLD
CVIN
CNVss
XIN
XOUT
Vss
CC3R
CC3G
CC3B
CC3BLK
CXSTOP
CX OFDET
CXMUTE
CXRESET
CXBUSY
CSCL2
CSCL
CSDA2
CSDA
CXACKM
ACSW
MODE2
MODE1
RESET
OSC2
OSC1
Vcc
R1677 100
R1676 100
R1675 100
R1674 100
R1690 100
R1691 10K
R1692 100
R1693 10K
R1673 100
R1672 100
R1671 100
R1670 100
R1669 100
R1668 100
R1696 100
R1667 100
R1695 100
R1666 100
R1665 100
R1698 100
R1697 100
R1694 10K
R1657 1.0K
R1678 10K
R1679 10K
R1680 10K
R1681 10K
R1661 100
R1662 100
R1663 100
R1664 10K
R1682 10K
R1683 10K
R1684 10K
R1685 10K
R1687 15K
C1664
R1689 470
C1671 220p
R1686 1K
C1672 1/50
X1651 ASS1015-
C1667 560p
67
68
69
IC1655
MC14066BF-TFJ
R1709 100
R1708 100
CXSTOP
CXOFDET
CXMUTE
CXRESET
IC1656
24LC088(I)P
A0
A1
A2
VSS
VCC
WP
SCL
SDA
R1718 10K
R1719 10K
C1670 0.01
C1669 47/6.3
2SJ461 Q1652
R1716 100
R1717 6.8K
R1715 47K
4.85V
2.9V
R1720 47K
R1711 47K
R1712 47K
L1651 ATC1037-
dummy
C1678
C1653 0.01
IC1653
PST9146N-TLB
VOUT
NC
SUB
GND
4.8V
R1658 4.7K
C1668 0.1
D1676
R1688 1M
R1737 47K
D1652 RD6.8MB-TLB
C1655 100/6.3
C1656 0.01
C1660 15p
C1659 15p
C1658 1000p
R1656 2.2K
C1657 0.01
D1666 RD6.8MB-TLB
UC1(1:3)

I 1/2

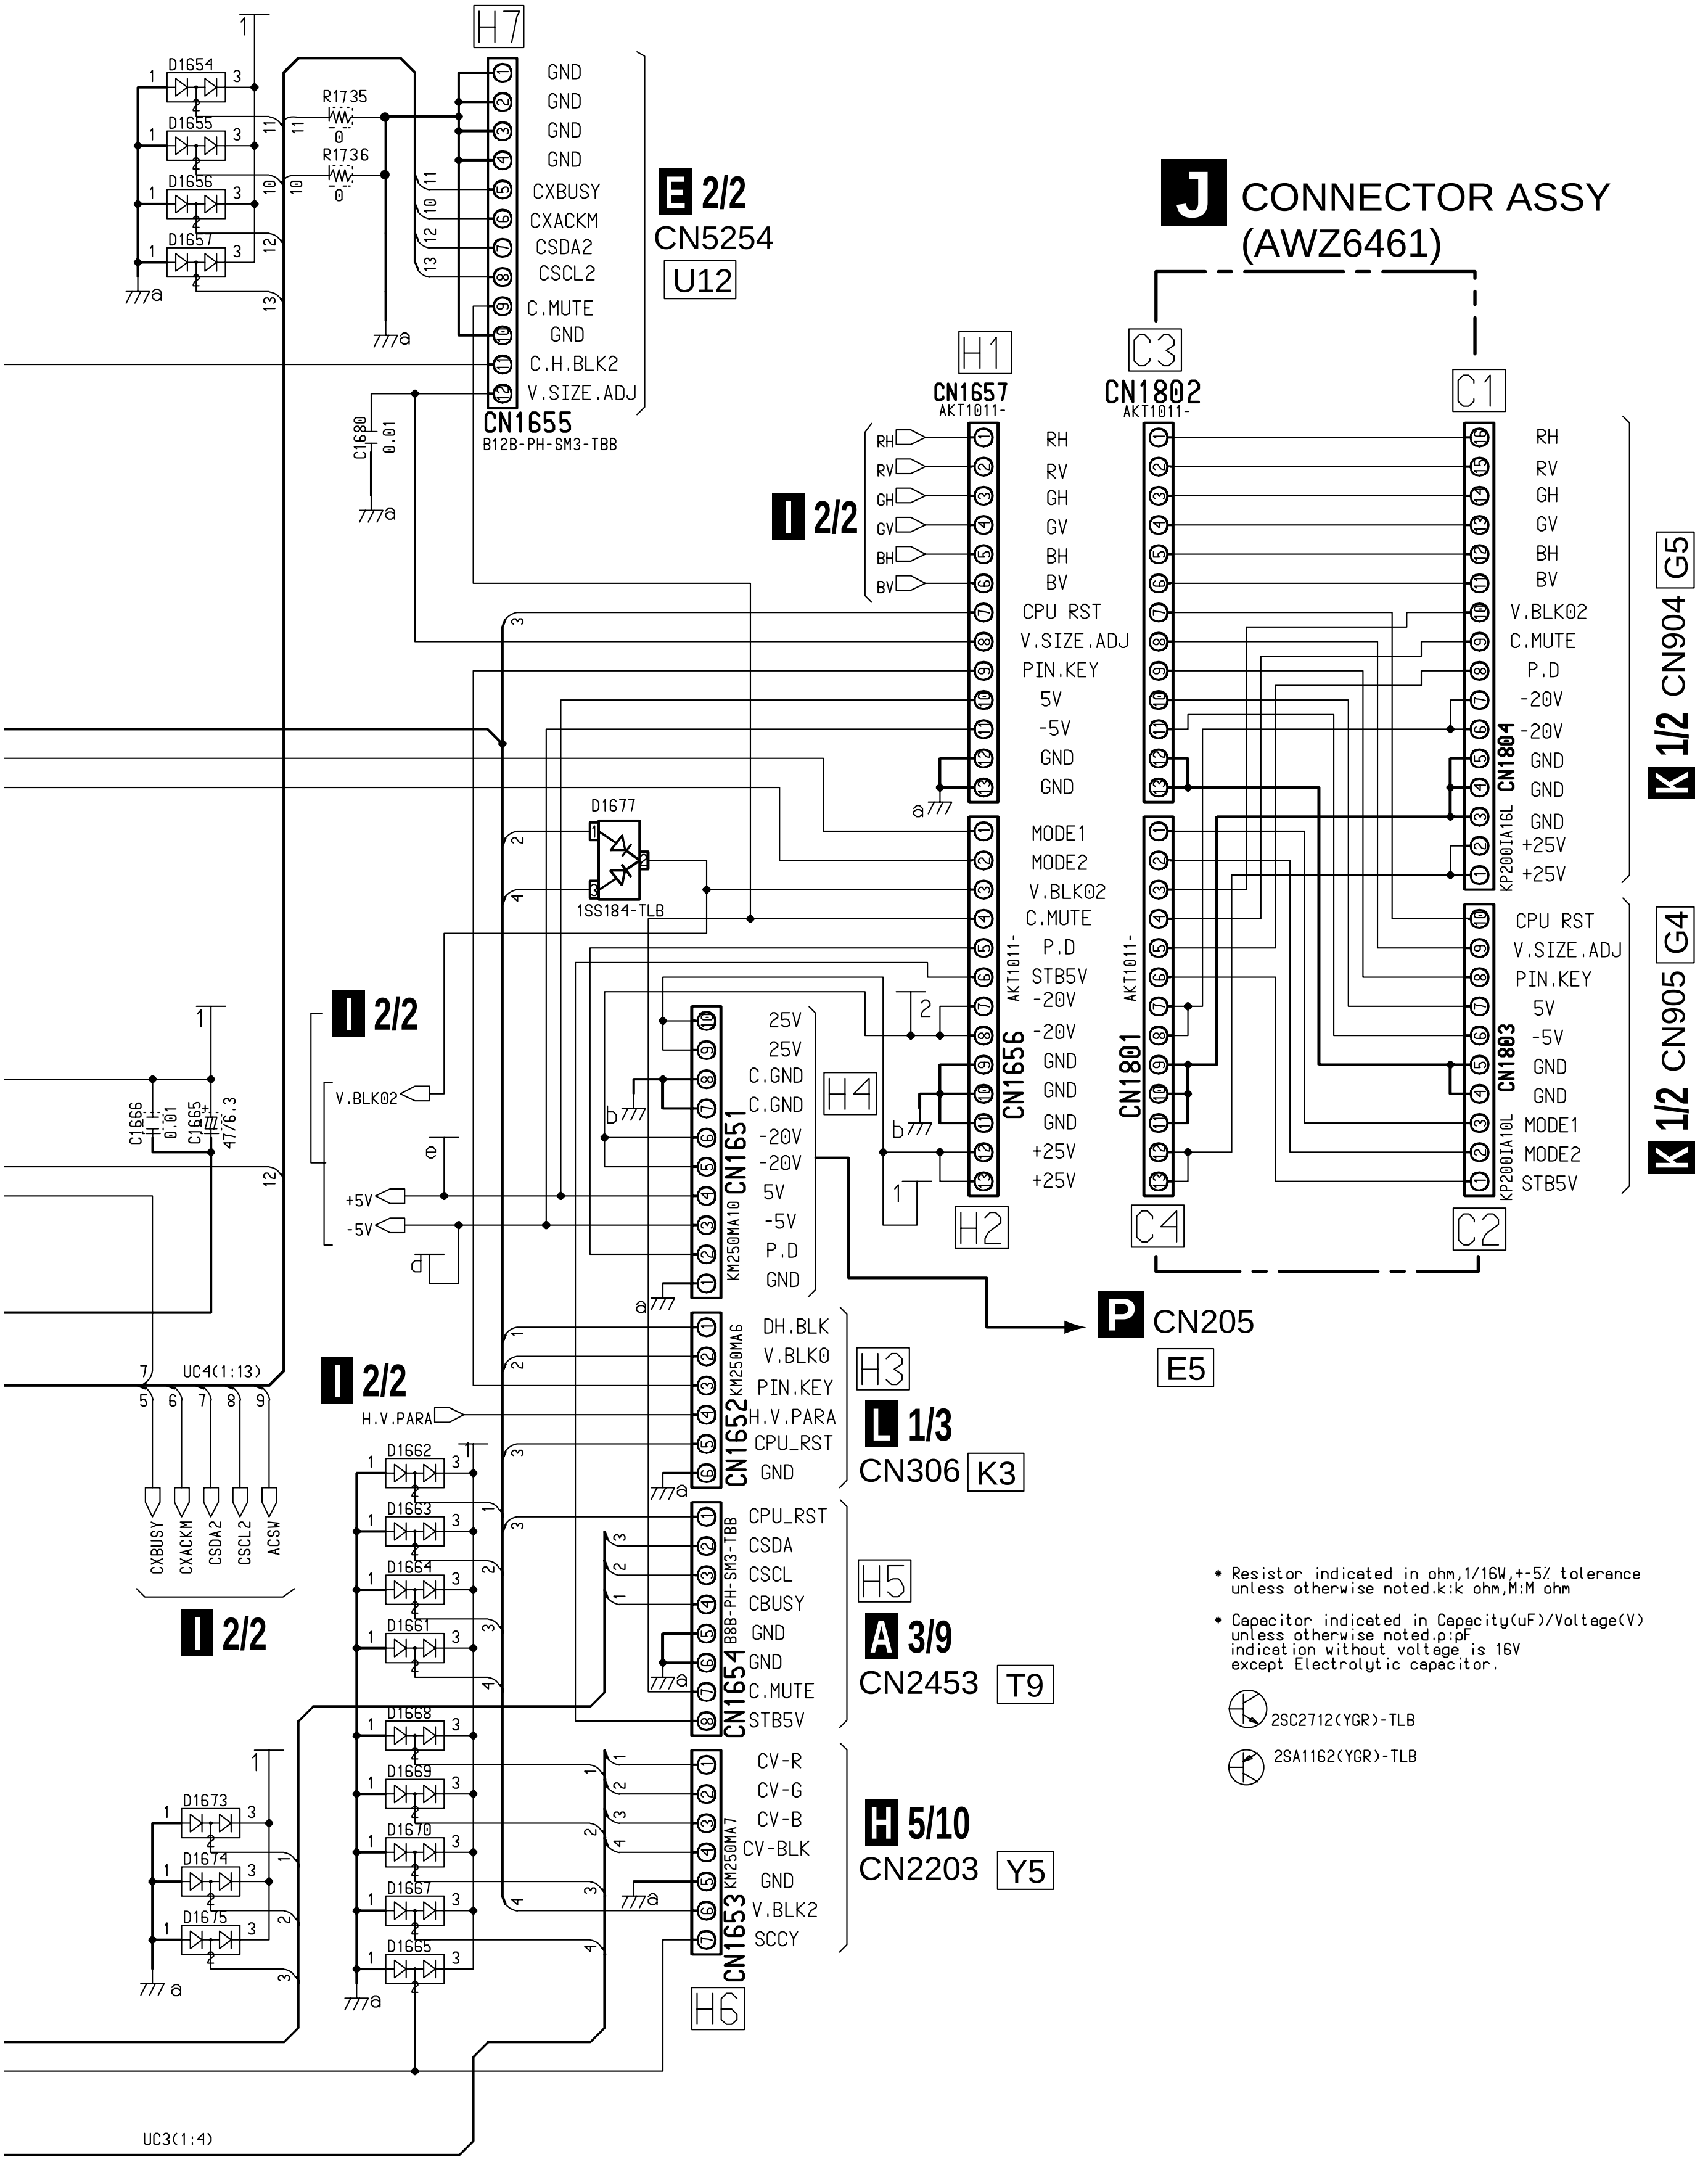
J CONNECTOR ASSY
(AWZ6461)
H7
CN1655
B12B-PH-SM3-TBB
GND
GND
GND
GND
CXBUSY
CXACKM
CSDA2
CSCL2
C.MUTE
GND
C.H.BLK2
V.SIZE.ADJ
E 2/2
CN5254
U12
D1654
D1655
D1656
D1657
R1735
0
R1736
0
C1680
0.01
a
H1
CN1657
AKT1011-
I 2/2
RH
RV
GH
GV
BH
BV
CPU RST
V.SIZE.ADJ
PIN.KEY
5V
-5V
GND
GND
MODE1
MODE2
V.BLK02
C.MUTE
P.D
STB5V
-20V
-20V
GND
GND
GND
+25V
+25V
CN1656
AKT1011-
H2
C3
CN1802
AKT1011-
C4
CN1801
AKT1011-
C1
CN1804
KP200IA16L
RH
RV
GH
GV
BH
BV
V.BLK02
C.MUTE
P.D
-20V
-20V
GND
GND
GND
+25V
+25V
K 1/2 CN904
G5
C2
CN1803
KP200IA10L
CPU RST
V.SIZE.ADJ
PIN.KEY
5V
-5V
GND
GND
MODE1
MODE2
STB5V
K 1/2 CN905
G4
D1677
1SS184-TLB
H4
CN1651
KM250MA10
25V
25V
C.GND
C.GND
-20V
-20V
5V
-5V
P.D
GND
P CN205
E5
I 2/2
V.BLK02
+5V
-5V
e
d
b
C1666
0.01
C1665
47/6.3
UC4(1:13)
CXBUSY
CXKM
CSDA2
CSCL2
ACSW
I 2/2
H.V.PARA
H3
CN1652
KM250MA6
DH.BLK
V.BLK0
PIN.KEY
H.V.PARA
CPU_RST
GND
L 1/3
CN306
K3
D1662
D1663
D1664
D1661
D1668
D1669
D1670
D1667
D1665
D1673
D1674
D1675
H5
CN1654
B8B-PH-SM3-TBB
CPU_RST
CSDA
CSCL
CBUSY
GND
GND
C.MUTE
STB5V
A 3/9
CN2453
T9
H6
CN1653
KM250MA7
CV-R
CV-G
CV-B
CV-BLK
GND
V.BLK2
SCCY
H 5/10
CN2203
Y5
UC3(1:4)
2SC2712(YGR)-TLB
2SA1162(YGR)-TLB

- Resistor indicated in ohm,1/16W,+-5% tolerance unless otherwise noted.k:k ohm,M:M ohm
- Capacitor indicated in Capacity(uF)/Voltage(V) unless otherwise noted.p:pF indication without voltage is 16V except Electrolytic capacitor.

3.28 DIGITAL CONV. ASSY (2/2)

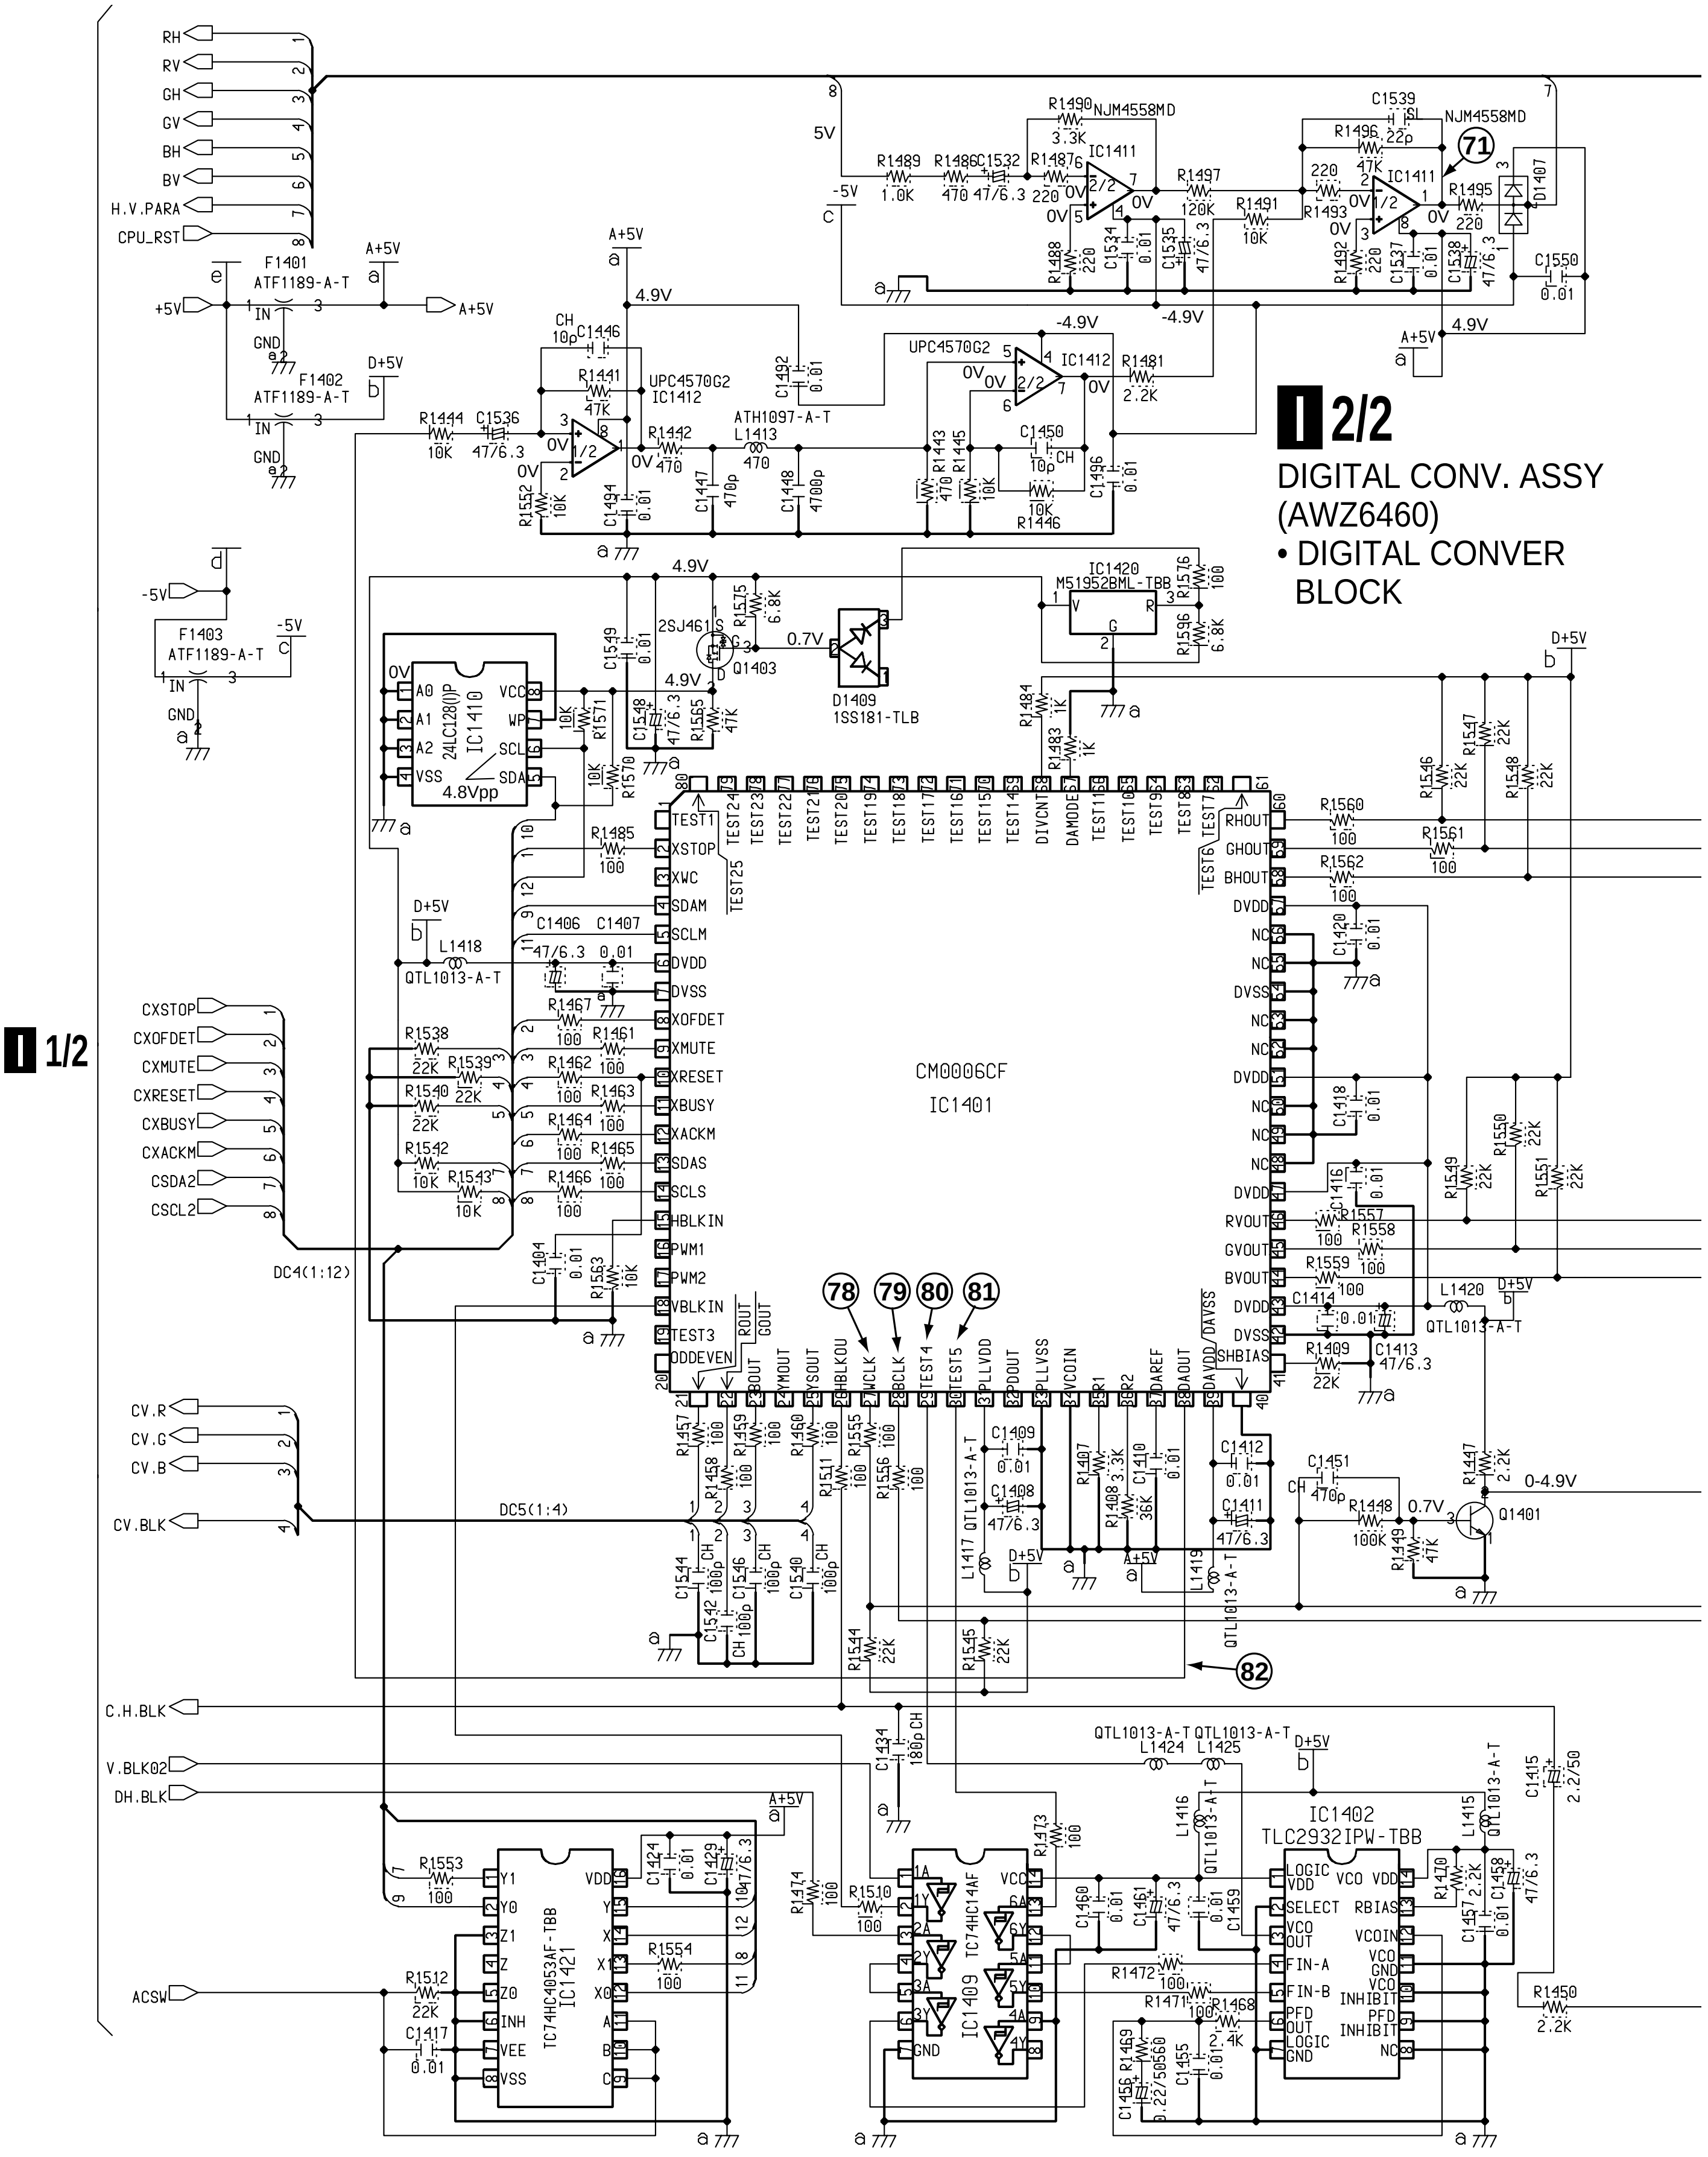
RH
RV
GH
GV
BH
BV
H.V.PARA
CPU_RST
+5V
A+5V
D+5V
-5V
F1401
F1402
F1403
ATF1189-A-T
IN
GND
NJM4558MD
IC1411
UPC4570G2
IC1412
ATH1097-A-T
L1413
IC1420
M51952BML-TBB
D1409
1SS181-TLB
2SJ461
Q1403
IC1410
24LC128()P
4.8Vpp
QTL1013-A-T
L1418
CXSTOP
CXOFDET
CXMUTE
CXRESET
CXBUSY
CXACKM
CSDA2
CSCL2
DC4(1:12)
CM0006CF
IC1401
TEST1
XSTOP
XWC
SDAM
SCLM
DVDD
DVSS
XOFDET
XMUTE
XRESET
XBUSY
XACKM
SDAS
SCLS
HBLKIN
PWM1
PWM2
VBLKIN
TEST3
ODDEVEN
RHOUT
GHOUT
BHOUT
RVOUT
GVOUT
BVOUT
SHBIAS
DIVCNT
DAMODE
DAVDD/DAVSS
71
78
79
80
81
82
CV.R
CV.G
CV.B
CV.BLK
DC5(1:4)
Q1401
0-4.9V
C.H.BLK
V.BLK02
DH.BLK
ACSW
IC1421
TC74HC4053AF-TBB
IC1409
TC74HC14AF
IC1402
TLC2932IPW-TBB
L1424
L1425
L1415
L1416
L1417
L1419
L1420
I 1/2

I 2/2

DIGITAL CONV. ASSY
(AWZ6460)
- DIGITAL CONVER
  BLOCK

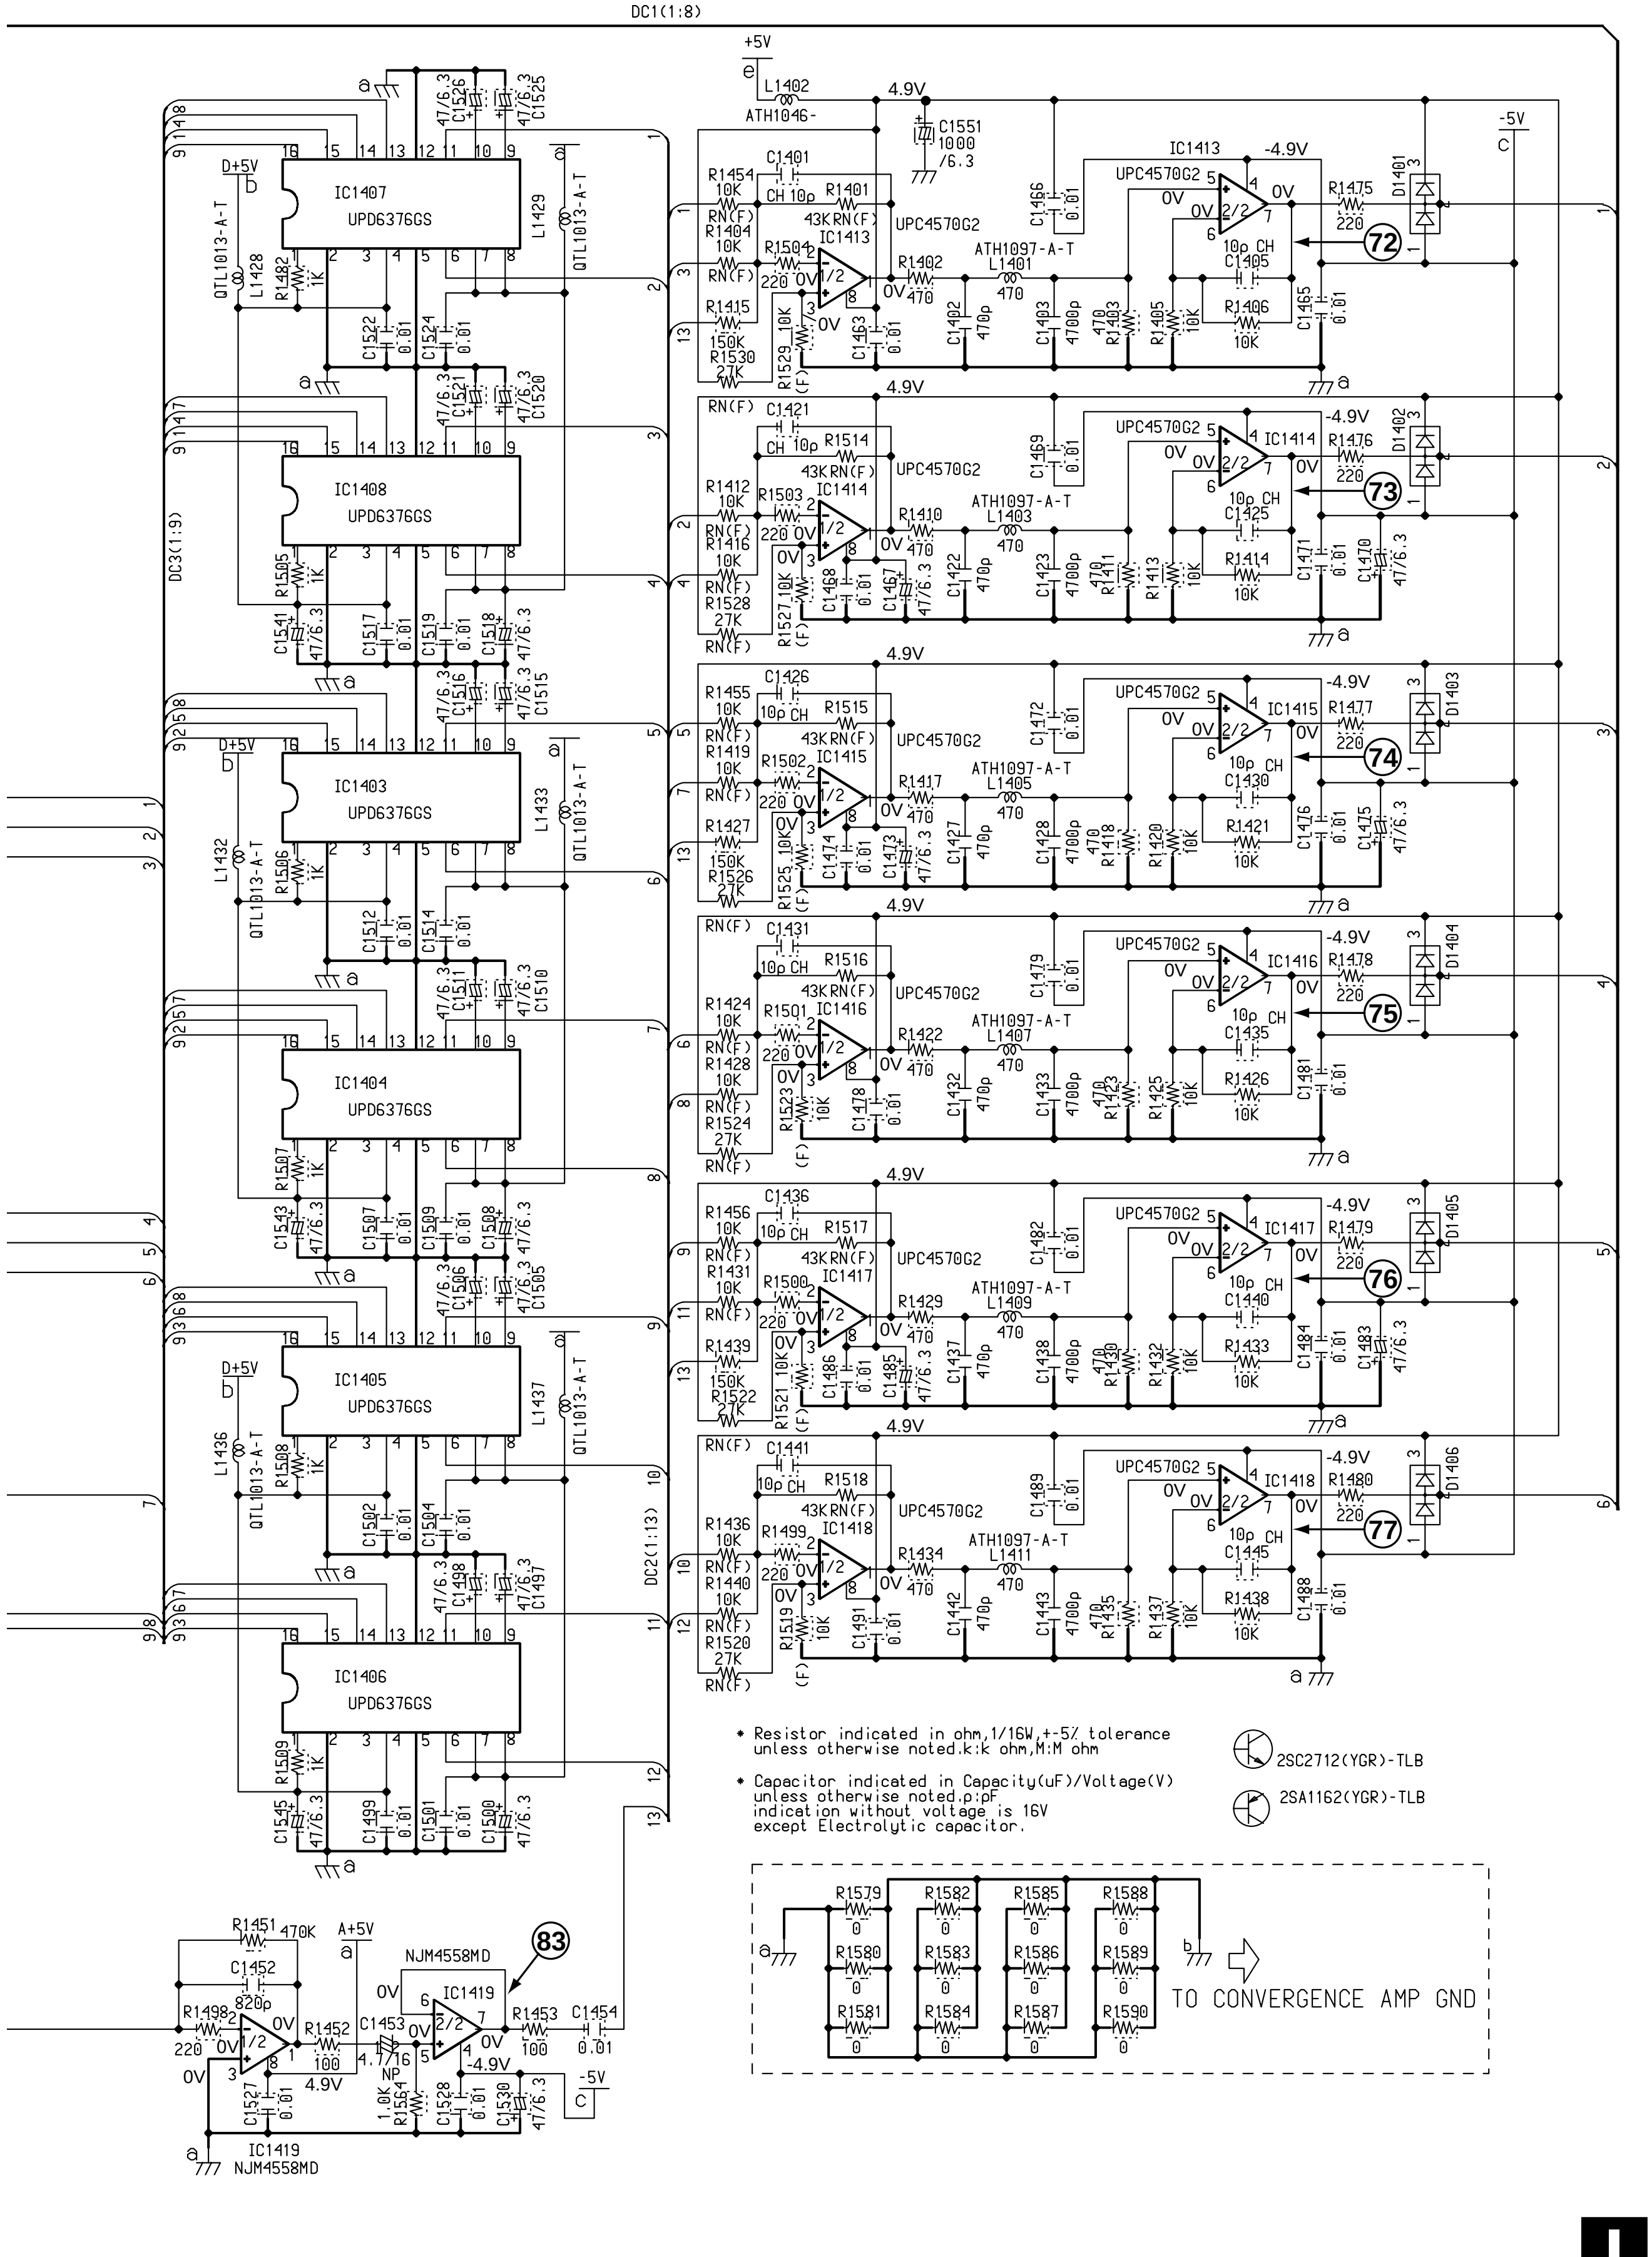
DC1(1:8)
DC3(1:9)
DC2(1:13)
+5V
D+5V
A+5V
-5V
4.9V
-4.9V
IC1407 UPD6376GS
IC1408 UPD6376GS
IC1403 UPD6376GS
IC1404 UPD6376GS
IC1405 UPD6376GS
IC1406 UPD6376GS
IC1413 UPC4570G2
IC1414 UPC4570G2
IC1415 UPC4570G2
IC1416 UPC4570G2
IC1417 UPC4570G2
IC1418 UPC4570G2
IC1419 NJM4558MD
L1402 ATH1046-
C1551 1000 /6.3
ATH1097-A-T
QTL1013-A-T
L1428
L1429
L1432
L1433
L1436
L1437
D1401
D1402
D1403
D1404
D1405
D1406
72
73
74
75
76
77
83
R1579
R1580
R1581
R1582
R1583
R1584
R1585
R1586
R1587
R1588
R1589
R1590
TO CONVERGENCE AMP GND

- Resistor indicated in ohm,1/16W,+-5% tolerance unless otherwise noted.k:k ohm,M:M ohm
- Capacitor indicated in Capacity(uF)/Voltage(V) unless otherwise noted.p:pF indication without voltage is 16V except Electrolytic capacitor.

2SC2712(YGR)-TLB

2SA1162(YGR)-TLB

G DIGITAL CONV. ASSY

Input signal
Video signal : EIA full color-bar
Picture quality : Standard
Range :DC range (Unless otherwise noted)

(65) **IC1652 pin 1 (DH. BLK input)**
V: 1V/div. H: 10µsec/div.

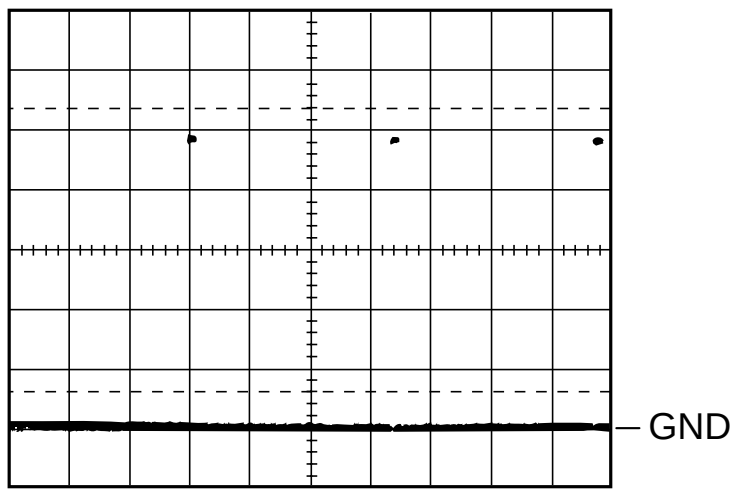

(66) **IC1652 pin 2 (V. BLKØ input)**
V: 1V/div. H: 5msec/div.

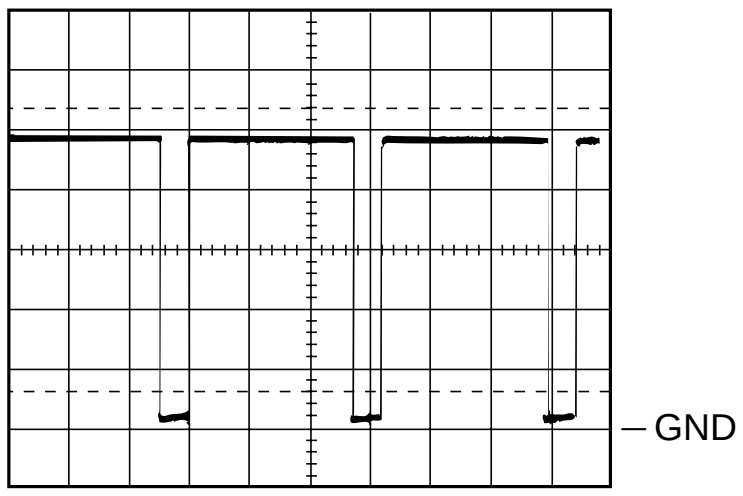

(67) **IC1652 pin 22 (Y input)**
V: 1V/div. H: 20µsec/div.

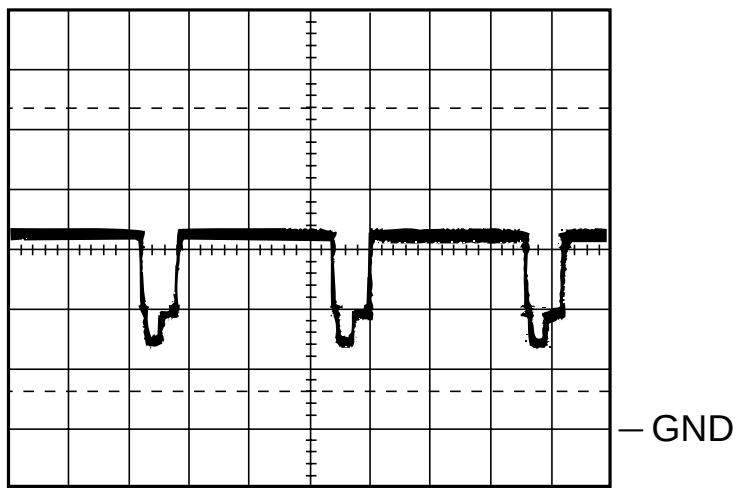

(68) **IC1652 pin 24 (X input)**
V: 1V/div. H: 100µsec/div.

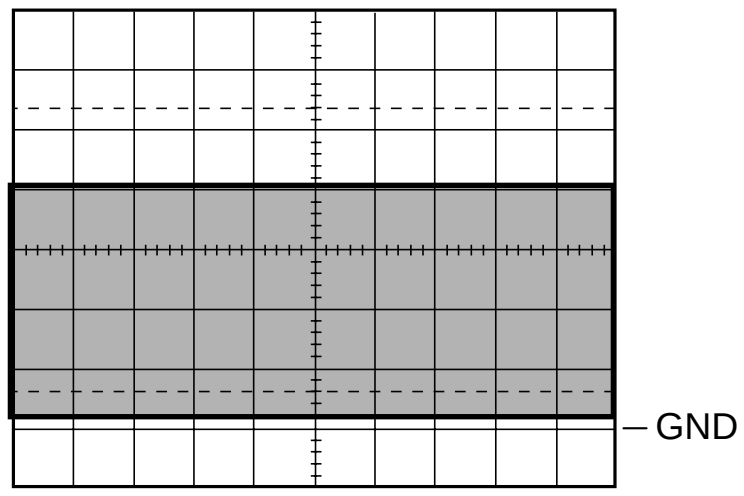

(69) **IC1652 pin 25 (X output)**
V: 1V/div. H: 100µsec/div.

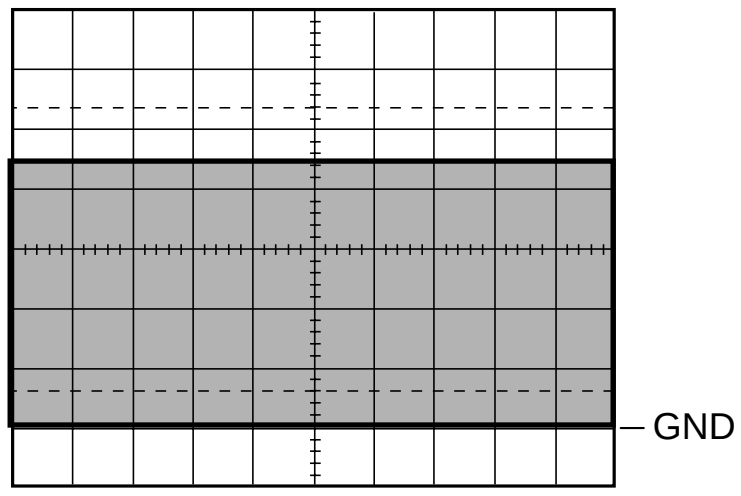

(70) **IC1651 pin 4 (CH. BLK input)**
V: 1V/div. H: 100µsec/div.

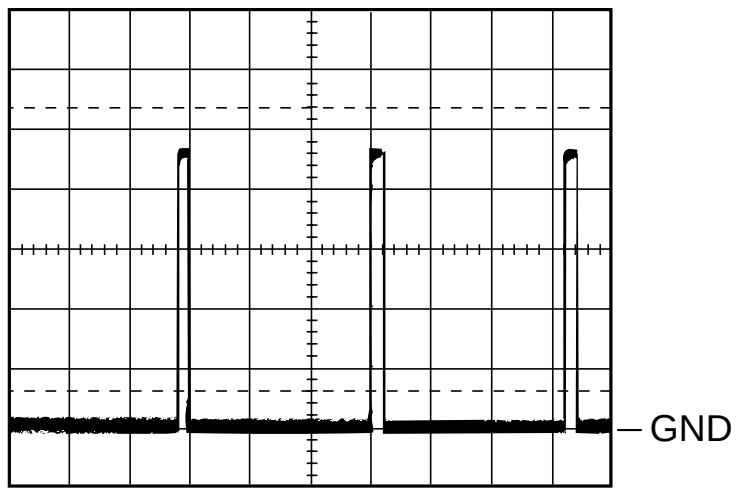

(71) **IC1411 pin 1 (DF output)**
V: 2V/div. H: 5msec/div.

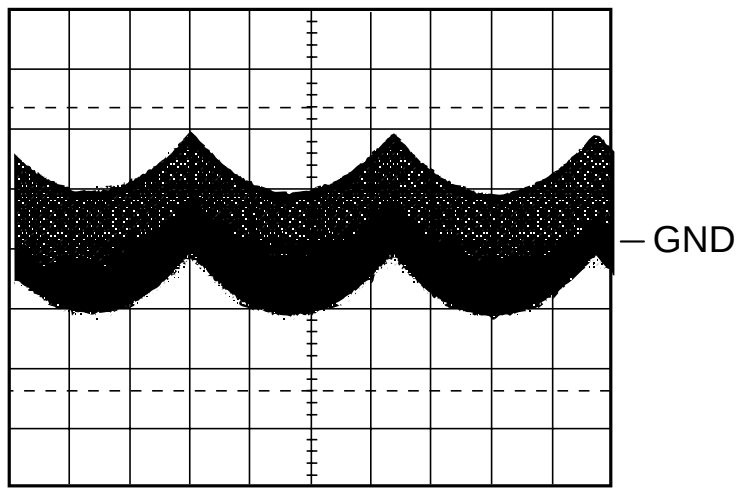

(72) **IC1413 pin 7 (RH output)**
V: 1V/div. H: 5msec/div.

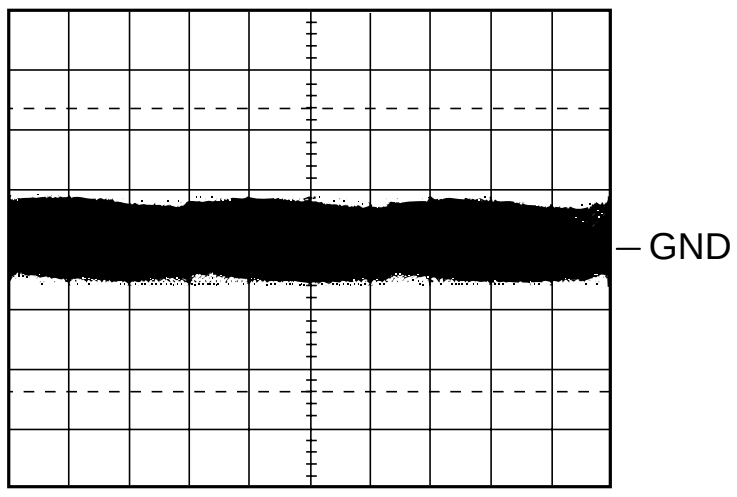

(73) **IC1414 pin 7 (RV output)**
V: 1V/div. H: 5msec/div.

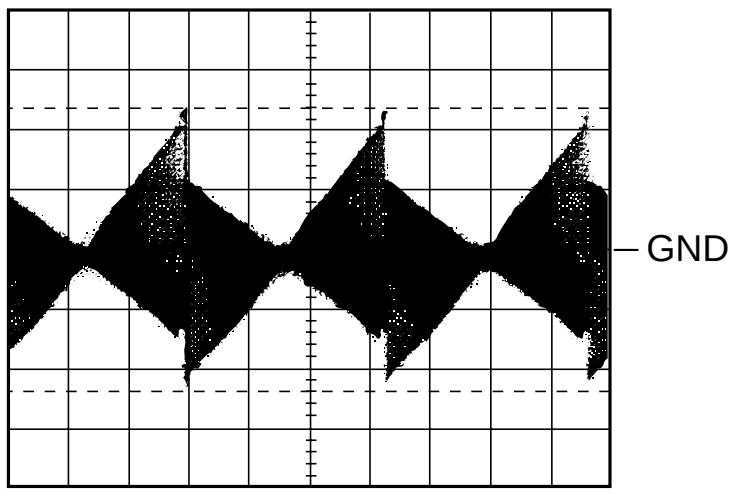

(74) **IC1415 pin 7 (GH output)**
V: 1V/div. H: 5msec/div.

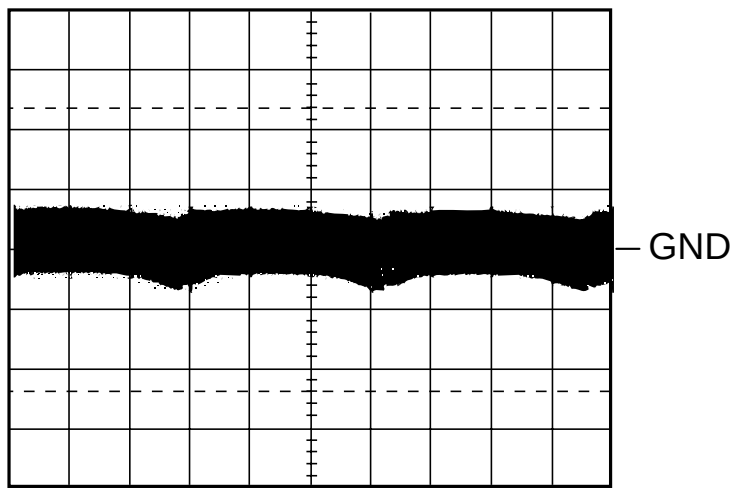

(75) **IC1416 pin 7 (GV output)**
V: 1V/div. H: 5msec/div.

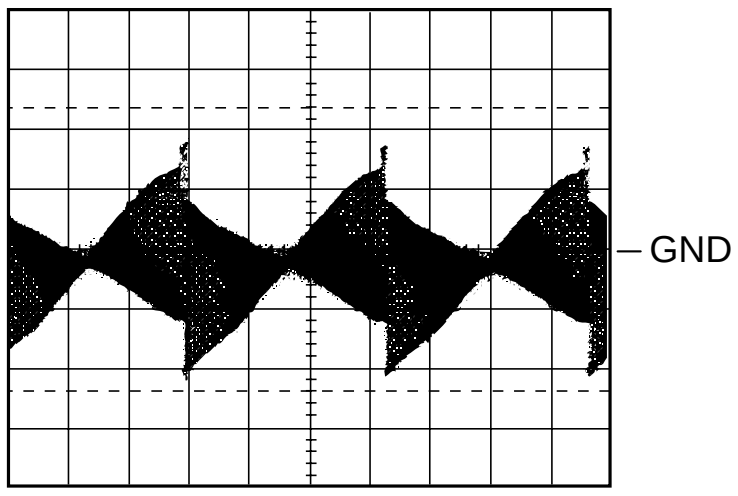

(76) **IC1417 pin 7 (BH output)**
V: 1V/div. H: 5msec/div.

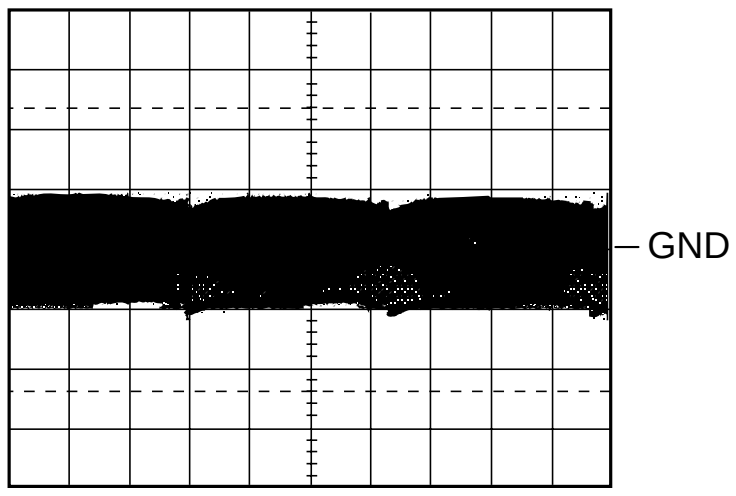

(77) **IC1418 pin 7 (BV output)**
V: 1V/div. H: 5msec/div.

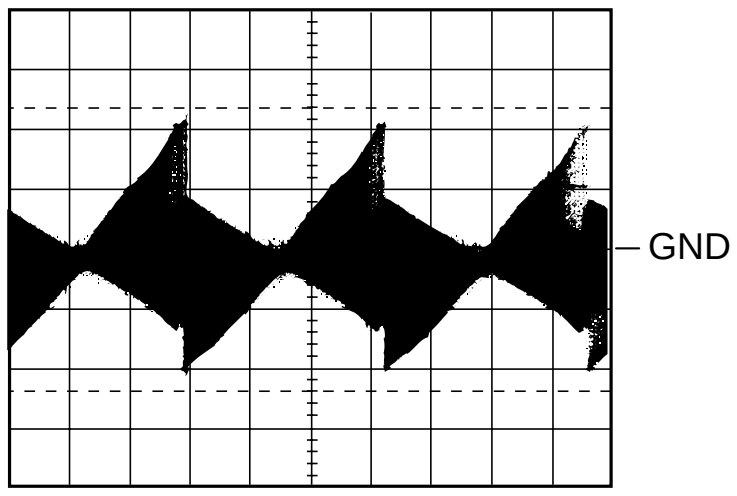

(78) **IC1401 pin 27 (WCLK for D/A)**
V: 1V/div. H: 1µsec/div.

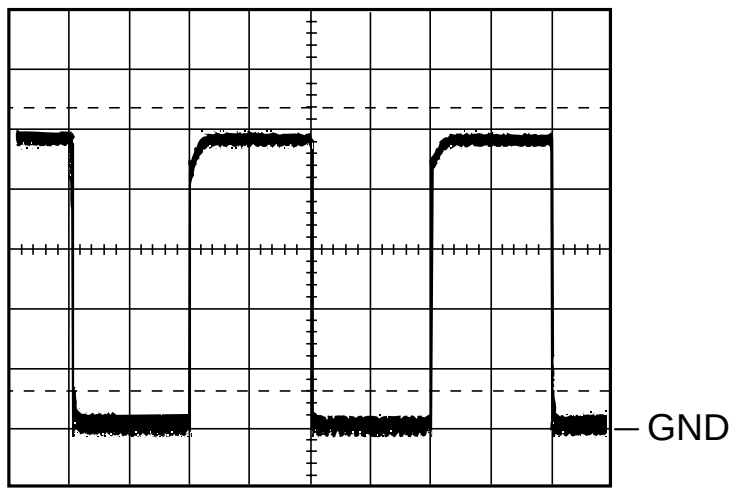

(79) **IC1401 pin 28 (BCLK for D/A)**
V: 1V/div. H: 1µsec/div.

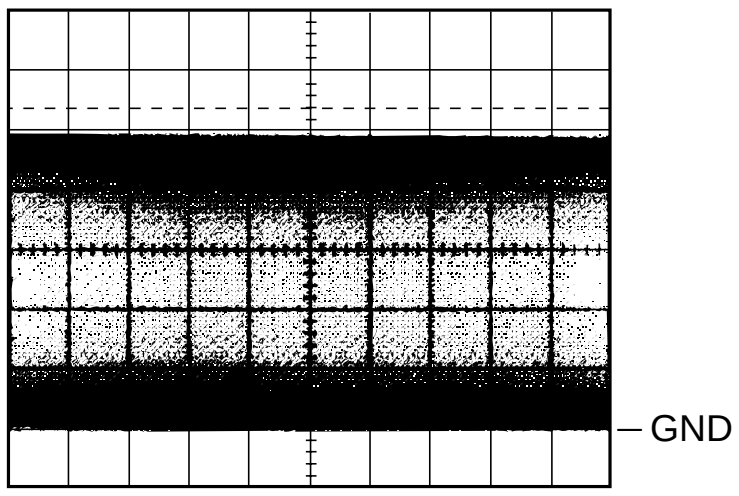

I 2/2 DIGITAL CONV. ASSY (2/2)

(80) **IC1401 pin 29 (PLL CLK (35MHz))**
V: 1V/div. H: 1µsec/div.

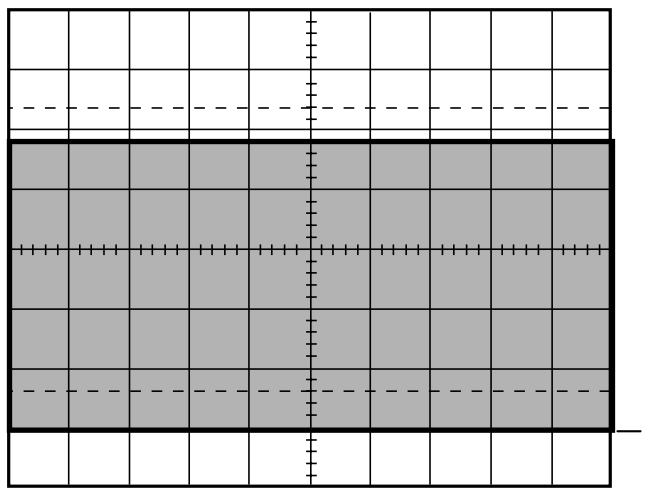

(81) **IC1401 pin 30**
(Output after PLL division)
V: 1V/div. H: 1µsec/div.

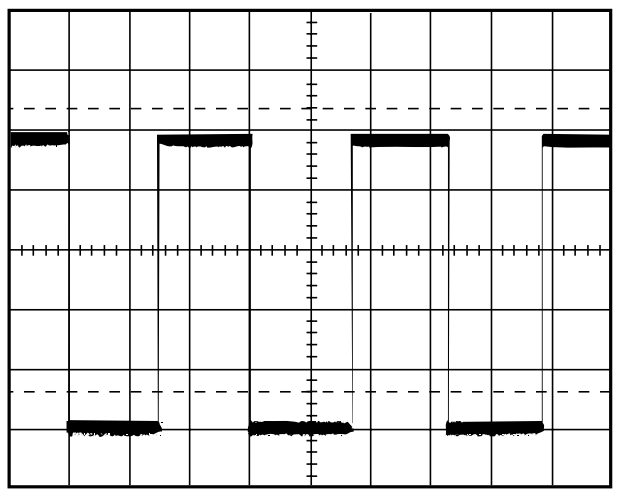

(82) **IC1401 pin 38 (DF output)**
V: 0.5V/div. H: 5msec/div.

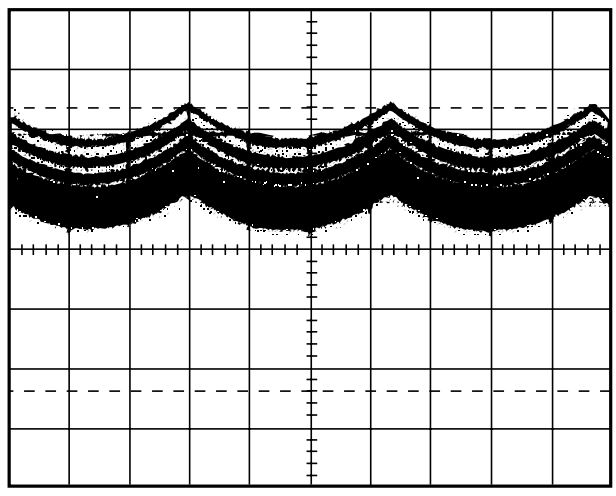

(83) **IC1419 pin 7 (For H pulse cancel)**
V: 1V/div. H: 10µsec/div.

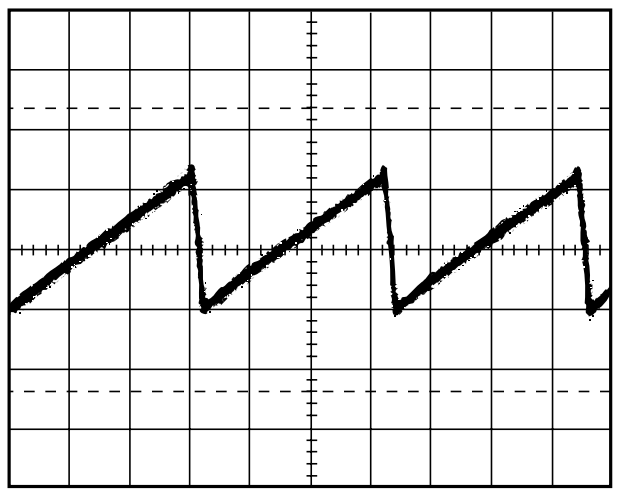

IC1401 (CM0006CF)

Pin No.	Voltage (V)	Pin No.	Voltage (V)	Pin No.	Voltage (V)	Pin No.	Voltage (V)
1	4.9	21	0	41	1.2	61	4.9
2	4.85	22	0	42	0	62	4.9
3	0	23	0	43	4.9	63	4.9
4	4.8Vpp	24	0	44	4.9Vpp	64	4.9
5	4.8Vpp	25	0	45	4.9Vpp	65	4.9
6	4.9	26	4.6Vpp	46	4.9Vpp	66	4.9
7	0	27	4.8Vpp	47	4.9	67	0
8	4.85	28	4.8Vpp	48	0	68	4.8
9	4.8	29	4.8Vpp	49	0	69	4.9
10	4.8	30	4.8Vpp	50	0	70	4.9
11	4.8Vpp	31	4.9	51	4.9	71	4.9
12	4.8Vpp	32	0	52	0	72	4.9
13	4.8Vpp	33	0	53	0	73	4.9
14	4.8Vpp	34	0	54	0	74	4.9
15	0	35	1.2	55	0	75	4.9
16	2.4	36	0	56	0	76	4.9
17	2.4	37	3.2	57	4.9	77	4.9
18	4.9Vpp	38	1Vpp	58	4.9Vpp	78	4.9
19	4.9	39	4.9	59	4.9Vpp	79	4.9
20	4.9	40	0	60	4.9Vpp	80	4.9

IC1421
(TC74HC4053AF)

Pin No.	Voltage (V)
1	4.8Vpp
2	4.8Vpp
3	0
4	0
5	0
6	0
7	0
8	0
9	0
10	0
11	0
12	4.8Vpp
13	4.8Vpp
14	4.8Vpp
15	4.8Vpp
16	4.9

IC1403,IC1405,
IC1407
(UPD6376GS)

Pin No.	Voltage (V)
1	4.85
2	0
3	0
4	4.9
5	0
6	1.6
7	4.9
8	4.9
9	2.1
10	2.1
11	1.6
12	0
13	2.4
14	2.1
15	2.2
16	2.1

IC1409
(TC74HC14AF)

Pin No.	Voltage (V)
1	4.8Vpp
2	4.8Vpp
3	4.8Vpp
4	4.9Vpp
5	4.9Vpp
6	4.9Vpp
7	0
8	0
9	0
10	4.9Vpp
11	4.9Vpp
12	4.9Vpp
13	4.9Vpp
14	4.9

IC1402
(TLC2932IPW)

Pin No.	Voltage (V)
1	4.9
2	0
3	4.8Vpp
4	4.9Vpp
5	4.9Vpp
6	1.8
7	0
8	0
9	0
10	0
11	0
12	1.8
13	3.6
14	4.9

3.29 CONV. AMP ASSY (1/2)

K 1/2

CONV. AMP ASSY
(AWZ6649)
- CONVER AMP BLOCK

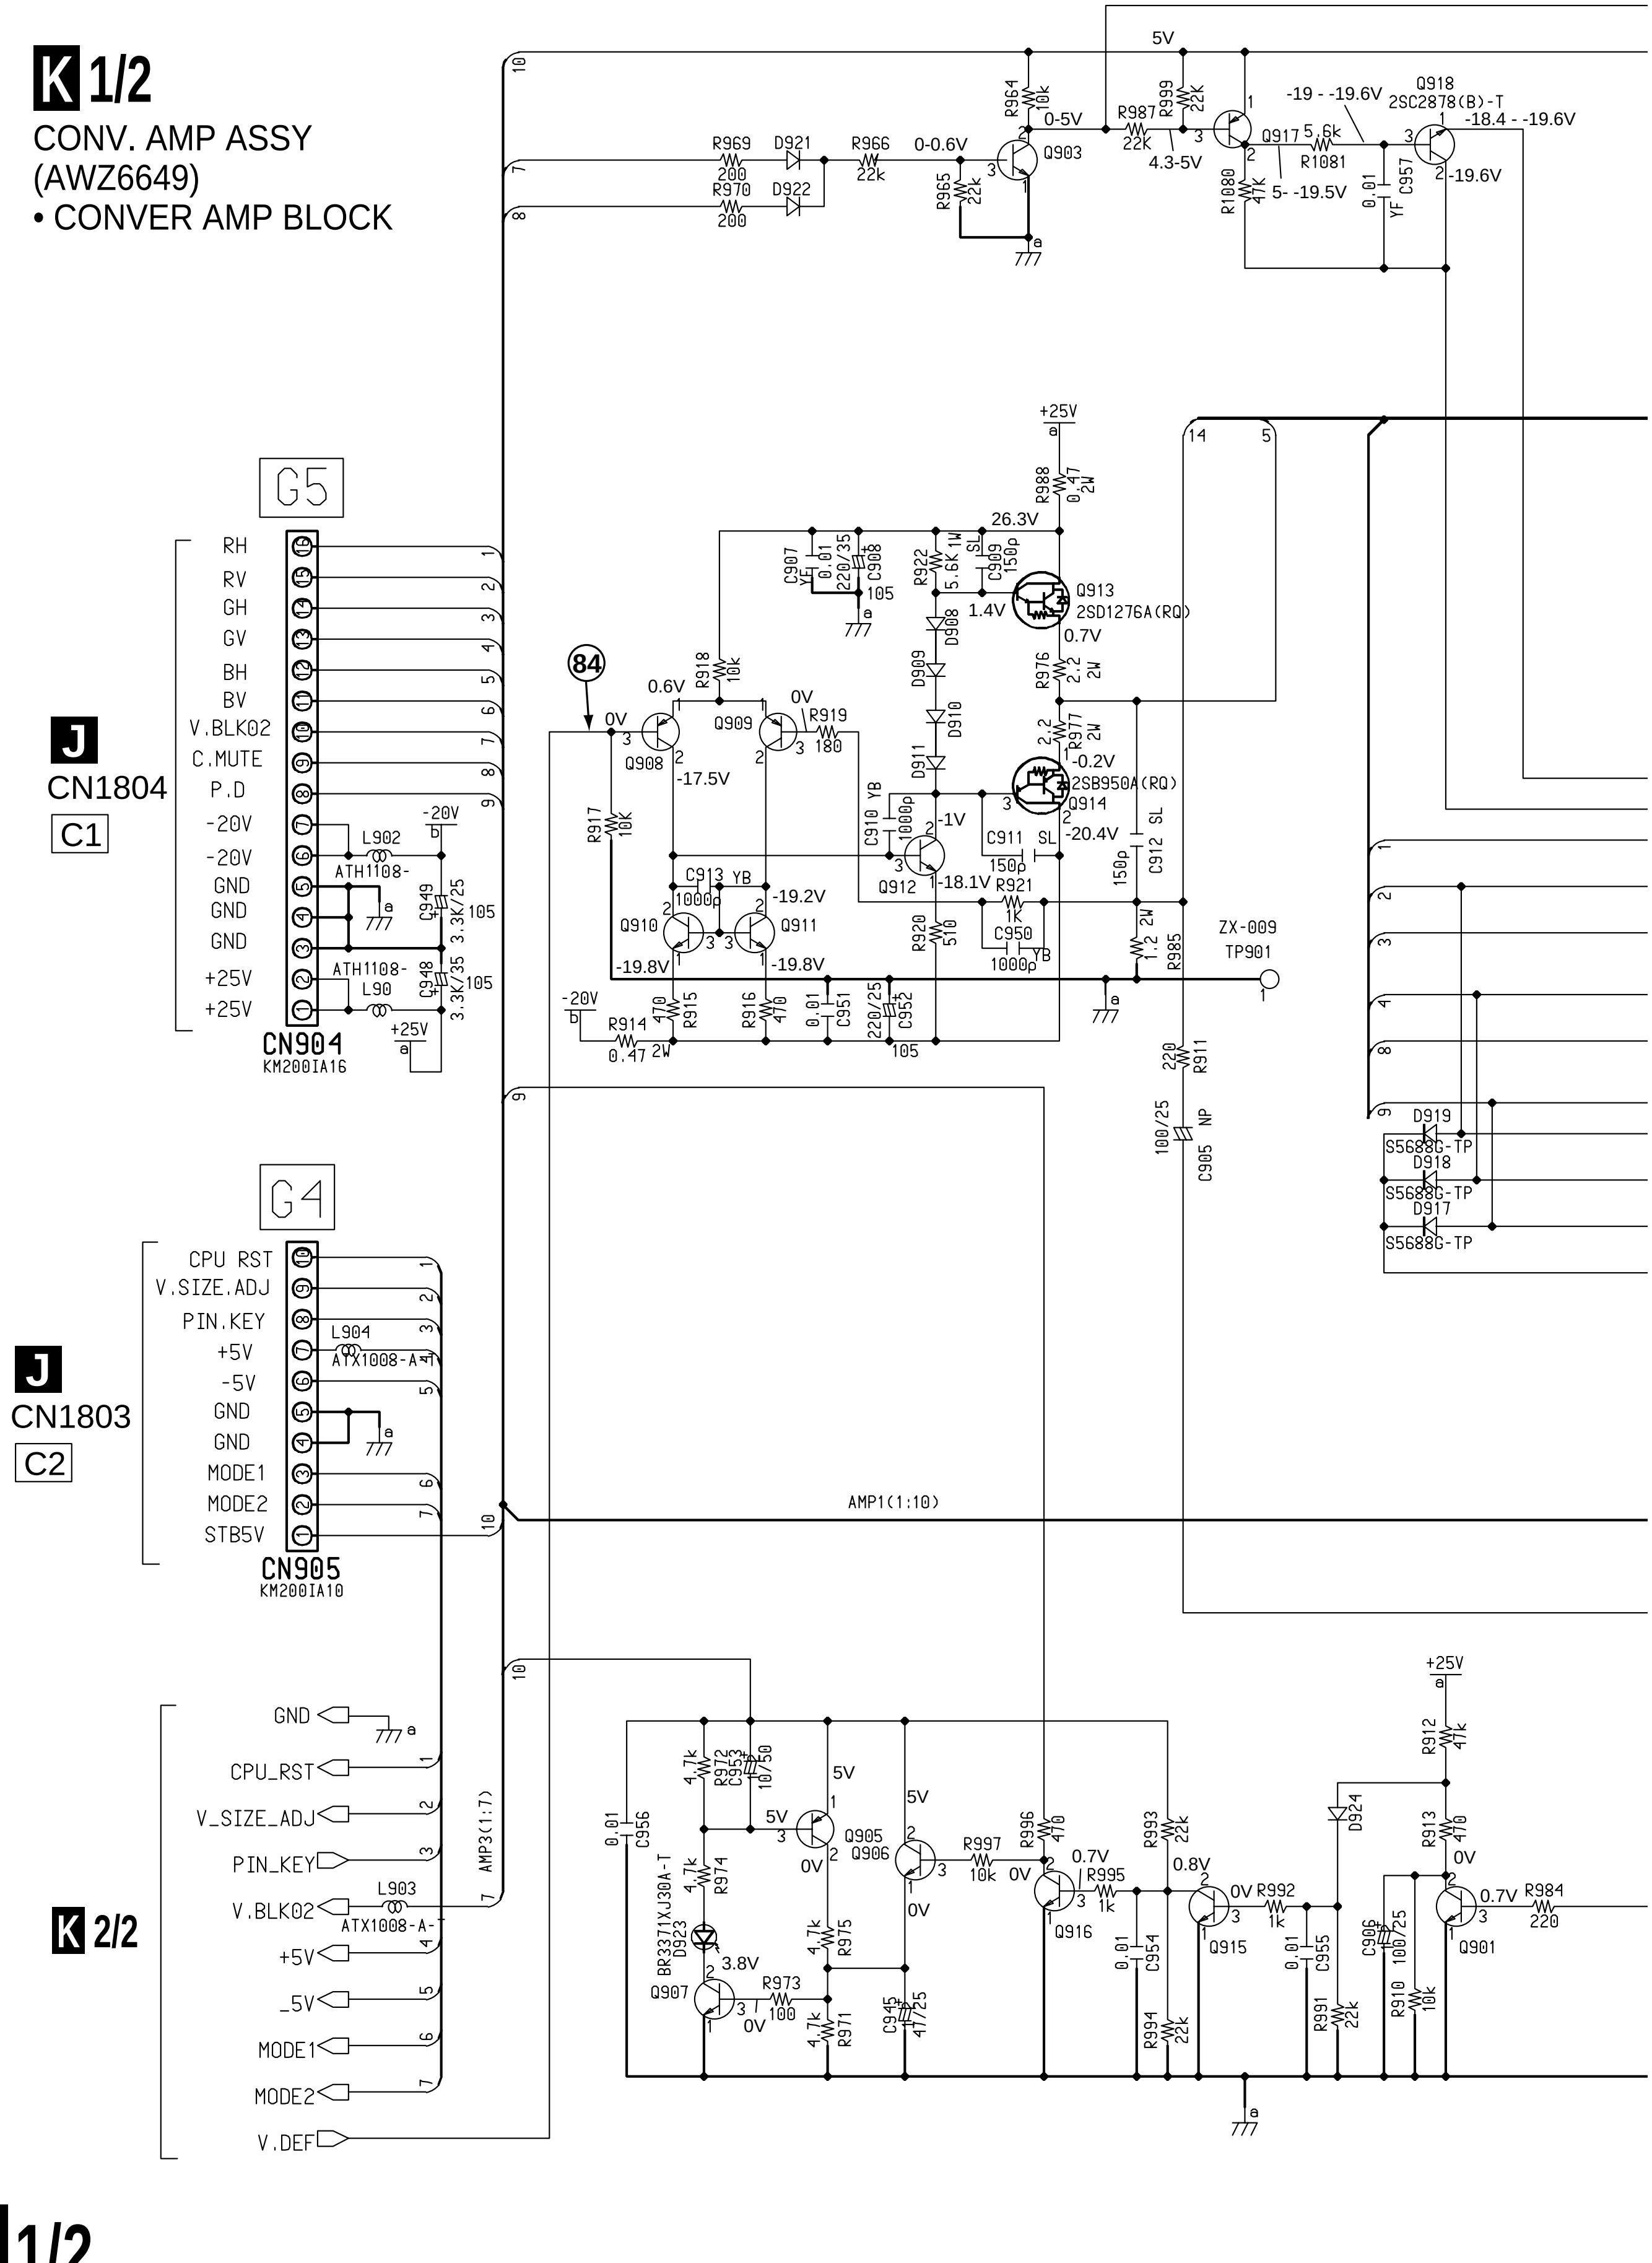
G5
J
CN1804
C1
RH
RV
GH
GV
BH
BV
V.BLK02
C.MUTE
P.D
-20V
-20V
GND
GND
GND
+25V
+25V
CN904
KM200IA16
L902
ATH1108-
C949
3.3K/25
105
ATH1108-
L90
C948
3.3K/35
105
+25V
-20V
G4
J
CN1803
C2
CPU RST
V.SIZE.ADJ
PIN.KEY
+5V
-5V
GND
GND
MODE1
MODE2
STB5V
CN905
KM200IA10
L904
ATX1008-A
AMP1(1:10)
AMP3(1:7)
GND
CPU_RST
V_SIZE_ADJ
PIN_KEY
V.BLK02
L903
ATX1008-A-
+5V
_5V
MODE1
MODE2
V.DEF
K 2/2
R969 200
D921
R970 200
D922
R966 22k
0-0.6V
R964 10k
0-5V
R965 22k
Q903
5V
R987 22k
R999 22k
4.3-5V
Q917
R1080 47K
5- -19.5V
-19 - -19.6V
5.6k R1081
0.01 C957 YF
Q918 2SC2878(B)-T
-18.4 - -19.6V
-19.6V
+25V
R988 0.47 2W
26.3V
C907 YF 0.01
220/35 C908 105
R922 5.6K 1W
C909 SL 150p
Q913 2SD1276A(RQ)
1.4V
D908
0.7V
D909
R976 2.2 2W
D910
R977 2.2 2W
-0.2V
D911
Q914 2SB950A(RQ)
-20.4V
84
0V
0.6V
R918 10k
Q908
Q909
0V
R919 180
-17.5V
R917 10k
C910 YB 1000p
-1V
Q912
-18.1V
C911 150p
SL
R921 1K
C950 1000p YB
C912 SL 150p
R985 1.2 2W
ZX-009 TP901
C913 YB 1000p
-19.2V
Q910
Q911
-19.8V
-19.8V
R920 510
-20V
R914 0.47 2W
R915 470
R916 470
C951 0.01
C952 220/25 105
R911 220
C905 100/25 NP
14
5
D919 S5688G-TP
D918 S5688G-TP
D917 S5688G-TP
C956 0.01
R972 4.7k
C953 10/50
5V
Q905
Q906
5V
0V
R974 4.7k
D923 BR3371XJ30A-T
3.8V
Q907
R973 100
0V
R975 4.7k
R971 4.7k
C945 47/25
0V
R997 10k
0V
R996 470
0.7V
R995 1k
Q916
R993 22k
0.8V
C954 0.01
R994 22k
0V R992 1k
Q915
D924
C955 0.01
R991 22k
+25V
R912 47k
R913 470
0V
C906 100/25
R910 10k
Q901
0.7V R984 220

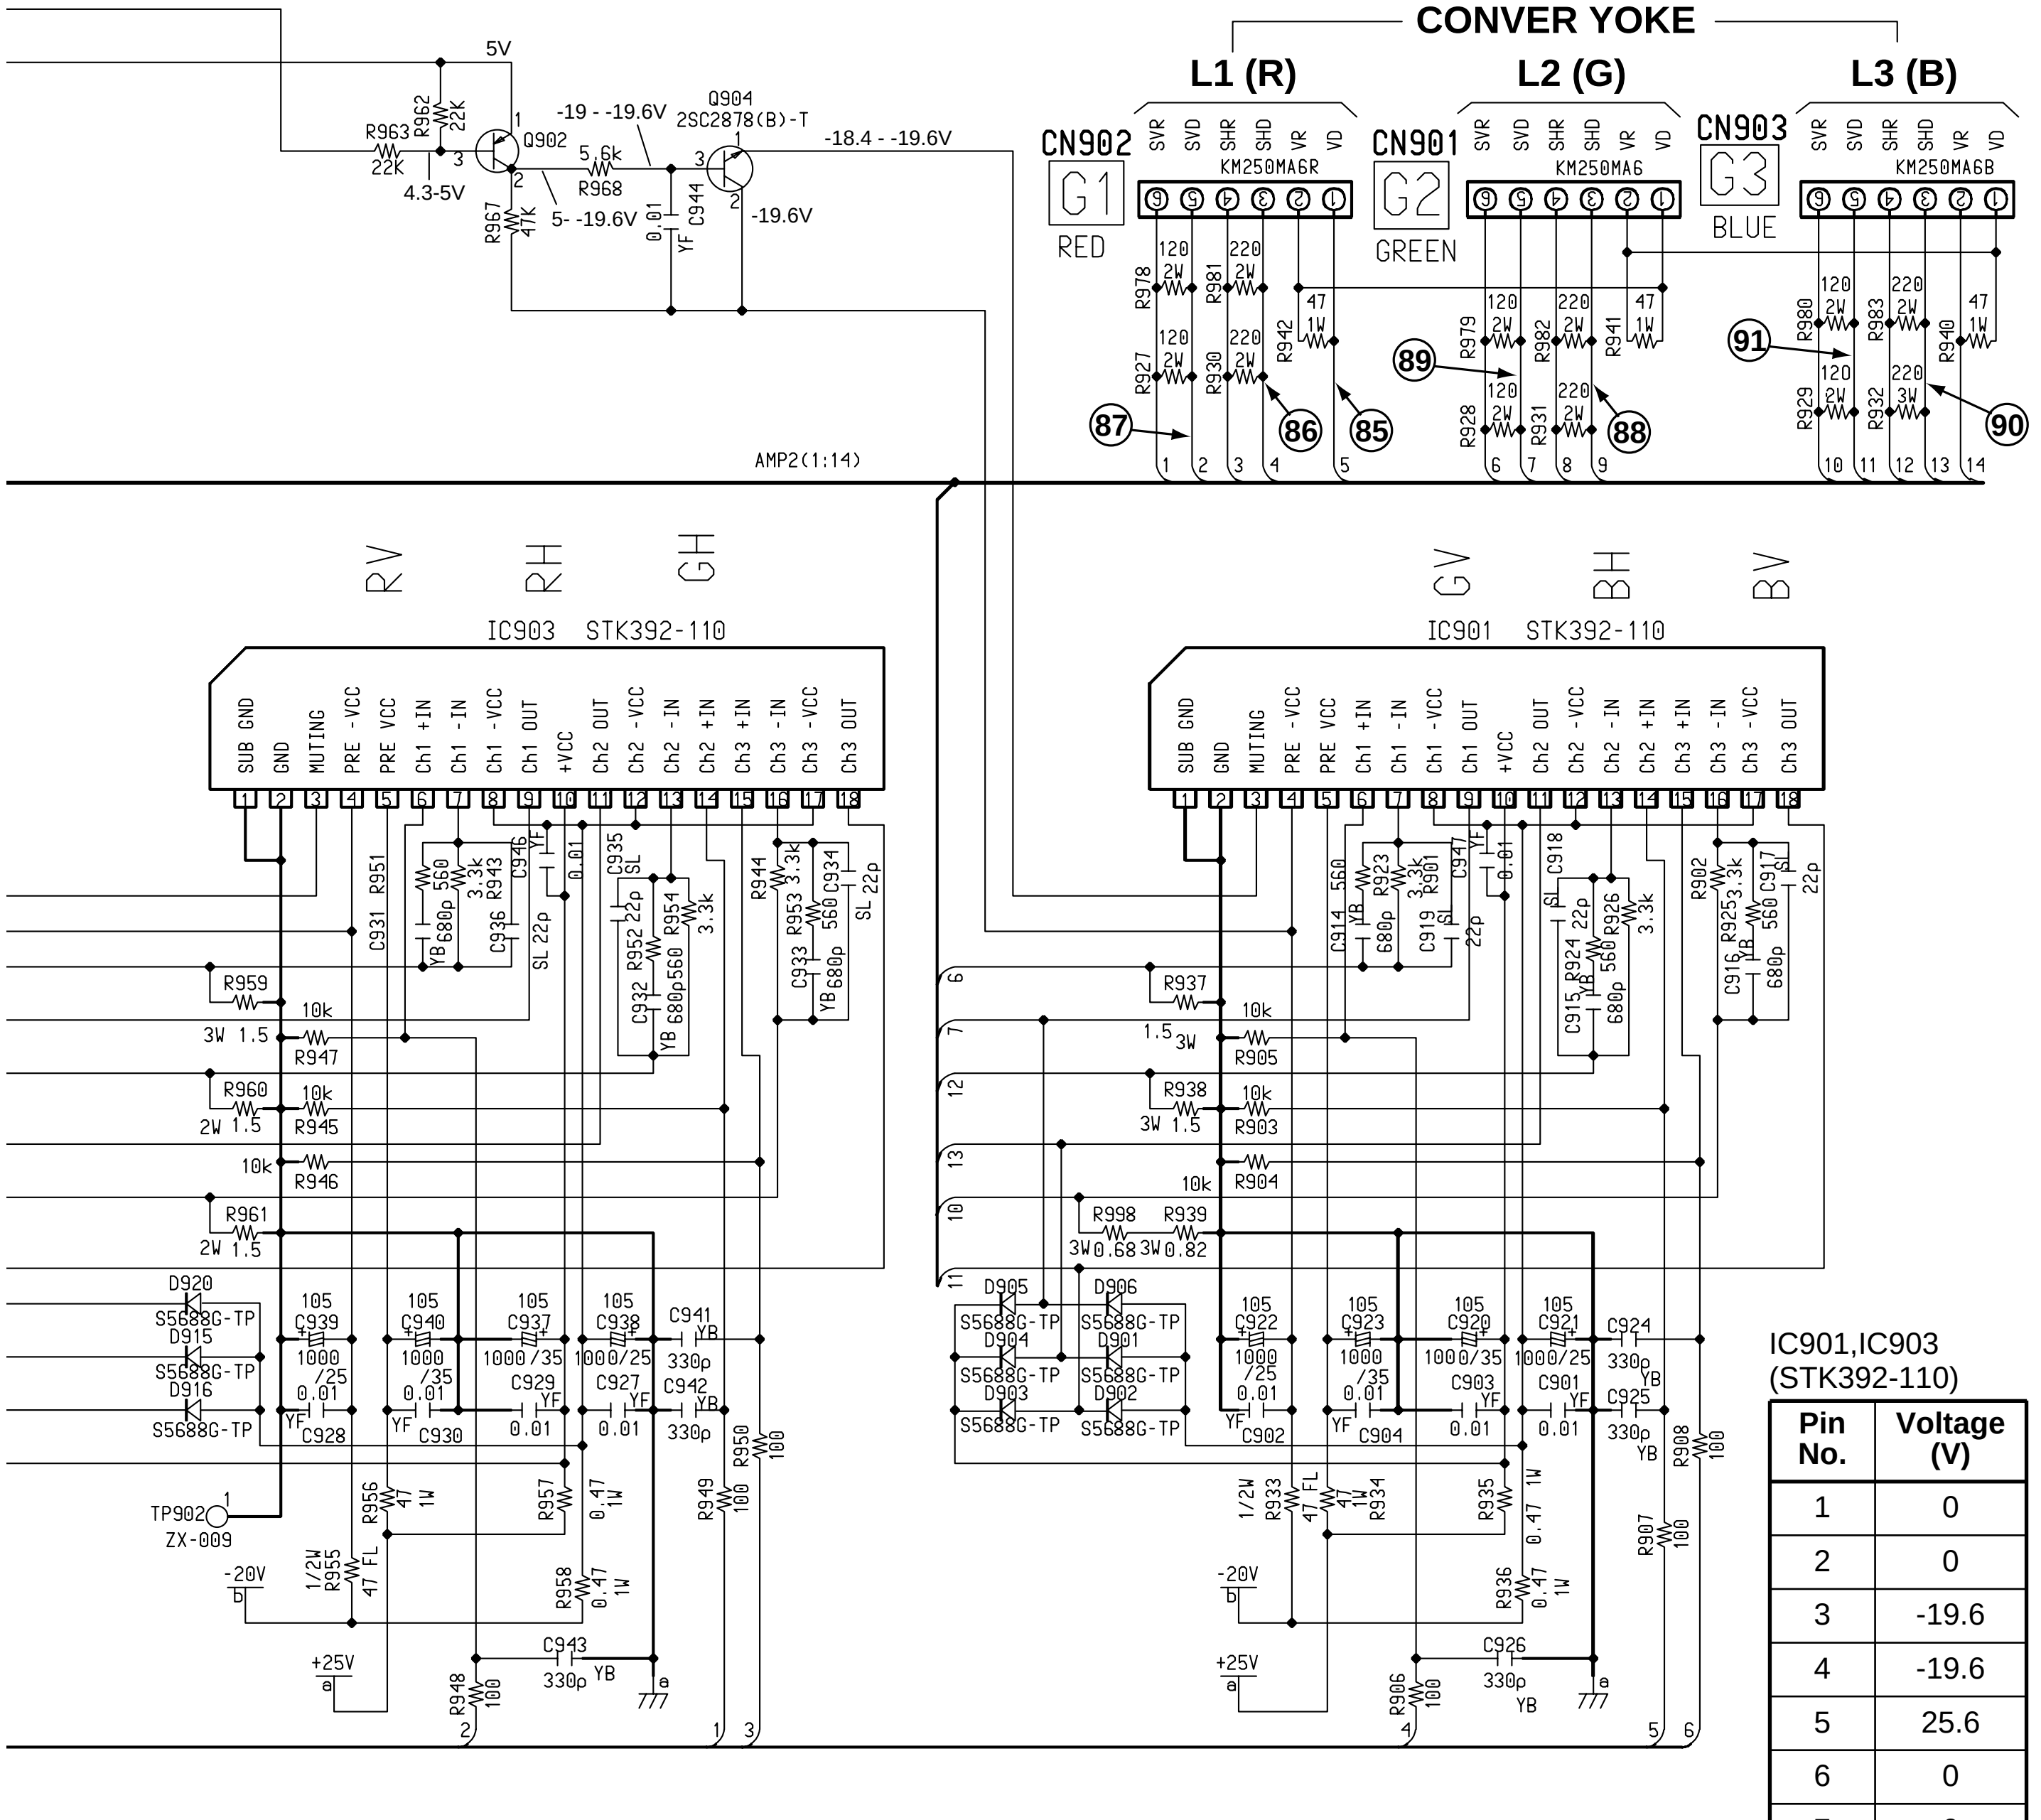
CONVER YOKE
L1 (R)
L2 (G)
L3 (B)
CN902
G1
RED
CN901
G2
GREEN
CN903
G3
BLUE
SVR SVD SHR SHD VR VD
KM250MA6R
KM250MA6
KM250MA6B
5V
R962 22K
R963 22K
4.3-5V
Q902
-19 - -19.6V
5.6k R968
5- -19.6V
R967 47K
0.01 C944 YF
Q904 2SC2878(B)-T
-18.4 - -19.6V
-19.6V
R978 120 2W
R927 120 2W
R981 220 2W
R930 220 2W
R942 47 1W
R979 120 2W
R928 120 2W
R982 220 2W
R931 220 2W
R941 47 1W
R980 120 2W
R929 120 2W
R983 220 2W
R932 220 3W
R940 47 1W
85
86
87
88
89
90
91
AMP2(1:14)
RV
RH
GH
GV
BH
BV
IC903 STK392-110
IC901 STK392-110
SUB GND
GND
MUTING
PRE -VCC
PRE VCC
Ch1 +IN
Ch1 -IN
Ch1 -VCC
Ch1 OUT
+VCC
Ch2 OUT
Ch2 -VCC
Ch2 -IN
Ch2 +IN
Ch3 +IN
Ch3 -IN
Ch3 -VCC
Ch3 OUT
R959
10k
3W 1.5
R947
R960
2W 1.5
R945
10k
R946
R961
2W 1.5
D920
S5688G-TP
D915
S5688G-TP
D916
S5688G-TP
C939 105 1000/25
C940 105 1000/35
C937 105 1000/35
C938 105 1000/25
C941 YB 330p
C942 330p
C928 0.01 YF
C930 0.01 YF
C929 0.01 YF
C927 0.01 YF
R956 47 1W
R955 1/2W 47 FL
R957 0.47 1W
R958 0.47 1W
R949 100
R950 100
C943 330p YB
R948 100
TP902
ZX-009
-20V
+25V
R937
1.5 3W
R905
10k
R938
3W 1.5
R903
R904
R998 3W 0.68
R939 3W 0.82
D905
S5688G-TP
D904
S5688G-TP
D903
S5688G-TP
D906
S5688G-TP
D901
S5688G-TP
D902
S5688G-TP
C922 105 1000/25
C923 105 1000/35
C920 105 1000/35
C921 105 1000/25
C924 330p YB
C925 330p YB
C902 0.01 YF
C904 0.01 YF
C903 0.01 YF
C901 0.01 YF
R933 1/2W 47 FL
R934 47 1W
R935 0.47 1W
R936 0.47 1W
R908 100
R907 100
C926 330p YB
R906 100
R951
C931
C936
R943 3.3k
560 680p
C946 YF 0.01
C935 SL
C932 22p
R952 560 680p
R954 3.3k
R944 3.3k
R953 3.3k
C934 560
C933 680p
SL 22p
C914 560
R923 3.3k
R901 3.3k
C947 YF 0.01
C919 SL 22p
C918 SL 22p
R924 560
C915 680p
R926 3.3k
R902 3.3k
R925 560
C916 680p
C917 SL 22p

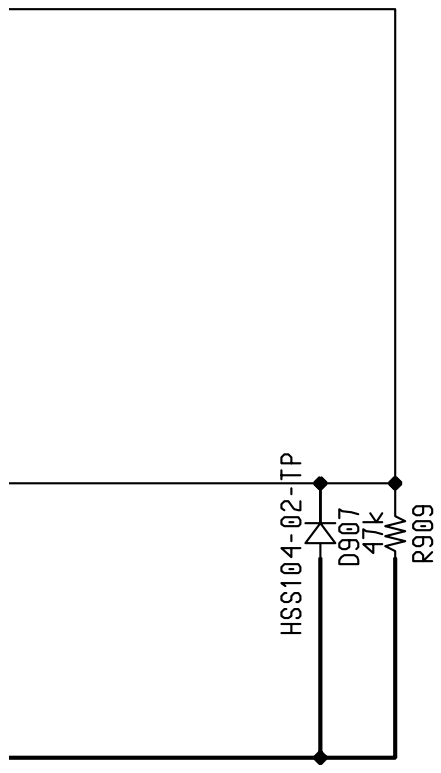
HSS104-02-TP
D907
R909
47k

Notes

1. RESISTERS
(RS):METAL OXIDE FILM RESISTER
(RT):CEMENT RESISTER
(RN):METAL FILM RESISTER
(FL):NON FLAMMABLE RESISTER
THE OTHERS:CARBONFILM RESISTER (1/4 W)
Figures in pharenttheses
show the rated wattage.
Those unspecified ones are of 1/4W.
K:KΩ ,M:MΩ ,Unspecified ones are of Ω

2. CAPACITORS
(HA):Aluminium electrolytic capasitors
p:pF,Unspecified ones are of uF
Capacity/Voltage
Unspecified ones are of 50V

IC901,IC903
(STK392-110)

Pin No.	Voltage (V)
1	0
2	0
3	-19.6
4	-19.6
5	25.6
6	0
7	0
8	-20.3
9	0
10	26.1
11	0
12	-20.3
13	0
14	0
15	0
16	0
17	-20.3
18	0

3.30 CONV. AMP ASSY (2/2)

K 2/2

CONV. AMP ASSY
(AWZ6649)
• V DEF BLOCK

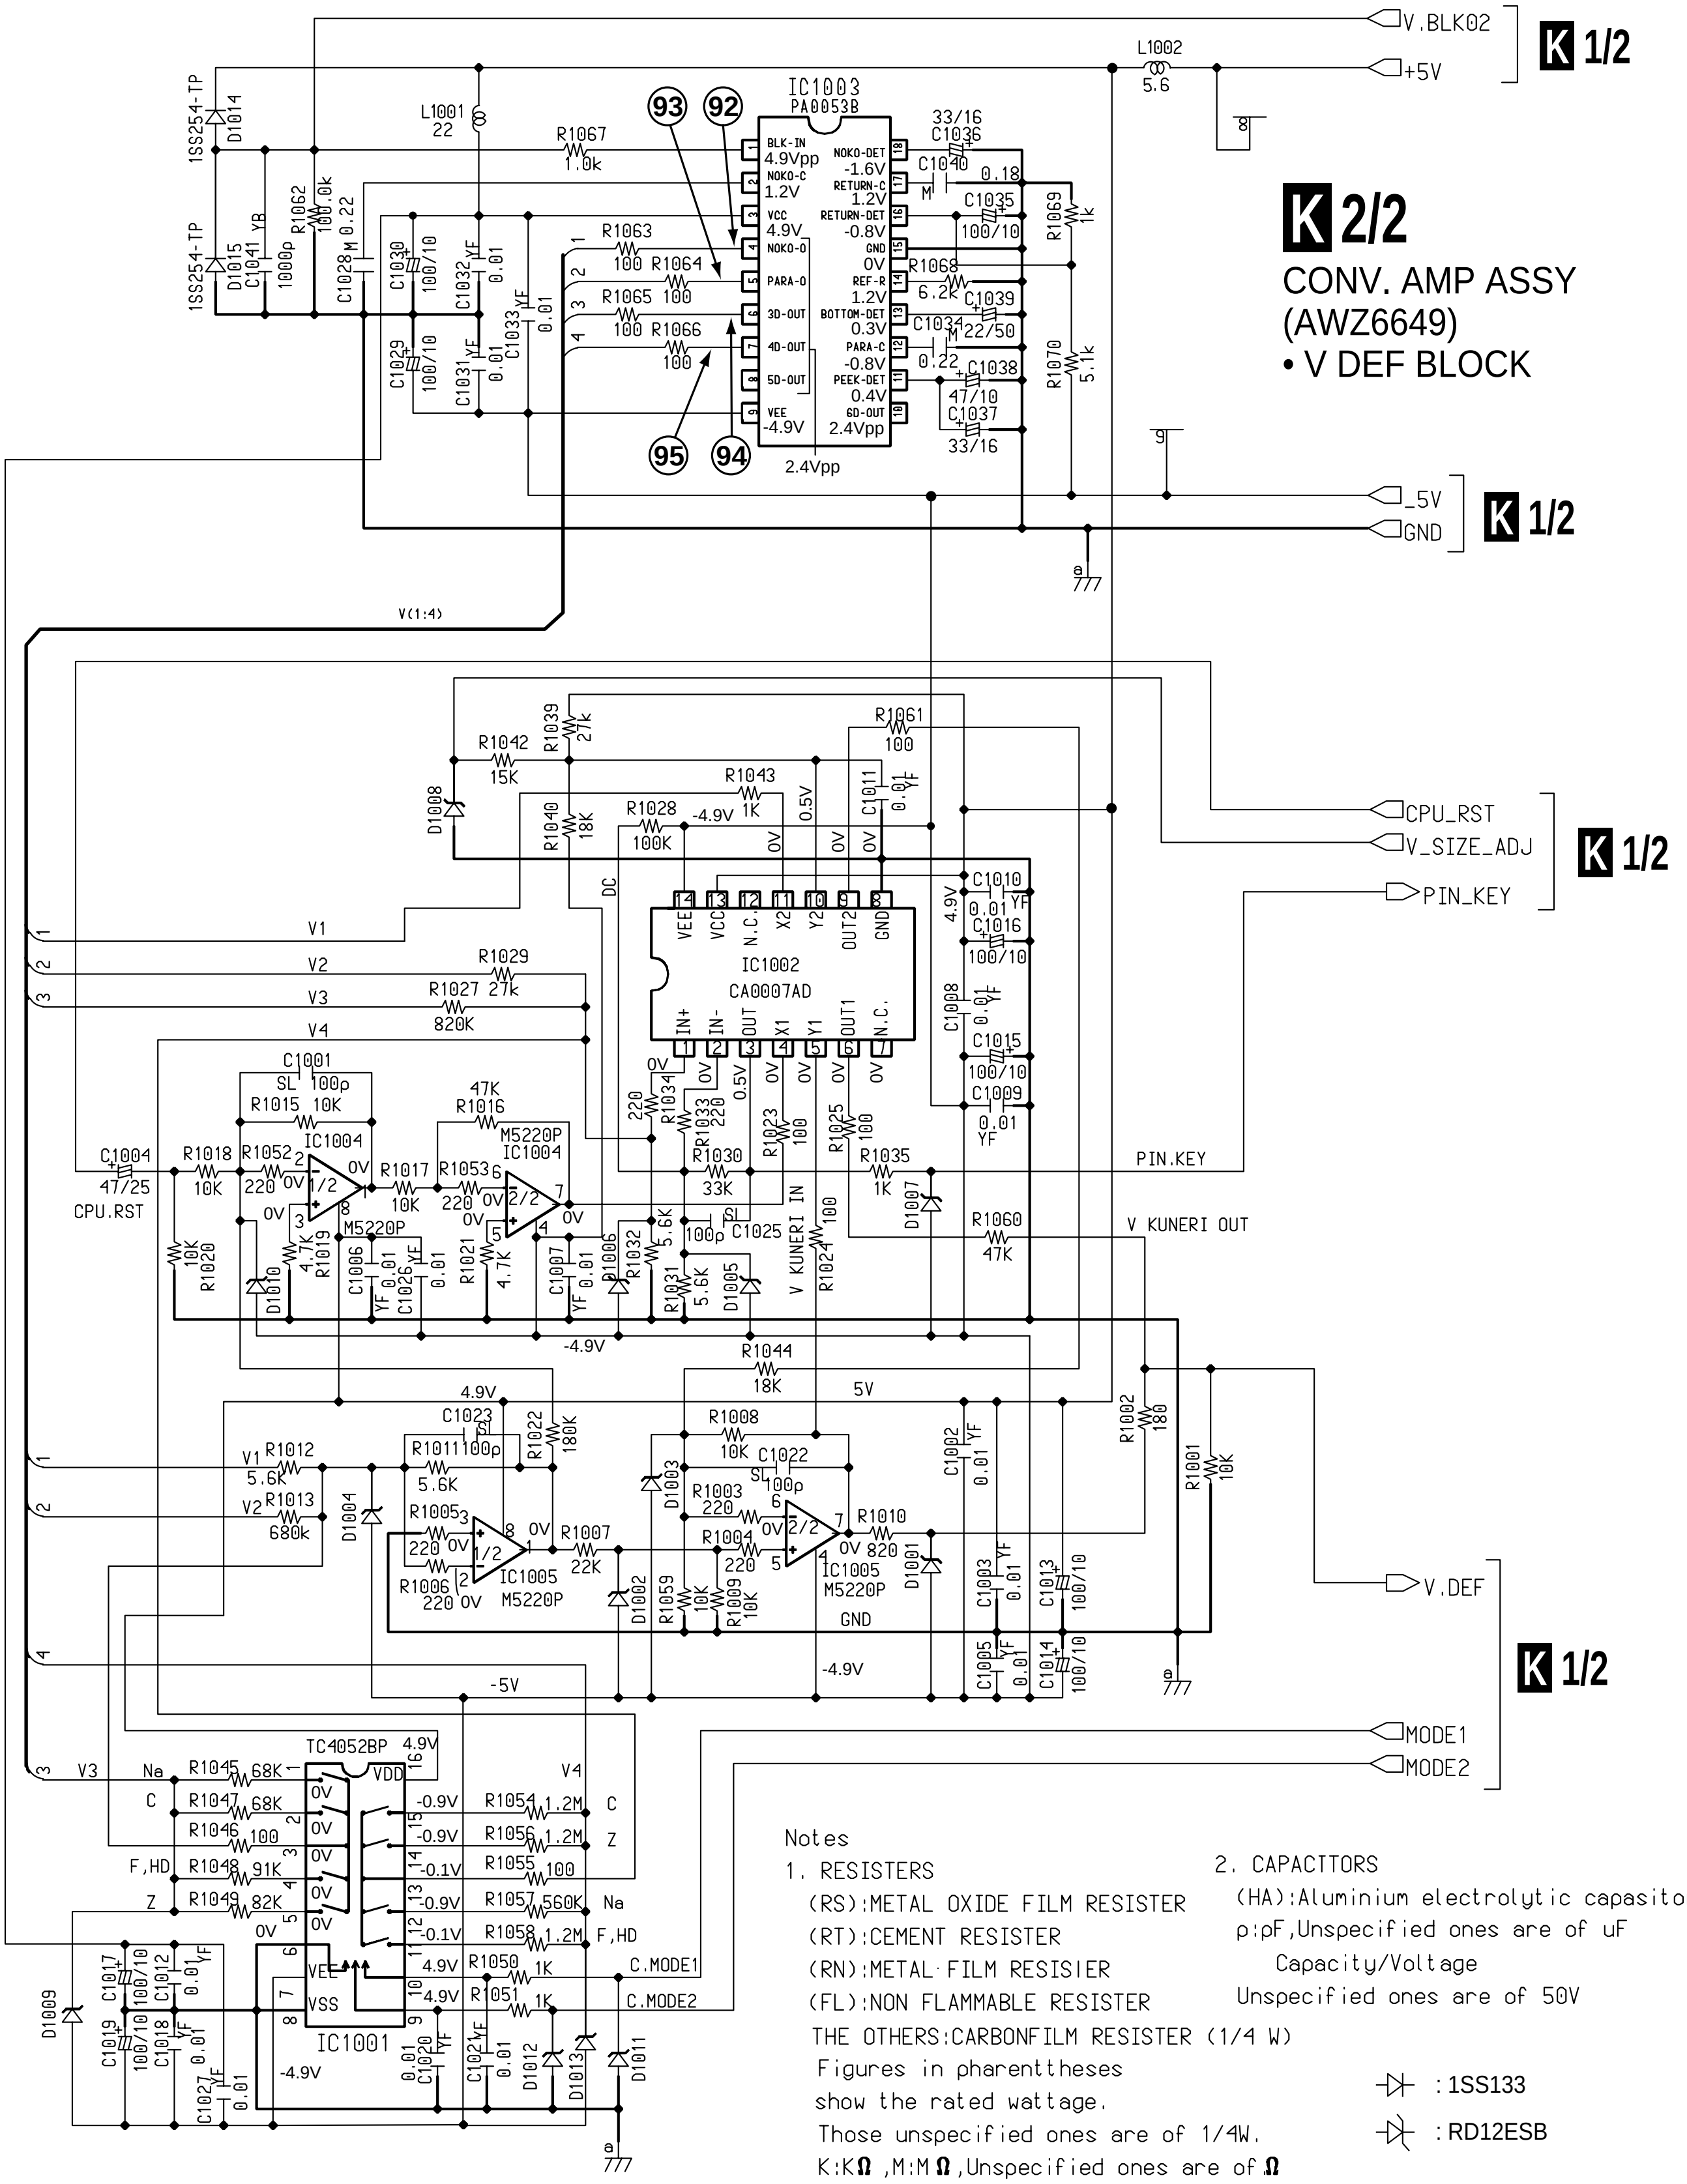

V.BLK02
+5V
K 1/2
L1002 5.6
IC1003 PA0053B
BLK-IN 4.9Vpp
NOKO-C 1.2V
VCC 4.9V
NOKO-O
PARA-O
3D-OUT
4D-OUT
5D-OUT
VEE -4.9V
NOKO-DET -1.6V
RETURN-C 1.2V
RETURN-DET -0.8V
GND 0V
REF-R 1.2V
BOTTOM-DET 0.3V
PARA-C -0.8V
PEEK-DET 0.4V
6D-OUT 2.4Vpp
2.4Vpp
93
92
95
94
L1001 22
R1067 1.0k
R1063 100
R1064 100
R1065 100
R1066 100
1SS254-TP D1014
1SS254-TP D1015
C1041 1000p YB
R1062 100.0k
C1028 0.22 M
C1030 100/10
C1032 0.01 YF
C1029 100/10
C1031 0.01 YF
C1033 0.01 YF
C1036 33/16
C1040 0.18 M
C1035 100/10
R1068 6.2k
C1039 22/50
C1034 0.22 M
C1038 47/10
C1037 33/16
R1069 1k
R1070 5.1k
_5V
GND
V(1:4)
CPU_RST
V_SIZE_ADJ
PIN_KEY
IC1002 CA0007AD
VEE VCC N.C. X2 Y2 OUT2 GND
IN+ IN- OUT X1 Y1 OUT1 N.C.
R1039 27k
R1042 15K
R1061 100
R1043 1K
R1028 100K
R1040 18K
C1011 0.01 YF
D1008
C1010 0.01 YF
C1016 100/10
C1008 0.01 YF
C1015 100/10
C1009 0.01 YF
V1
V2
V3
V4
R1029 27k
R1027 820K
C1001 SL 100p
R1015 10K
IC1004 1/2 M5220P
IC1004 2/2 M5220P
R1016 47K
C1004 47/25
CPU.RST
R1018 10K
R1052 220
R1017 10K
R1053 220
R1020 10K
R1019 4.7K
D1010
C1006 0.01 YF
C1026 0.01 YF
R1021 4.7K
C1007 0.01 YF
D1006
R1032 5.6K
R1031 5.6K
D1005
R1034 220
R1033 220
R1030 33K
C1025 100p SL
R1023 100
R1025 100
R1035 1K
D1007
R1024 100
V KUNERI IN
R1060 47K
V KUNERI OUT
PIN.KEY
-4.9V
R1044 18K
5V
4.9V
C1023 100p
R1011 5.6K
R1022 180K
R1012 5.6K
R1013 680k
D1004
R1005 220
R1006 220
IC1005 1/2 M5220P
R1007 22K
D1002
R1008 10K
C1022 SL 100p
D1003
R1003 220
R1004 220
R1059 10K
R1009 10K
IC1005 2/2 M5220P
R1010 820
D1001
C1002 0.01 YF
C1003 0.01 YF
C1013 100/10
C1005 0.01 YF
C1014 100/10
R1002 180
R1001 10K
V.DEF
GND
-5V
MODE1
MODE2
TC4052BP
IC1001
VDD VEE VSS
R1045 68K
R1047 68K
R1046 100
R1048 91K
R1049 82K
R1054 1.2M
R1056 1.2M
R1055 100
R1057 560K
R1058 1.2M
R1050 1K
R1051 1K
C.MODE1
C.MODE2
Na C F,HD Z
D1009
C1017 100/10
C1012 0.01 YF
C1019 100/10
C1018 0.01 YF
C1027 0.01
C1020 0.01 YF
C1021 0.01 YF
D1012
D1013
D1011

Notes
1. RESISTERS
(RS):METAL OXIDE FILM RESISTER
(RT):CEMENT RESISTER
(RN):METAL FILM RESISIER
(FL):NON FLAMMABLE RESISTER
THE OTHERS:CARBONFILM RESISTER (1/4 W)
Figures in pharentheses
show the rated wattage.
Those unspecified ones are of 1/4W.
K:KΩ ,M:MΩ ,Unspecified ones are of Ω

2. CAPACITORS
(HA):Aluminium electrolytic capasitors
p:pF,Unspecified ones are of uF
Capacity/Voltage
Unspecified ones are of 50V

⊳| : 1SS133
⊳| : RD12ESB

K CONV. AMP ASSY

Input signal
Video signal : EIA full color-bar
Picture quality : Standard
Range :DC range (Unless otherwise noted)

(84) **Q908 Base (V. DEF input)**
V: 0.5V/div. H: 5msec/div.

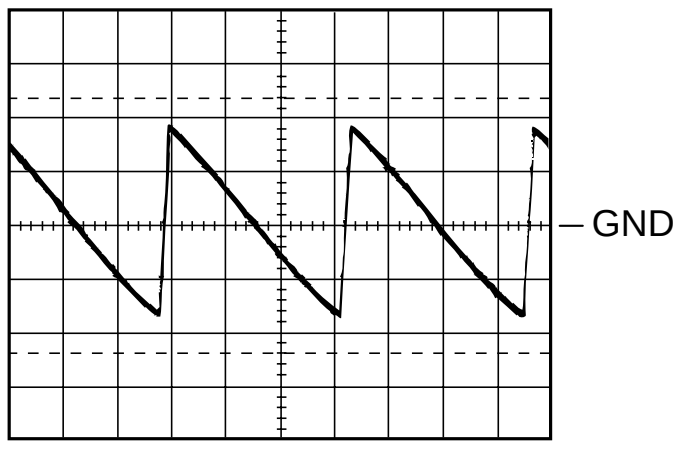

(85) **CN902 pin 1 (V. DEF output)**
V: 5V/div. H: 5msec/div.

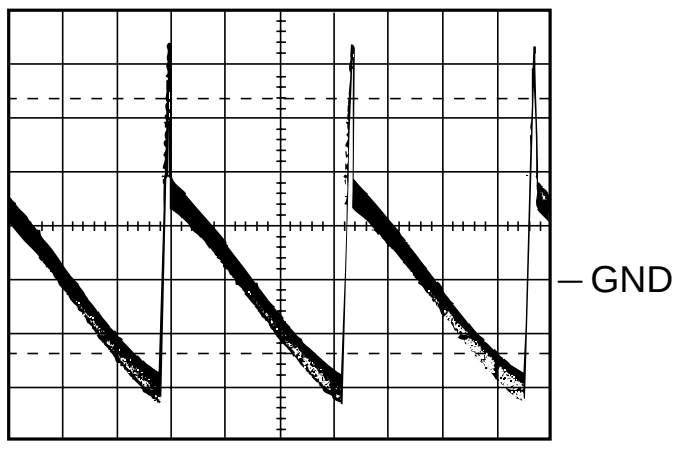

(86) **CN902 pin 3 (RH input)**
V: 5V/div. H: 5msec/div.

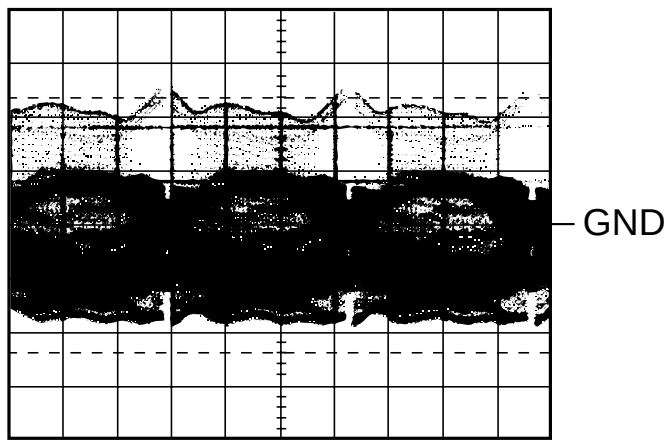

(87) **CN902 pin 5 (RV output)**
V: 5V/div. H: 5msec/div.

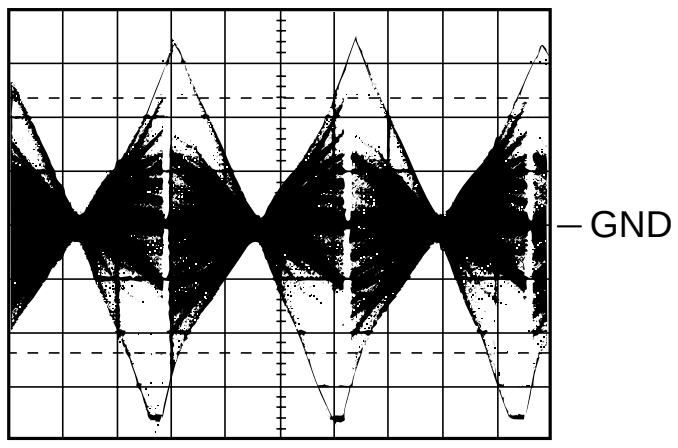

(88) **CN901 pin 3 (GH output)**
V: 5V/div. H: 5msec/div.

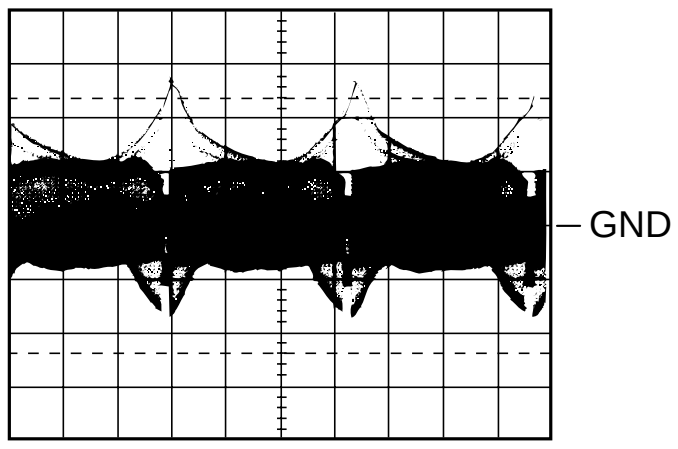

(89) **CN901 pin 5 (GV output)**
V: 5V/div. H: 5msec/div.

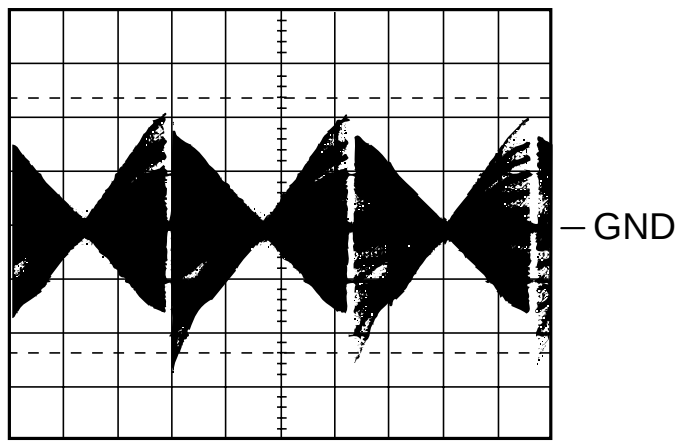

(90) **CN903 pin 3 (BH output)**
V: 5V/div. H: 5msec/div.

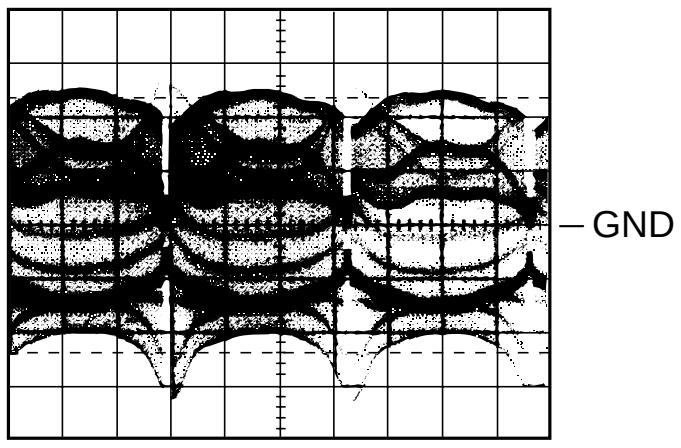

(91) **CN903 pin 5 (BV output)**
V: 5V/div. H: 5msec/div.

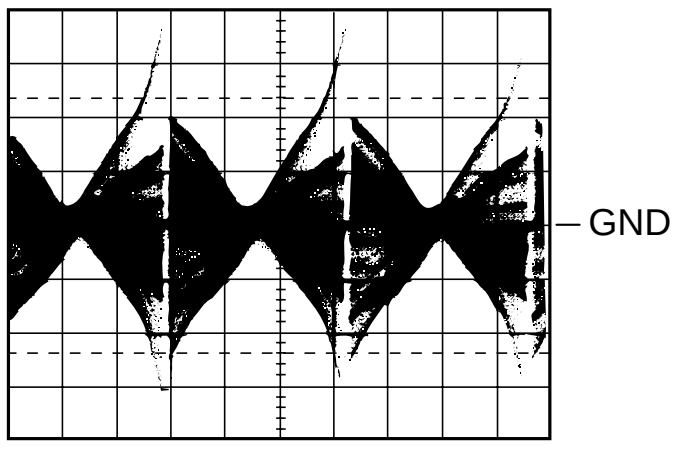

(92) **IC1003 pin 4 (V1 output)**
V: 1V/div. H: 5msec/div.

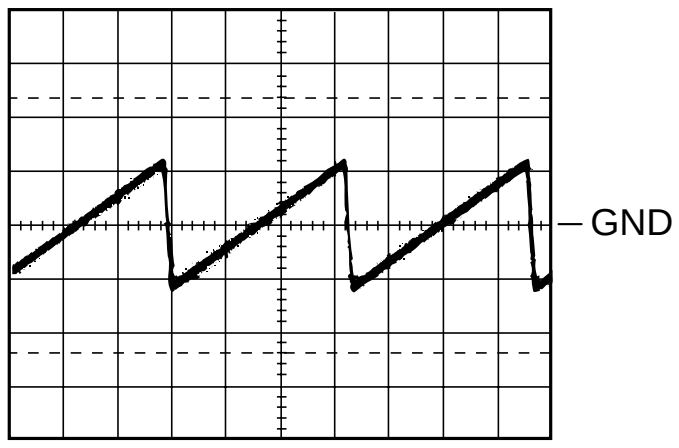

(93) **IC1003 pin 5 (V2 output)**
V: 1V/div. H: 5msec/div.

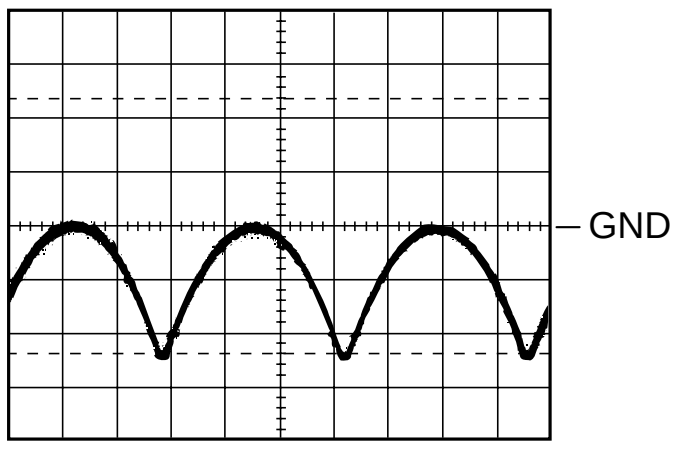

(94) **IC1003 pin 6 (V3 output)**
V: 1V/div. H: 5msec/div.

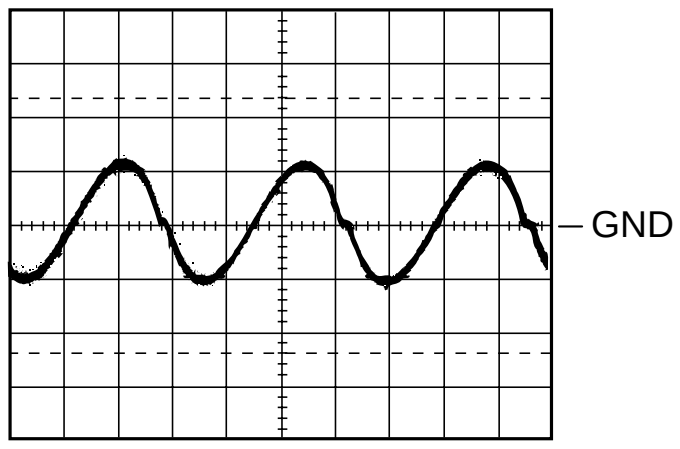

(95) **IC1003 pin 7 (V4 output)**
V: 1V/div. H: 5msec/div.

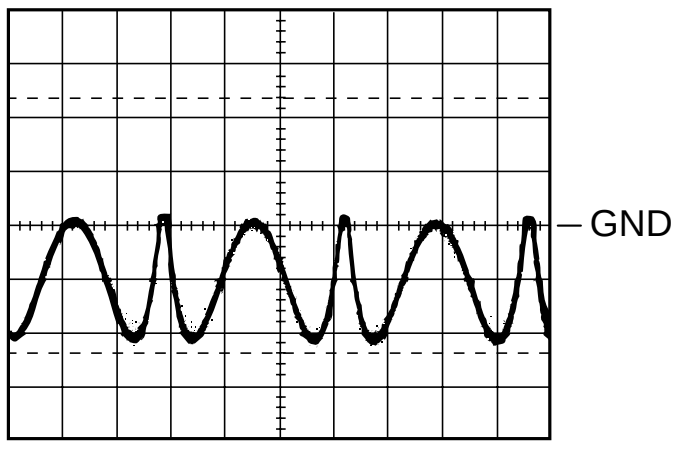

3.31 DEFLECTION SERVICE ASSY (1/3)

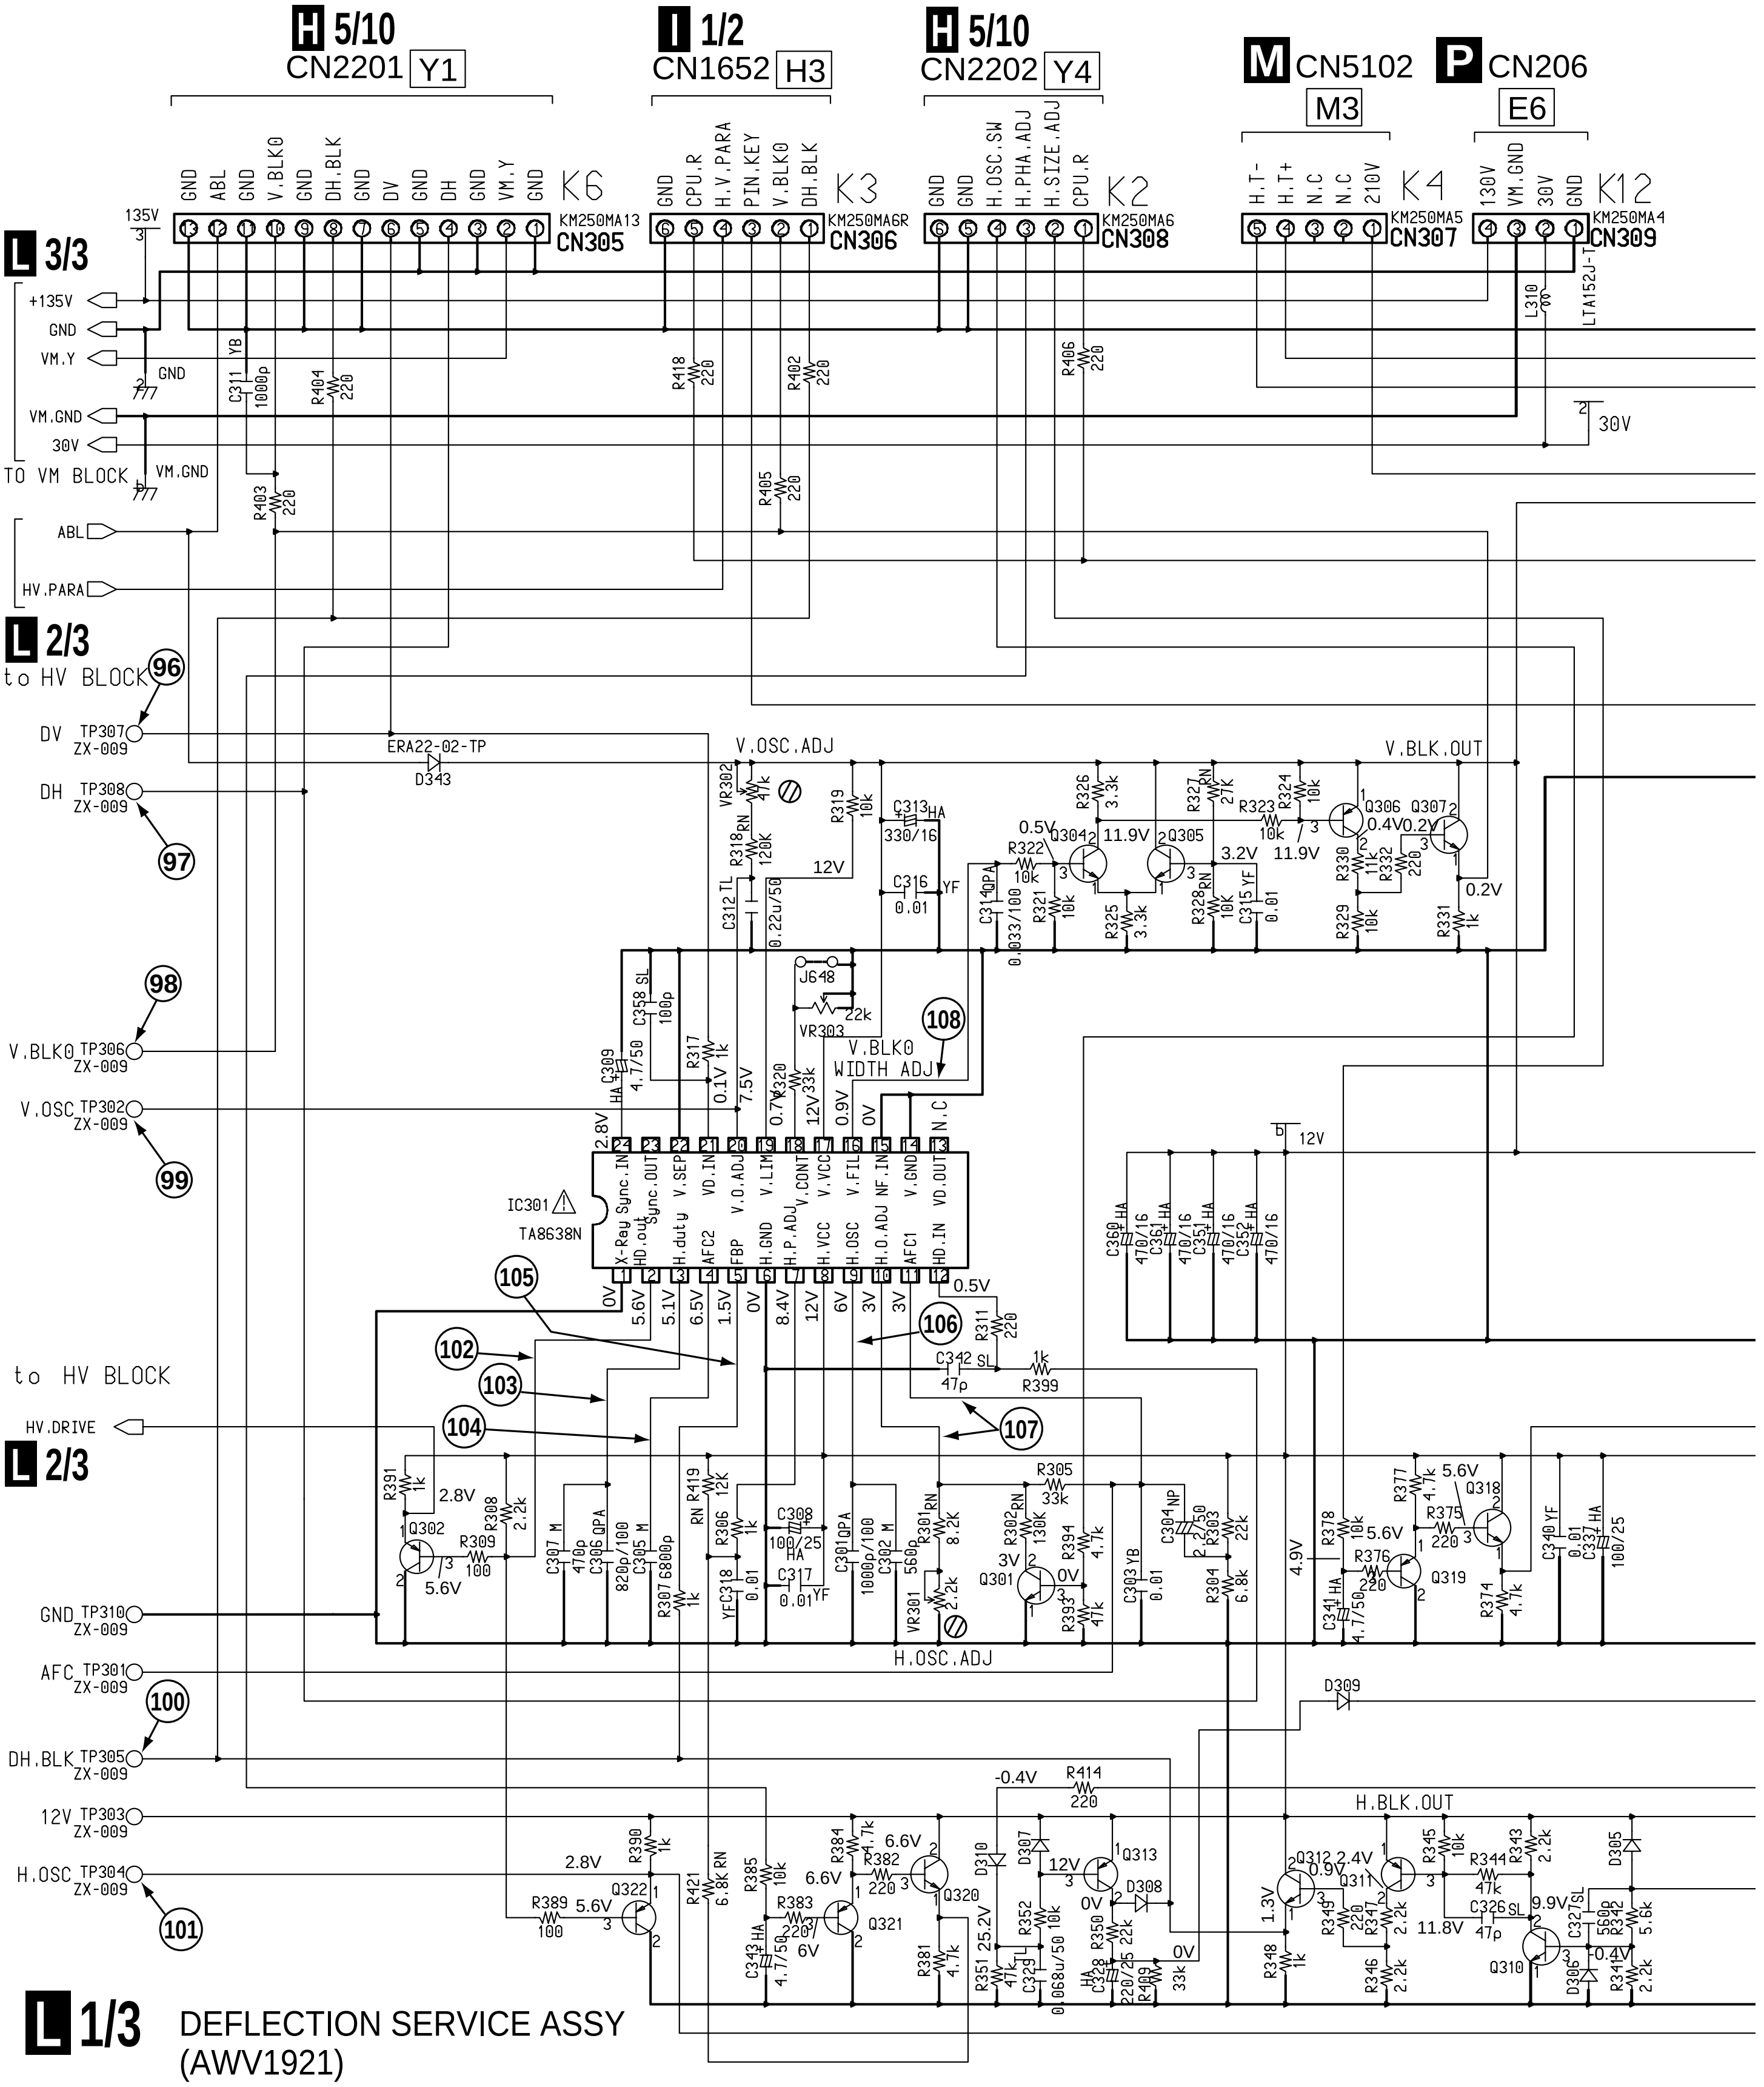
H 5/10
CN2201 Y1
I 1/2
CN1652 H3
H 5/10
CN2202 Y4
M CN5102
M3
P CN206
E6
GND ABL GND V.BLK0 GND DH.BLK GND DV GND DH GND VM.Y GND
K6
KM250MA13
CN305
GND CPU.R H.V.PARA PIN.KEY V.BLK0 DH.BLK
K3
KM250MA6R
CN306
GND GND H.OSC.SW H.PHA.ADJ H.SIZE.ADJ CPU.R
K2
KM250MA6
CN308
H.T- H.T+ N.C N.C 210V
K4
KM250MA5
CN307
130V VM.GND 30V GND
K12
KM250MA4
CN309
L310
LTA152J-T
135V
L 3/3
+135V
GND
VM.Y
VM.GND
30V
TO VM BLOCK
VM.GND
ABL
HV.PARA
L 2/3
to HV BLOCK
C311 YB 1000p
R404 220
R418 220
R402 220
R406 220
R403 220
R405 220
30V
96
DV TP307 ZX-009
ERA22-02-TP
D343
DH TP308 ZX-009
97
98
V.BLK0 TP306 ZX-009
V.OSC TP302 ZX-009
99
V.OSC.ADJ
VR302 47k
R318 RN 120K
R319 10k
C313 HA 330/16
C312 TL 0.22u/50
12V
C316 0.01 YF
C314 QPA 0.033/100
R322 10k
R321 10k
0.5V Q304
R326 3.3k
11.9V Q305
R325 3.3k
R327 RN 27K
R328 RN 10K
C315 YF 0.01
3.2V
R323 10k
R324 10k
11.9V
V.BLK.OUT
Q306 0.4V
Q307 0.2V
R330 1k
R332 220
R329 10k
R331 1k
0.2V
J648
VR303 22k
108
V.BLK0 WIDTH ADJ
C358 SL 100p
C309 HA 4.7/50
R317 1k
R320 33k
2.8V 0.1V 7.5V 0.7V 12V 0.9V 0V N.C
24 23 22 21 20 19 18 17 16 15 14 13
X-Ray Sync.IN
Sync.OUT
V.SEP
VD.IN
V.O.ADJ
V.LIM
V.CONT
V.VCC
V.FIL
NF.IN
V.GND
VD.OUT
IC301
TA8638N
HD.out
H.duty
AFC2
FBP
H.GND
H.P.ADJ
H.VCC
H.OSC
H.O.ADJ
AFC1
HD.IN
1 2 3 4 5 6 7 8 9 10 11 12
0V 5.6V 5.1V 6.5V 1.5V 0V 8.4V 12V 6V 3V 3V 0.5V
12V
C360 HA 470/16
C361 HA 470/16
C351 HA 470/16
C352 HA 470/16
105
106
R311 220
102
103
104
C342 SL 47p
R399 1k
107
to HV BLOCK
HV.DRIVE
L 2/3
R391 1k
2.8V
Q302
R309 100
R308 2.2k
5.6V
C307 M 470p
C306 QPA 820p/100
C305 M 6800p
R307 1k
R419 RN 12K
R306 1k
C318 YF 0.01
C308 HA 100/25
C317 YF 0.01
C301 QPA 1000p/100
C302 M 560p
R301 RN 8.2k
VR301 2.2k
R302 RN 130K
Q301 3V 0V
R305 33k
R394 4.7k
R393 47k
C304 NP 2.2/50
R303 22k
C303 YB 0.01
R304 6.8k
H.OSC.ADJ
4.9V
R378 10k
C341 HA 4.7/50
R377 4.7k
5.6V
Q318
R375 220
5.6V
R376 220
Q319
R374 4.7k
C340 YF 0.01
C337 HA 100/25
GND TP310 ZX-009
AFC TP301 ZX-009
100
DH.BLK TP305 ZX-009
12V TP303 ZX-009
H.OSC TP304 ZX-009
101
D309
-0.4V
R414 220
H.BLK.OUT
2.8V
R390 1k
Q322
R389 100
5.6V
R421 6.8K RN
R385 10k
R384 4.7k
6.6V
R382 220
6.6V
R383 220
Q321
C343 HA 4.7/50
6V
Q320
R381 4.7k
D310
D307
12V
Q313
D308
0V
R351 25.2V 47k
C329 L 0.068u/50
R352 10k
C328 HA 220/25
R350 22k
R409 33k
0V
Q312 0.9V
1.3V
R348 1k
Q311 2.4V
R349 2.2k
R347 2.2k
R346 2.2k
R345 10k
R344 47k
R343 2.2k
C326 SL 47p
11.8V
9.9V
Q310
C327 SL 560p
R342 5.6k
D305
D306
-0.4V
R341 2.2k

L 1/3 DEFLECTION SERVICE ASSY
(AWV1921)
- H. DEF BLOCK

Notes

	CEHAT___M__-T	CKCYB___K50-T
2SC1740S(RS)-T	CEANP___M50-T	RN1/4PC____F-T
	CQPA___J2A-T	RD1/4PU___J-T
2SA933S(RS)-T	CQMA___J50-T	RD1/2PM___J-T
1SS133-T	CFTLA___J50-T	RS1MMF___J-T
	CKCYF______-T	RS2MMF___J-T

1. RESISTERS
(RS):METAL OXIDE FILM RESISTER
(RT):CEMENT RESISTER
(RN):METAL FILM RESISTER
(FL):NON FLAMMABLE RESISTER
THE OTHERS:CARBONFILM RESISTER (1/4 W)
Figures in pharenttheses show the rated wattage.
Those unspecified ones are of 1/4W.
K:KΩ ,M:MΩ ,Unspecified ones are ofΩ

2. CAPACITORS
(HA):Aluminium electrolytic capasitors
p:pF,Unspecified ones are of uF
Capacity/Voltage
Unspecified ones are of 50V

3. The ⚠ mark found on same component parts of indicates the importance of the safety factor of the parts. Therefore,when replacing,be sure to use parts of identical de-signation.

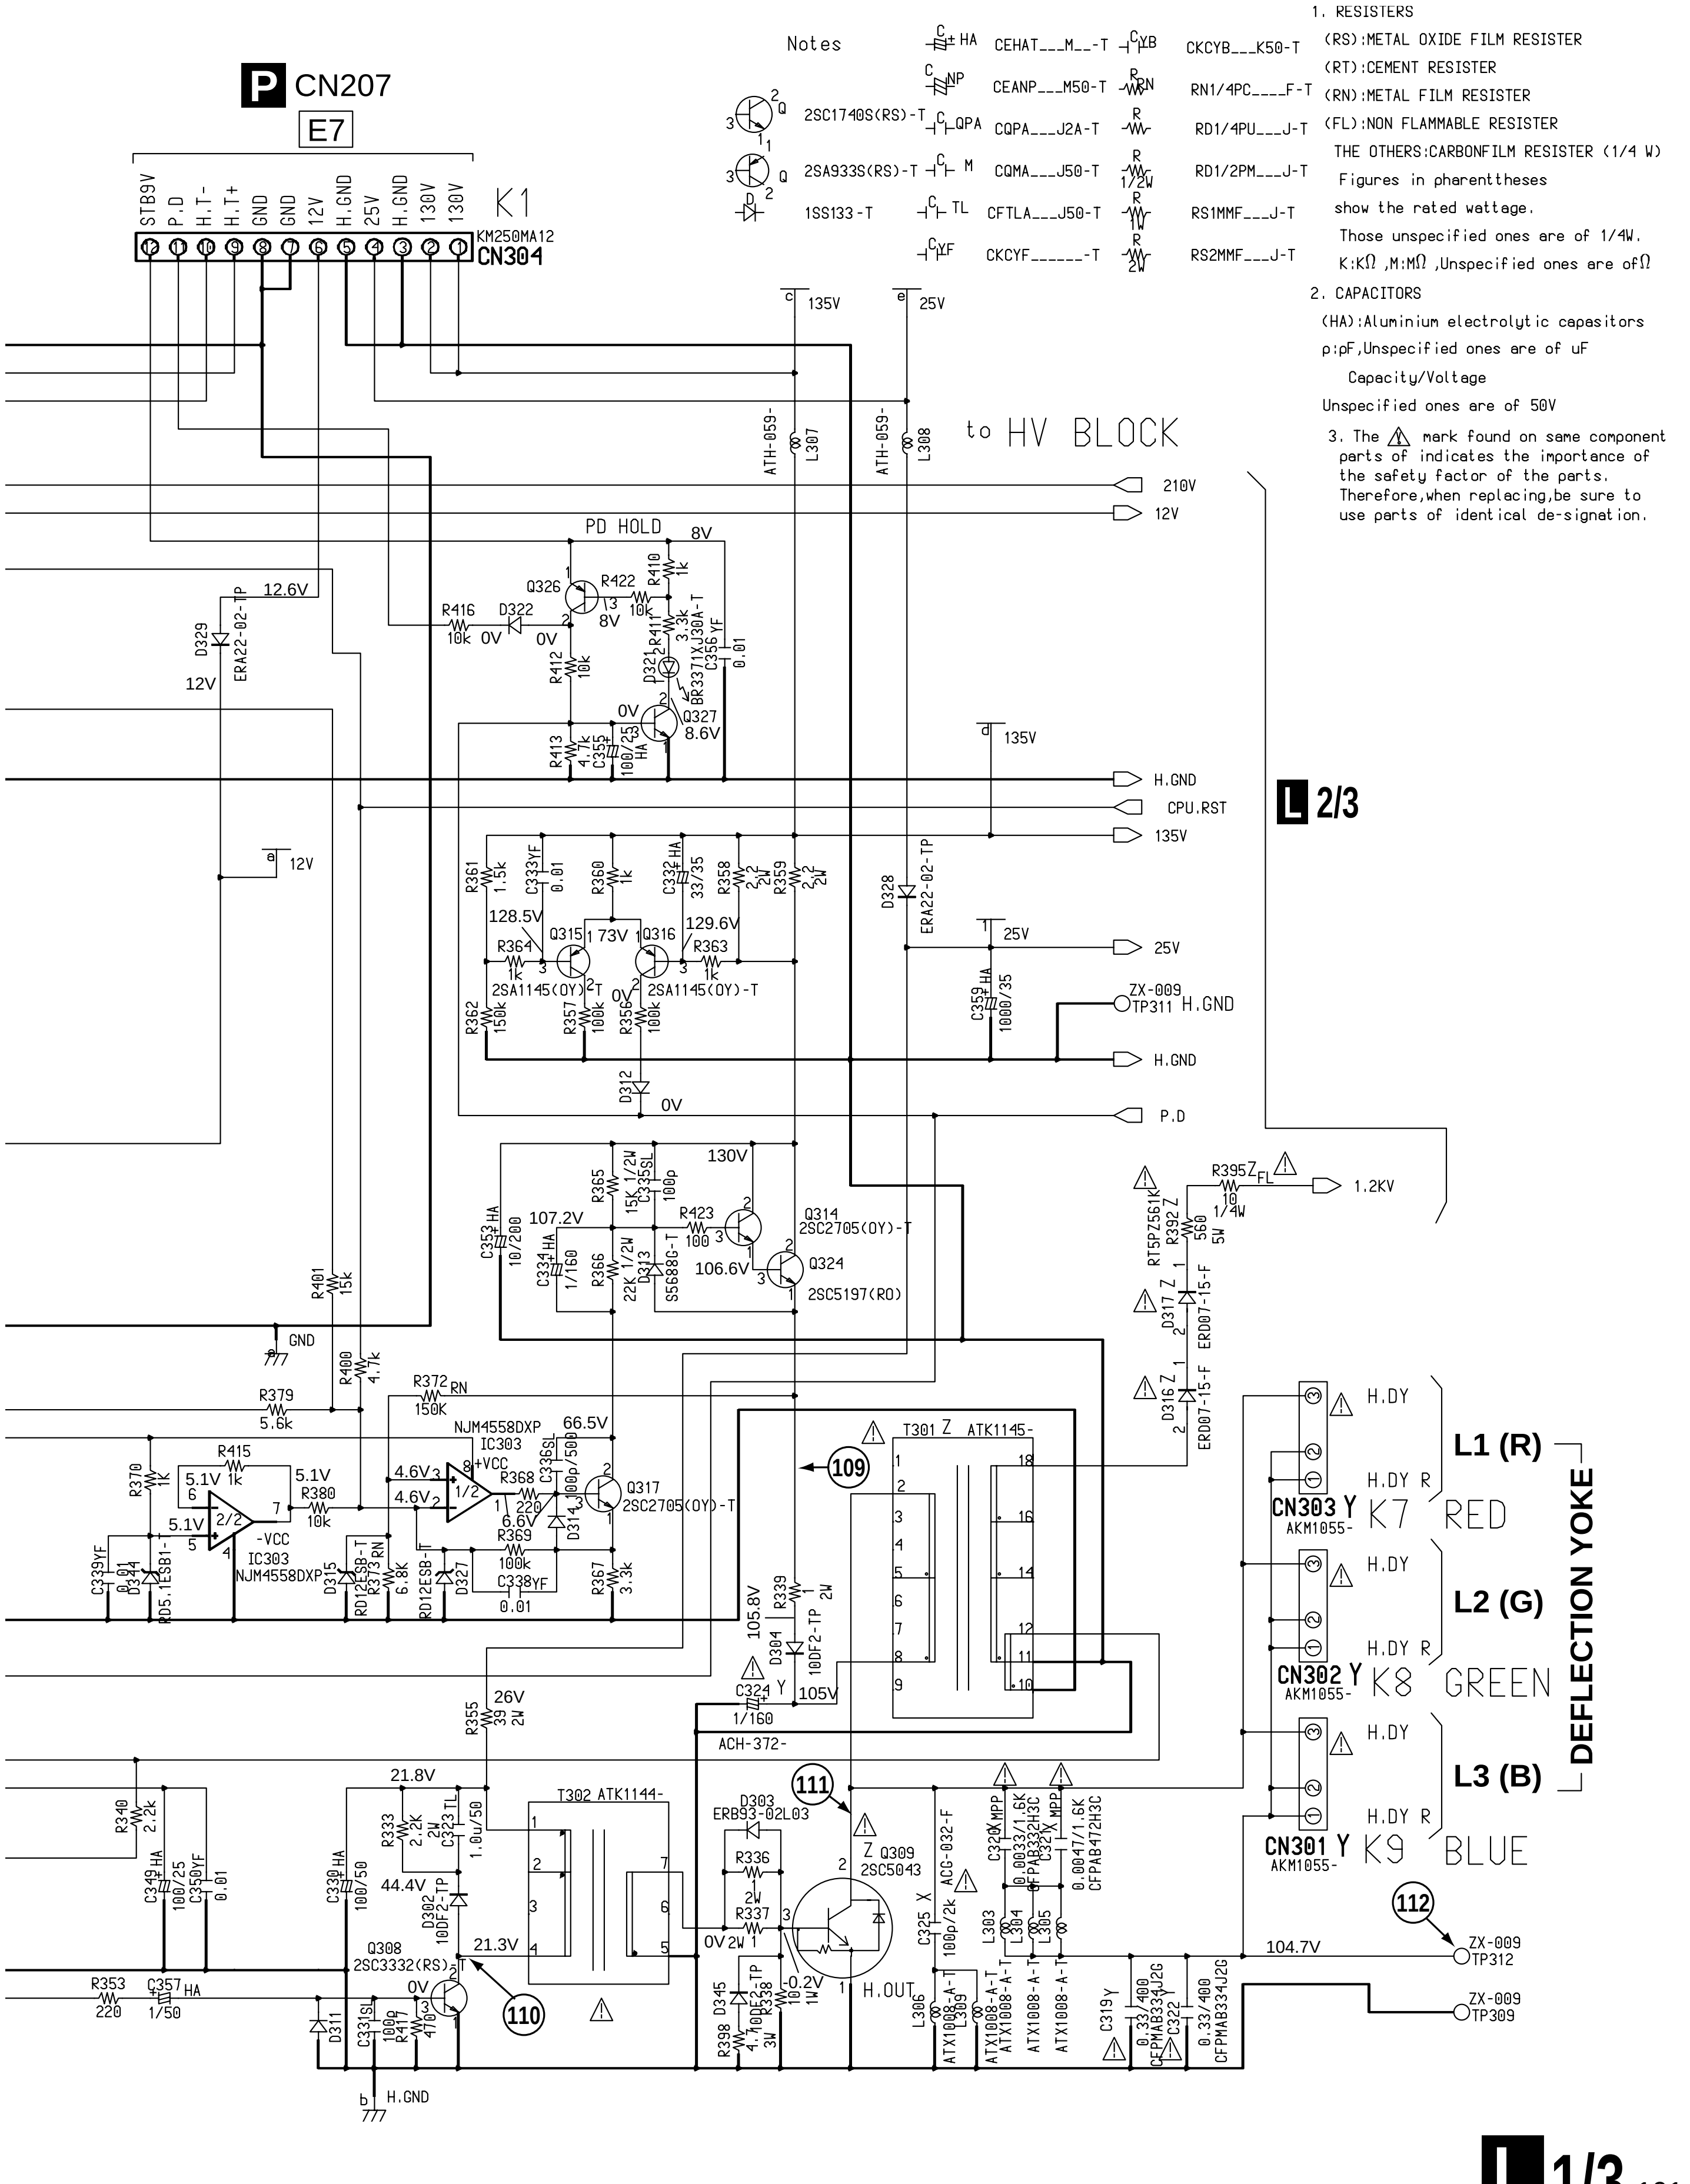
P CN207
E7
STB9V P.D H.T- H.T+ GND GND 12V H.GND 25V H.GND 130V 130V
K1
KM250MA12
CN304
c 135V
e 25V
ATH-059- L307
ATH-059- L308
to HV BLOCK
210V
12V
PD HOLD
8V
Q326
R422 10k
R410 1k
R416 10k
D322
0V
R412 10k
R411 3.3k
D321 BR3371X
J30A-T
C356 YF 0.01
12.6V
D329 ERA22-02-TP
12V
Q327
8.6V
R413 4.7k
C355 100/25 HA
d 135V
H.GND
CPU.RST
135V
L 2/3
a 12V
R361 1.5k
C333 YF 0.01
R360 1k
C332 HA 33/35
R358 2.2 2W
R359 2.2 2W
D328 ERA22-02-TP
128.5V
129.6V
73V
Q315
Q316
R364 1k
R363 1k
2SA1145(OY)-T
25V
R362 150k
R357 100k
R356 100k
C359 HA 1000/35
ZX-009 TP311 H.GND
D312
0V
P.D
130V
R365 15K 1/2W
C335 SL 100p
107.2V
R423 100
Q314 2SC2705(OY)-T
C353 HA 10/200
C334 HA 1/160
R366 22K 1/2W
D313 S5688C-T
106.6V
Q324 2SC5197(RO)
R395 Z FL 10 1/4W
1.2KV
RT5PZ561K
R392 Z 560 5W
D317 Z ERD07-15-F
D316 Z ERD07-15-F
R401 15k
GND
R400 4.7k
R379 5.6k
R372 RN 150K
NJM4558DXP IC303
66.5V
T301 Z ATK1145-
109
R415 1k
R370 1K
5.1V
4.6V
R380 10k
R368 220
C336 SL 100p/500
Q317 2SC2705(OY)-T
-VCC IC303 NJM4558DXP
6.6V
D314
R369 100k
C339 YF 0.01
D344 RD5.1ESB1-T
D315 RD12ESB-T
R373 RN 6.8K
D327
C338 YF 0.01
R367 3.3k
105.8V
R339 1 2W
D304 10DF2-TP
105V
C324 Y 1/160
ACH-372-
R355 39 2W
26V
H.DY
H.DY R
L1 (R)
CN303 Y AKM1055- K7 RED
L2 (G)
CN302 Y AKM1055- K8 GREEN
L3 (B)
CN301 Y AKM1055- K9 BLUE
DEFLECTION YOKE
21.8V
R333 2.2K 2W
C323 TL 1.0u/50
T302 ATK1144-
D303 ERB93-02L03
111
R336
Z Q309 2SC5043
ACG-032-F
C320 MPP 0.0033/1.6K CFPA332H3C
C321 X MPP 0.0047/1.6K CFPAB472H3C
R340 2.2k
C349 HA 100/25
C350 YF 0.01
C330 HA 100/50
44.4V
D302 10DF2-TP
R337 2W
0V
21.3V
Q308 2SC3332(RS)
110
R353 220
C357 HA 1/50
D311
C331 SL 100p
R417 470
D345 10DF2-TP
R338 10 1W
R398 4.7 3W
-0.2V
H.OUT
C325 X 100p/2k
L303
L304
L305
L306 ATX1008-A-T
L309 ATX1008-A-T
ATX1008-A-T
C319 Y 0.33/400 CFPMAB334J2G
C322 Y 0.33/400 CFPMAB334J2G
104.7V
112
ZX-009 TP312
ZX-009 TP309
b H.GND
A B C D

3.32 DEFLECTION SERVICE ASSY (2/3)

L 2/3 DEFLECTION SERVICE ASSY
(AWV1921)
- HV BLOCK

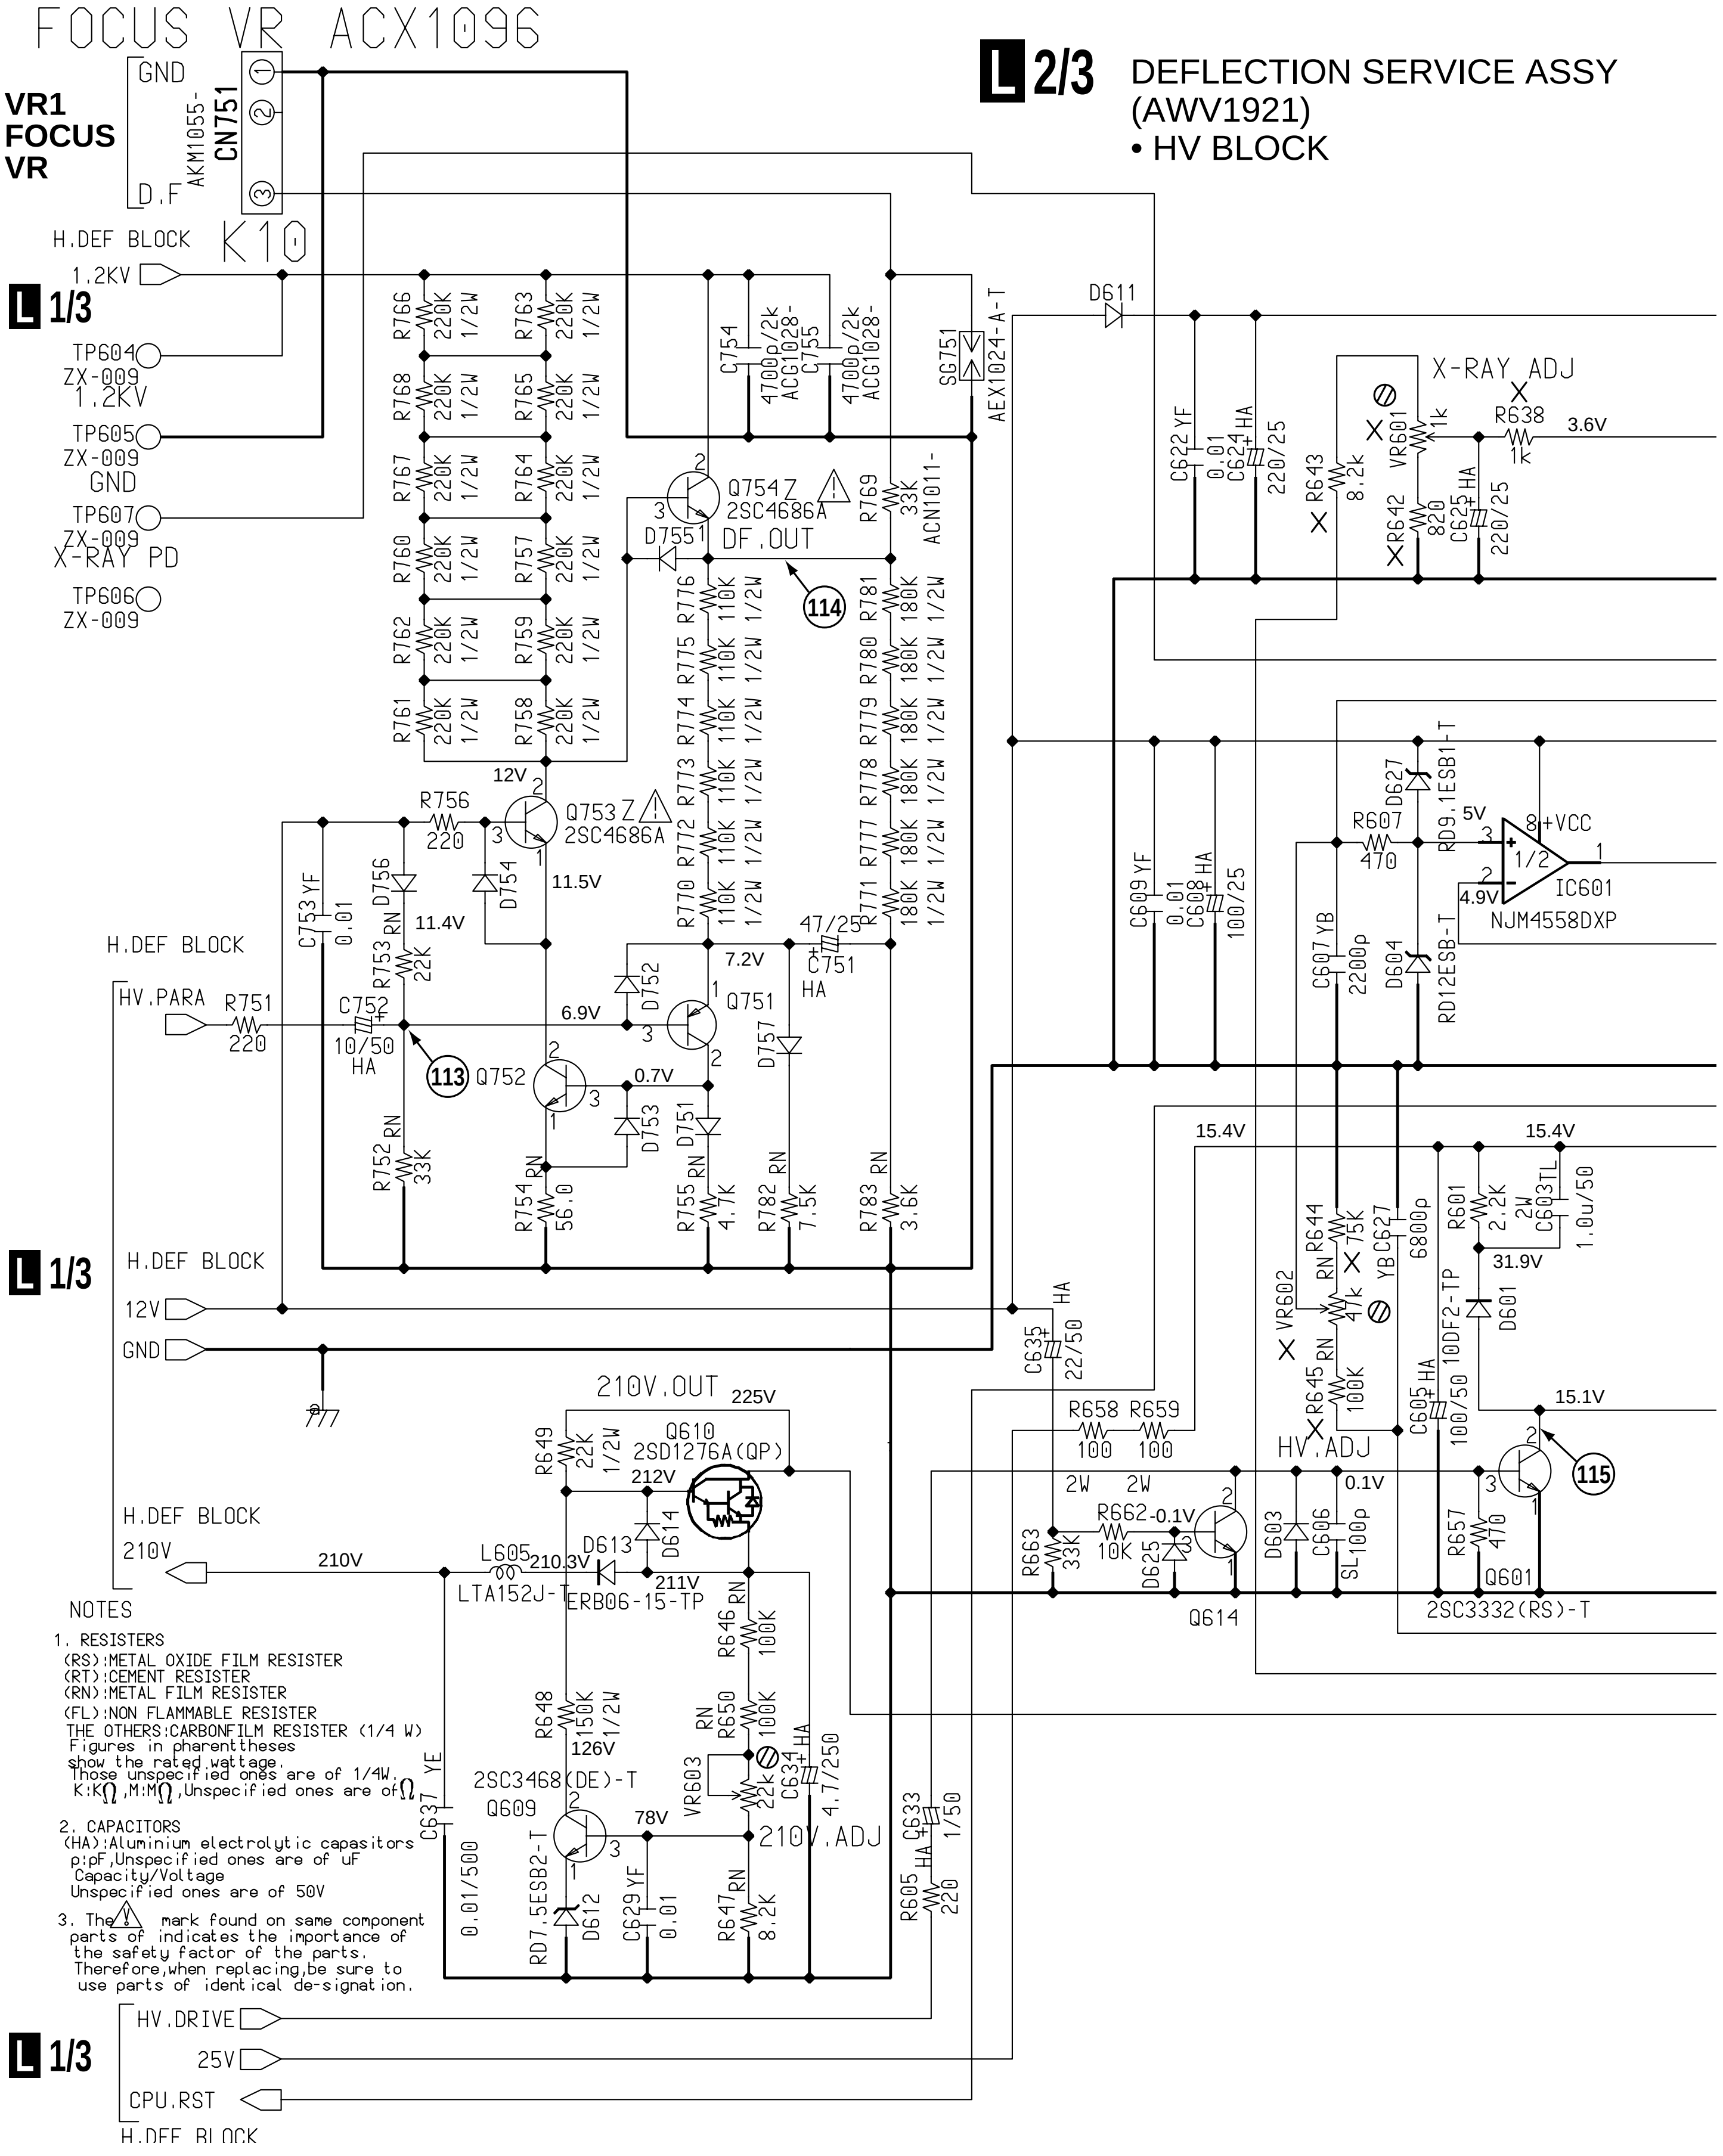
FOCUS VR ACX1096
VR1 FOCUS VR
GND
D.F
AKM1055-
CN751
K10
H.DEF BLOCK
1.2KV
L 1/3
TP604 ZX-009 1.2KV
TP605 ZX-009 GND
TP607 ZX-009 X-RAY PD
TP606 ZX-009
R766 220K 1/2W
R763 220K 1/2W
R768 220K 1/2W
R765 220K 1/2W
R767 220K 1/2W
R764 220K 1/2W
R760 220K 1/2W
R757 220K 1/2W
R762 220K 1/2W
R759 220K 1/2W
R761 220K 1/2W
R758 220K 1/2W
C754 4700p/2k ACG1028-
C755 4700p/2k ACG1028-
SG751 AEX1024-A-T
R769 33K ACN1011-
Q754 2SC4686A
D755
DF.OUT
114
R776 110K 1/2W
R775 110K 1/2W
R774 110K 1/2W
R773 110K 1/2W
R772 110K 1/2W
R770 110K 1/2W
R781 180K 1/2W
R780 180K 1/2W
R779 180K 1/2W
R778 180K 1/2W
R777 180K 1/2W
R771 180K 1/2W
12V
R756 220
Q753 2SC4686A
11.5V
D754
D756
11.4V
C753 YF 0.01
R753 RN 22K
47/25 C751 HA
7.2V
D752
Q751
6.9V
D757
H.DEF BLOCK
HV.PARA
R751 220
C752 10/50 HA
113
Q752
0.7V
D753
D751
R752 RN 33K
R754 RN 56.0
R755 RN 4.7K
R782 RN 7.5K
R783 RN 3.6K
L 1/3
H.DEF BLOCK
12V
GND
D611
C622 YF 0.01
C624 HA 220/25
X-RAY ADJ
R643 8.2k
VR601 1k
R638 1k
3.6V
R642 820
C625 HA 220/25
C609 YF 0.01
C608 HA 100/25
D627 RD9.1ESB1-T
R607 470
5V
4.9V
8 +VCC
1/2
IC601 NJM4558DXP
C607 YB 2200p
D604 RD12ESB-T
15.4V
15.4V
R644 RN 75K
C627 YB 6800p
R601 2.2K 2W
C603 TL 1.0u/50
31.9V
VR602 RN 47k
D601 10DF2-TP
C635 HA 22/50
R645 RN 100K
C605 HA 100/50
15.1V
115
210V.OUT
225V
R649 22K 1/2W
Q610 2SD1276A(QP)
212V
D614
D613 ERB06-15-TP
210.3V
L605 LTA152J-T
211V
H.DEF BLOCK
210V
210V
R658 100 2W
R659 100 2W
HV.ADJ
R662 10K
-0.1V
0.1V
R663 33K
D625
Q614
D603
C606 SL 100p
R657 470
Q601 2SC3332(RS)-T
R646 RN 100K
R648 150K 1/2W
126V
R650 RN 100K
VR603 22k
C634 HA 4.7/250
210V.ADJ
2SC3468(DE)-T Q609
78V
C637 YE 0.01/500
D612 RD7.5ESB2-T
C629 YF 0.01
R647 RN 8.2K
C633 HA 1/50
R605 220
L 1/3
HV.DRIVE
25V
CPU.RST
H.DEF BLOCK

NOTES

1. RESISTERS
(RS):METAL OXIDE FILM RESISTER
(RT):CEMENT RESISTER
(RN):METAL FILM RESISTER
(FL):NON FLAMMABLE RESISTER
THE OTHERS:CARBONFILM RESISTER (1/4 W)
Figures in pharenttheses
show the rated wattage.
Those unspecified ones are of 1/4W.
K:KΩ,M:MΩ,Unspecified ones are of Ω

2. CAPACITORS
(HA):Aluminium electrolytic capasitors
p:pF,Unspecified ones are of uF
Capacity/Voltage
Unspecified ones are of 50V

3. The ⚠ mark found on same component parts of indicates the importance of the safety factor of the parts. Therefore,when replacing,be sure to use parts of identical de-signation.

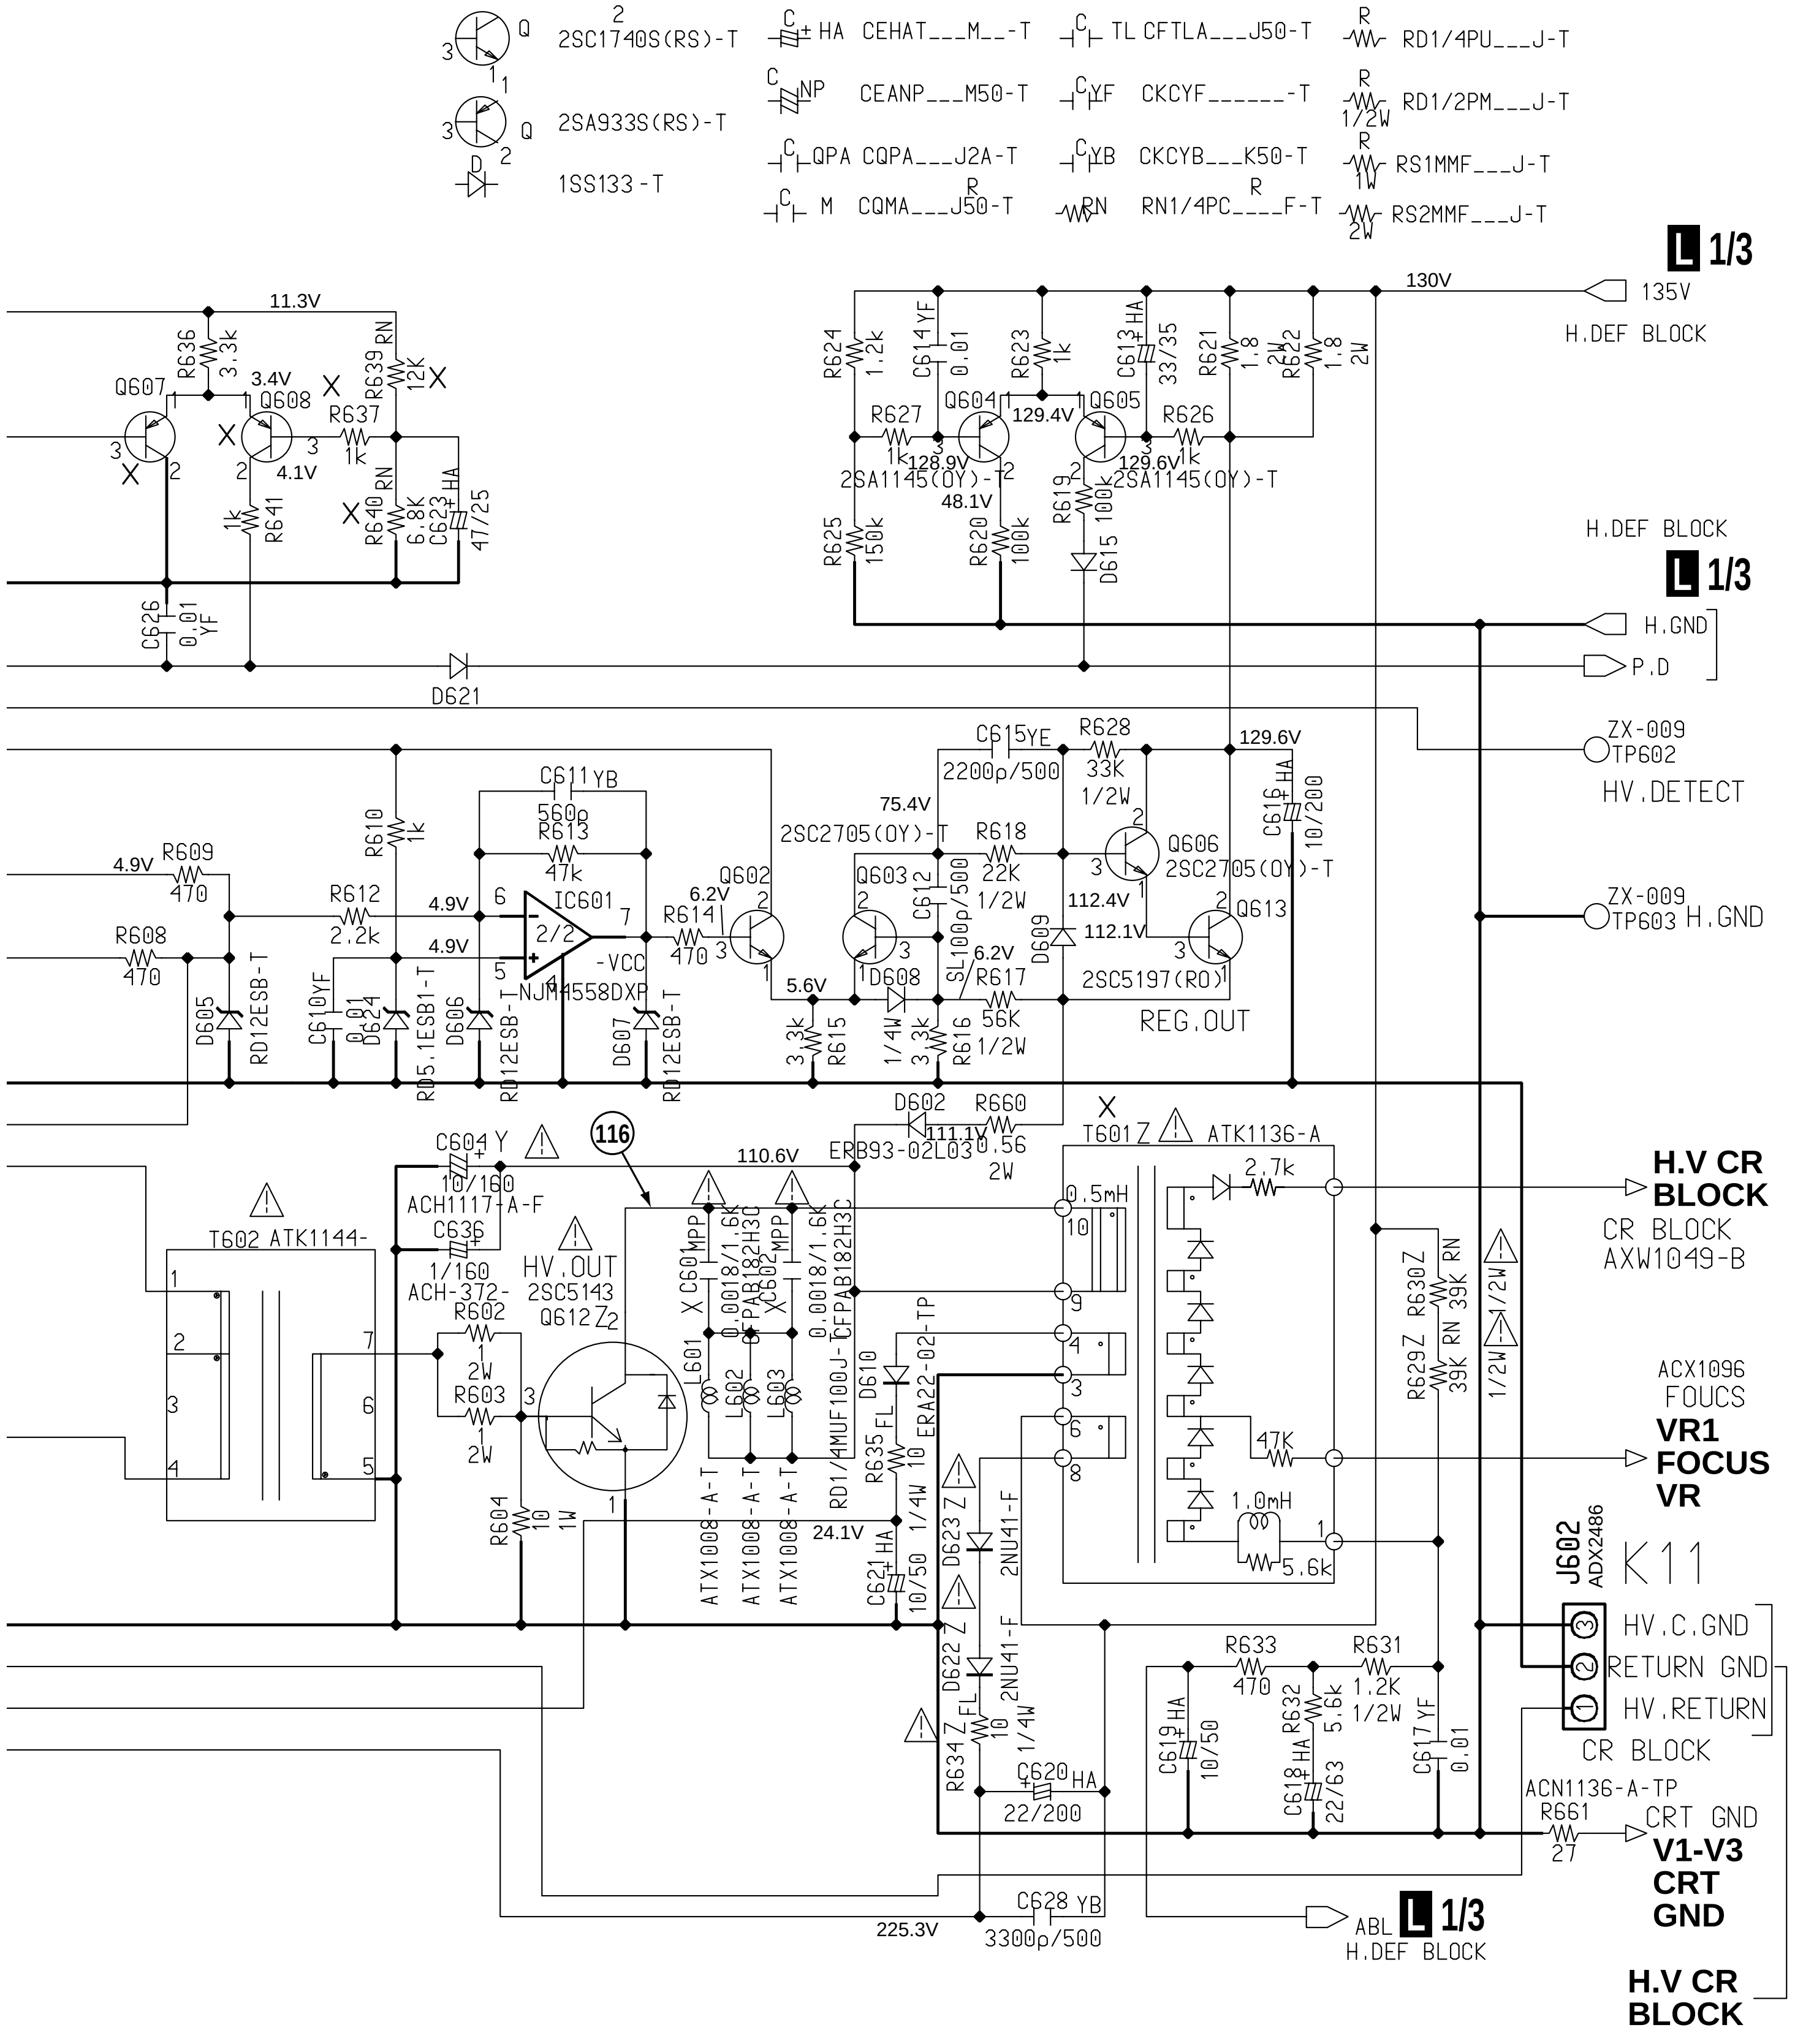
Q 2SC1740S(RS)-T
Q 2SA933S(RS)-T
D 1SS133-T
C HA CEHAT___M__-T
C NP CEANP___M50-T
C QPA CQPA___J2A-T
C M CQMA___J50-T
C TL CFTLA___J50-T
C YF CKCYF______-T
C YB CKCYB___K50-T
R RN RN1/4PC____F-T
R RD1/4PU___J-T
R 1/2W RD1/2PM___J-T
R 1W RS1MMF___J-T
R 2W RS2MMF___J-T
L 1/3
135V
H.DEF BLOCK
130V
11.3V
R636 3.3k
R639 RN 12K
Q607
Q608
3.4V
4.1V
R637 1k
R641 1k
R640 RN 6.8K
C623 HA 47/25
C626 0.01 YF
D621
R624 1.2k
C614 YF 0.01
R623 1k
C613 HA 33/35
R621 1.8 2W
R622 1.8 2W
R627 1k
Q604
Q605
129.4V
128.9V
129.6V
R626 1k
2SA1145(OY)-T
48.1V
R625 150k
R620 100k
R619 100k
D615
H.DEF BLOCK
L 1/3
H.GND
P.D
ZX-009 TP602
HV.DETECT
ZX-009 TP603 H.GND
C615 YE 2200p/500
R628 33K 1/2W
129.6V
C616 HA 10/200
75.4V
2SC2705(OY)-T
R618 22k 1/2W
Q606 2SC2705(OY)-T
Q603
C612 SL 100p/500
112.4V
112.1V
D609
Q613
2SC5197(RO)
REG.OUT
6.2V
R617 56K 1/2W
D608
R616 3.3k 1/4W
R615 3.3k
5.6V
Q602
R614 470
6.2V
C611 YB 560p
R613 47k
R610 1k
IC601
2/2
-VCC
NJM4558DXP
4.9V
4.9V
4.9V
R609 470
R612 2.2k
R608 470
D605 RD12ESB-T
C610 YF 0.01
D624 RD5.1ESB1-T
D606 RD12ESB-T
D607 RD12ESB-T
D602 ERB93-02L03
R660 0.56 2W
111.1V
110.6V
C604 Y 10/160 ACH1117-A-F
C636 1/160 ACH-372-
116
T602 ATK1144-
R602 1 2W
R603 1 2W
R604 10 1W
HV.OUT 2SC5143 Q612
C601 MPP 0.0018/1.6K CFPAB182H3C
C602 MPP 0.0018/1.6K CFPAB182H3C
L601 ATX1008-A-T
L602 ATX1008-A-T
L603 ATX1008-A-T
RD1/4MUF100J-
D610 ERA22-02-TP
R635 FL 10 1/4W
24.1V
C621 HA 10/50
D623 2NU41-F
D622 2NU41-F
R634 FL 10 1/4W
C620 HA 22/200
C628 YB 3300p/500
225.3V
T601 ATK1136-A
0.5mH
2.7k
47K
1.0mH
5.6k
R630 RN 39K 1/2W
R629 RN 39K 1/2W
H.V CR BLOCK
CR BLOCK AXW1049-B
ACX1096 FOUCS
VR1 FOCUS VR
J602 ADX2486
K11
HV.C.GND
RETURN GND
HV.RETURN
CR BLOCK
R633 470
R631 1.2K 1/2W
C619 HA 10/50
R632 5.6k
C618 HA 22/63
C617 YF 0.01
ACN1136-A-TP
R661 27
CRT GND
V1-V3 CRT GND
ABL
L 1/3
H.DEF BLOCK
H.V CR BLOCK
A
B
C
D

3.33 DEFLECTION SERVICE ASSY (3/3)

L 3/3 DEFLECTION SERVICE ASSY (AWV1921)
• VM BLOCK

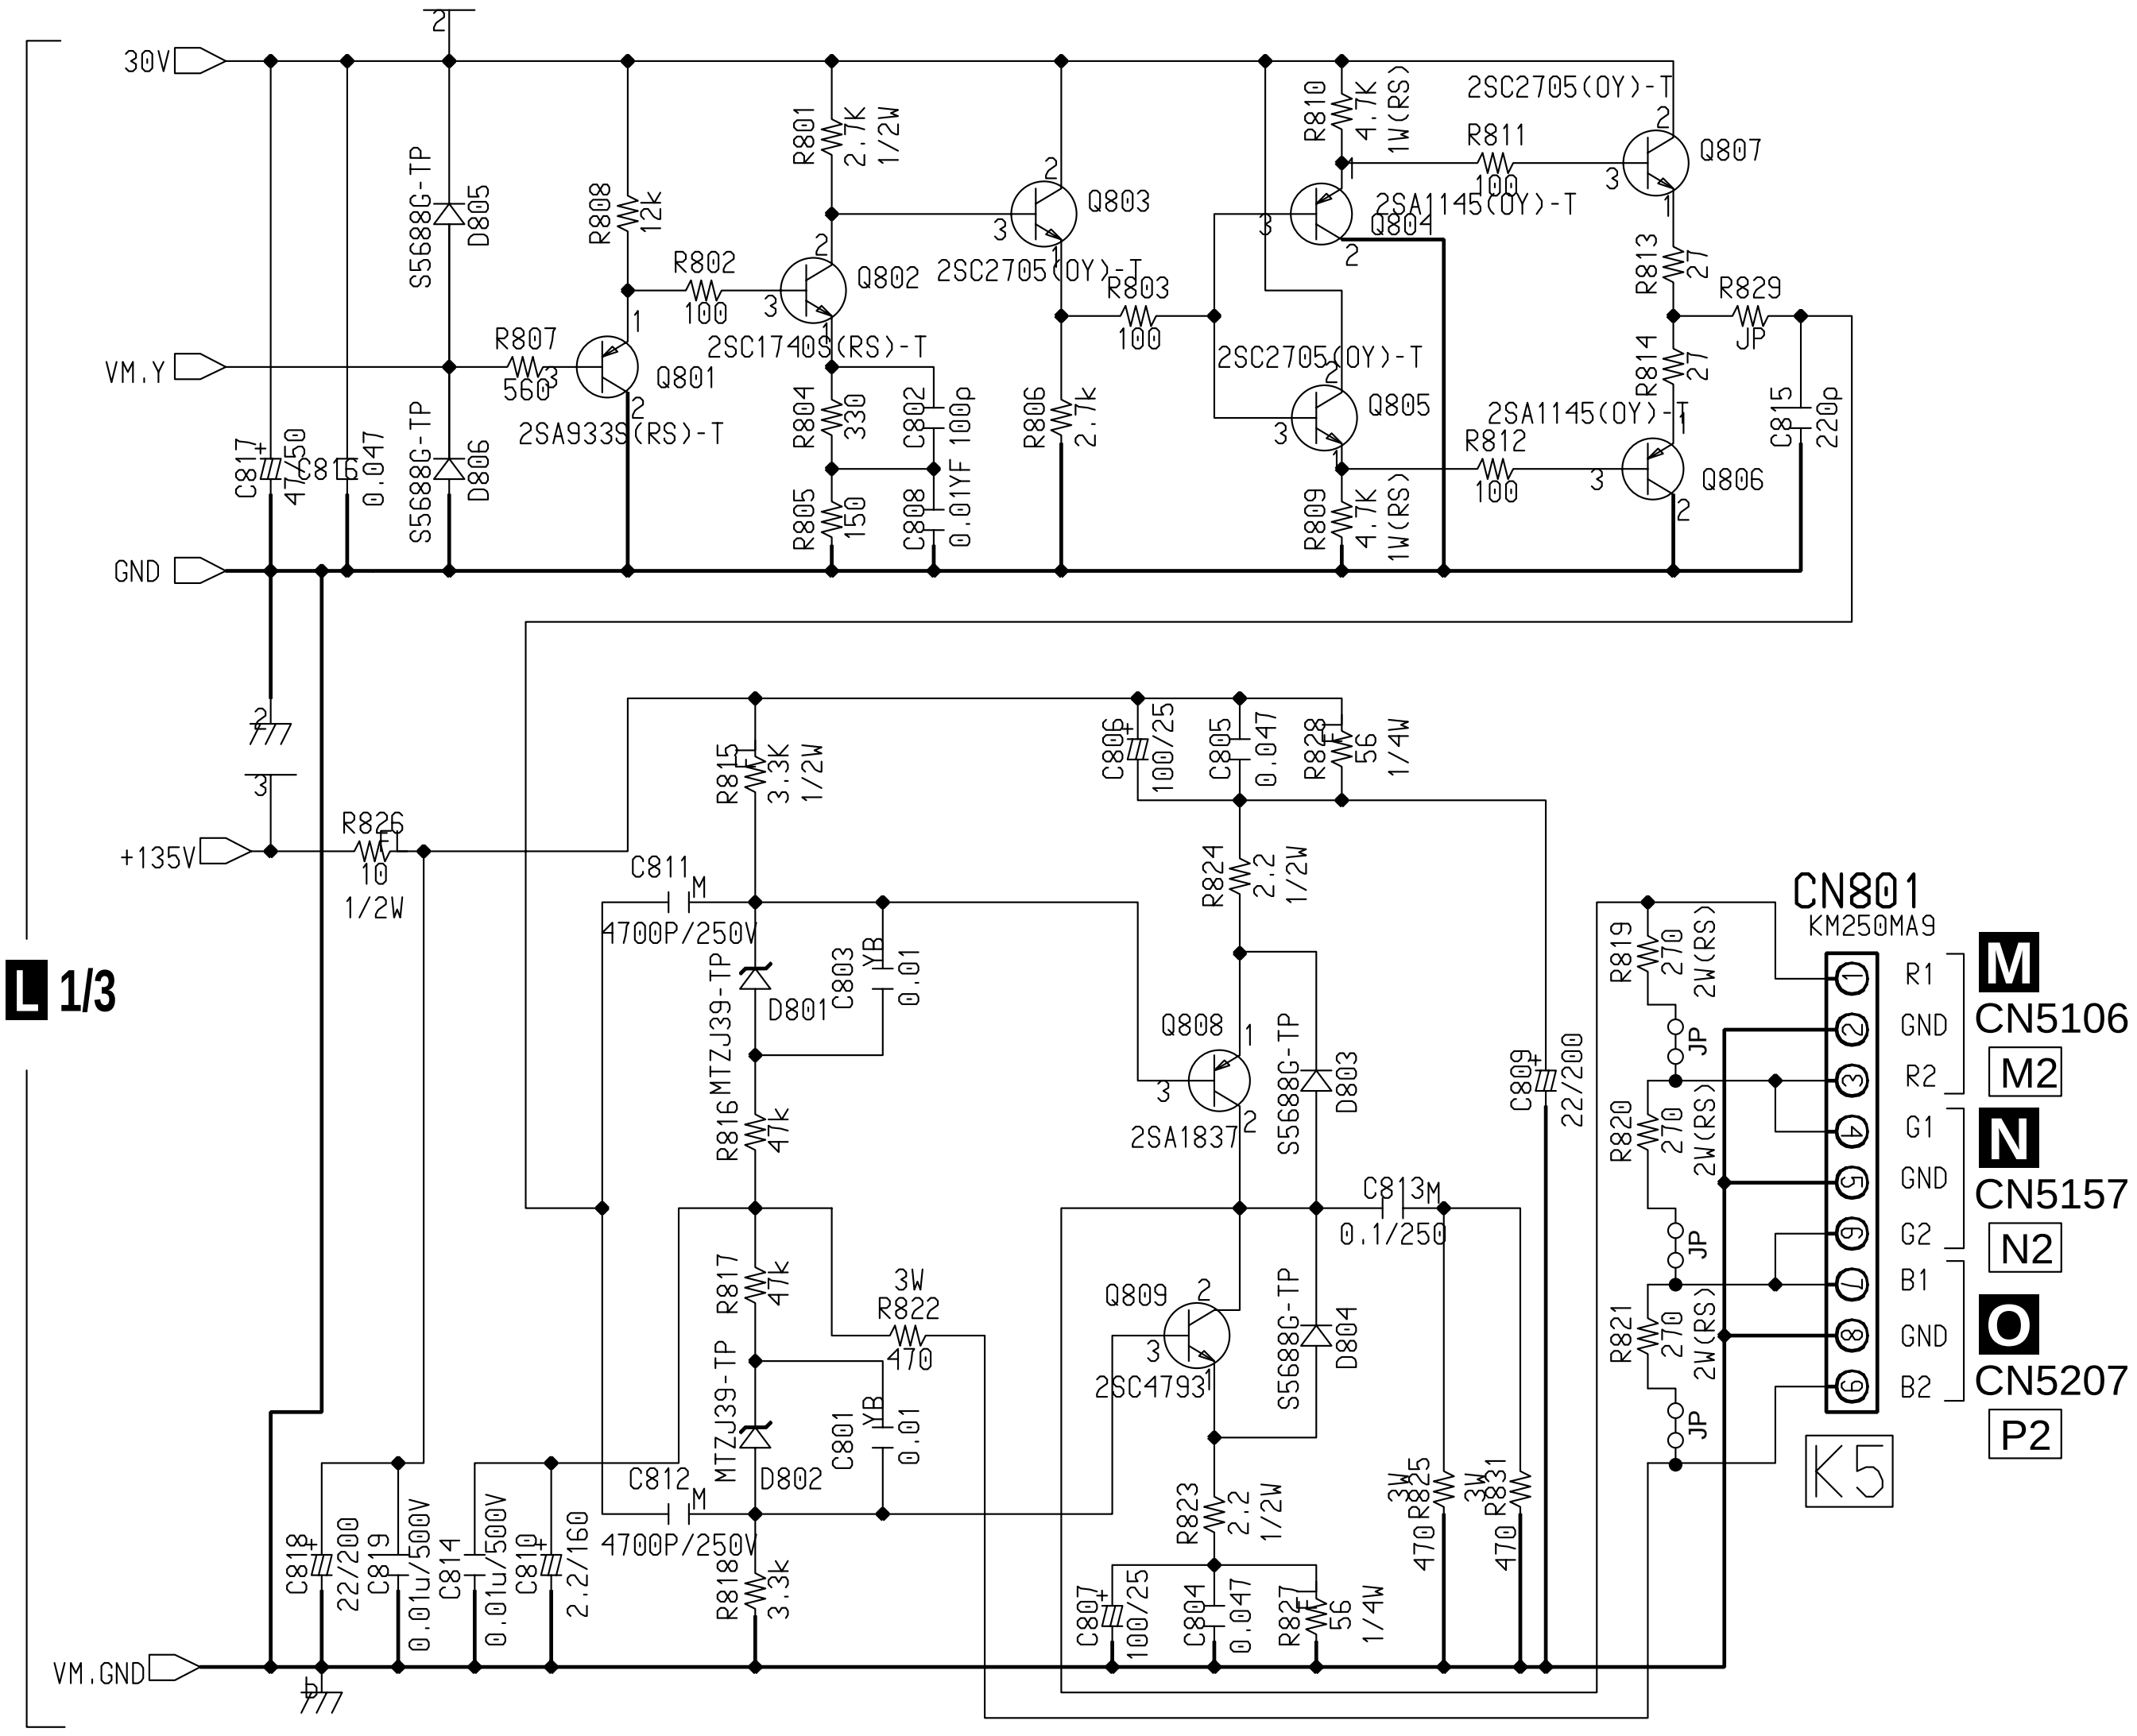
30V
VM.Y
GND
+135V
VM.GND
L 1/3
D805 S5688G-TP
D806 S5688G-TP
C817 47/50
C816 0.047
R807 560
Q801 2SA933S(RS)-T
R808 12k
R802 100
Q802 2SC1740S(RS)-T
R801 2.7K 1/2W
R804 330
C802 100p
R805 150
C808 0.01YF 100p
Q803 2SC2705(OY)-T
R803 100
R806 2.7k
R810 4.7K 1W(RS)
R811 100
Q804 2SA1145(OY)-T
Q805 2SC2705(OY)-T
R809 4.7K 1W(RS)
R812 100
Q807 2SC2705(OY)-T
Q806 2SA1145(OY)-T
R813 27
R814 27
R829 JP
C815 220p
R826 10 1/2W
C811 4700P/250V
R815 3.3K 1/2W
D801 MTZJ39-TP
C803 YB 0.01
R816 47k
R817 47k
R822 3W 470
D802 MTZJ39-TP
C801 YB 0.01
C812 4700P/250V
R818 3.3k
C818 22/200
C819 0.01u/500V
C814 0.01u/500V
C810 2.2/160
C806 100/25
C805 0.047
R828 56 1/4W
R824 2.2 1/2W
Q808 2SA1837
D803 S5688G-TP
C813 0.1/250
Q809 2SC4793
D804 S5688G-TP
R823 2.2 1/2W
C807 100/25
C804 0.047
R827 56 1/4W
R825 3W 470
R831 3W 470
C809 22/200
R819 270 2W(RS)
R820 270 2W(RS)
R821 270 2W(RS)
JP
CN801 KM250MA9
1 R1
2 GND
3 R2
4 G1
5 GND
6 G2
7 B1
8 GND
9 B2
M CN5106 M2
N CN5157 N2
O CN5207 P2
K5

L

DEFLECTION SERVICE ASSY

Input signal
Video signal : EIA full color-bar
Picture quality : Standard
Range :DC range (Unless otherwise noted)

(96) **TP307 (DV)**
V: 2V/div. H: 2msec/div.
(98) **TP306 (V. BLK)**
V: 2V/div. H: 2msec/div.

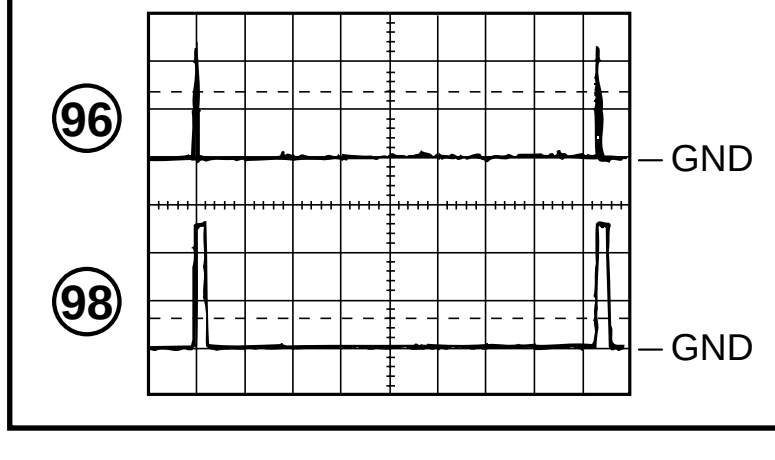

(97) **TP308 (DH)**
V: 2V/div. H: 5µsec/div.
(102) **IC301 pin 2**
V: 5V/div. H: 5µsec/div.

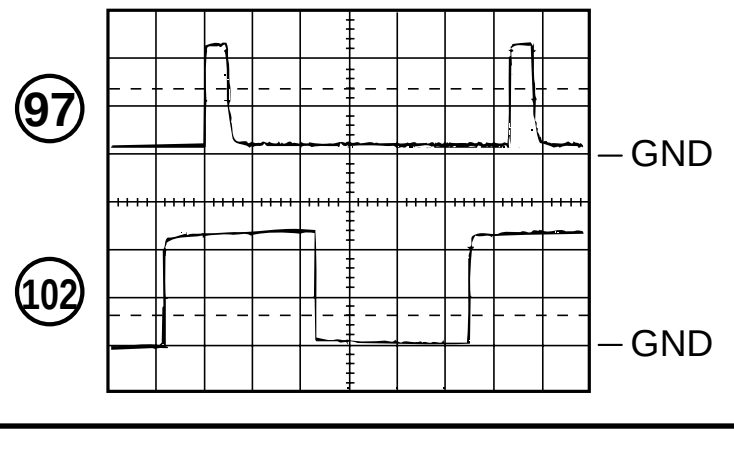

(99) **IC301 pin 20**
V: 2V/div. H: 2msec/div.

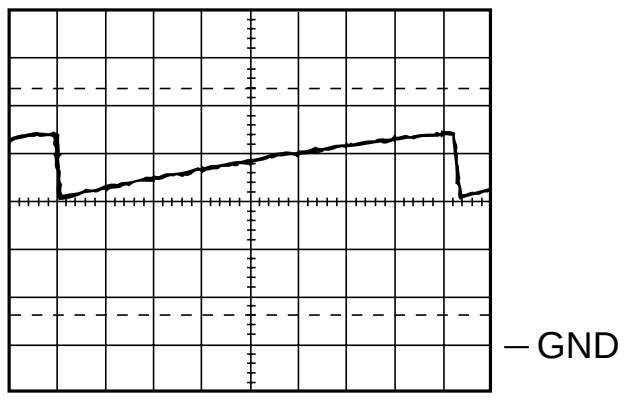

(106) **IC301 pin 9**
V: 2V/div. H: 5µsec/div.

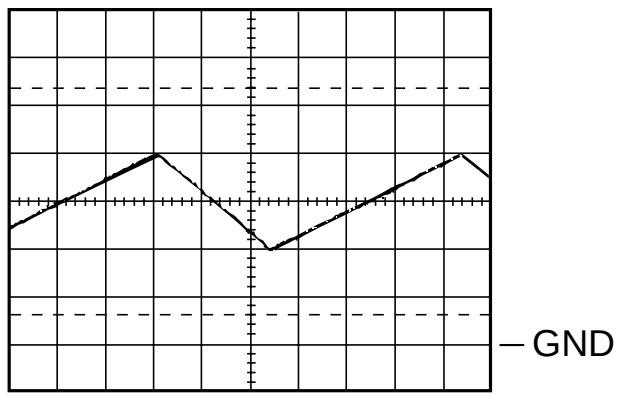

(111) **Q309 Collector**
V: 200V/div. H: 5µsec/div.

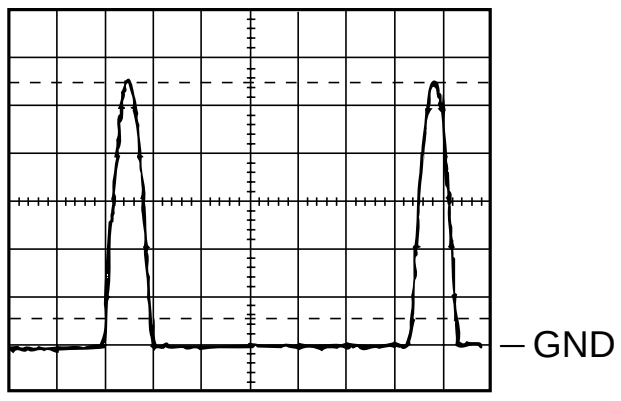

(100) **TP305 (DH. BLK)**
V: 2V/div. H: 5µsec/div.
(101) **TP304 (H. OSC)**
V: 2V/div. H: 5µsec/div.

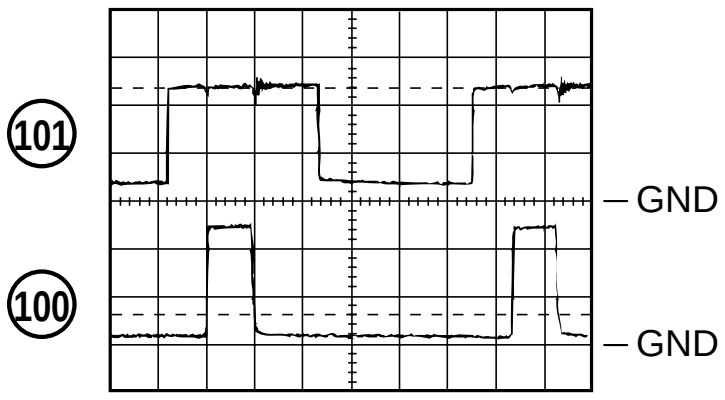

(107) **IC301 pin 10, 11**
V: 2V/div. H: 5µsec/div.

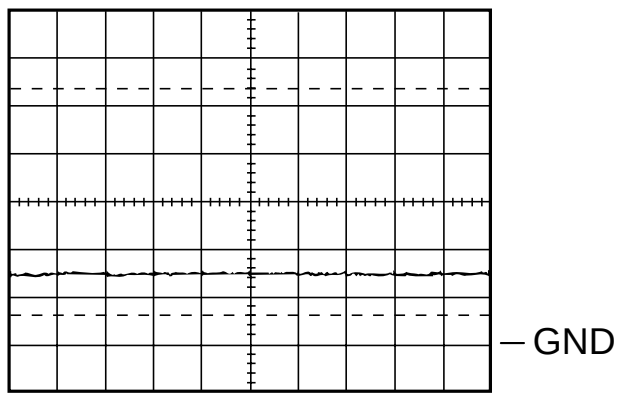

(112) **TP312**
V: 20V/div. H: 5µsec/div.

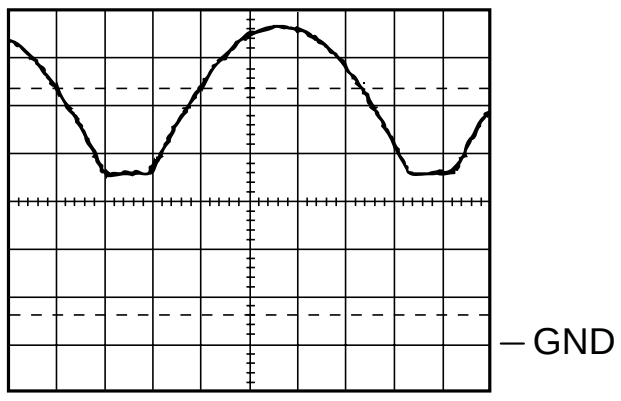

(103) **IC301 pin 3**
V: 2V/div. H: 5µsec/div.

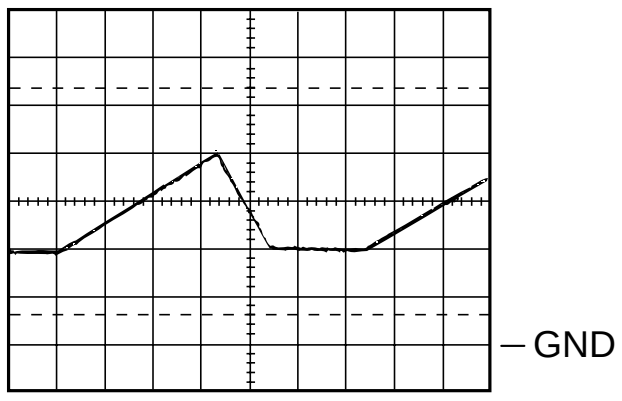

(108) **IC301 pin 16**
V: 2V/div. H: 2msec/div.

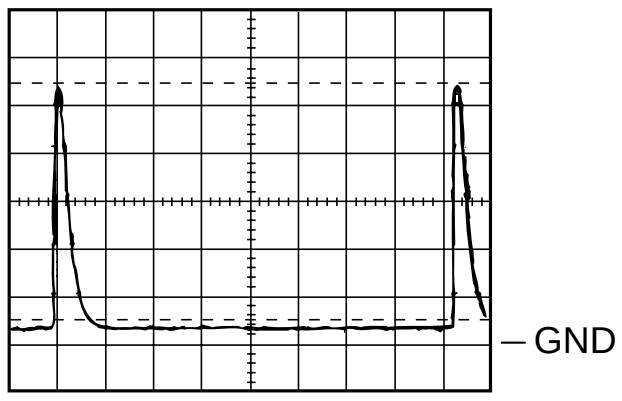

(113) **Q751 Base**
V: 2V/div. H: 10µsec/div.
(114) **Q754 Emitter**
V: 200V/div. H: 10µsec/div.

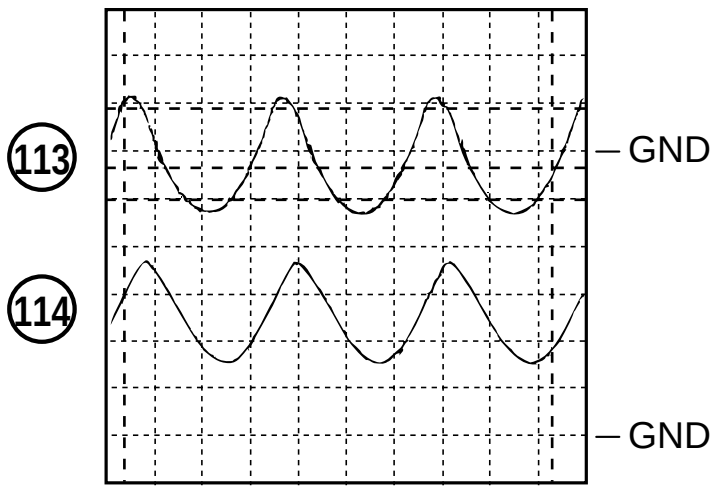

(104) **IC301 pin 4**
V: 2V/div. H: 5µsec/div.

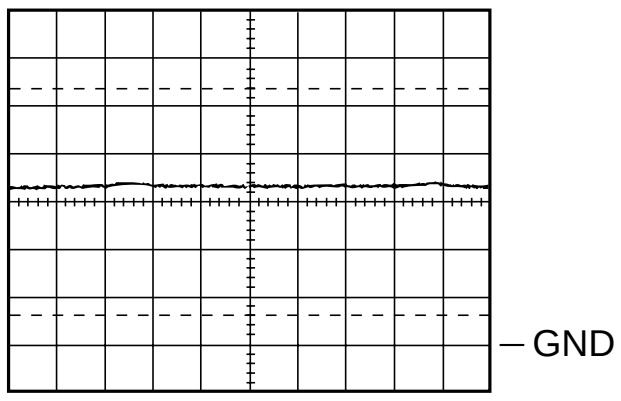

(109) **Q324 Emitter**
V: 20V/div. H: 2msec/div.

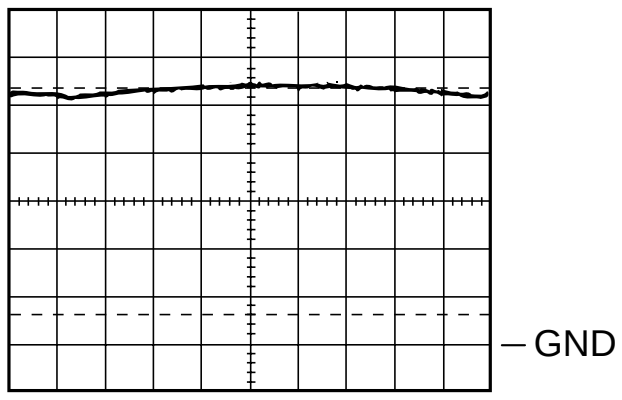

(115) **Q601 Collector**
V: 10V/div. H: 5µsec/div.

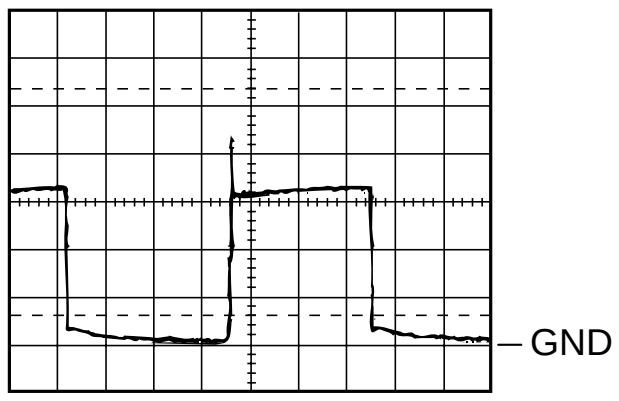

(105) **IC301 pin 5**
V: 2V/div. H: 5µsec/div.

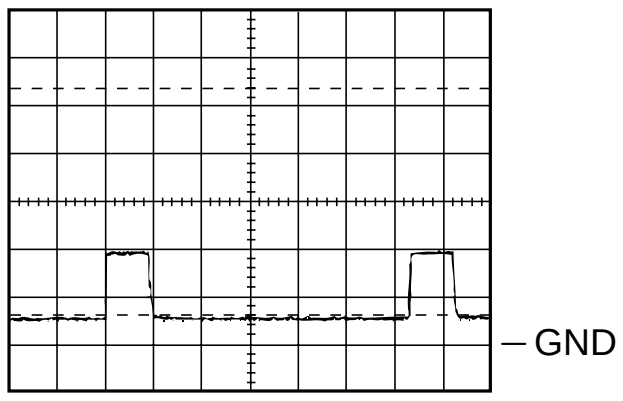

(110) **Q308 Collector**
V: 10V/div. H: 5µsec/div.

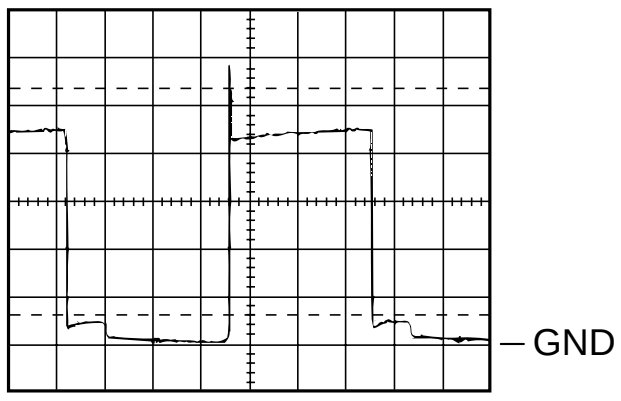

(116) **Q612 Collector**
V: 200V/div. H: 5µsec/div.

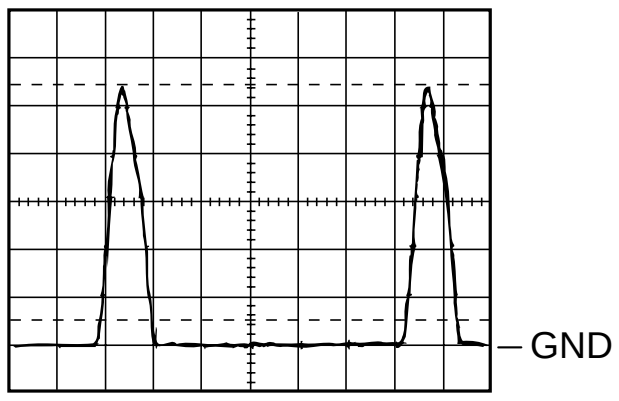

3.34 R, G and B CRT DRIVE ASSYS

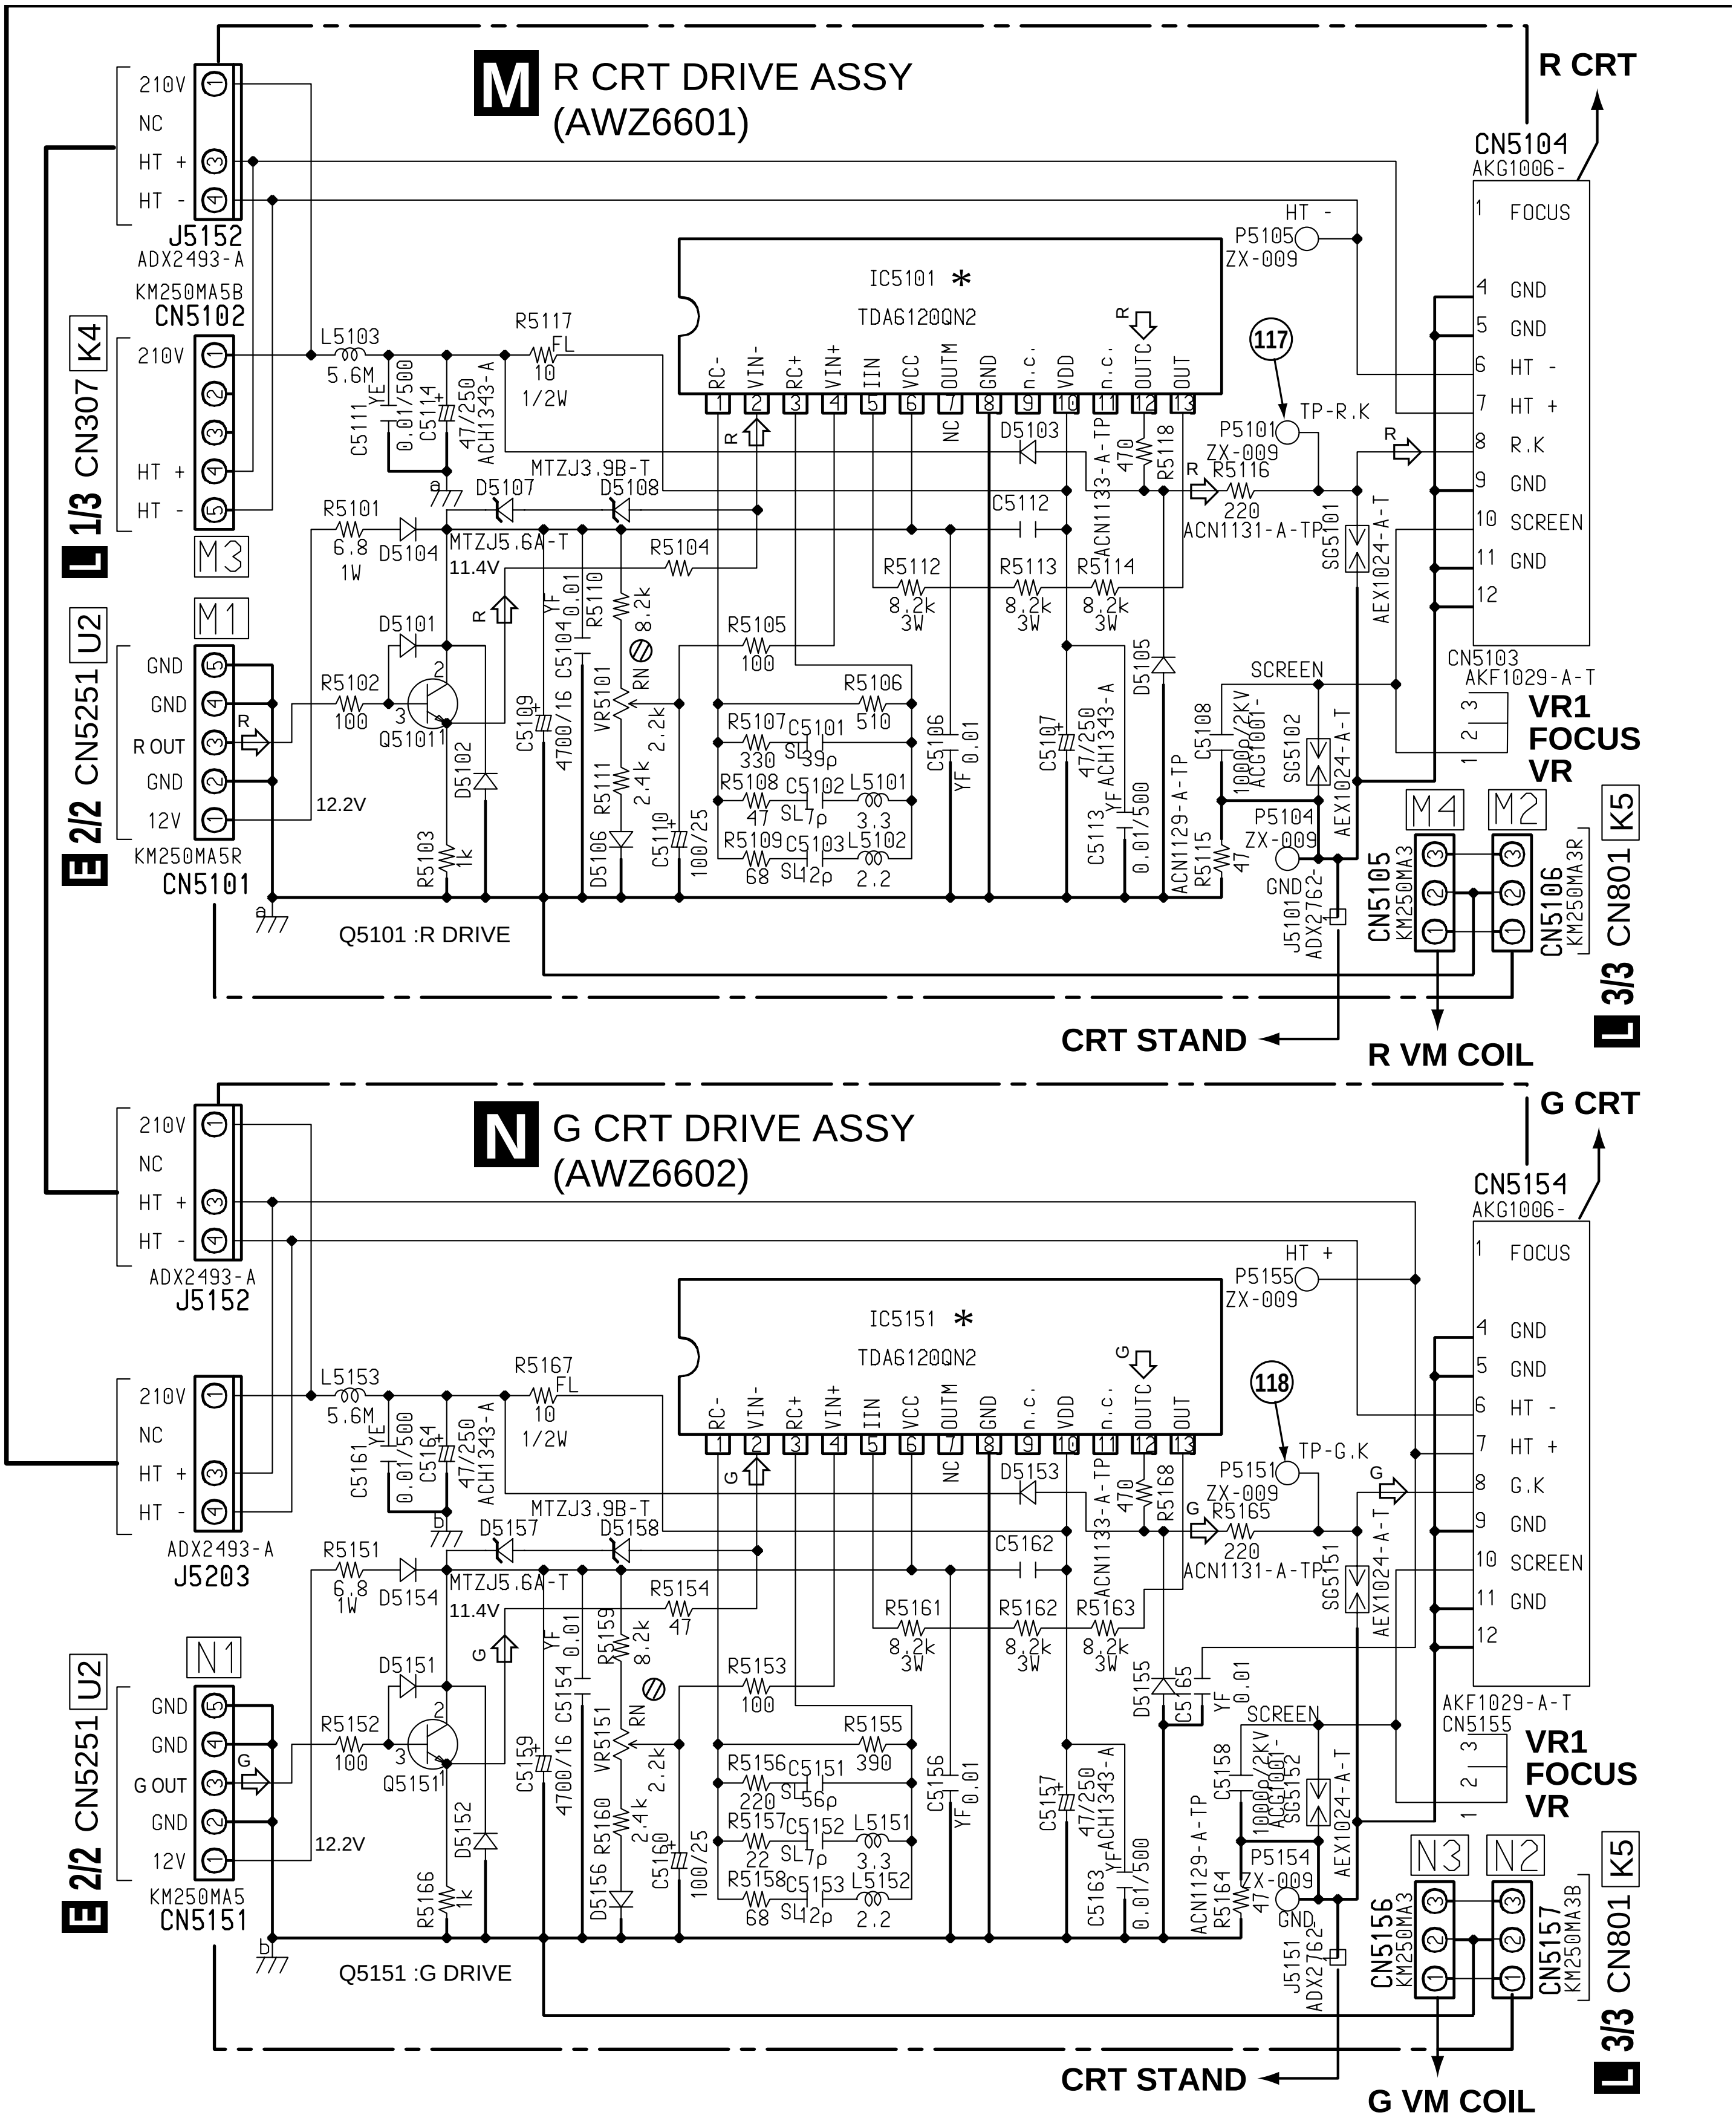
M R CRT DRIVE ASSY
(AWZ6601)
R CRT
N G CRT DRIVE ASSY
(AWZ6602)
G CRT
J5152
ADX2493-A
210V
NC
HT +
HT -
KM250MA5B
CN5102
K4
CN307
1/3
L
M3
M1
U2
CN5251
2/2
E
GND
R OUT
12V
12.2V
KM250MA5R
CN5101
Q5101 :R DRIVE
L5103
5.6M
C5111
YE
0.01/500
C5114
47/250
ACH1343-A
R5117
FL
10
1/2W
D5107
MTZJ3.9B-T
D5108
R5101
6.8
1W
D5104
MTZJ5.6A-T
11.4V
R5104
D5101
R5102
100
Q5101
D5102
R5103
1k
C5109
4700/16
C5104
YF 0.01
R5110
VR5101
RN
8.2k
2.2k
R5111
2.4k
D5106
C5110
100/25
R5105
100
R5106
510
R5107
330
C5101
SL 39p
R5108
47
C5102
SL 7p
L5101
3.3
R5109
68
C5103
SL 12p
L5102
2.2
C5106
YF 0.01
IC5101 *
TDA6120QN2
RC-
VIN-
RC+
VIN+
IIN
VCC
OUTM
GND
n.c.
VDD
OUTC
OUT
NC
D5103
ACN1133-A-TP
470
R5118
R5112
8.2k
3W
R5113
R5114
C5112
C5107
47/250
ACH1343-A
C5113
YF 0.01/500
D5105
ACN1129-A-TP
R5115
47
HT -
P5105
ZX-009
117
TP-R.K
P5101
R5116
220
ACN1131-A-TP
SG5101
AEX1024-A-T
SCREEN
C5108
1000p/2KV
ACG1001-
SG5102
P5104
GND
J5101
ADX2762-
CN5104
AKG1006-
FOCUS
R.K
CN5103
AKF1029-A-T
VR1
FOCUS
VR
M4
M2
CN5105
KM250MA3
CN5106
KM250MA3R
K5
CN801
3/3
CRT STAND
R VM COIL
ADX2493-A
J5203
N1
G OUT
KM250MA5
CN5151
Q5151 :G DRIVE
L5153
C5161
C5164
R5167
D5157
D5158
R5151
D5154
R5154
47
D5151
R5152
Q5151
D5152
R5166
C5159
C5154
R5159
VR5151
R5160
D5156
C5160
R5153
R5155
390
R5156
220
C5151
SL 56p
R5157
22
C5152
L5151
R5158
C5153
L5152
C5156
IC5151 *
D5153
R5168
R5161
R5162
R5163
C5162
C5157
C5163
D5155
C5165
R5164
HT +
P5155
118
TP-G.K
P5151
R5165
SG5151
C5158
SG5152
P5154
J5151
CN5154
G.K
CN5155
N3
N2
CN5156
CN5157
KM250MA3B
G VM COIL

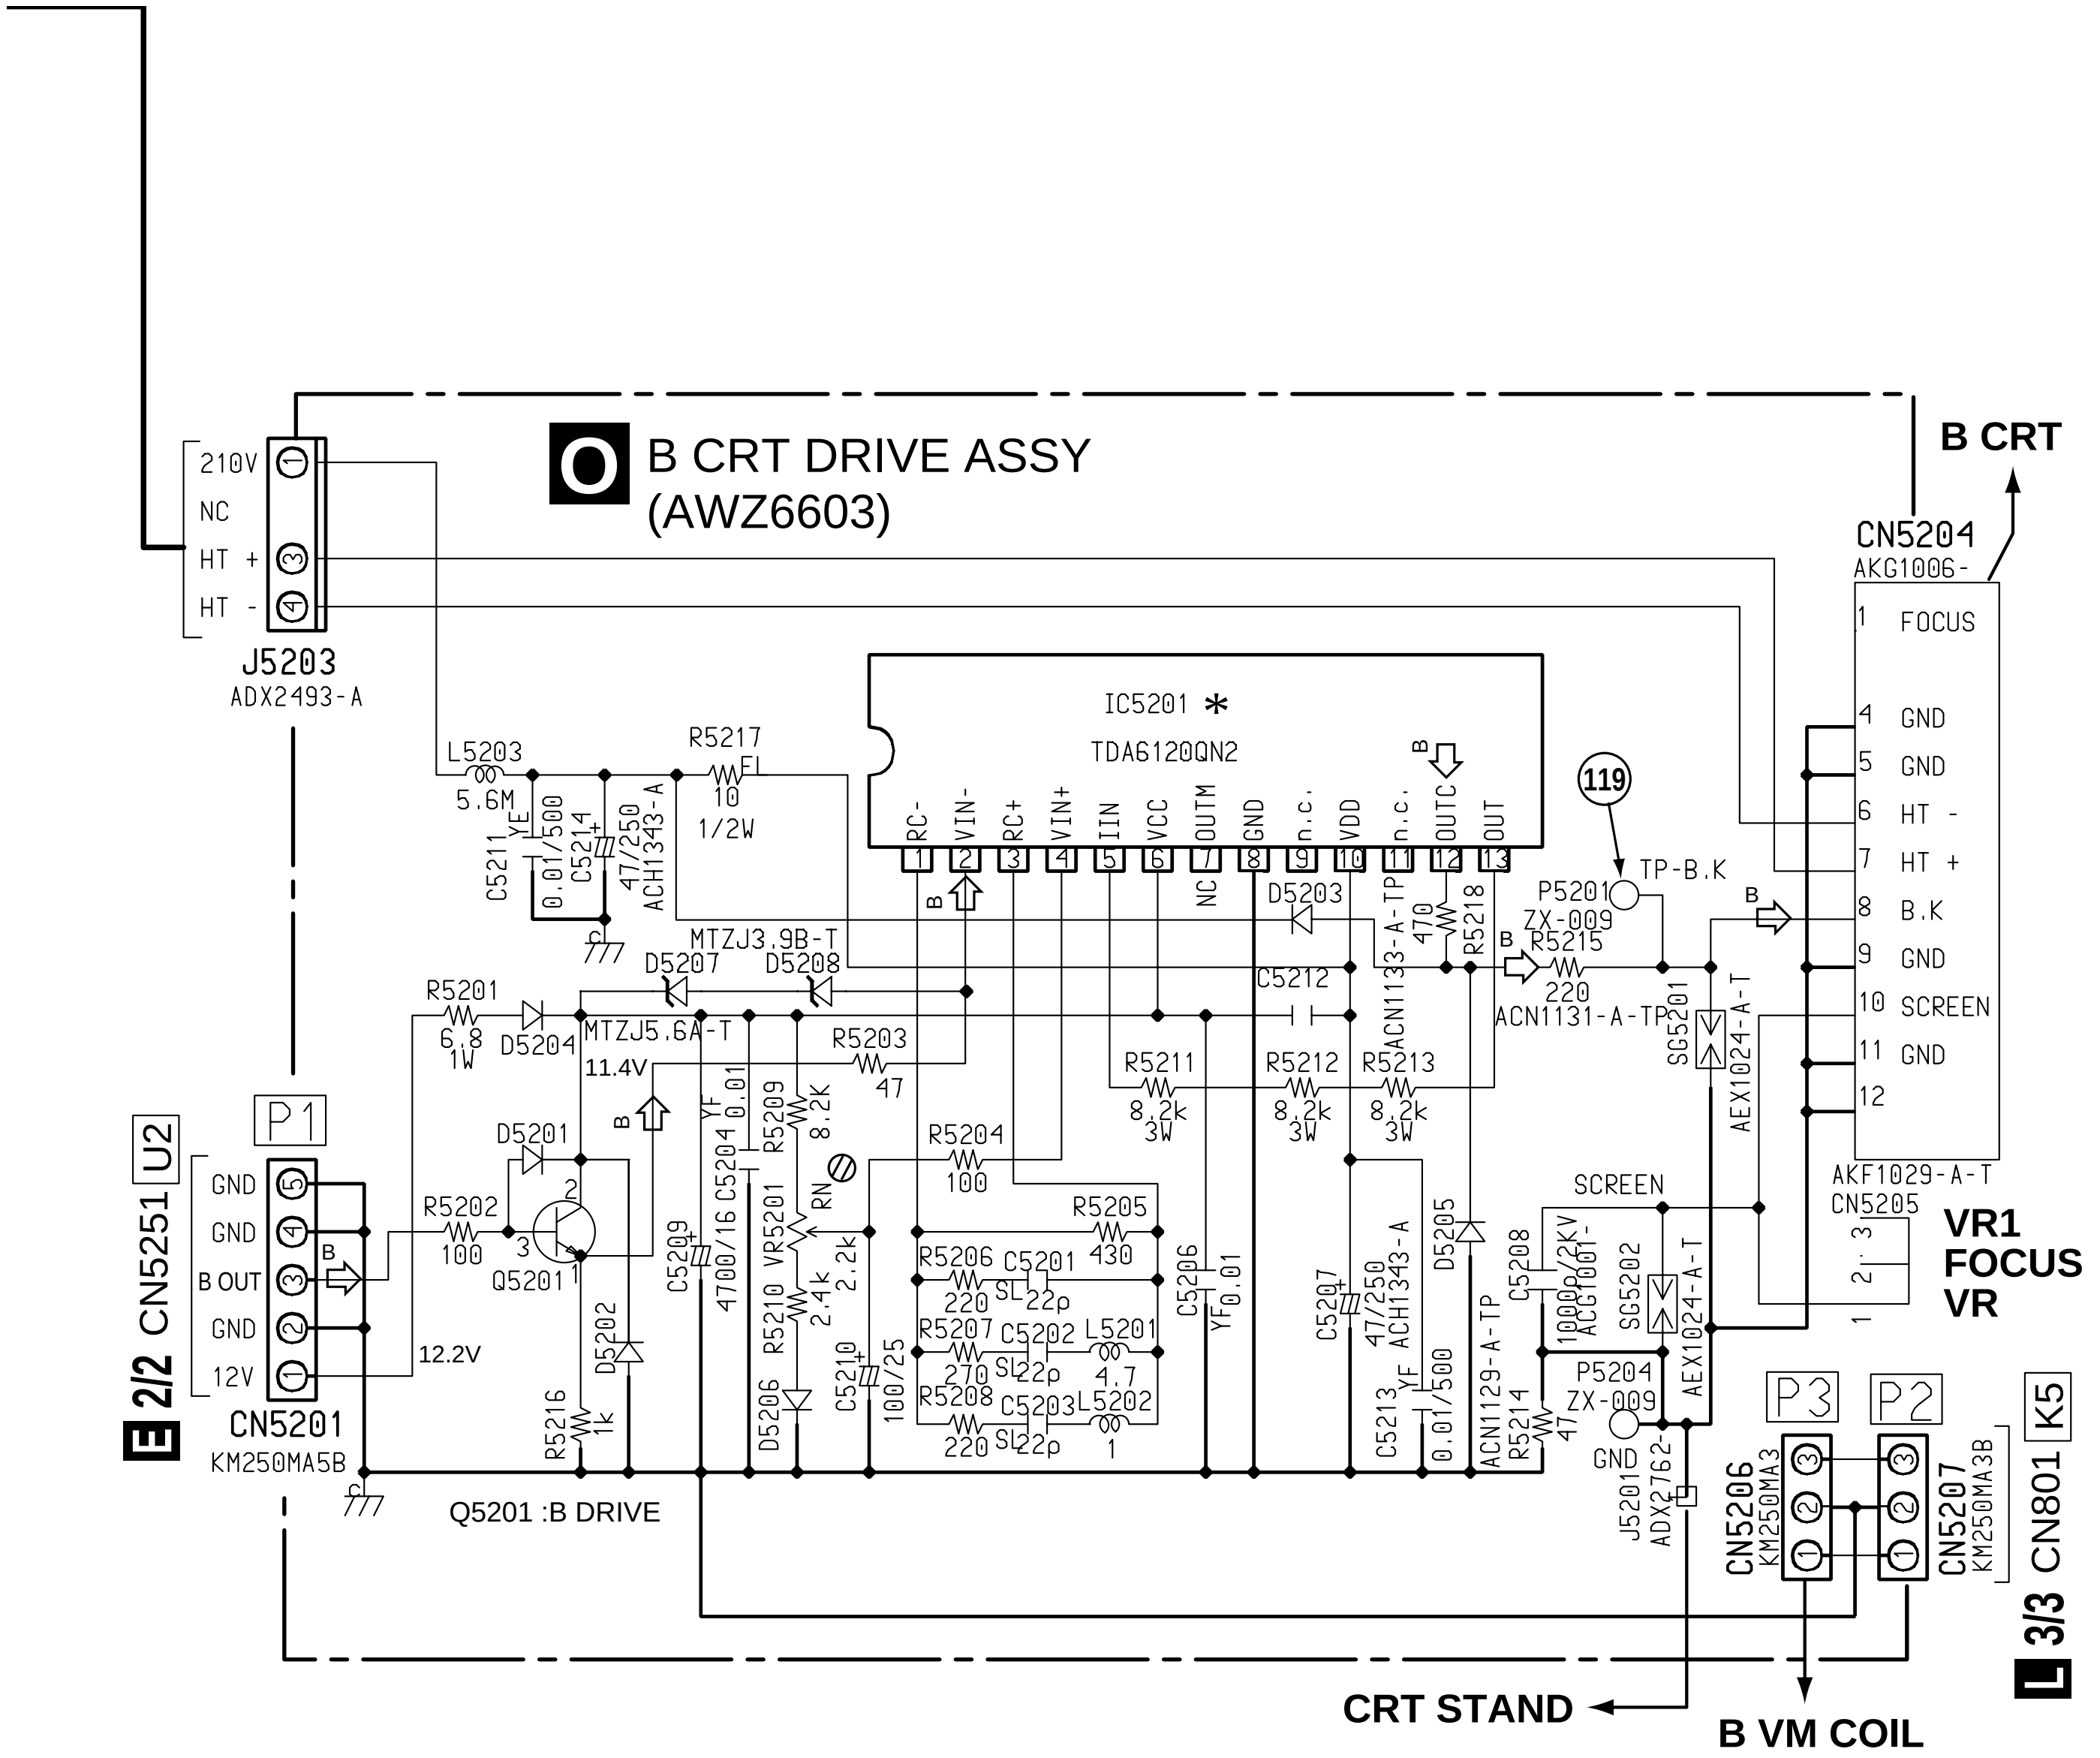
O B CRT DRIVE ASSY
(AWZ6603)
B CRT
CN5204
AKG1006-
1 FOCUS
4 GND
5 GND
6 HT -
7 HT +
8 B.K
9 GND
10 SCREEN
11 GND
12
AKF1029-A-T
CN5205
VR1 FOCUS VR
210V
NC
HT +
HT -
J5203
ADX2493-A
IC5201 *
TDA6120QN2
RC-
VIN-
RC+
VIN+
IIN
VCC
OUTM
GND
n.c.
VDD
n.c.
OUTC
OUT
NC
L5203 5.6M
C5211 YF 0.01/500
C5214 47/250 ACH1343-A
R5217 FI 10 1/2W
MTZJ3.9B-T
D5207
D5208
R5201 6.8 1W
D5204
MTZJ5.6A-T
11.4V
R5203 47
R5211 8.2k 3W
R5212 8.2k 3W
R5213 8.2k 3W
C5212
D5203
ACN1133-A-TP
470
R5218
R5215 220
ACN1131-A-TP
P5201 ZX-009
TP-B.K
119
SG5201
AEX1024-A-T
P1
GND
GND
B OUT
GND
12V
CN5201
KM250MA5B
2/2 CN5251 U2
E
12.2V
R5202 100
D5201
Q5201
D5202
R5216 1k
C5209 4700/16
C5204 YF 0.01
R5209 8.2k
RN
VR5201 2.4k
2.2k
R5210
D5206
C5210 100/25
R5204 100
R5205 430
R5206 220
C5201 SL 22p
R5207 270
C5202 SL 22p
L5201 4.7
R5208 220
C5203 SL 22p
L5202 1
C5206 YF 0.01
C5207 47/250 ACH1343-A
C5213 YF 0.01/500
D5205
ACN1129-A-TP
R5214 47
SCREEN
C5208 1000p/2KV ACG7001-
SG5202
AEX1024-A-T
P5204 ZX-009
GND
J5201 ADX2762-
P3
P2
CN5206 KM250MA3
CN5207 KM250MA3B
CN801 K5
3/3
L
Q5201 :B DRIVE
CRT STAND
B VM COIL

R, G or B ⇨ : R, G or B SIGNAL ROUTE

* Resistor indicated in ohm,1/4W+5% tolerance unless otherwise noted.k:k ohm,M:M ohm

* Capacitor indicated in Capacity(uF)/Voltage(V) unless otherwise noted.p:pF indication without voltage is 50V except Electrolytic capacitor.

* Diode

S5688G-TP

* Transister

2SC1740S(RS)-T

INPUT Signal

Video signal: EIA full color-bar
Picture quality: Standard
Range: DC range

⑰ **TP-R.K**
V: 50V/div. H: 10µsec/div.

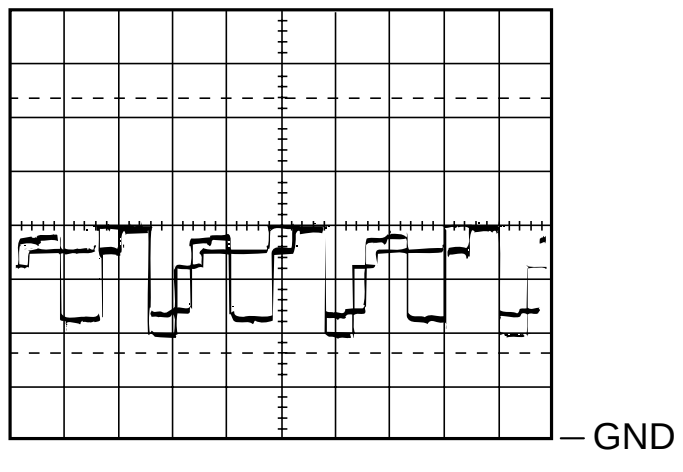

⑱ **TP-G.K**
V: 50V/div. H: 10µsec/div.

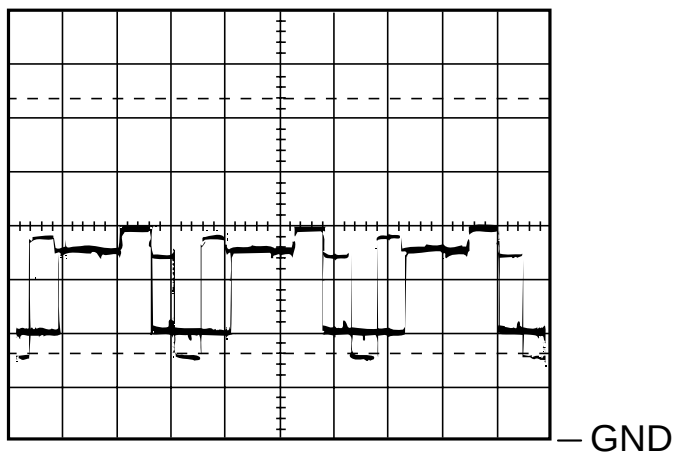

⑲ **TP-B.K**
V: 50V/div. H: 10µsec/div.

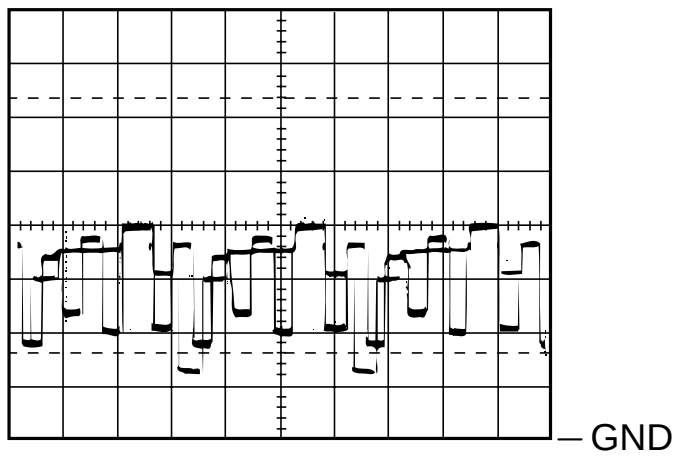

3.35 POWER SUPPLY ASSY

P POWER SUPPLY ASSY
(AWV1912)

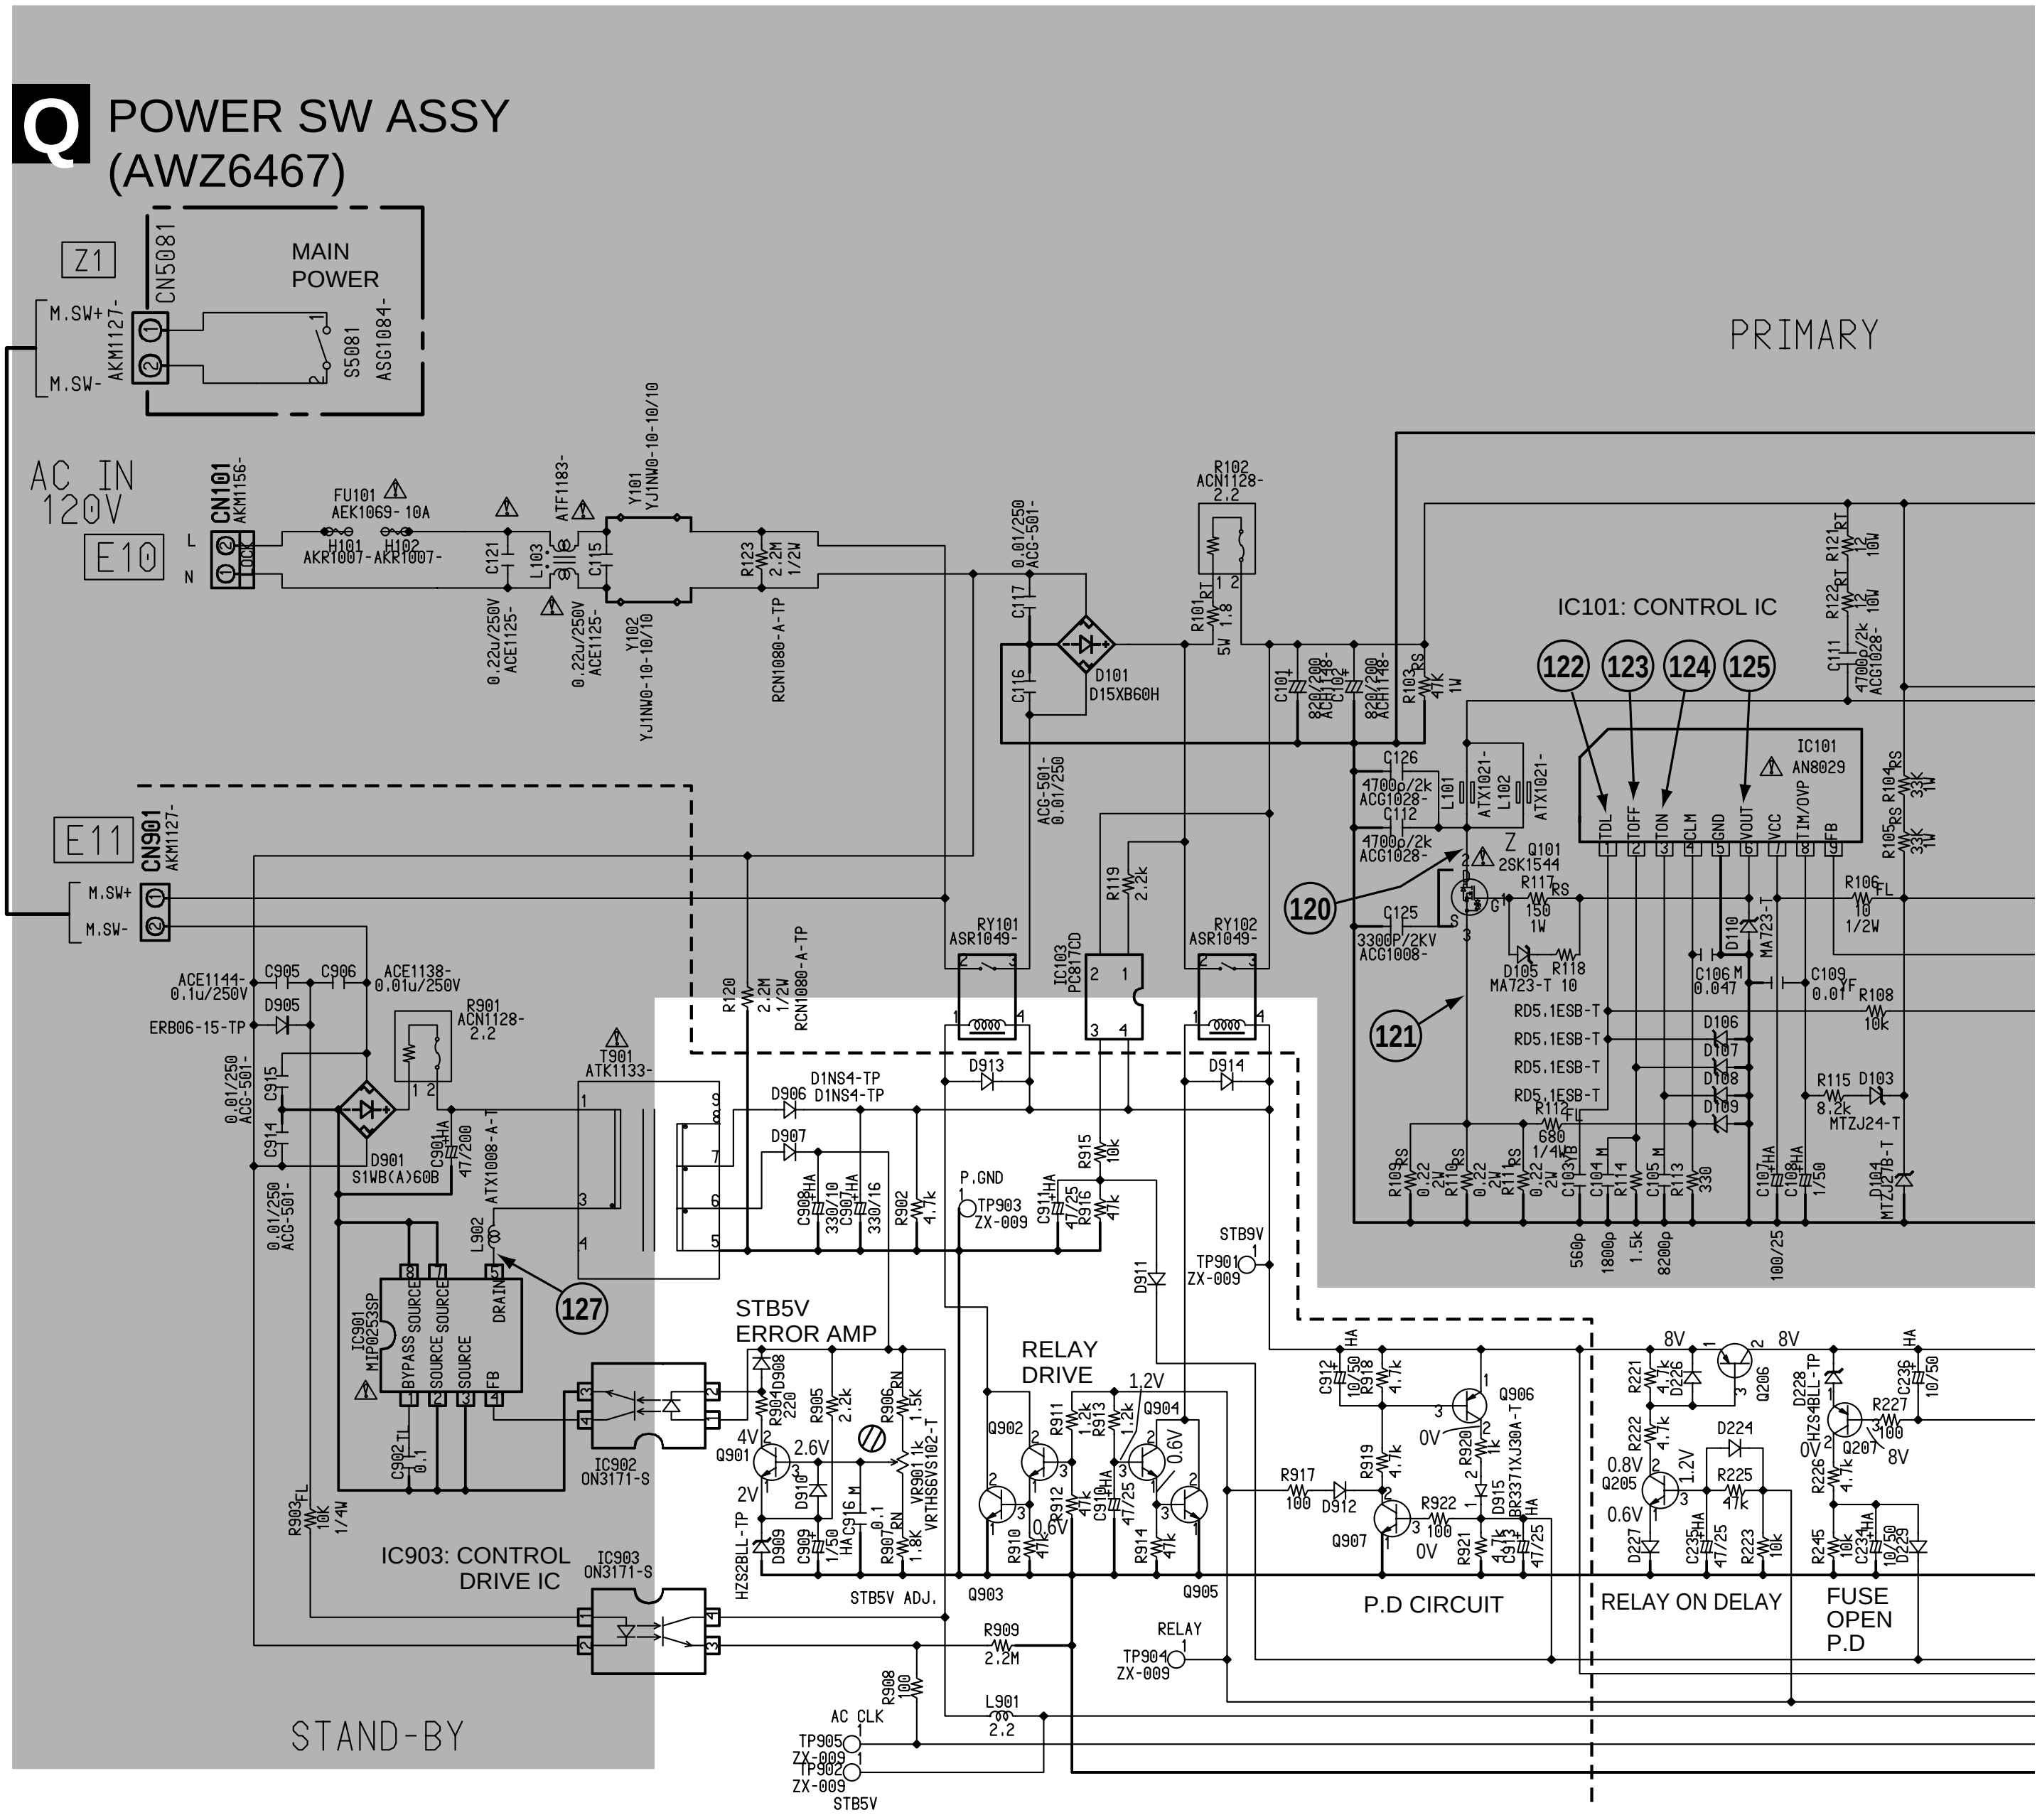
Q POWER SW ASSY
(AWZ6467)
Z1
CN5081
MAIN POWER
S5081
ASC1084-
AKM1127-
M.SW+
M.SW-
PRIMARY
AC IN 120V
E10
CN101 AKM1156-
FU101 AEK1069- 10A
H101 AKR1007-
H102 AKR1007-
C121 0.22u/250V ACE1125-
L103 ATF1183-
C115 0.22u/250V ACE1125-
Y101 YJ1NN0-10-10/10
Y102 YJ1NN0-10-10/10
R123 2.2M 1/2W RCN1080-A-TP
C117 0.01/250 ACG-501-
C116
D101 D15XB60H
R102 ACN1128- 2.2
R101 RT 5W 1.8
C101 820/200 ACH1148-
C102 820/200 ACH1148-
R103 RS 47k 1W
IC101: CONTROL IC
122 123 124 125
R121 RT 10W
R122 RT 10W
C111 4700p/2k ACG1028-
C126 4700p/2k ACG1028-
C112 4700p/2k ACG1028-
L101 ATX1021-
L102 ATX1021-
IC101 AN8029
TDL TOFF TON CLM GND VOUT VCC TIM/OVP FB
R104 RS 33k 1W
R105 RS 33k 1W
Q101 2SK1544
R117 RS 150 1W
120
C125 3300P/2KV ACG1008-
D105 MA723-T
R118 10
D110 MA723-T
R106 FL 10 1/2W
C106 M 0.047
C109 YF 0.01
R108 10k
121
D106 D107 D108 D109
RD5.1ESB-T
R115 8.2k
D103 MTZJ24-T
R112 FL 680 1/4W
R109 RS 0.22 2W
R110 RS 0.22 2W
R111 RS 0.22 2W
C103 YB 560p
C104 M 1800p
R114 1.5k
C105 M 8200p
R113 330
C107 HA 100/25
C108 HA 1/50
D104 MTZJ27B-T
E11
CN901 AKM1127-
M.SW+
M.SW-
ACE1144- 0.1u/250V
C905 C906
ACE1138- 0.01u/250V
D905 ERB06-15-TP
R901 ACN1128- 2.2
C915 0.01/250 ACG-501-
C914 0.01/250 ACG-501-
D901 S1WB(A)60B
C901 HA 47/200
ATX1008-A-T
L902
T901 ATK1133-
127
IC901 MIP0255SP
BYPASS SOURCE SOURCE SOURCE FB DRAIN
C902 TI 0.1
R903 FL 10K 1/4W
IC902 ON3171-S
IC903: CONTROL DRIVE IC
IC903 ON3171-S
R120 2.2M 1/2W RCN1080-A-TP
RY101 ASR1049-
IC103 PC817CD
R119 2.2k
RY102 ASR1049-
D913 D914
D906 D1NS4-TP
D907
C908 HA 330/10
C907 HA 330/16
R902 4.7k
P.GND
TP903 ZX-009
C911 HA 47/25
R916 47k
R915 10k
STB9V
TP901 ZX-009
D911
STB5V ERROR AMP
Q901
D908
R904 220
R905 2.2k
R906 RN 1.5K
VR901 1k VRTHS6VS102-T
R907 RN 1.8K
C916 M 0.1
D910
C909 1/50 HA
D909 HZS2BLL-TP
4V 2.6V 2V
STB5V ADJ.
RELAY DRIVE
Q902 Q903 Q904 Q905
R911 12k
R913 12k
R912 47k
R910 47k
C910 HA 47/25
R914 47k
1.2V 0.6V 0.6V
C912 HA 10/50
R918 4.7k
Q906
R920 1k
R919 4.7k
R917 100
D912
R922 100
Q907
D915 BR3371XJ30A-T
R921 47k
C913 HA 47/25
0V
P.D CIRCUIT
8V 8V
R221 4.7k
D226
Q206
D228 HZS4BLL-TP
C236 HA 10/50
R227 100
Q207
R222 4.7k
D224
R225 47k
Q205
0.8V 1.2V 0.6V
D227
C235 HA 47/25
R223 10k
R226 4.7k
R245 10k
C234 HA 10/50
D229
RELAY ON DELAY
FUSE OPEN P.D
R909 2.2M
RELAY
TP904 ZX-009
R908 100
AC CLK
L901 2.2
TP905 ZX-009
TP902 ZX-009
STB5V
STAND-BY

1.RESISTORS
(RS);METAL OXIDE FILM RESISTOR
(RT);CEMENT RESISTOR
(RN);METAL FILM RESISTOR
(FL);NONFLAMMABLE RESISTOR
THE OTHERS;CARBON FILM RESISTOR

Those unspecified ones are of 1/4W
k;kΩ ,M;MΩ ,Unspecified ones are of Ω

2.CAPACITORS
(YF);CERAMIC CAPACITOR
(SL);CERAMIC CAPACITOR
(HA);HIGH TEMP CHEMICAL CAPACITOR
(YB);CERAMIC CAPACITOR
(M);MILAR CAPACITOR
p;pF,Unspecified ones are of μ F
Capacity / Voltage (;A.C,no mark;D.C)
Unspecified ones are of 50V

3.The ⚠ mark found on same component parts indicates the importance of the safety factor of the parts.
Therefore,when replacing,be sure to use parts of identical de-signation.

▨ : CHARGED SECTION

2SA933S(RS)-T

2SC1740S(RS)-T

1SS133-T

- NOTE FOR FUSE REPLACEMENT

CAUTION - FOR CONTINUED PROTECTION AGAINST RISK OF FIRE.
REPLACE WITH SAME TYPE AND RATINGS ONLY.

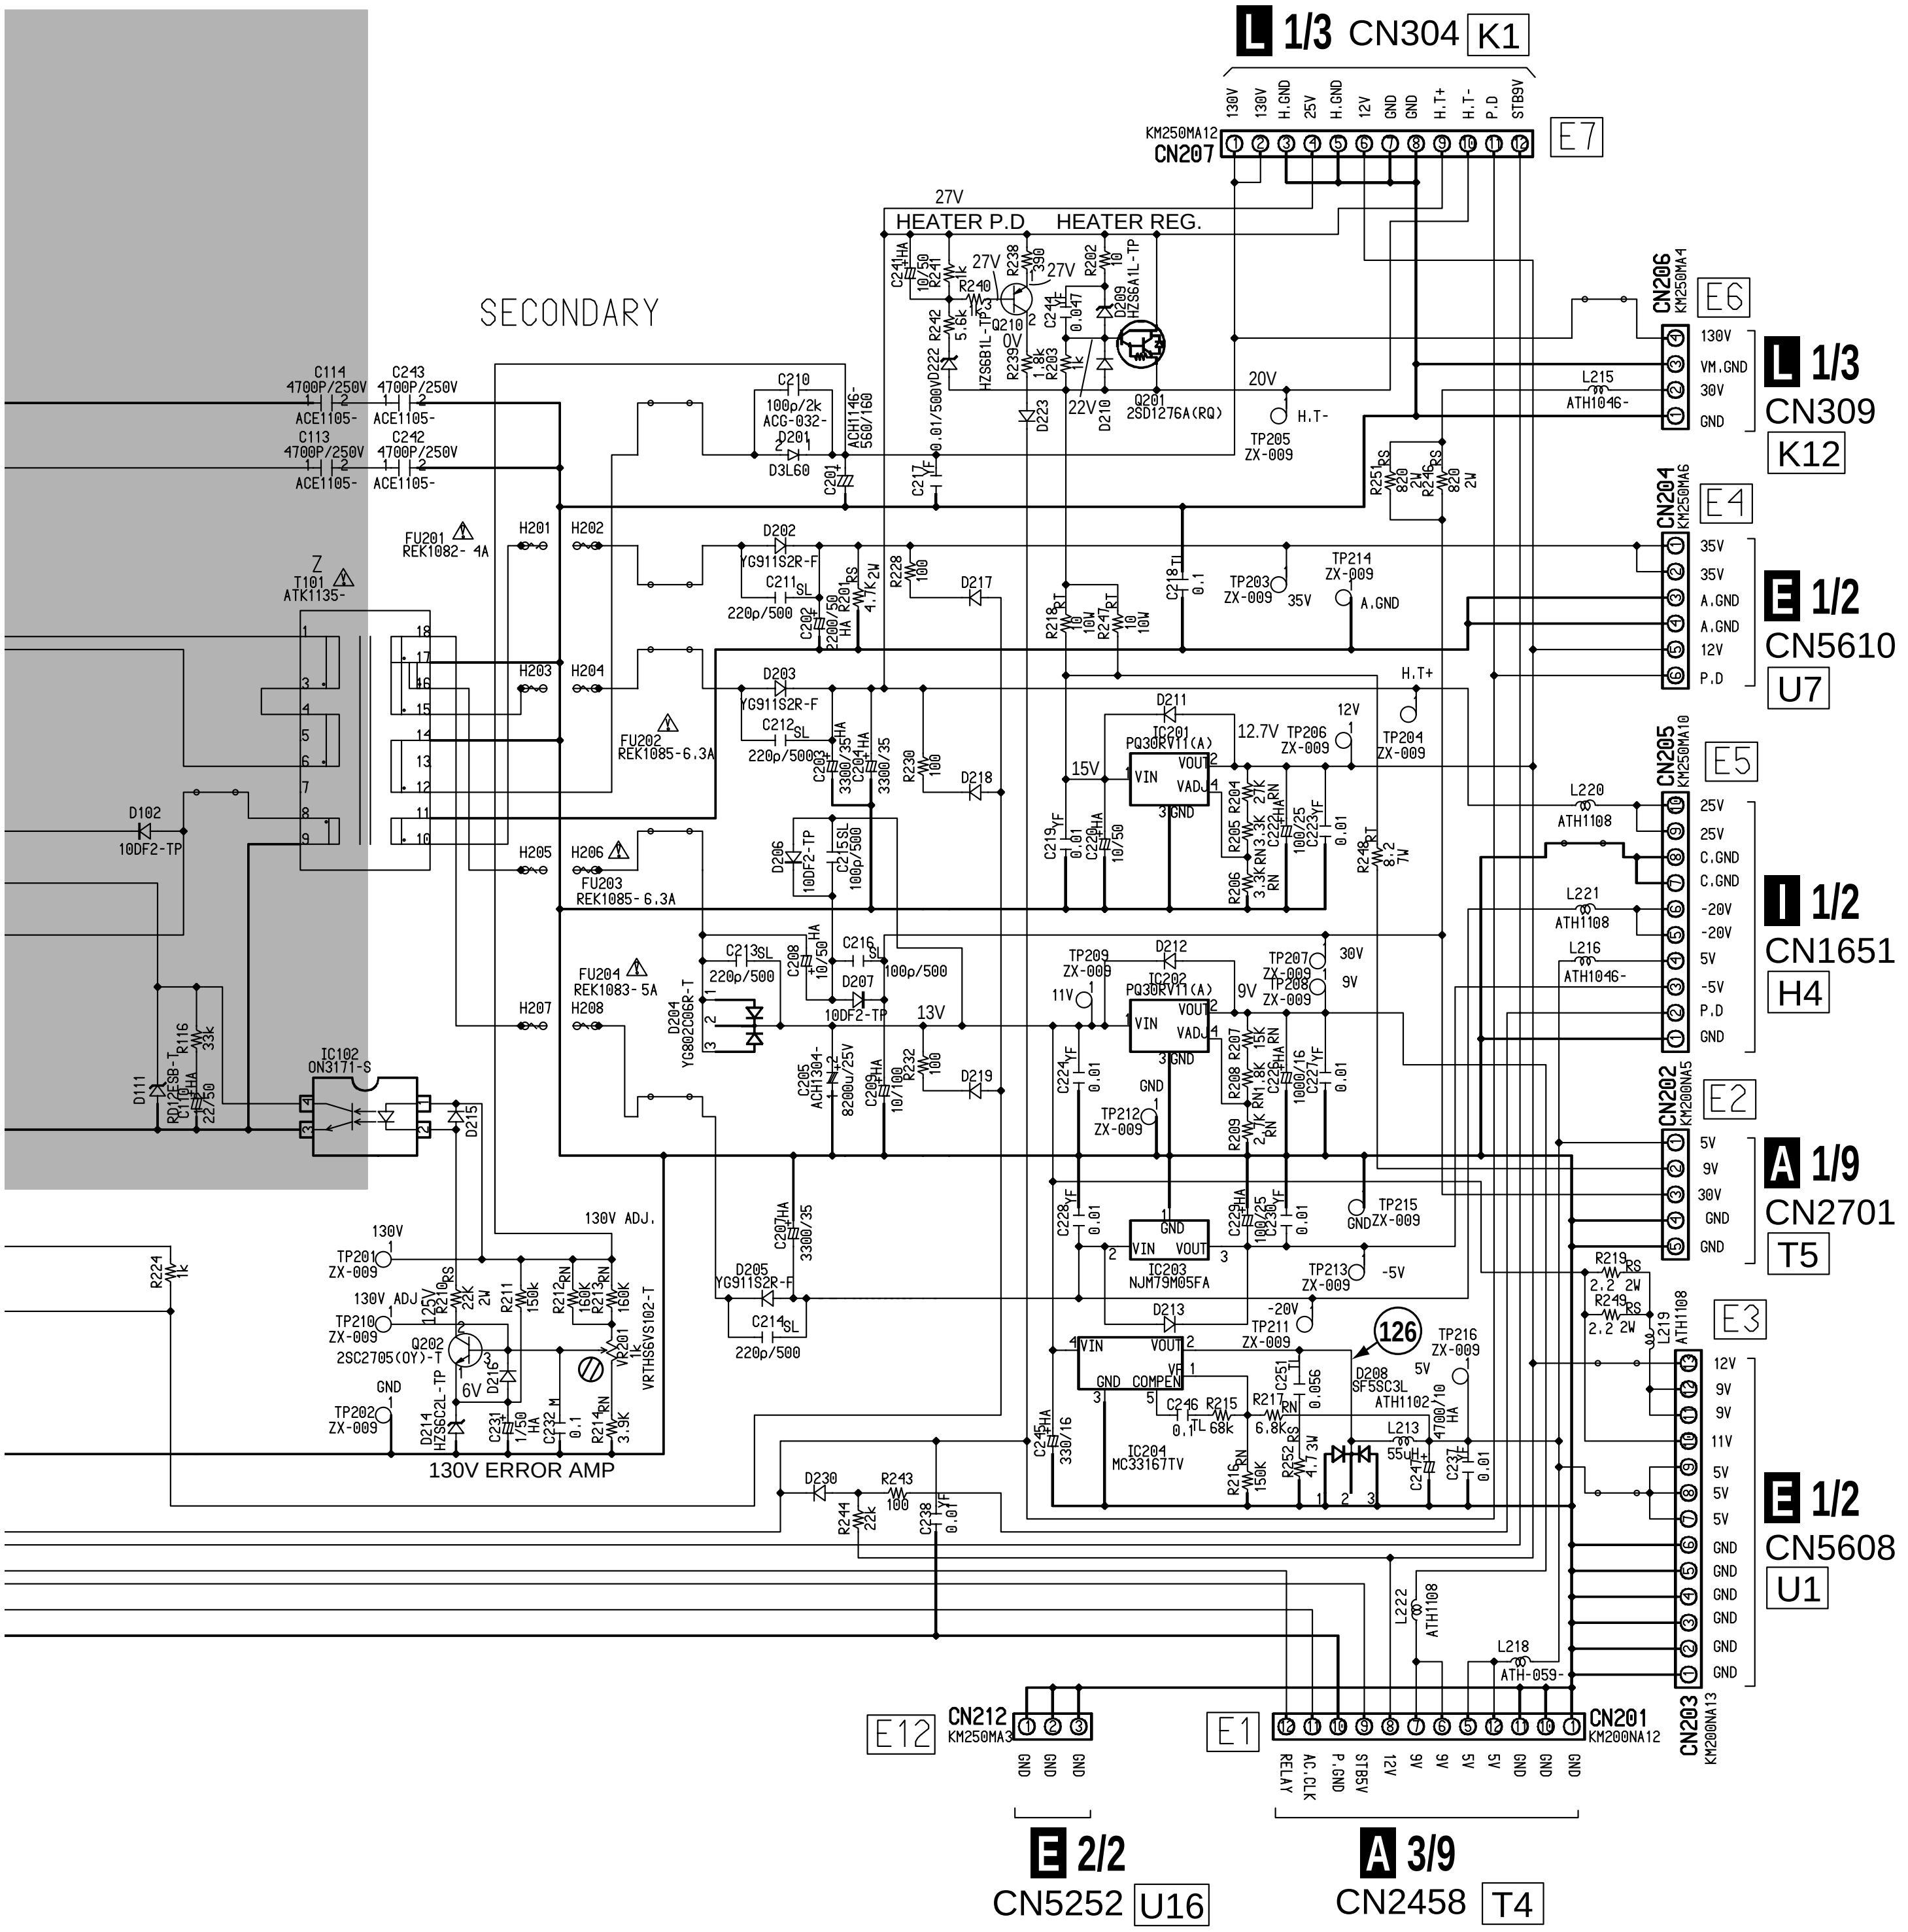
L 1/3 CN304 K1
KM250MA12
CN207
130V
130V
H.GND
25V
H.GND
12V
GND
GND
H.T+
H.T-
P.D
STB9V
E7
27V
HEATER P.D
HEATER REG.
SECONDARY
C241 HA 10/50
R241 1k
R240 3.3k
R242 5.6k
D222 HZS6B1L-TP
R238 390
Q210
R239 1.8k
R203 1k
R202 10
C244 0.047
D209 HZS6A1L-TP
Q201 2SD1276A(RQ)
D210
D223
22V
20V
H.T-
TP205 ZX-009
C114 4700P/250V ACE1105-
C243 4700P/250V ACE1105-
C113 4700P/250V ACE1105-
C242 4700P/250V ACE1105-
C210 100p/2k ACG-032-
D201 D3L60
ACH1146- 560/160
C201
C217 0.01/500V
CN206 KM250MA4
E6
130V
VM.GND
30V
GND
L215 ATH1046-
L 1/3 CN309 K12
R251 RS 820 2W
R250 RS 820 2W
CN204 KM250MA6
E4
35V
35V
A.GND
A.GND
12V
P.D
E 1/2 CN5610 U7
FU201 REK1082- 4A
H201
H202
H203
H204
H205
H206
H207
H208
D202 YG911S2R-F
C211 SL 220p/500
C202 HA 2200/50
R201 RS 4.7k 2W
R228 100
D217
R218 RT 10 10W
R247 RT 10 10W
C218 TL 0.1
TP203 ZX-009
35V
TP214 ZX-009
A.GND
H.T+
Z
T101 ATK1135-
D102 10DF2-TP
D203 YG911S2R-F
C212 SL 220p/500
FU202 REK1085-6.3A
C203 HA 3300/35
C204 HA 3300/35
R230 100
D218
D211
IC201 PQ30RV11(A)
VIN VOUT VADJ GND
15V
12.7V
TP206 ZX-009
12V
TP204 ZX-009
R204 27K RN
R205 3.3K RN
C222 HA 100/25
C223 YF 0.01
C219 YF 0.01
C220 HA 10/50
R206 3.3K RN
R248 RT 8.2 7W
CN205 KM250MA10
E5
L220 ATH1108
25V
25V
C.GND
C.GND
-20V
-20V
5V
-5V
P.D
GND
L221 ATH1108
L216 ATH1046-
I 1/2 CN1651 H4
D206 10DF2-TP
C215 SL 100p/500
FU203 REK1085-6.3A
C213 SL 220p/500
C208 HA 10/50
C216 SL 100p/500
D207 10DF2-TP
FU204 REK1083-5A
D204 YG802C06R-T
13V
C205 ACH1304- 8200u/25V
C209 HA 10/100
R232 100
D219
TP209 ZX-009
11V
D212
IC202 PQ30RV11(A)
9V
TP207 ZX-009
TP208 ZX-009
30V
9V
R207 15K RN
R208 1.8K RN
C226 HA 1000/16
C227 YF 0.01
C224 YF 0.01
GND
TP212 ZX-009
R209 2.2K RN
CN202 KM200NA5
E2
5V
9V
30V
GND
GND
A 1/9 CN2701 T5
D111 RD12ESB-T
R116 33k
C109 HA 22/50
IC102 ON3171-S
D215
C228 YF 0.01
IC203 NJM79M05FA
GND VIN VOUT
C229 HA 100/25
C230 YF 0.01
TP215 ZX-009
TP213 ZX-009
-5V
R219 RS 2.2 2W
R249 RS 2.2 2W
L219 ATH1108
E3
130V
TP201 ZX-009
130V ADJ.
R224 1k
130V ADJ
TP210 ZX-009
R210 RS 22K 2W
R211 150k
R212 RN 160k
R213 RN 160k
VR201 1k VRTHS6VS102-T
Q202 2SC2705(OY)-TP
125V
6V
D216
GND
TP202 ZX-009
D214 HZS6C2L-TP
C231 1/50
C232 0.1
R214 RN 3.9k
130V ERROR AMP
C207 HA 3300/35
D205 YG911S2R-F
C214 SL 220p/500
D213
-20V
TP211 ZX-009
IC204 MC33167TV
VIN VOUT GND COMPEN VF
C246 TL 0.1
R215 68k
R217 RN 6.8k
C251 TL 0.056
TP216 ZX-009
126
D208 SF5SC3L
5V
ATH1102
L213 55uH
C247 HA 4700/10
C237 YF 0.01
C245 HA 330/16
R216 RN 150K
R252 RS 4.7 3W
D230
R243 100
R244 22k
C238 YF 0.01
12V
9V
9V
11V
5V
5V
5V
GND
GND
GND
GND
GND
GND
E 1/2 CN5608 U1
L222 ATH1108
L218 ATH-059-
CN203 KM200NA13
CN212 KM250MA3
E12
GND GND GND
E1
CN201 KM200NA12
RELAY
AC.CLK
P.GND
STB5V
12V
9V
9V
5V
5V
GND
GND
GND
E 2/2 CN5252 U16
A 3/9 CN2458 T4

P POWER SUPPLY ASSY

Input signal
Video signal : EIA full color-bar
Picture quality : Standard
Range :DC range (Unless otherwise noted)

(120) **Q101 Drain**
V: 100V/div. H: 10µsec/div.

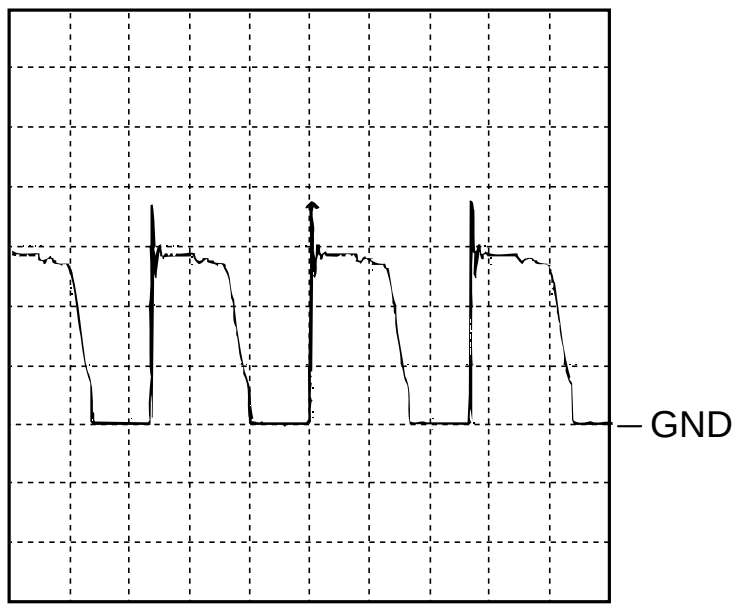

(121) **Q101 Gate**
V: 10V/div. H: 10µsec/div.

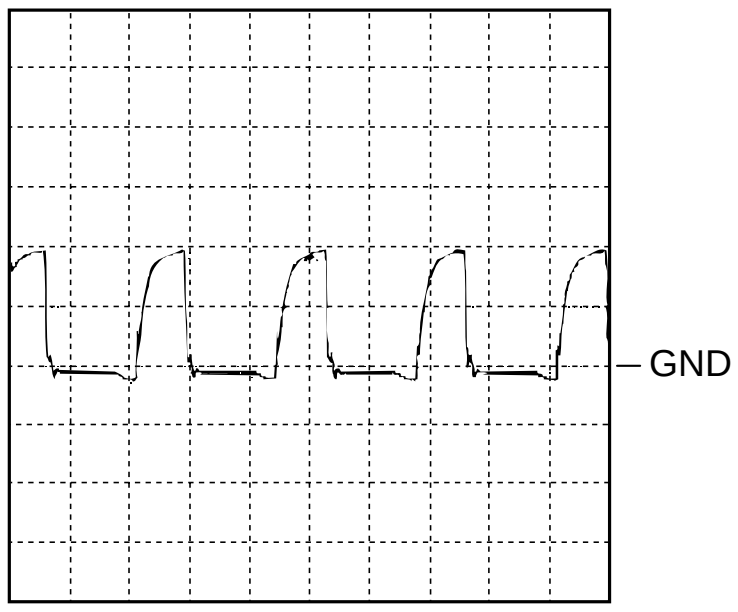

(122) **IC101 pin 1**
V: 1V/div. H: 10µsec/div.

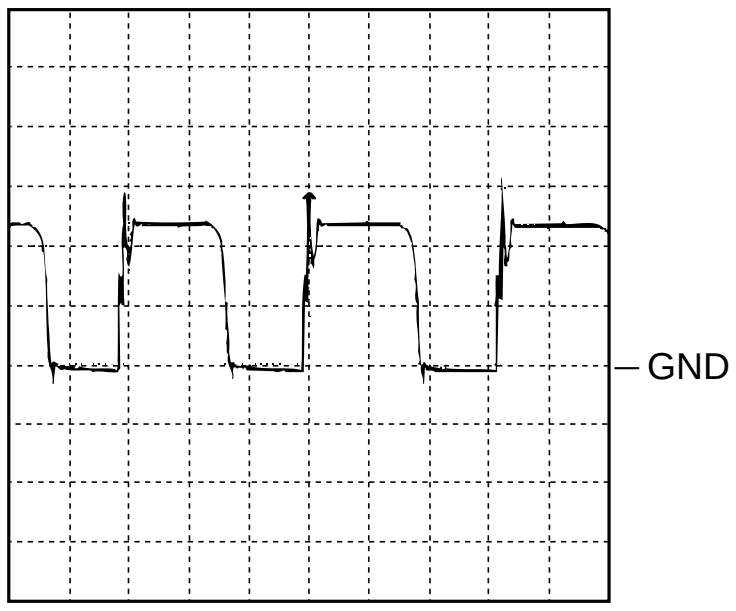

(123) **IC101 pin 2**
V: 500mV/div. H: 10µsec/div.

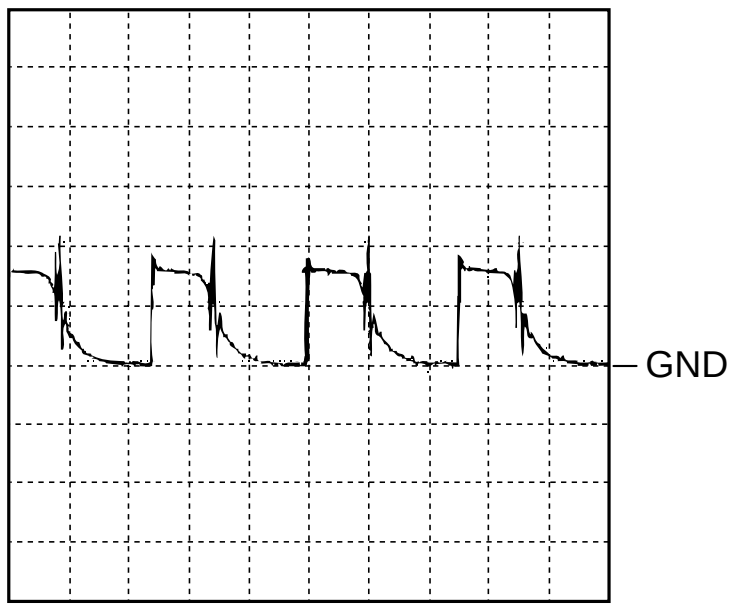

(124) **IC101 pin 3**
V: 500mV/div. H: 10µsec/div.

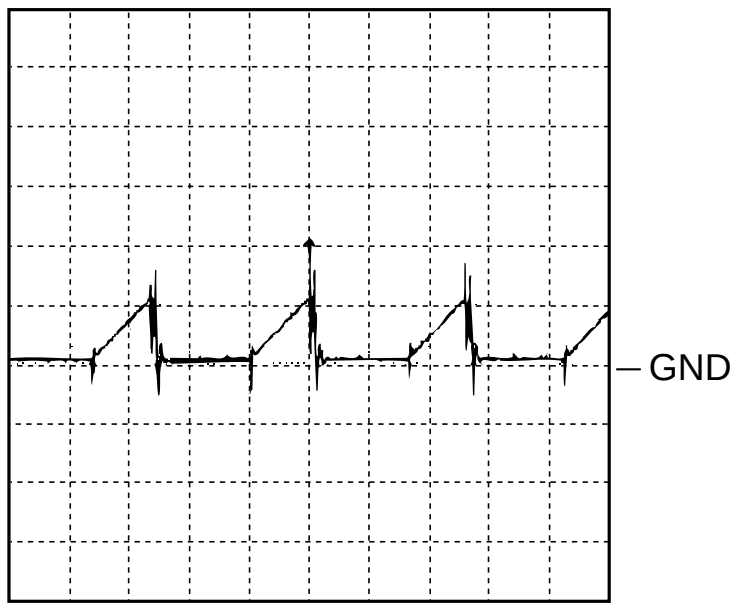

(125) **IC101 pin 6**
V: 10V/div. H: 10µsec/div.

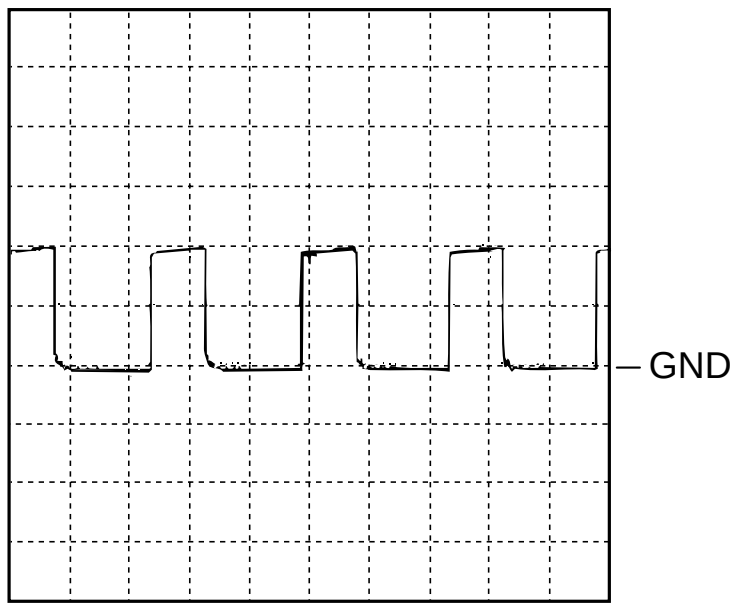

(126) **IC204 pin 2**
V: 5V/div. H: 10µsec/div.

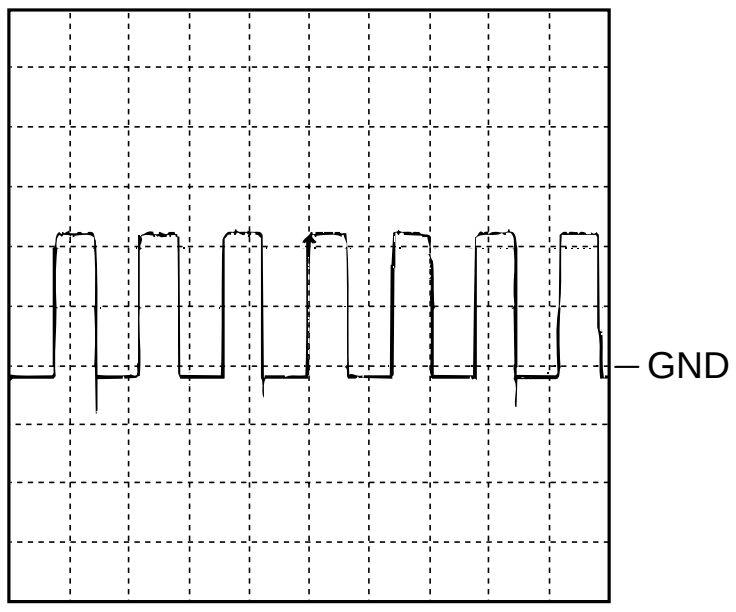

(127) **IC901 pin 5**
V: 100V/div. H: 50µsec/div.

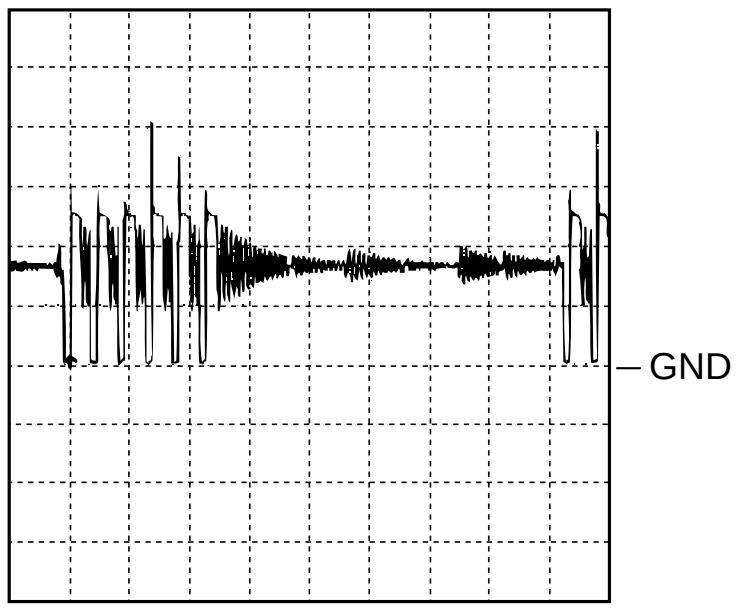

3.36 FRONT INPUT, FRONT CONTROL and LED DPO ASSYS

R FRONT INPUT ASSY (AWZ6466)

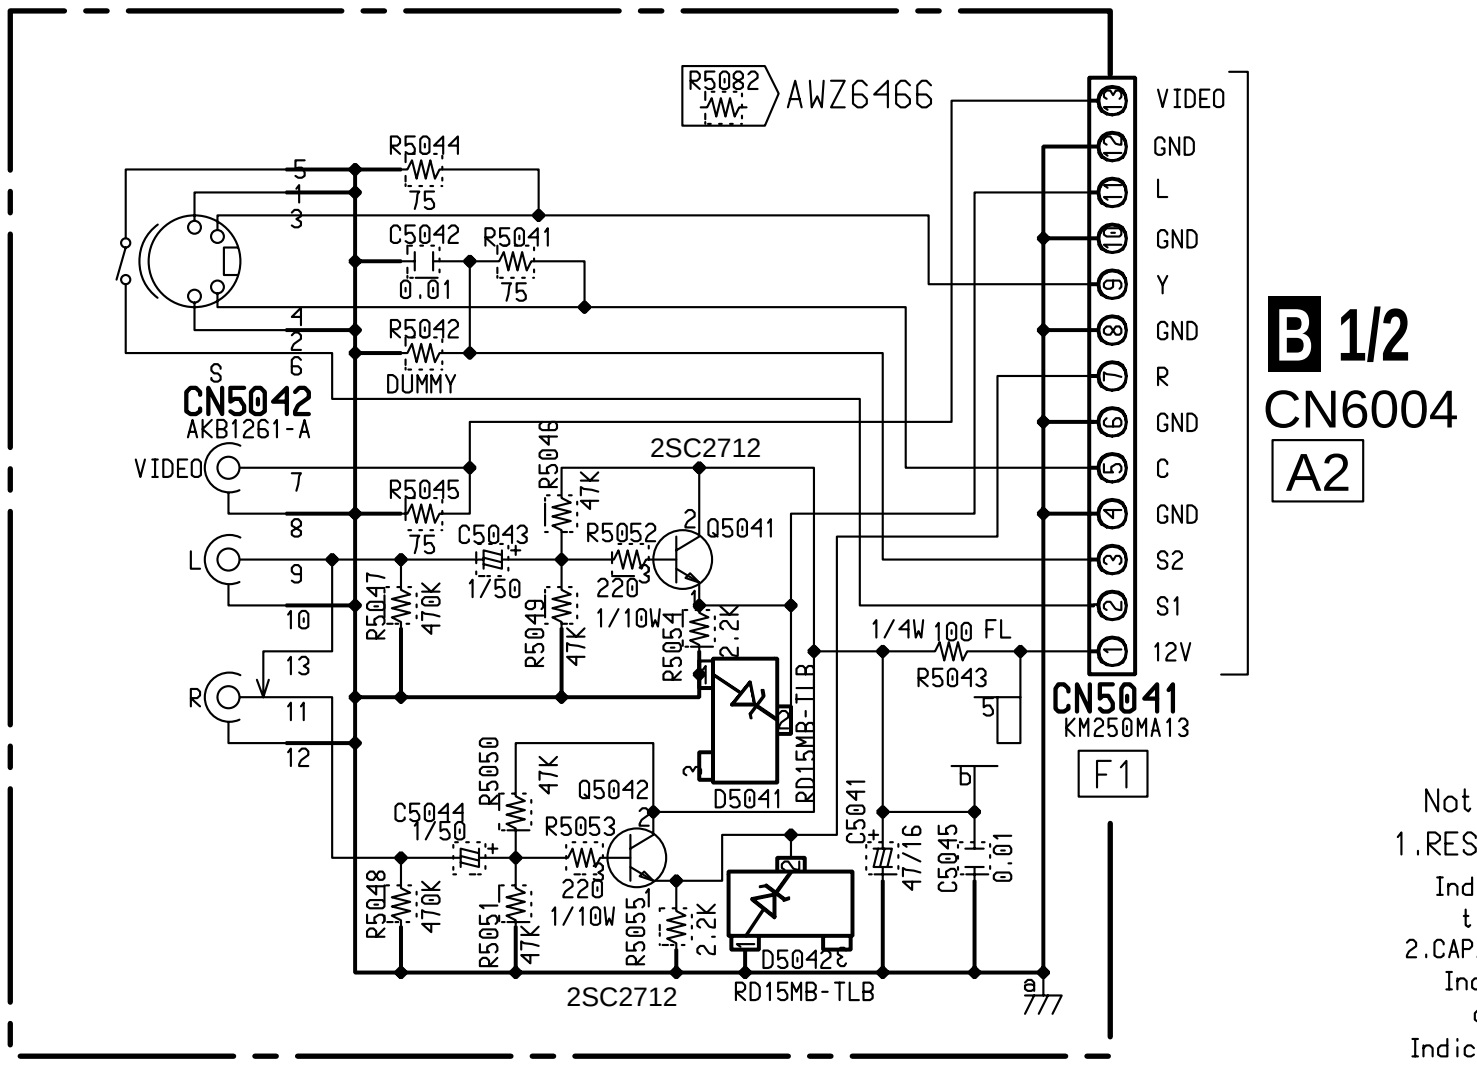
R5082 AWZ6466
R5044 75
C5042 0.01
R5041 75
R5042 DUMMY
S CN5042 AKB1261-A
VIDEO
L
R
R5045 75
R5046 47K
2SC2712
C5043 1750
R5052 220 1/10W
Q5041
R5047 470K
R5049 47K
R5054 2.2K
D5041
RD15MB-TLB
1/4W 100 FL
R5043
R5050 47K
C5044 1750
Q5042
R5053 220 1/10W
R5048 470K
R5051 47K
R5055 2.2K
D5042
C5041 47/16
C5045 0.01
2SC2712
RD15MB-TLB
VIDEO
GND
L
GND
Y
GND
R
GND
C
GND
S2
S1
12V
CN5041 KM250MA13
F1
B 1/2
CN6004
A2

Notes
1.RESISTORS
Indicated in Ω
tolerance unless otherwise noted k Ω
2.CAPASITORS
Indicated in capacity(uF)/Voltage unless
otherwise noted p pF
Indication without voltage is 50V except electrolytic capacitor.

S FRONT CONTROL ASSY (AWZ6462)

T LED DPO ASSY (AWZ6470)

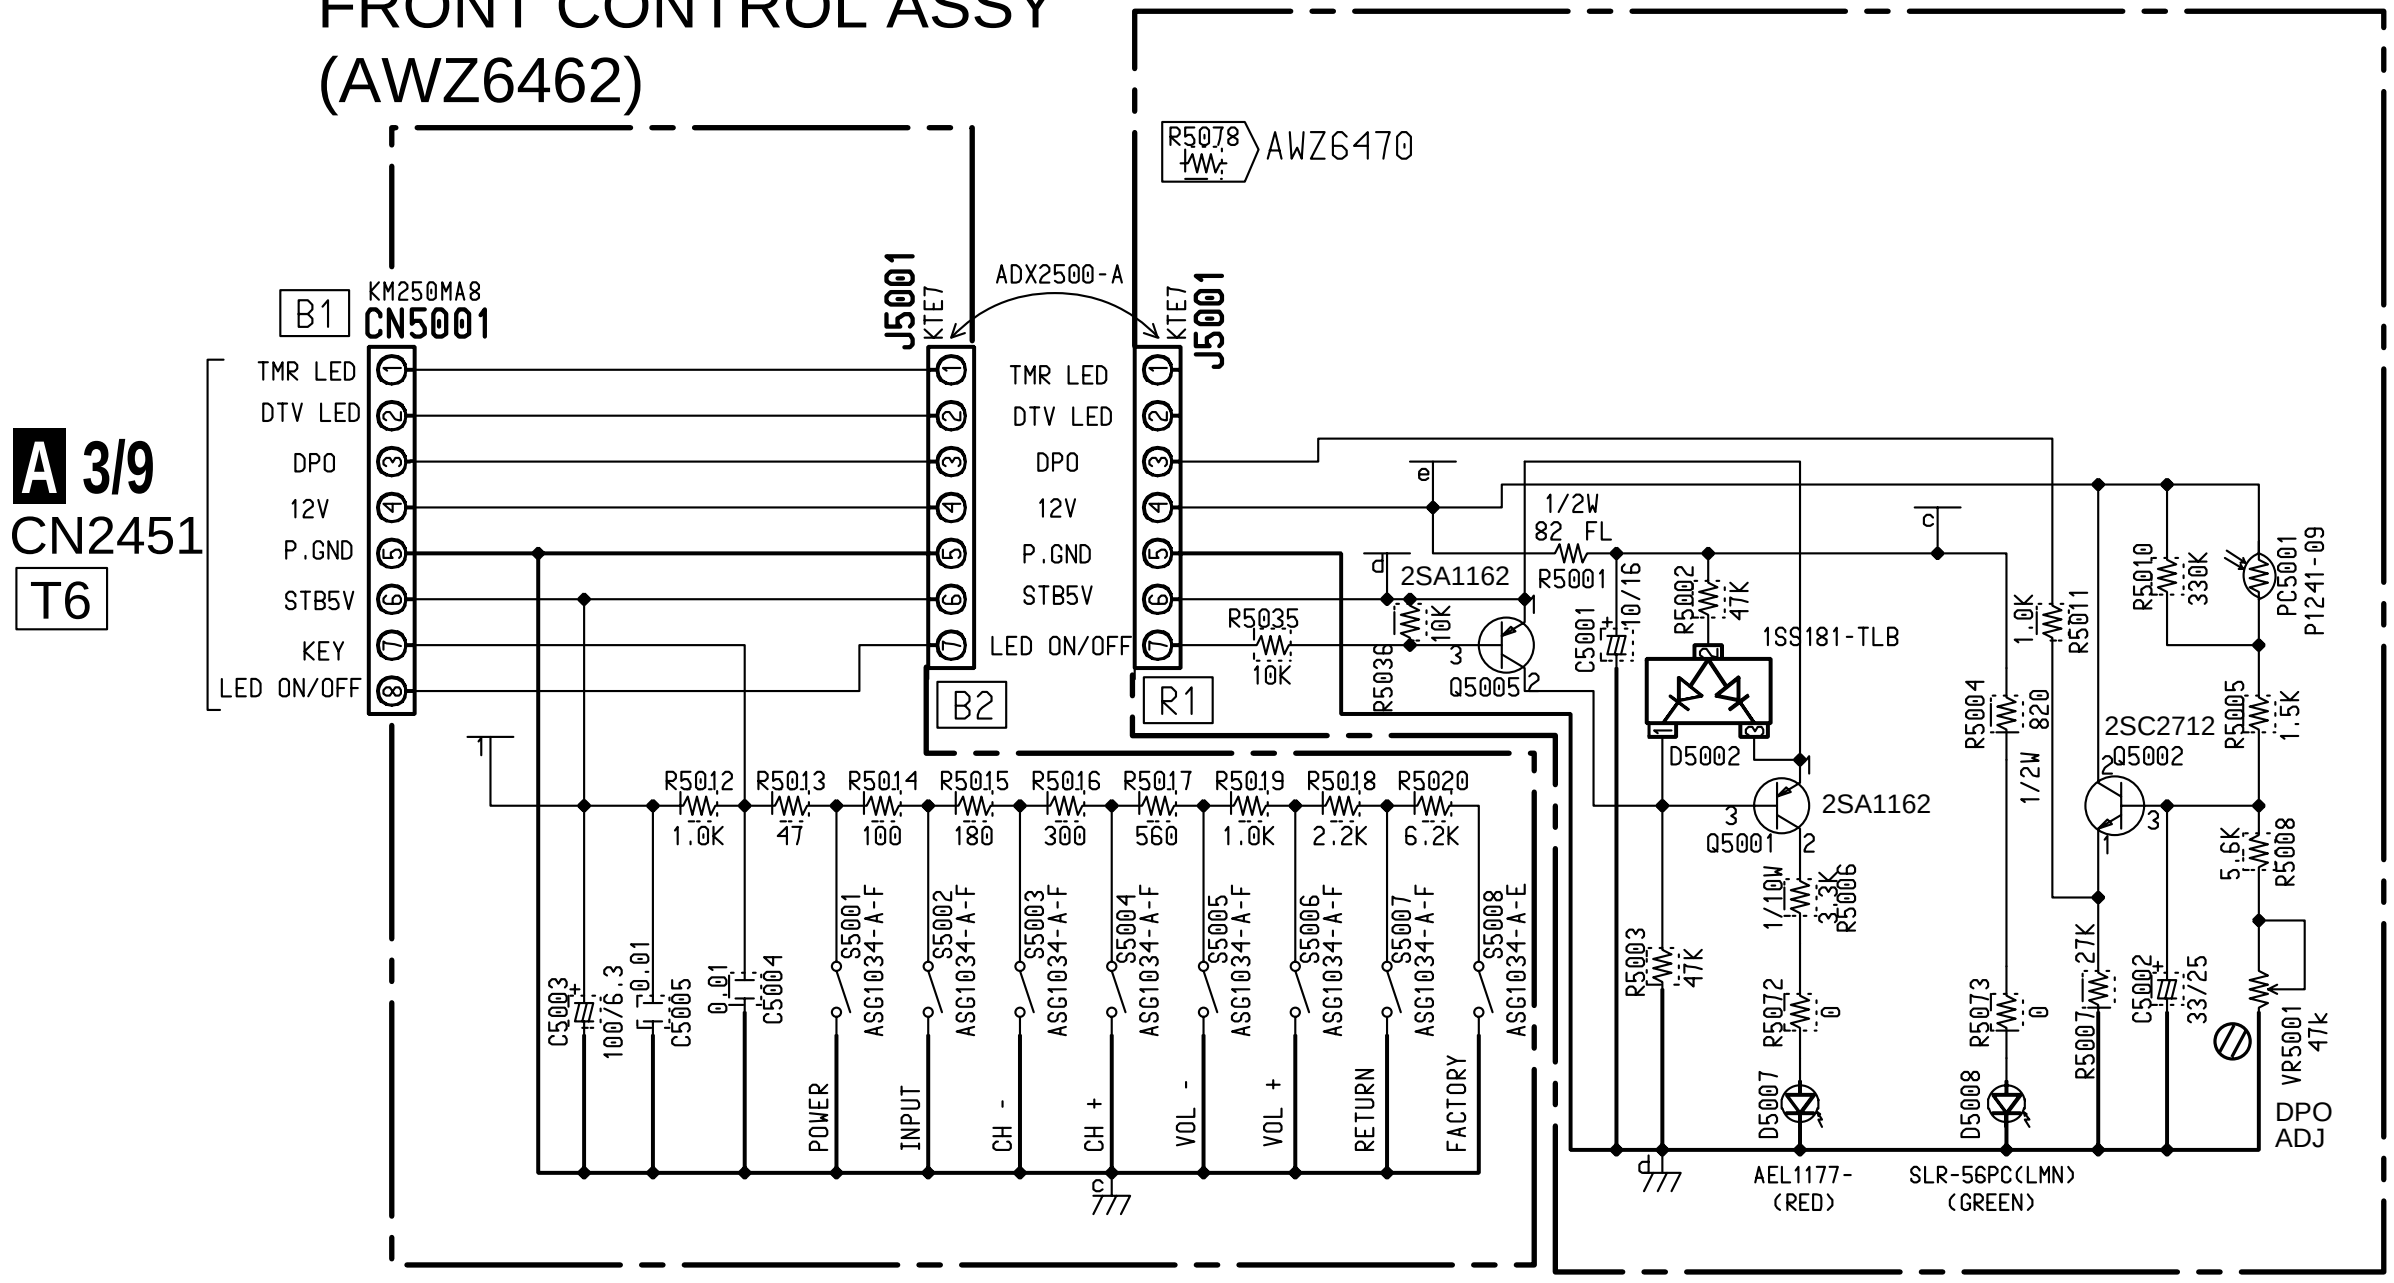
A 3/9
CN2451
T6
B1
KM250MA8 CN5001
TMR LED
DTV LED
DPO
12V
P.GND
STB5V
KEY
LED ON/OFF
J5001 KTE7
ADX2500-A
B2
R1
R5078 AWZ6470
R5012 1.0K
R5013 47
R5014 100
R5015 180
R5016 300
R5017 560
R5019 1.0K
R5018 2.2K
R5020 6.2K
C5003 100/6.3
C5005 0.01
C5004 0.01
S5001 ASG1034-A-F POWER
S5002 ASG1034-A-F INPUT
S5003 ASG1034-A-F CH -
S5004 ASG1034-A-F CH +
S5005 ASG1034-A-F VOL -
S5006 ASG1034-A-F VOL +
S5007 ASG1034-A-F RETURN
S5008 ASG1034-A-E FACTORY
R5035 10K
R5036 10K
2SA1162
Q5005
1/2W 82 FL R5001
C5001 10/16
R5002 47K
1SS181-TLB
D5002
2SA1162
Q5001
R5006 3.3K 1/10W
R5003 47K
R5072 0
D5007 AEL1177- (RED)
R5004 820 1/2W
R5073 0
D5008 SLR-56PC(LMN) (GREEN)
R5011 1.0K
R5010 330K
PC5001 P1241-09
2SC2712 Q5002
R5005 1.5K
R5008 5.6K
R5007 27K
C5002 33/25
VR5001 47k
DPO ADJ

FRONT CONTROL ASSY
S5001 : STANDBY/ON
S5002 : INPUT SELECTOR
S5003 : CHANNEL –
S5004 : CHANNEL +
S5005 : VOLUME –
S5006 : VOLUME +
S5007 : RETURN
S5008 : FACTORY ADJ

4. PCB CONNECTION DIAGRAM

4.1 AV I/O, SR, BNC and FRONT INPUT ASSYS

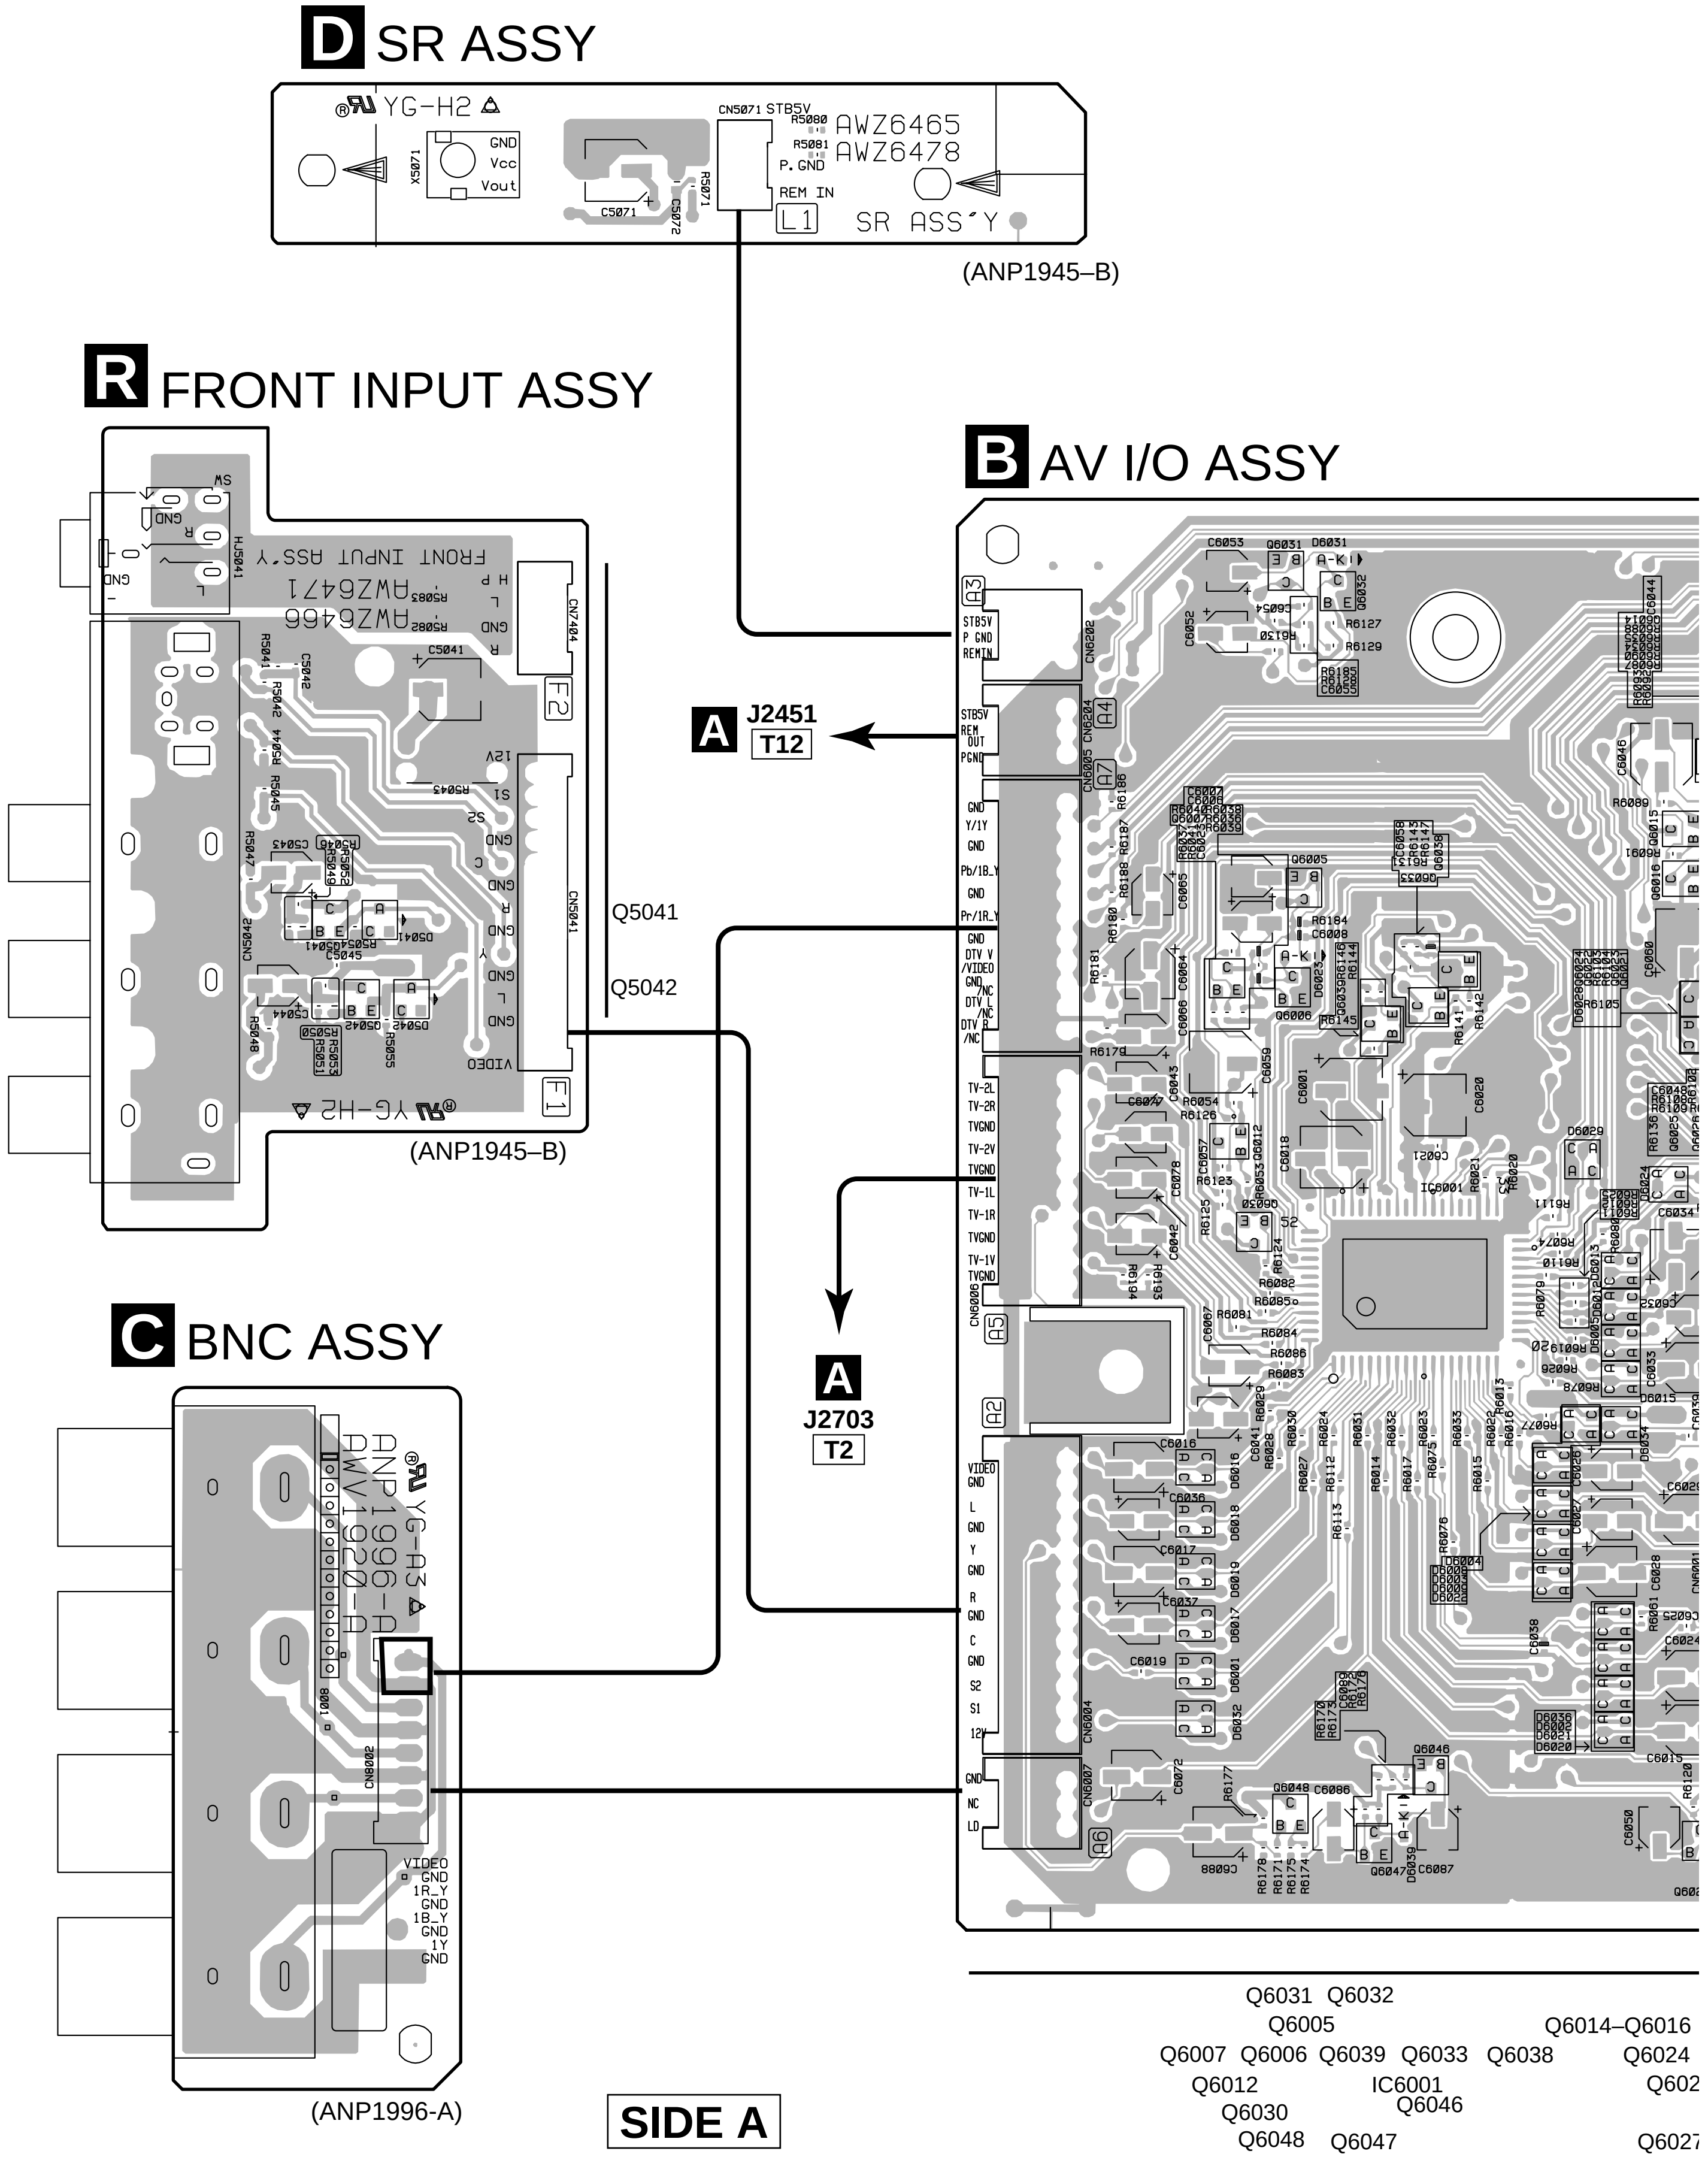
D SR ASSY
YG-H2
GND
Vcc
Vout
X5071
C5071
C5072
R5071
CN5071 STB5V
R5080
R5081
P. GND
REM IN
AWZ6465
AWZ6478
L1
SR ASS'Y
(ANP1945–B)
R FRONT INPUT ASSY
FRONT INPUT ASS'Y
AWZ6471
AWZ6466
CN7404
CN5041
F2
F1
Q5041
Q5042
12V
S1
S2
GND
C
R
Y
L
VIDEO
(ANP1945–B)
B AV I/O ASSY
A J2451 T12
A J2703 T2
STB5V
P GND
REMIN
REM OUT
PGND
Y/1Y
Pb/1B_Y
Pr/1R_Y
DTV V /VIDEO
DTV L /NC
DTV R /NC
TV-2L
TV-2R
TVGND
TV-2V
TV-1L
TV-1R
TV-1V
IC6001
C BNC ASSY
YG-A3
ANP1996-A
AWV1920-A
CN8002
VIDEO
1R_Y
1B_Y
1Y
(ANP1996-A)
Q6031 Q6032
Q6005
Q6014–Q6016
Q6007 Q6006 Q6039 Q6033 Q6038
Q6024
Q6012
IC6001
Q6046
Q6030
Q6048 Q6047
Q6027

SIDE A

NOTE FOR PCB DIAGRAMS :

1. Part numbers in PCB diagrams match those in the schematic diagrams.
2. A comparison between the main parts of PCB and schematic diagrams is shown below.

Symbol In PCB Diagrams	Symbol In Schematic Diagrams	Part Name
 B C E		Transistor
 B C E		Transistor with resistor
 D G S		Field effect transistor

Symbol In PCB Diagrams	Symbol In Schematic Diagrams	Part Name
		Resistor array
		3-terminal regulator

3. The parts mounted on this PCB include all necessary parts for several destinations.
For further information for respective destinations, be sure to check with the schematic diagram.
4. View point of PCB diagrams.

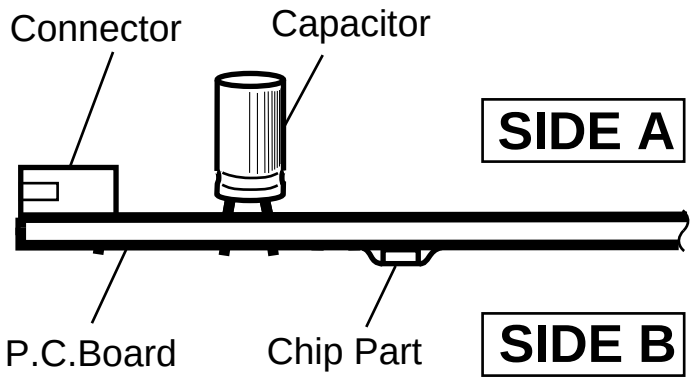
Connector
Capacitor
SIDE A
P.C.Board
Chip Part
SIDE B

E
CN5601
U9

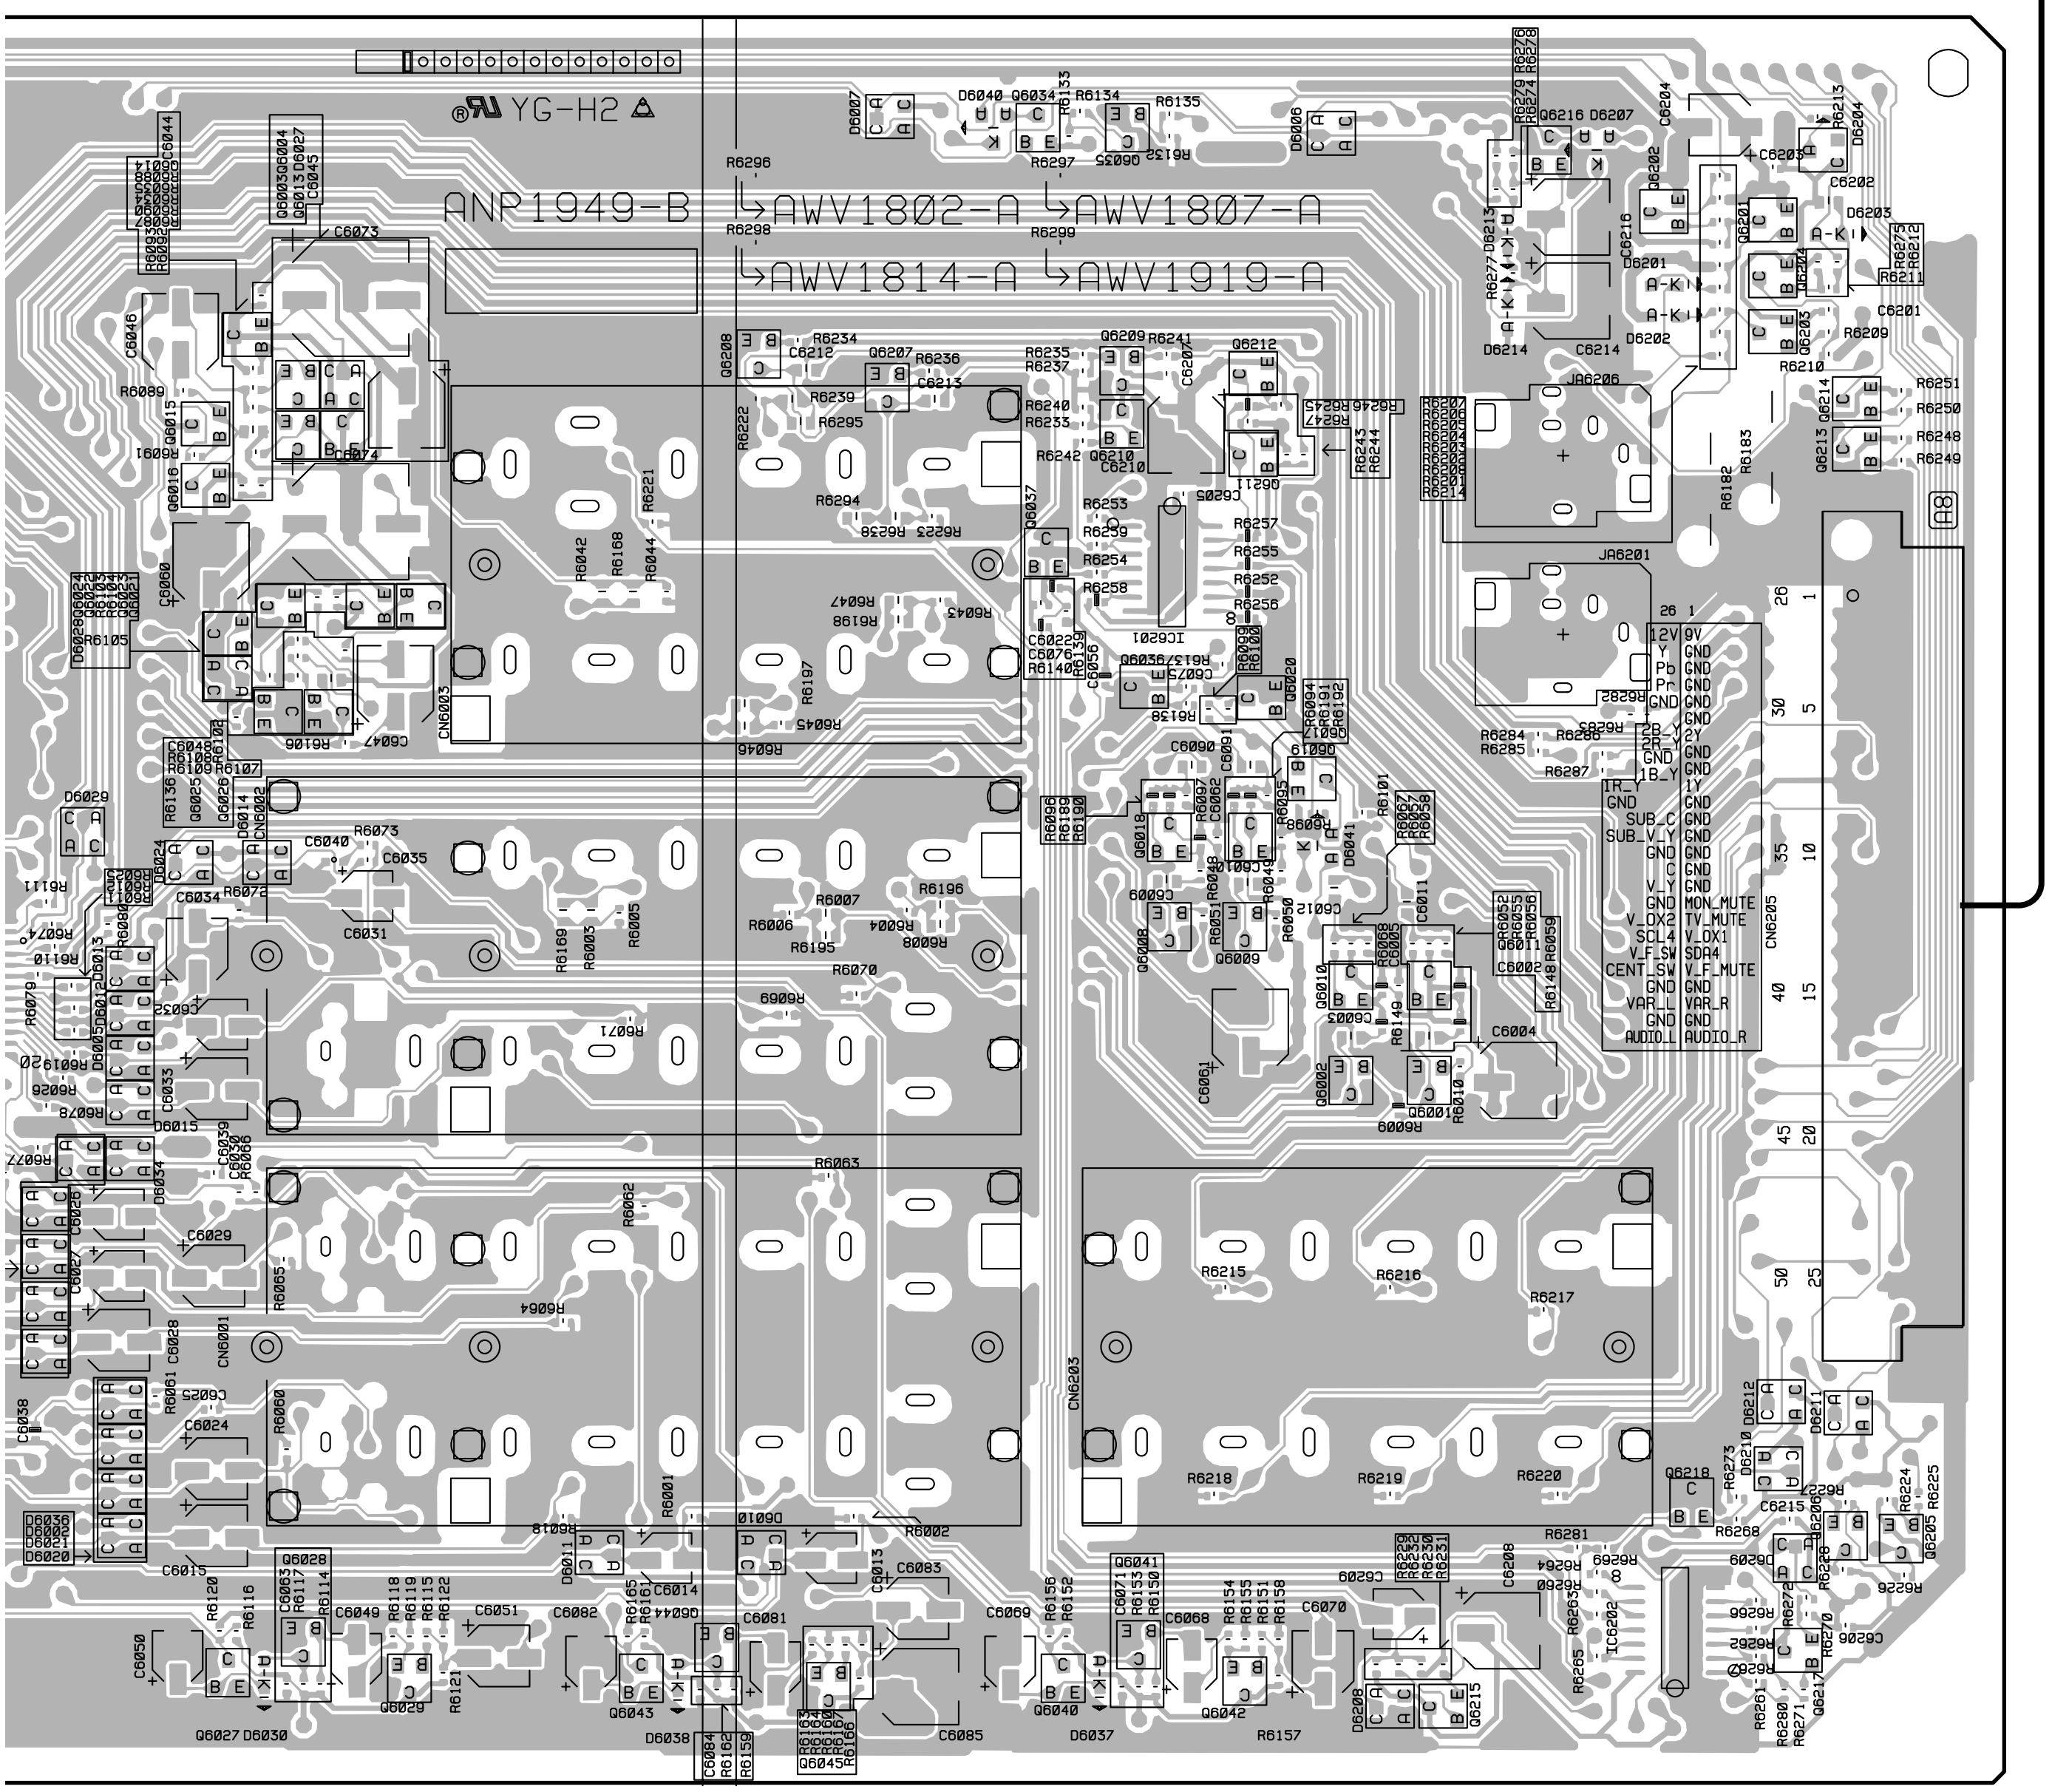
ANP1949-B
AWV1802-A
AWV1807-A
AWV1814-A
AWV1919-A
YG-H2
CN6205
CN6001
CN6003
CN6203
JA6201
JA6206
IC6001
IC6202
12V 9V
Y GND
Pb GND
Pr GND
GND GND
SUB_C GND
SUB_V_Y GND
GND MON_MUTE
V_OX2 TV_MUTE
SCL4 V_OX1
V_F_SW SDA4
CENT_SW V_F_MUTE
VAR_L VAR_R
AUDIO_L AUDIO_R
Q6235
Q6216
Q6014–Q6016 Q6004 Q6003 Q6013
Q6208 Q6207
Q6209–Q6212
Q6201–Q6204 Q6214 Q6213
038 Q6024 Q6022 Q6023 Q6021
Q6037 Q6036 Q6020
Q6002 Q6001
Q6028 Q6025 Q6026
Q6008 Q6018 Q6017 Q6009
Q6010 Q6011
Q6218
Q6205
Q6027 Q6028 Q6029
Q6043 Q6044 Q6045
Q6040 Q6041 Q6042
Q6215
IC6202 Q6217

(ANP1949–B)

A
B
C
D

B AV I/O ASSY

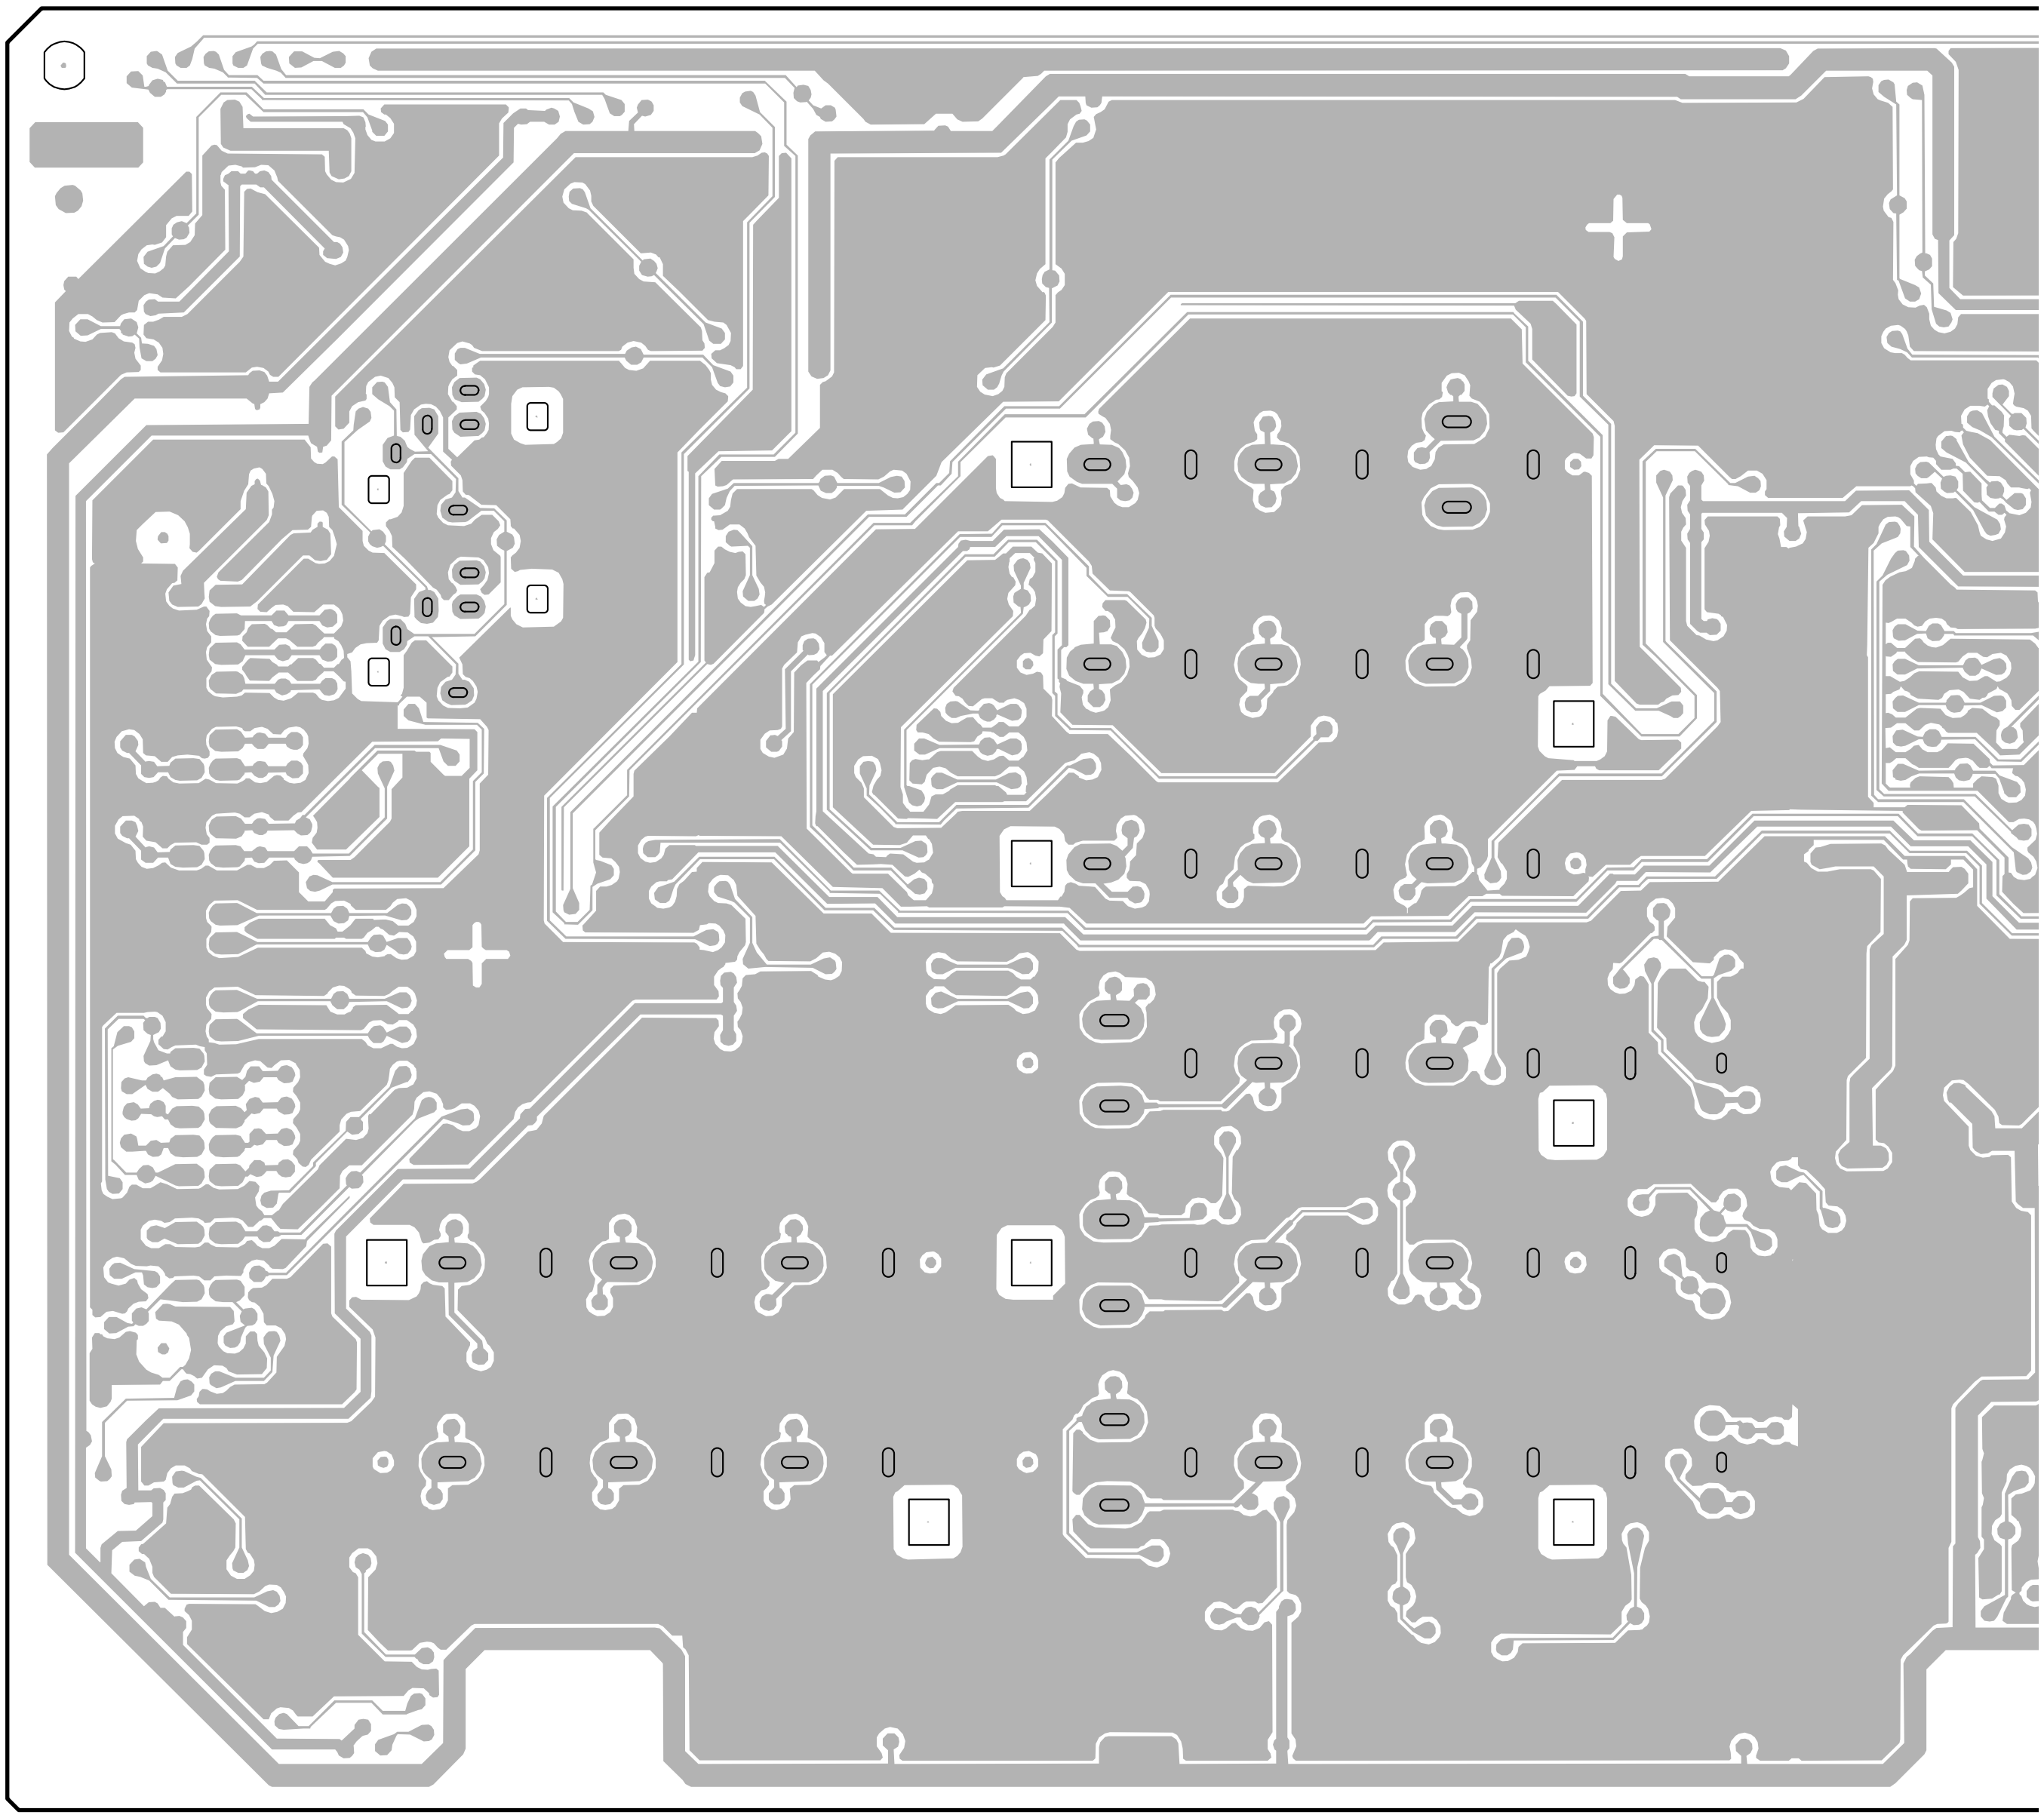

SIDE B

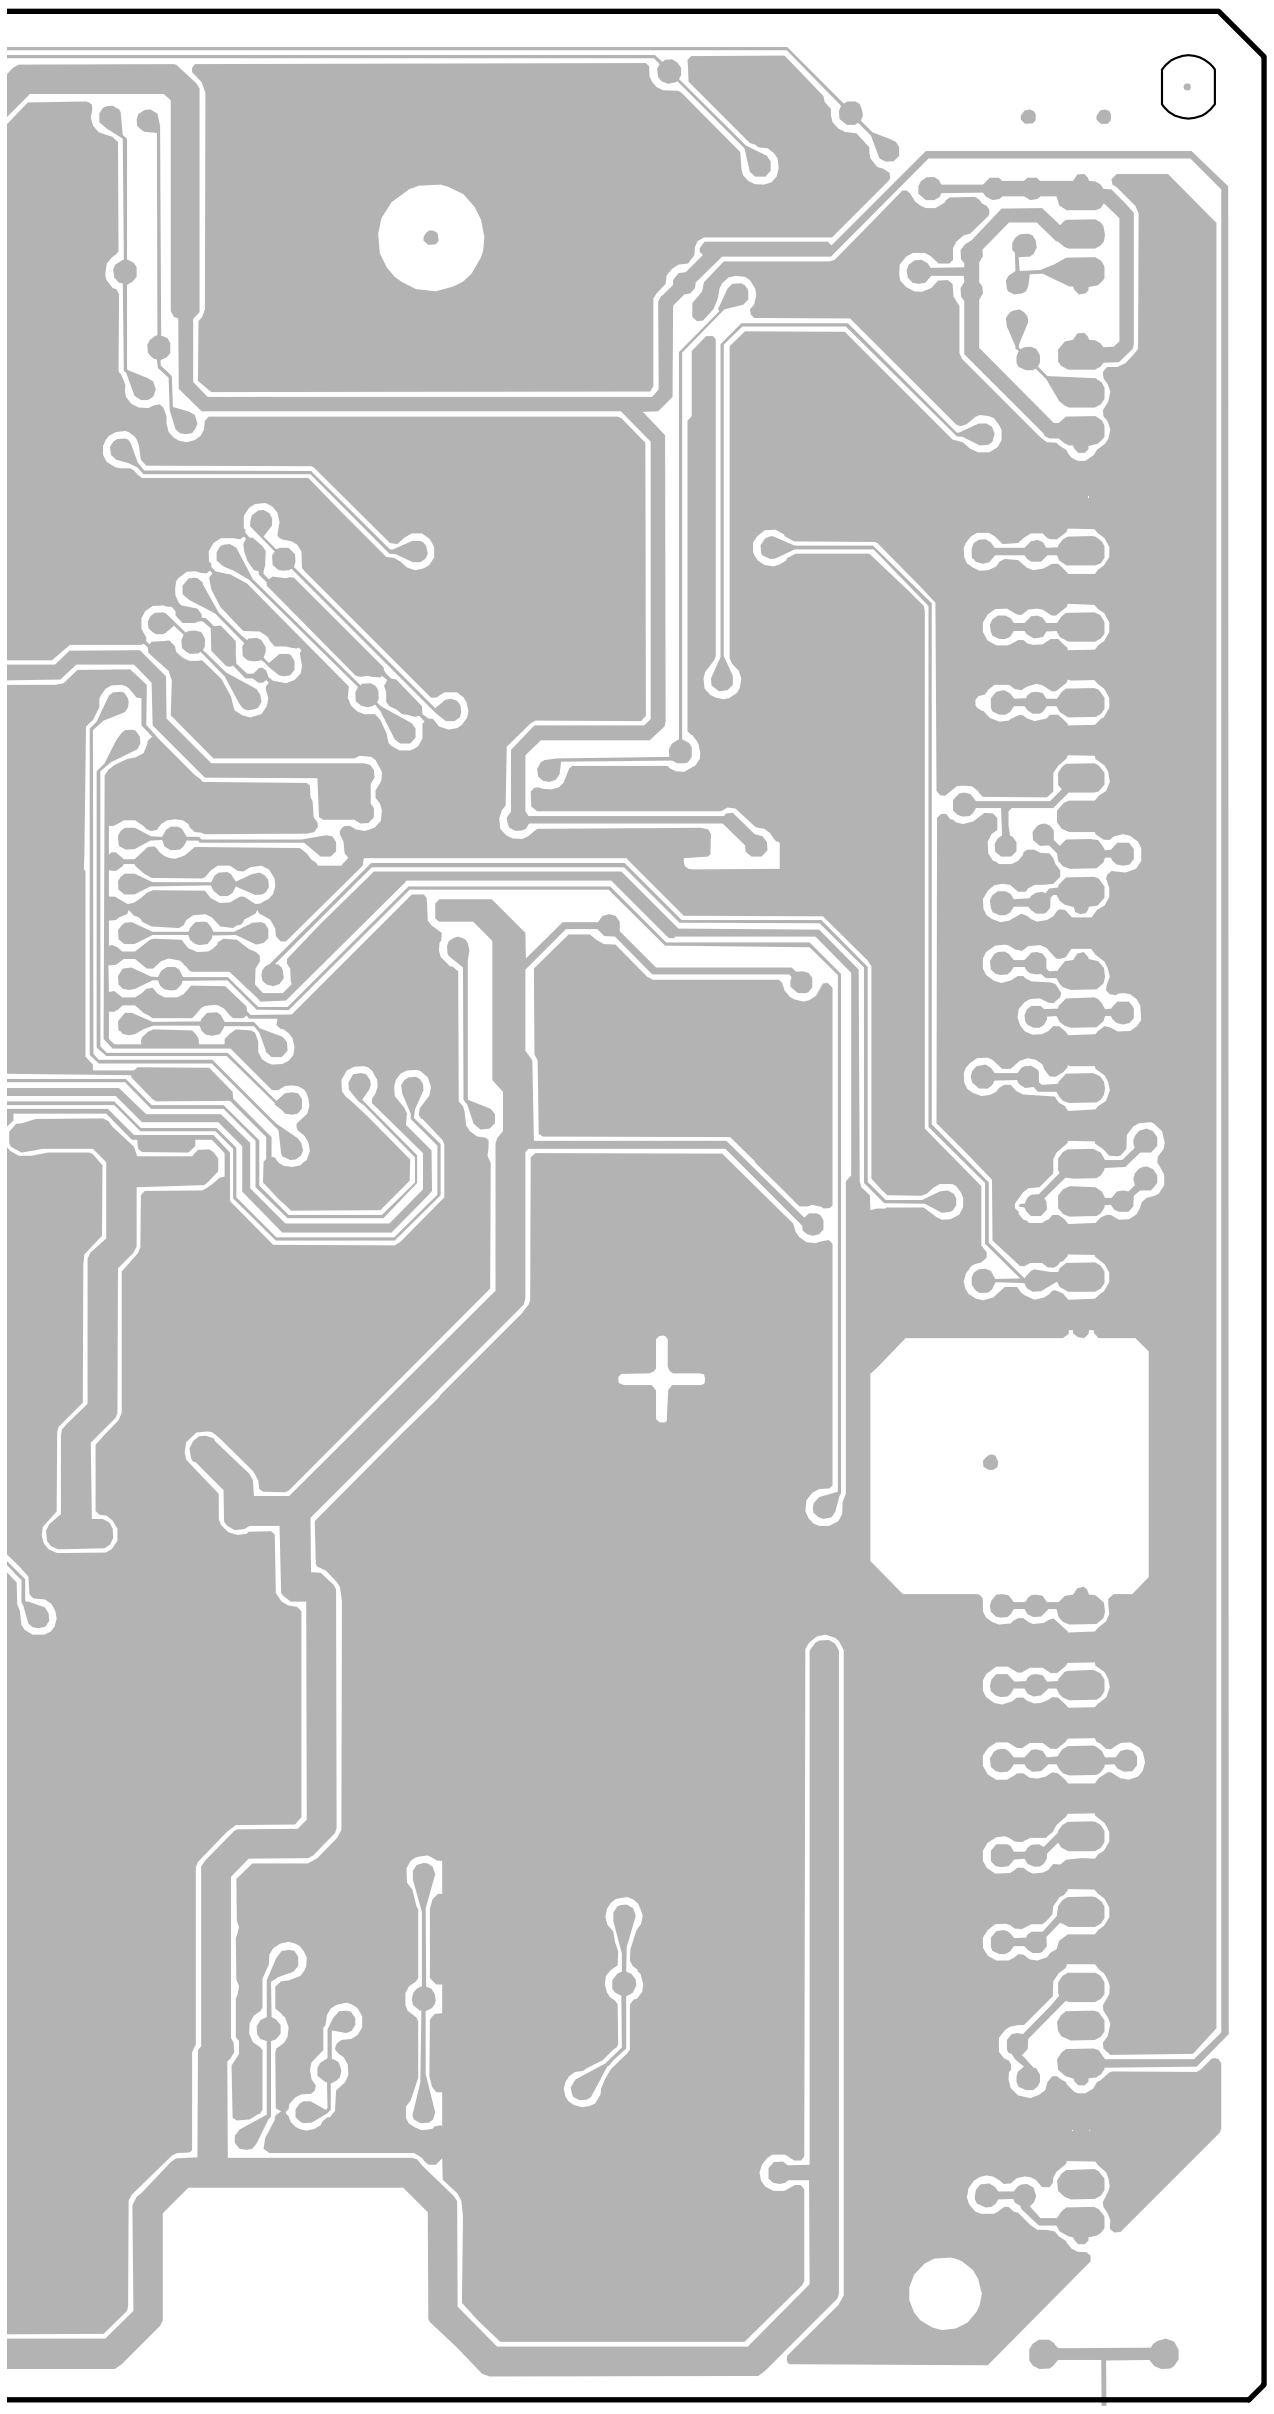
(ANP1949–B)

D SR ASSY

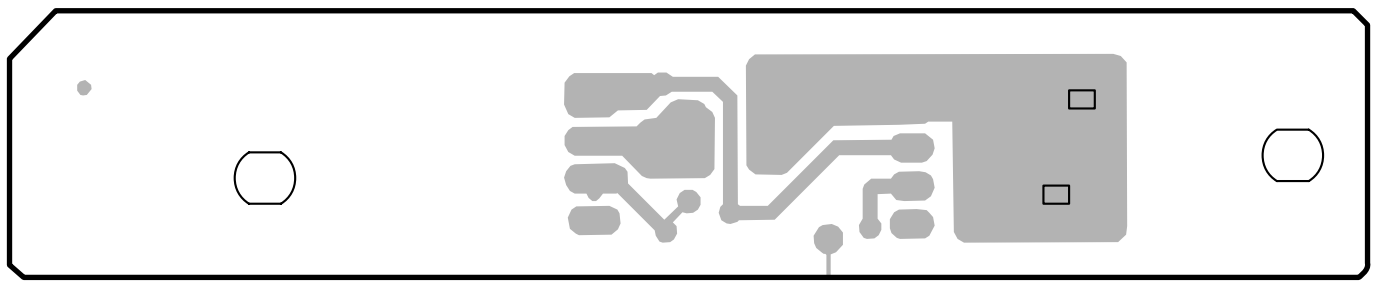
(ANP1945–B)

R FRONT INPUT ASSY

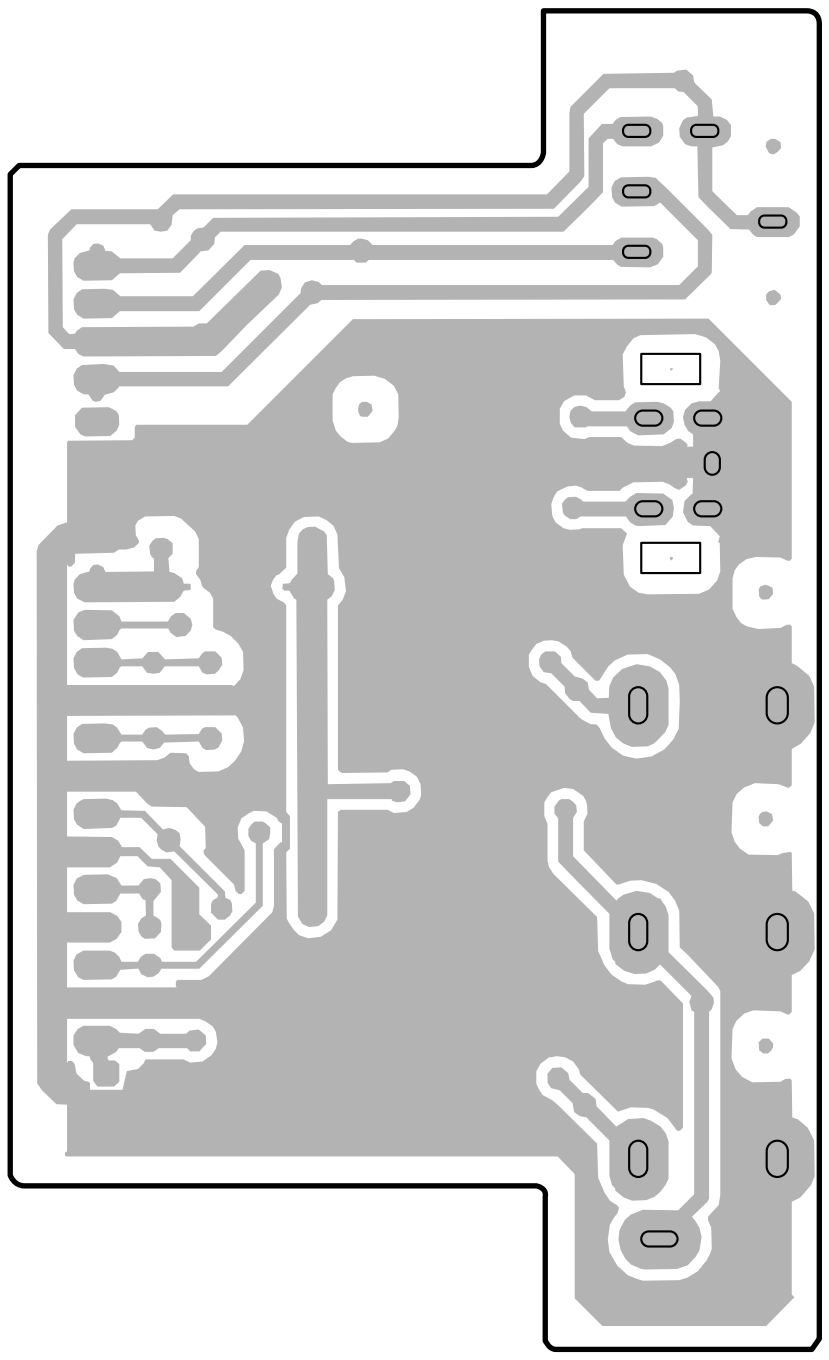
(ANP1945–B)

4.2 SIGNAL ASSY

A-a

A SIGNAL ASSY

A

B

C

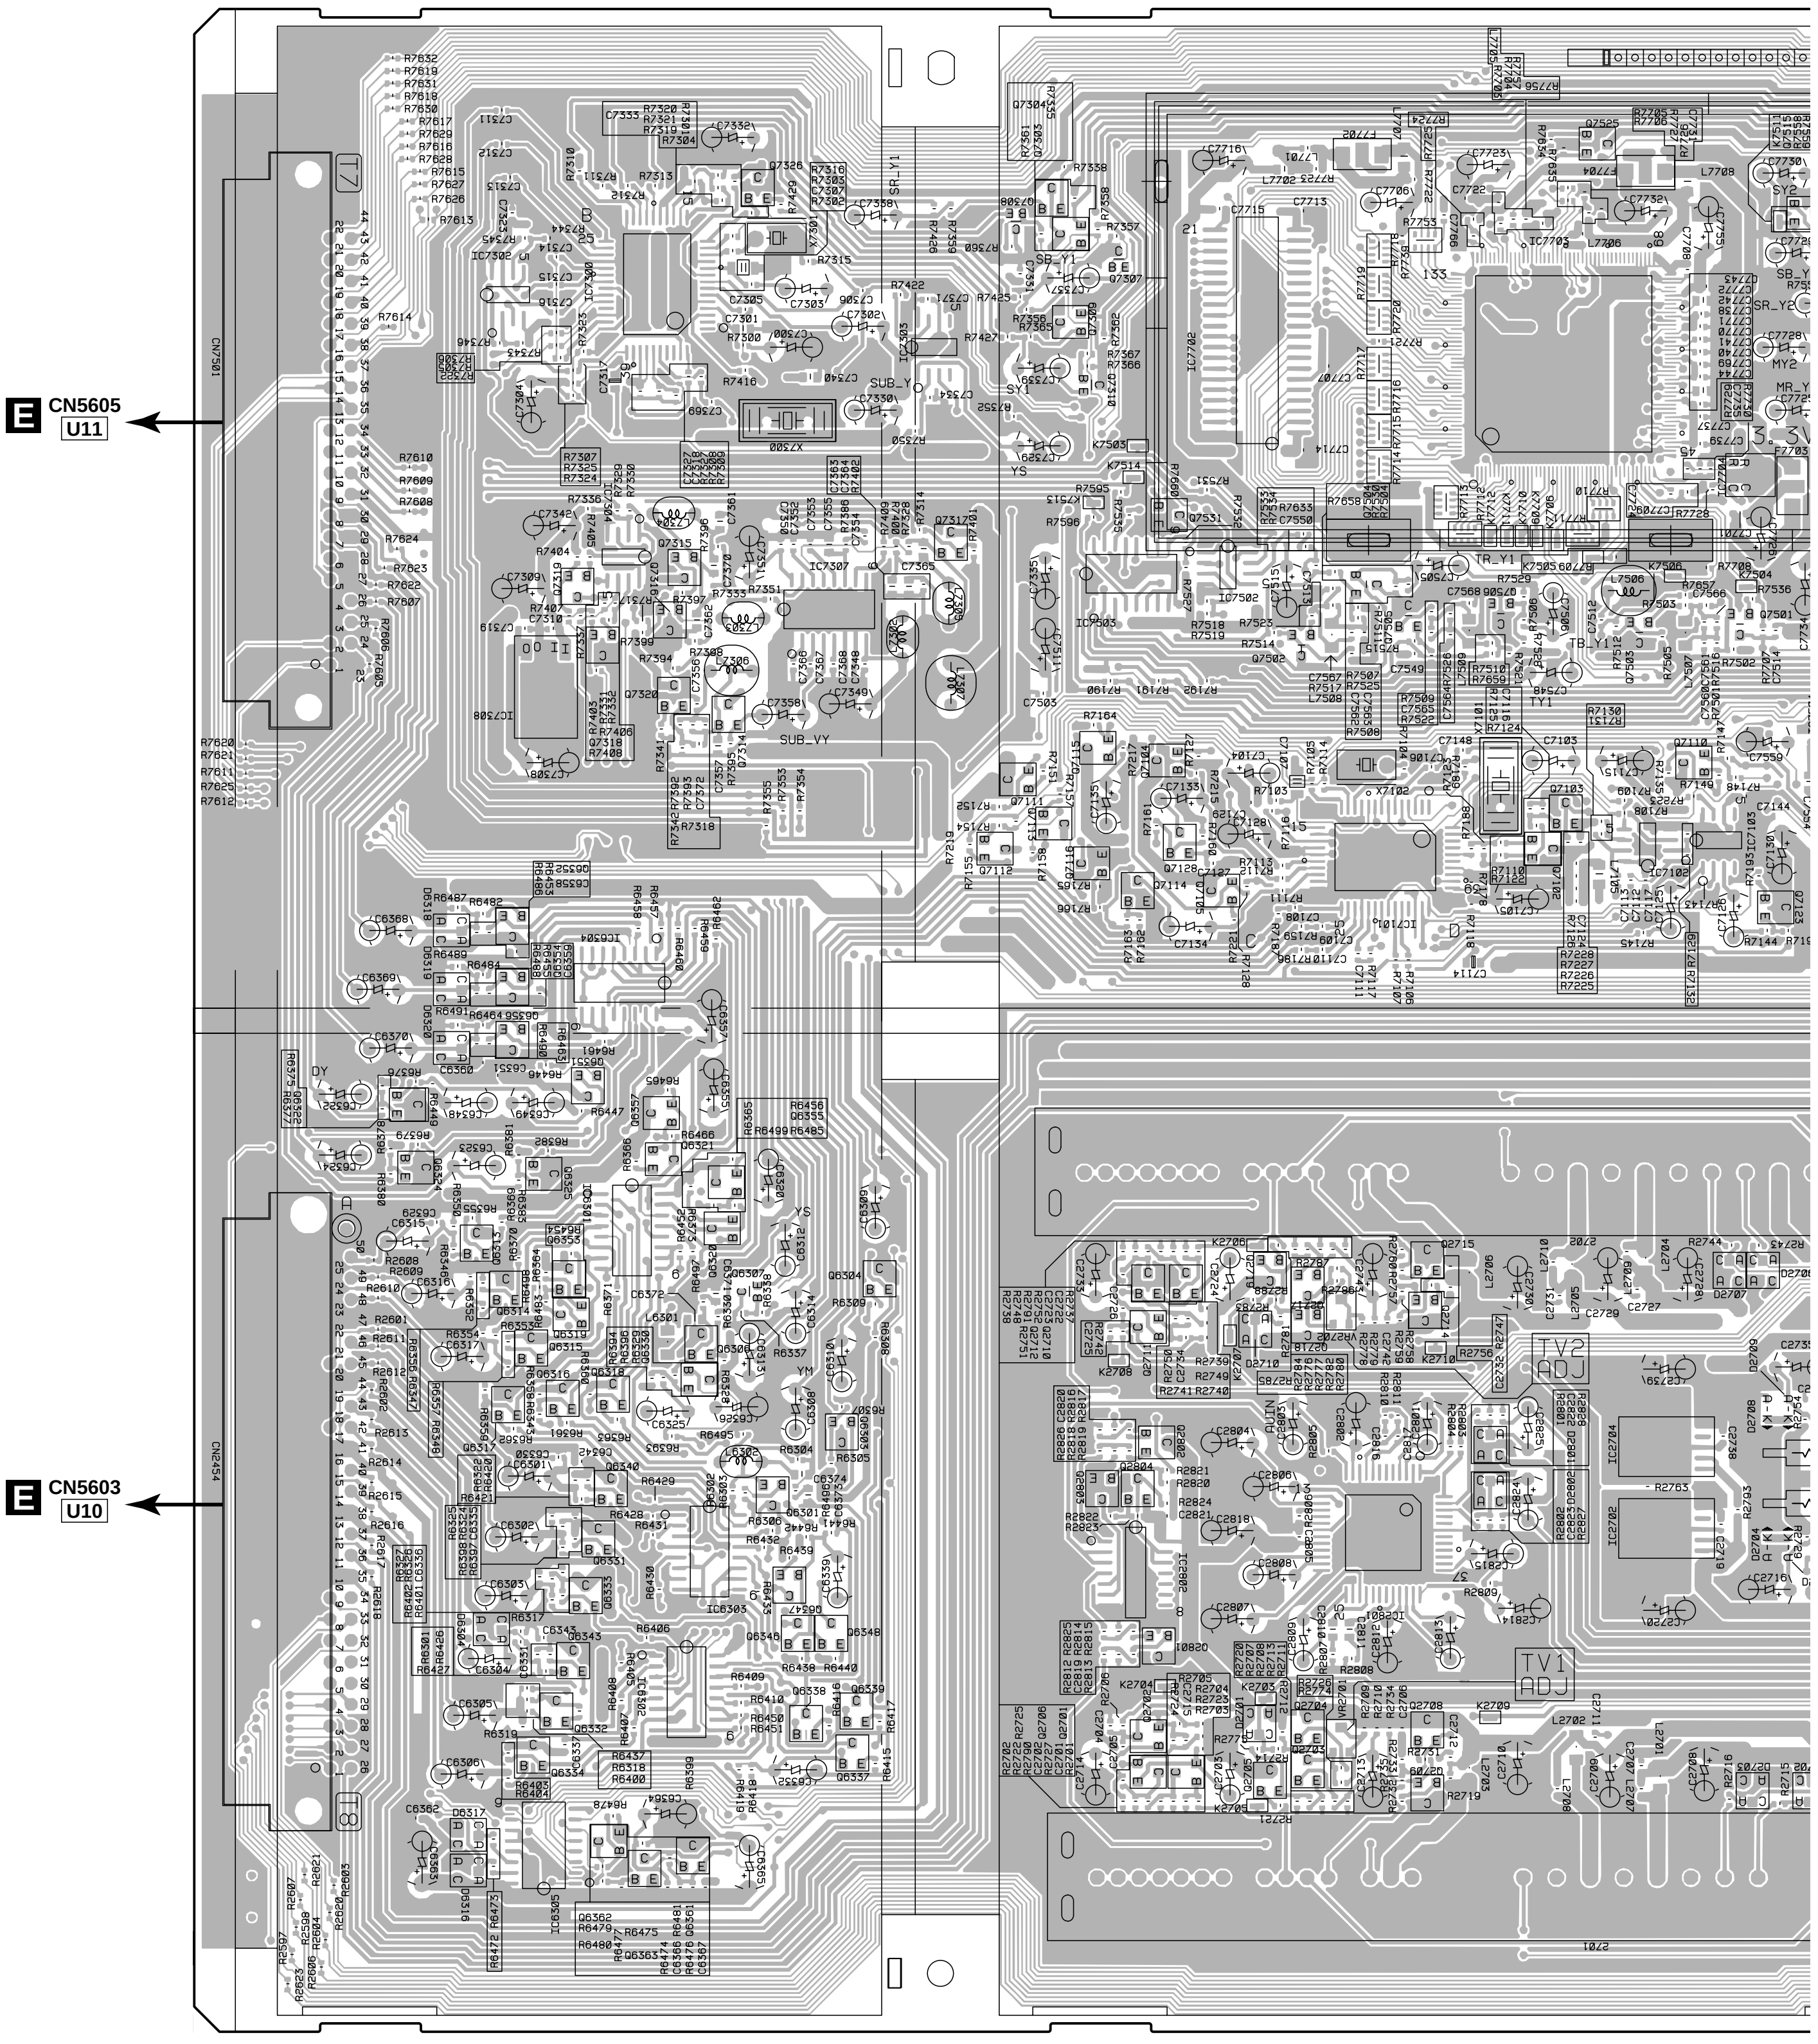

D

VR2701 VR2702
IC7302 IC7300 Q7326 IC7303 Q7304 Q7308 Q7303 Q7309 Q7307 IC7702 Q7525 IC7703 Q751
IC7304 Q7319 Q7315 Q7317 Q7310 IC7503 Q7505 Q7506 IC7704
IC7308 Q7318 Q7316 IC7307 IC7503 Q7502 Q7102 Q7103 Q7501
Q7320 Q7314 Q7128 Q7503
Q7111–Q7115 Q7105 Q7104

SIDE A

Q6356 Q6352 IC6304 IC7101 IC7102 IC7103 Q7123
Q6322 Q6324 Q6325 Q6351 Q6357 Q6355 Q2710–Q2712 Q2719 Q2717 Q2715 Q2714
Q6313 Q6353 Q6321 IC6301 Q6320 Q2801–Q2803
Q6314–Q6319 Q6340 Q6330 Q6306 Q6301 Q6303 Q6304 IC2802 IC2801 IC2702 IC2704 Q2713
Q6331–Q6333 Q6343 IC6302 IC6303 Q6346–Q6348 Q2801
IC6305 Q6334 Q6361–Q6363 Q6337–Q6339 Q2706 Q2701–Q2704 Q2708 Q2709

A-b

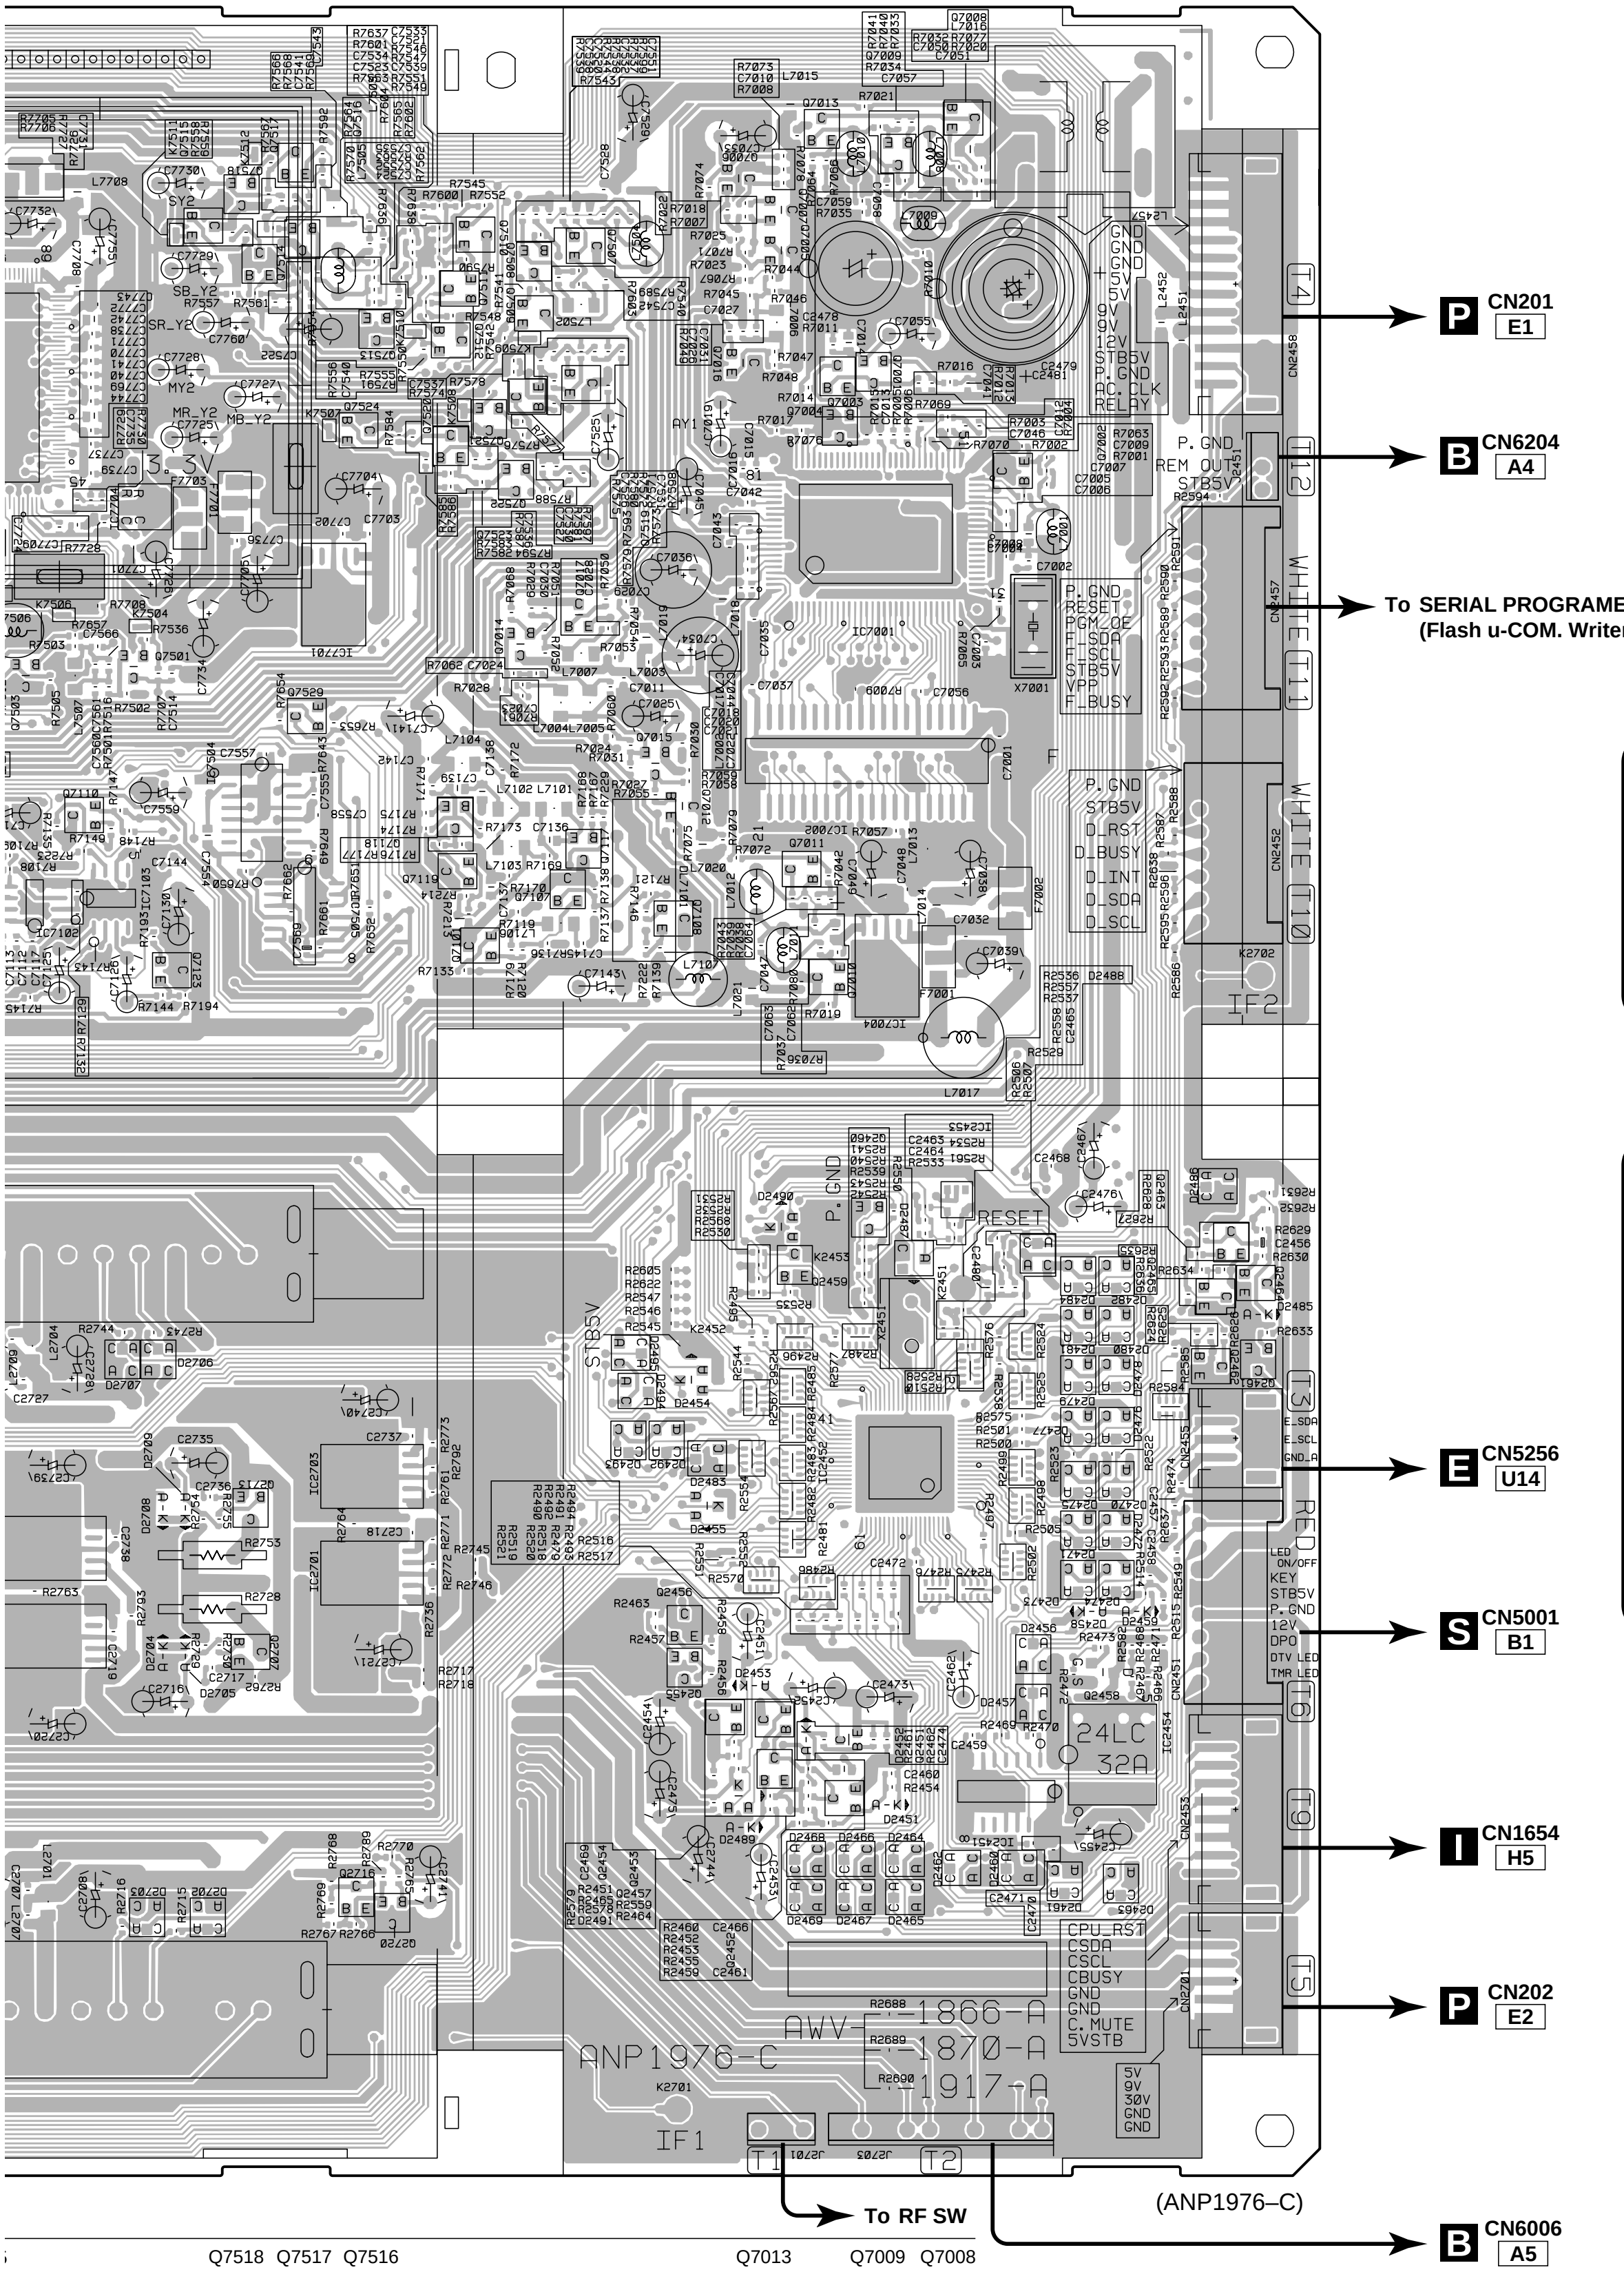
P CN201 E1
B CN6204 A4
To SERIAL PROGRAMER
(Flash u-COM. Writer)
E CN5256 U14
S CN5001 B1
I CN1654 H5
P CN202 E2
B CN6006 A5
To RF SW
IC7001
IC7002
IC7004
24LC 32A
ANP1976-C
AWV-1866-A
AWV-1870-A
AWV-1917-A
IF1
IF2
T1
T2
T3
T4
T5
T6
T9
T10
T11
T12
WHITE
RED
P.GND
RESET
PGM/OE
F.SDA
F.SCL
STB5V
VPP
F.BUSY
D.RST
D.BUSY
D.INT
D.SDA
D.SCL
GND
5V
9V
12V
AC.CLK
RELAY
REM OUT
CPU_RST
CSDA
CSCL
CBUSY
C.MUTE
5VSTB
30V

(ANP1976–C)

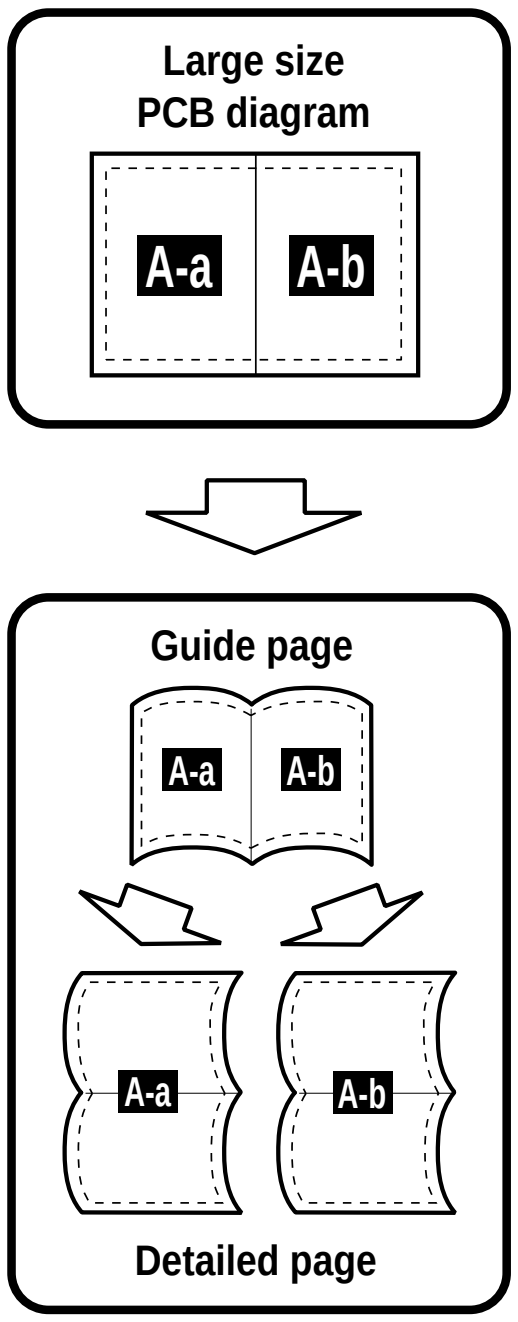
Large size
PCB diagram
A-a
A-b
Guide page
A-a
A-b
A-a
A-b
Detailed page

Q7518 Q7517 Q7516 Q7013 Q7009 Q7008
Q7515 Q7514 Q7507–Q7512 Q7507 Q7007 Q7005 Q7004 Q7003 Q7001
IC7704 Q7513 Q7519–Q7524 Q7005 Q7002
Q7524 IC7006 Q7016 IC7001
Q7501 Q7529 Q7014 Q7017 Q7019 IC7002
Q7011
IC7103 Q7123 IC7504 Q7118 Q7119 Q7101 Q7107 Q7117 Q7108 Q7010 IC7004
Q2459 Q2460 Q2461–Q2465
IC2453
IC2702 IC2704 Q2713 Q2707 IC2703 IC2701 IC2452 Q2458
Q2716 Q2720 Q2451–Q2457 IC2451 IC2454

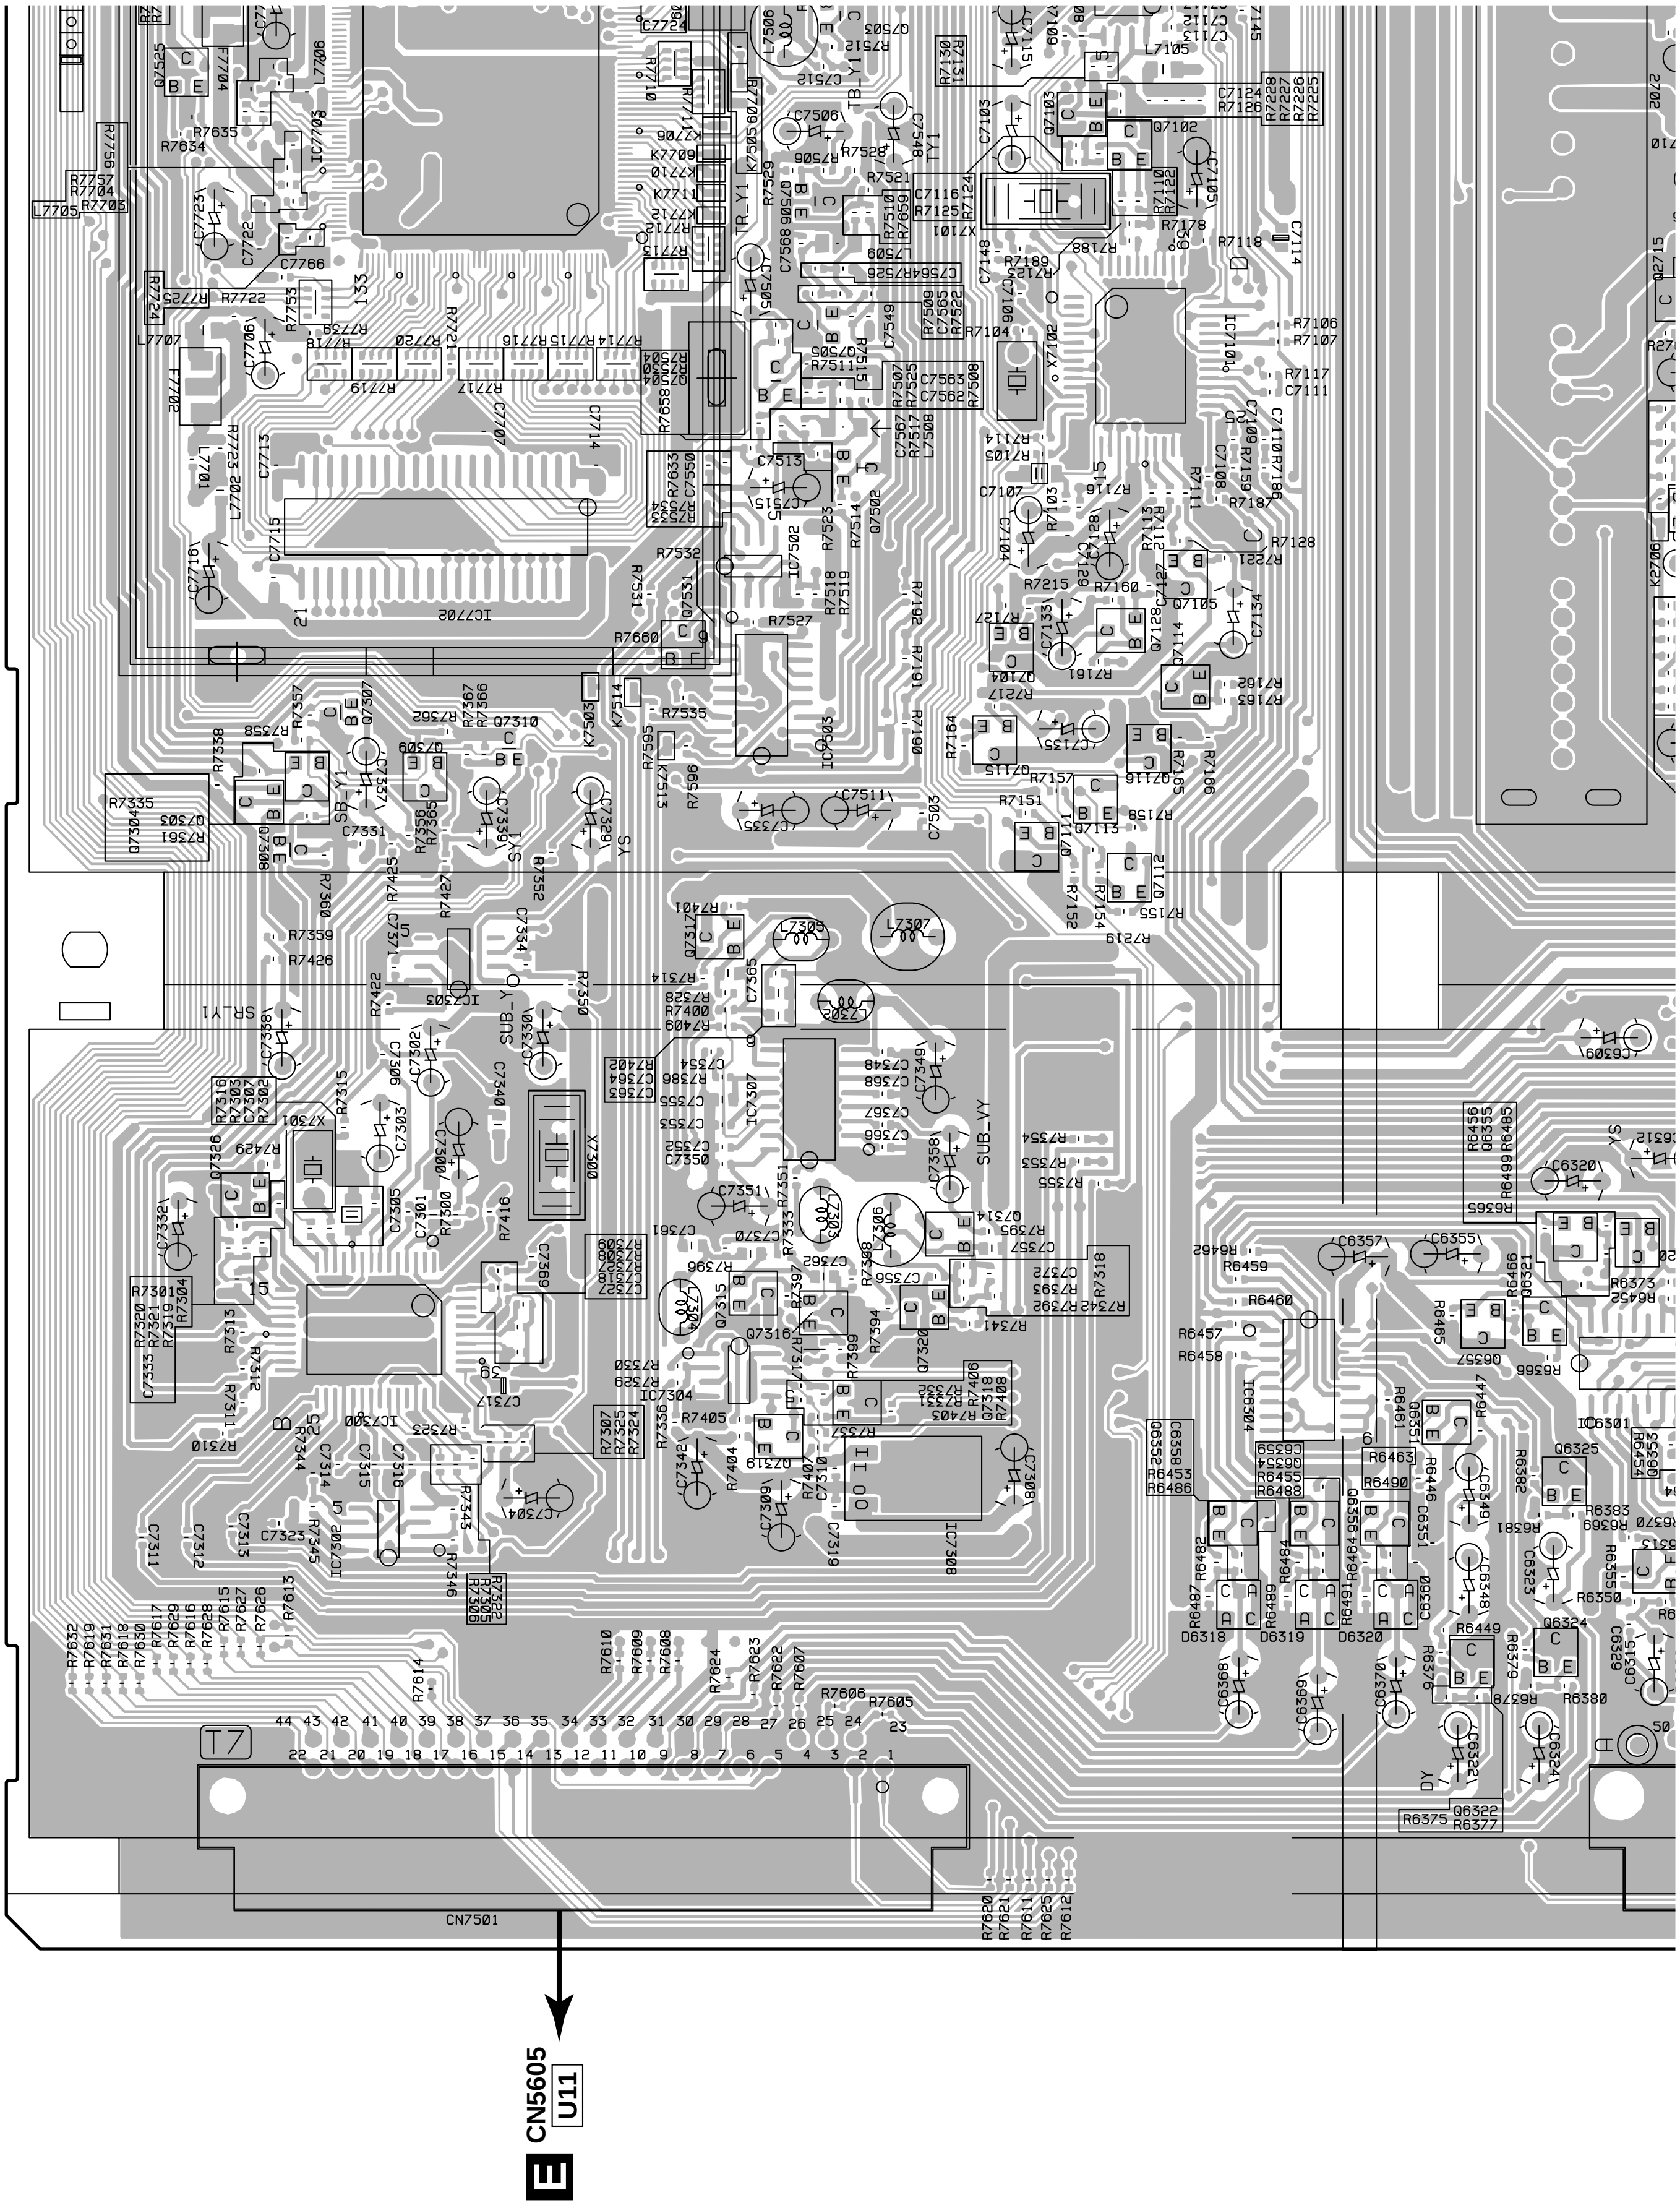
IC7702
IC7503
IC7502
IC7101
IC7307
IC7303
IC7304
IC7300
IC7302
IC7308
IC6304
IC6301
X7101
X7102
X7301
X7300
L7305
L7307
L7306
SB_Y1
SR_Y1
SUB_V
SUB_VY
TR_Y1
TB_Y1
T7
CN7501
CN5605
U11
E

A SIGNAL ASSY

A-a **A-b**

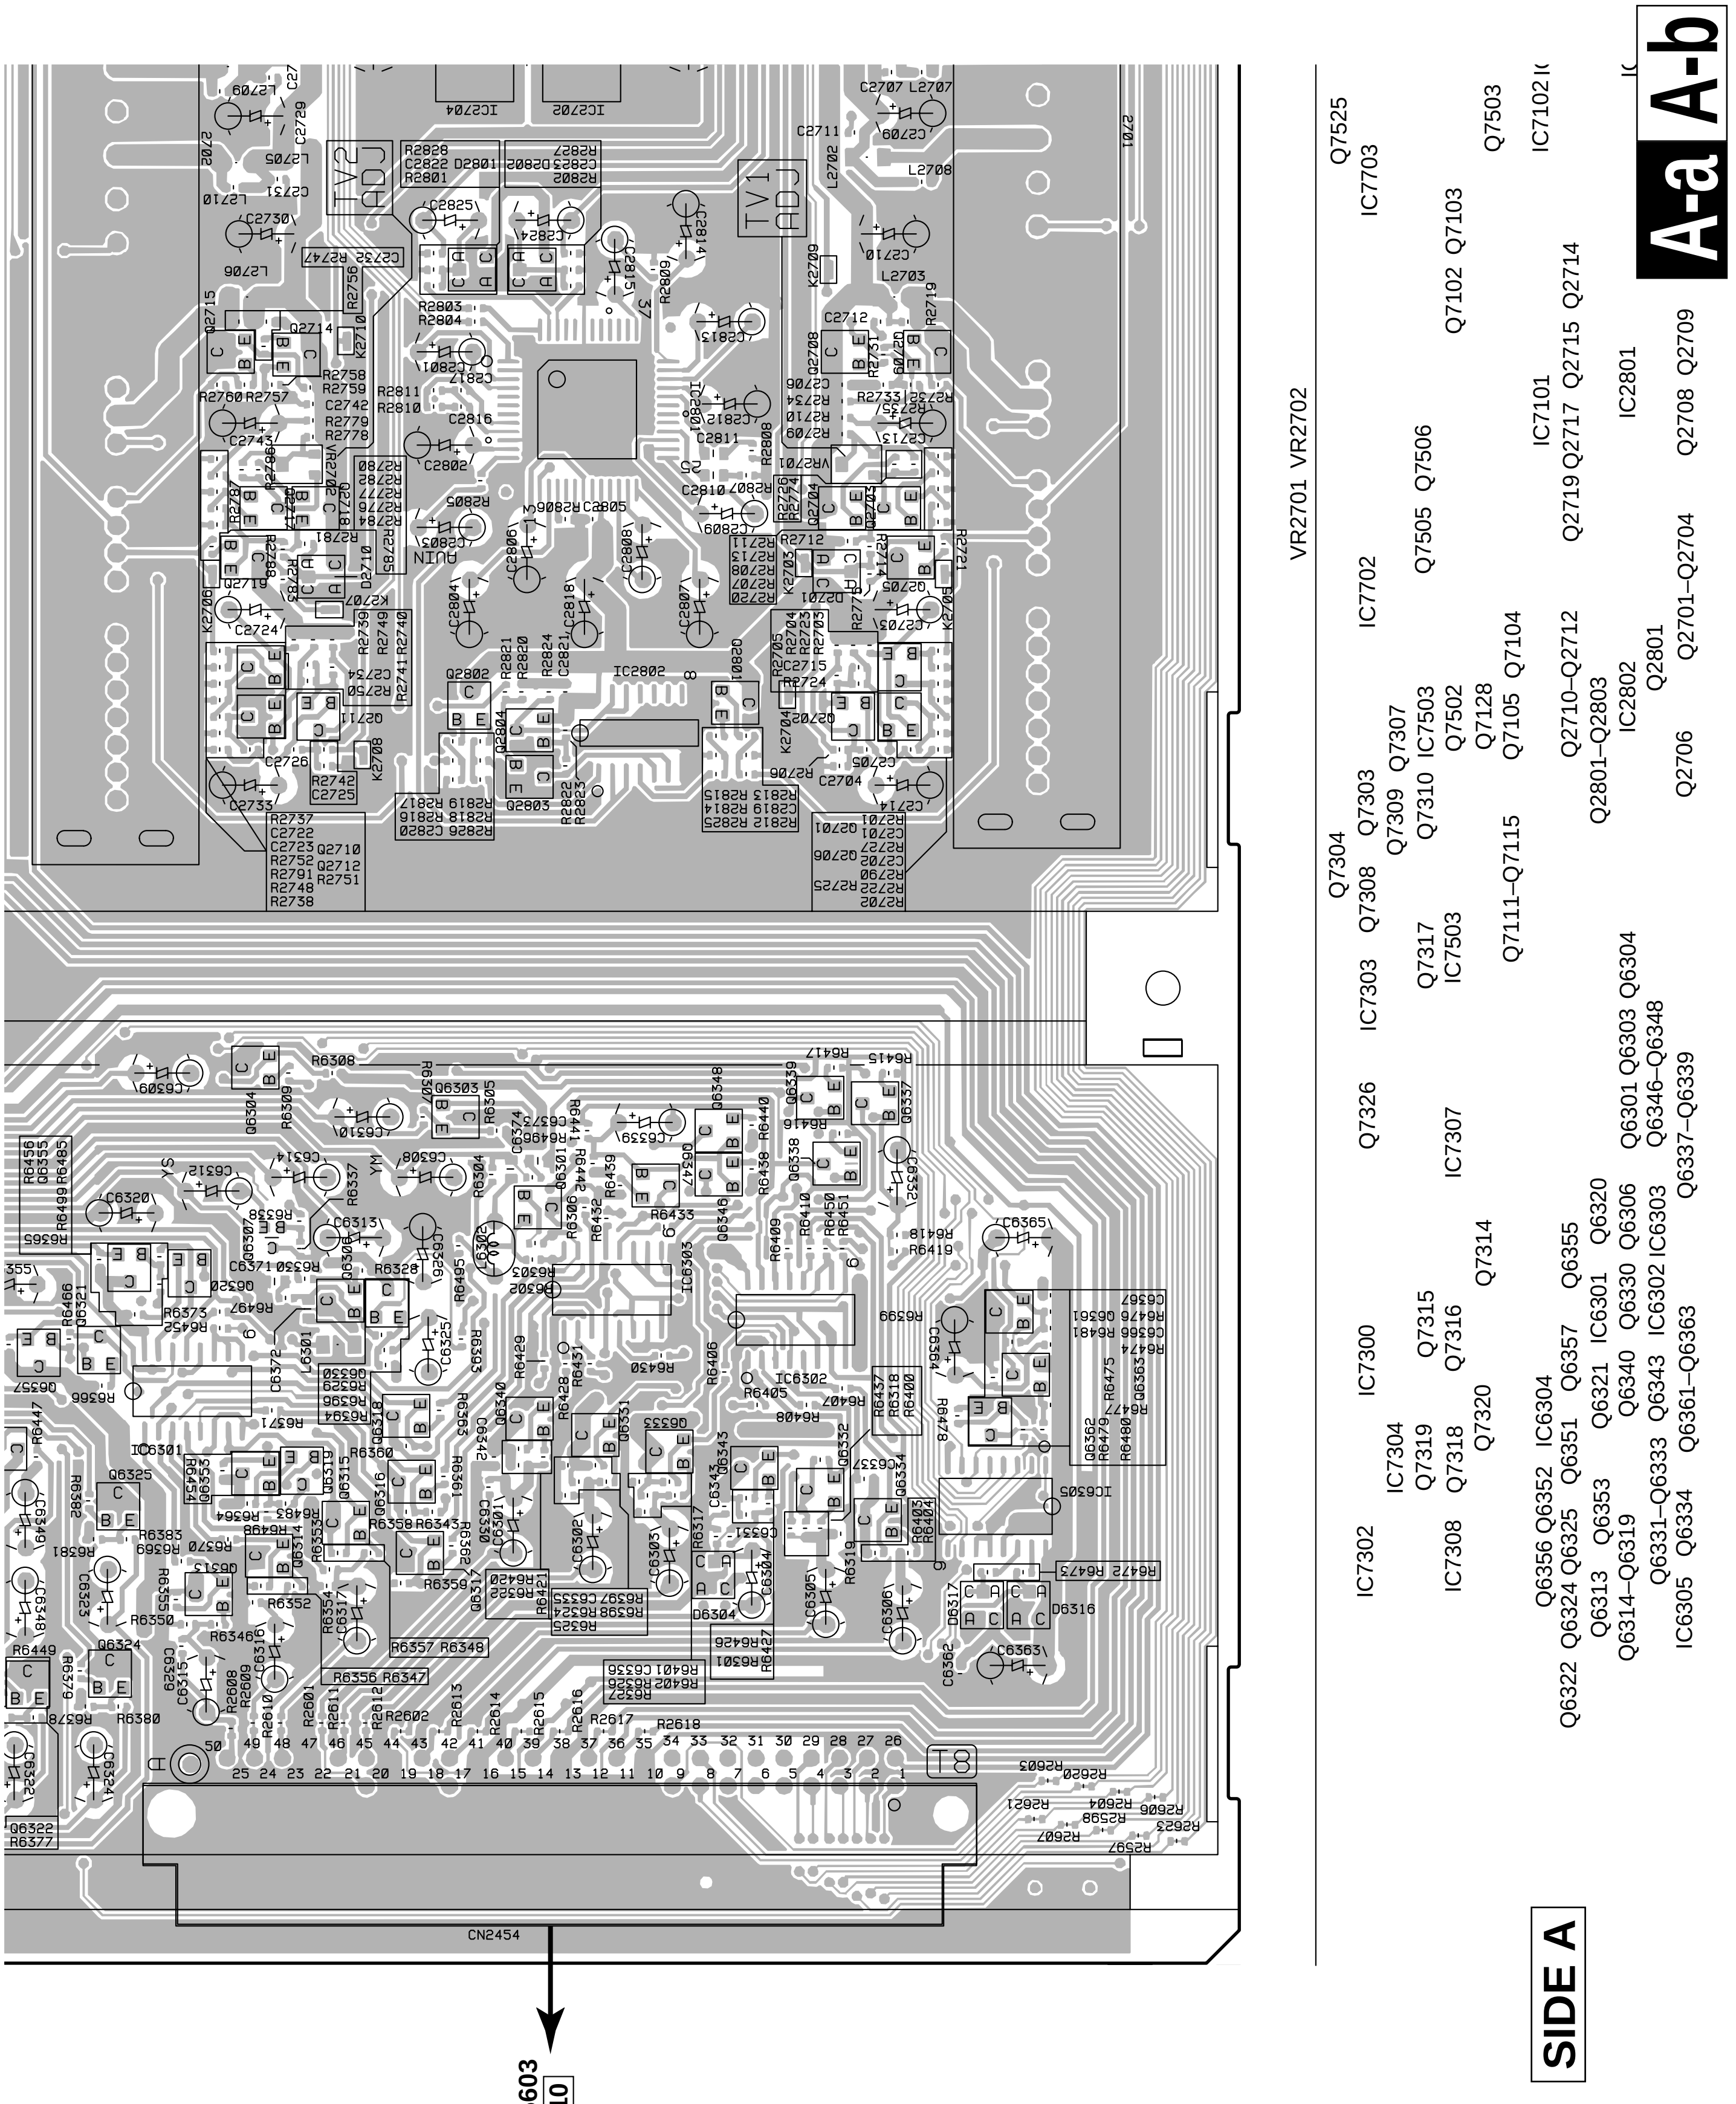
A-a A-b
SIDE A
CN2454
E CN5603 U10
VR2701 VR2702
Q7525
IC7703
Q7503
IC7102
Q7102 Q7103
IC7702
Q7505 Q7506
IC7101
Q2714
Q2715
Q2717
Q2719
IC2801
Q2709
Q2708
Q2701–Q2704
Q2710–Q2712
Q2801–Q2803
IC2802
Q2801
Q2706
Q7304
Q7308 Q7303
Q7309 Q7307
Q7310 IC7503
Q7502
Q7128
Q7105 Q7104
Q7111–Q7115
IC7303
Q7317
IC7503
Q7326
IC7307
Q6301 Q6303 Q6304
Q6346–Q6348
Q6337–Q6339
Q7314
IC7300
Q7315
Q7316
Q7320
Q6355
Q6320
Q6357 IC6301 Q6330 Q6306
Q6321 Q6340 IC6302 IC6303
IC6304
Q6351 Q6343
Q6352
IC7302
IC7304
Q7319
Q7318
IC7308
Q6356 Q6325 Q6353 Q6333 Q6363
Q6324 Q6313 Q6319
Q6314–Q6319 Q6331–Q6333 Q6361–Q6363
Q6322 IC6305 Q6334
TV1 ADJ
TV2 ADJ
IC2704
IC2702
IC2802
IC6302
IC6303
IC6301
IC6305

A-a A-b

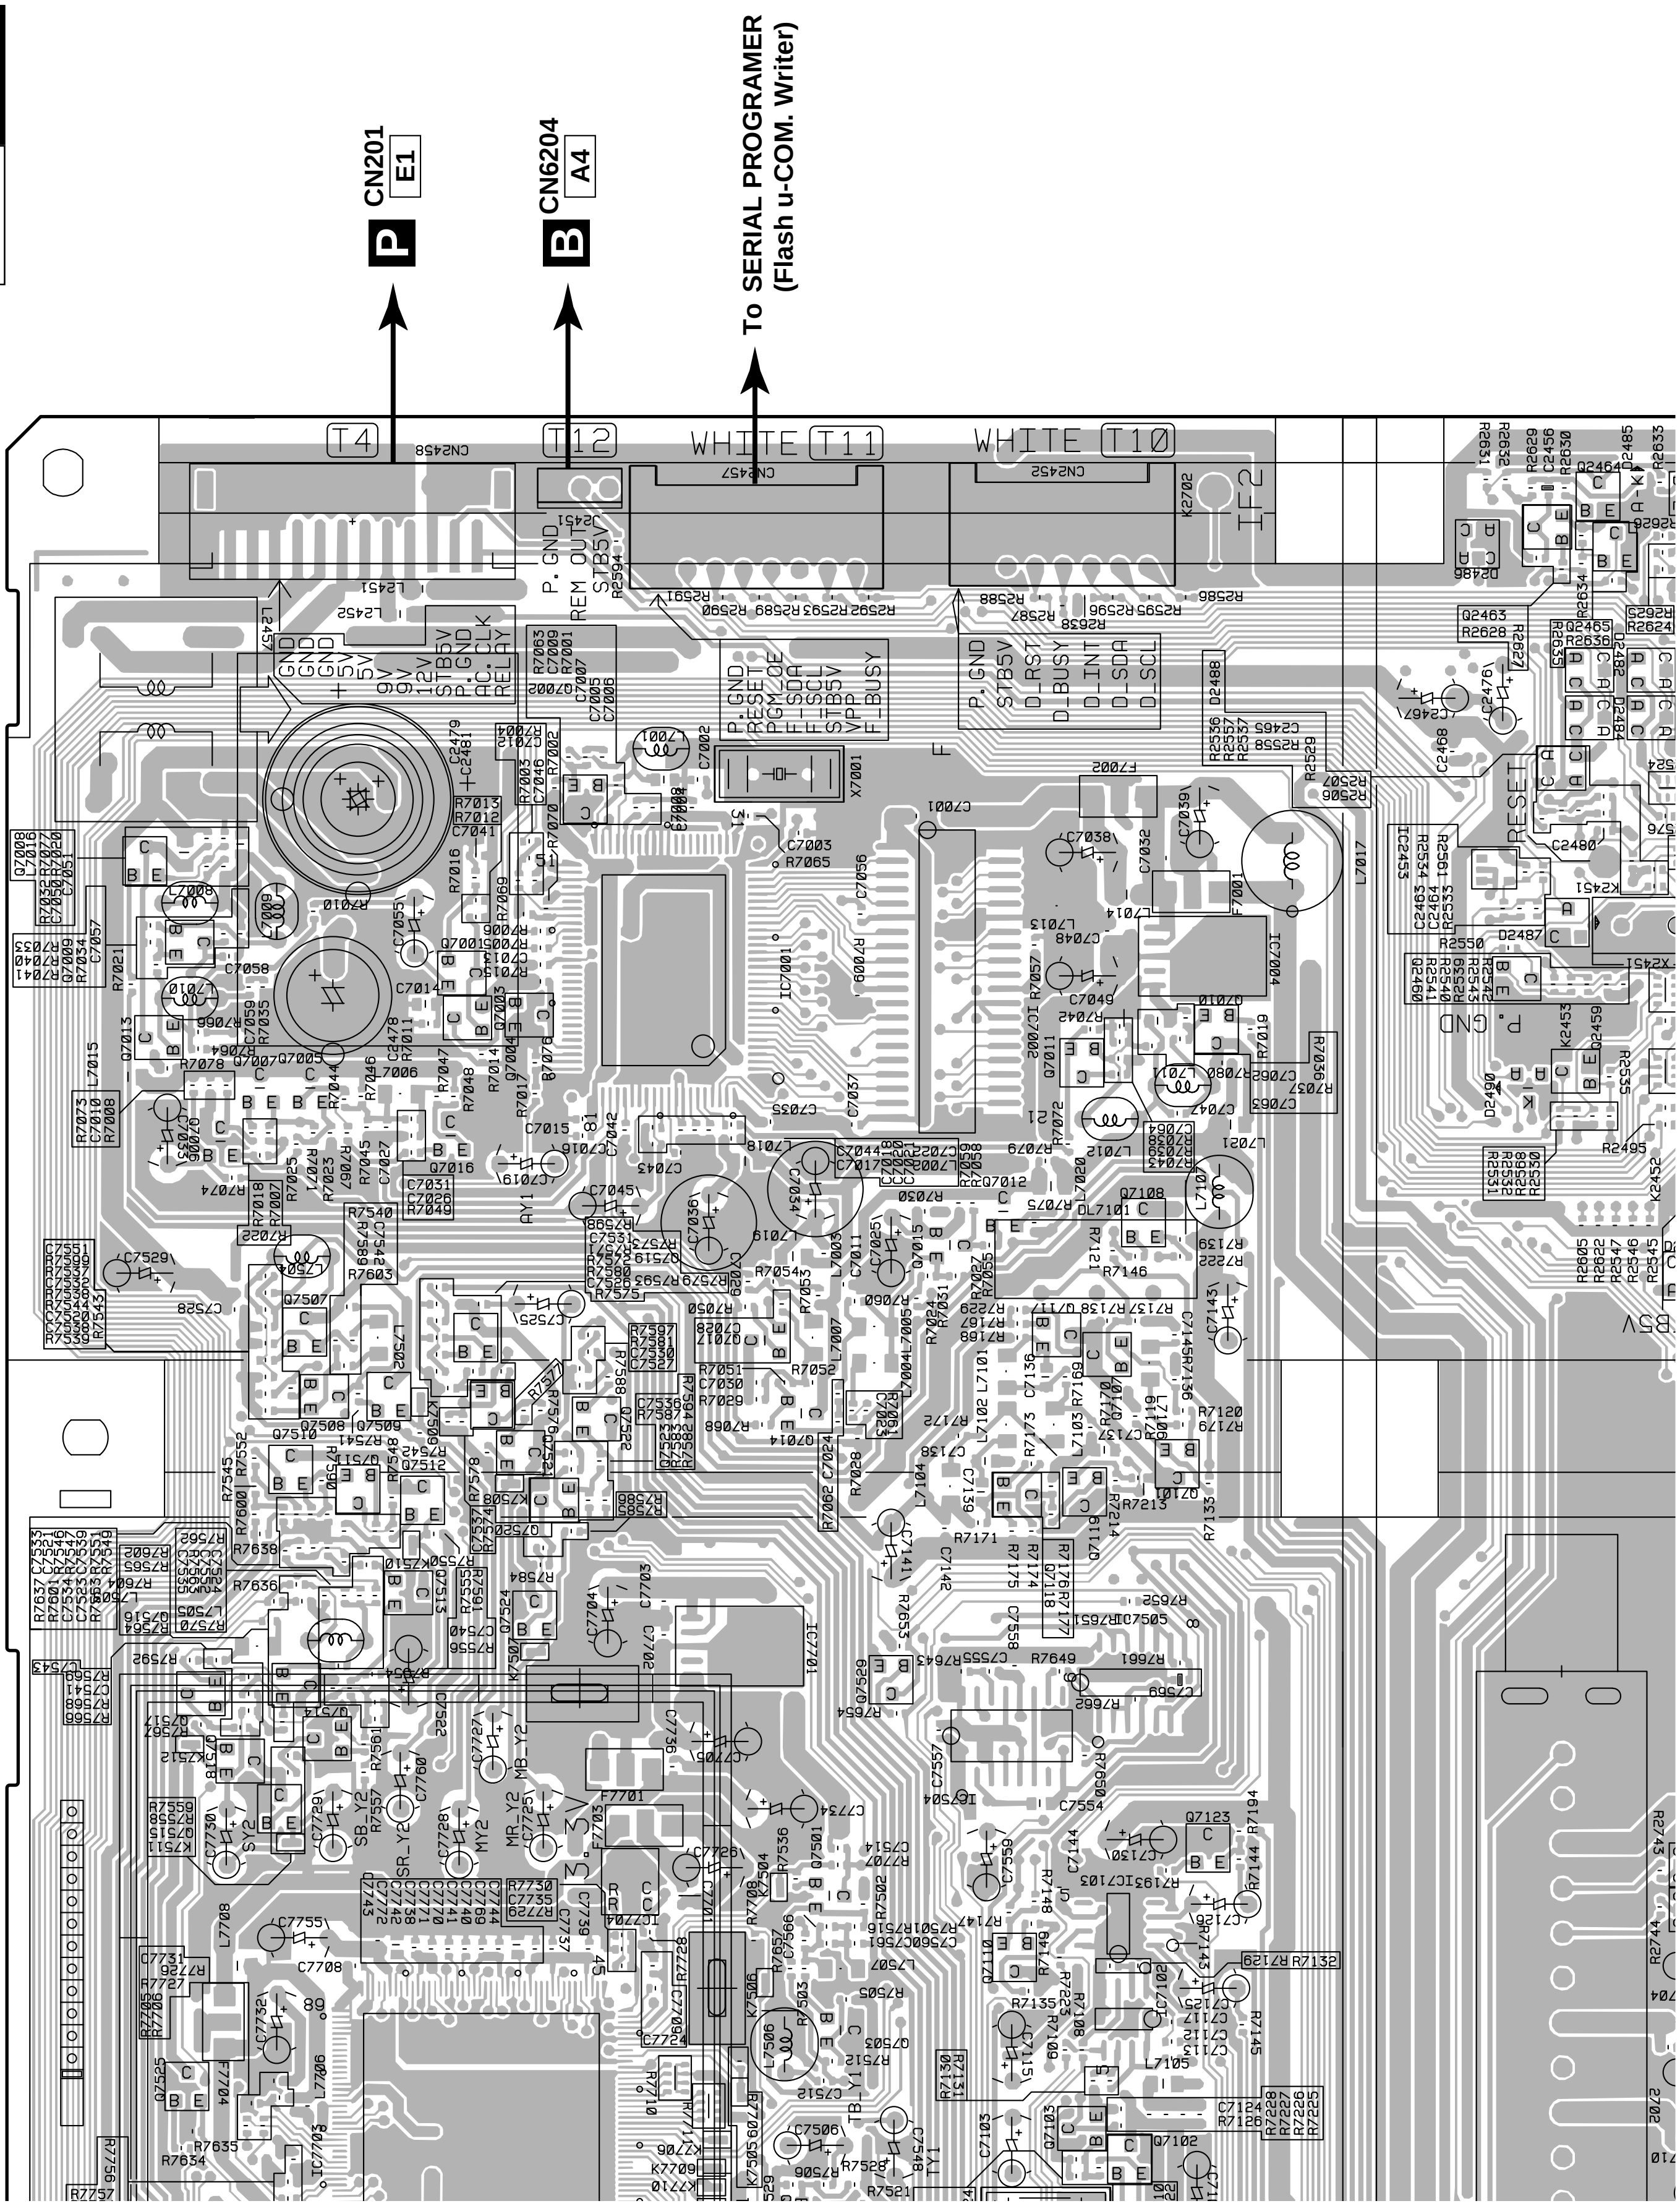
P CN201 E1
B CN6204 A4
To SERIAL PROGRAMER (Flash u-COM. Writer)
T4
T12
WHITE T11
WHITE T10
CN2458
CN2457
CN2452
IF2
P. GND
REM OUT
STB5V
GND
GND
GND
+5V
5V
9V
9V
12V
STB5V
P.GND
RC.CLK
RELAY
P.GND
RESET
PGM_OE
F-SDA
F-SCL
STB5V
VPP
F_BUSY
P.GND
STB5V
D.RST
D_BUSY
D.INT
D.SDA
D.SCL
RESET
P. GND
IC7001
IC7004
IC7002
X7001
F7001
F7002
F7701
IC7701
IC7703
IC7704

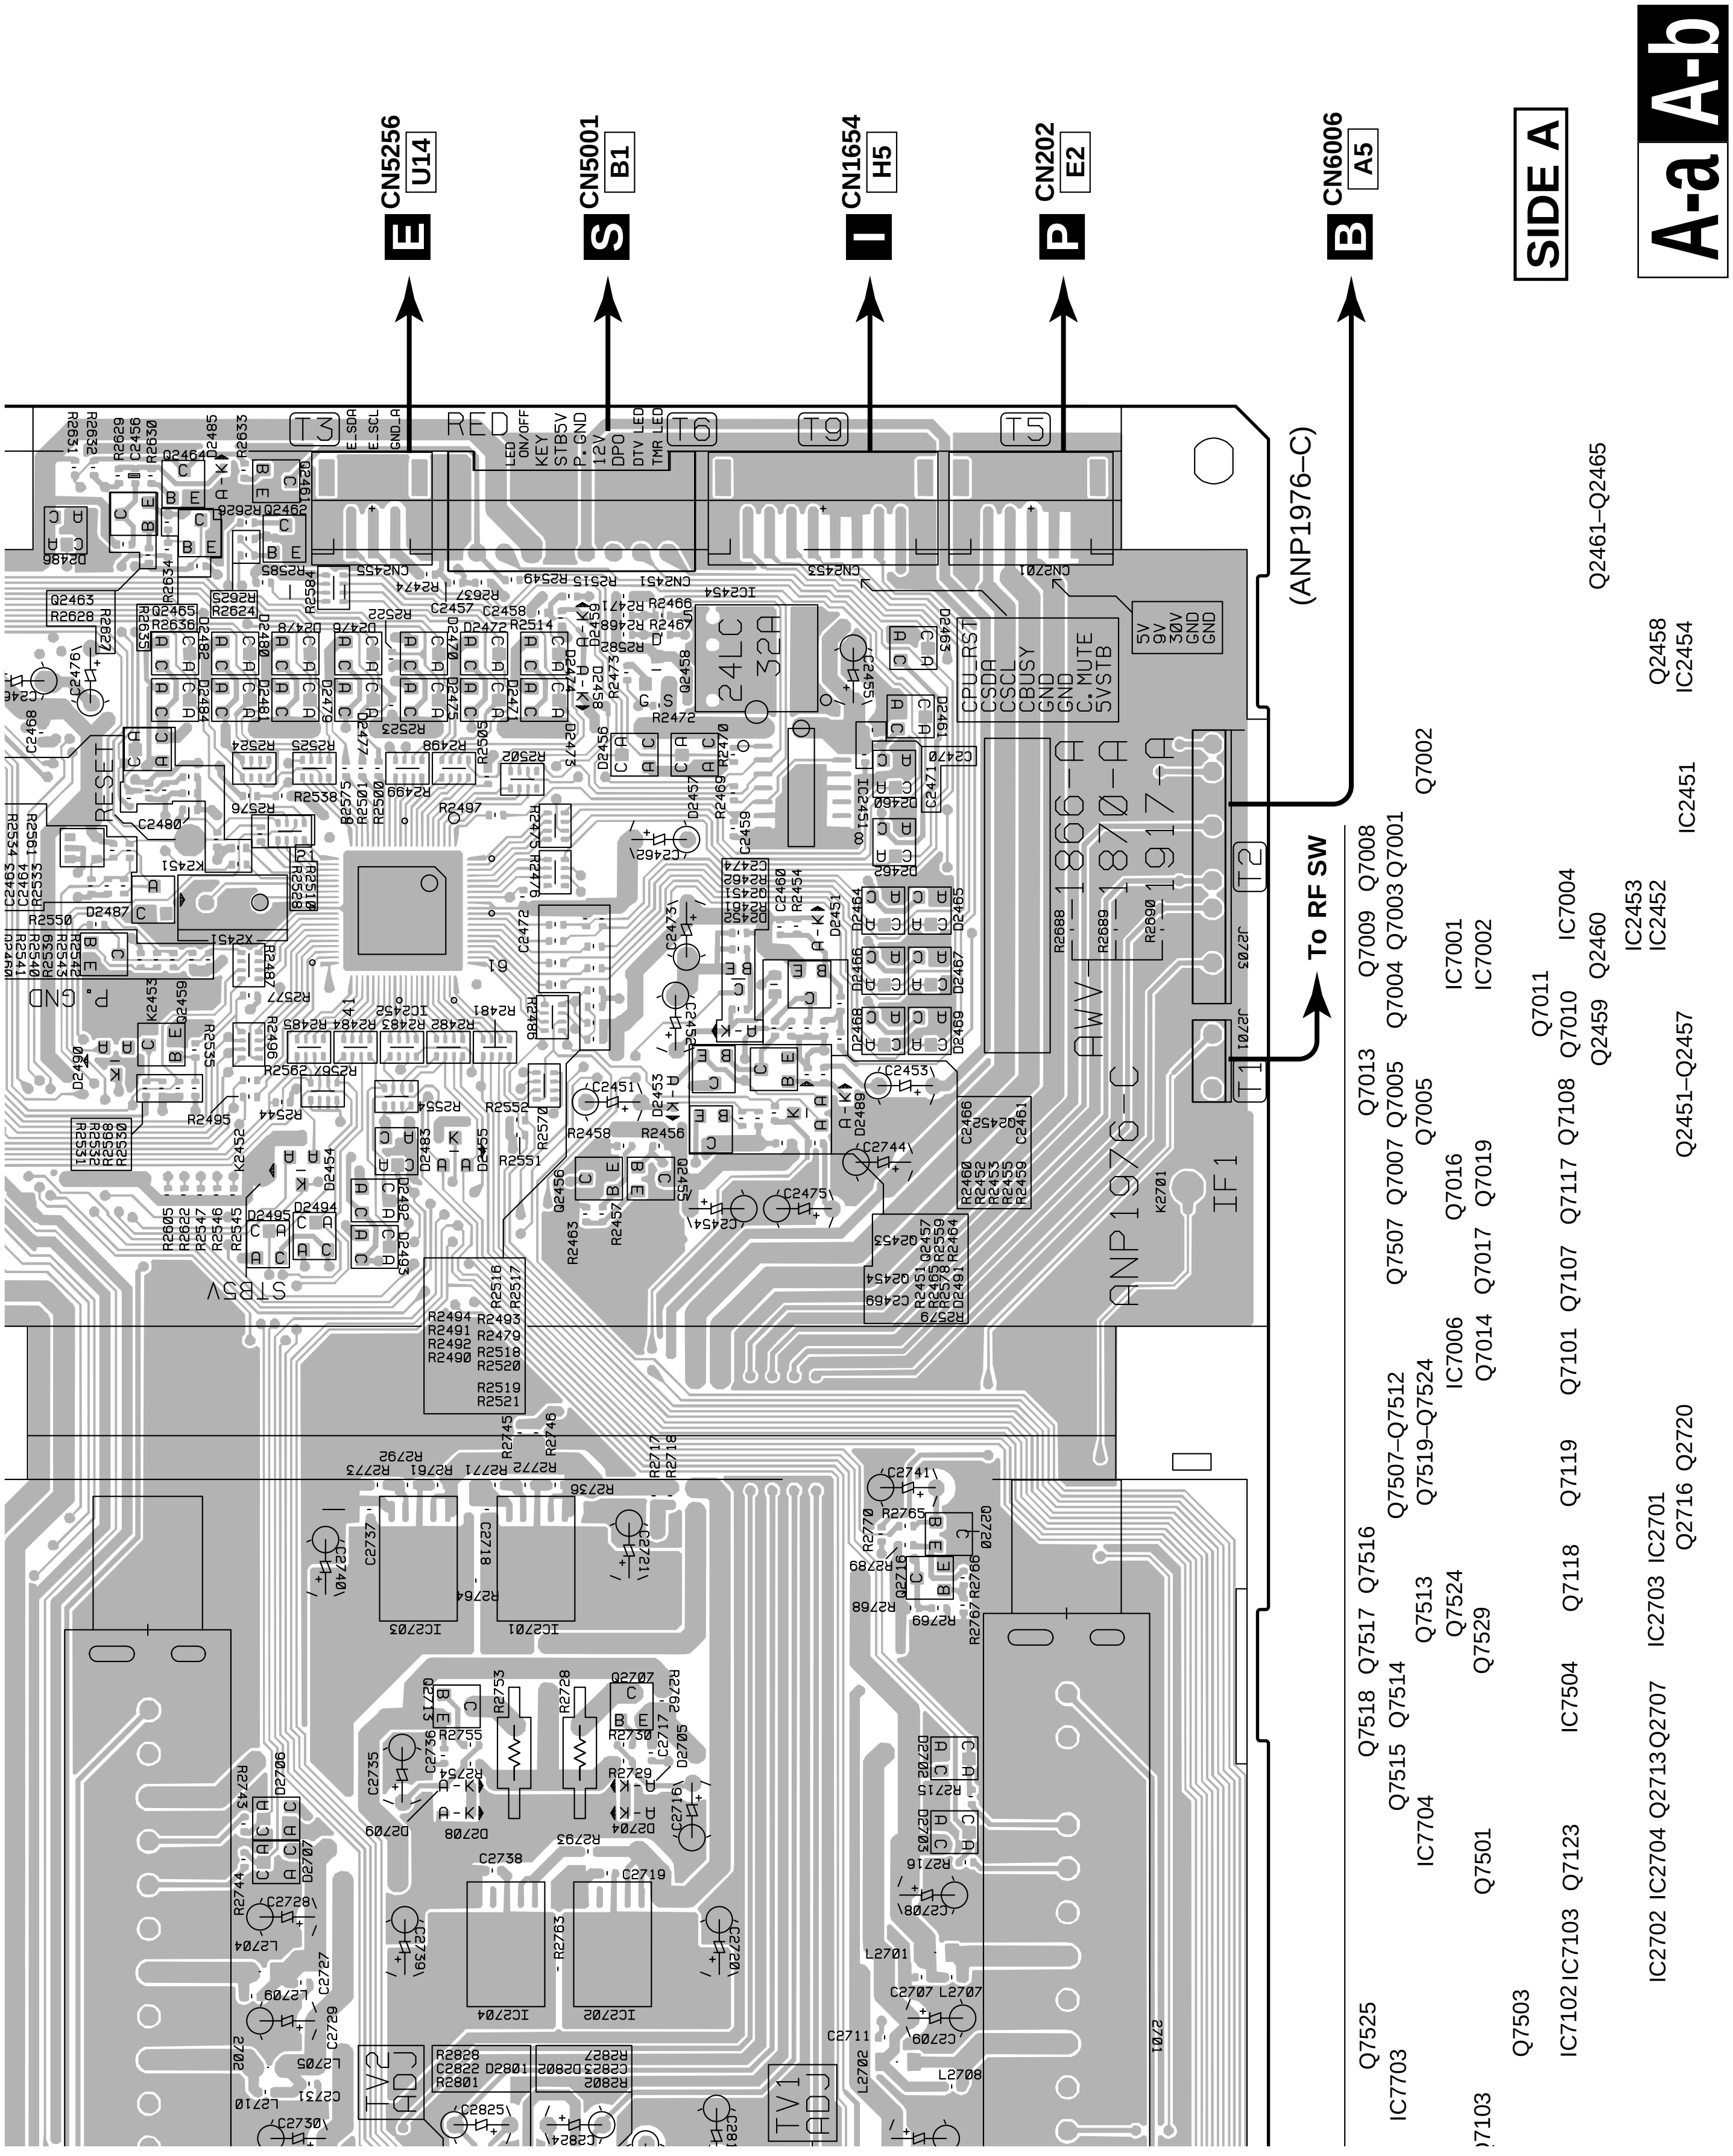
A-a A-b
SIDE A
E CN5256 U14
S CN5001 B1
I CN1654 H5
P CN202 E2
B CN6006 A5
(ANP1976–C)
To RF SW
E.SDA
E.SCL
GND_A
RED
LED
ON/OFF
KEY
STB5V
P.GND
12V
DPO
DTV LED
TMR LED
T3
T6
T9
T5
T1
T2
CPU_RST
CSDA
CSCL
CBUSY
GND
GND
C.MUTE
5VSTB
5V
9V
30V
GND
GND
24LC32A
RESET
P.GND
STB5V
IF1
AWV1866-A
1870-A
1917-A
ANP1976-C
TV1 ADJ
TV2 ADJ
Q2461–Q2465
Q2458
IC2454
Q7002
IC2451
Q7008 Q7001
Q7009 Q7003
Q7004
IC7001
IC7002
IC7004
Q2460
IC2453
IC2452
Q7011
Q7010
Q2459
Q2451–Q2457
Q7013
Q7005
Q7005
Q7108
Q7007
Q7016
Q7019
Q7117
Q7507
Q7017
Q7107
IC7006
Q7014
Q7101
Q7507–Q7512
Q7519–Q7524
Q7119
IC2701
Q2716
Q2720
Q7516
Q7513
Q7524
Q7529
Q7118
IC2703
Q7517
Q7518
Q7514
IC7504
Q2707
Q7515
IC7704
Q2713
Q7501
Q7123
IC2704
IC7102
IC7103
IC2702
Q7525
Q7503
IC7703
Q7103

A SIGNAL ASSY **A-a**

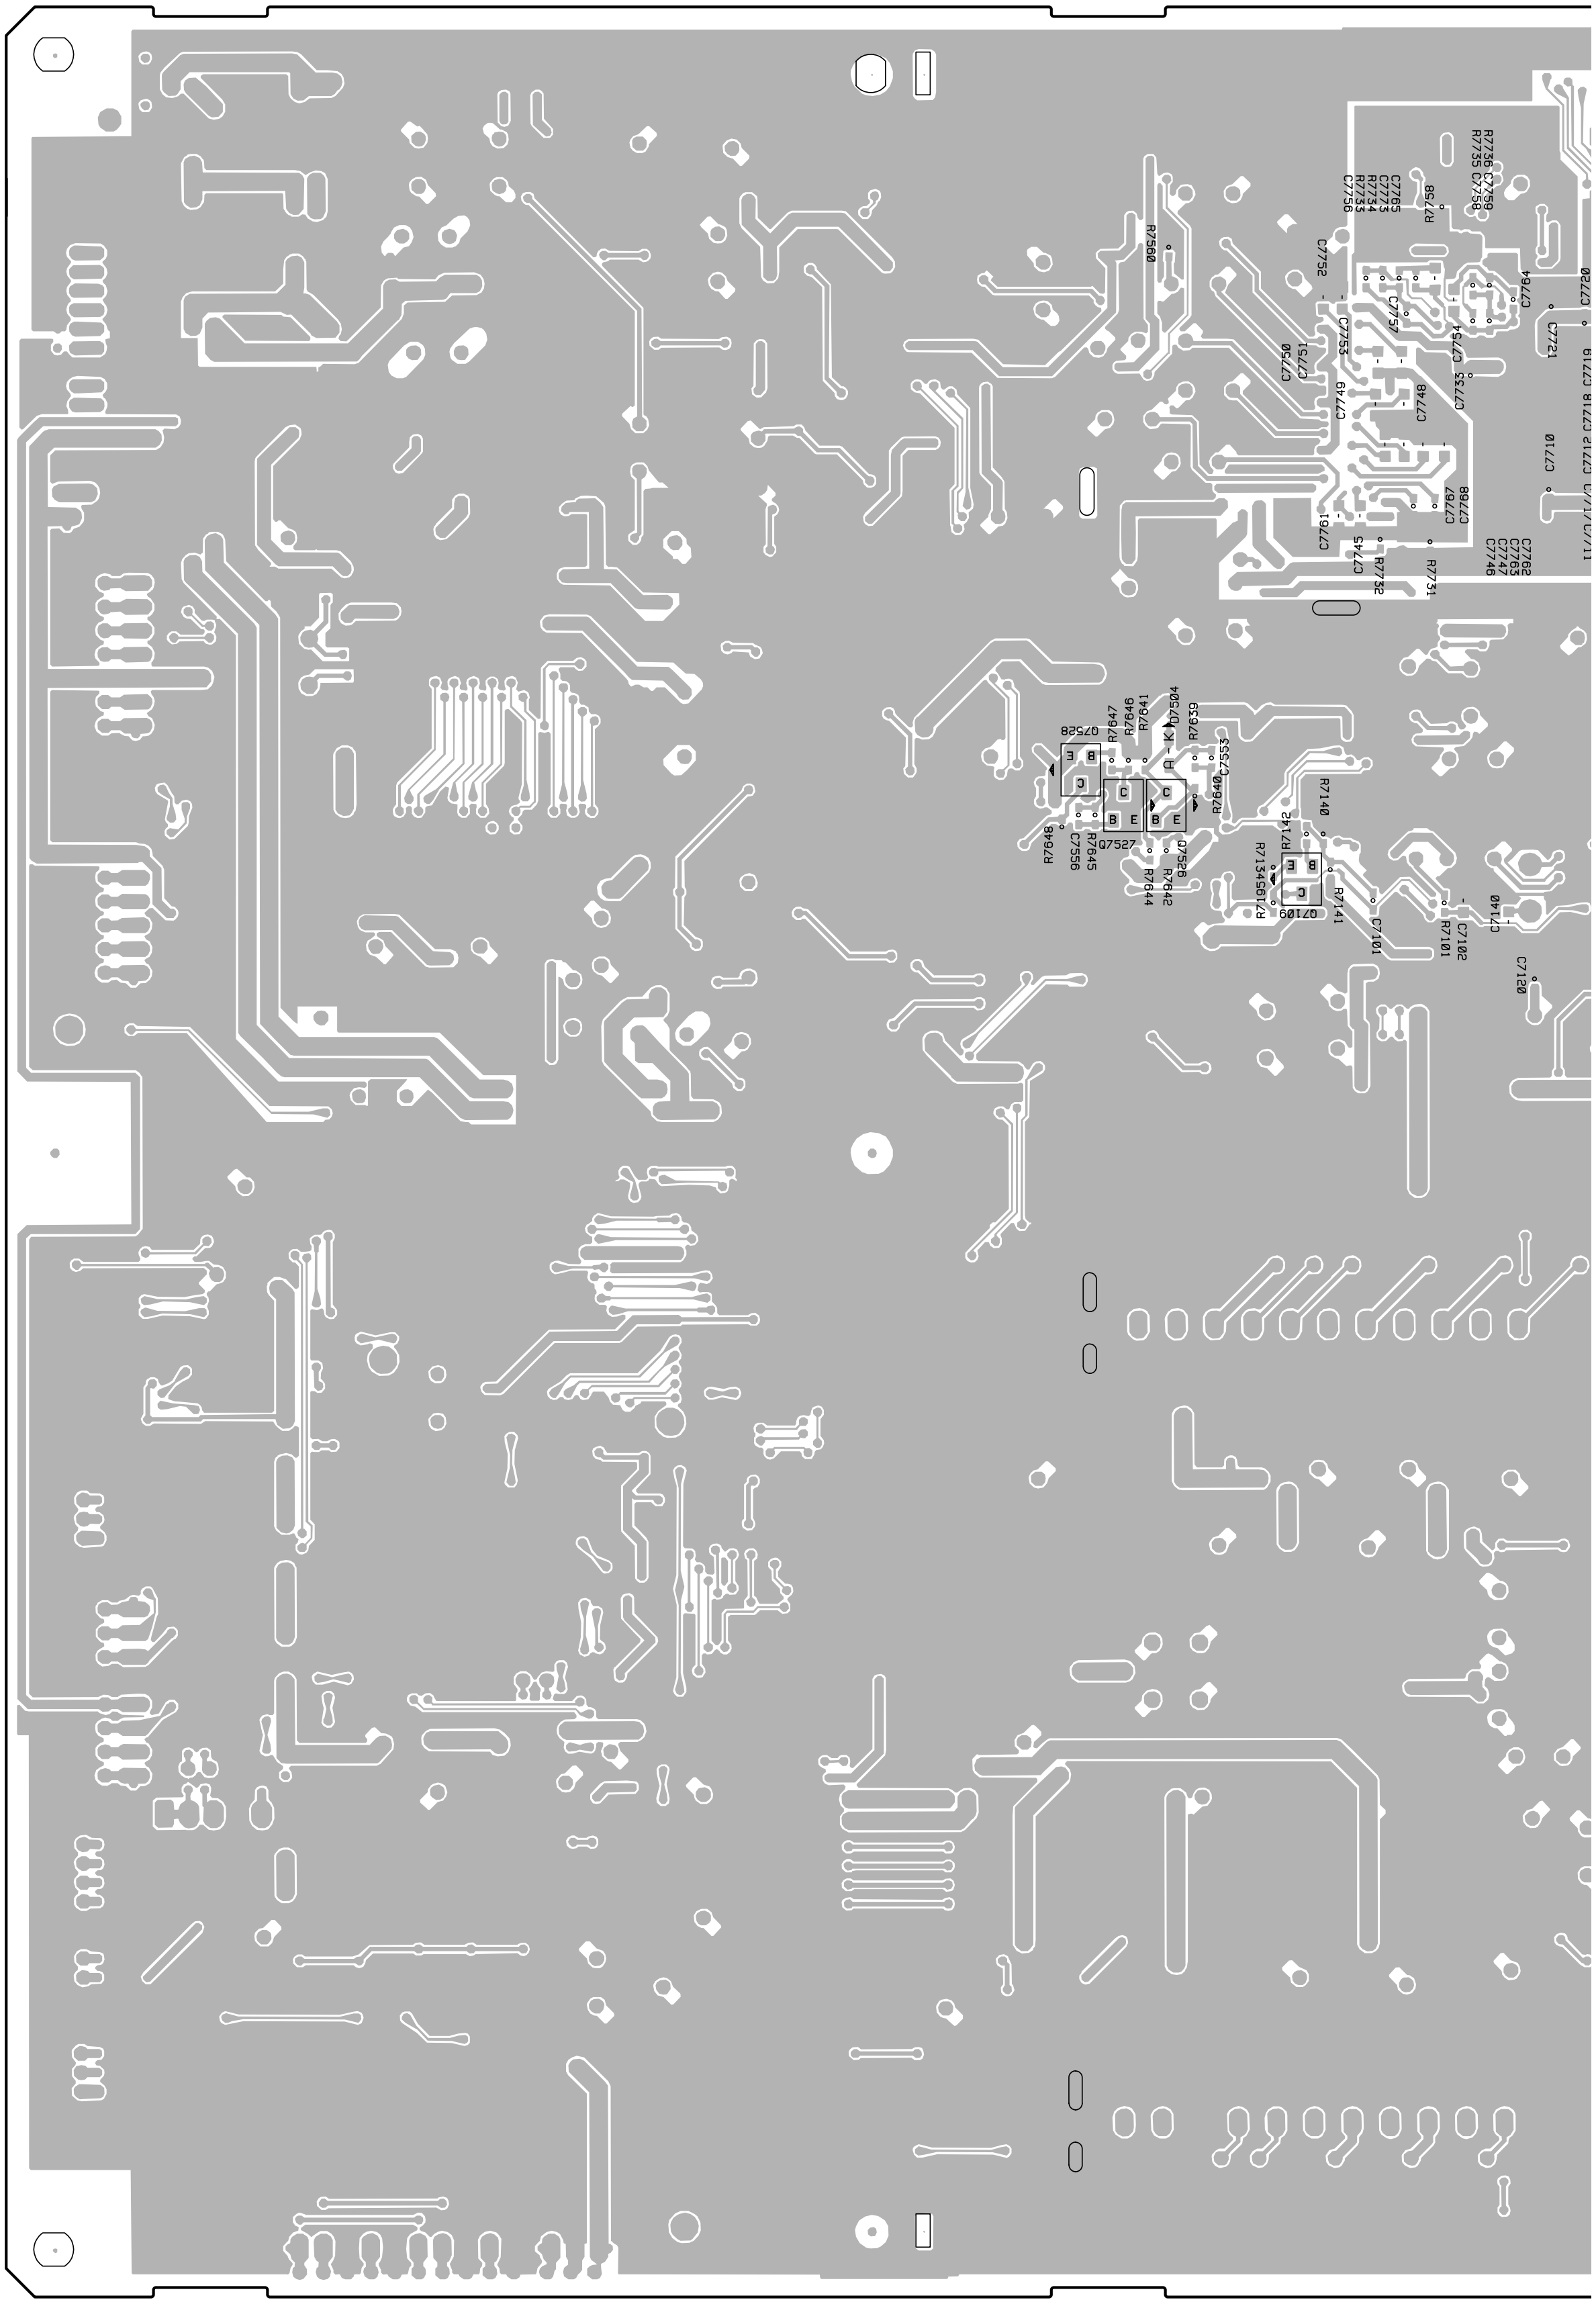
R7736 R7735
C7759 C7758
C7765 C7773 R7734 R7733 C7756
R7758
C7752
C7757
C7764
C7720
C7721
C7753
C7750 C7751
C7754 C7733
C7749
C7748
C7719 C7718 C7712
C7710
C7767 C7768
C7761
C7745
R7732
R7731
C7762 C7763 C7747 C7746
Q7528
R7647 R7646 R7641
D7504
K A
R7639
C7553
R7640
E B C
C B E
C B E
R7648 C7556 R7645
Q7527
Q7526
R7644 R7642
R7140
R7142
R7134 R7105 R7161
E B C
Q7109
R7141
C7101
R7101 C7102
C7140
C7120

SIDE B

Q7528
Q7527 Q7526 Q7109

A-b

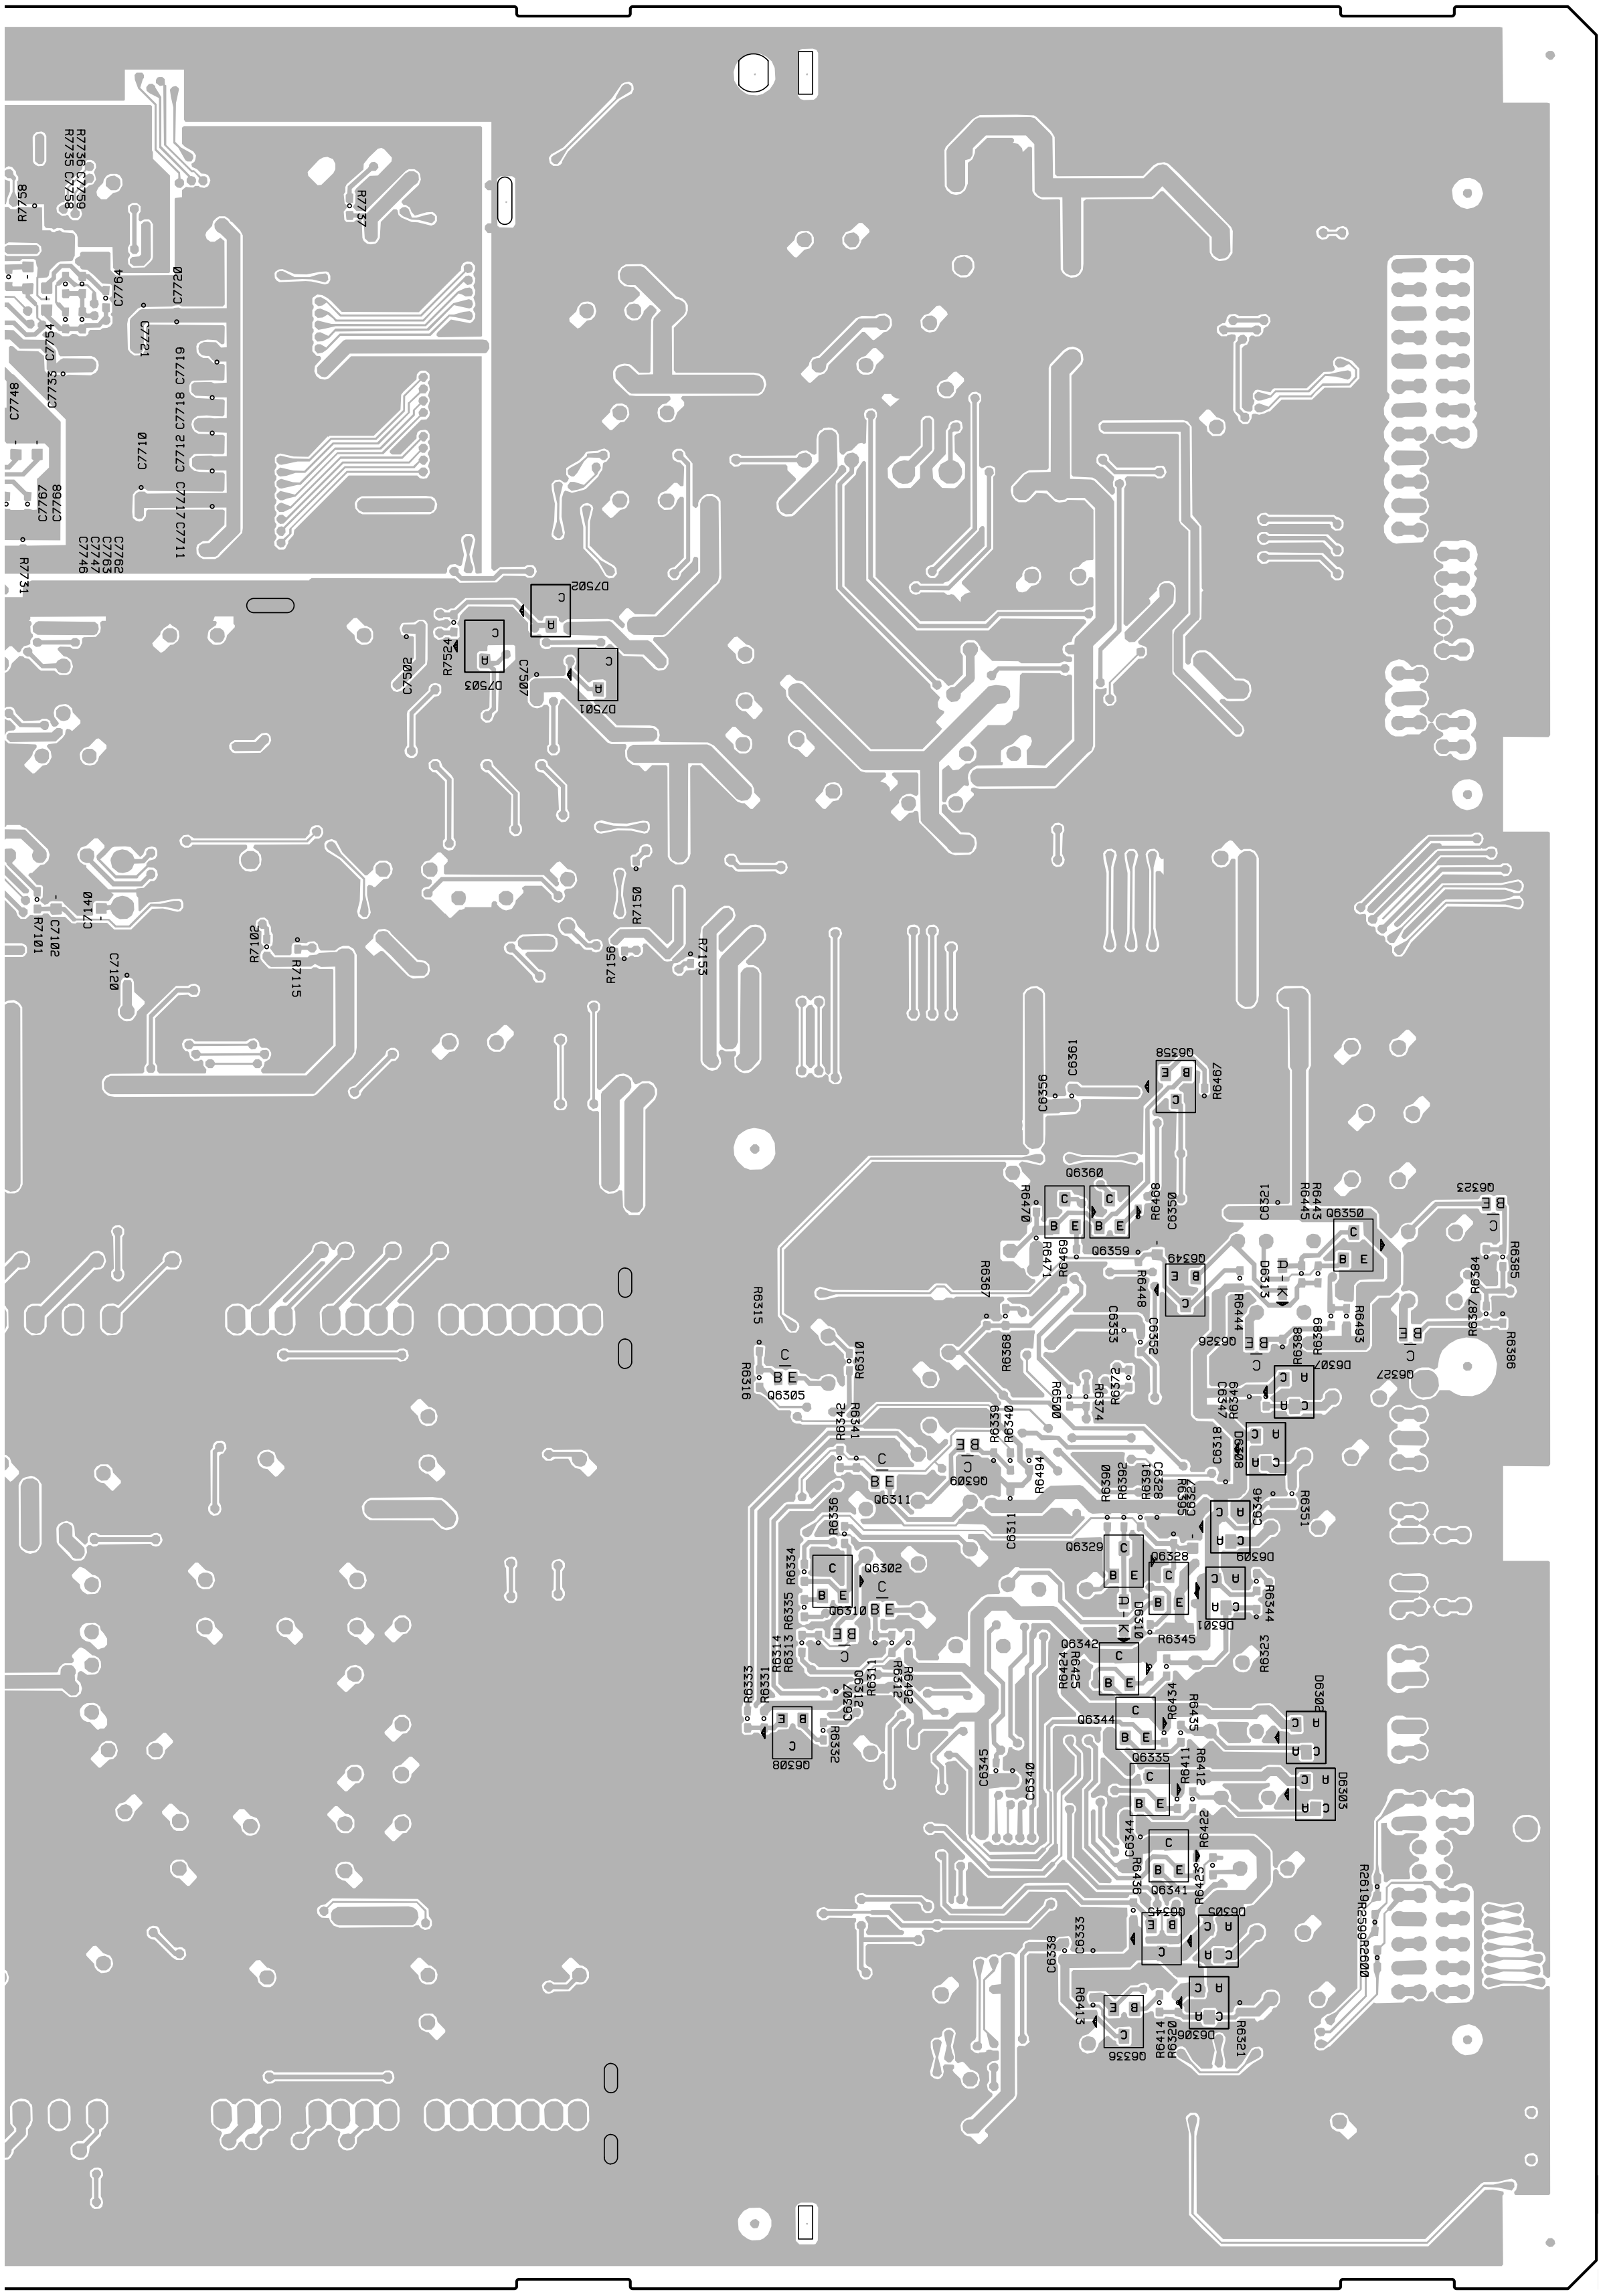
R7758
R7756 C7759
R7755 C7758
R7757
C7764
C7720
C7721
C7754
C7733
C7719
C7718
C7740
C7710
C7712
C7767
C7768
C7717 C7711
C7746
C7747
C7762
C7763
R7751
D7502
D7503
D7501
R7524
C7502
C7507
C7140
C7102
R7101
C7120
R7102
R7115
R7150
R7156
R7153
C6356
C6301
Q6358
R6467
Q6360
R6470
R6468
C6350
Q6359
R6469
R6471
C6321
R6443
R6445
Q6350
Q6349
D6313
R6444
R6448
R6567
R6315
R6316
Q6305
R6310
R6368
C6355
C6352
Q6326
R6493
Q6327
D6307
Q6325
R6385
R6384
R6387
R6386
R6342
R6341
R6339
R6340
R6590
R6372
R6374
C6347
C6318
D6308
Q6309
Q6311
R6494
C6311
R6390
R6392
R6391
C6328
C6351
C6349
D6309
R6551
R6336
Q6329
Q6328
R6334
Q6302
R6335
Q6310
D6301
R6344
R6313
R6314
Q6342
R6345
R6424
R6425
R6323
R6333
R6331
Q6307
C6312
R6311
R6312
R6492
Q6344
R6434
R6435
D6304
Q6308
R6332
C6345
C6340
Q6335
R6411
R6412
D6303
C6344
R6430
R6420
Q6341
R6429
R2610
R2599
R2600
Q6340
D6305
C6333
C6338
R6415
R6414
R6520
D6306
R6521
Q6336

(ANP1976–C)

Q6305 Q6311 Q6309 Q6360 Q6359 Q6358 Q6350 Q6327 Q6325
Q6302 Q6349 Q6326
Q6308 Q6310 Q6329 Q6328
Q6344 Q6335
Q6341
Q6336 Q6345

A

B

C

D

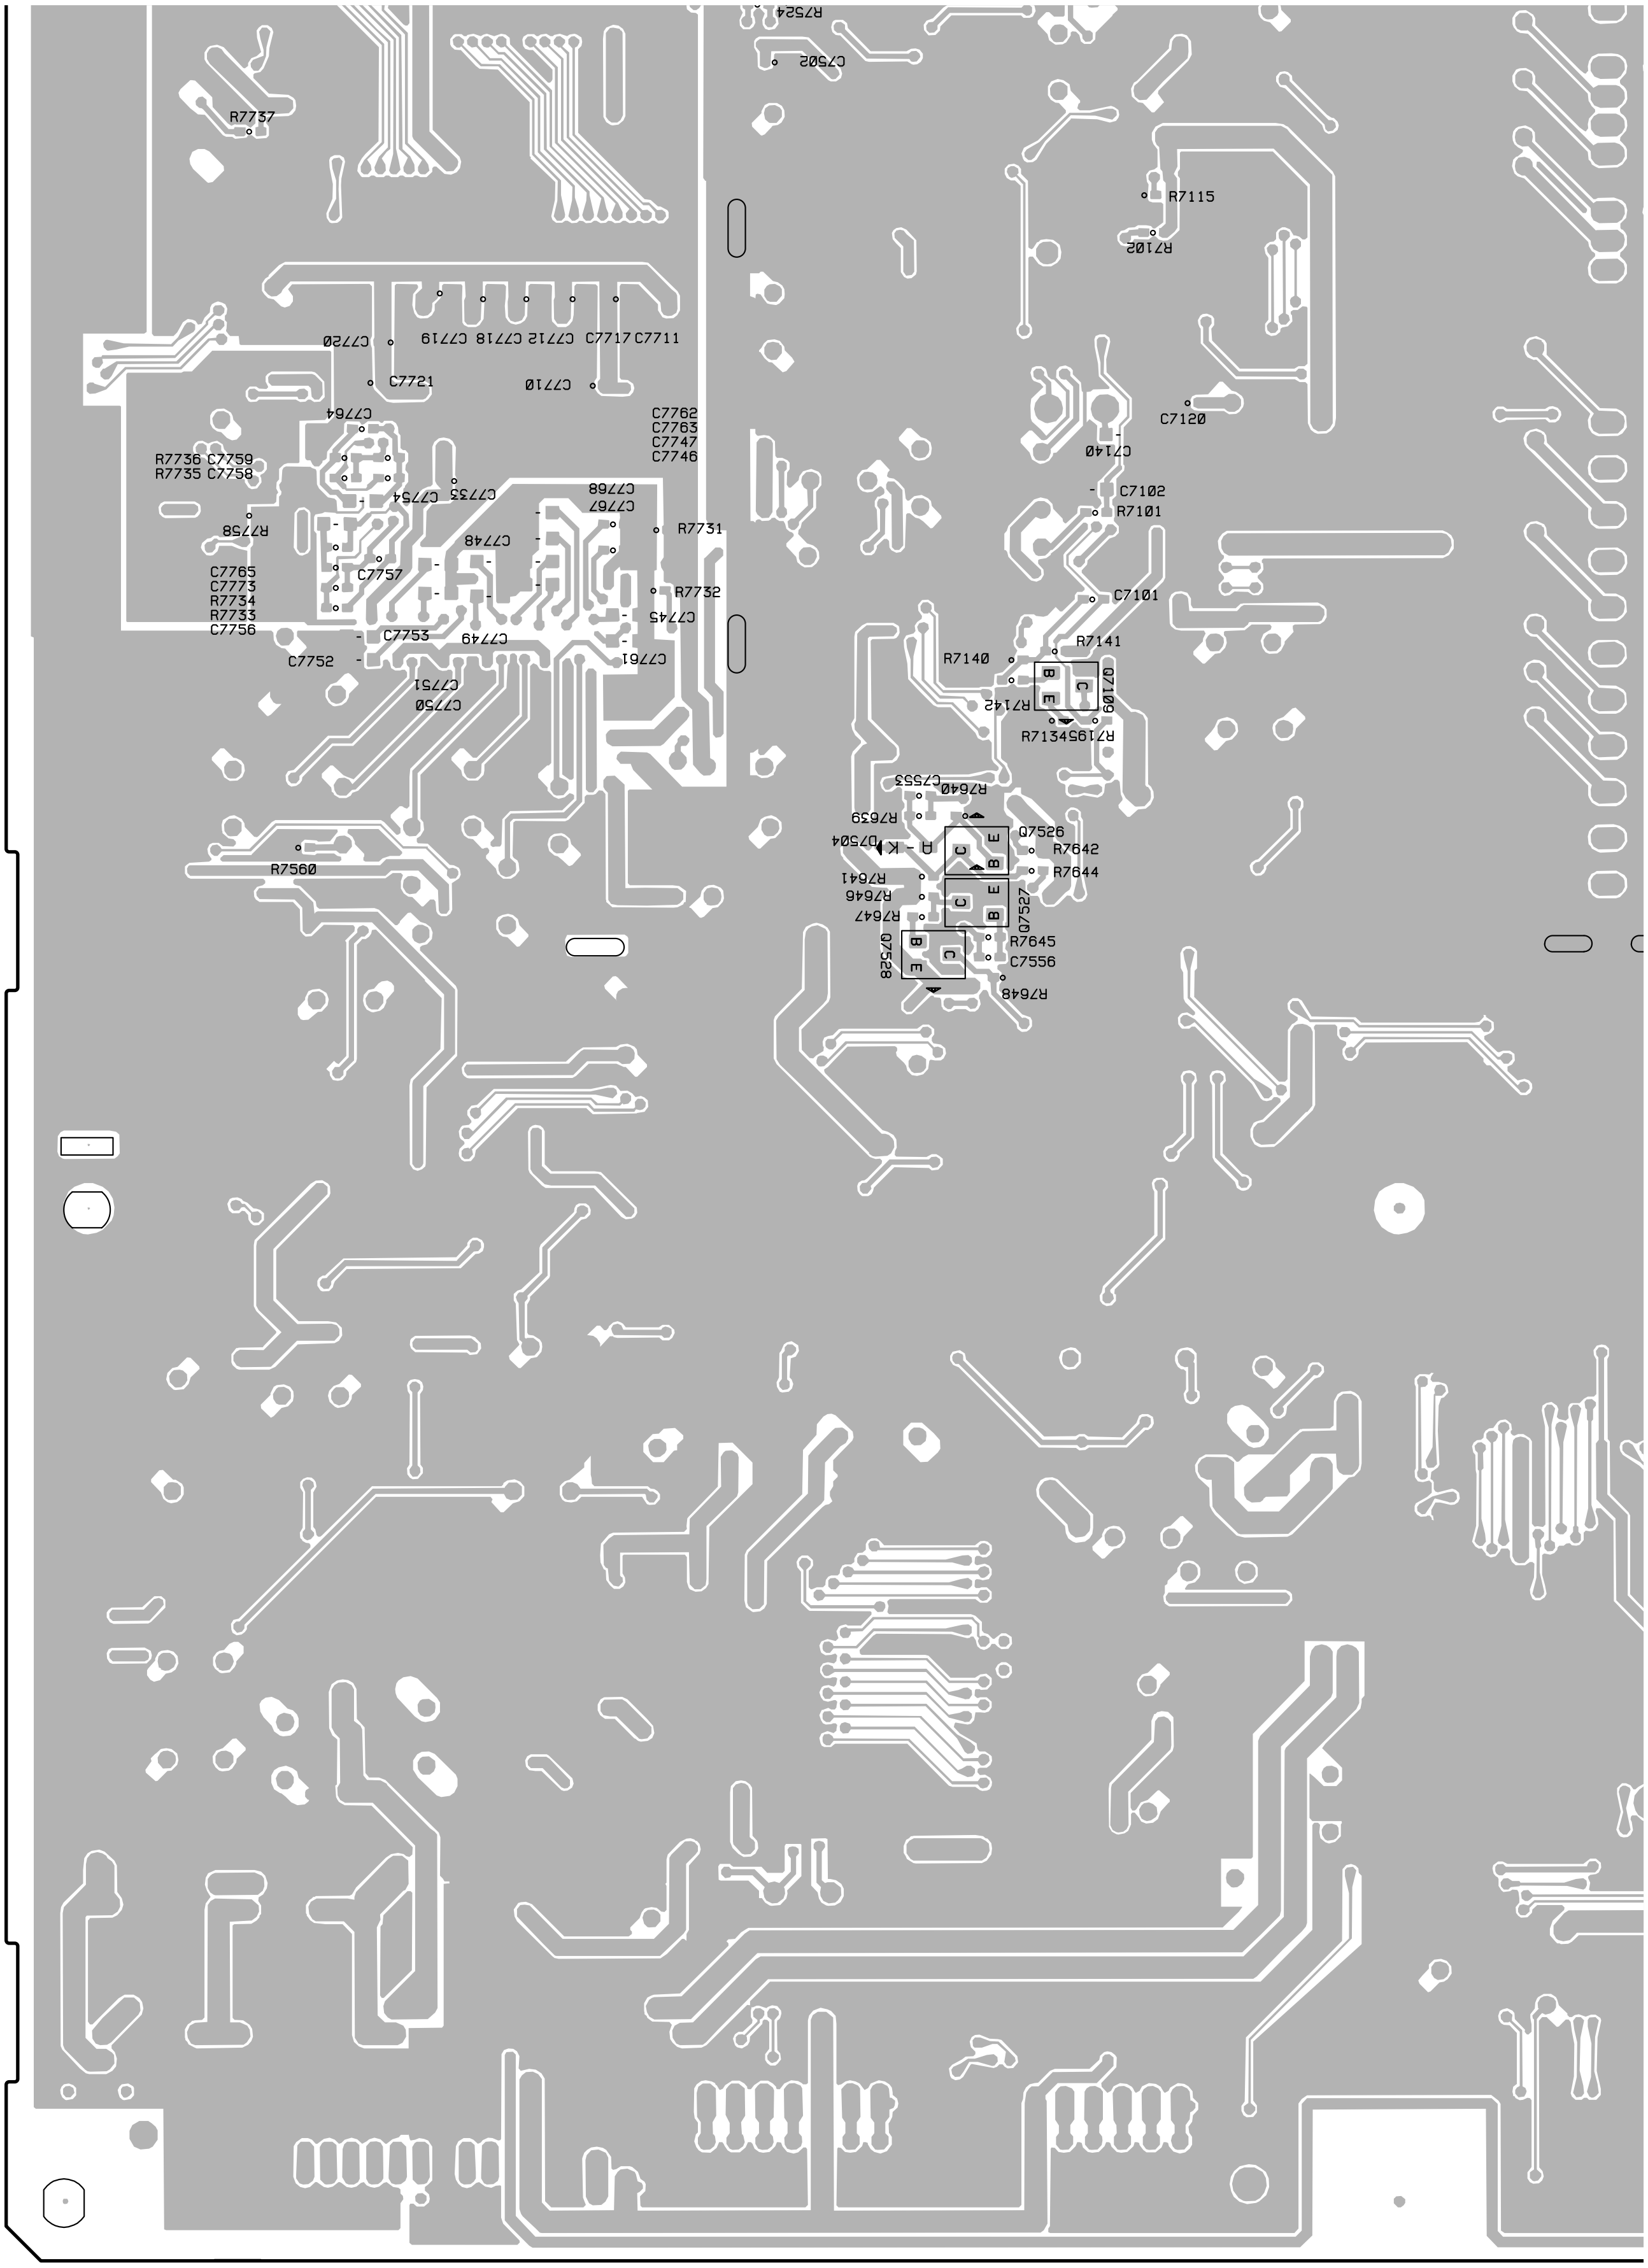
R7524
C7502
R7737
R7115
R7102
C7720
C7719
C7718
C7712
C7717
C7711
C7721
C7710
C7764
C7762
C7763
C7747
C7746
C7120
R7736
R7735
C7759
C7758
C7733
C7754
C7768
C7767
C7140
C7102
R7101
R7758
C7748
R7731
C7757
C7765
C7773
R7734
R7733
C7756
R7732
C7745
C7101
C7753
C7749
C7752
C7761
R7141
R7140
C7751
C7750
R7142
Q7109
R7134
R7195
C7553
R7640
R7639
Q7526
D7504
R7642
R7644
R7641
R7646
R7647
Q7527
R7560
Q7528
R7645
C7556
R7648
A K
B C E

A-a A-b

A SIGNAL ASSY

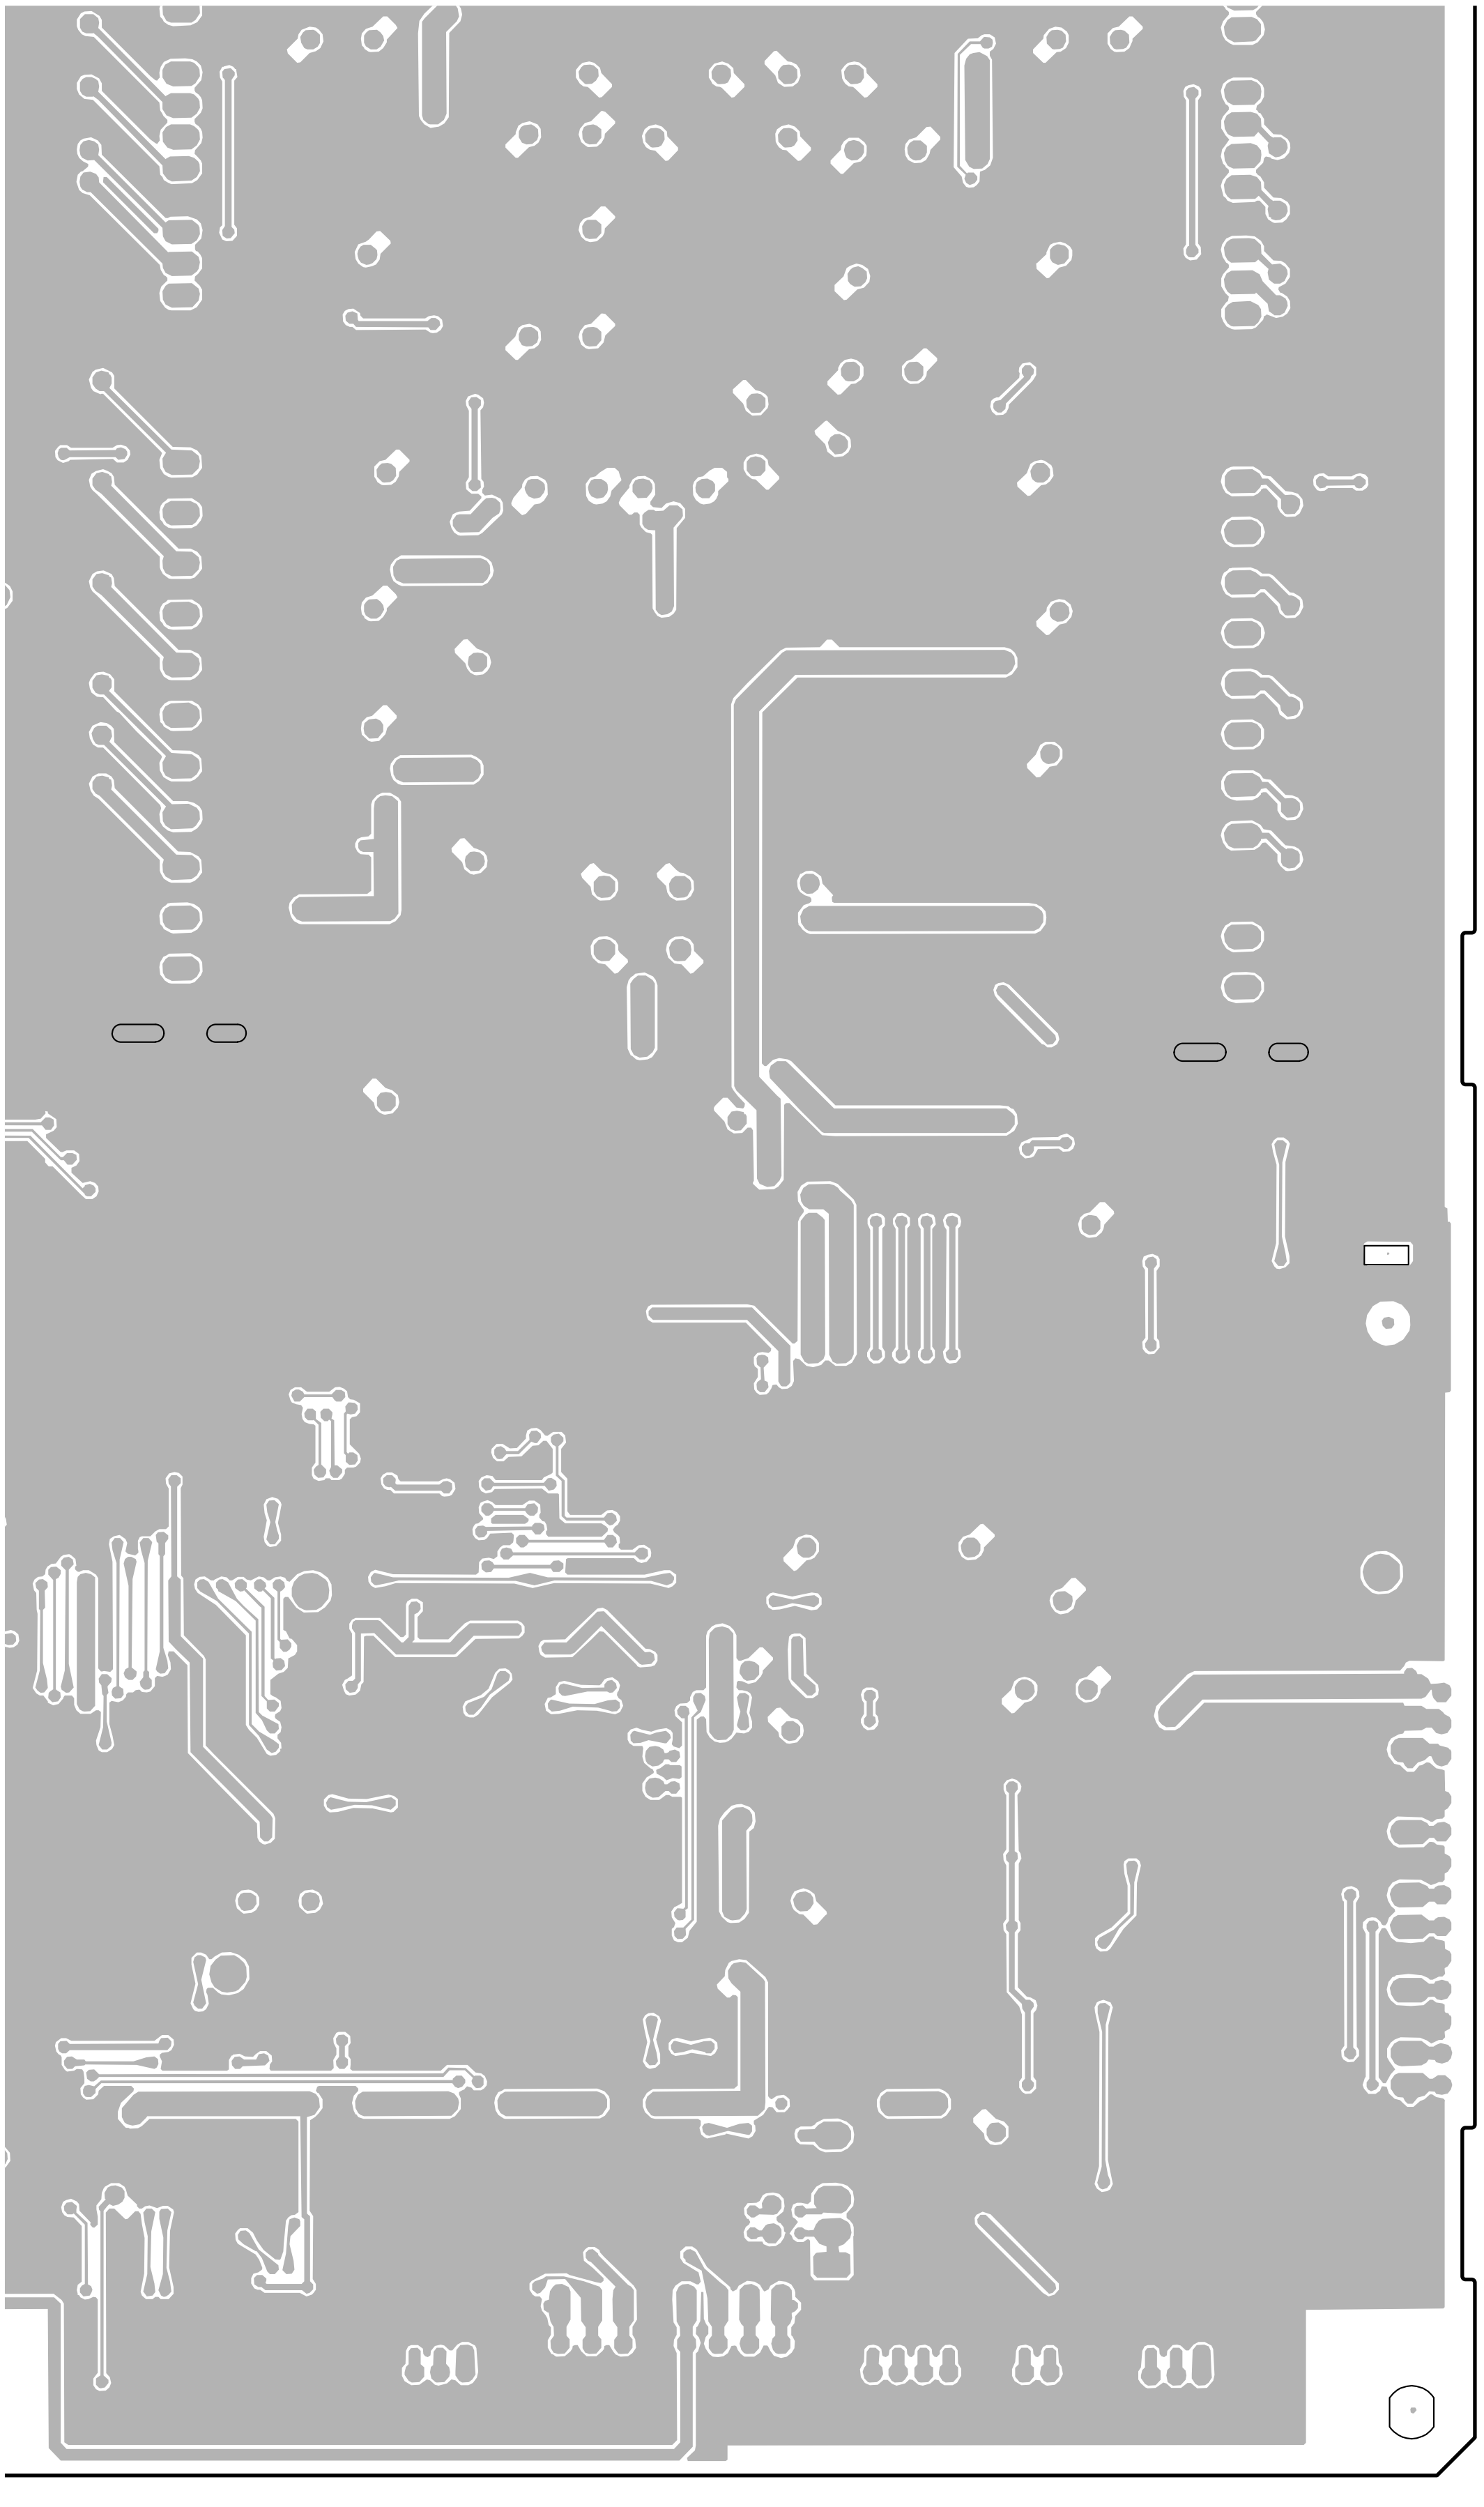
Q7109
Q7526
Q7527
Q7528

SIDE B

A-a A-b

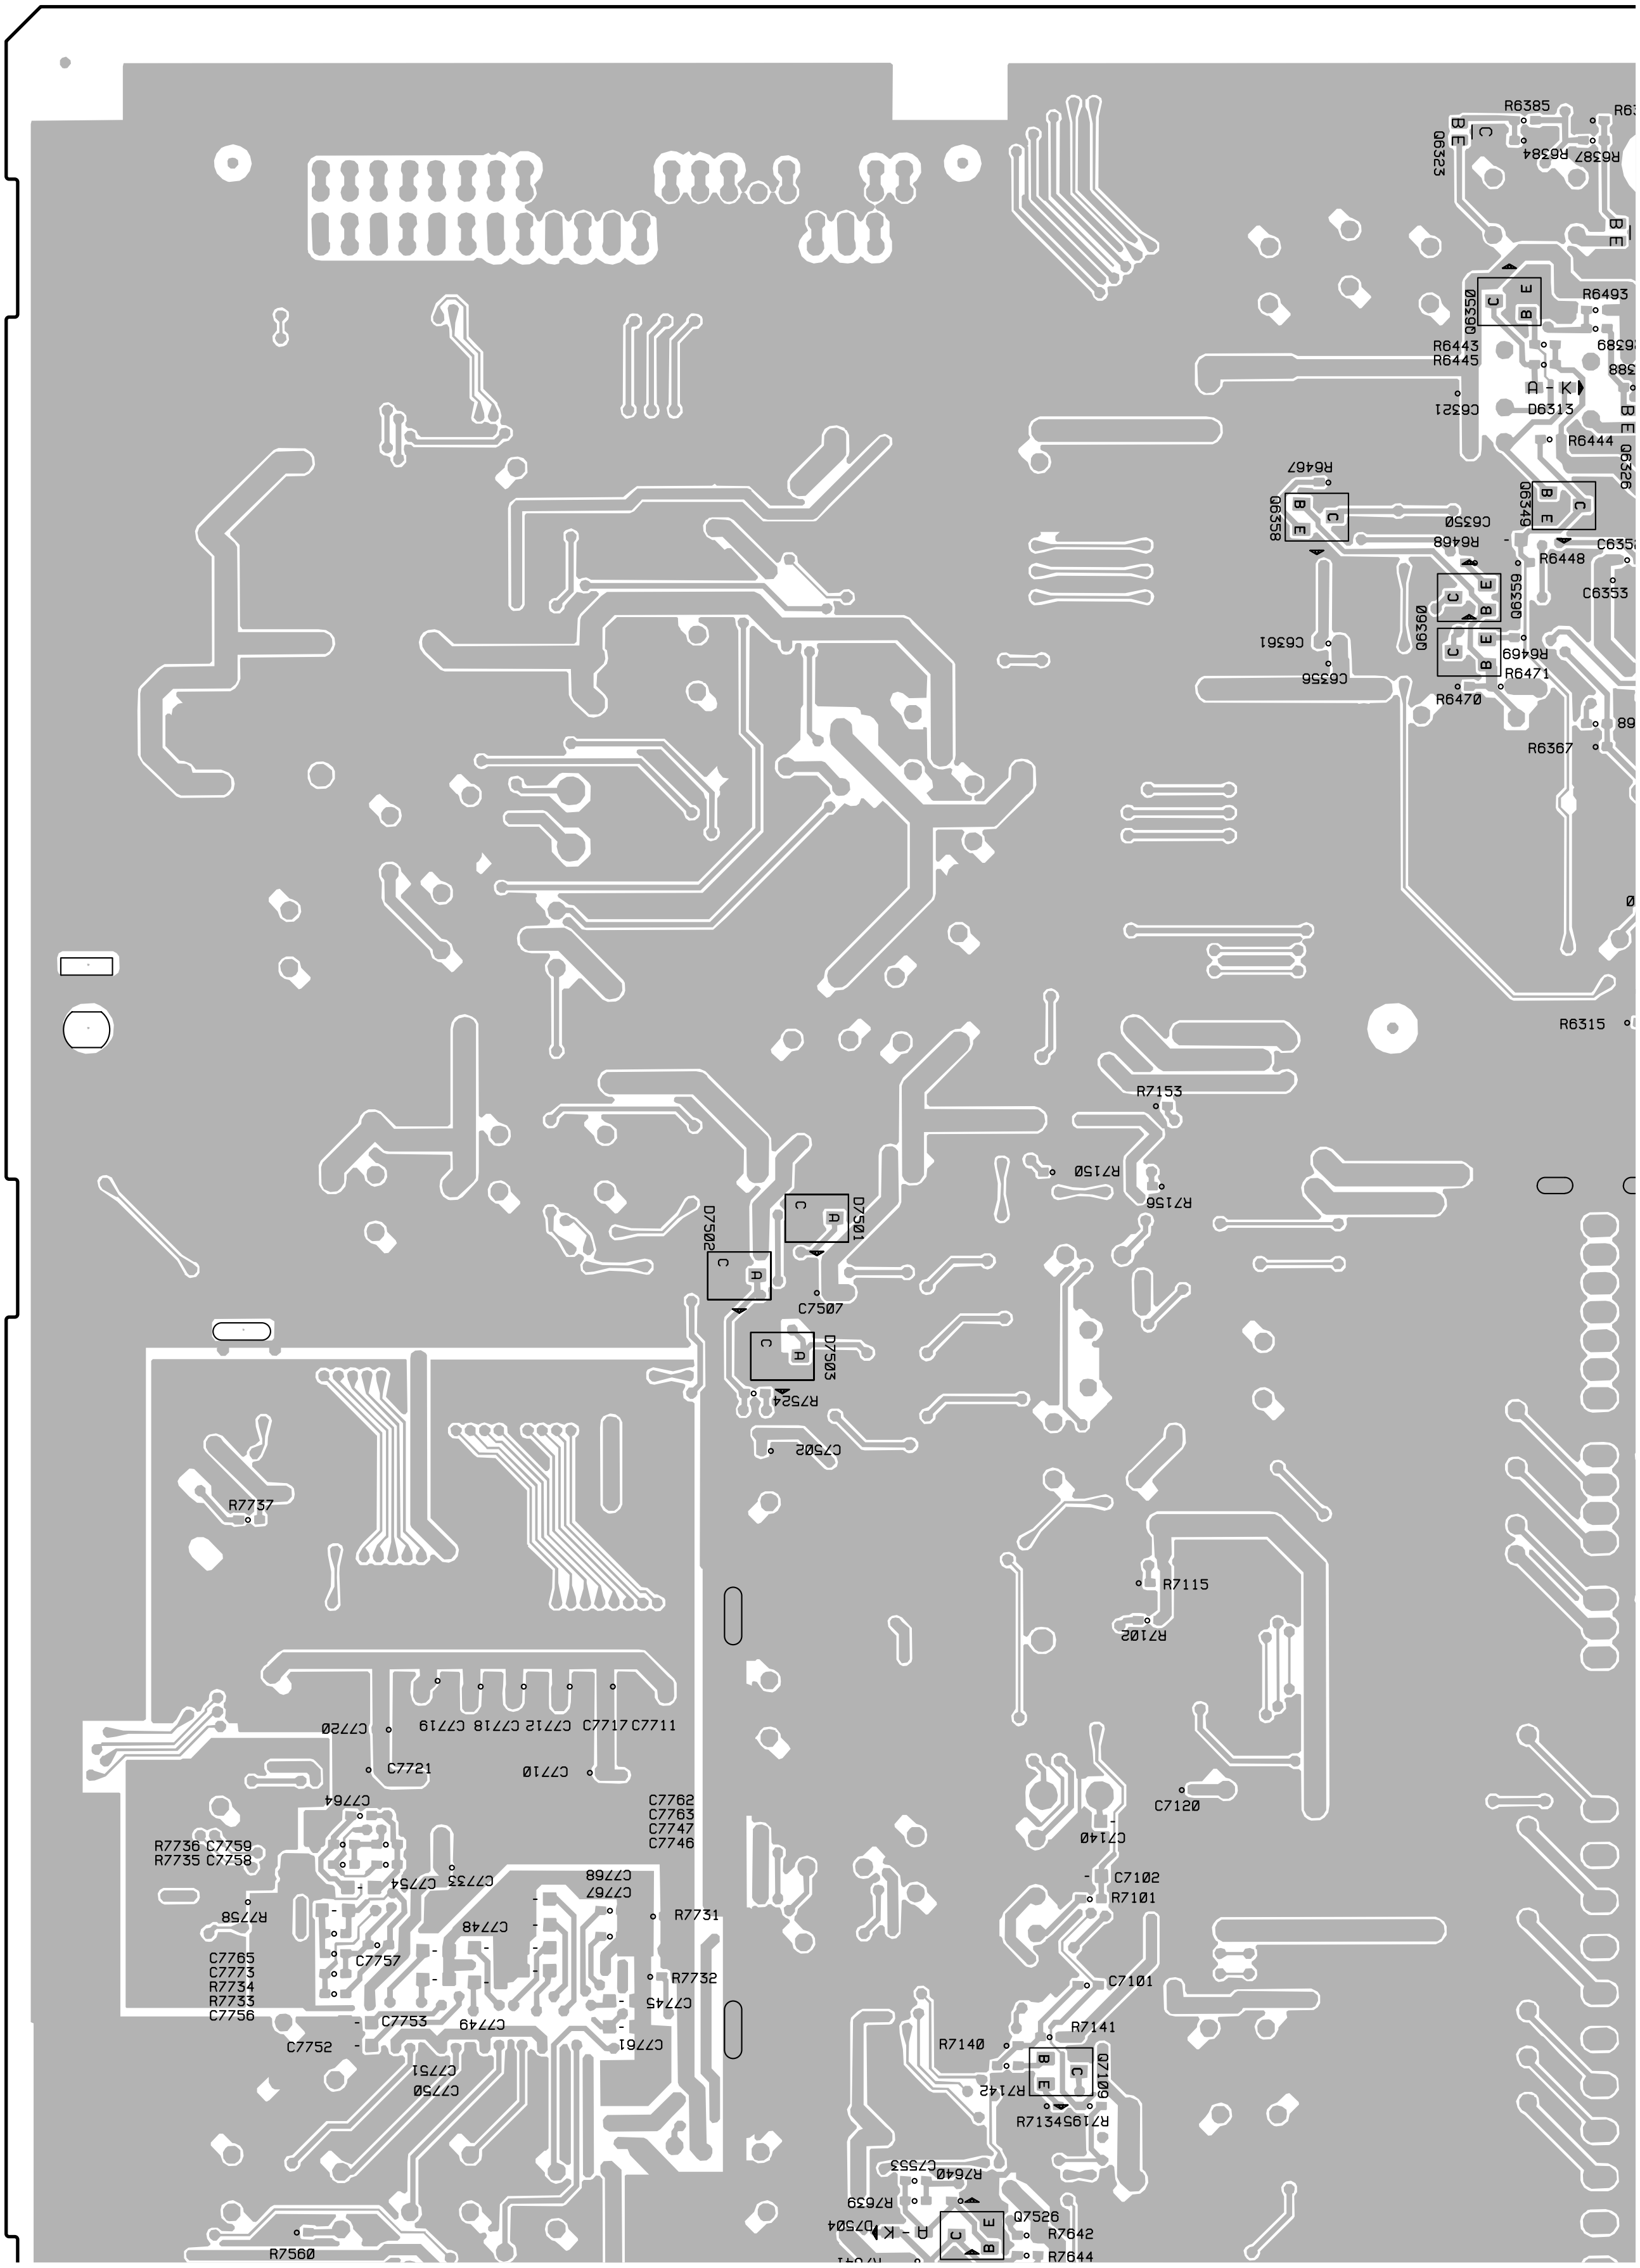
R6385
Q6323
R6384
R6387
Q6350
R6493
R6443
R6445
C6321
D6313
R6444
R6467
Q6358
Q6349
Q6326
C6350
R6468
R6448
C6353
Q6359
C6333
Q6360
C6361
R6469
R6471
C6356
R6470
R6367
R6315
R7153
R7150
R7156
D7501
D7502
C7507
D7503
R7524
C7502
R7737
R7115
R7102
C7720
C7719
C7718
C7712
C7717
C7711
C7721
C7710
C7764
C7762
C7763
C7747
C7746
R7736
R7735
C7759
C7758
C7754
C7733
C7768
C7767
R7731
R7758
C7748
C7765
C7773
R7734
R7733
C7756
C7757
R7732
C7745
C7753
C7749
C7752
C7761
C7751
C7750
C7120
C7140
C7102
R7101
C7101
R7141
R7140
Q7109
R7142
R7134
R7195
C7553
R7640
R7639
D7504
Q7526
R7642
R7644
R7560
C
B
E
A
K

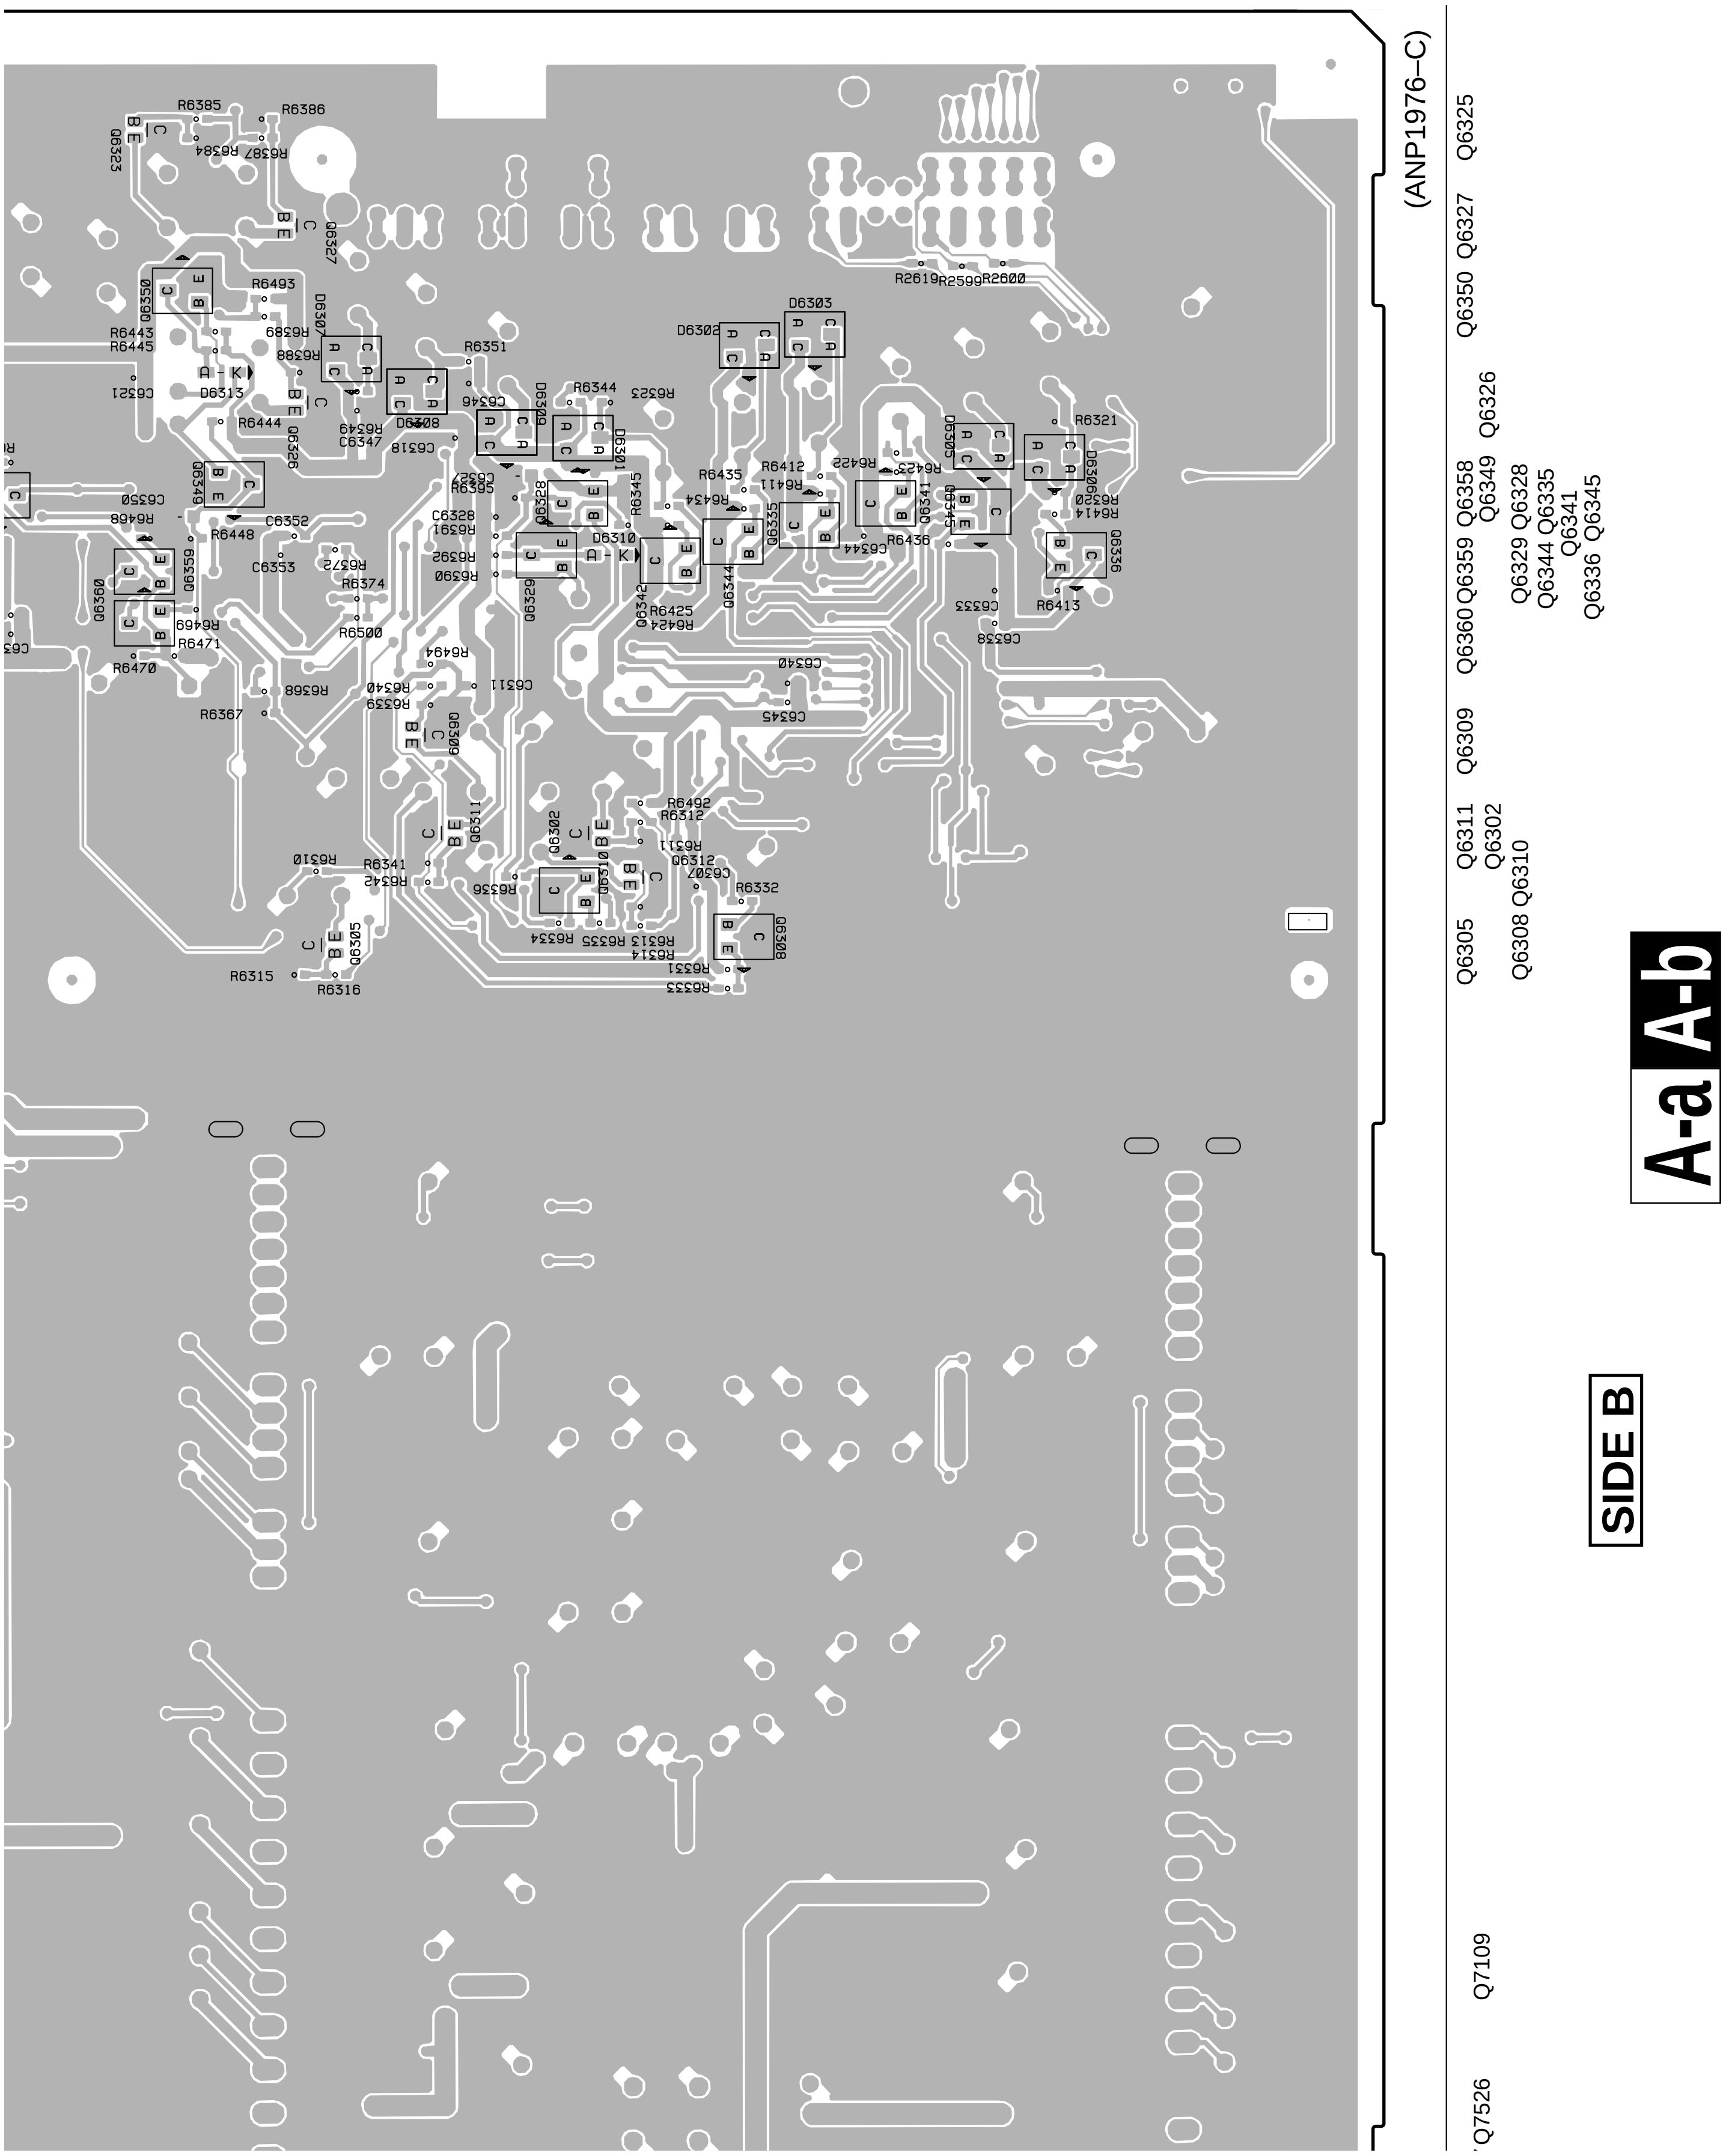
(ANP1976–C)
Q6325
Q6327
Q6350
Q6326
Q6358 Q6349 Q6328 Q6335 Q6341 Q6345
Q6359 Q6329 Q6344 Q6336
Q6360
Q6309
Q6311 Q6302
Q6305 Q6308 Q6310
Q7109
Q7526
A-a A-b
SIDE B
R6385
R6386
Q6323
R6384 R6387
Q6327
R6493
Q6350
R6443
R6445
R6389
R6388
D6307
D6313
C6321
R6444
R6351
D6308
R6349
C6347
C6318
C6346
D6309
R6344
R6325
D6302
D6303
R2619 R2599 R2600
D6301
R6345
C6328
R6391
R6392
R6390
D6310
R6395
R6435
R6434
R6412
R6411
R6422
R6423
D6305
D6306
R6321
R6320
R6414
Q6341
R6436
C6344
Q6336
R6413
C6333
C6338
Q6349
C6350
R6468
R6448
C6352
C6353
R6572
R6374
Q6359
Q6360
R6469
R6471
R6470
R6500
R6494
R6367
R6368
R6340
R6339
C6311
Q6309
Q6329
Q6342
Q6344
R6425
R6424
C6340
C6345
R6492
R6312
Q6311
Q6302
R6311
Q6312
C6307
R6310
R6341
R6342
R6336
R6332
Q6308
R6313 R6335 R6334
R6314
R6331
R6333
Q6305
R6315
R6316
A B C D

4.3 VIDEO ASSY

E-a

E VIDEO ASSY

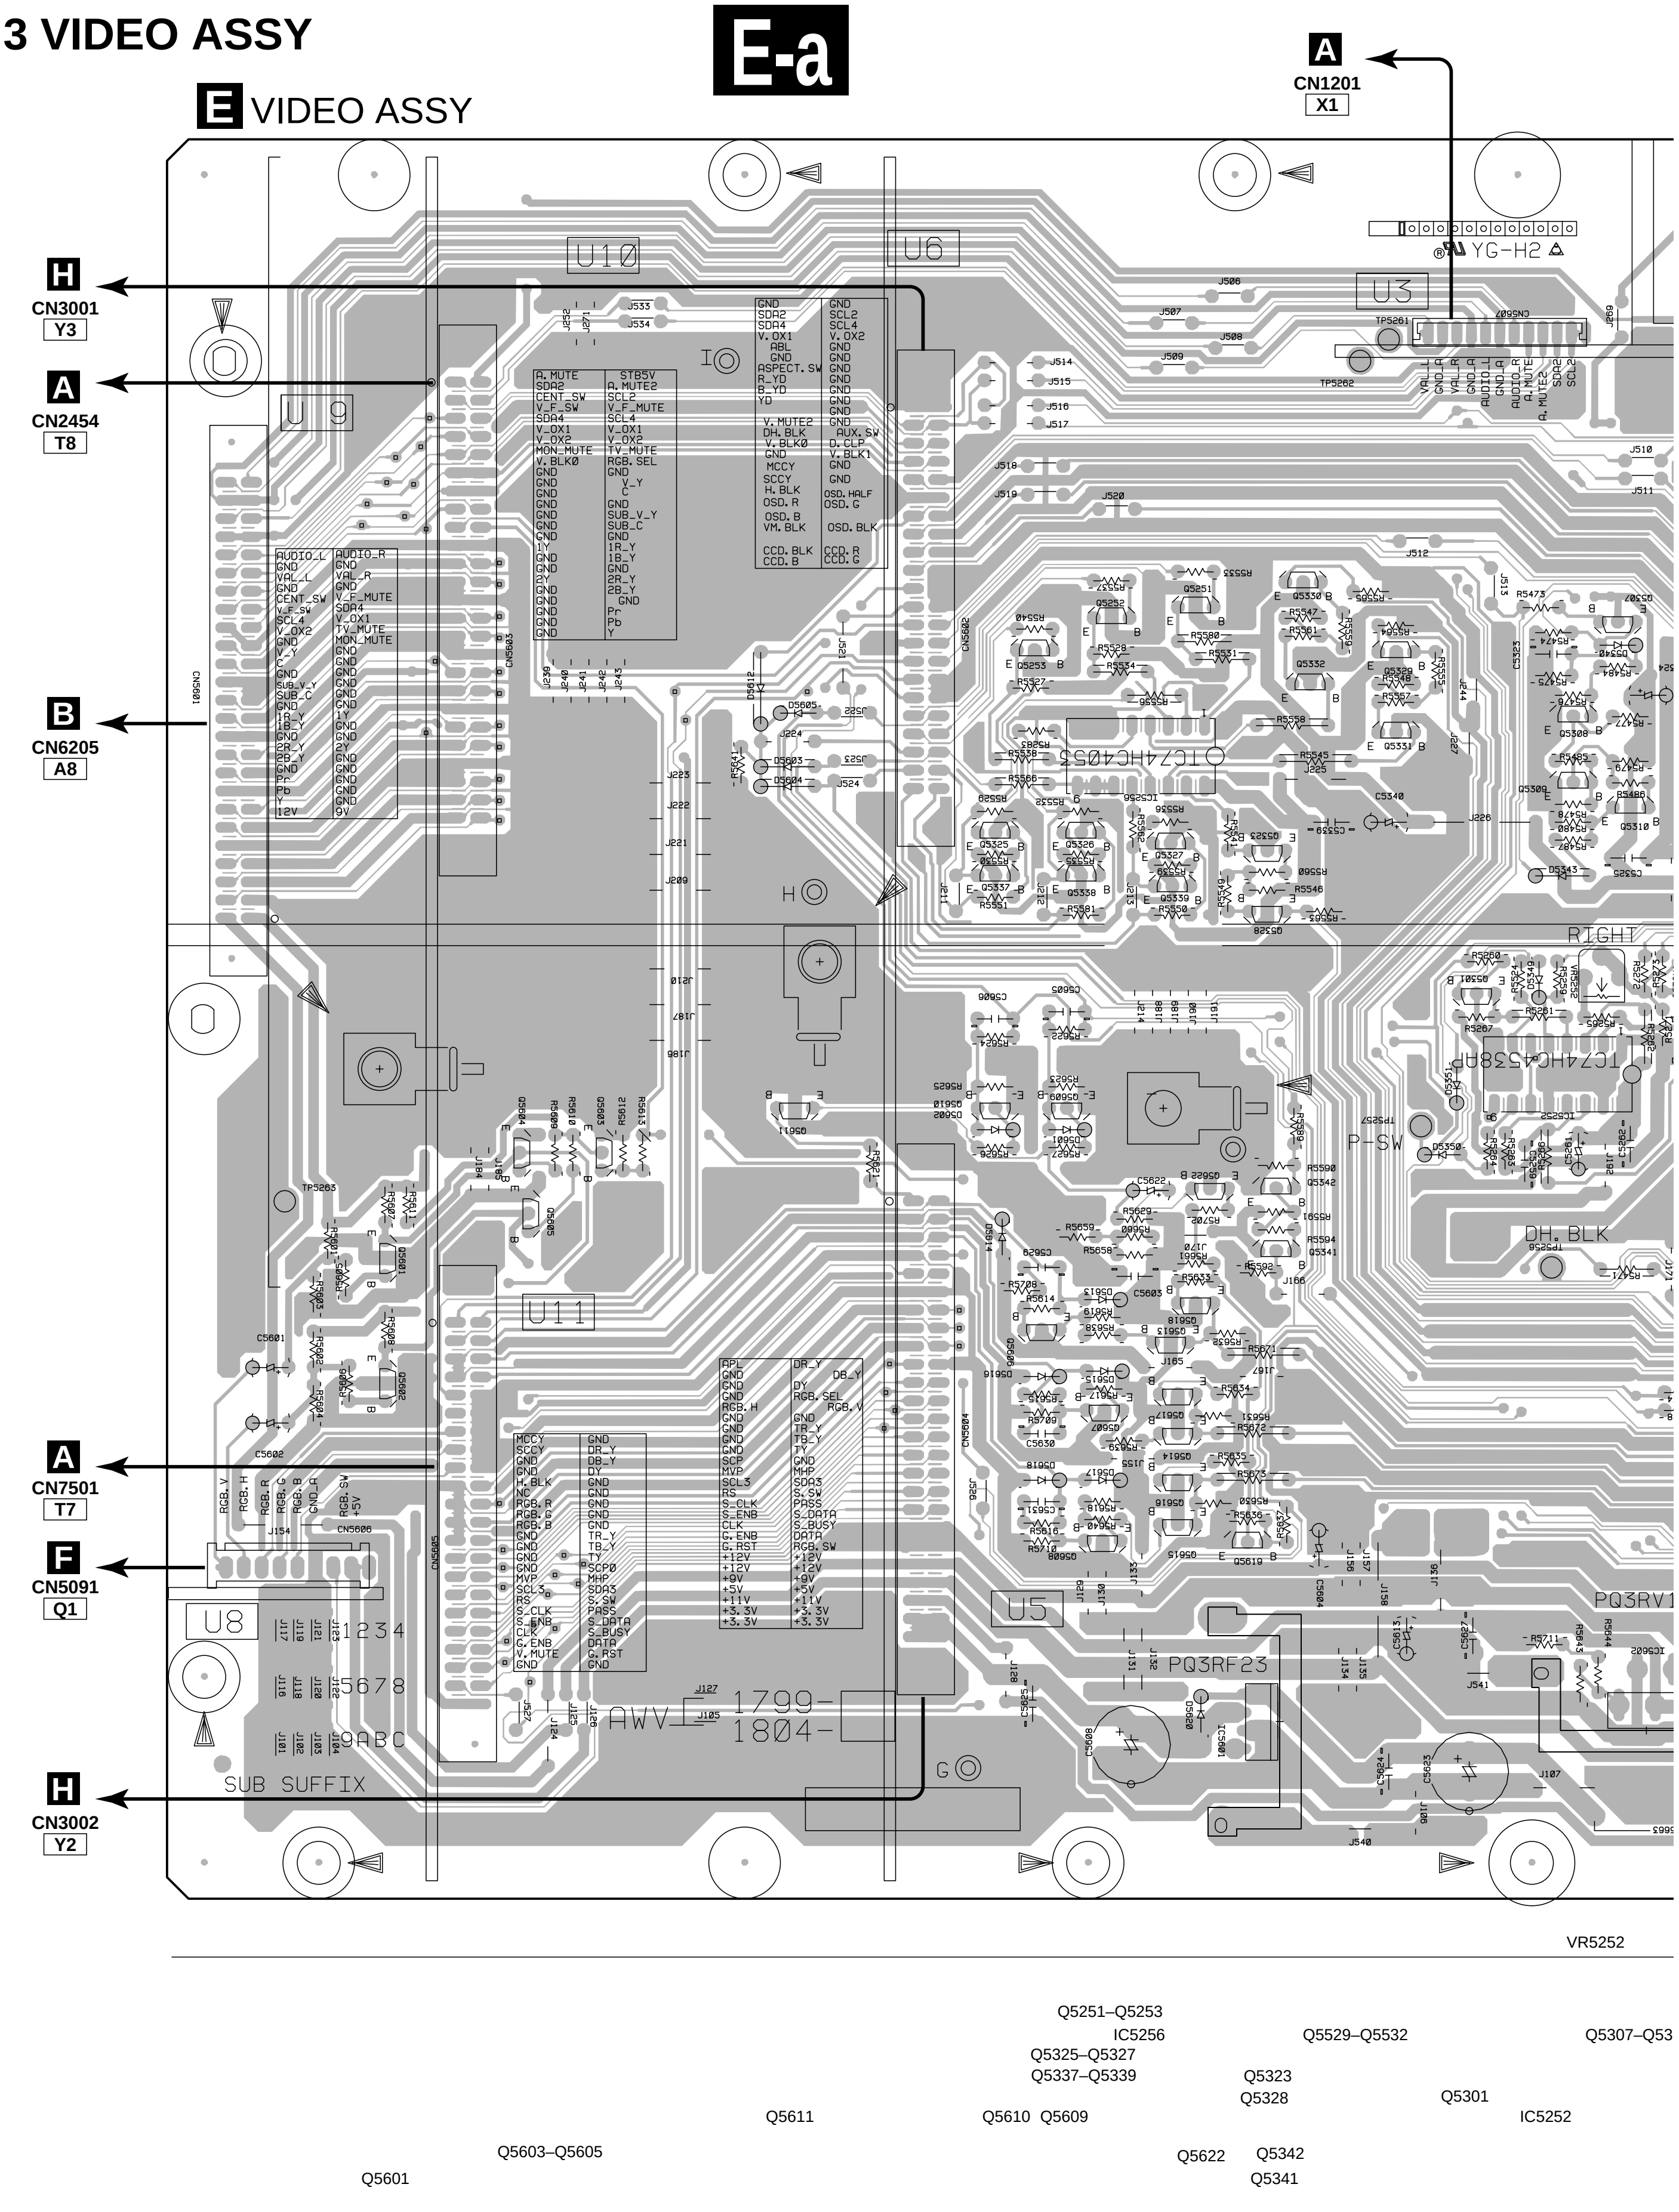
A
CN1201
X1
H
CN3001
Y3
A
CN2454
T8
B
CN6205
A8
A
CN7501
T7
F
CN5091
Q1
H
CN3002
Y2
U10
U6
U3
U9
U11
U8
U5
YG-H2
TC74HC4053
TC74HC4538A
PQ3RF23
PQ3RV1
RIGHT
P-SW
DH. BLK
AWV 1799-1804-
SUB SUFFIX
VR5252
Q5251–Q5253
IC5256
Q5529–Q5532
Q5307–Q53
Q5325–Q5327
Q5337–Q5339
Q5323
Q5328
Q5301
Q5611
Q5610
Q5609
IC5252
Q5603–Q5605
Q5622
Q5342
Q5601
Q5341
Q5602
Q5613–Q5619
Q5606–Q5608
IC5601
IC5602

SIDE A

A
B
C
D

E-b

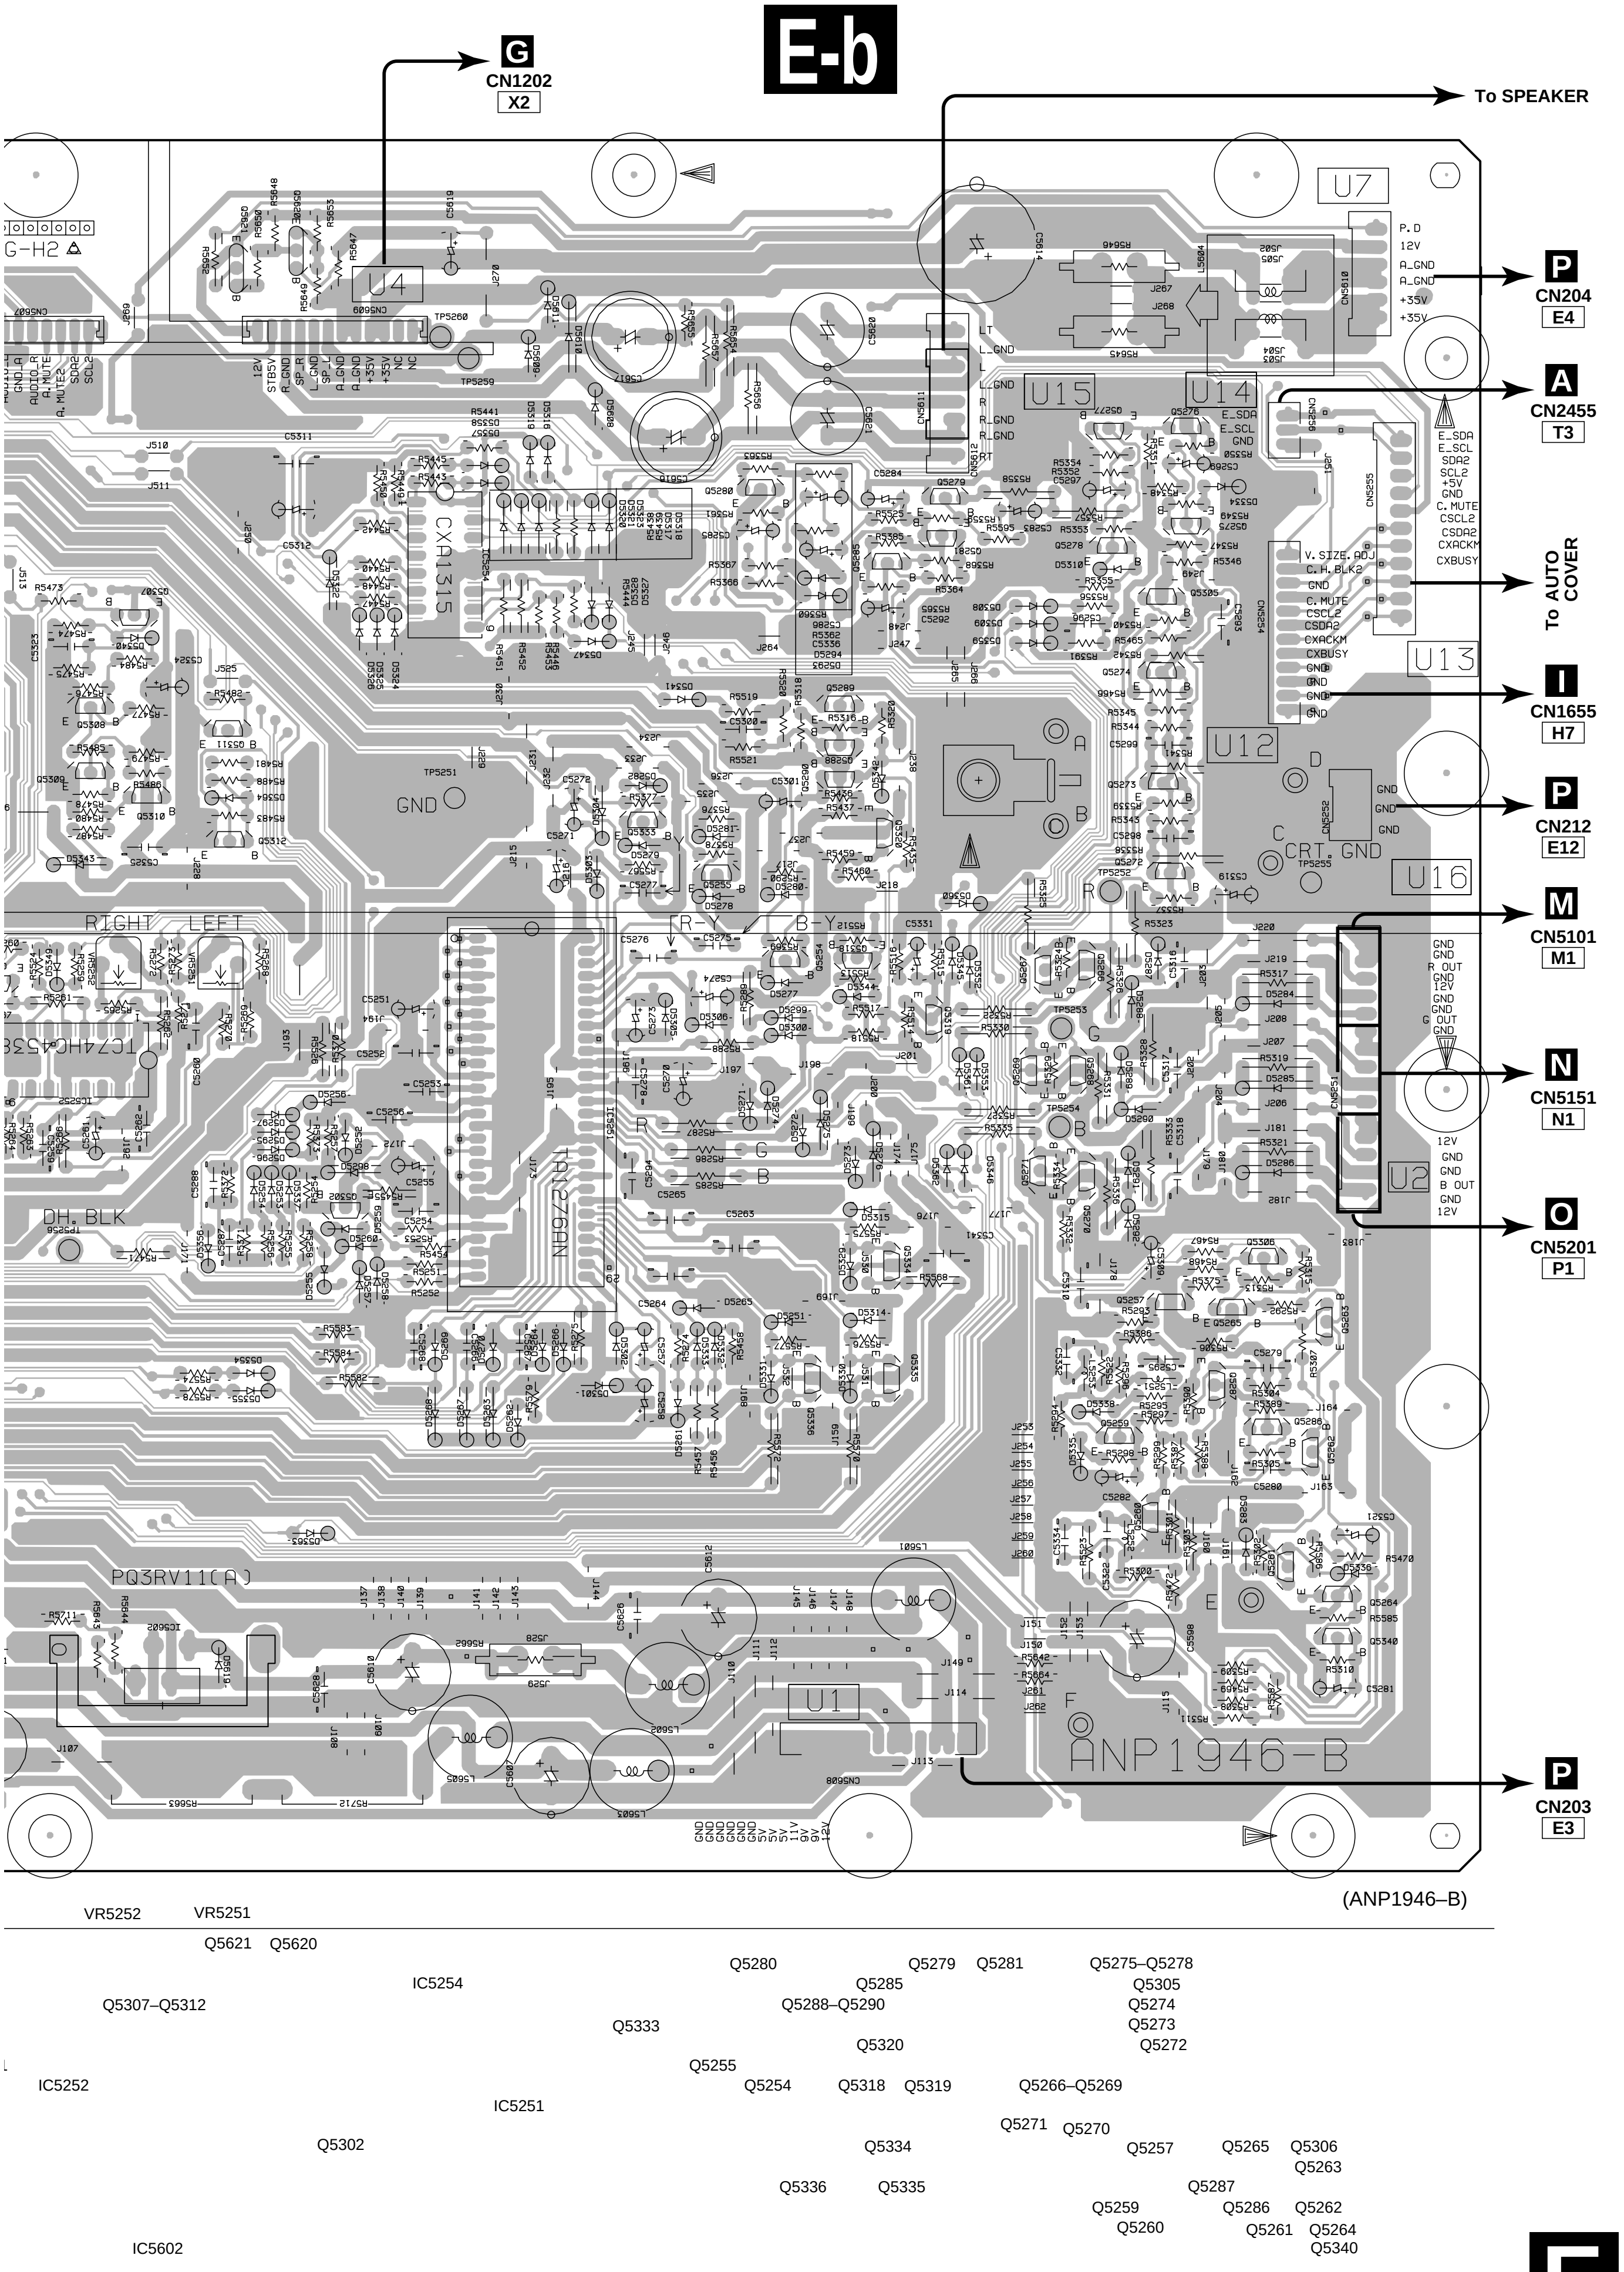
G
CN1202
X2
To SPEAKER
P
CN204
E4
A
CN2455
T3
To AUTO COVER
I
CN1655
H7
P
CN212
E12
M
CN5101
M1
N
CN5151
N1
O
CN5201
P1
P
CN203
E3
U4
U7
U15
U14
U13
U12
U16
U2
U1
CXA1315
TA1276AN
TC74HC4538
PQ3RV11(A)
RIGHT
LEFT
GND
CRT_GND
DH_BLK
ANP1946-B
P.D
12V
A_GND
A_GND
+35V
+35V
E_SDA
E_SCL
SDA2
SCL2
+5V
C.MUTE
CSCL2
CSDA2
CXACKM
CXBUSY
V.SIZE.ADJ
C.H.BLK2
GND
C.MUTE
CSCL2
CSDA2
CXACKM
CXBUSY
GND
GND
GND
GND
GND
GND
GND
R OUT
GND
12V
GND
GND
G OUT
GND
12V
GND
GND
B OUT
GND
12V
(ANP1946–B)
VR5252
VR5251
Q5621
Q5620
Q5280
Q5279
Q5281
Q5275–Q5278
IC5254
Q5285
Q5305
Q5307–Q5312
Q5288–Q5290
Q5274
Q5333
Q5273
Q5320
Q5272
Q5255
IC5252
Q5254
Q5318
Q5319
Q5266–Q5269
IC5251
Q5271
Q5270
Q5302
Q5334
Q5257
Q5265
Q5306
Q5263
Q5336
Q5335
Q5287
Q5259
Q5286
Q5262
Q5260
Q5261
Q5264
Q5340
IC5602
A
B
C
D

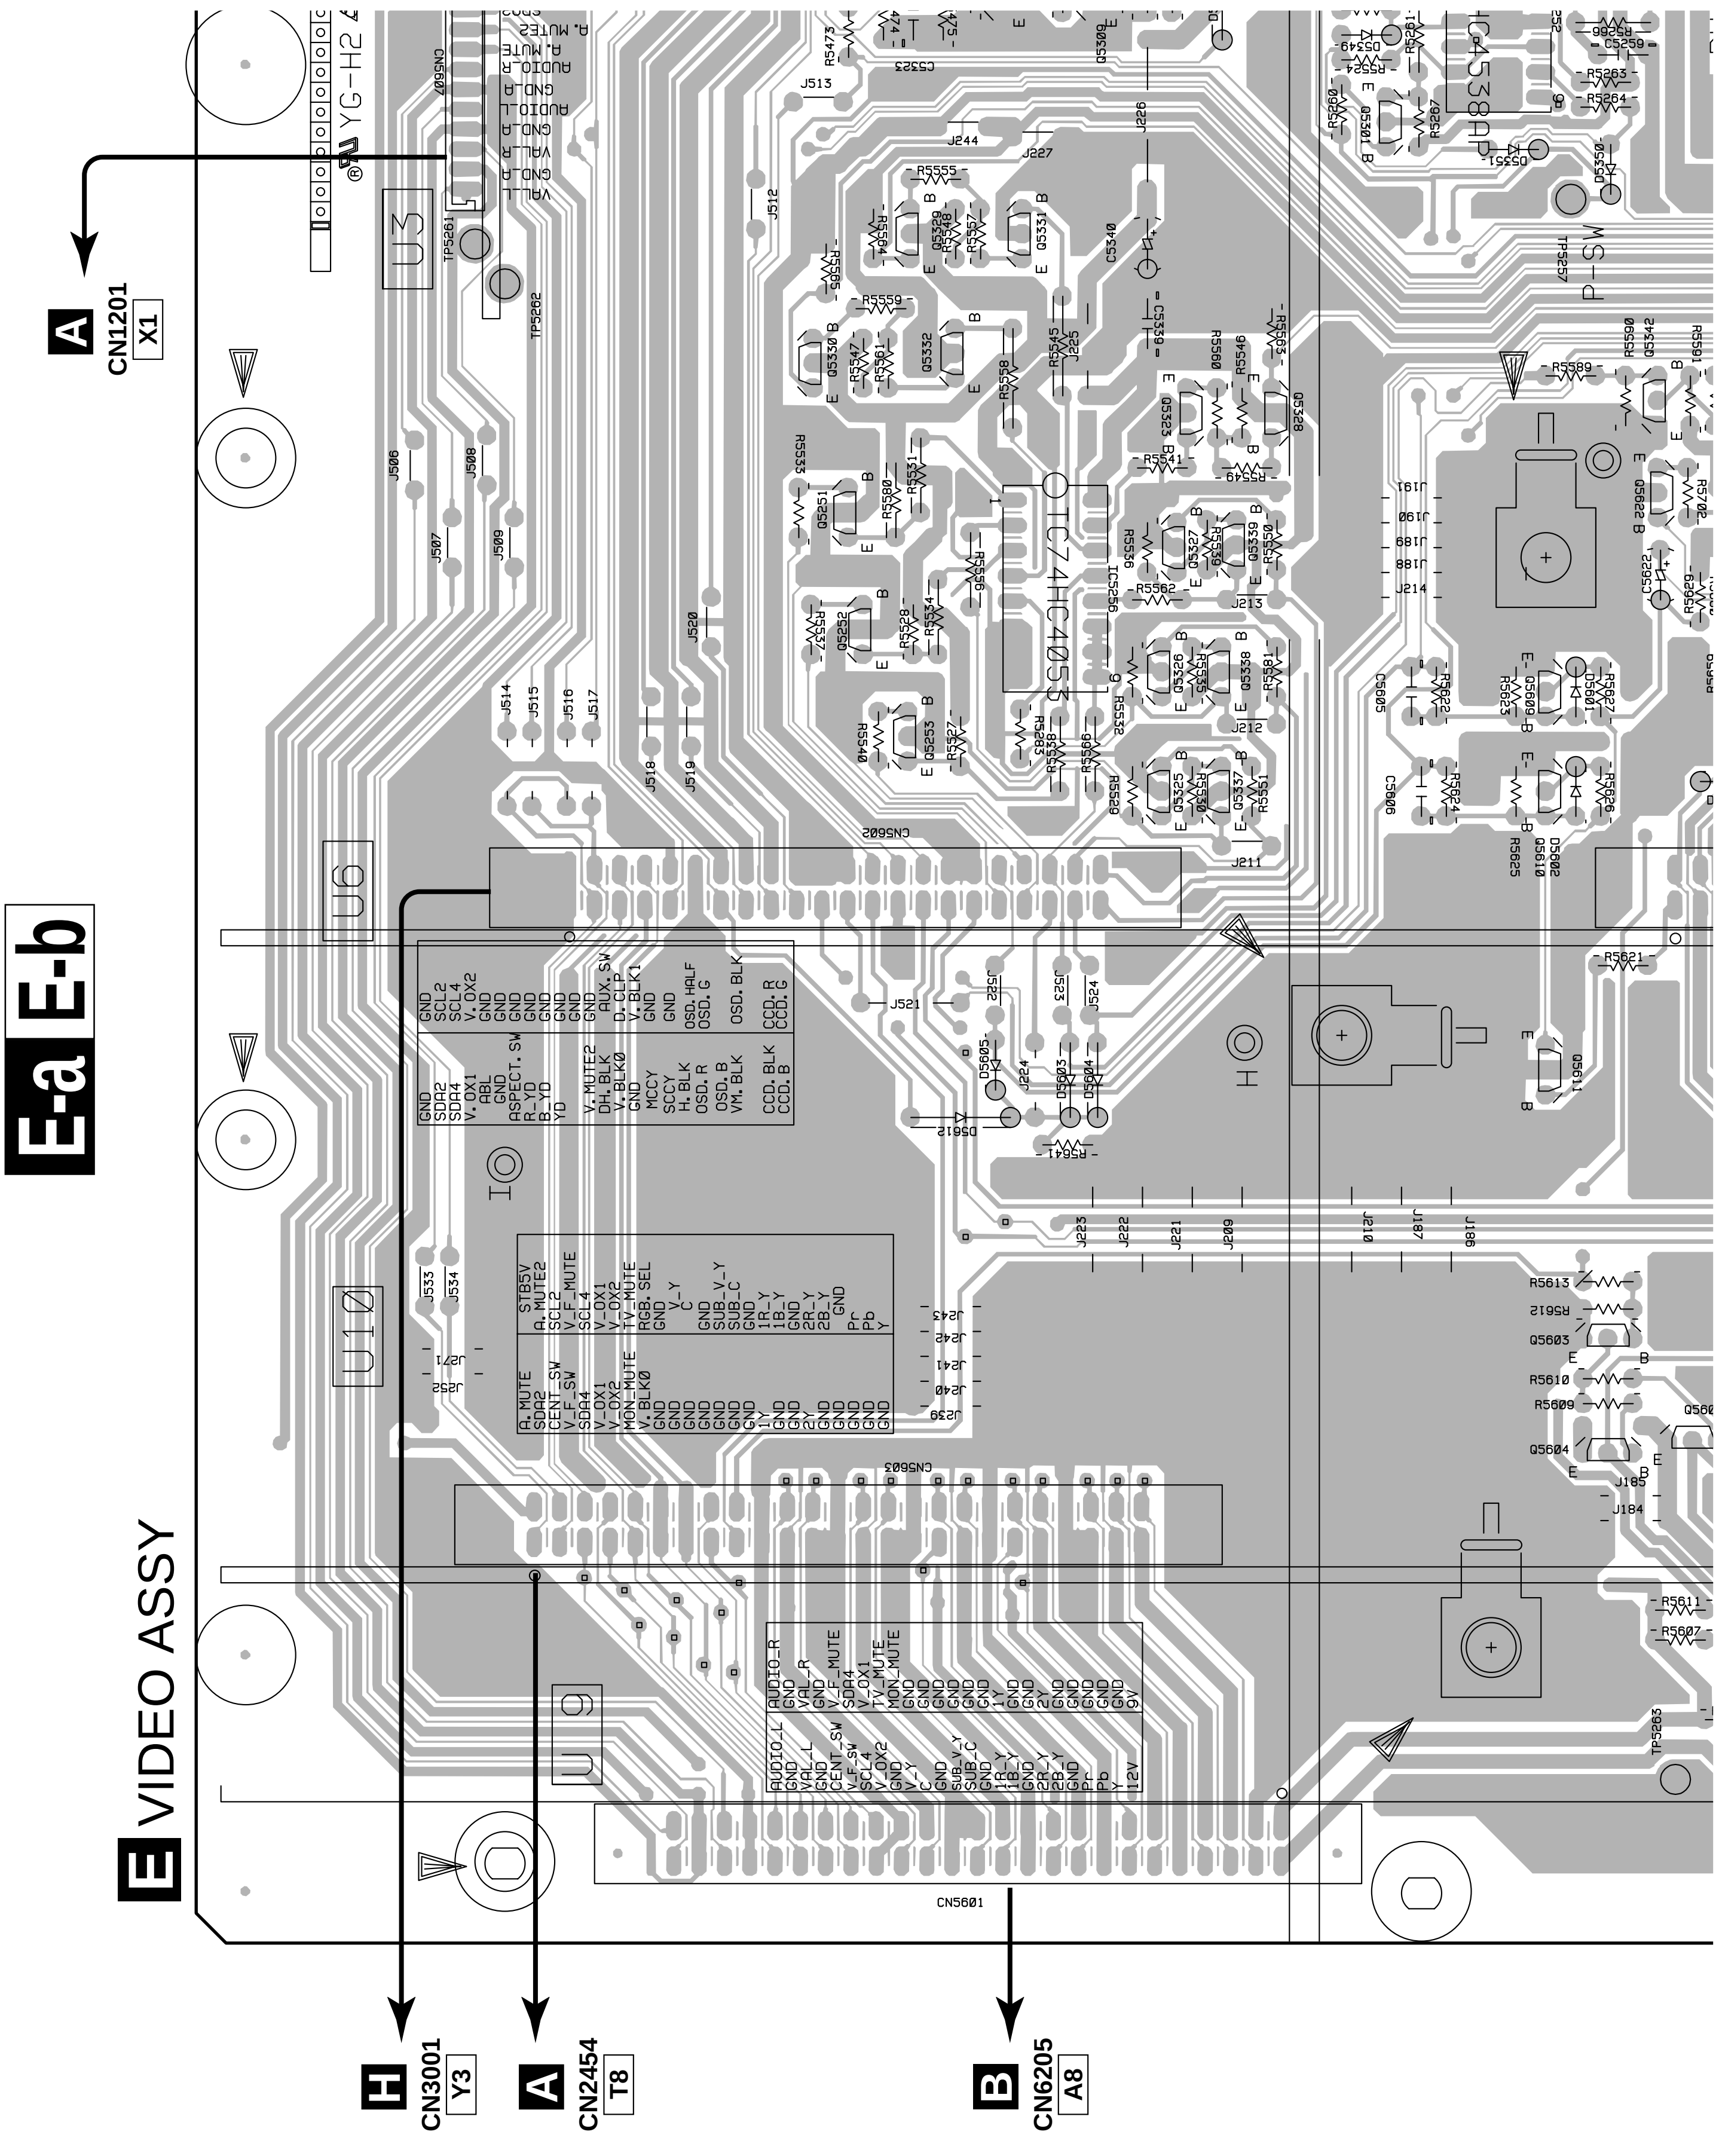
E VIDEO ASSY
E-a E-b
A CN1201 X1
H CN3001 Y3
A CN2454 T8
B CN6205 A8
CN5601
CN5602
CN5603
CN5607
TC74HC4053
HC4538AP
U3
U6
U9
U10
YG-H2

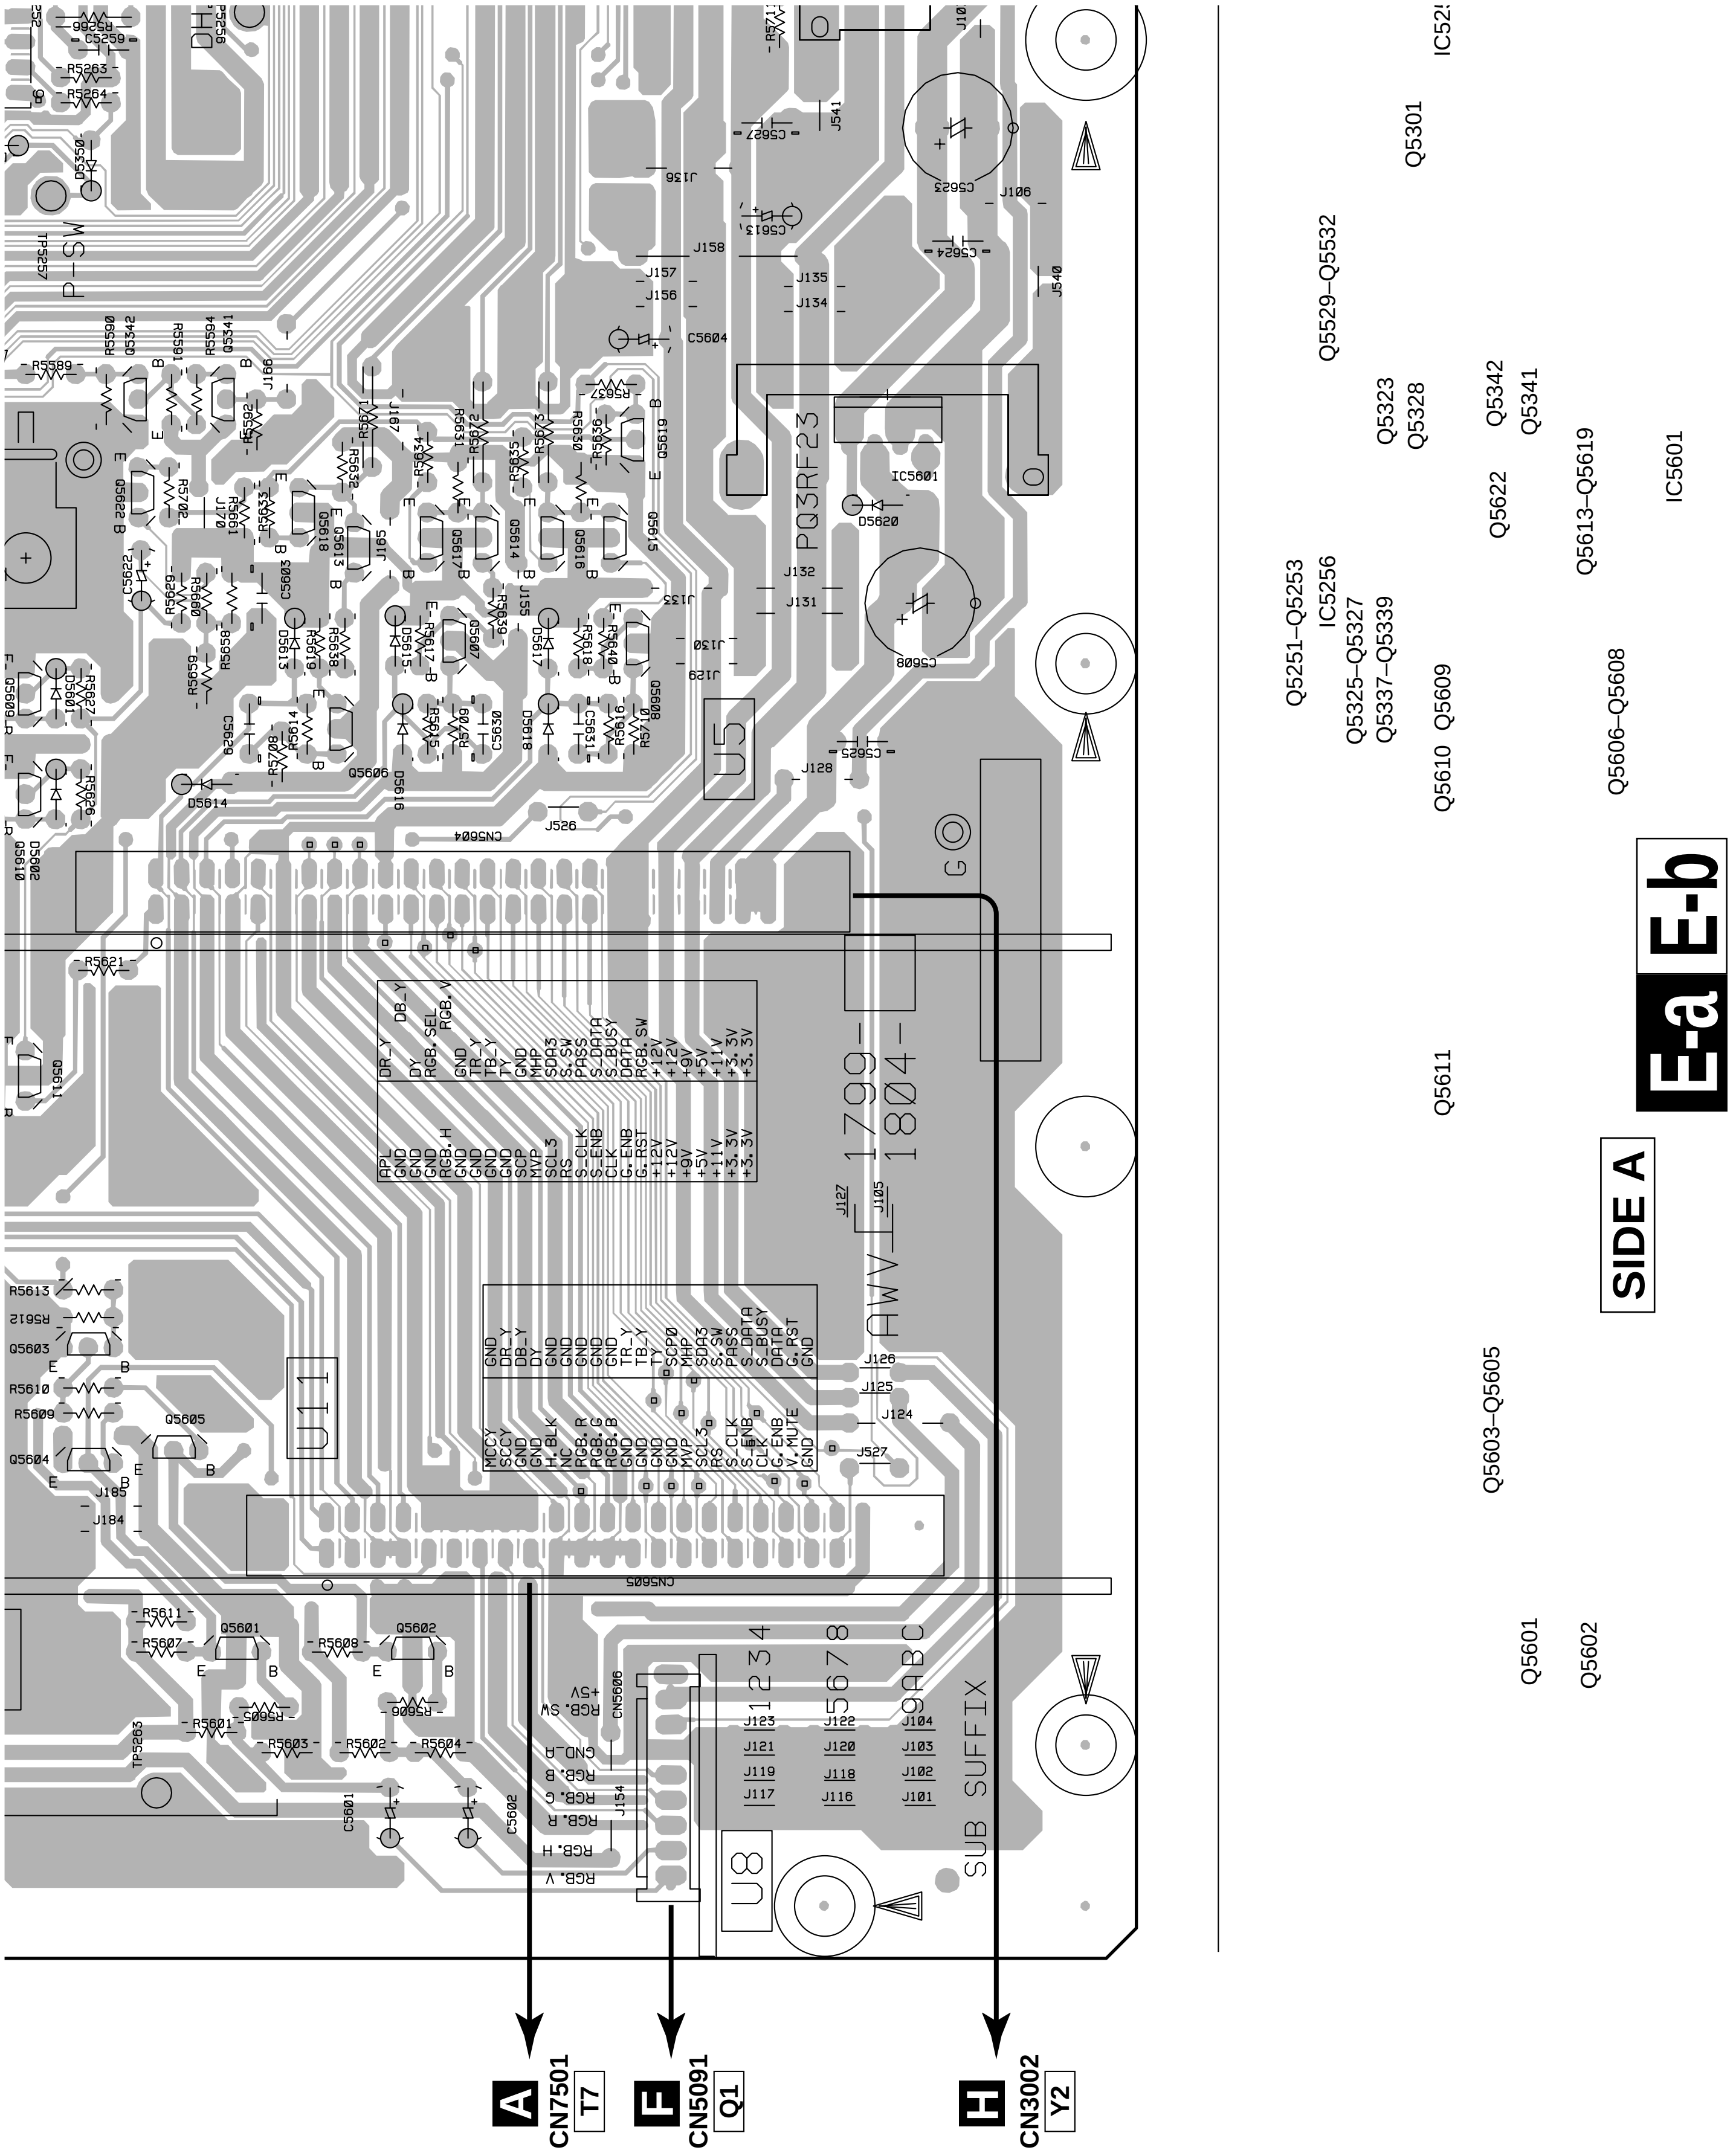
IC525
Q5301
Q5529–Q5532
Q5323
Q5328
Q5342
Q5341
Q5622
Q5613–Q5619
IC5601
Q5251–Q5253
IC5256
Q5325–Q5327
Q5337–Q5339
Q5609
Q5610
Q5606–Q5608
E-a
E-b
Q5611
SIDE A
Q5603–Q5605
Q5601
Q5602
A
CN7501
T7
F
CN5091
Q1
H
CN3002
Y2
PQ3RF23
U5
U11
U8
IC5601
CN5604
CN5605
CN5606
AWV 1799- 1804-
SUB SUFFIX
G
A
B
C
D

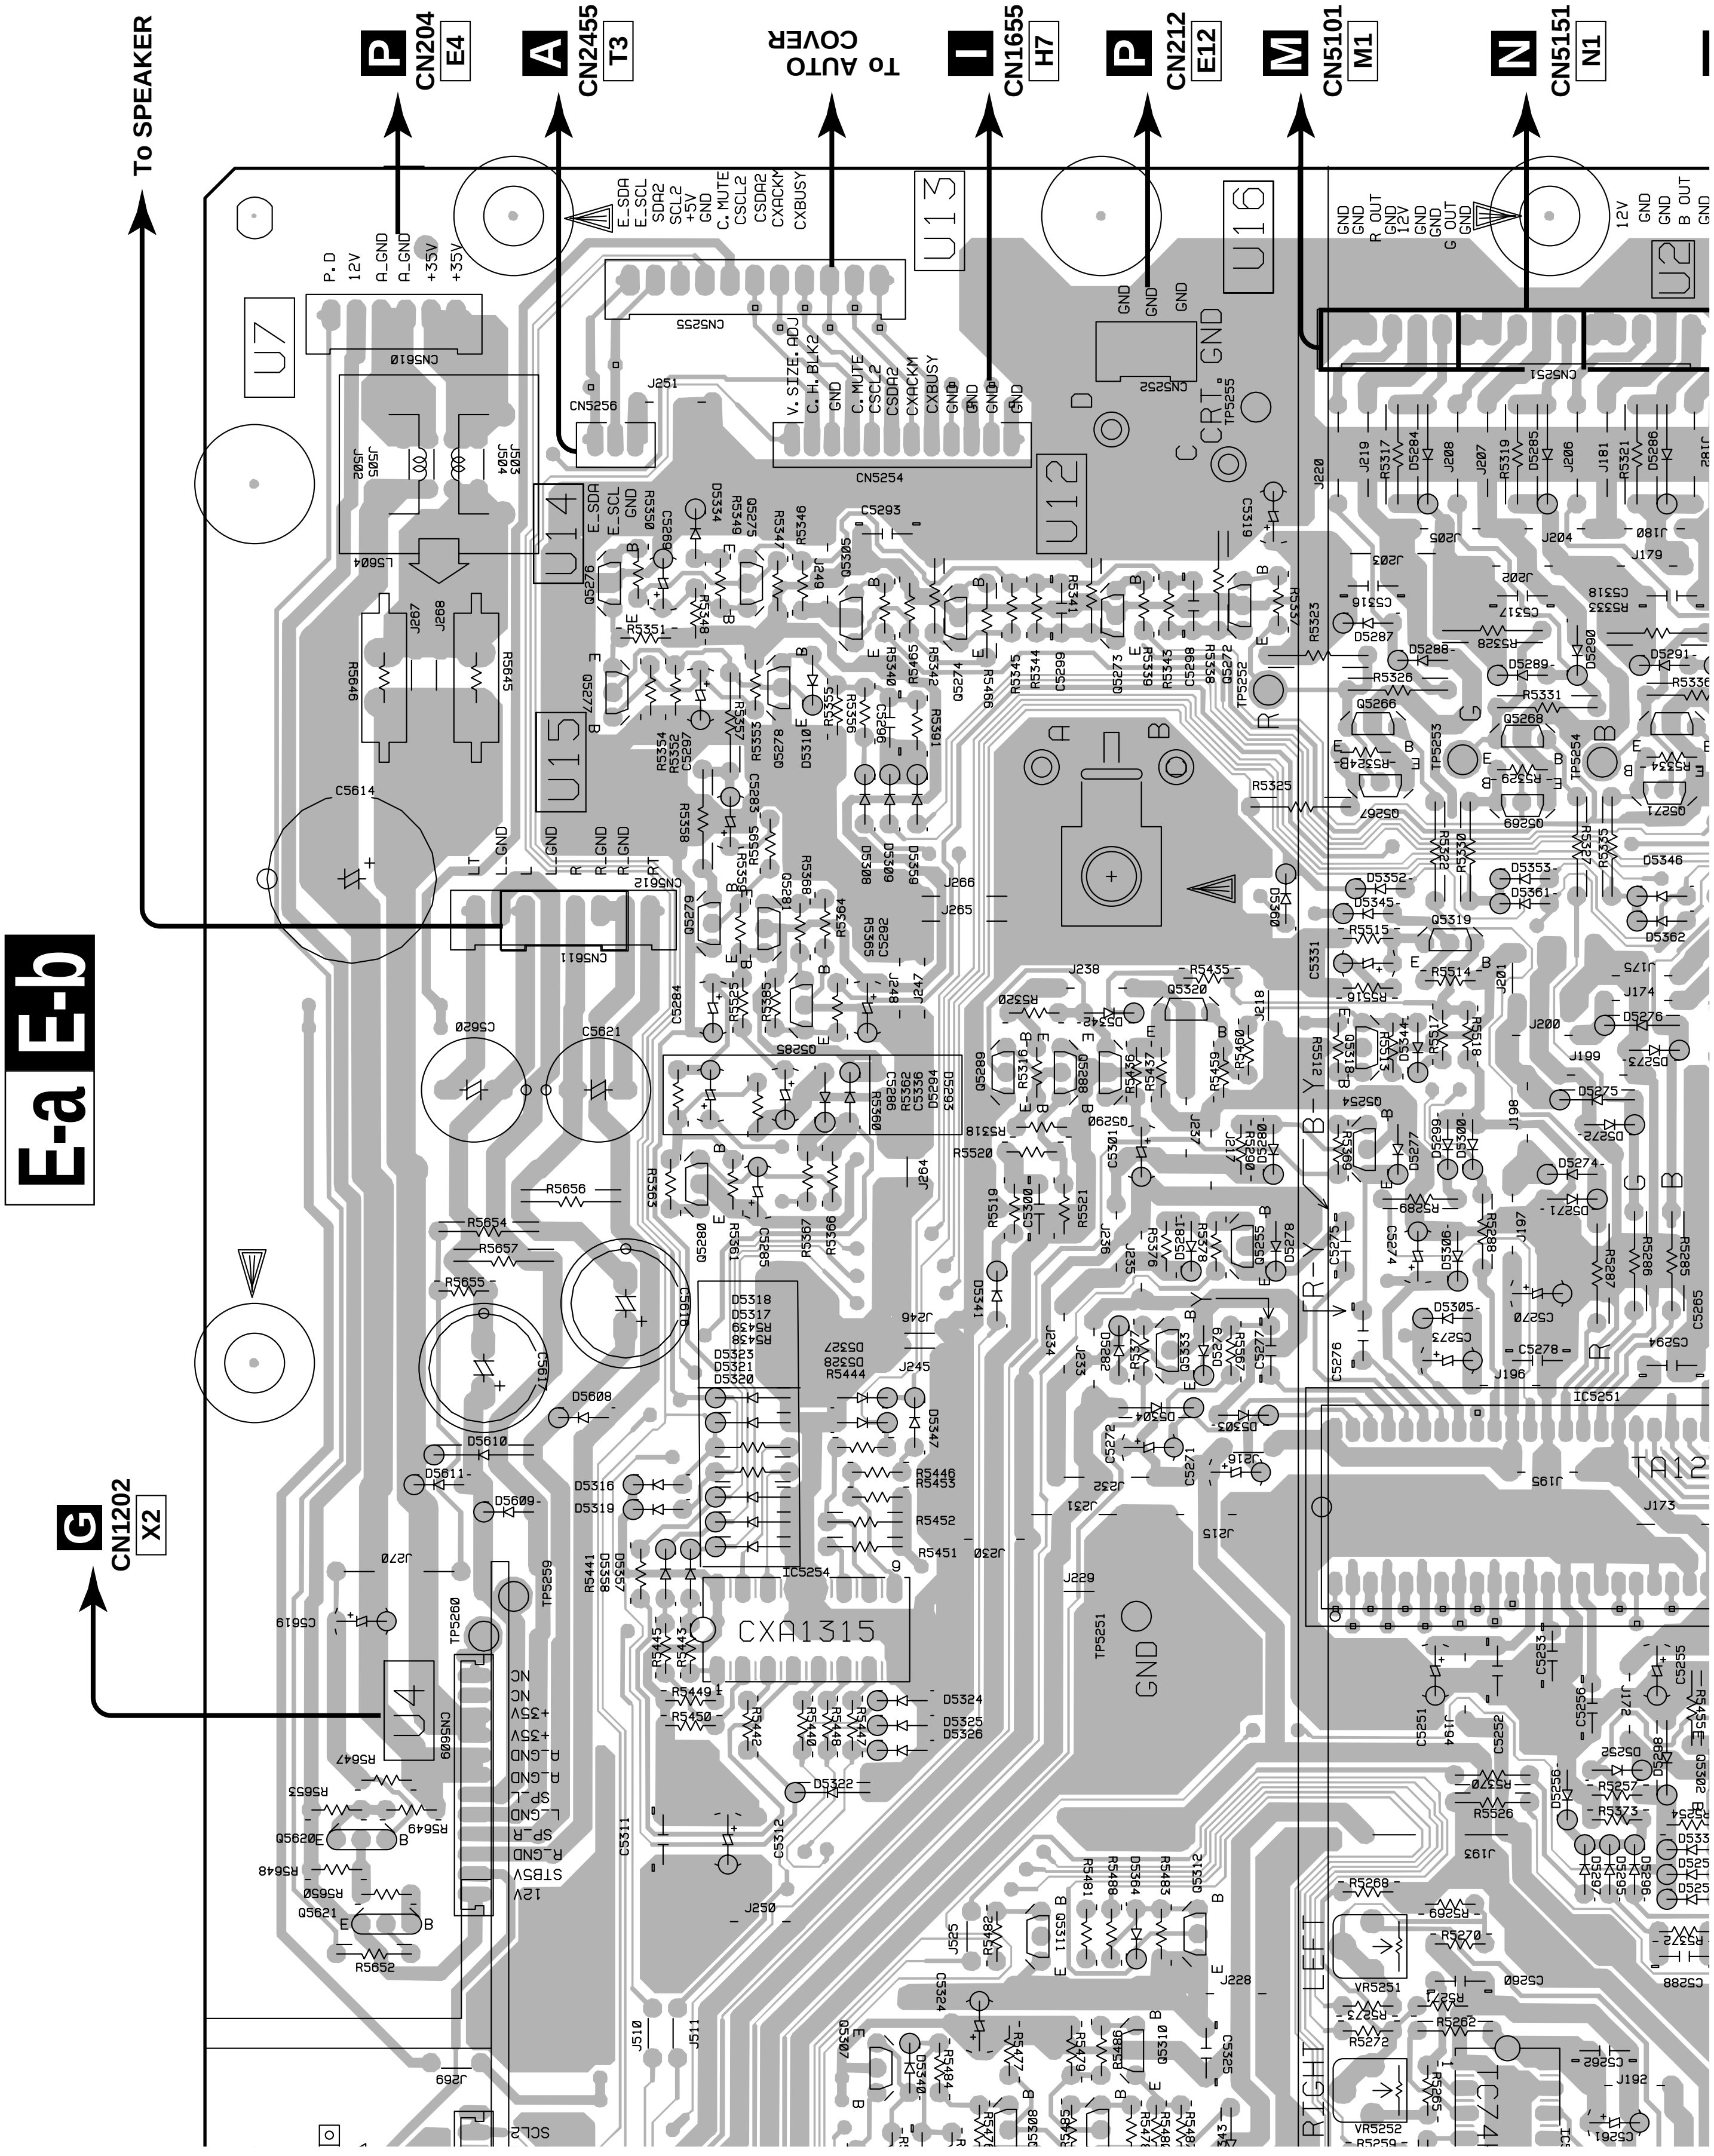
To SPEAKER
P
CN204
E4
A
CN2455
T3
To AUTO COVER
I
CN1655
H7
P
CN212
E12
M
CN5101
M1
N
CN5151
N1
G
CN1202
X2
E-a
E-b
U7
U12
U13
U14
U15
U16
U4
CN5610
CN5255
CN5256
CN5254
CN5252
CN5251
CN5611
CN5612
CN5609
C5614
C5620
C5621
C5619
C5617
IC5254
CXA1315
IC5251
TP5251
GND
CRT. GND
VR5251
VR5252
RIGHT
LEFT
R-Y
B-Y
P.D
12V
A_GND
+35V
E_SDA
E_SCL
SDA2
SCL2
+5V
C.MUTE
CSCL2
CSDA2
CXACKM
CXBUSY
V.SIZE ADJ
C.H.BLK2
R OUT
G OUT
B OUT
NC
SP_L
SP_R
L_GND
R_GND
STBSV

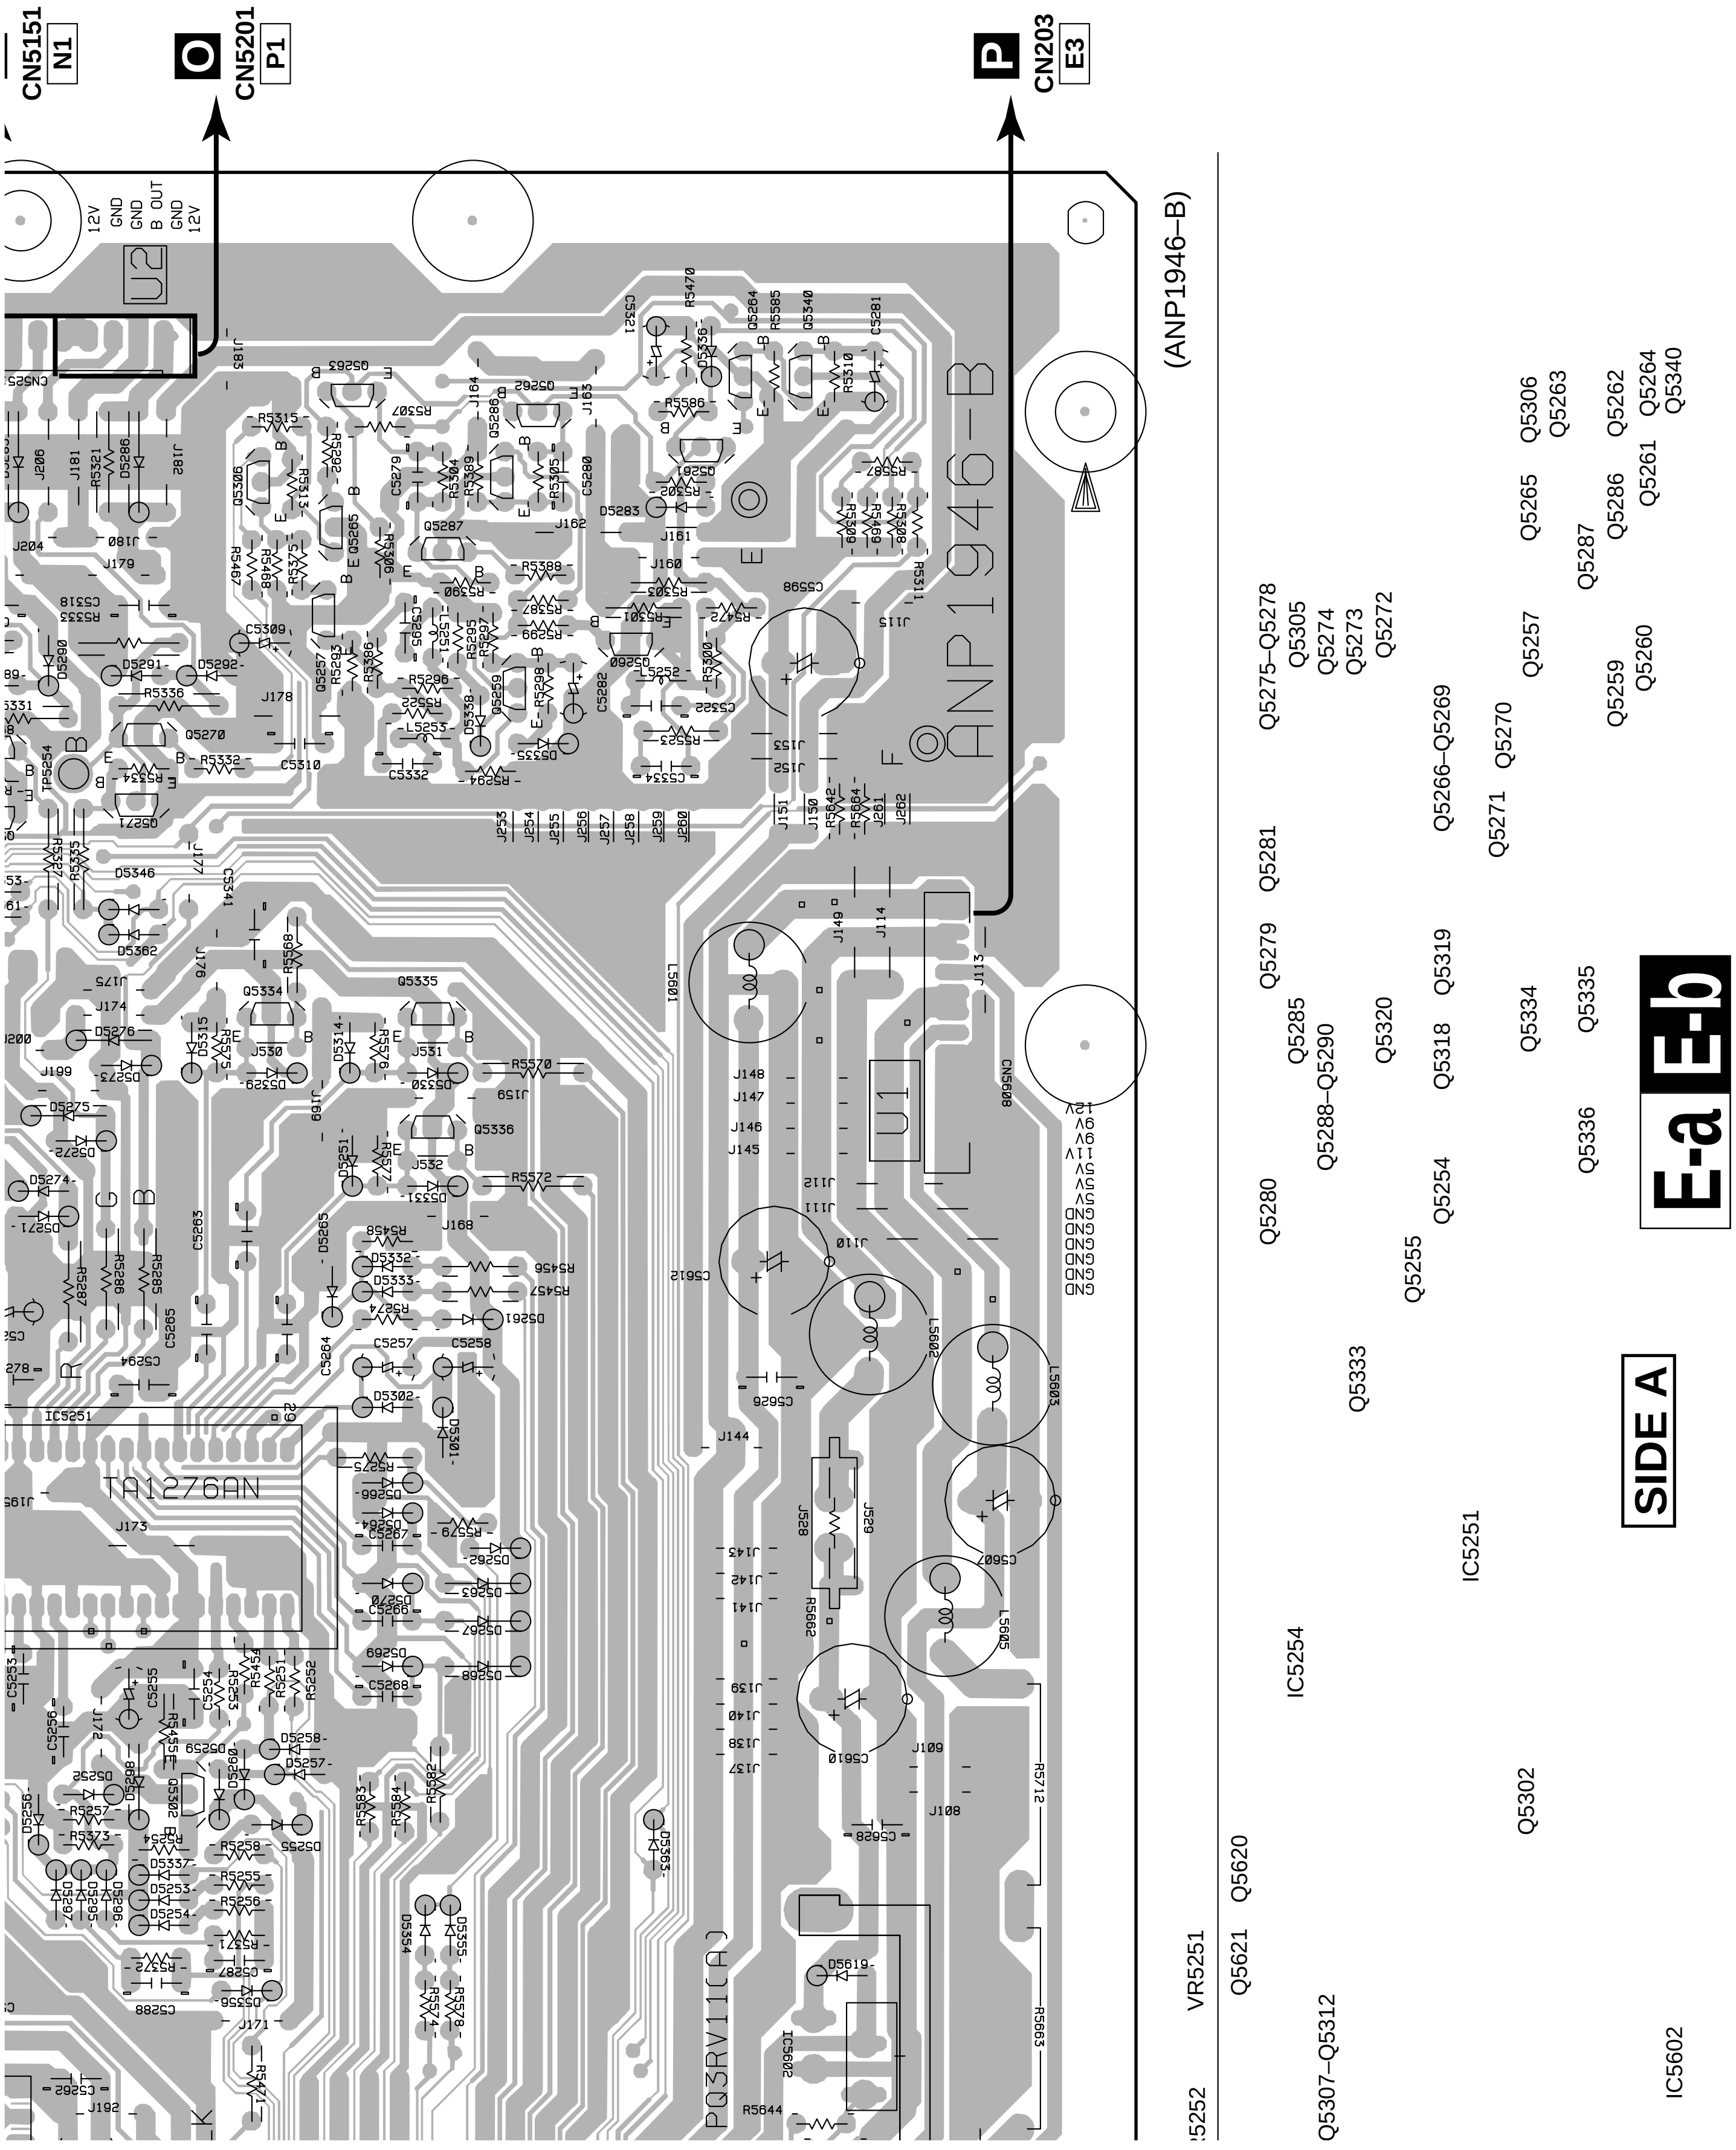
CN5151
N1
O
CN5201
P1
P
CN203
E3
(ANP1946–B)
ANP1946-B
TA1276AN
IC5251
U1
U2
P03RV11(A)
12V
GND
GND
B OUT
GND
12V
Q5306
Q5263
Q5262
Q5264
Q5340
Q5265
Q5286
Q5261
Q5287
Q5275–Q5278
Q5305
Q5274
Q5273
Q5272
Q5257
Q5259
Q5260
Q5266–Q5269
Q5270
Q5271
Q5281
Q5279
Q5319
Q5285
Q5288–Q5290
Q5320
Q5318
Q5334
Q5335
Q5336
Q5280
Q5254
Q5255
Q5333
IC5251
IC5254
Q5302
VR5251
Q5621
Q5620
Q5307–Q5312
IC5602
E-a
E-b
SIDE A

E VIDEO ASSY

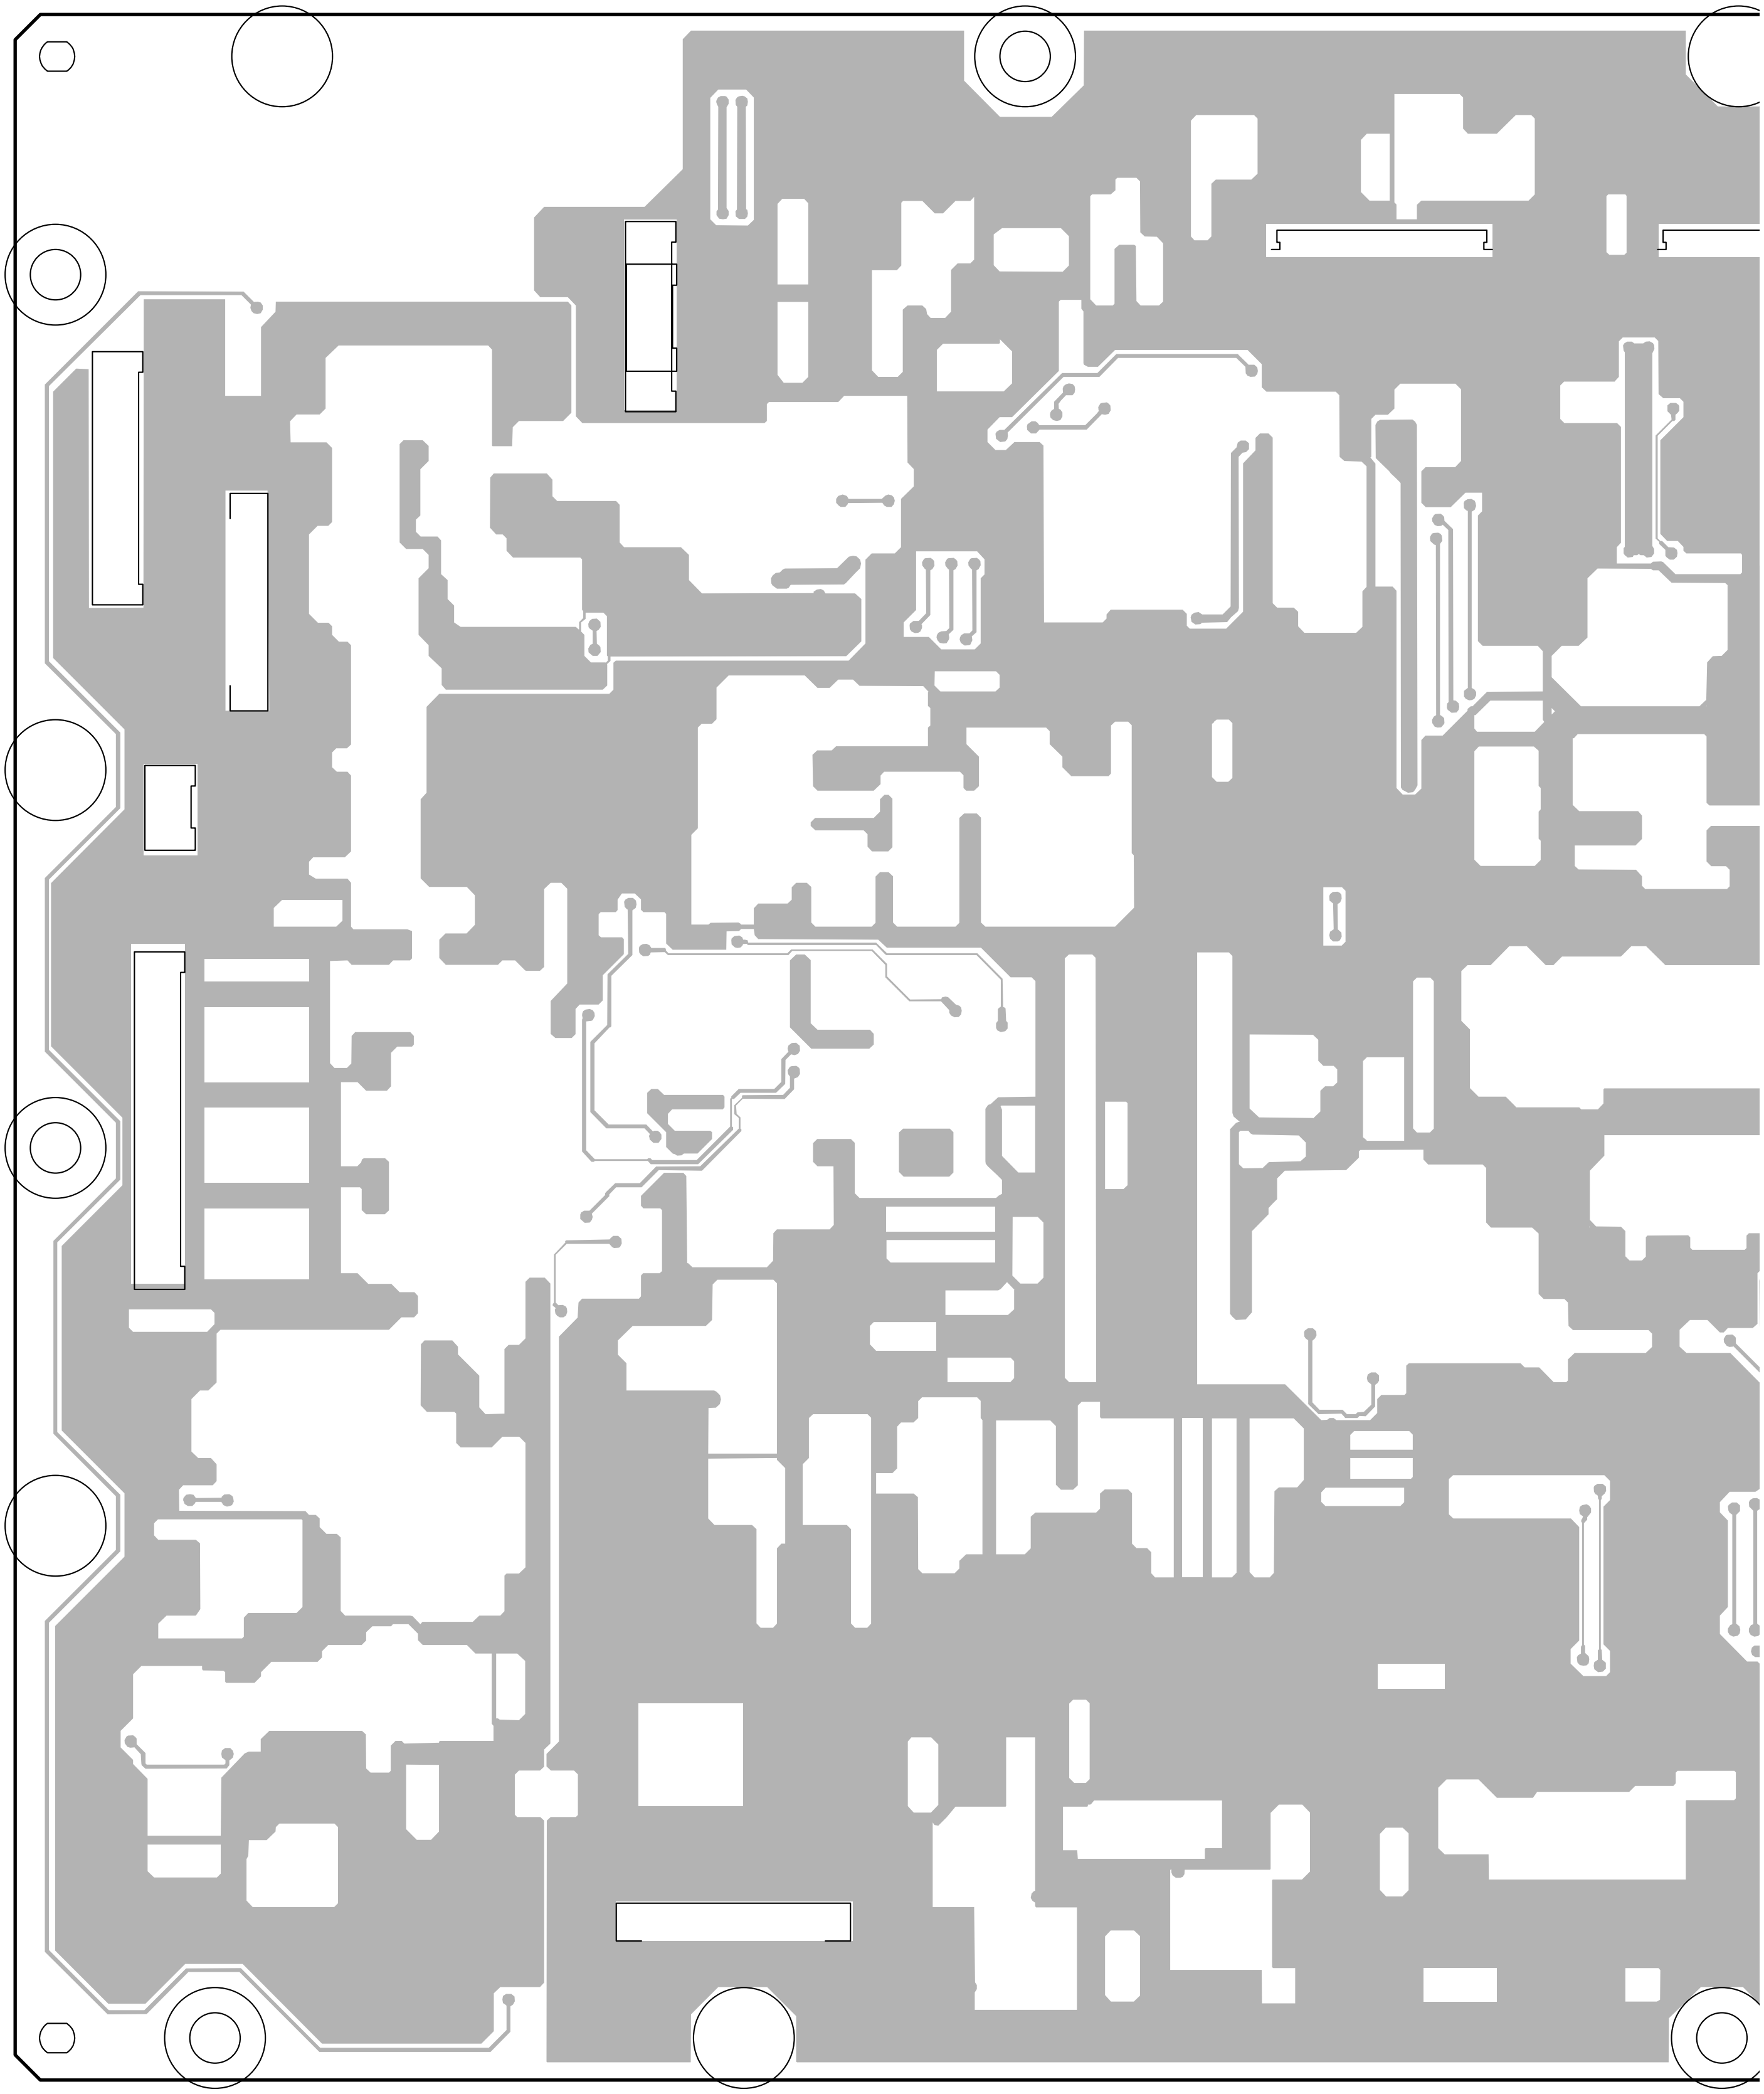

SIDE B

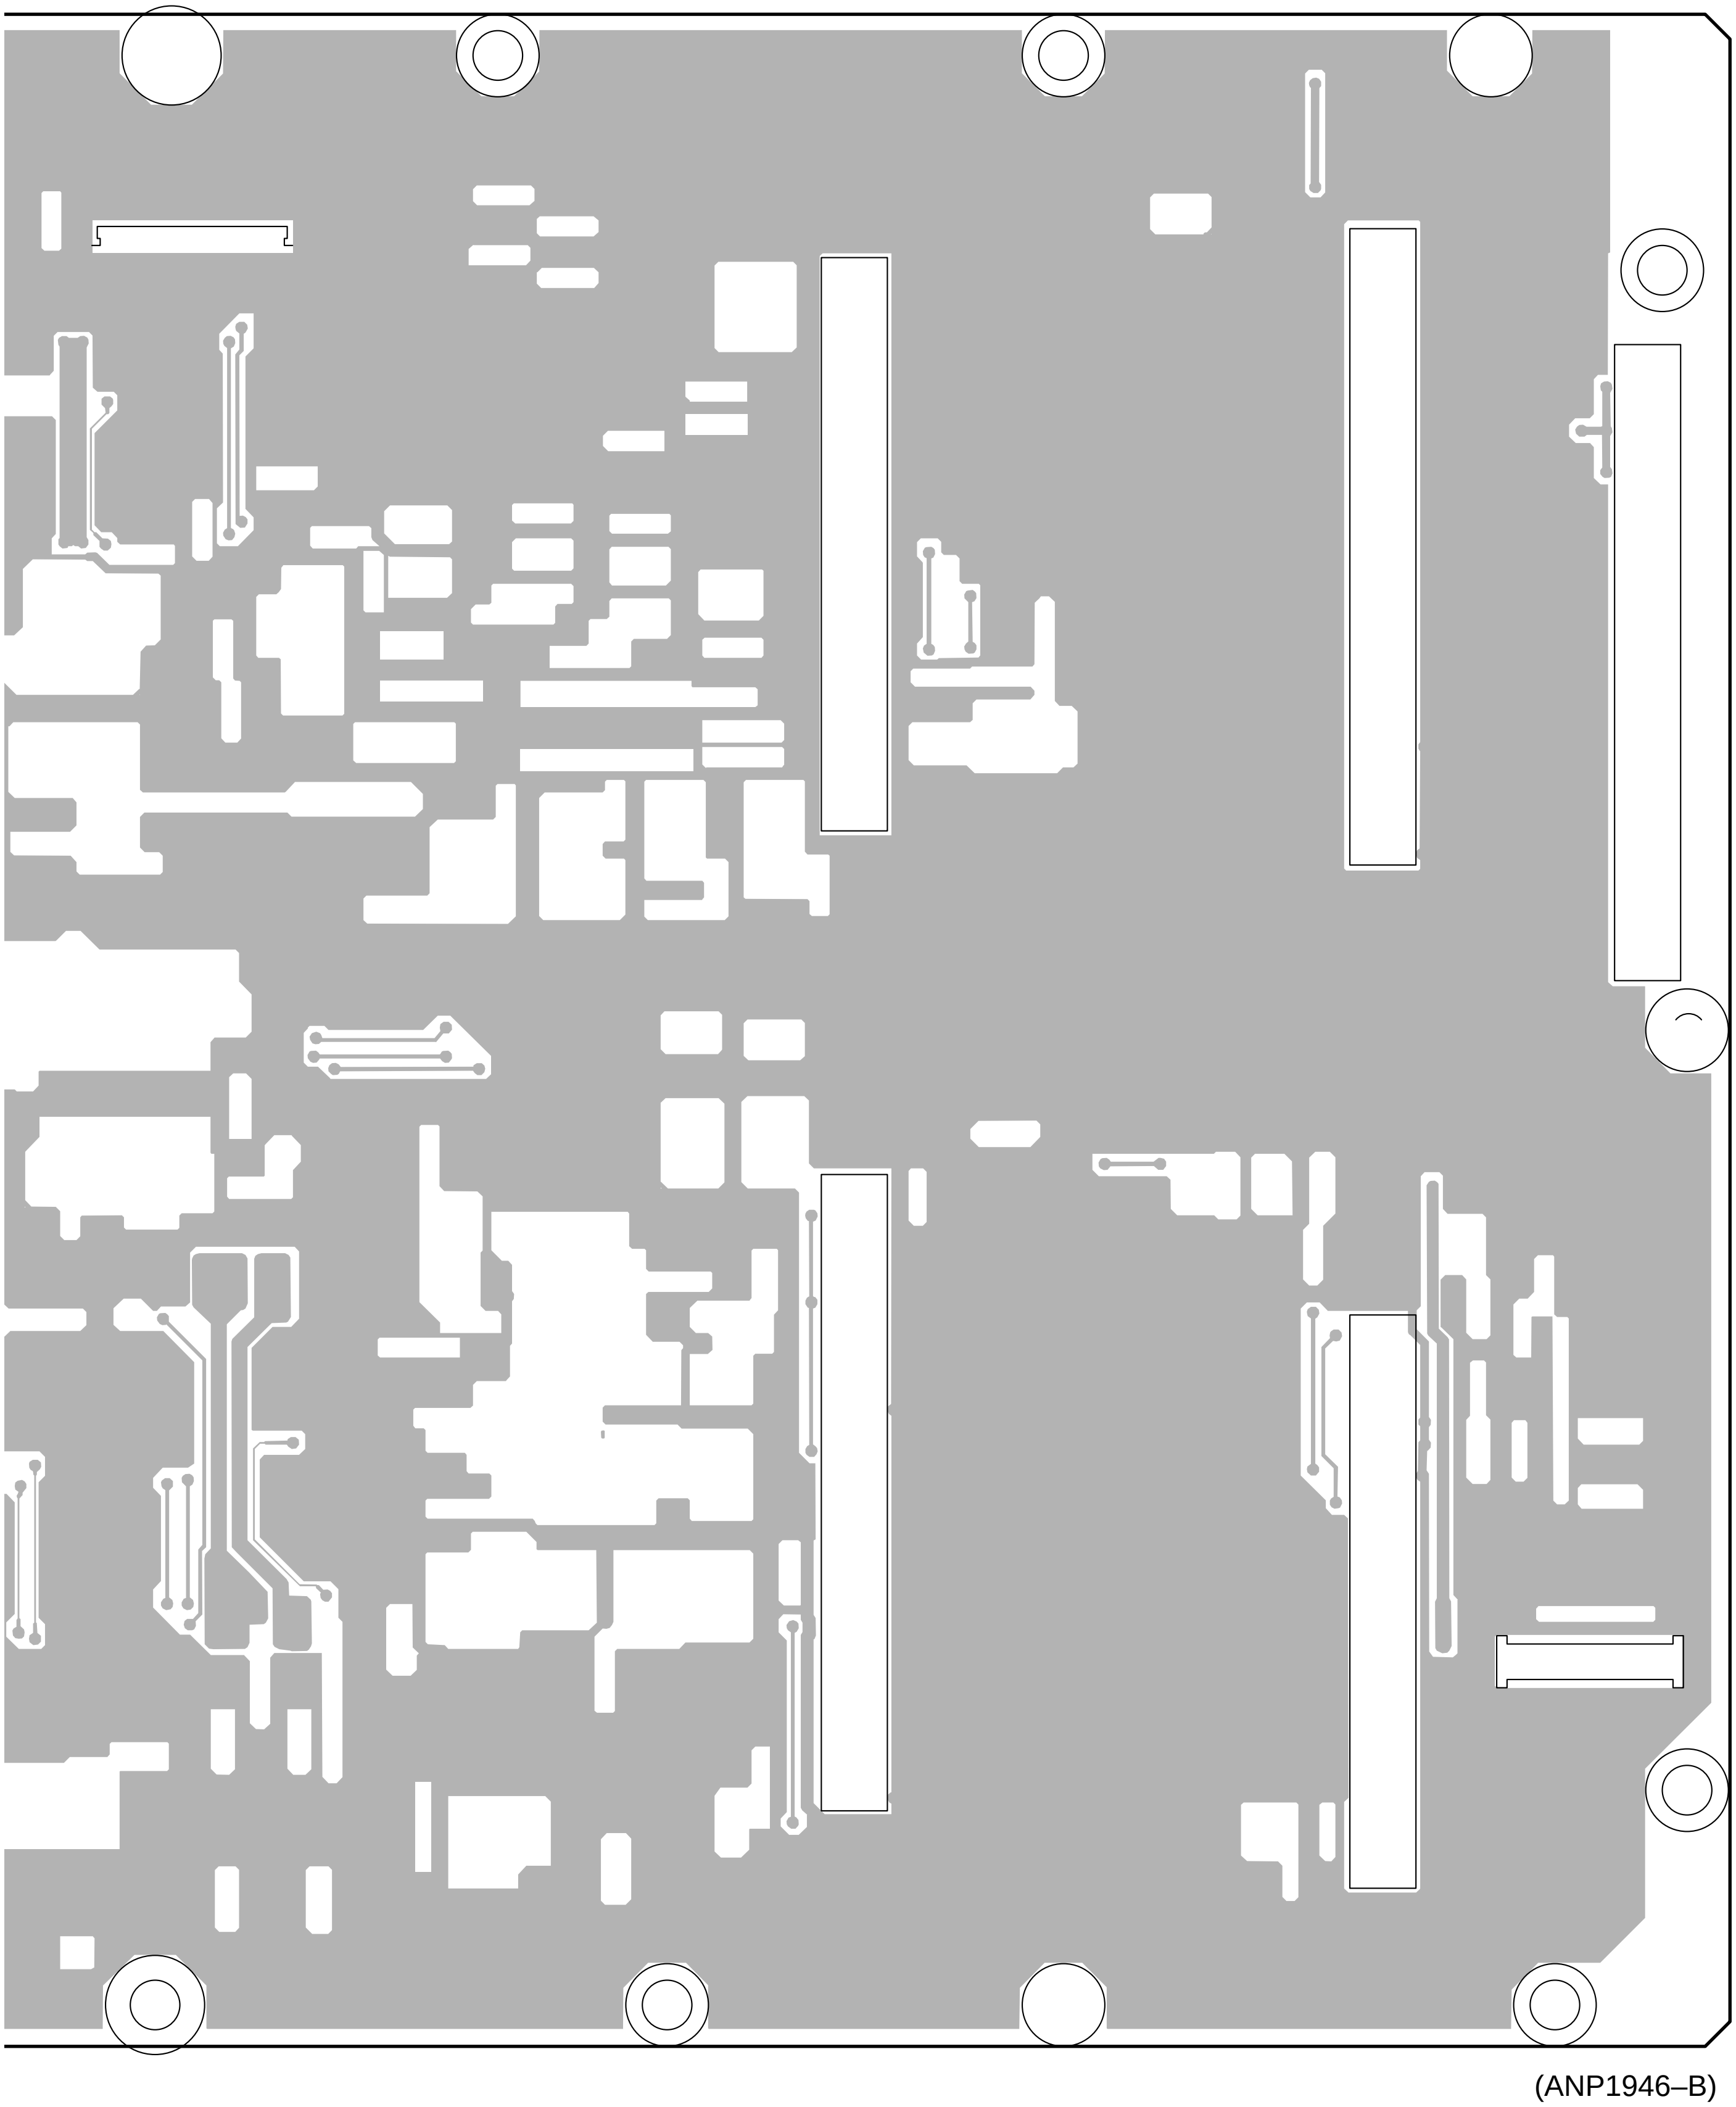

(ANP1946–B)

4.4 SUB VIDEO SERVICE ASSY

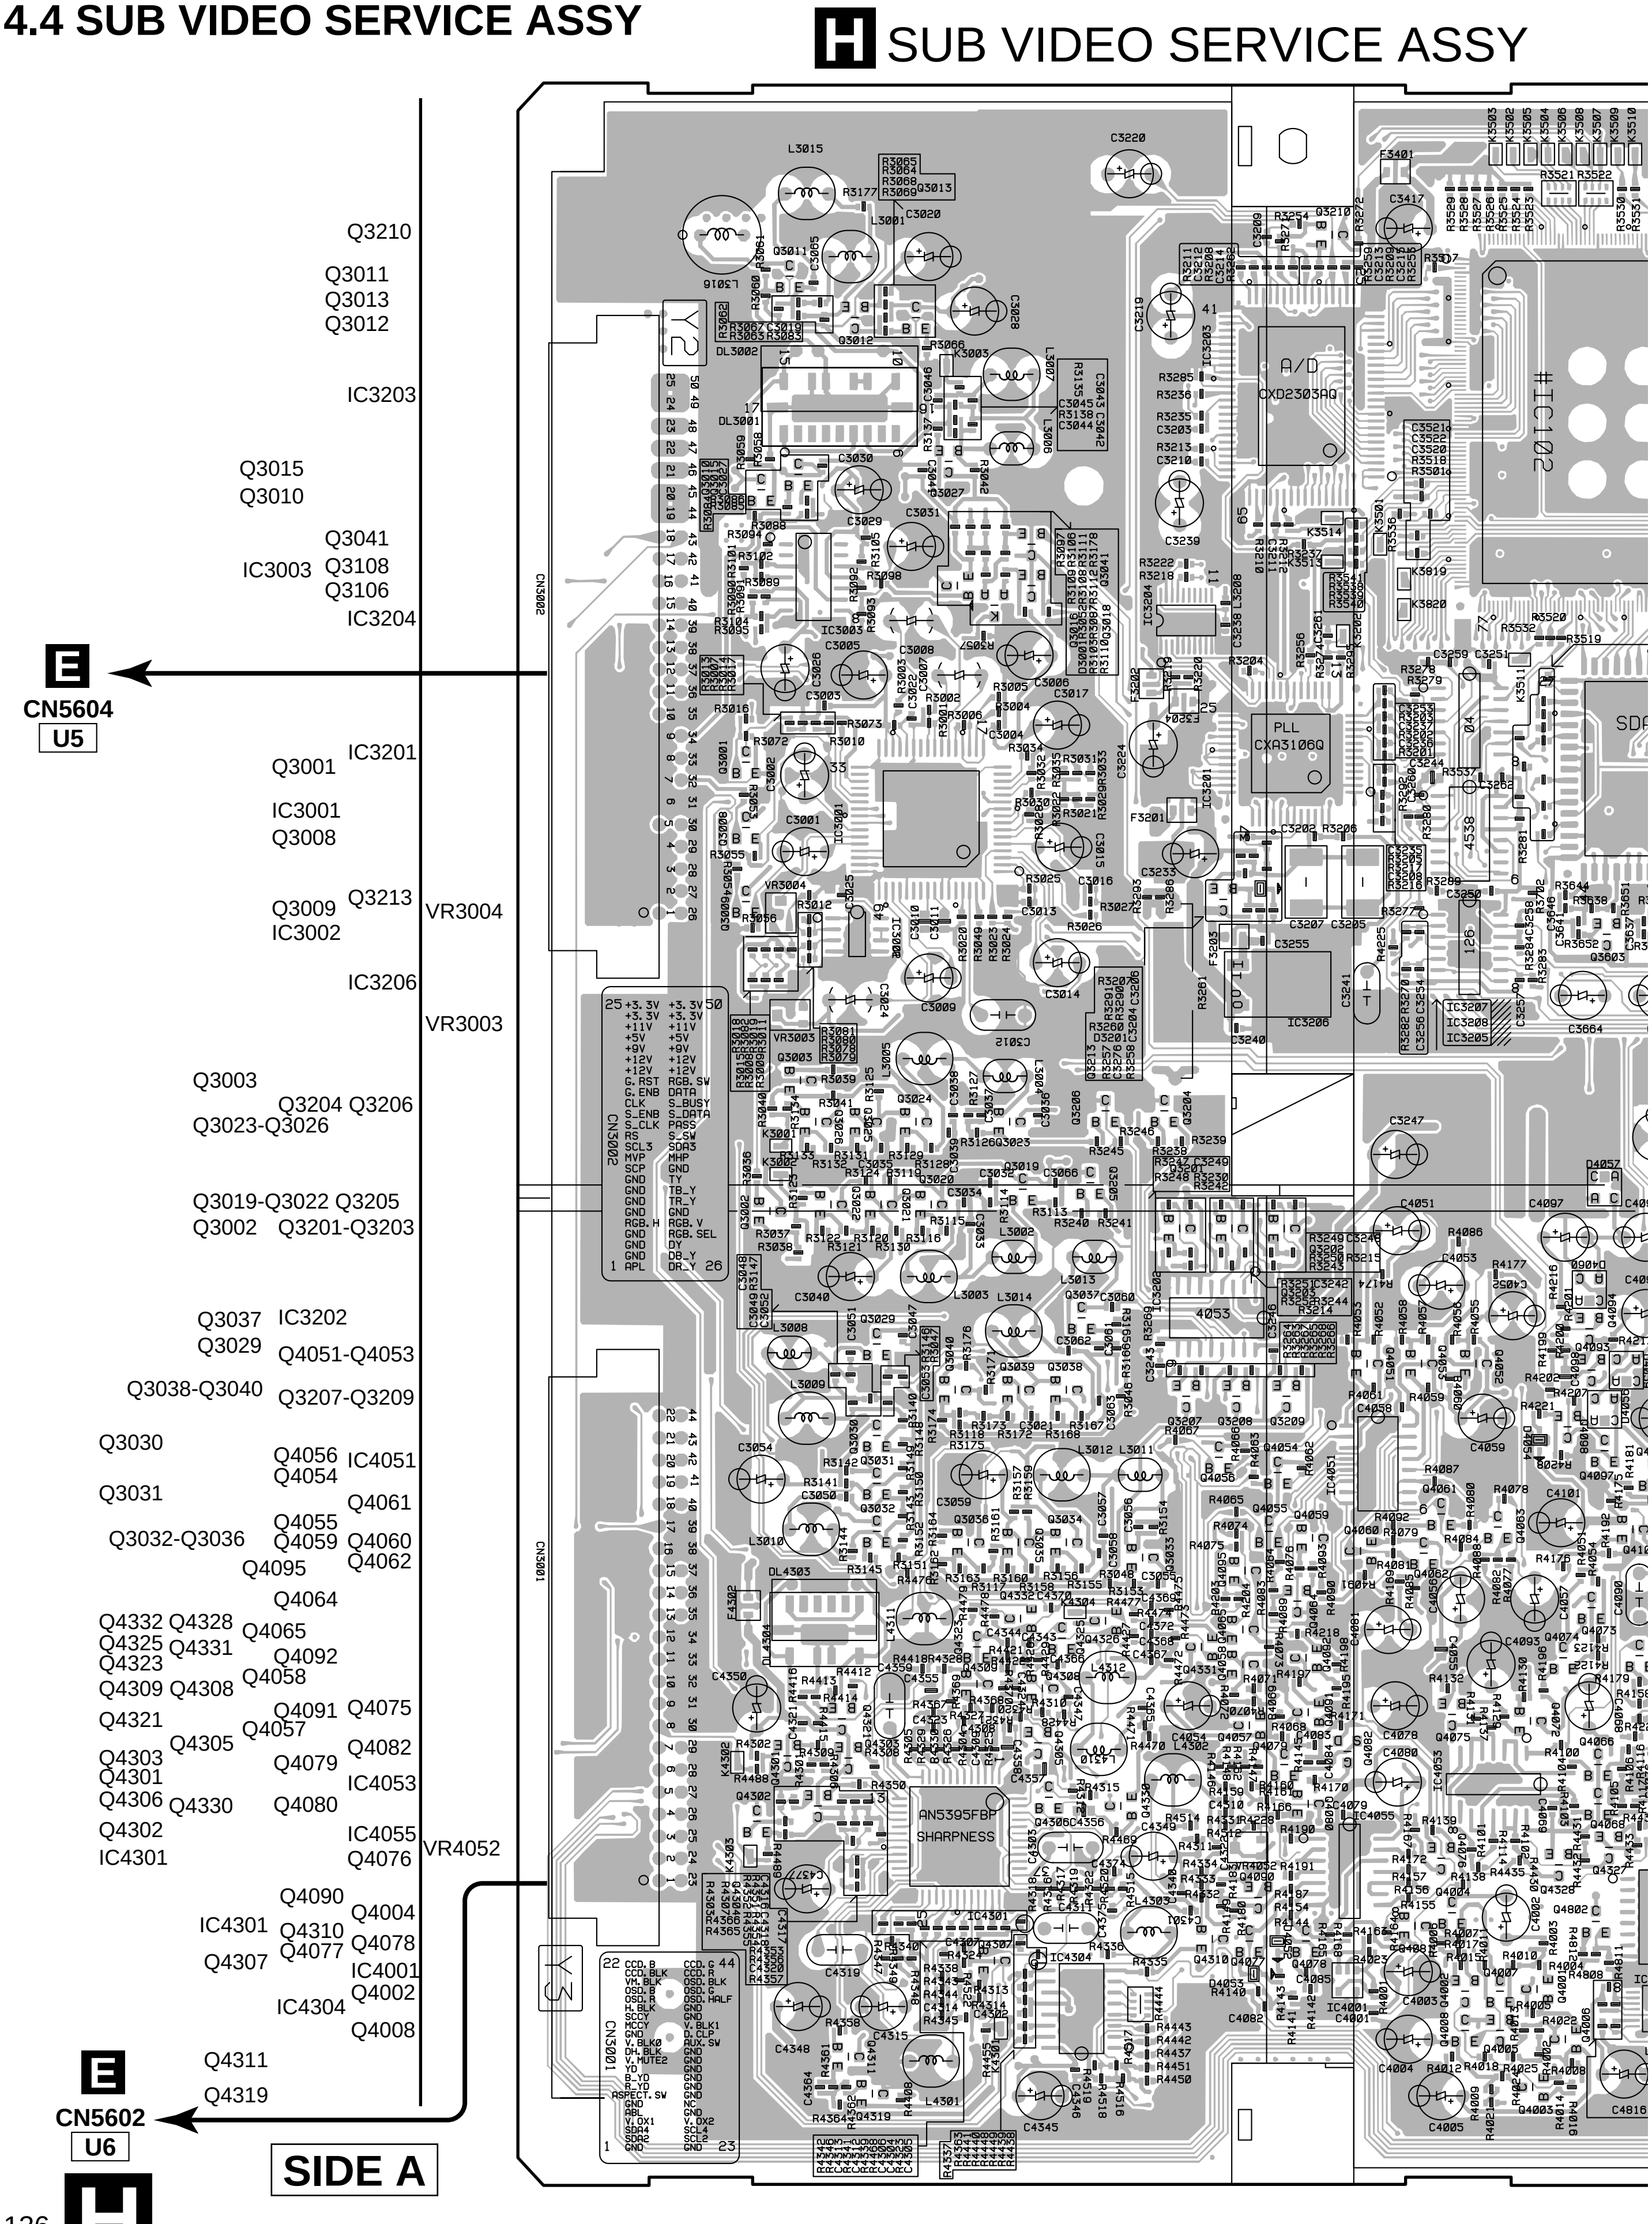

H SUB VIDEO SERVICE ASSY
A
B
C
D
Q3210
Q3011
Q3013
Q3012
IC3203
Q3015
Q3010
Q3041
IC3003
Q3108
Q3106
IC3204
E
CN5604
U5
Q3001
IC3201
IC3001
Q3008
Q3009
Q3213
VR3004
IC3002
IC3206
VR3003
Q3003
Q3204 Q3206
Q3023-Q3026
Q3019-Q3022 Q3205
Q3002
Q3201-Q3203
Q3037
IC3202
Q3029
Q4051-Q4053
Q3038-Q3040
Q3207-Q3209
Q3030
Q4056
IC4051
Q4054
Q3031
Q4061
Q4055
Q3032-Q3036
Q4059
Q4060
Q4095
Q4062
Q4064
Q4332 Q4328
Q4065
Q4325 Q4331
Q4323
Q4092
Q4058
Q4309 Q4308
Q4091
Q4075
Q4321
Q4057
Q4305
Q4082
Q4303
Q4079
Q4301
IC4053
Q4306
Q4330
Q4080
Q4302
IC4055
IC4301
Q4076
VR4052
Q4090
Q4004
IC4301
Q4310
Q4077
Q4078
Q4307
IC4001
Q4002
IC4304
Q4008
E
Q4311
CN5602
Q4319
U6
SIDE A
CN3002
CN3001
A/D
CXD2303AQ
PLL
CXA3106Q
AN5395FBP
SHARPNESS
4053
#IC102

SSY

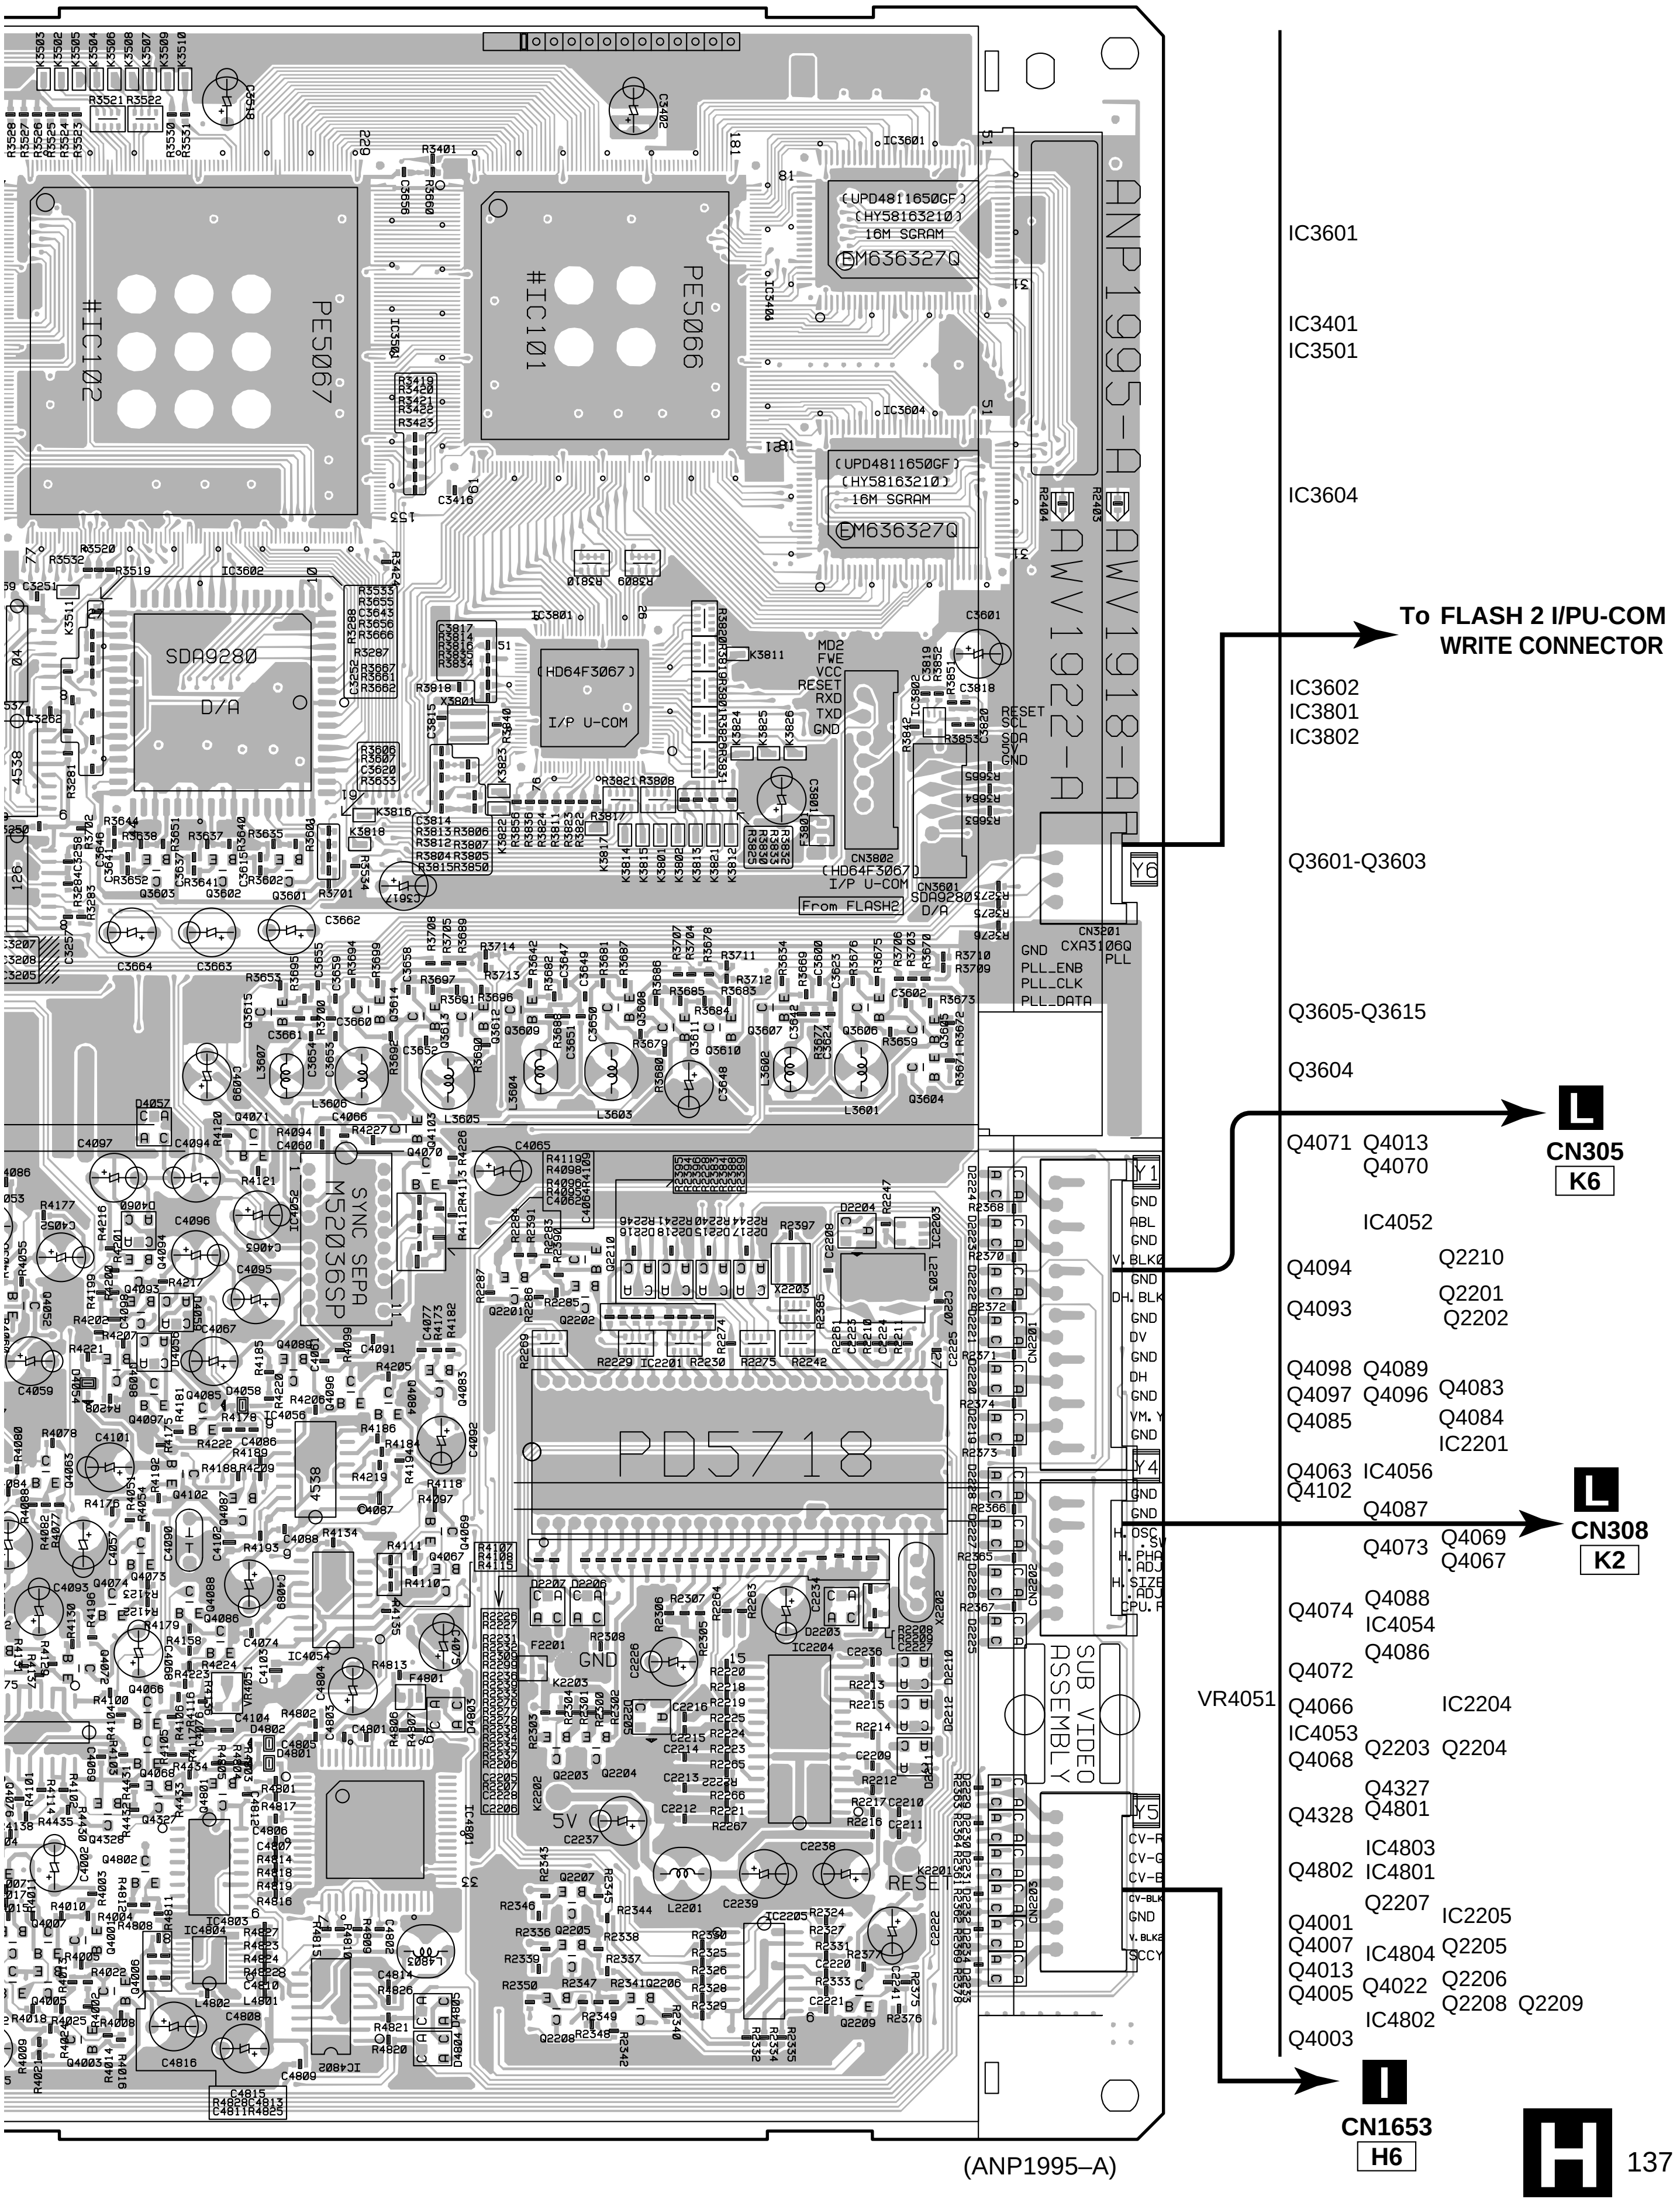
A
B
C
D
IC3601
IC3401
IC3501
IC3604
To FLASH 2 I/PU-COM
WRITE CONNECTOR
IC3602
IC3801
IC3802
Q3601-Q3603
Q3605-Q3615
Q3604
Q4071
Q4013
Q4070
L
CN305
K6
IC4052
Q4094
Q2210
Q4093
Q2201
Q2202
Q4098
Q4089
Q4097
Q4096
Q4083
Q4085
Q4084
IC2201
Q4063
IC4056
Q4102
Q4087
L
CN308
K2
Q4073
Q4069
Q4067
Q4074
Q4088
IC4054
Q4086
Q4072
VR4051
Q4066
IC2204
IC4053
Q4068
Q2203
Q2204
Q4327
Q4328
Q4801
IC4803
Q4802
IC4801
Q2207
Q4001
IC2205
Q4007
IC4804
Q2205
Q4013
Q4022
Q2206
Q4005
Q2208
Q2209
IC4802
Q4003
I
CN1653
H6
ANP1995-A
AWV1918-A
AWV1922-A
PE5067
#IC102
PE5066
#IC101
SDA9280
D/A
(HD64F3067)
I/P U-COM
PD5718
SYNC SEPA
M52036SP
SUB VIDEO ASSEMBLY
(UPD4811650GF)
(HY5816321Ø)
16M SGRAM
EM636327Q
CXA3106Q
PLL
GND
PLL_ENB
PLL_CLK
PLL_DATA
MD2
FWE
VCC
RESET
RXD
TXD
GND
RESET
SCL
SDA
VDD
GND
From FLASH2
5V
GND
RESET

(ANP1995–A)

H SUB VIDEO SERVICE ASSY

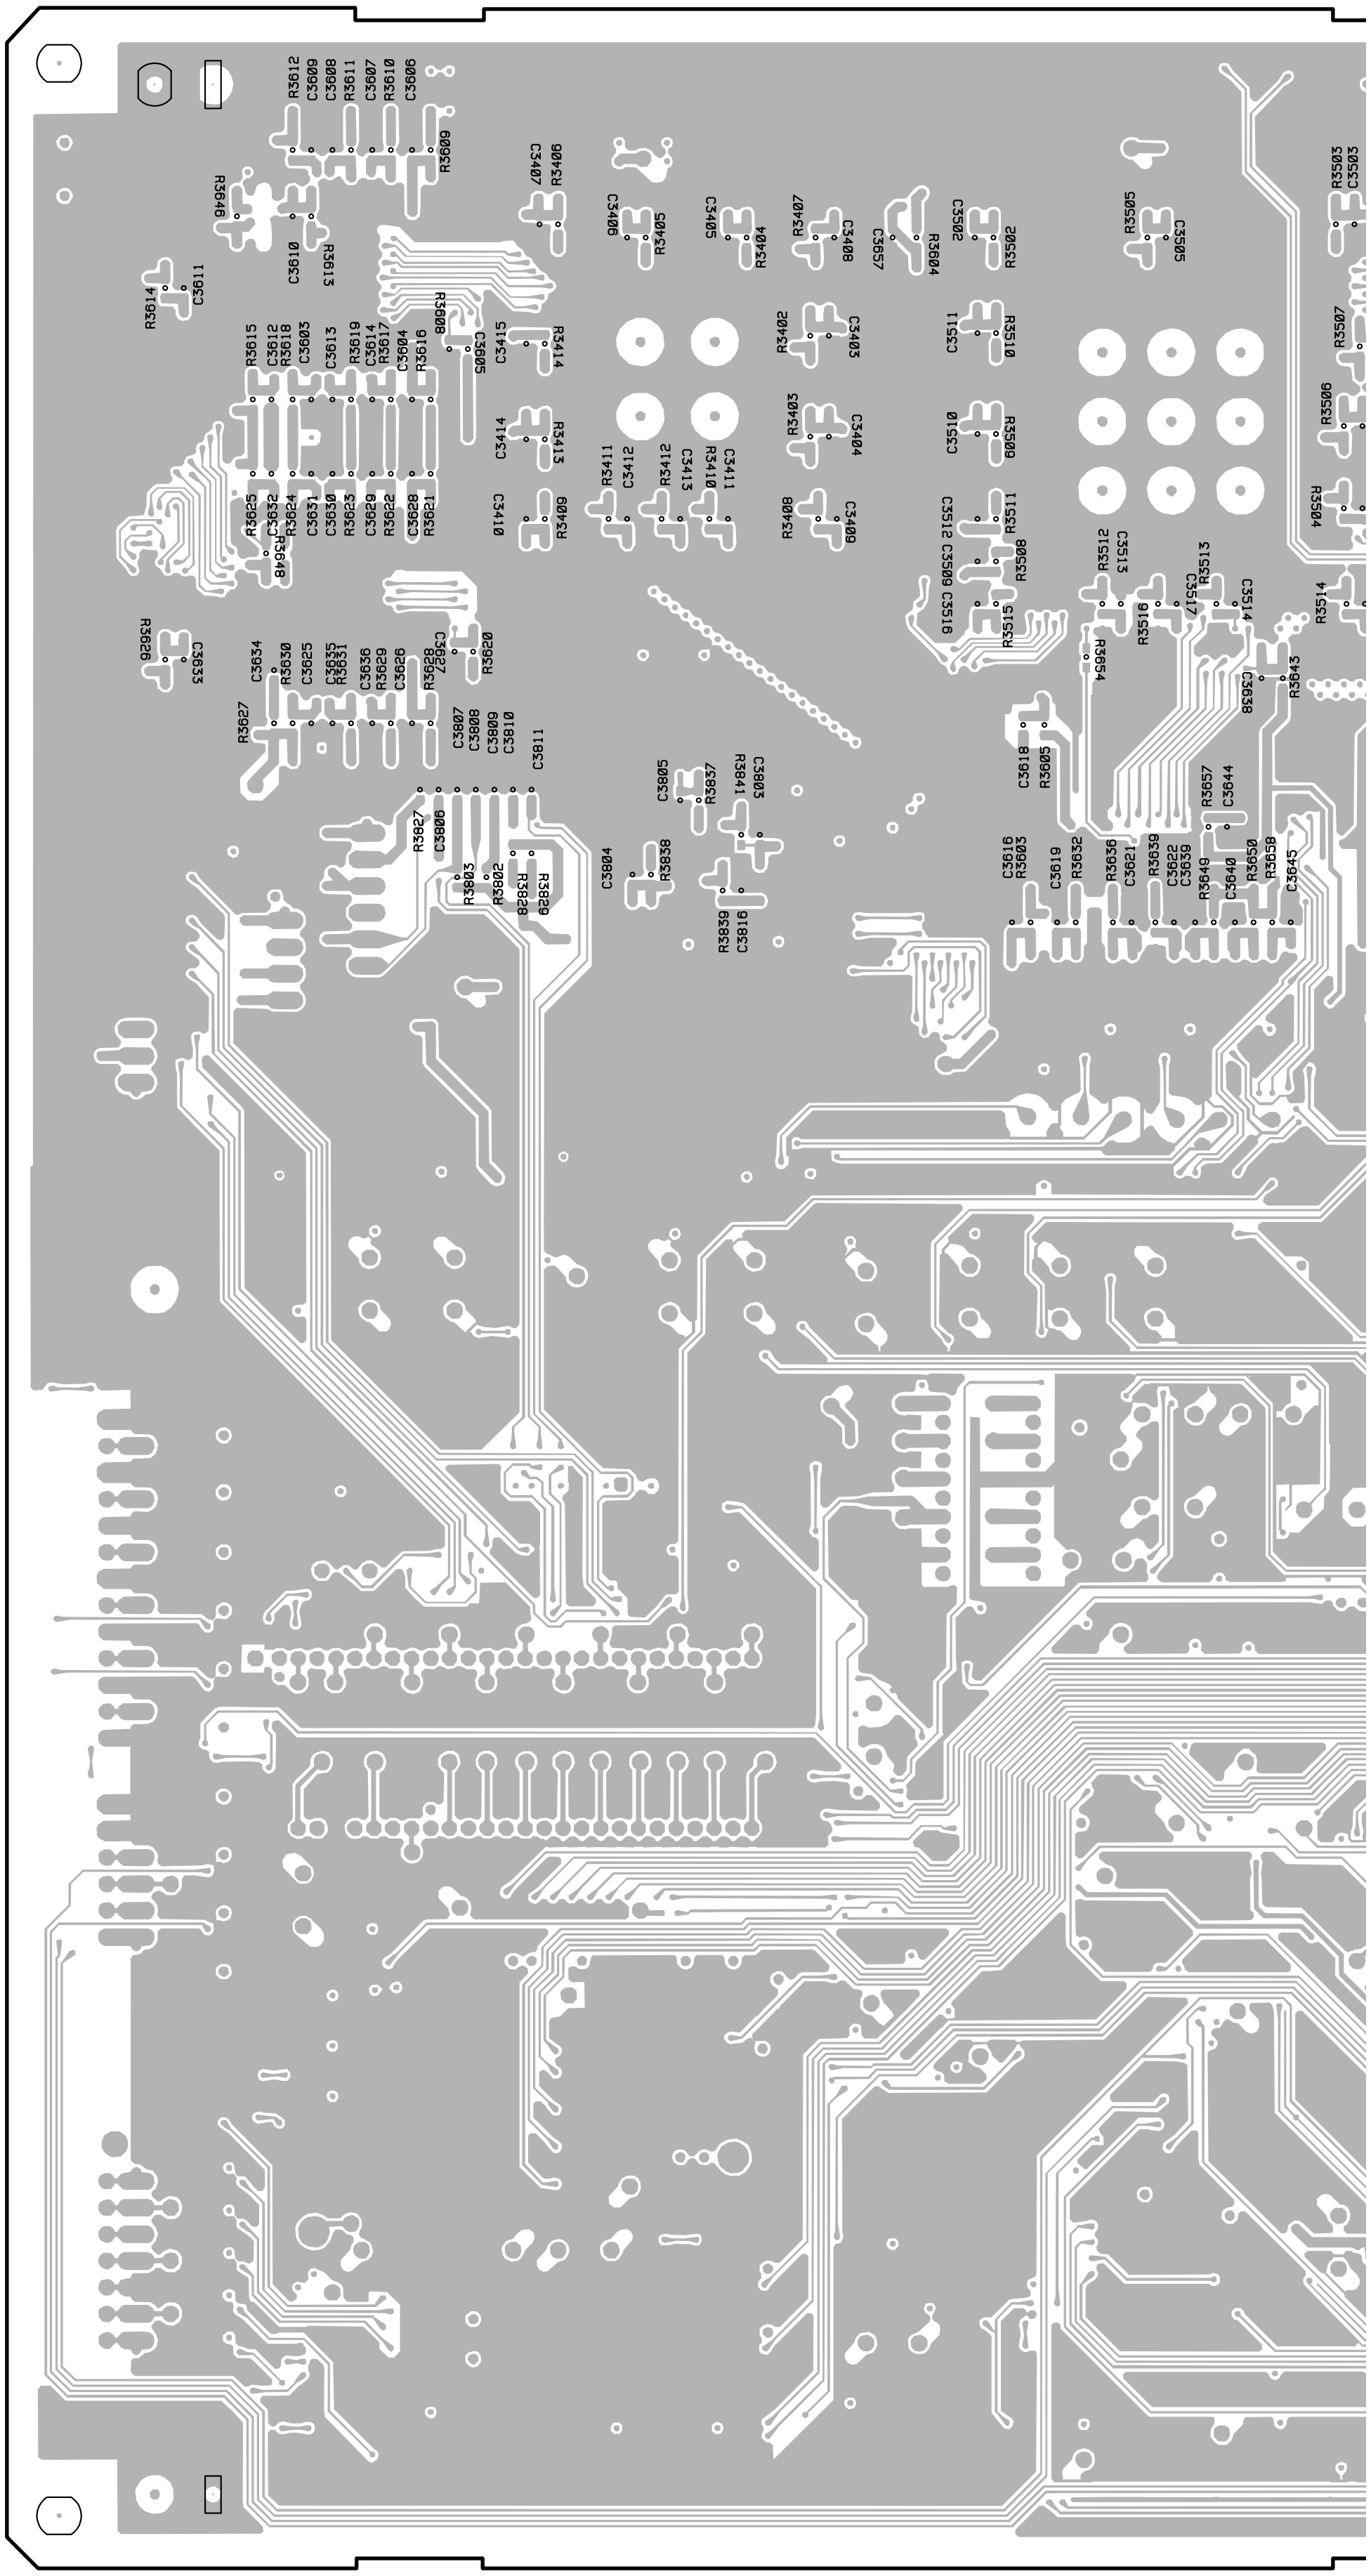
R3612
C3609
C3608
R3611
C3607
R3610
C3606
R3609
R3646
C3610
R3613
R3614
C3611
R3615
C3612
R3618
C3603
C3613
R3619
C3614
R3617
C3604
R3616
R3608
C3605
C3415
R3414
C3414
R3413
C3410
R3409
R3411
C3412
R3412
C3413
R3410
C3411
C3407
R3406
C3406
R3405
C3405
R3404
R3407
C3408
C3657
R3604
C3502
R3502
R3402
C3403
R3403
C3404
R3408
C3409
C3511
R3510
C3510
R3509
C3512
C3509
R3511
R3508
C3516
R3515
R3505
C3505
R3503
C3503
R3507
R3506
R3504
R3512
C3513
R3516
R3513
C3514
R3514
R3654
C3658
R3643
R3625
C3632
R3624
C3631
C3630
R3623
C3629
R3622
C3628
R3621
R3648
R3626
C3633
C3634
R3630
C3625
C3635
R3631
C3636
R3629
C3626
R3628
C3627
R3620
R3627
C3807
C3808
C3809
C3810
C3811
R3827
C3806
R3803
R3802
R3828
R3829
C3804
C3805
R3837
R3838
R3841
C3803
R3839
C3816
C3618
R3605
C3616
R3603
C3619
R3632
R3636
C3621
R3639
C3622
C3639
R3649
R3657
C3644
C3640
R3650
R3658
C3645

SIDE B

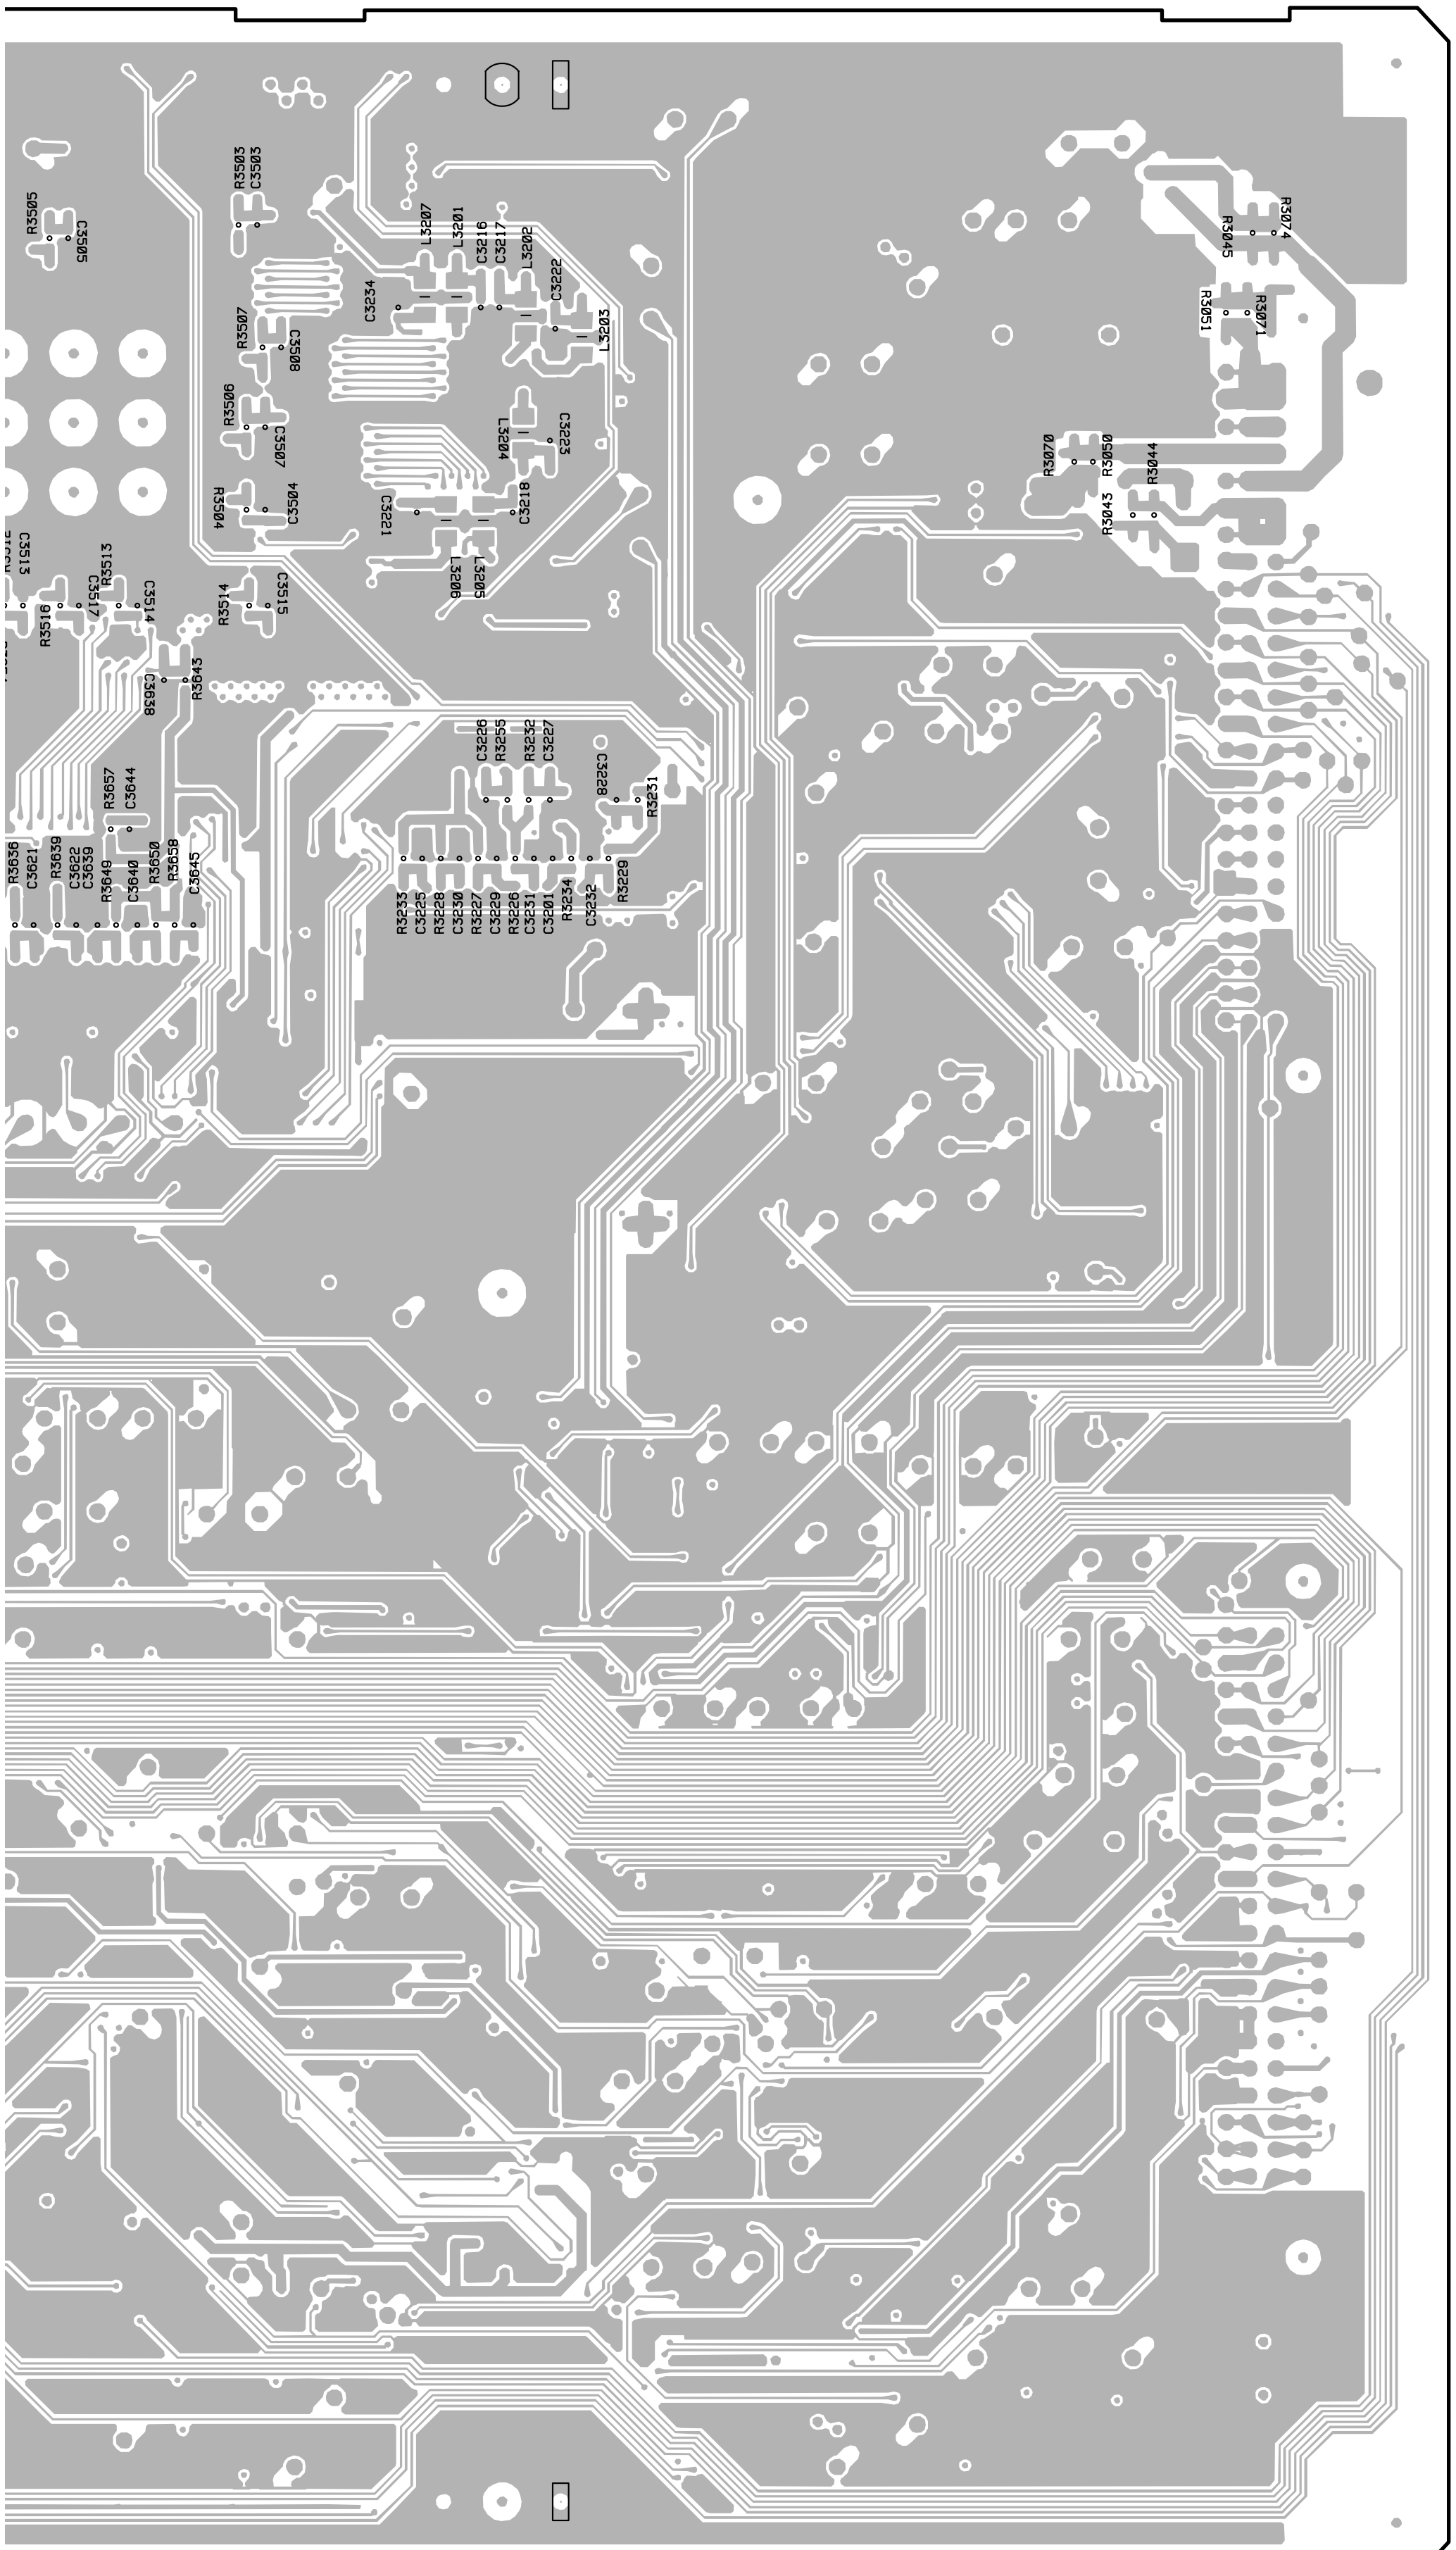
R3505
C3505
R3503
C3503
L3207
L3201
C3216
C3217
L3202
C3222
L3203
C3234
R3507
C3508
R3506
C3507
R3504
C3504
L3204
C3223
C3221
C3218
L3206
L3205
R3074
R3045
R3051
R3071
R3070
R3050
R3044
R3043
C3513
R3513
C3517
C3514
R3516
R3514
C3515
C3658
R3643
C3226
R3255
R3232
C3227
C3228
R3231
R3657
C3644
R3636
C3621
R3639
C3622
C3659
R3649
C3640
R3650
R3658
C3645
R3233
C3225
R3228
C3230
R3227
C3229
R3226
C3231
C3201
R3234
C3232
R3229

(ANP1995–A)

4.5 DIGITAL CONV. and CONNECTOR ASSYS

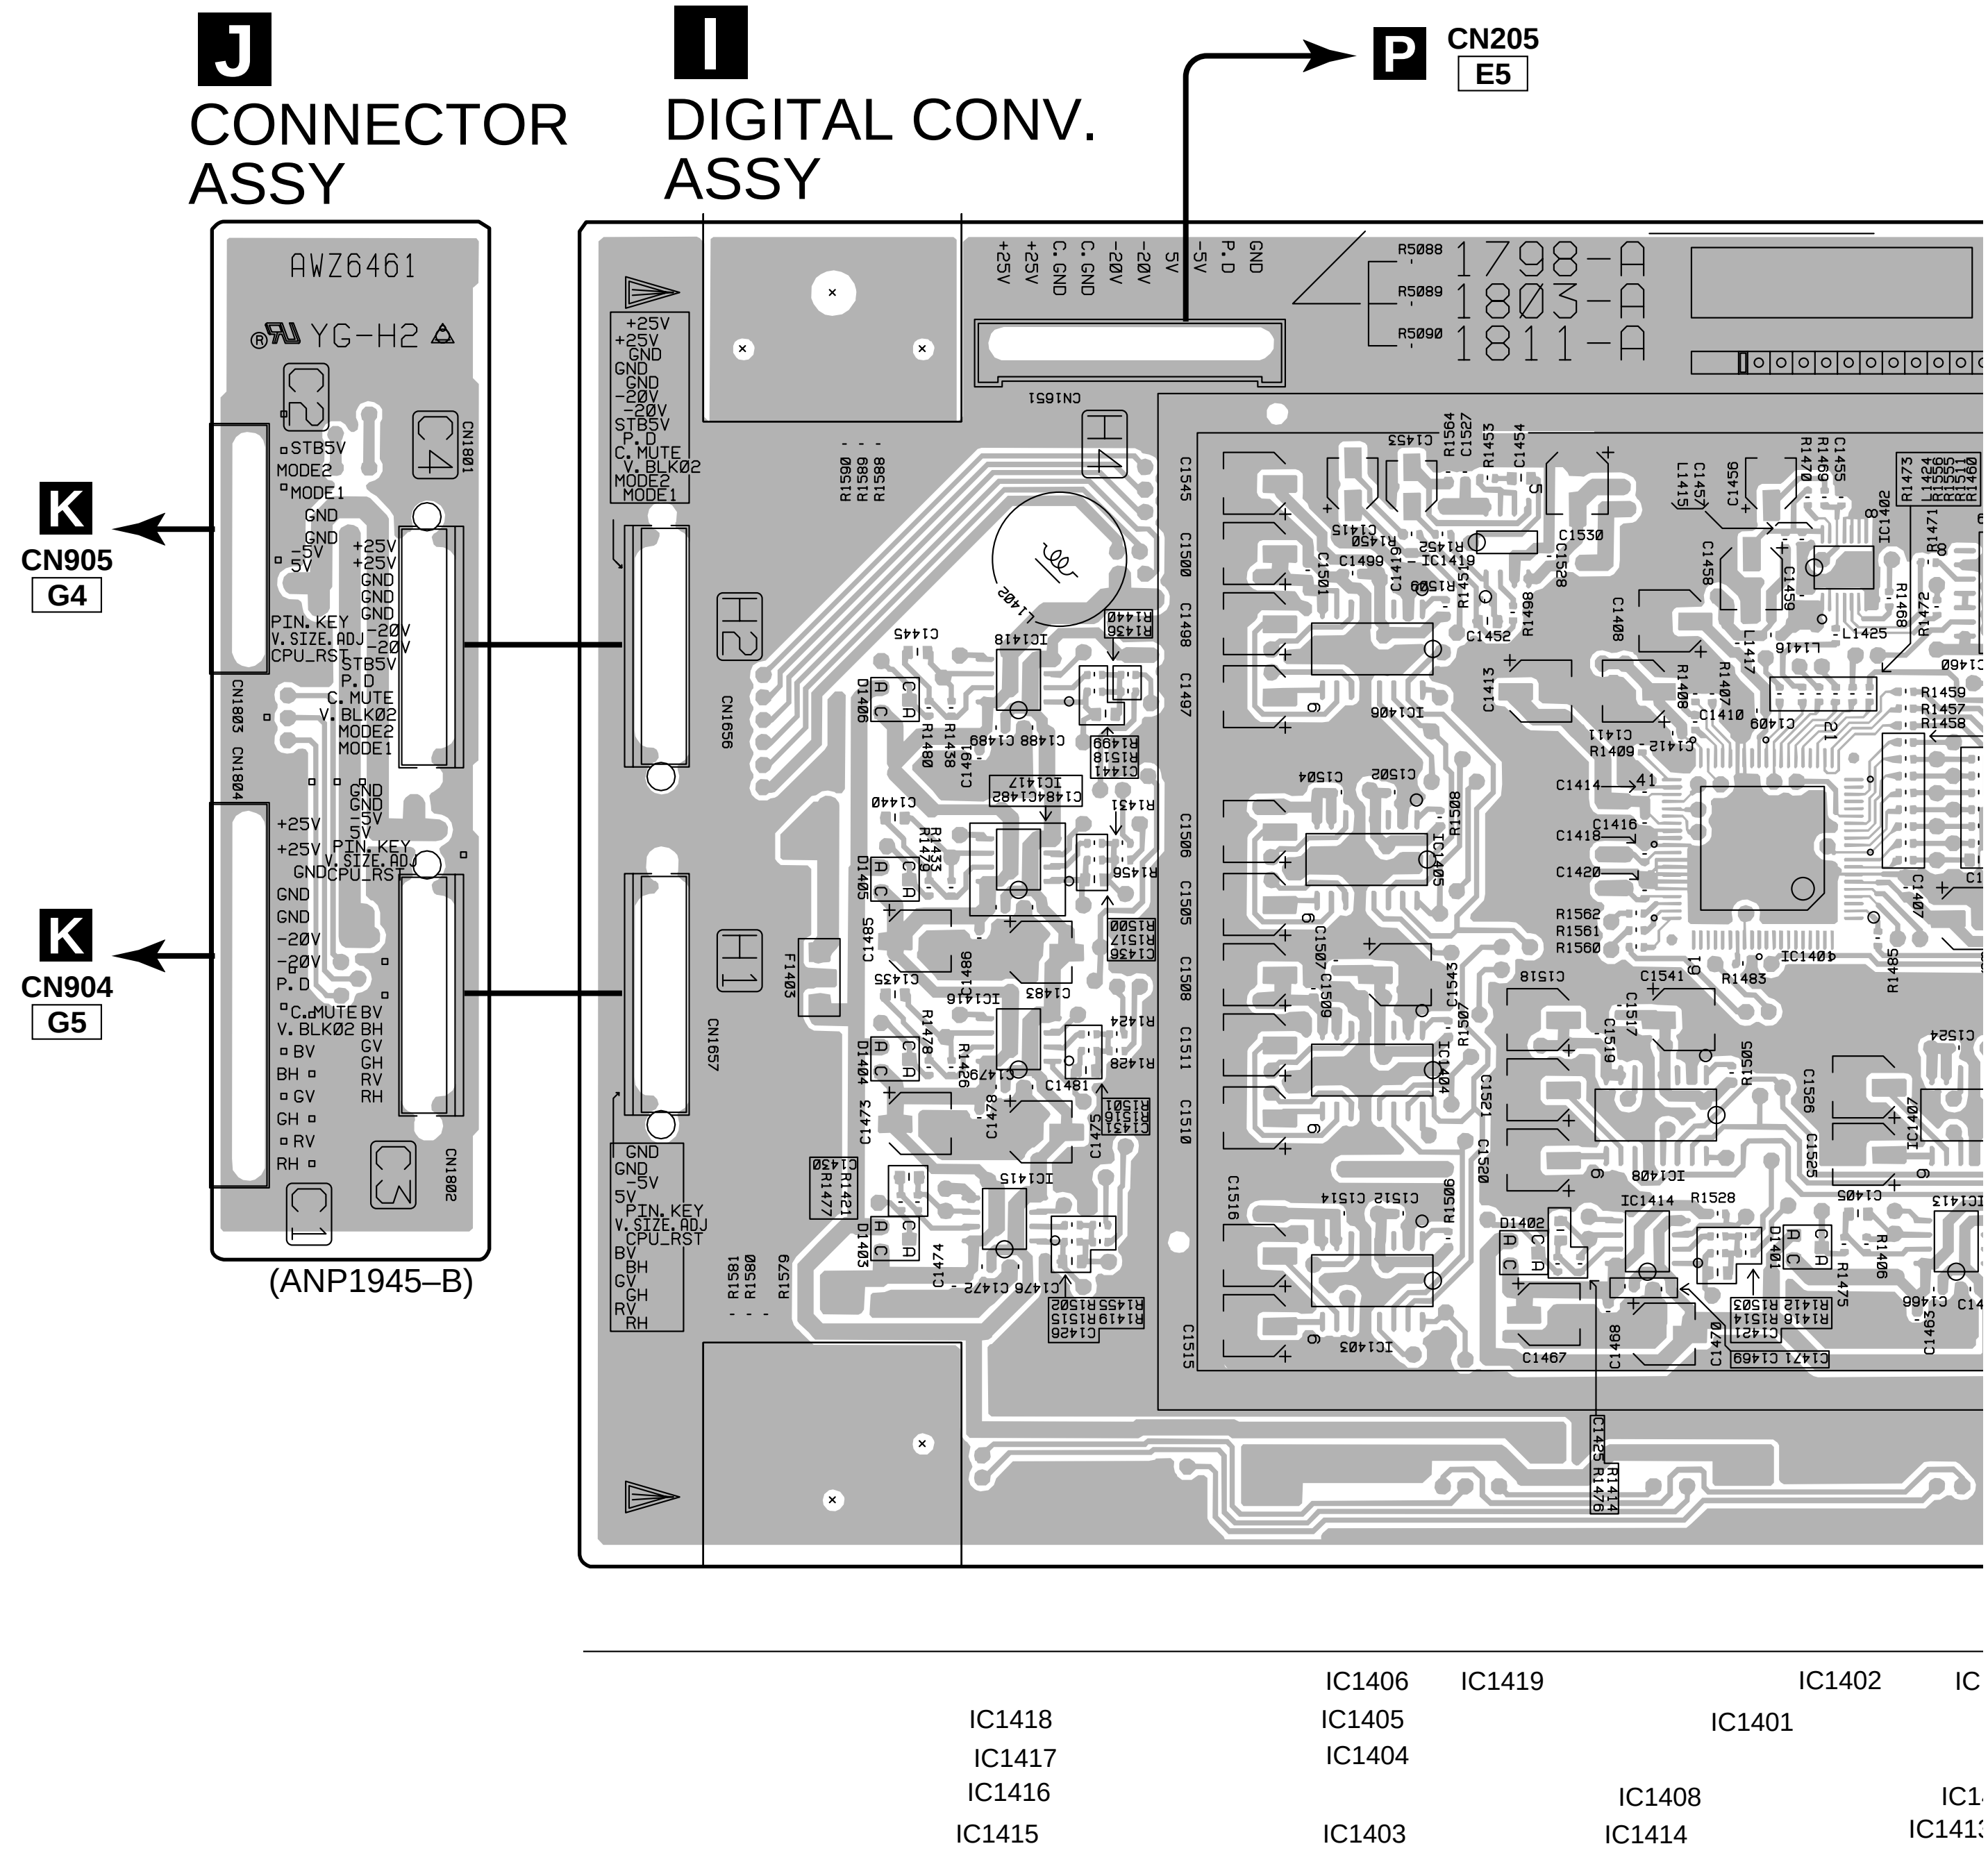
J
CONNECTOR ASSY
I
DIGITAL CONV. ASSY
P
CN205
E5
K
CN905
G4
K
CN904
G5
AWZ6461
YG-H2
CN1801
CN1803
CN1804
CN1802
(ANP1945–B)
CN1651
CN1656
CN1657
1798-A
1803-A
1811-A
+25V
GND
-20V
5V
-5V
STB5V
P.D
C.MUTE
V.BLK02
MODE2
MODE1
PIN.KEY
V.SIZE.ADJ
CPU_RST
BV
BH
GV
GH
RV
RH
IC1406
IC1419
IC1402
IC1418
IC1405
IC1401
IC1417
IC1404
IC1416
IC1408
IC1415
IC1403
IC1414

SIDE A

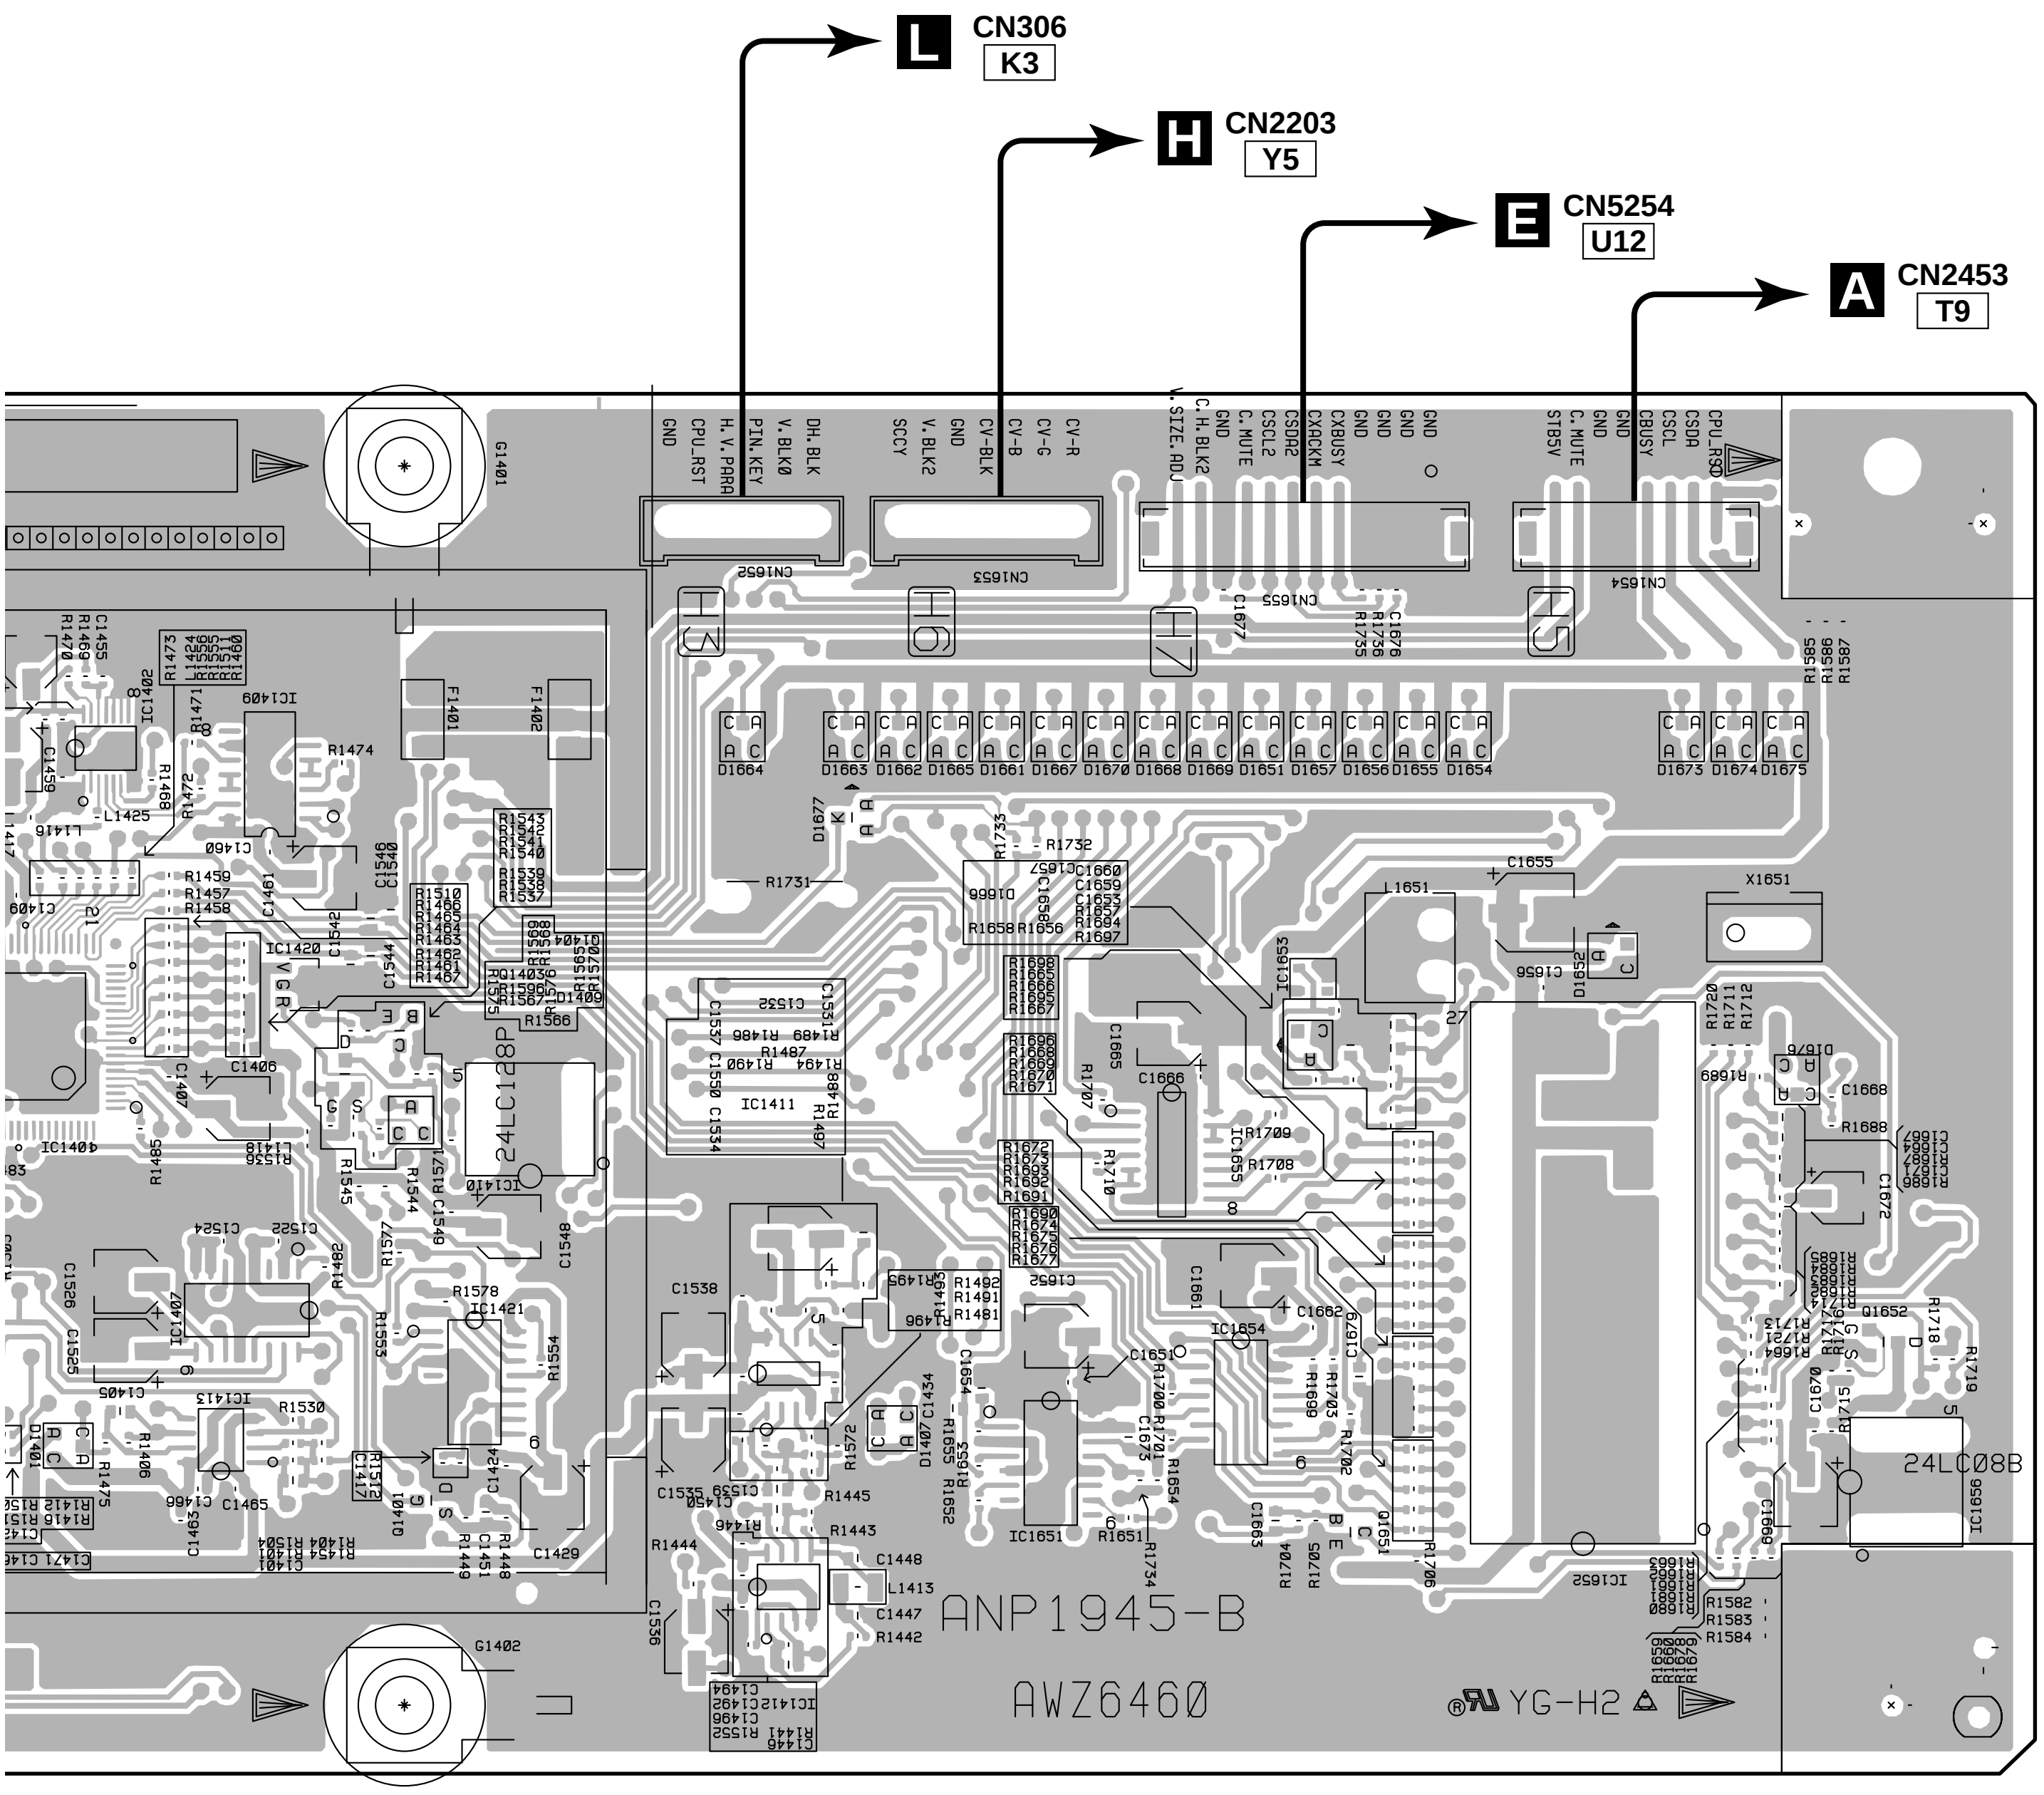
L
CN306
K3
H
CN2203
Y5
E
CN5254
U12
A
CN2453
T9
DH.BLK
V.BLK0
PIN.KEY
H.V.PARA
CPU.RST
GND
CN1652
CV-R
CV-G
CV-B
CV-BLK
GND
V.BLK2
SCCY
CN1653
V.SIZE.ADJ
C.H.BLK2
GND
C.MUTE
CSCL2
CSDA2
CXACKM
CXBUSY
GND
GND
GND
GND
CN1655
STB5V
C.MUTE
GND
CBUSY
CSCL
CSDA
CPU.RSD
CN1654
24LC128P
24LC08B
ANP1945-B
AWZ6460
YG-H2
G1401
G1402
X1651
L1651
IC1411
IC1651
IC1652
IC1654
IC1655
IC1421
IC1413
IC1407
IC1410

(ANP1945–B)

IC1402 IC1409

401 IC1420 Q1404 IC1653

Q1403 IC1410 IC1655 IC1652

IC1407 Q1652

IC1413 IC1421 IC1411 IC1651 IC1654 IC1656

Q1401 IC1412 Q1651

A

I

DIGITAL CONV. ASSY

B

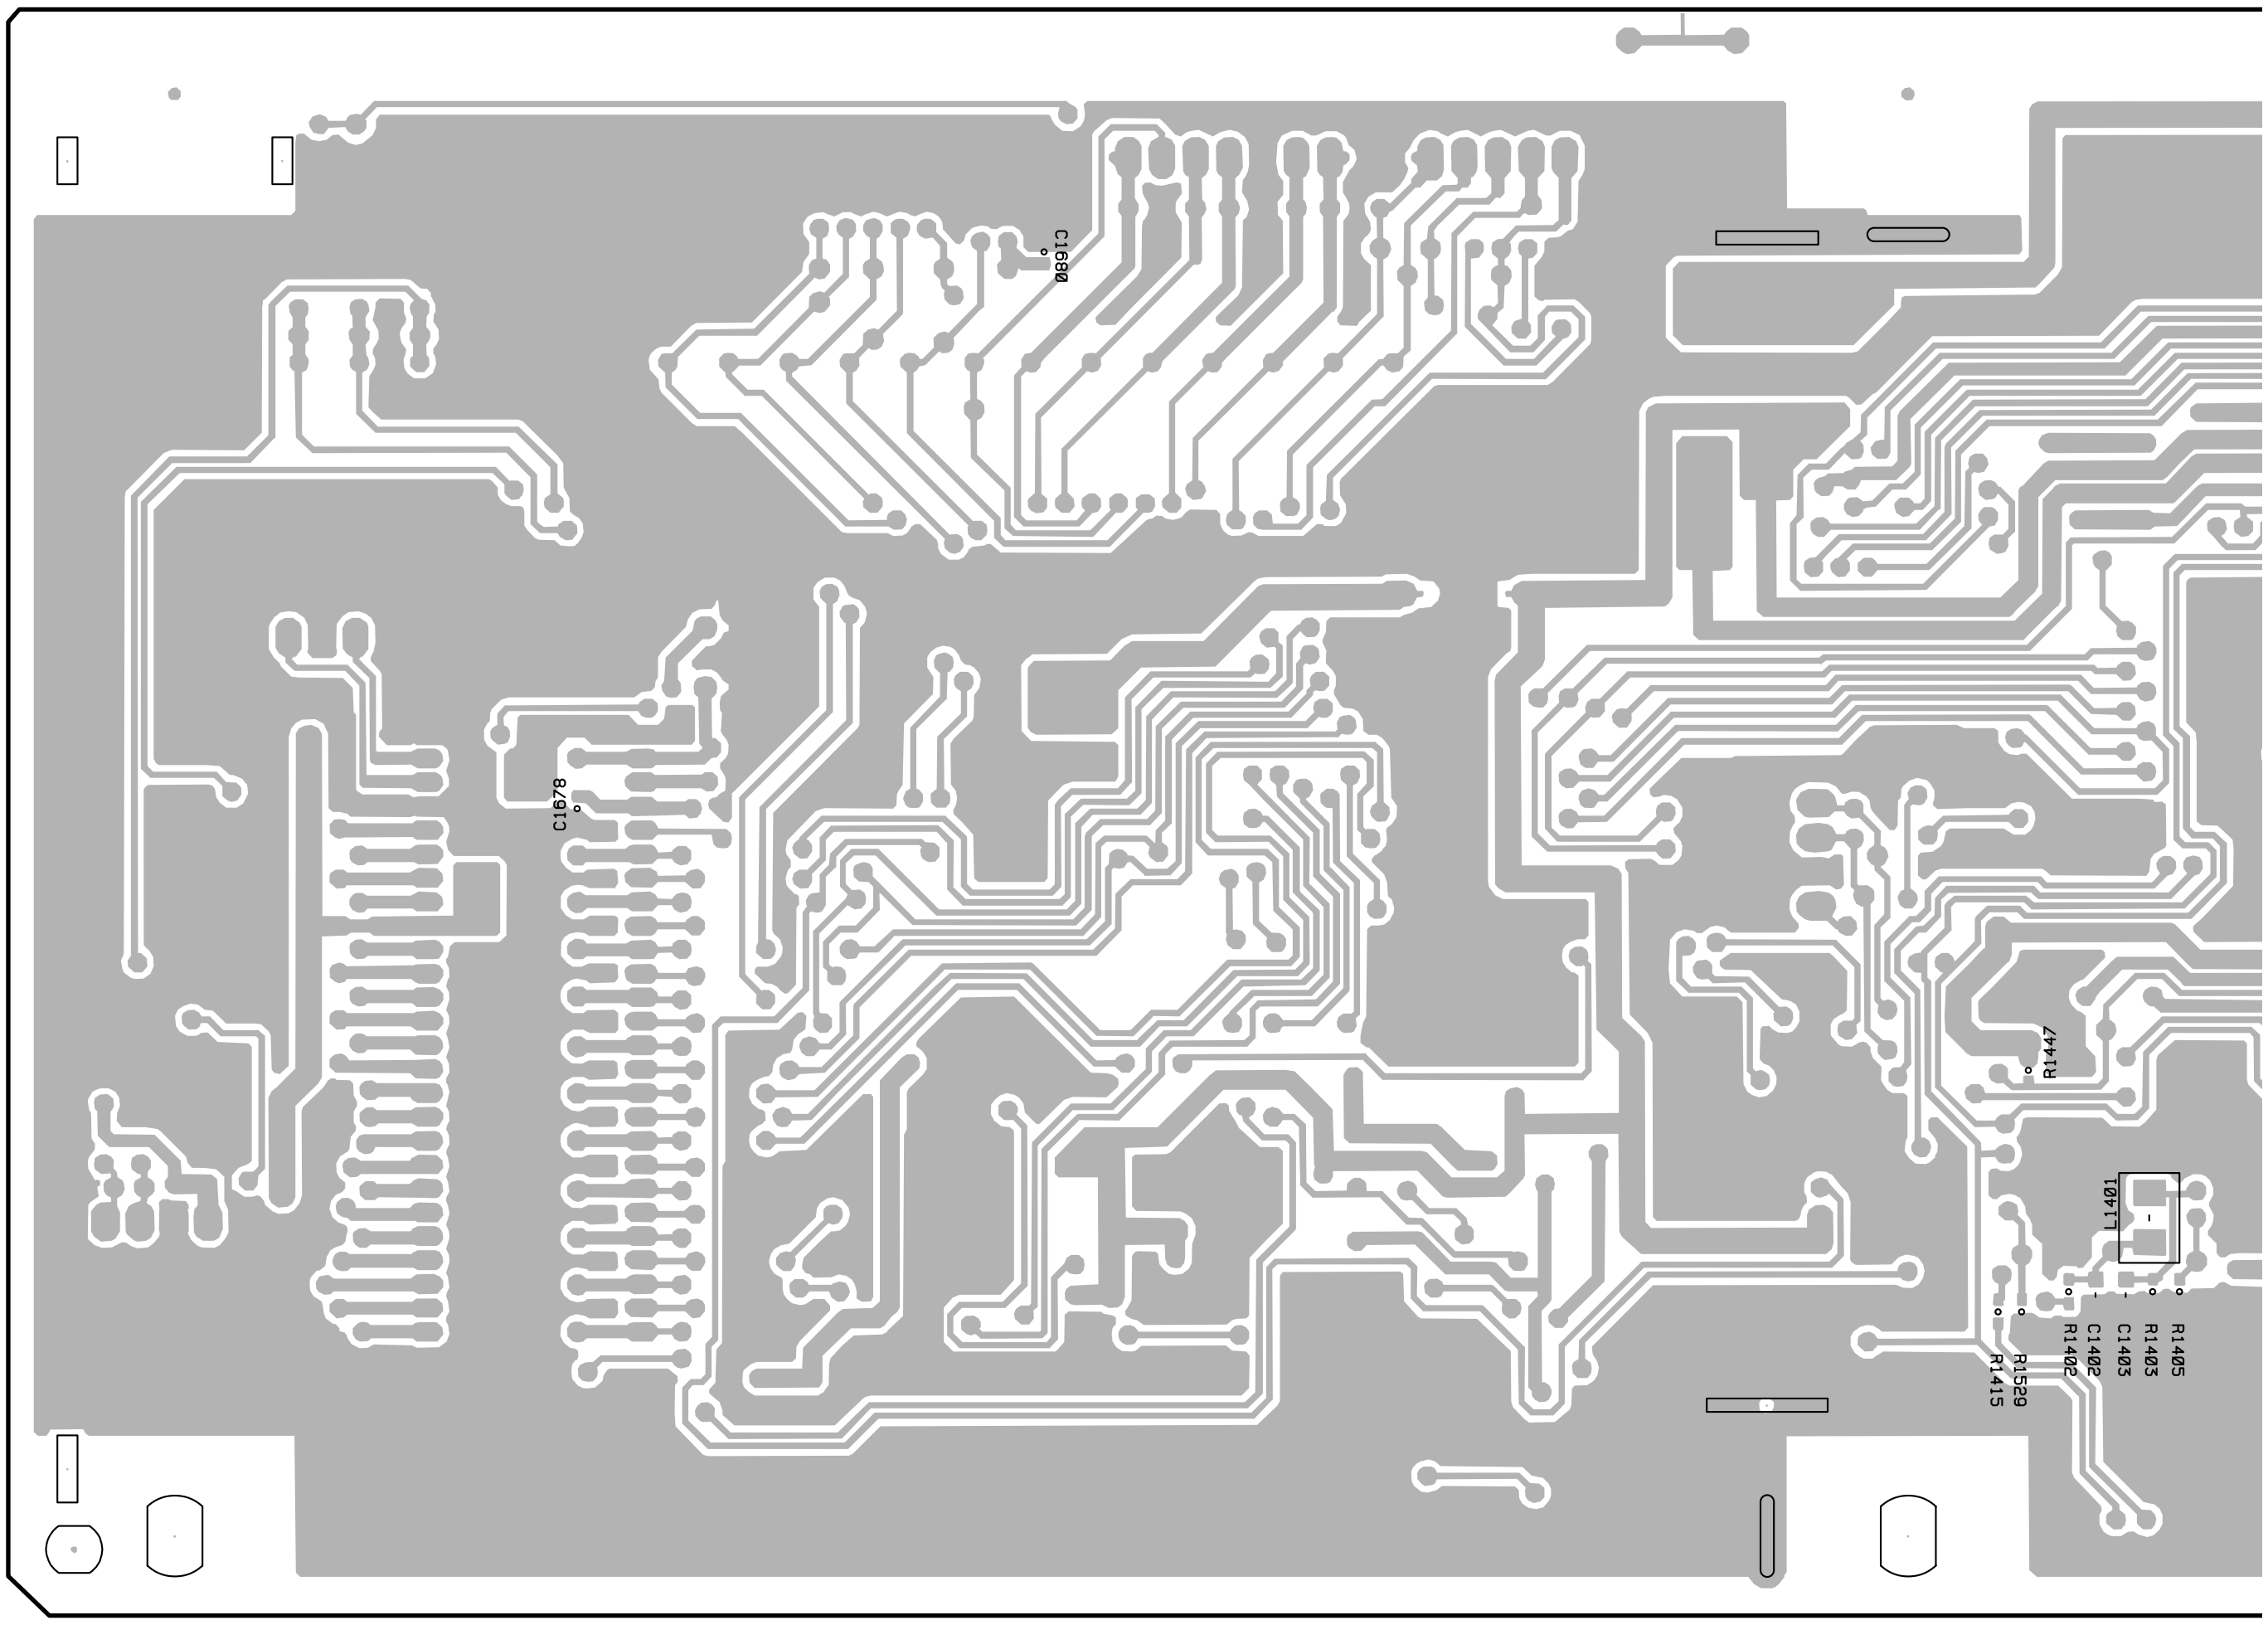
C1680
C1678
R1447
L1401
R1405
R1403
C1403
C1402
R1402
R1529
R1415

C

D

SIDE B

J
CONNECTOR ASSY

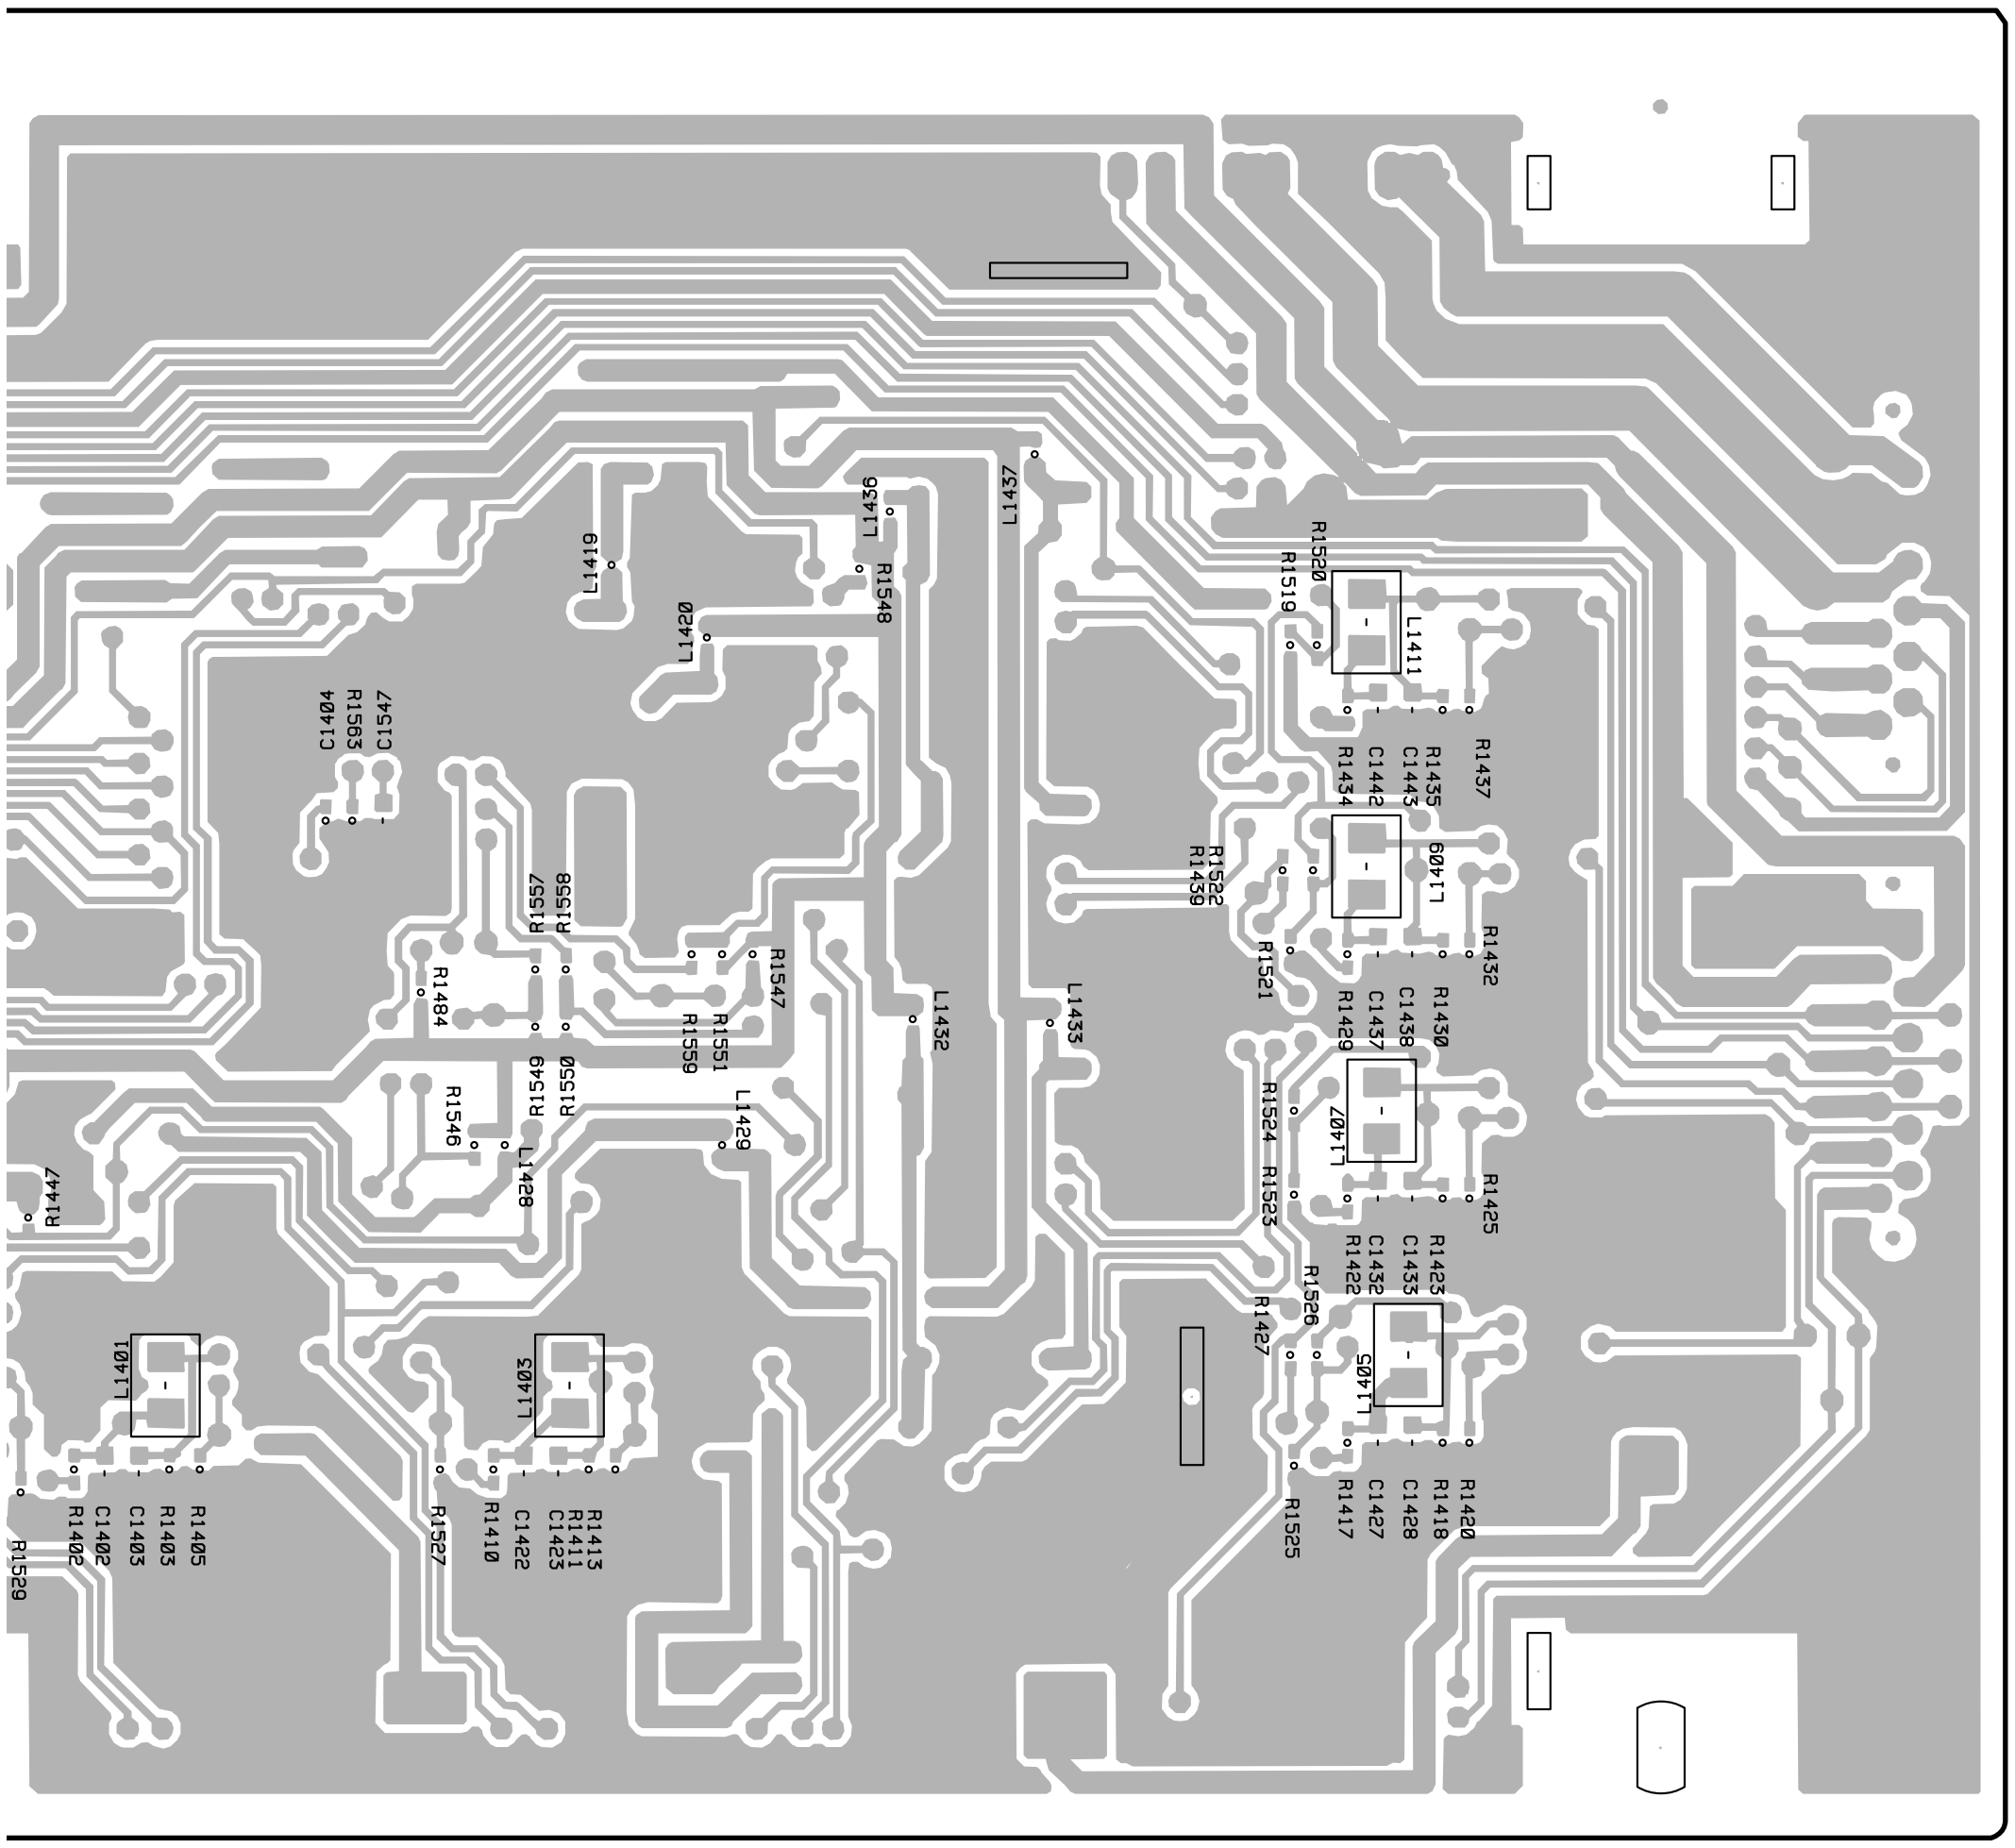
L1436
L1437
R1548
L1419
L1420
C1404
R1563
C1547
R1520
R1519
L1411
R1434
C1442
C1443
R1435
R1437
R1522
R1439
L1409
R1557
R1558
R1484
R1547
R1550
R1551
R1549
R1546
L1432
L1433
R1521
R1429
C1437
C1438
R1430
R1432
L1428
L1429
R1524
R1523
L1407
R1425
R1447
R1526
R1422
C1432
C1433
R1423
R1427
L1401
L1403
L1405
R1529
R1402
C1402
C1403
R1403
R1405
R1527
R1410
C1422
C1423
R1411
R1413
R1525
R1417
C1427
C1428
R1418
R1420

(ANP1945–B)

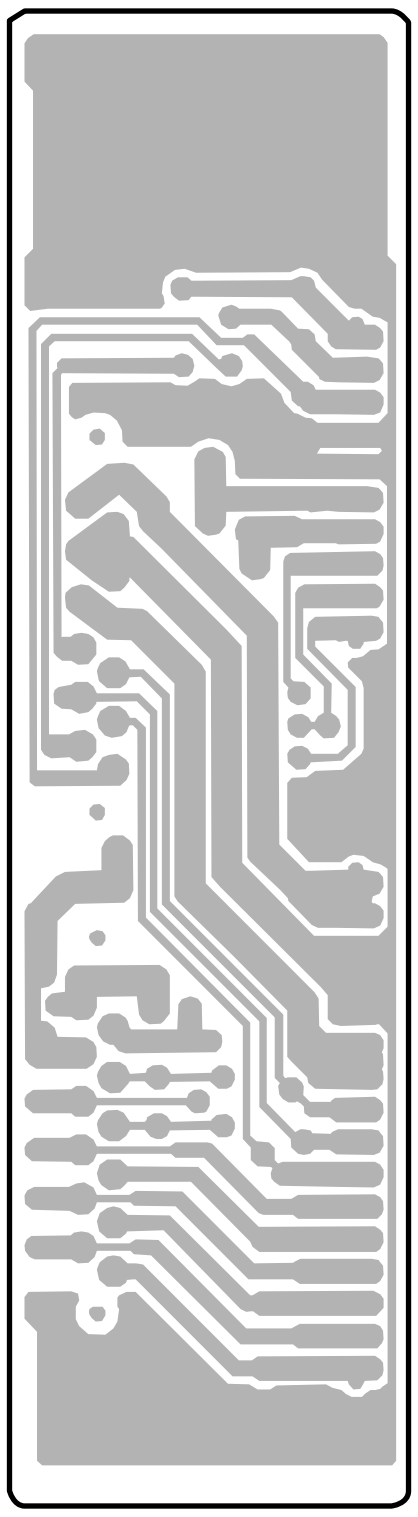

(ANP1945–B)

4.6 CONV. AMP ASSY

K CONV. AMP ASSY

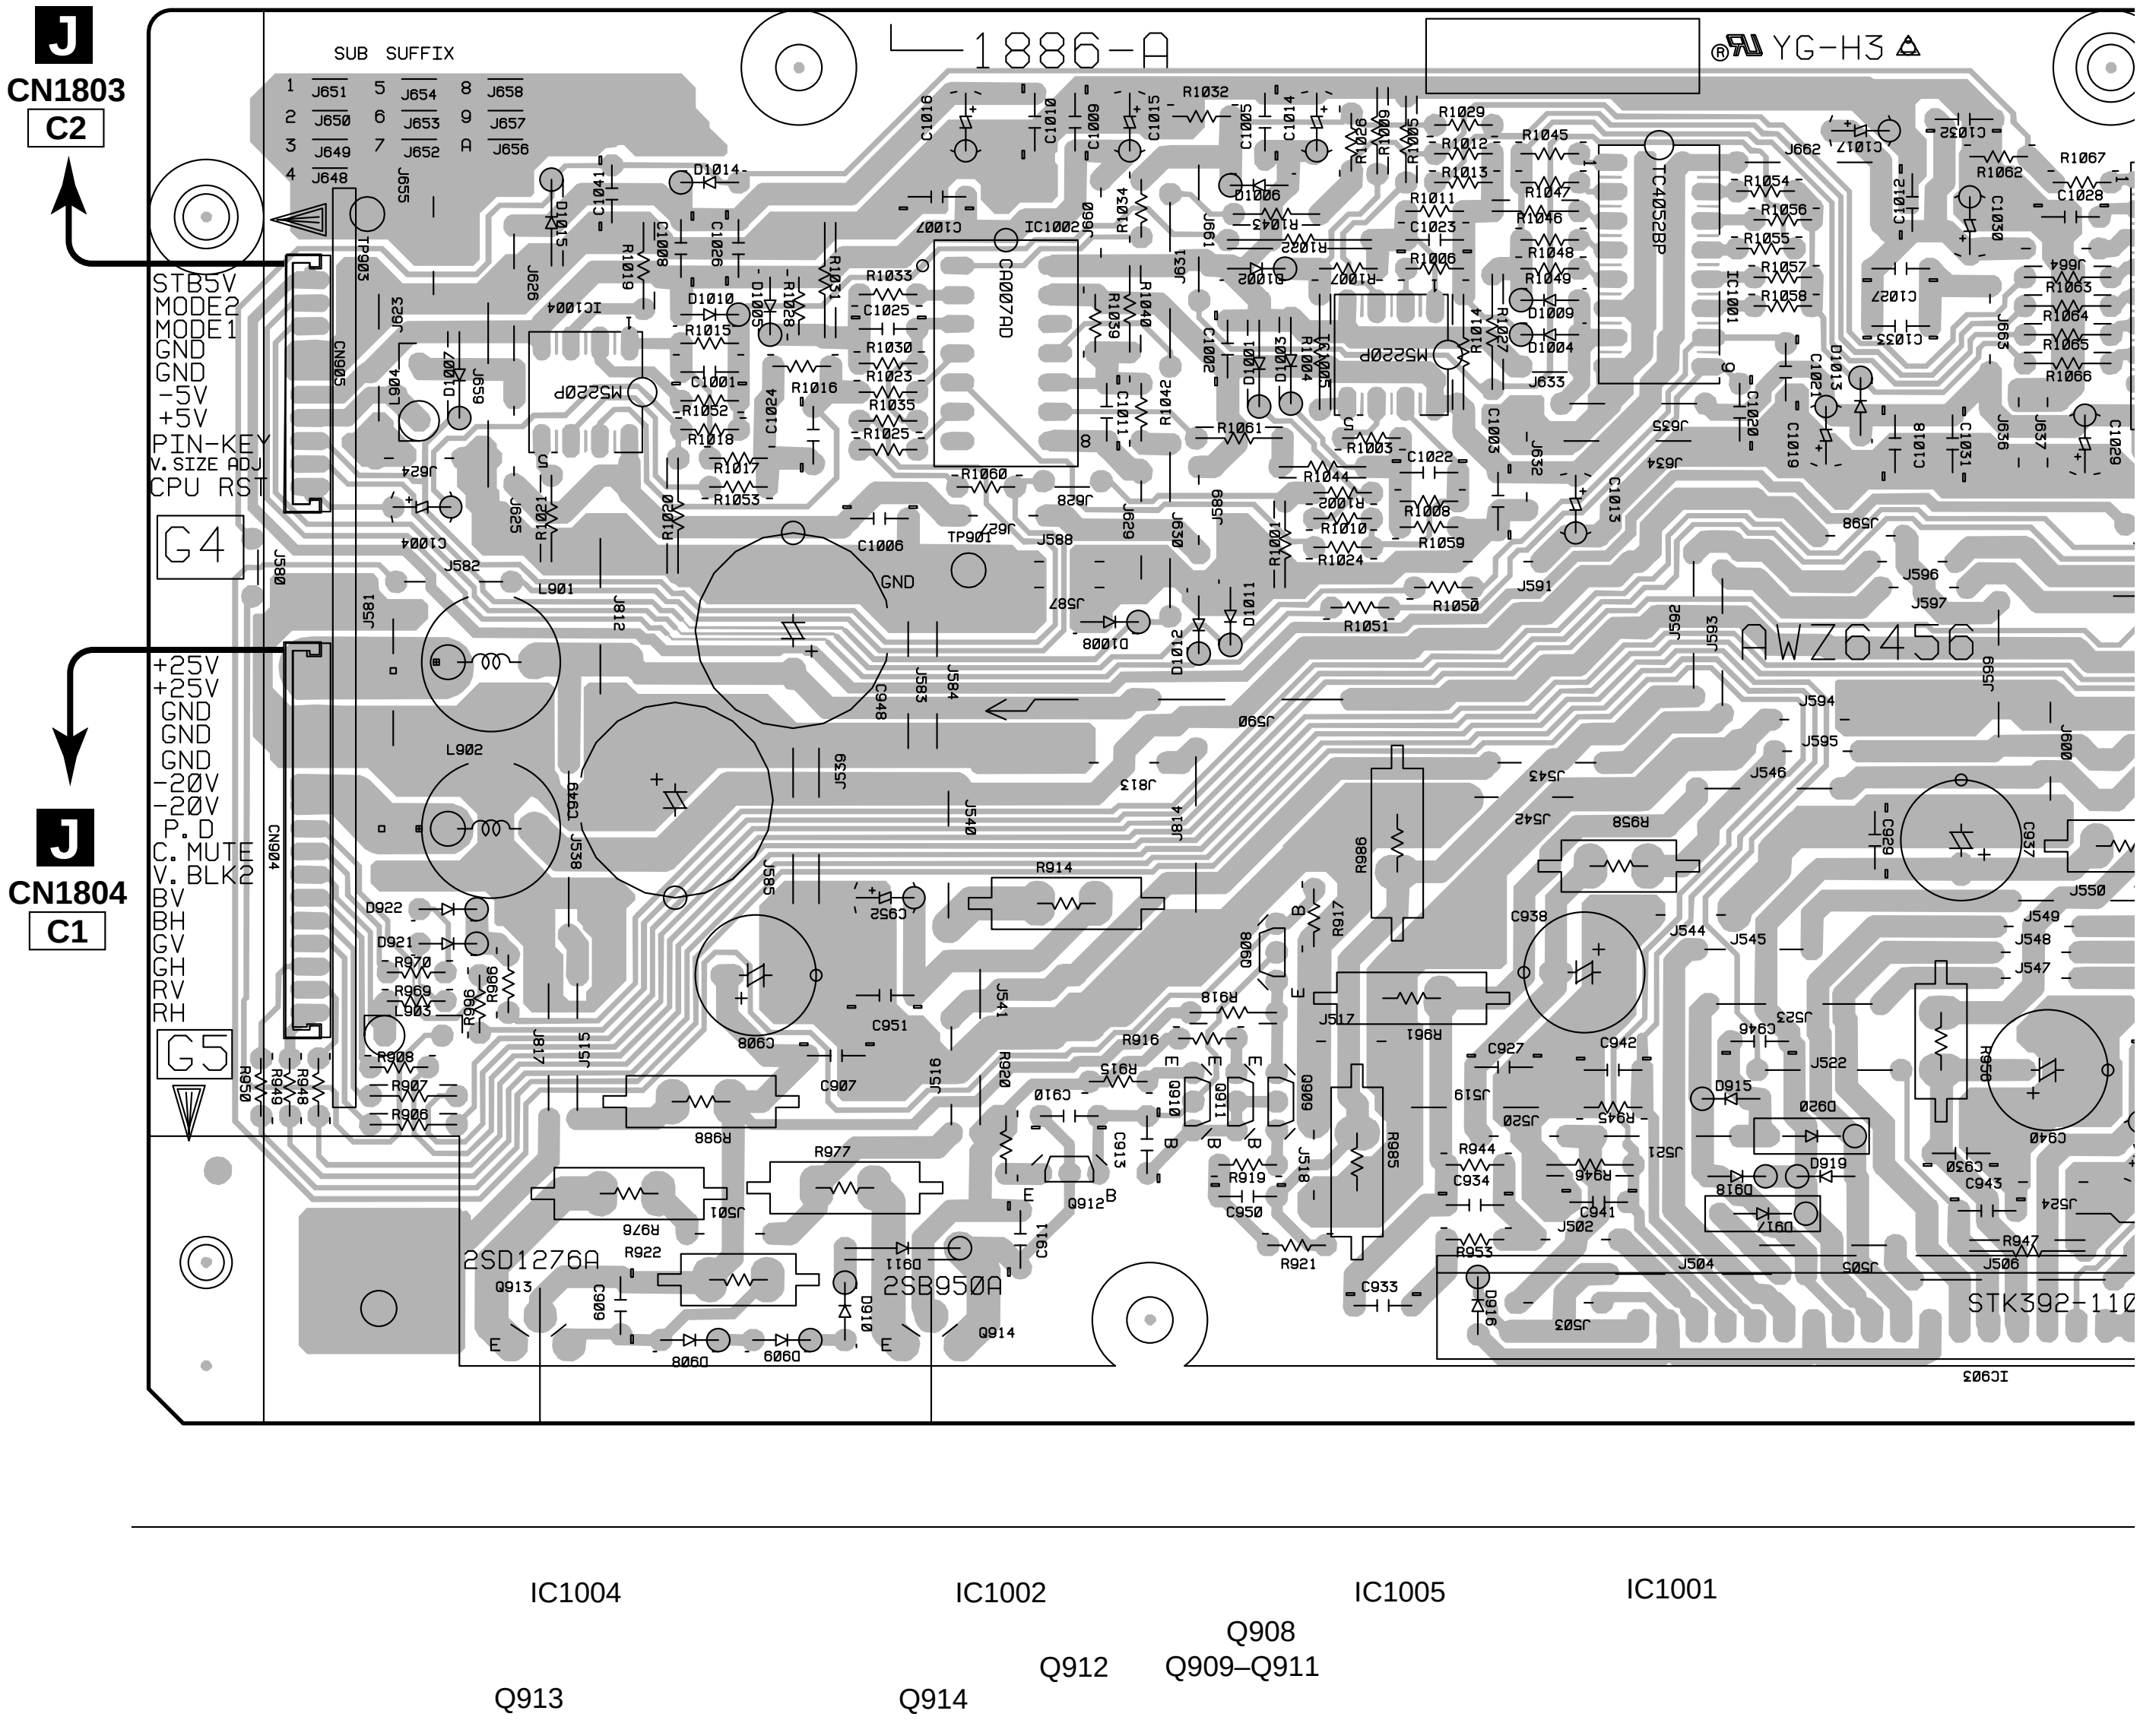
J
CN1803
C2
SUB SUFFIX
1 J651
2 J650
3 J649
4 J648
5 J654
6 J653
7 J652
8 J658
9 J657
A J656
1886-A
YG-H3
STB5V
MODE2
MODE1
GND
GND
-5V
+5V
PIN-KEY
V.SIZE ADJ
CPU RST
G4
CN905
+25V
+25V
GND
GND
GND
-20V
-20V
P.D
C.MUTE
V.BLK2
BV
BH
GV
GH
RV
RH
G5
CN904
J
CN1804
C1
M5220P
IC4052BP
AWZ6456
2SD1276A
Q913
2SB950A
Q914
Q912
STK392-110
IC903
IC1004
IC1002
IC1005
IC1001
Q908
Q912
Q909–Q911
Q913
Q914

SIDE A

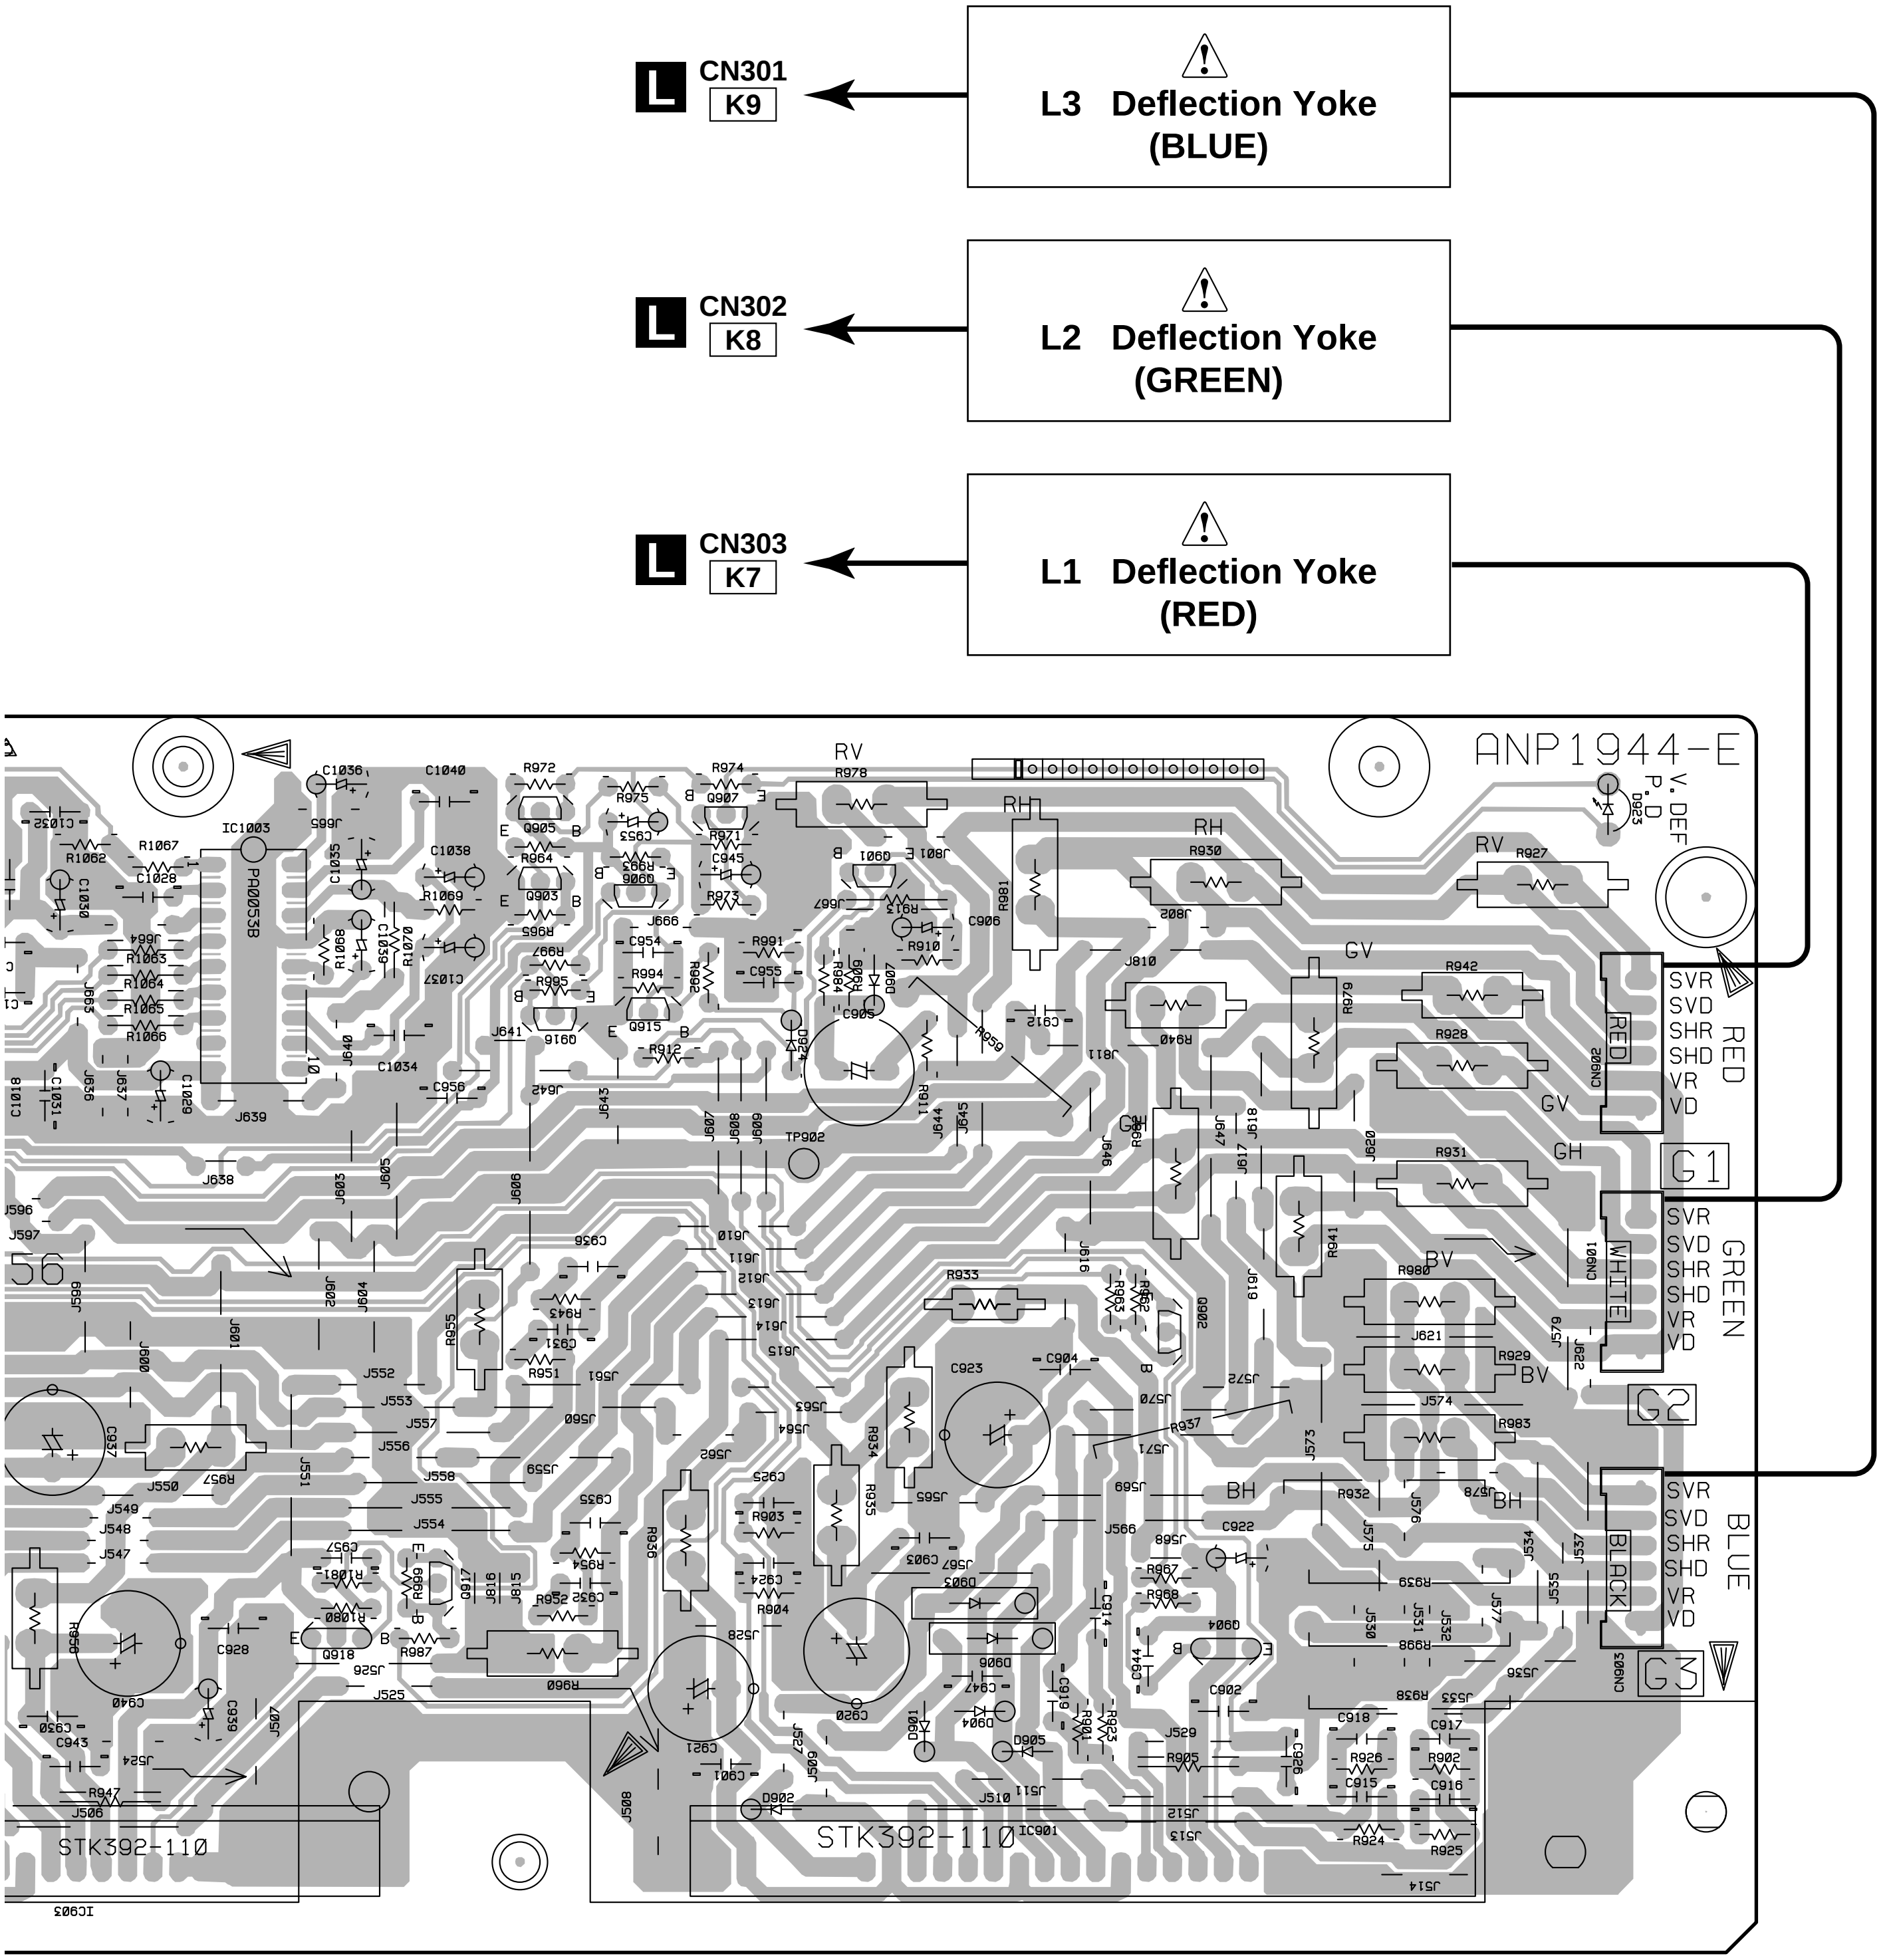
CN301
K9
L3 Deflection Yoke
(BLUE)
CN302
K8
L2 Deflection Yoke
(GREEN)
CN303
K7
L1 Deflection Yoke
(RED)
ANP1944-E
V. DEF
P.D
D923
RV
R978
RH
R930
R927
GV
R942
R940
R928
R931
GH
BV
R980
R929
R983
BH
R932
SVR
SVD
SHR
SHD
VR
VD
RED
CN902
G1
GREEN
WHITE
CN901
G2
BLUE
BLACK
CN903
G3
IC1003
PA0053B
Q903
Q905
Q906
Q907
Q901
Q916
Q915
Q902
Q904
Q918
Q917
TP902
C923
C920
C921
C940
C937
D902
D901
D904
D905
D906
STK392-110
IC901
IC903

(ANP1944–E)

Q903 Q905 Q906 Q907 Q901

IC1003 Q916 Q915

Q902

Q918 Q917 Q904

K CONV. AMP ASSY

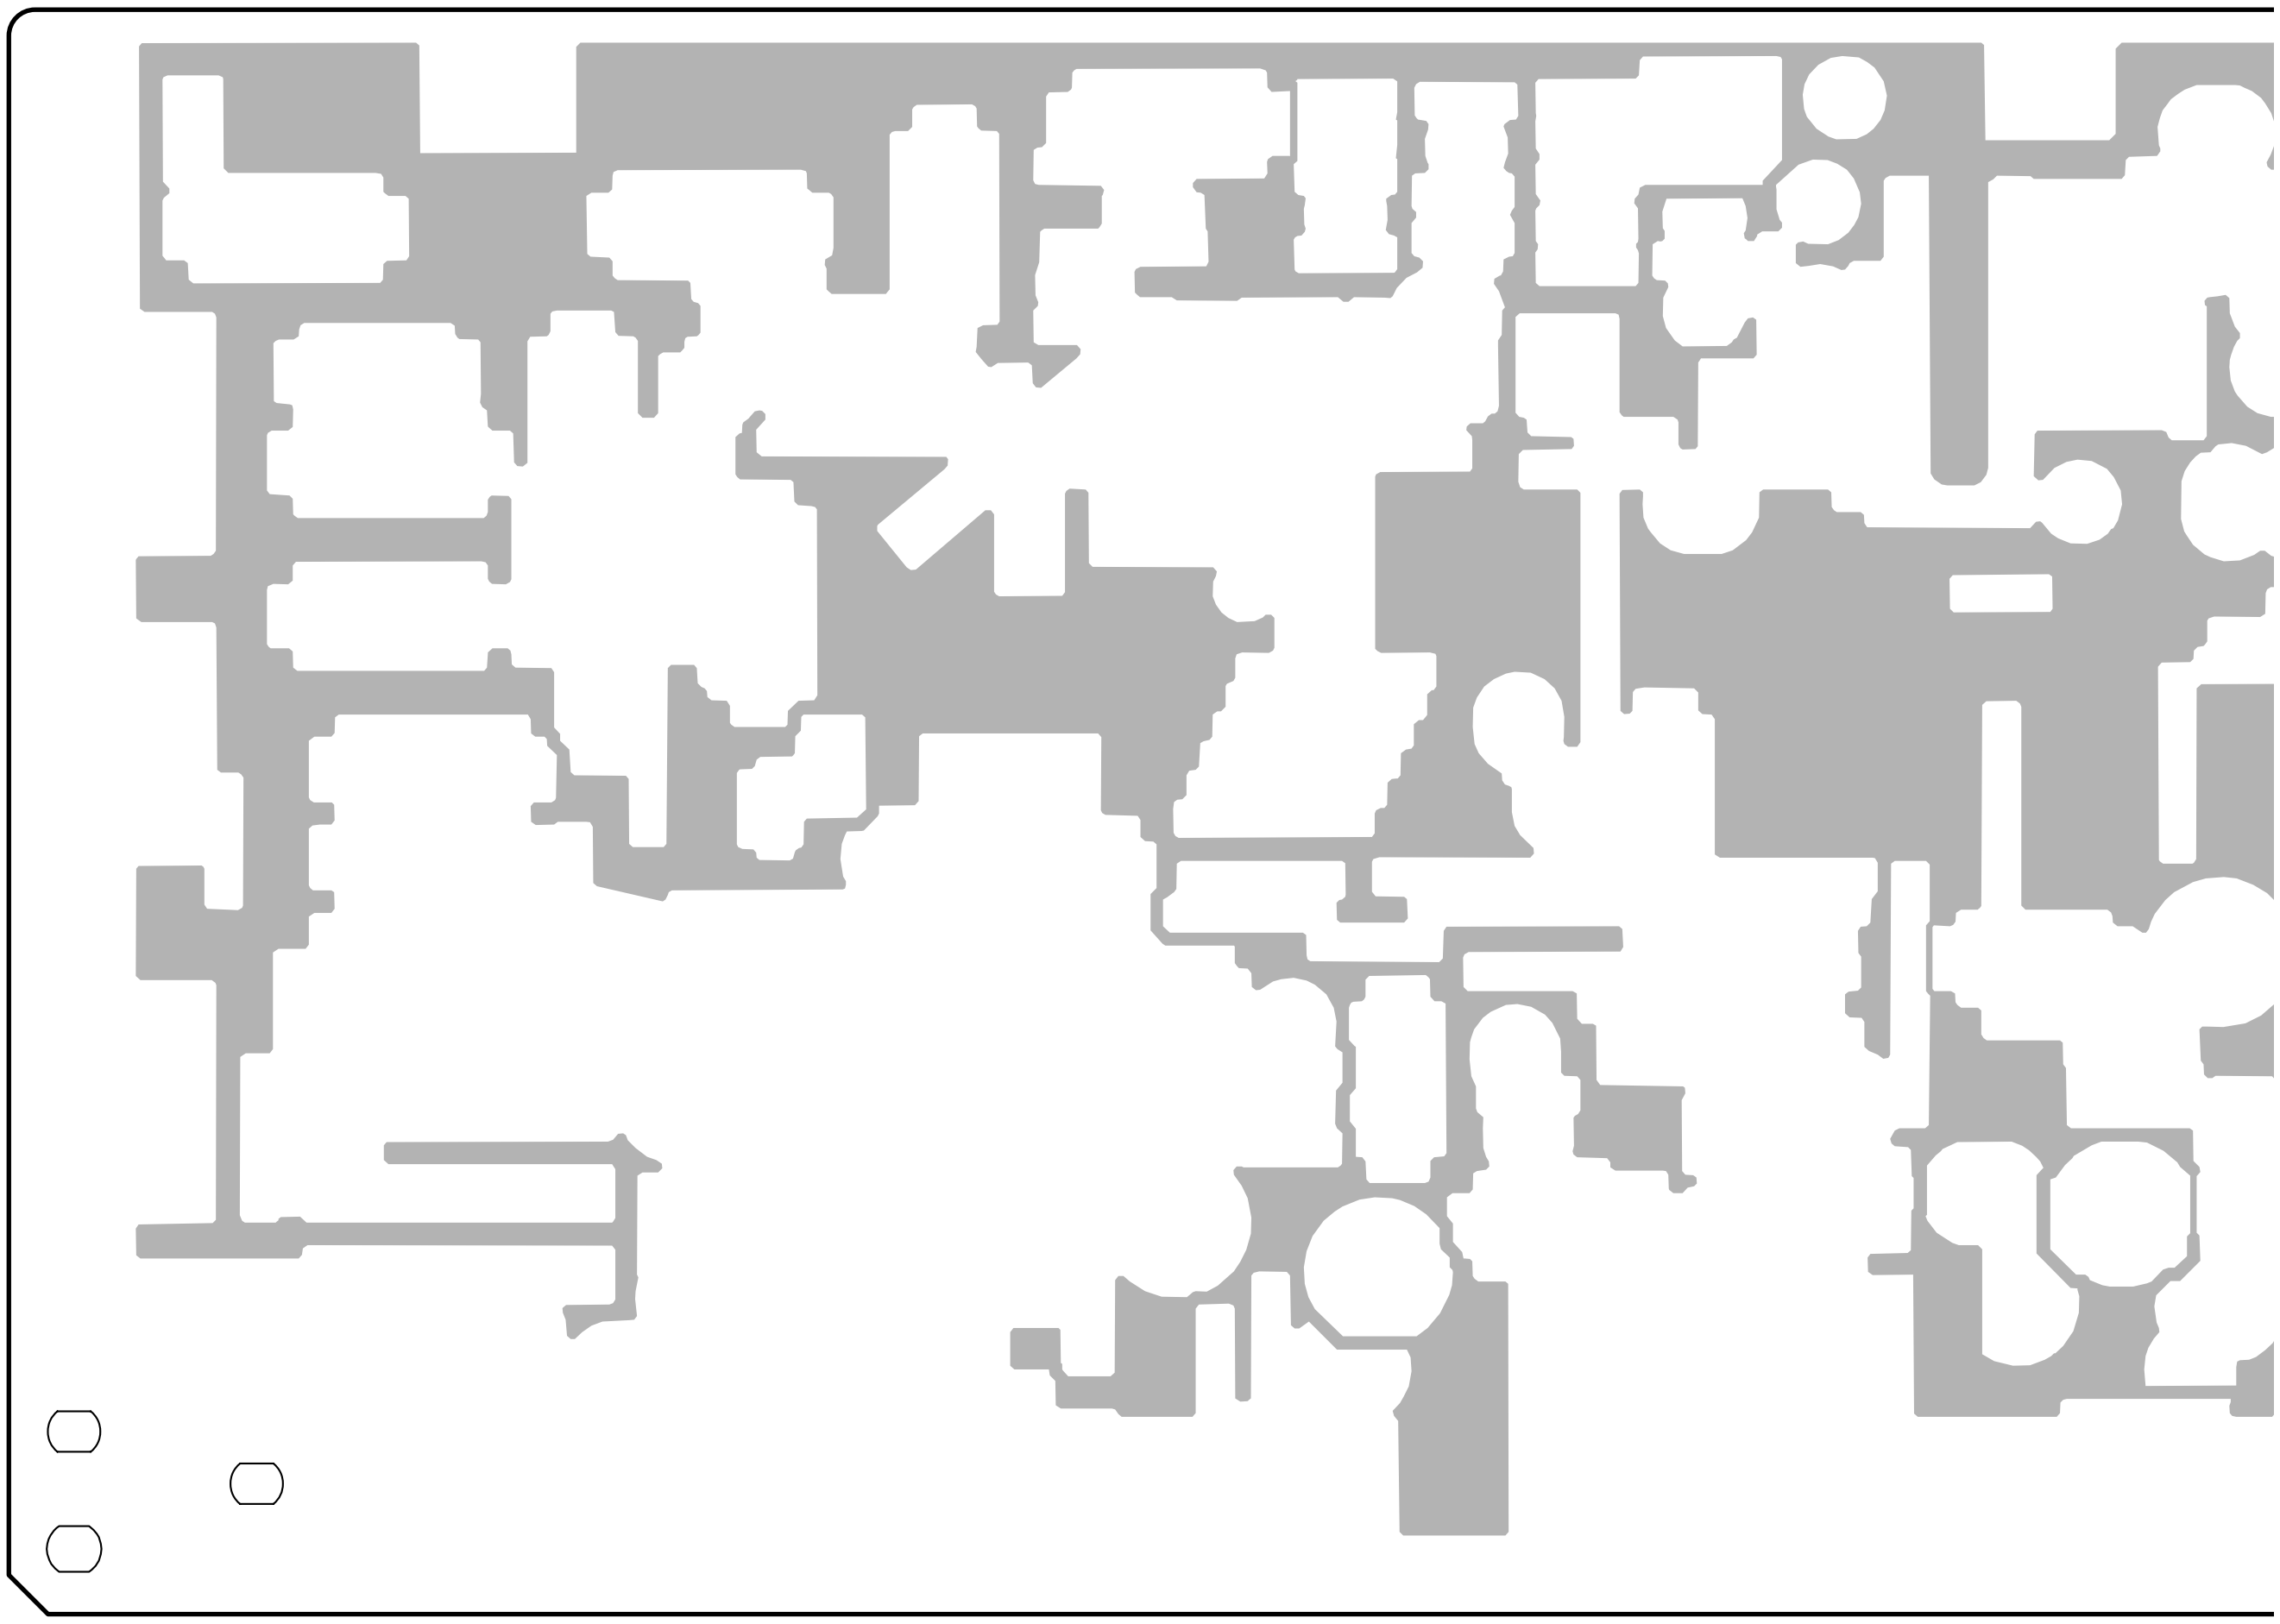

SIDE B

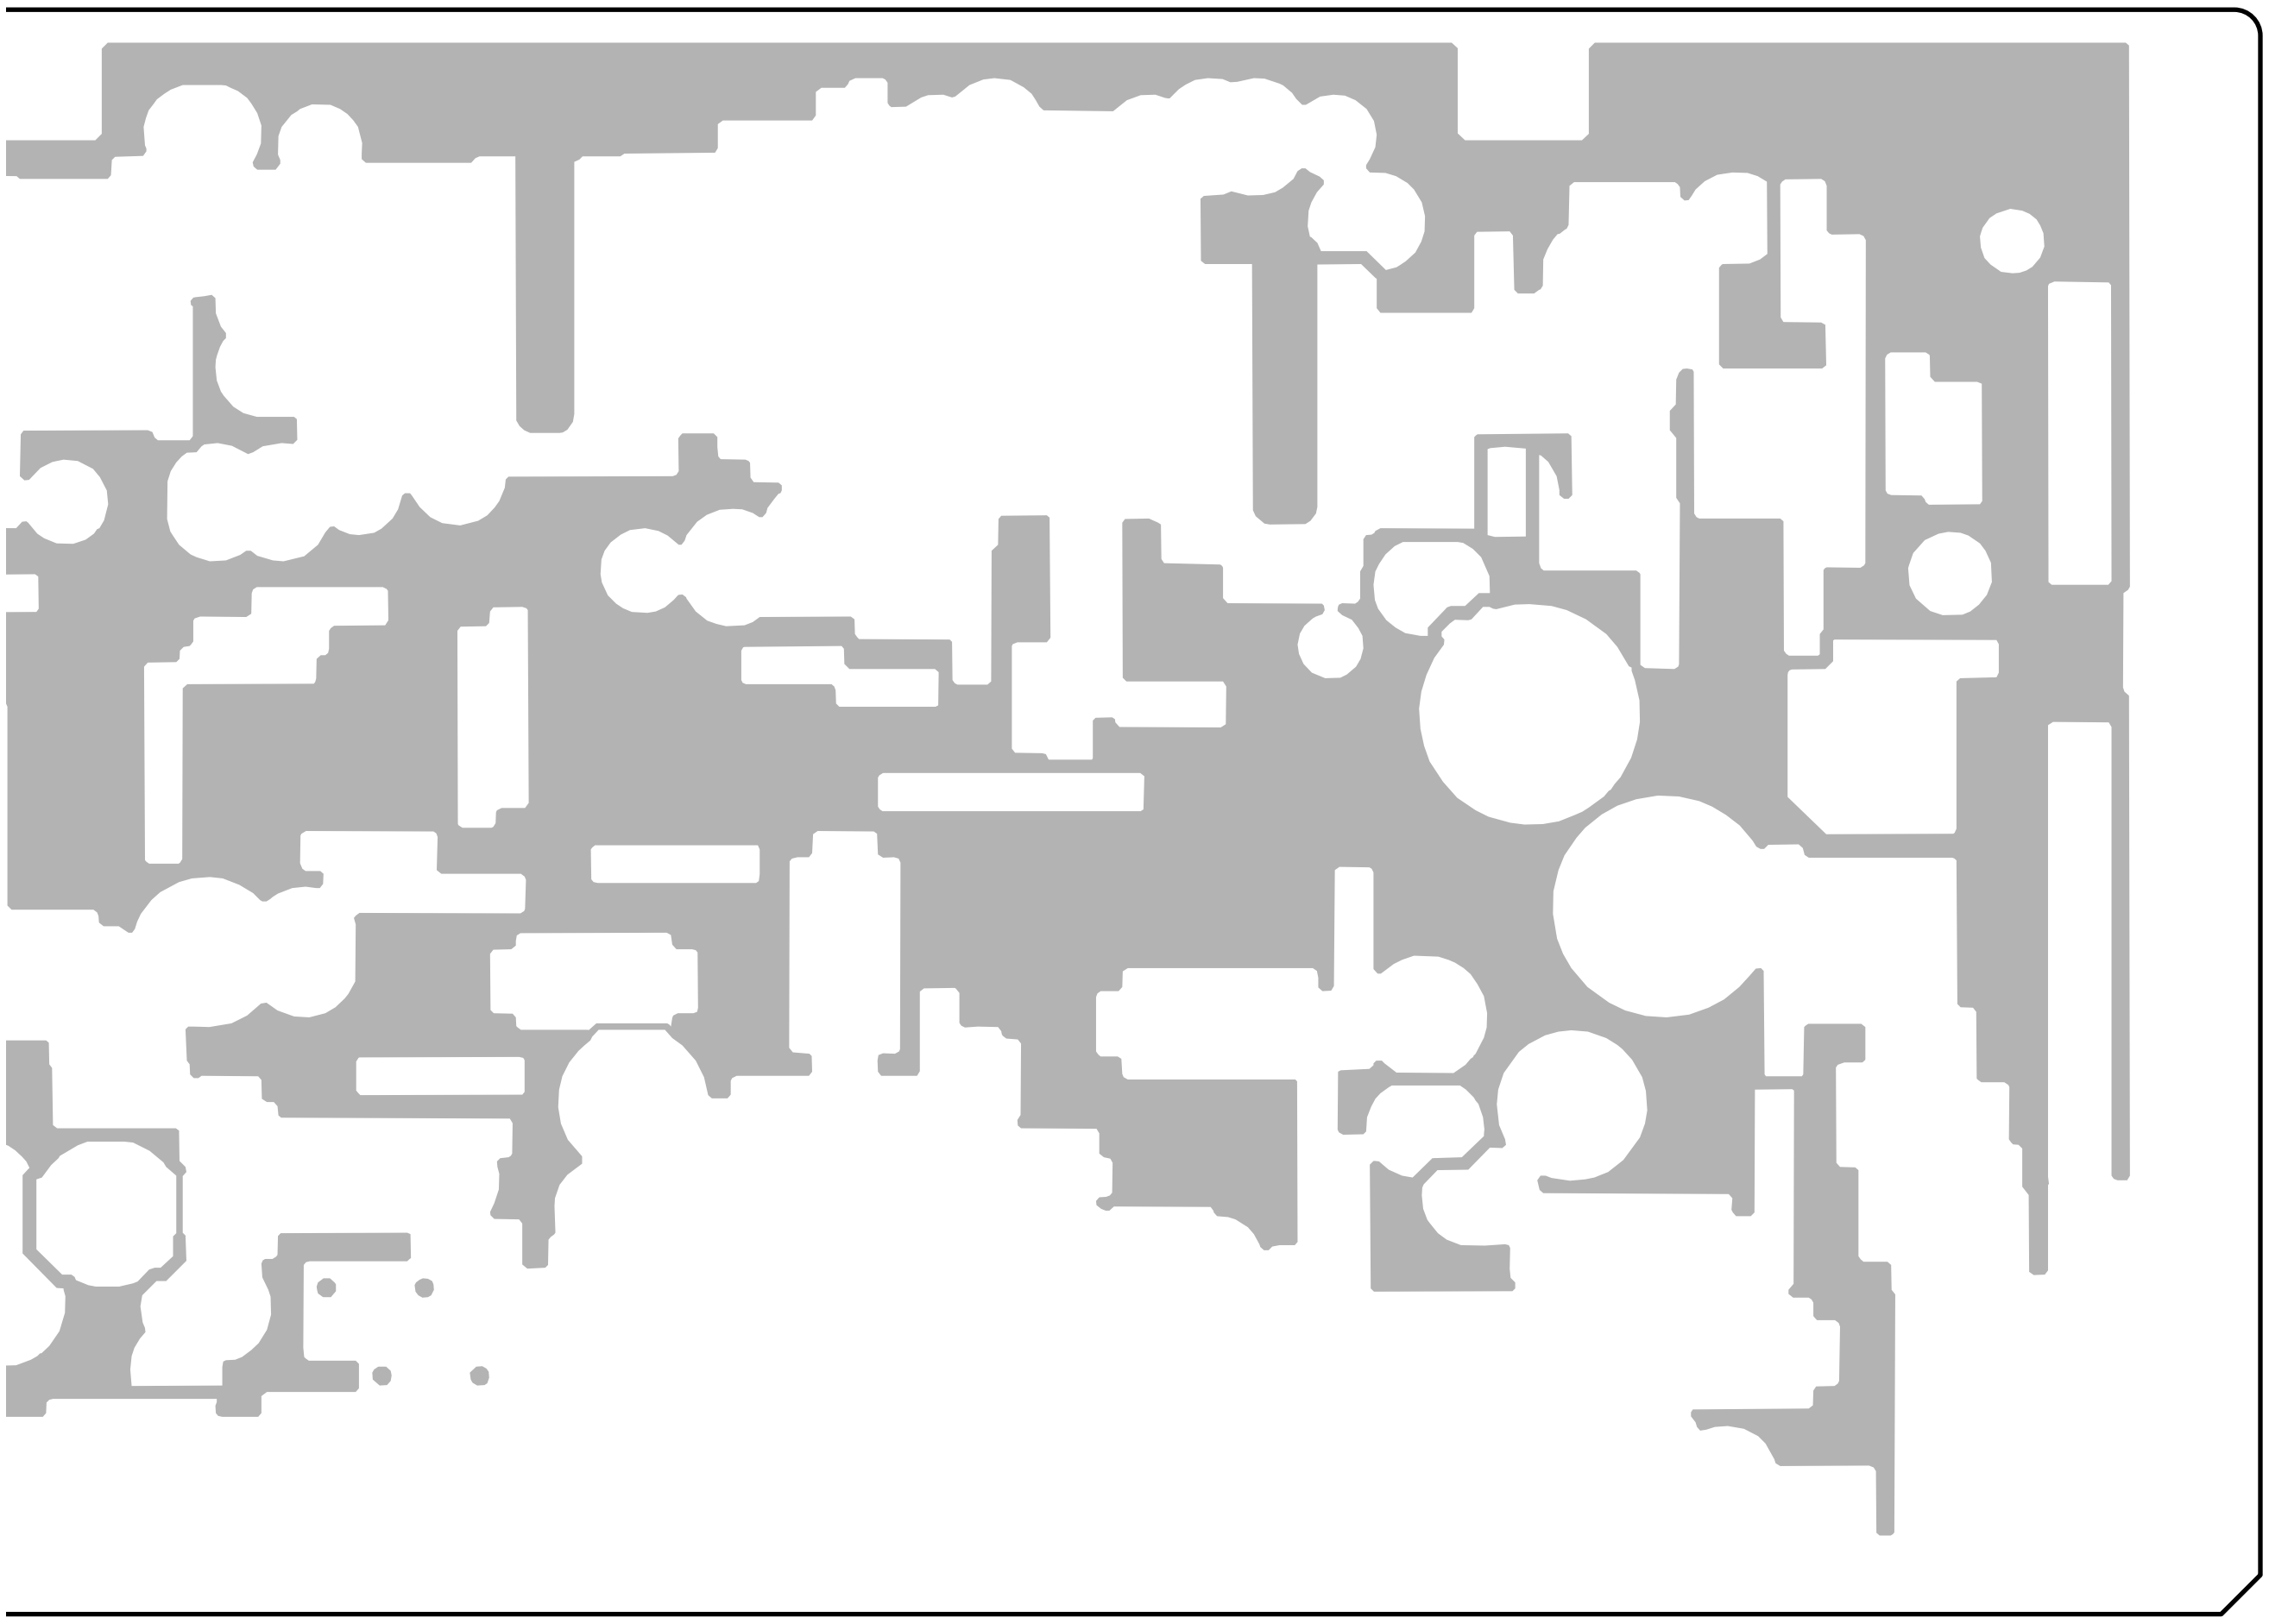

(ANP1944–E)

4.7 DEFLECTION SERVICE ASSY

L DEFLECTION SERVICE ASSY

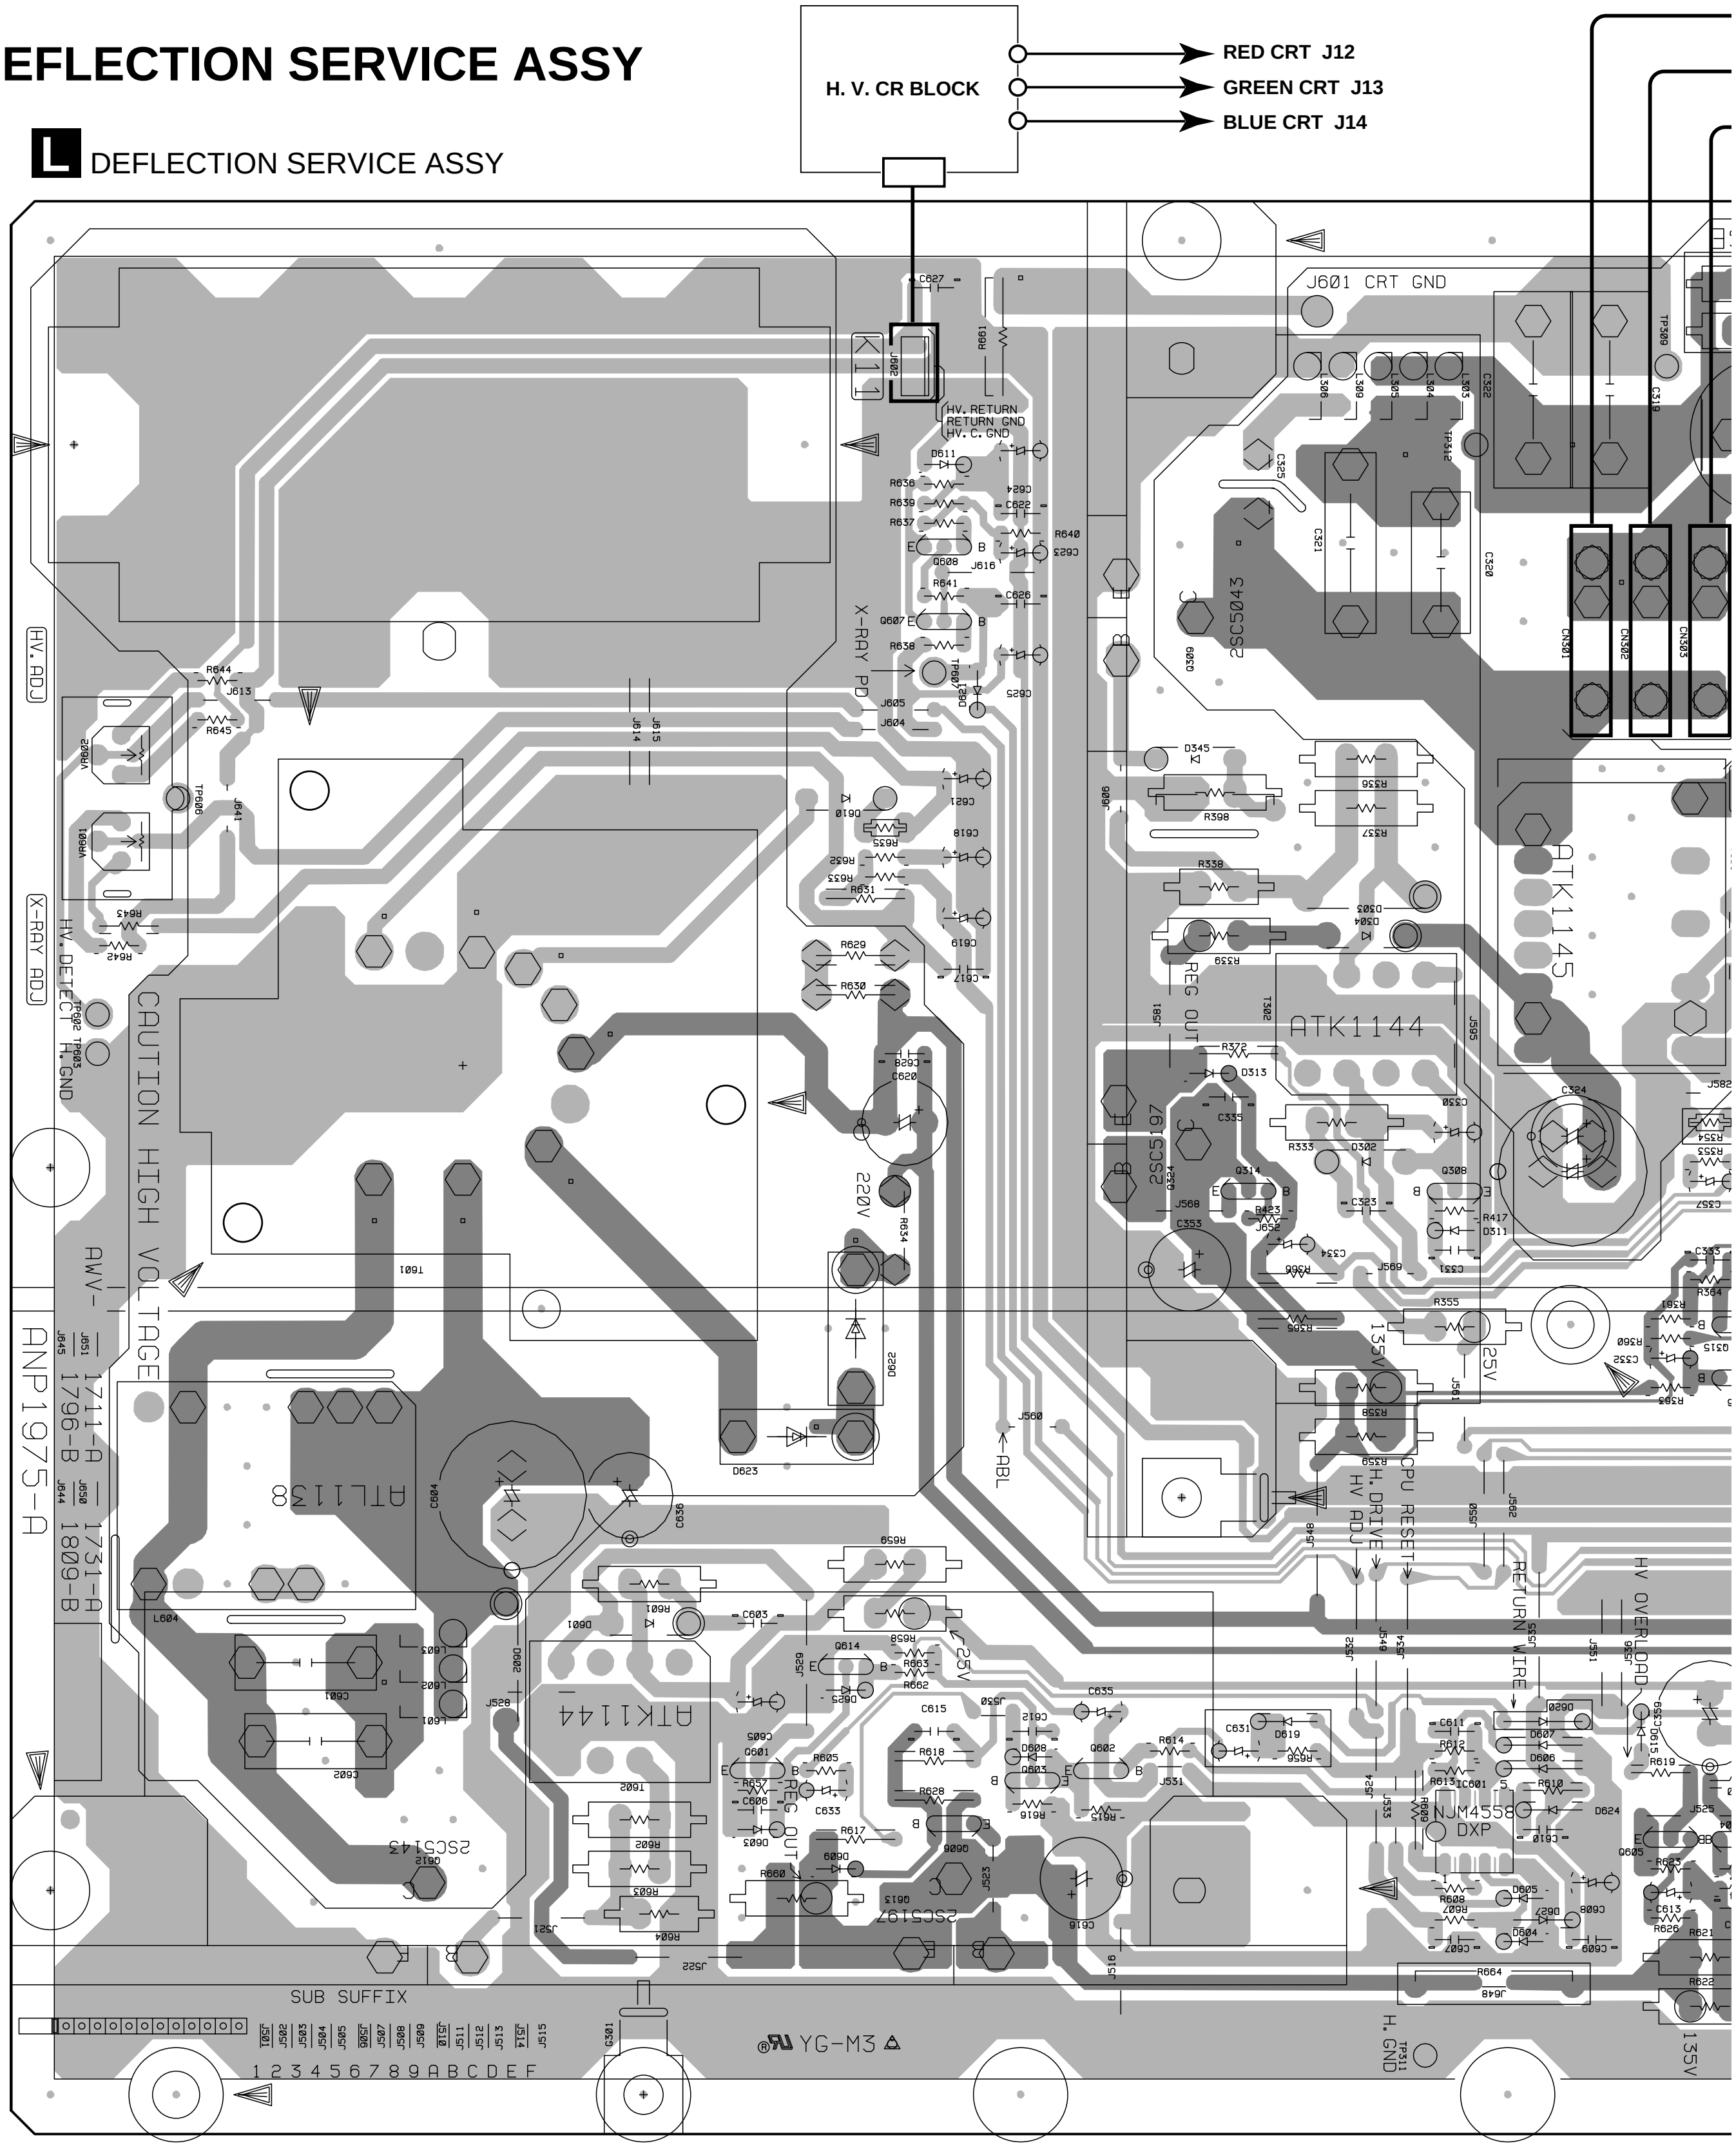
H. V. CR BLOCK
RED CRT J12
GREEN CRT J13
BLUE CRT J14
J601 CRT GND
HV. RETURN
RETURN GND
HV. C. GND
K11
X-RAY PD
HV. ADJ
X-RAY ADJ
HV. DETECT
H. GND
CAUTION HIGH VOLTAGE
AWV-
ANP1975-A
1711-A
1796-B
1731-A
1809-B
ATL1138
ATK1144
ATK1145
2SC5043
2SC5197
2SC5143
REG OUT
220V
135V
25V
ABL
CPU RESET
H. DRIVE
HV ADJ
RETURN WIRE
HV OVERLOAD
NJM4558
DXP
SUB SUFFIX
1 2 3 4 5 6 7 8 9 A B C D E F
YG-M3
H. GND
135V

▨ : mark shows a high voltage generation point.

VR601 VR602

Q607 Q608 Q309

Q324 Q314 Q308

Q601 Q614

Q606 Q603 Q602 IC601 Q605

Q613

Q612

SIDE A

L-b

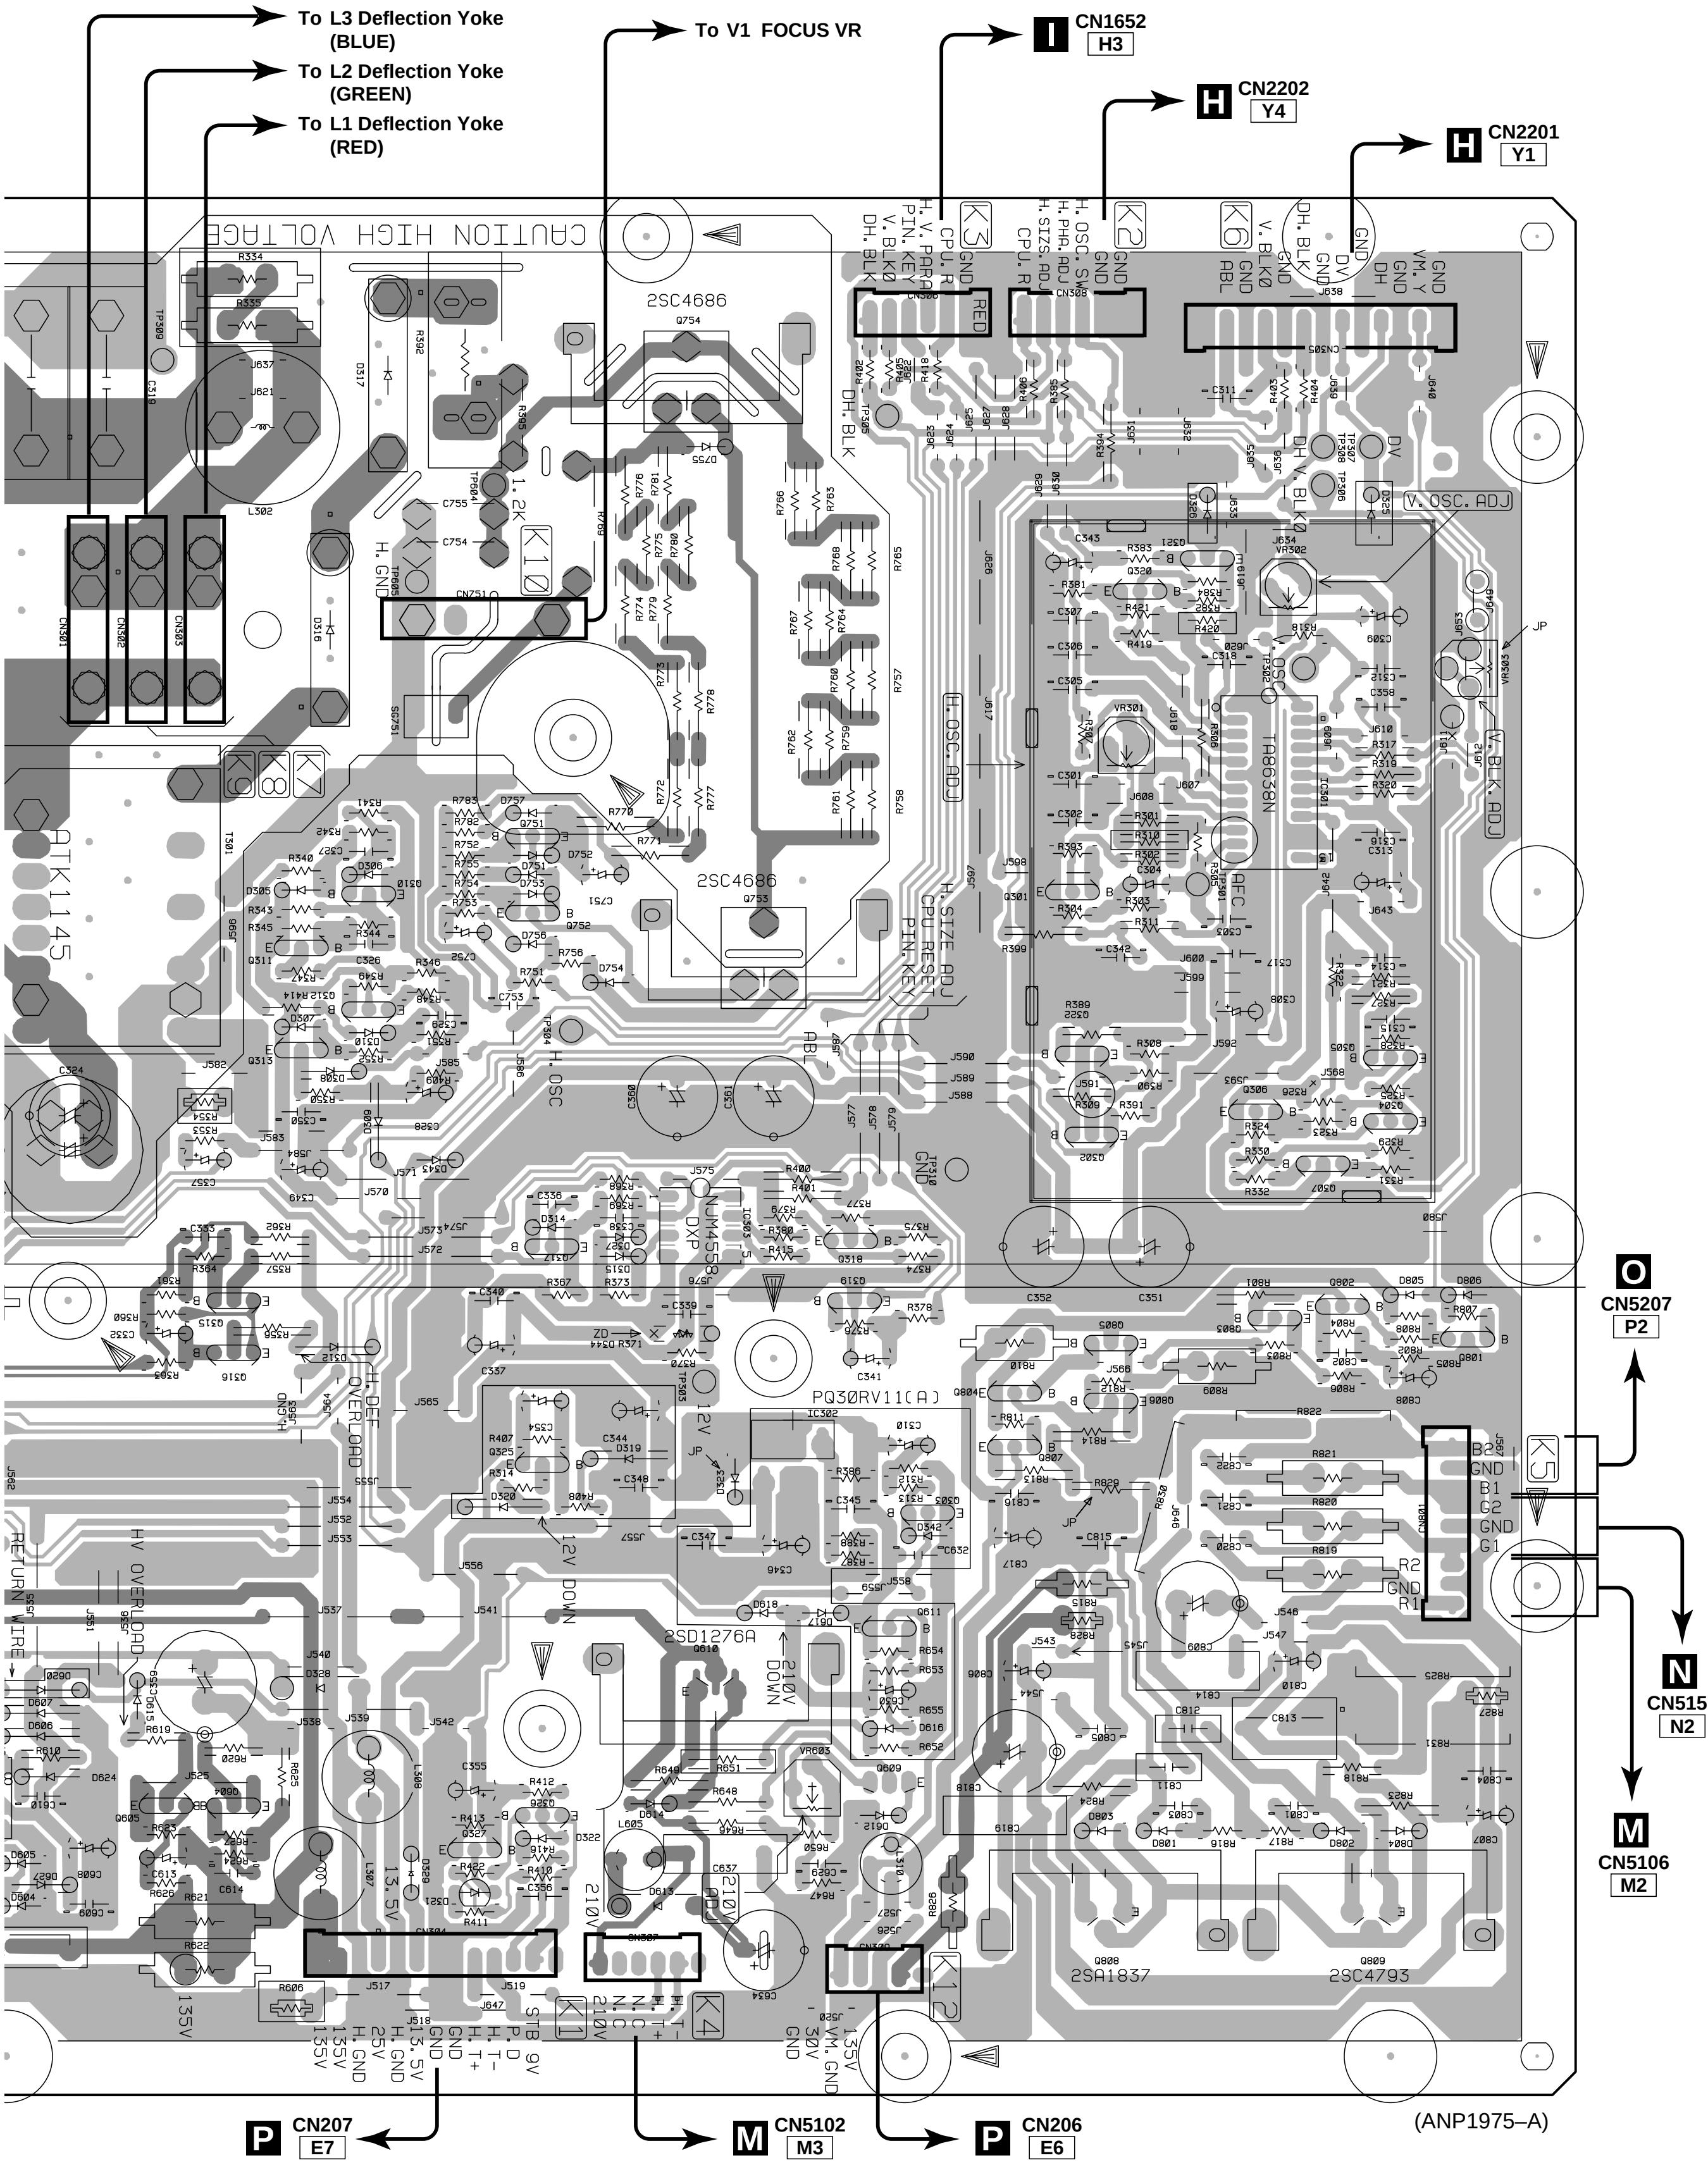

To L3 Deflection Yoke (BLUE)
To L2 Deflection Yoke (GREEN)
To L1 Deflection Yoke (RED)
To V1 FOCUS VR
I CN1652 H3
H CN2202 Y4
H CN2201 Y1
O CN5207 P2
N CN5157 N2
M CN5106 M2
P CN207 E7
M CN5102 M3
P CN206 E6
CAUTION HIGH VOLTAGE
2SC4686
K3 GND CPU.R H.V.PARA PIN.KEY V.BLK0 DH.BLK
K2 GND GND H.OSC.SW H.PHA.ADJ H.SIZS.ADJ CPU.R
K6 GND ABL GND V.BLK0 DH.BLK GND DV GND VM.Y DH GND
V.OSC.ADJ
H.OSC.ADJ
TA8638N
AFC
V.BLK.ADJ
H.SIZE ADJ CPU RESET PIN.KEY
DH.BLK
H.OSC
ABL
H.GND
K10
ATK1145
K6 K8 K7
NJM4558 DXP
PQ30RV11(A)
12V
12V DOWN
210V DOWN
210V ADJ
2SD1276A
H.DEF OVERLOAD
HV OVERLOAD
RETURN WIRE
13.5V
135V
K5 B2 GND B1 G2 GND G1 R2 GND R1
2SA1837
2SC4793
K1 STB 9V P.D H.T- H.T+ GND 13.5V H.GND 25V H.GND 135V 135V
K4 H.T- H.T+ N.C N.C 210V
K12 135V VM.GND 30V GND
(ANP1975–A)

VR603 VR301 VR302 VR303

Q754

Q320 Q321

Q311 Q310 Q751 Q752 Q753 Q301 IC301

Q313 Q312 Q317 IC305 Q318 Q302 Q322 Q306 Q307 Q304 Q305

Q325 Q319

Q315 Q316 IC302 Q303 Q804–Q807 Q801–Q803

Q605 Q604 Q610 Q811

Q327 Q326 Q808 Q809

L DEFLECTION SERVICE ASSY

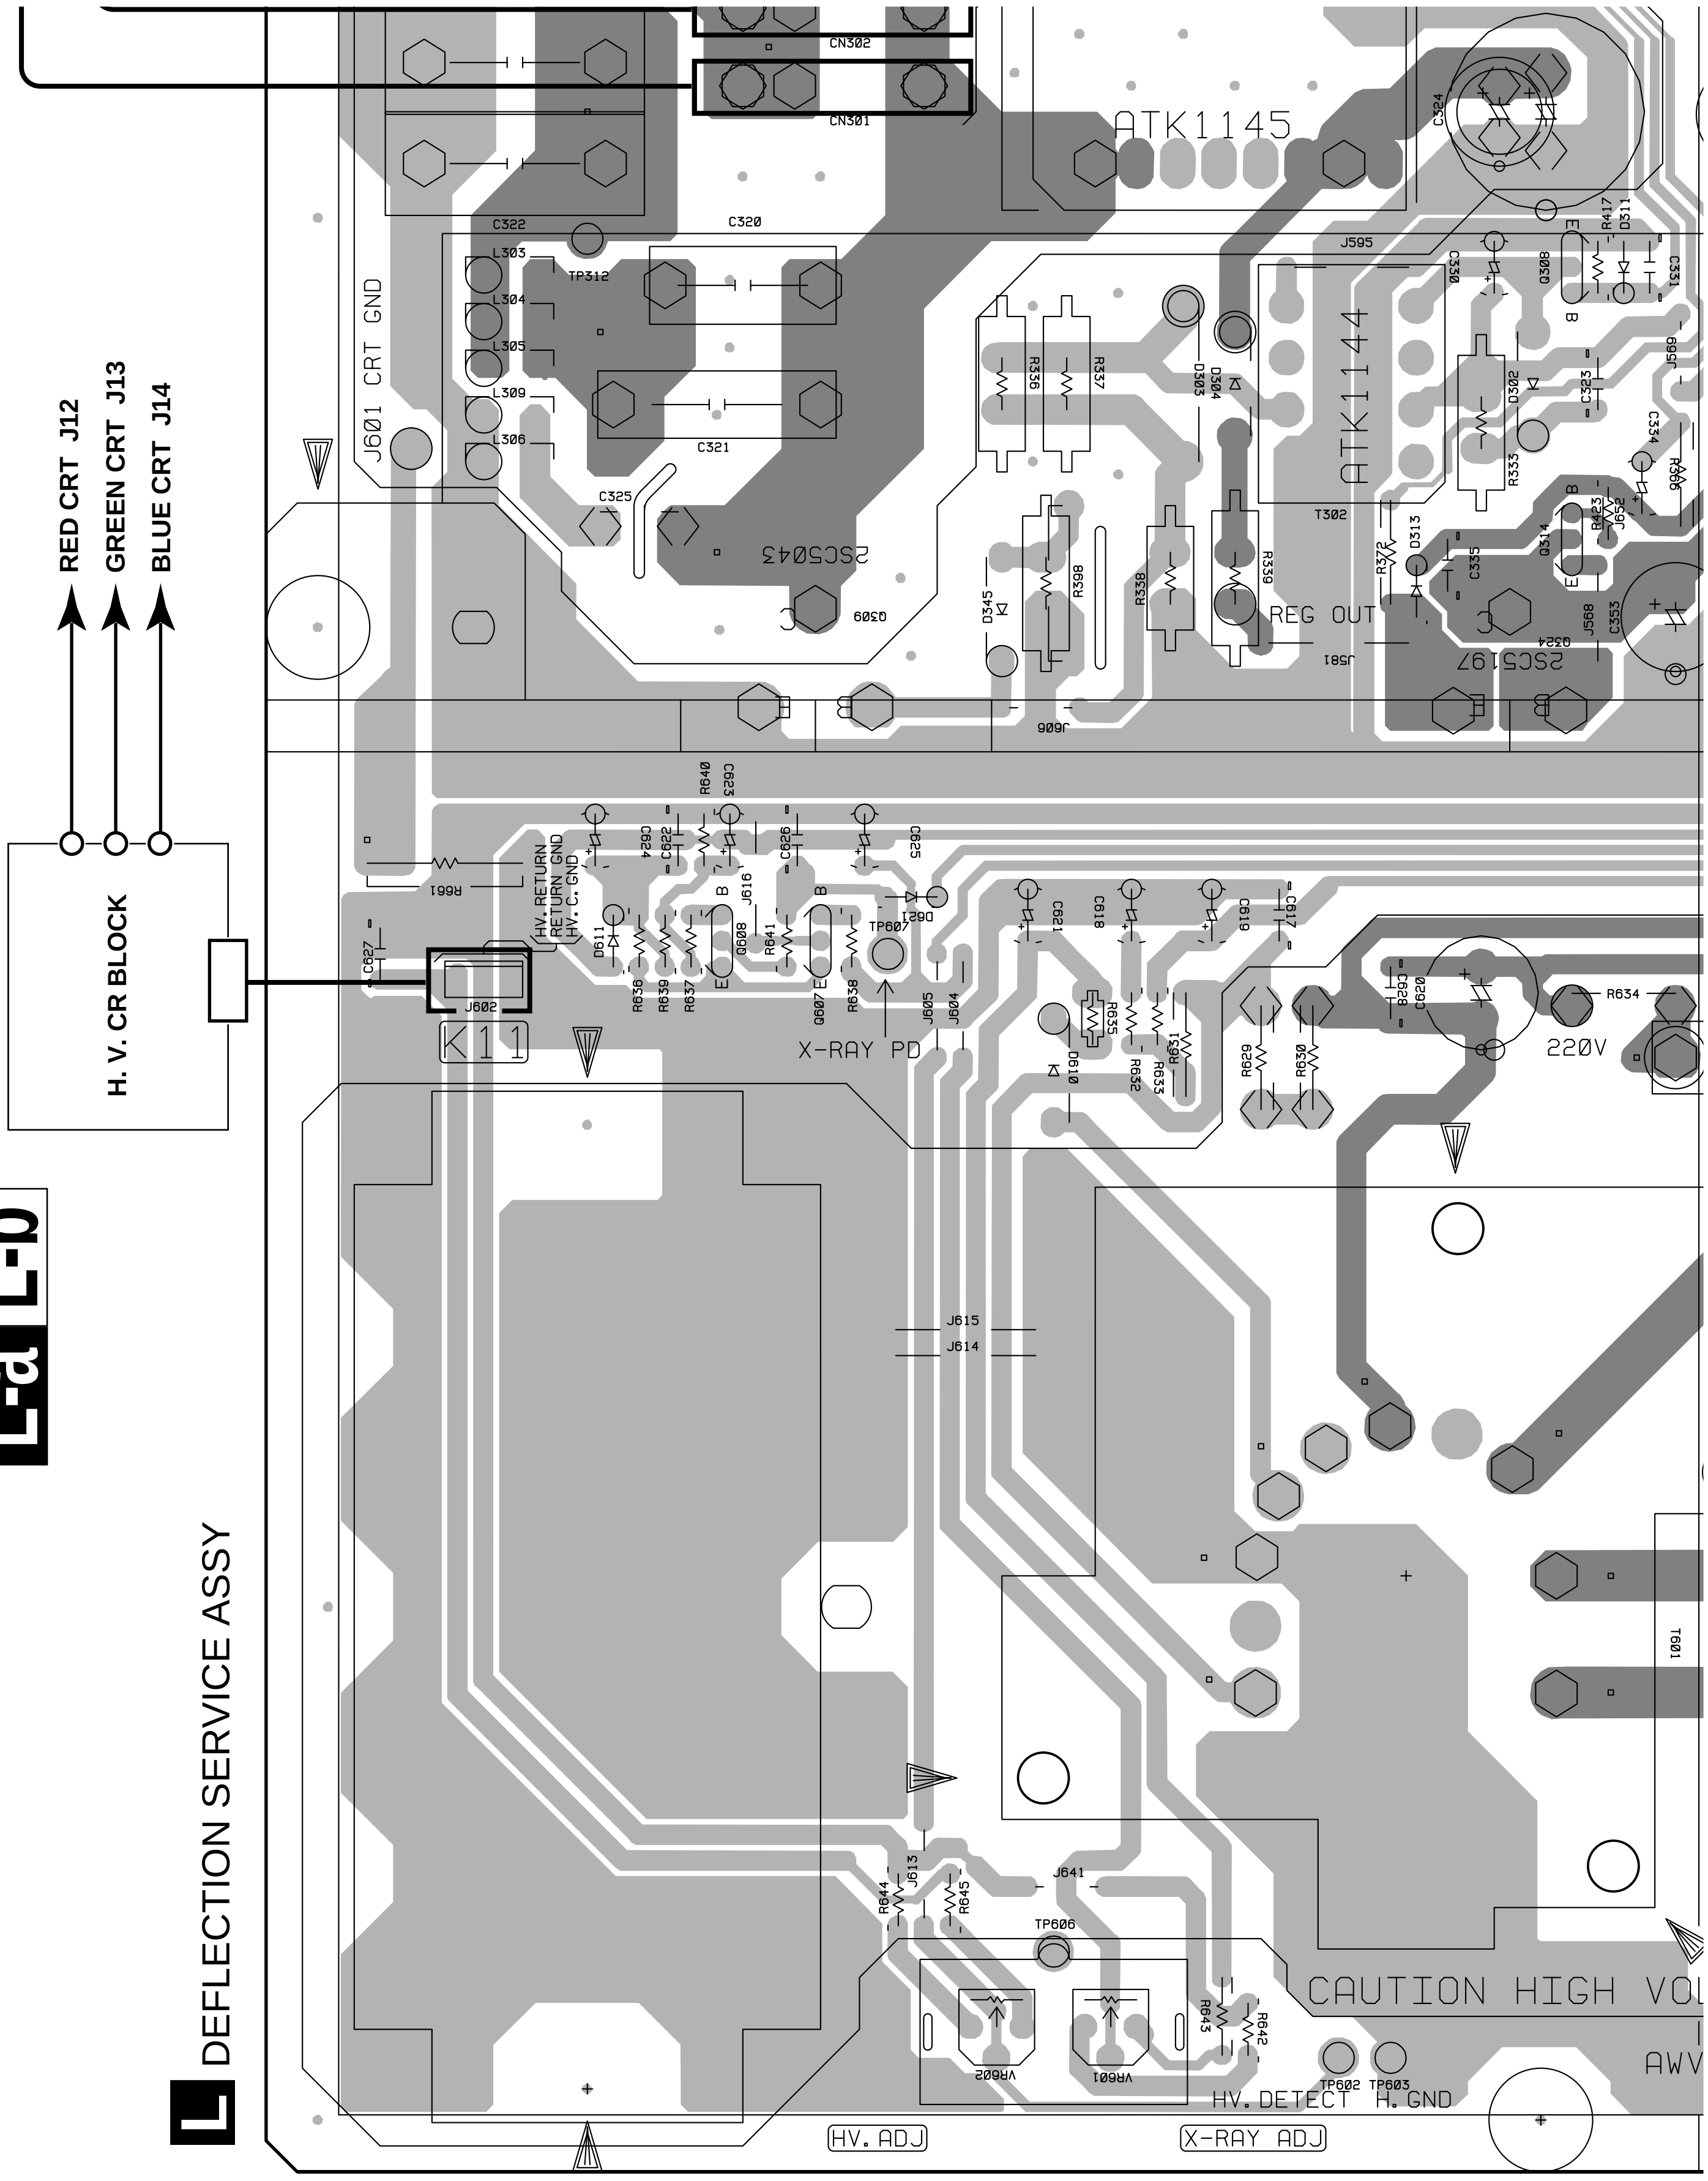
RED CRT J12
GREEN CRT J13
BLUE CRT J14
H. V. CR BLOCK
CN302
CN301
ATK1145
C324
C322
C320
L303
TP312
L304
L305
L309
L306
C321
C325
J601 CRT GND
2SC5043
Q309
R336
R337
D303
D304
J595
ATK1144
T302
D330
Q308
R417
D311
C331
J569
D302
C323
C334
R333
R366
J652
R423
D313
R372
C335
Q314
R398
D345
R338
R339
REG OUT
J581
J568
C353
Q324
2SC5197
J606
R640
C623
C624
C622
C626
C625
R661
HV. RETURN
RETURN GND
HV. C. GND
C627
J602
K11
D611
R636
R639
R637
Q608
J616
R641
Q607
R638
TP607
D621
J605
J604
X-RAY PD
C621
C618
C619
C617
R635
D610
R632
R633
R631
R629
R630
C628
C620
R634
220V
J615
J614
T601
R644
J613
R645
J641
TP606
R643
R642
VR602
VR601
CAUTION HIGH VOL
AWV
HV. DETECT
H. GND
TP602
TP603
HV. ADJ
X-RAY ADJ

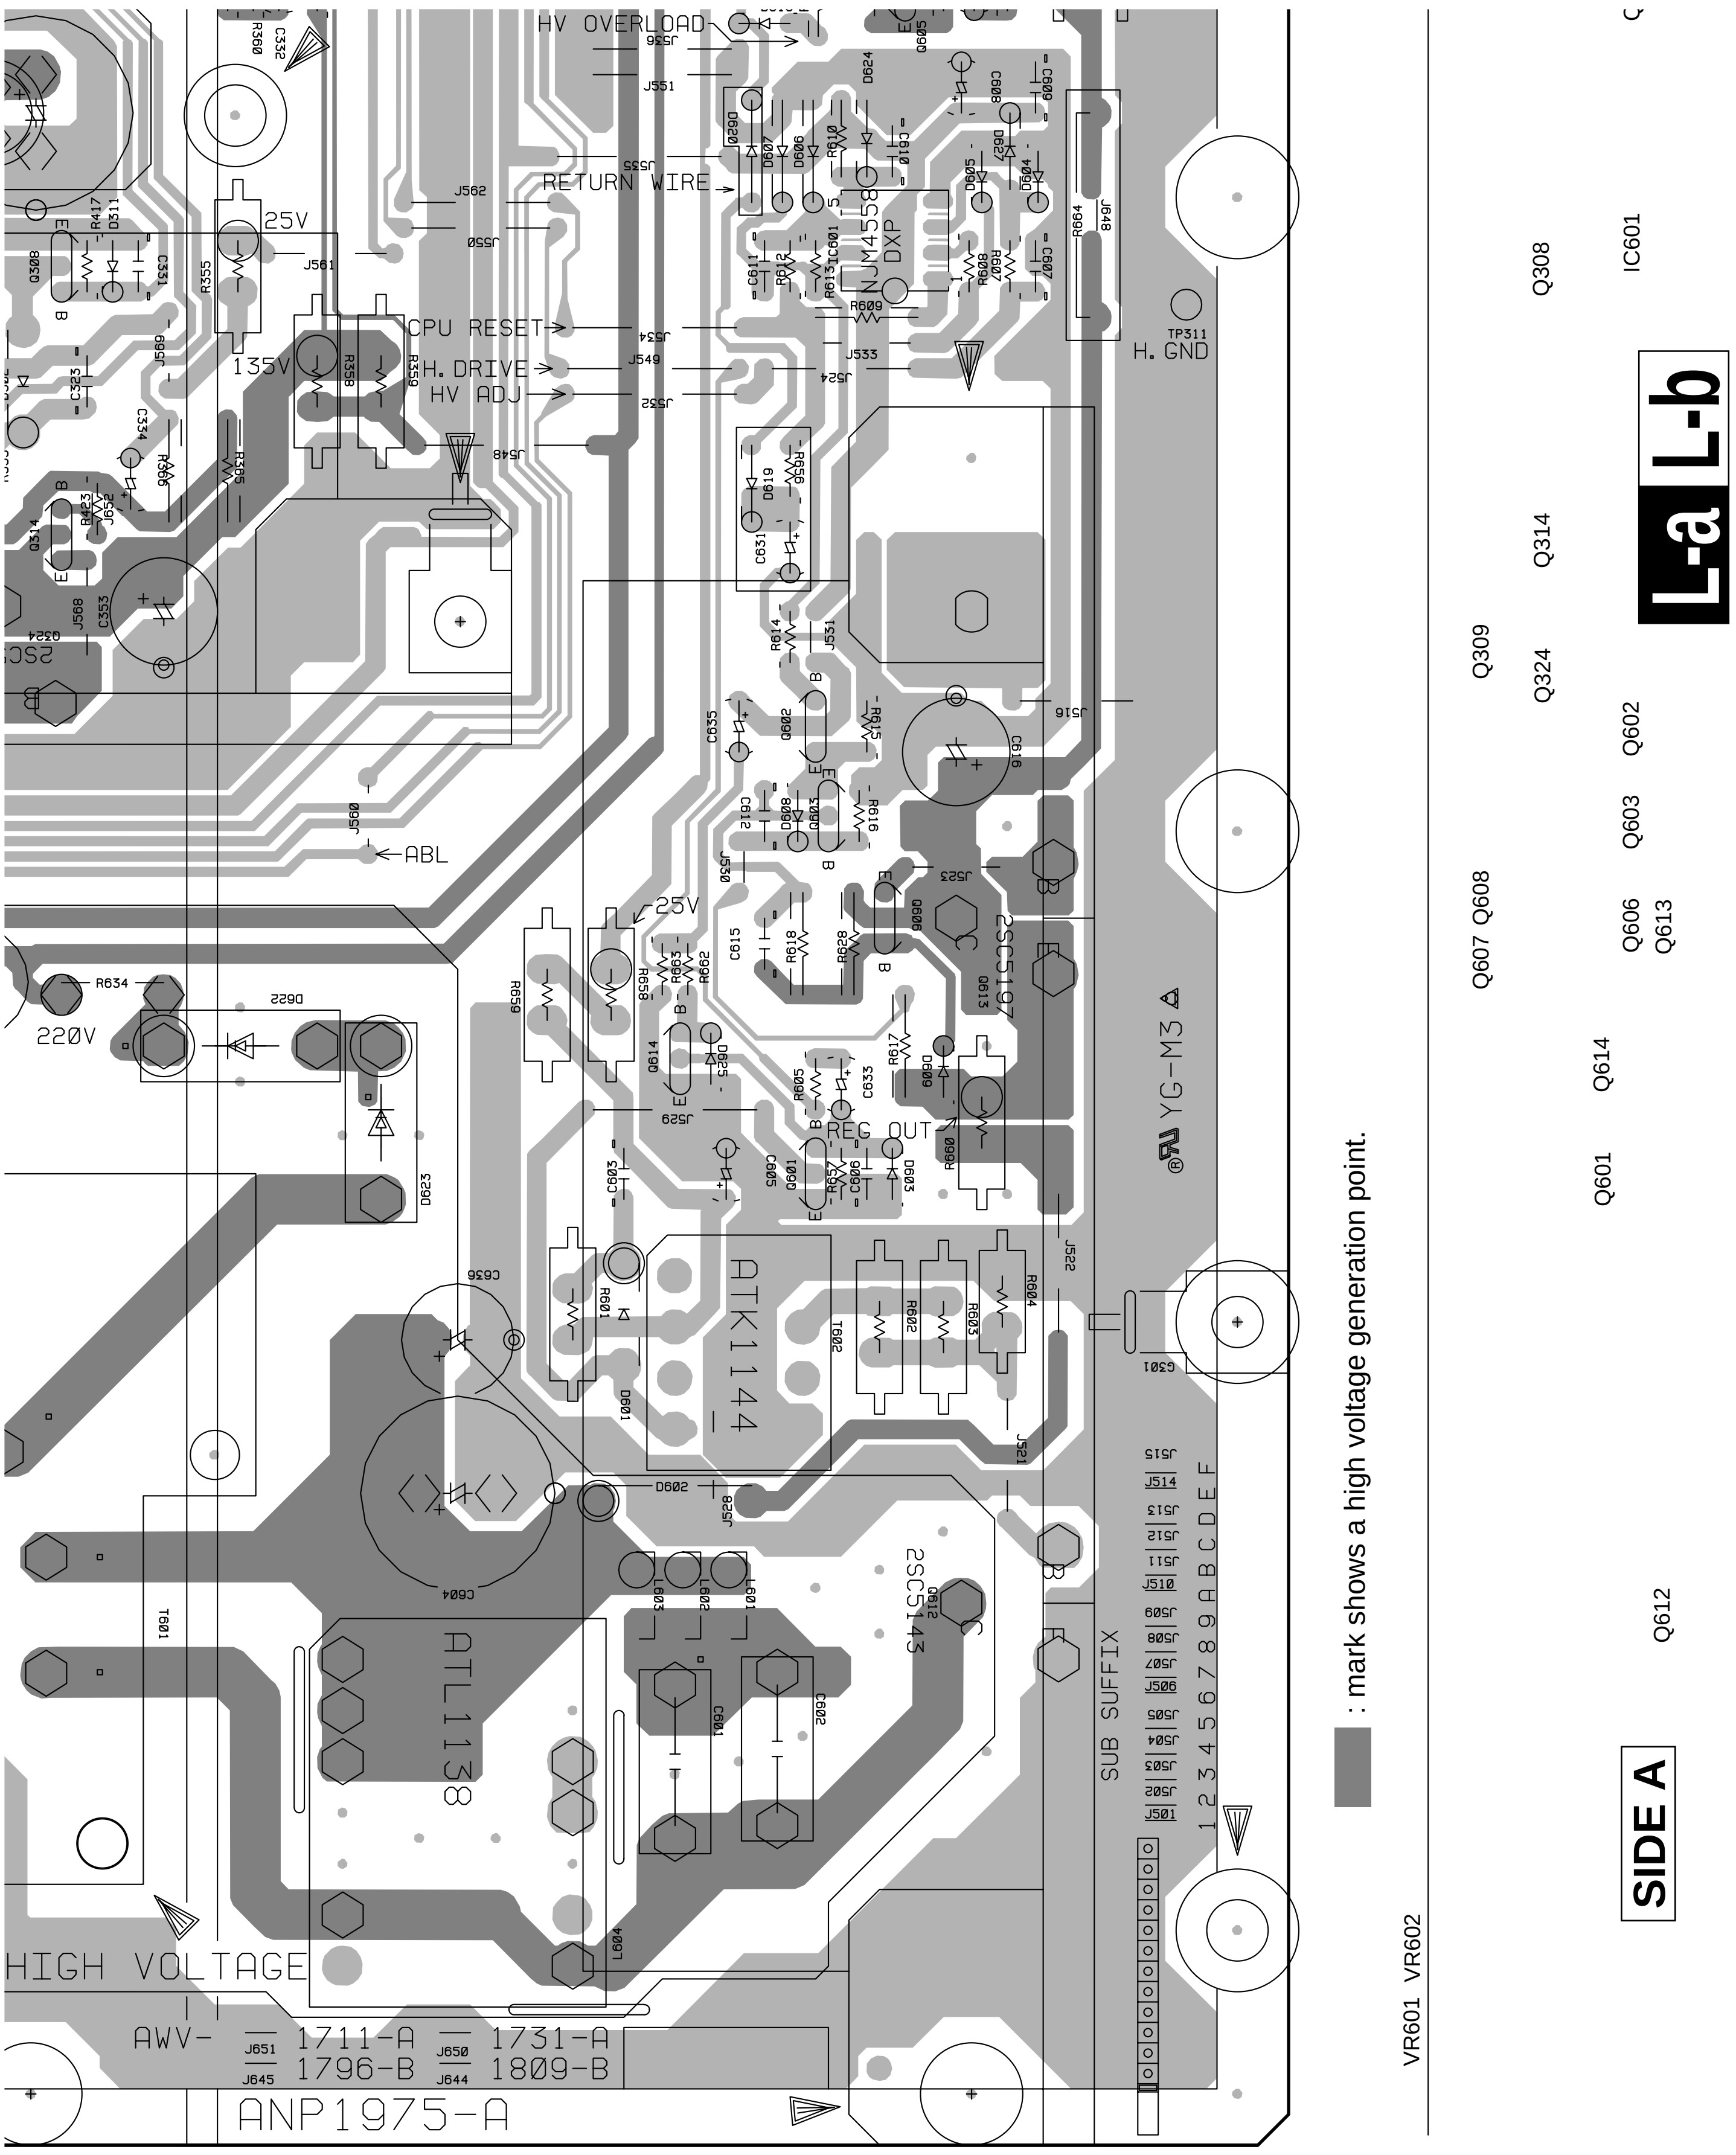
HV OVERLOAD
RETURN WIRE
CPU RESET
H. DRIVE
HV ADJ
25V
135V
ABL
220V
REG OUT
H. GND
TP311
NJM4558
DXP
ATK1144
ATL1138
2SC5197
2SC5143
YG-M3
HIGH VOLTAGE
AWV- 1711-A 1731-A
1796-B 1809-B
J651 J645 J650 J644
ANP1975-A
SUB SUFFIX
1 2 3 4 5 6 7 8 9 A B C D E F
J501 J502 J503 J504 J505 J506 J507 J508 J509 J510 J511 J512 J513 J514 J515
IC601
Q308
Q314
Q309
Q324
Q602
Q603
Q608
Q607
Q606
Q613
Q614
Q601
Q612
VR601 VR602
T601
T602
C604
C636
D622
D623
L601 L602 L603 L604
C601 C602
R601 R602 R603 R604
G301

■ : mark shows a high voltage generation point.

L-a L-b

SIDE A

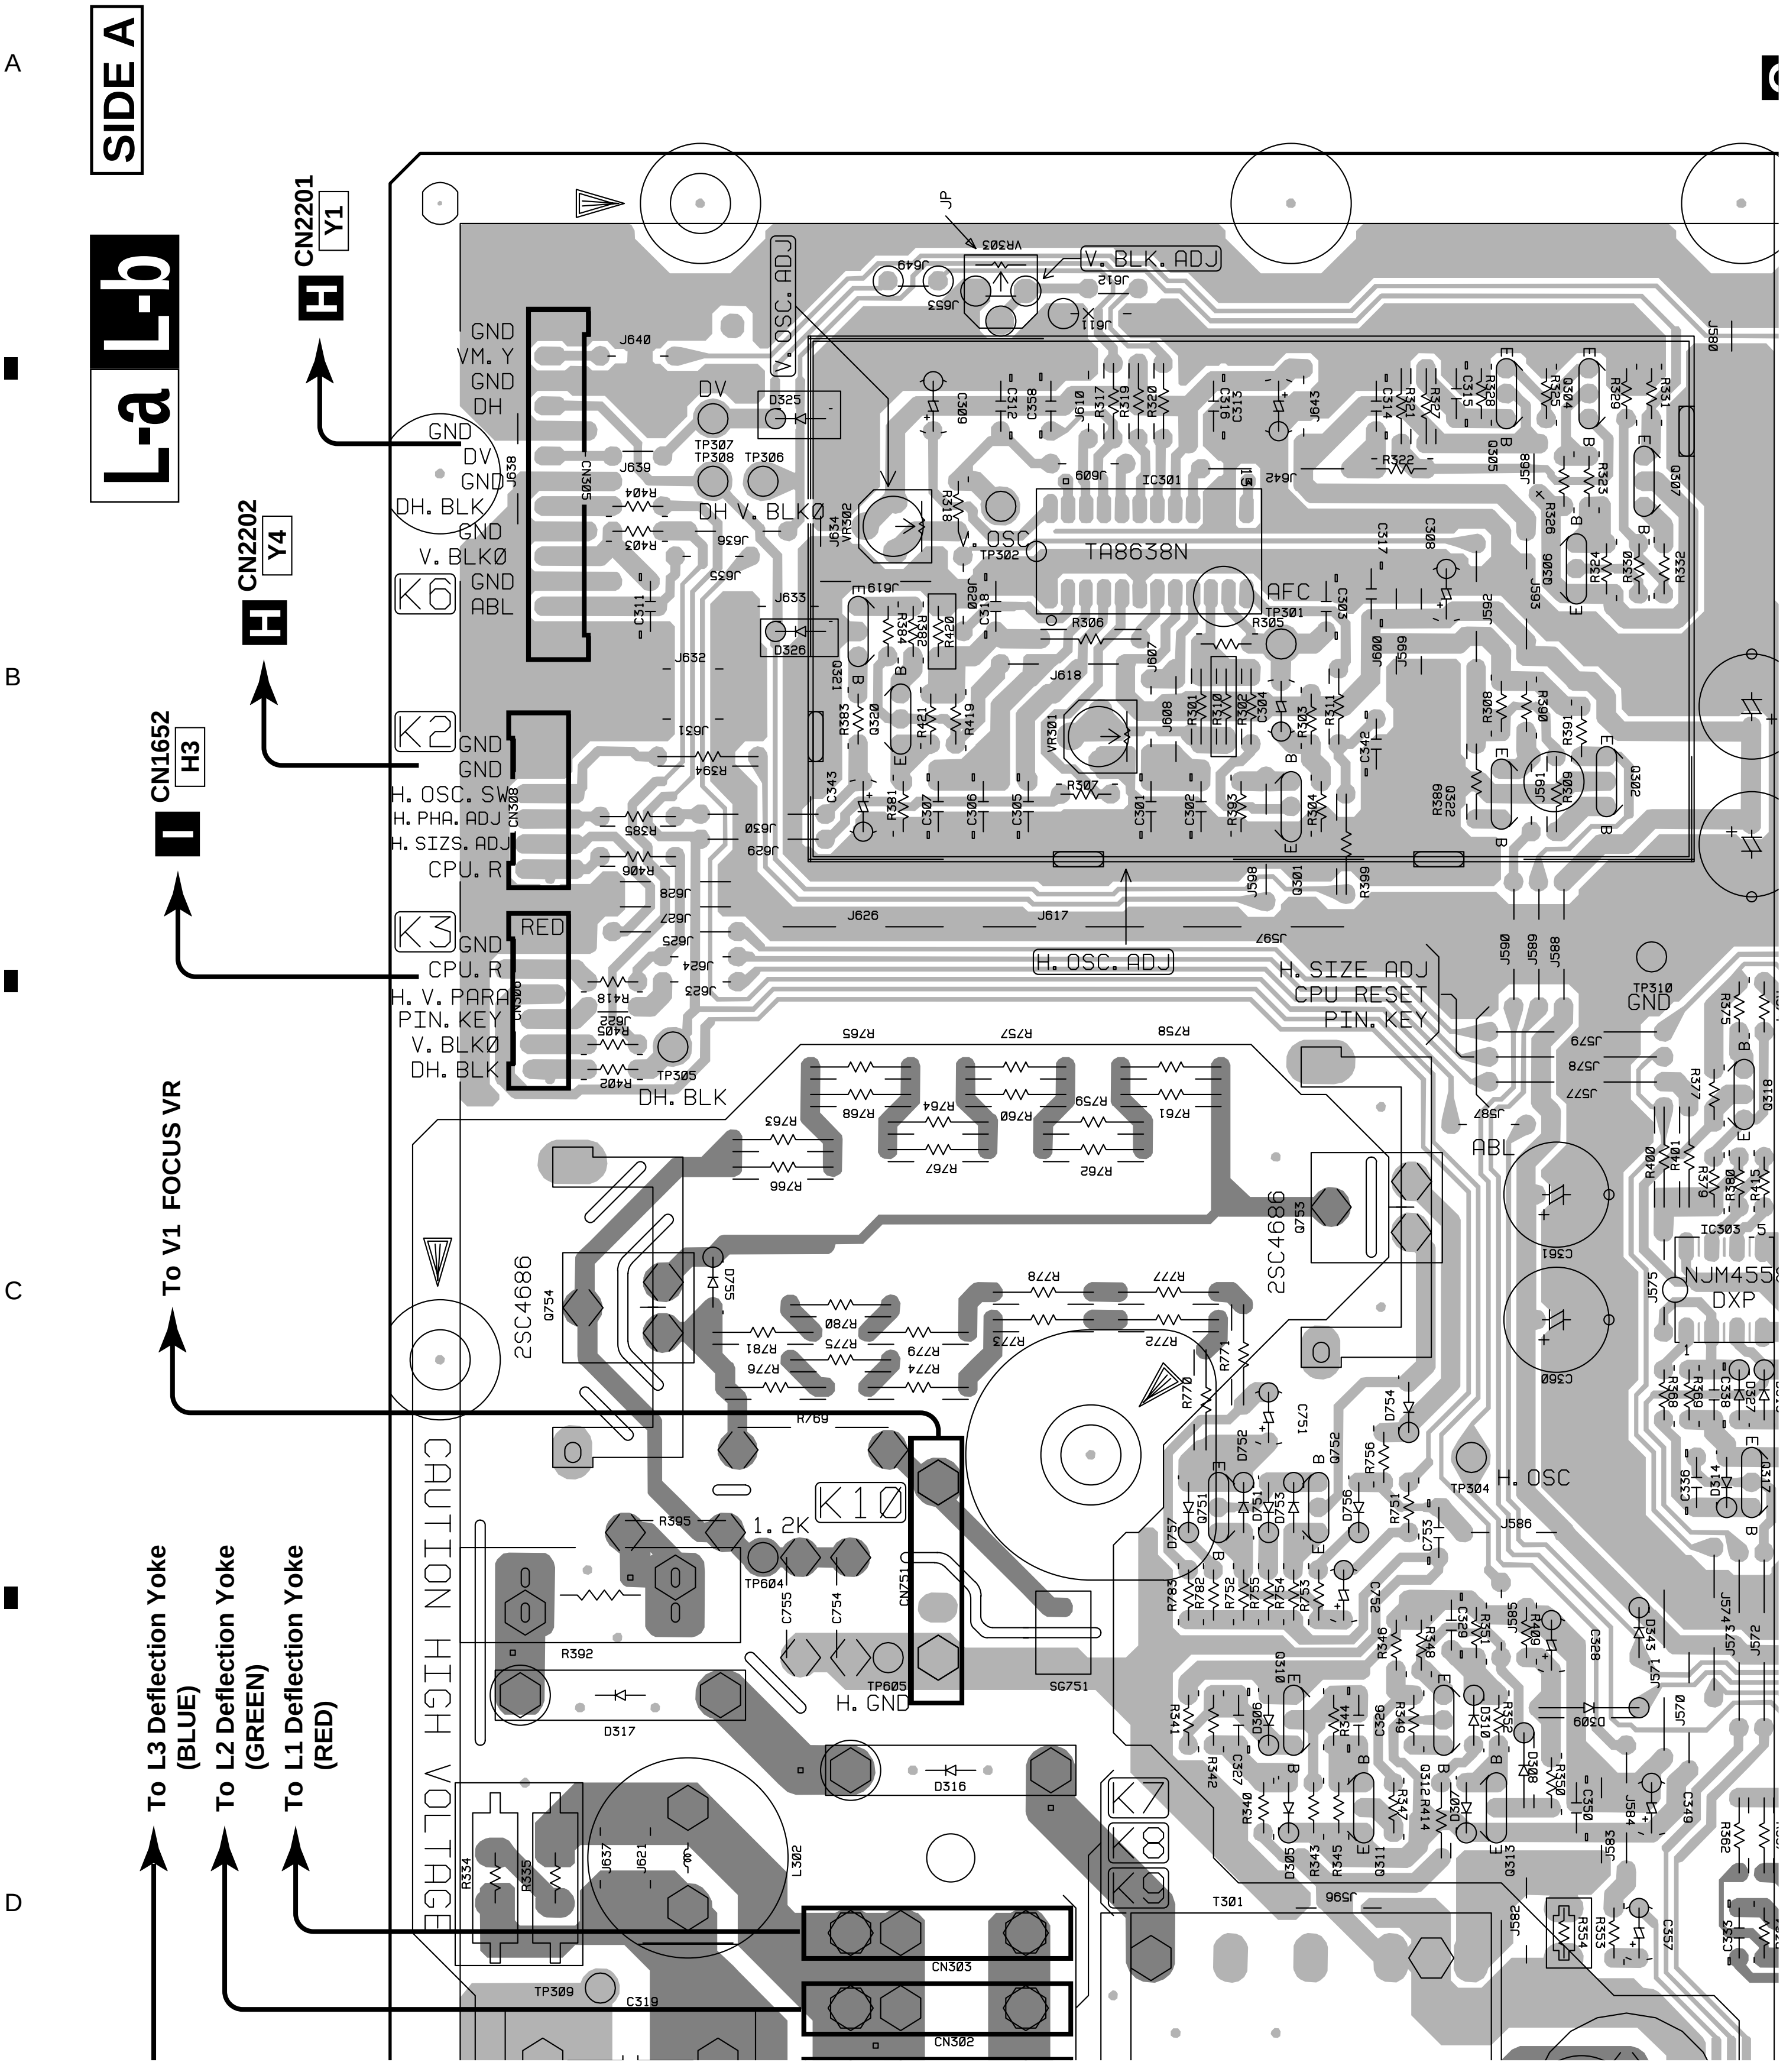
A
B
C
D
SIDE A
L-a L-b
CN2201
Y1
H
CN2202
Y4
H
CN1652
H3
I
To V1 FOCUS VR
To L3 Deflection Yoke (BLUE)
To L2 Deflection Yoke (GREEN)
To L1 Deflection Yoke (RED)
GND
VM. Y
GND
DH
GND
DV
GND
DH. BLK
GND
V. BLKØ
GND
ABL
K6
CN305
K2
GND
GND
H. OSC. SW
H. PHA. ADJ
H. SIZS. ADJ
CPU. R
CN308
K3
RED
GND
CPU. R
H. V. PARA
PIN. KEY
V. BLKØ
DH. BLK
CN306
DV
DH V. BLKØ
DH. BLK
TP305
TP306
TP307
TP308
D325
D326
V. OSC. ADJ
V. BLK. ADJ
VR303
JP
VR302
V. OSC
TP302
IC301
TA8638N
AFC
TP301
VR301
H. OSC. ADJ
H. SIZE ADJ
CPU RESET
PIN. KEY
TP310
GND
ABL
IC303
NJM4558
DXP
C361
C360
2SC4686
Q753
2SC4686
Q754
D755
CAUTION HIGH VOLTAGE
K10
1. 2K
TP604
TP605
H. GND
CN751
SG751
R392
D317
D316
R395
H. OSC
TP304
K7
K8
K9
T301
L302
R334
R335
CN303
CN302
TP309
C319

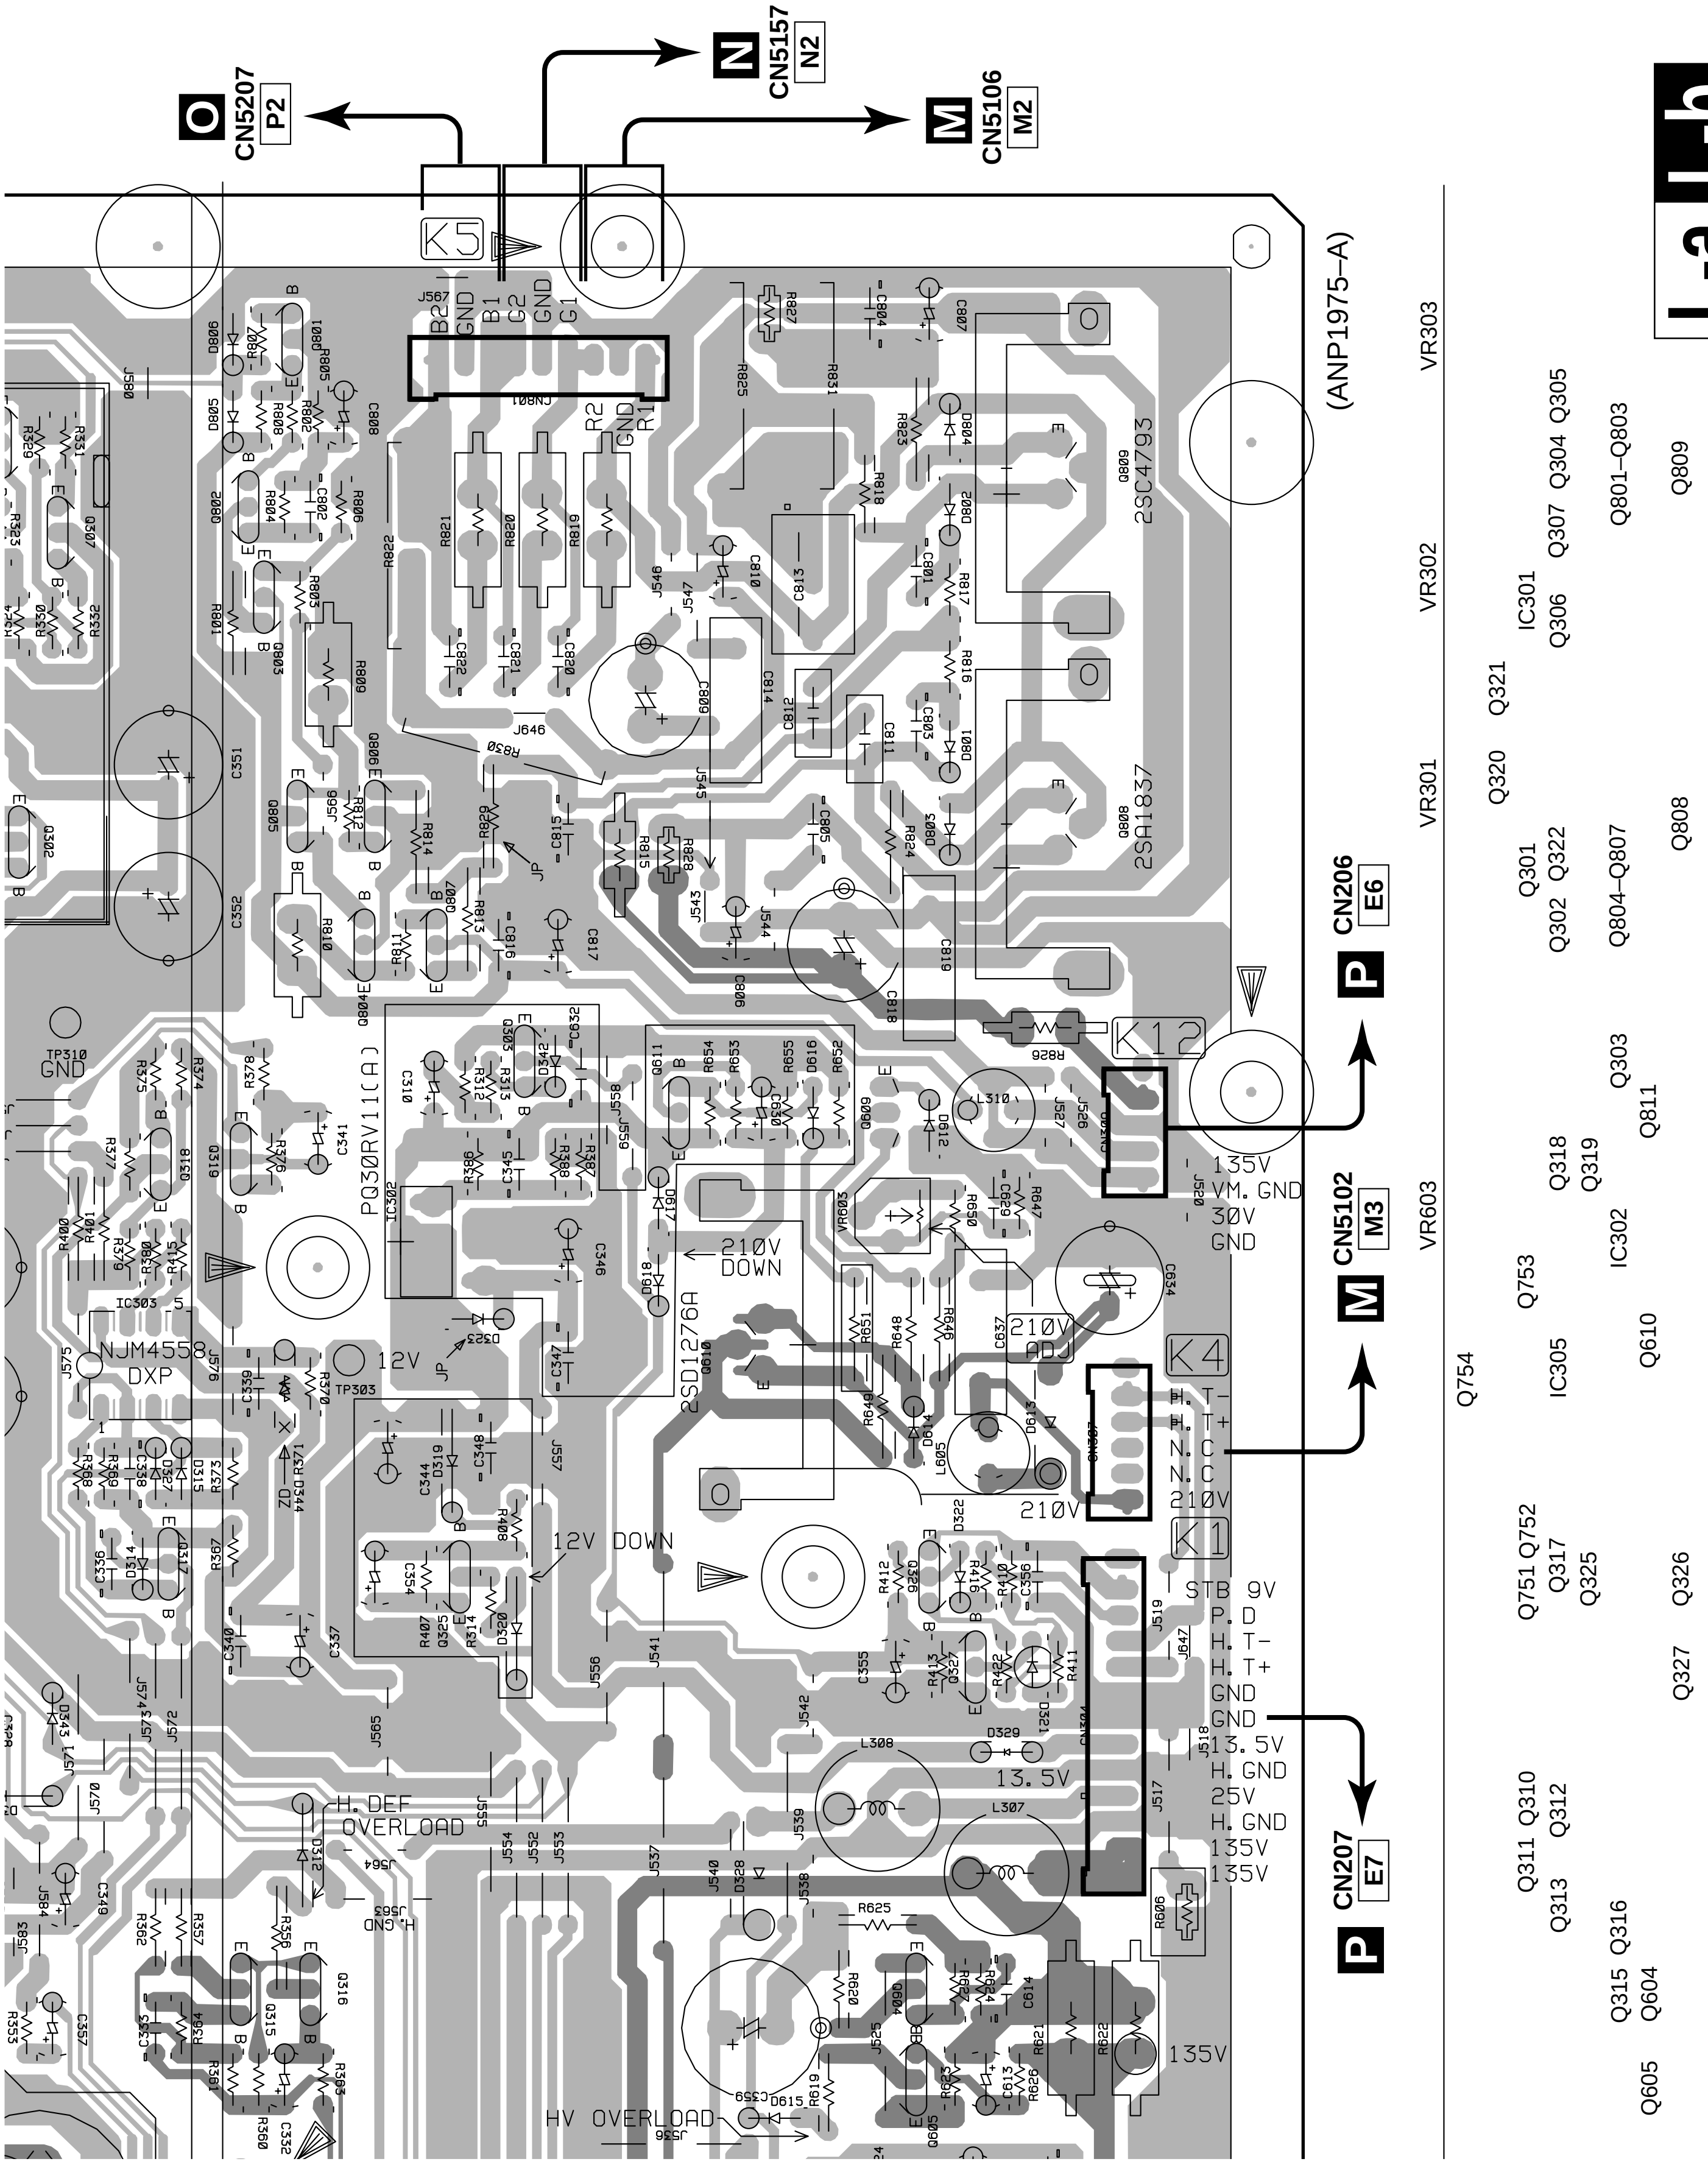
O
CN5207
P2
N
CN5157
N2
M
CN5106
M2
K5
(ANP1975–A)
2SC4793
2SA1837
PQ30RV11(A)
2SD1276A
NJM4558
DXP
IC303
TP310
GND
12V
TP303
210V DOWN
12V DOWN
210V ADJ
H.DEF OVERLOAD
HV OVERLOAD
H.GND
13.5V
135V
K12
K4
K1
P
CN206
E6
135V
VM.GND
30V
GND
M
CN5102
M3
H.T-
H.T+
N.C
N.C
210V
STB 9V
P.D
H.T-
H.T+
GND
GND
13.5V
H.GND
25V
H.GND
135V
135V
P
CN207
E7
VR303
VR302
VR301
VR603
Q305
Q304
Q307
Q306
IC301
Q801–Q803
Q809
Q321
Q320
Q301
Q322
Q302
Q804–Q807
Q808
Q303
Q811
Q318
Q319
IC302
Q753
Q610
Q754
IC305
Q752
Q751
Q317
Q325
Q326
Q327
Q310
Q312
Q311
Q313
Q316
Q315
Q604
Q605

4.8 R CRT DRIVE ASSY

A

M R CRT DRIVE ASSY

B

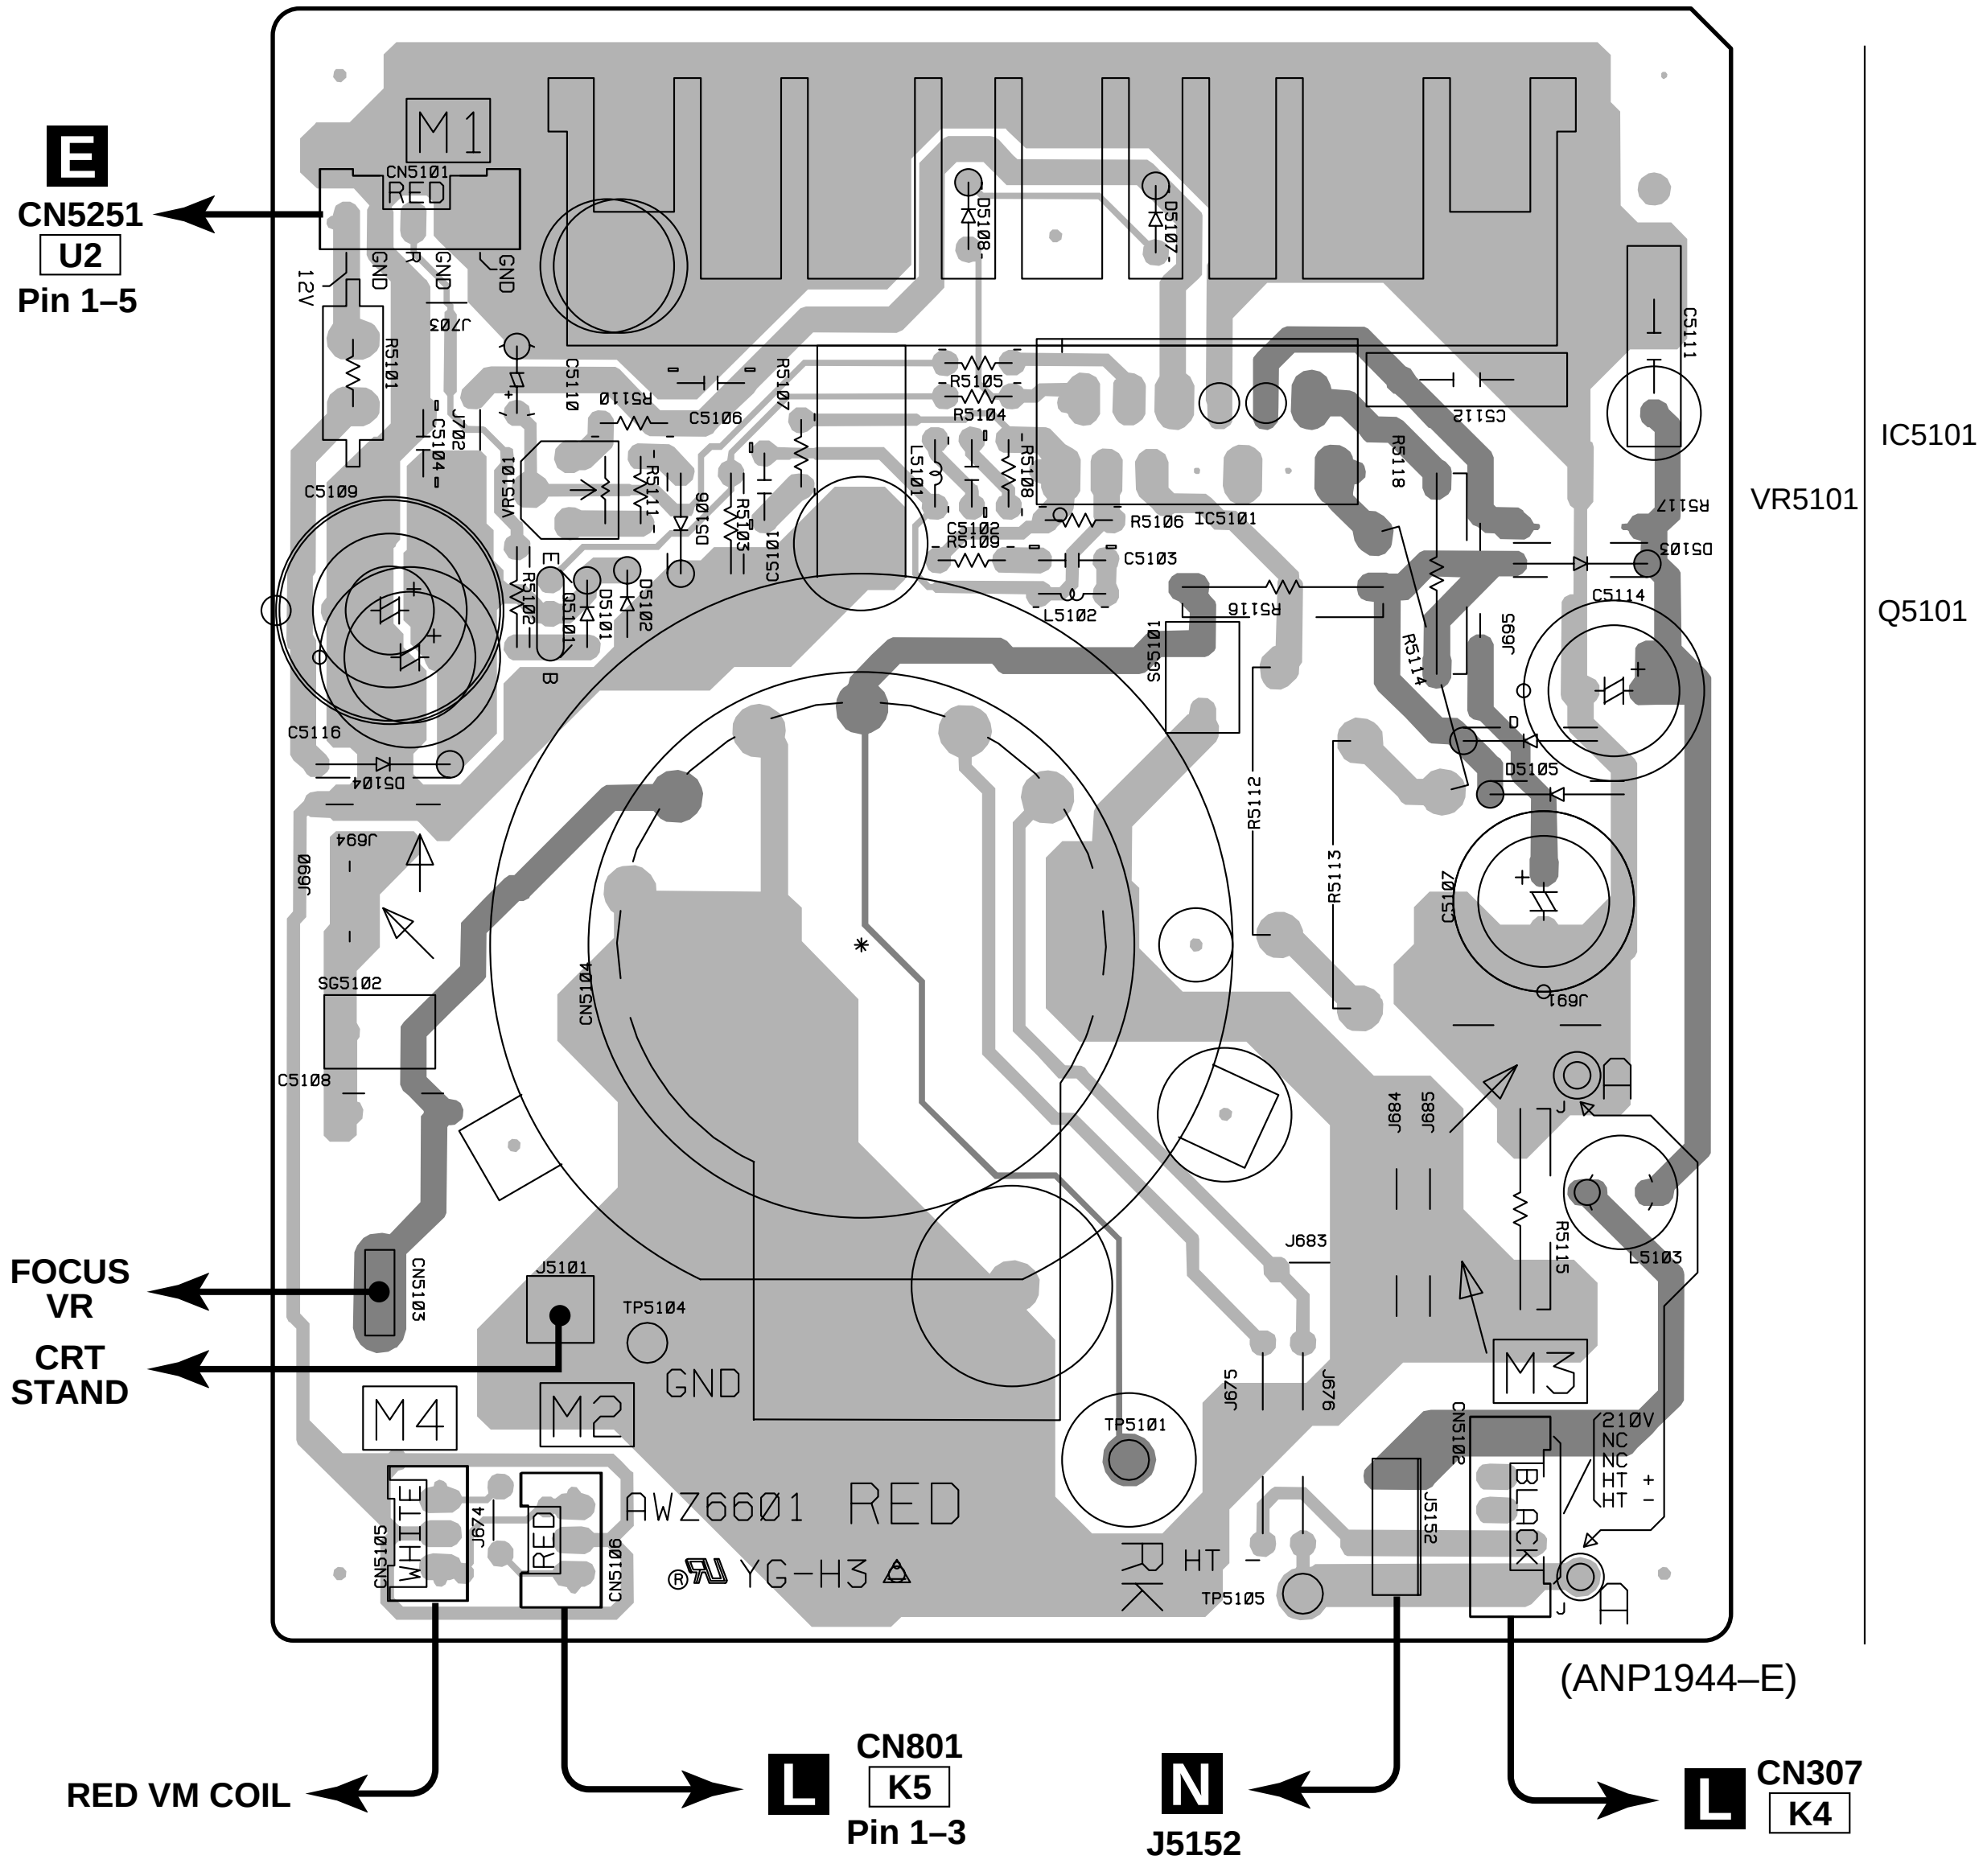
E
CN5251
U2
Pin 1–5
FOCUS VR
CRT STAND
RED VM COIL
L
CN801
K5
Pin 1–3
N
J5152
L
CN307
K4
IC5101
VR5101
Q5101
(ANP1944–E)
M1
CN5101
RED
12V
GND
R
GND
GND
M2
M3
M4
CN5105
WHITE
CN5106
RED
CN5103
J5101
TP5104
GND
TP5101
TP5105
HT
CN5102
BLACK
J5152
210V
NC
NC
HT +
HT –
AWZ6601 RED
YG-H3
RK
CN5104
SG5102
SG5101
C5108
C5109
C5116
C5110
C5106
C5104
C5101
C5102
C5103
C5107
C5111
C5112
C5114
D5101
D5102
D5103
D5104
D5105
D5106
D5107
D5108
R5101
R5102
R5103
R5104
R5105
R5106
R5107
R5108
R5109
R5110
R5111
R5112
R5113
R5114
R5115
R5116
R5117
R5118
L5101
L5102
L5103
VR5101
IC5101
J674
J675
J676
J683
J684
J685
J690
J691
J694
J695
J702
J705

C

▨ : mark shows a high voltage generation point.

SIDE A

D

M R CRT DRIVE ASSY

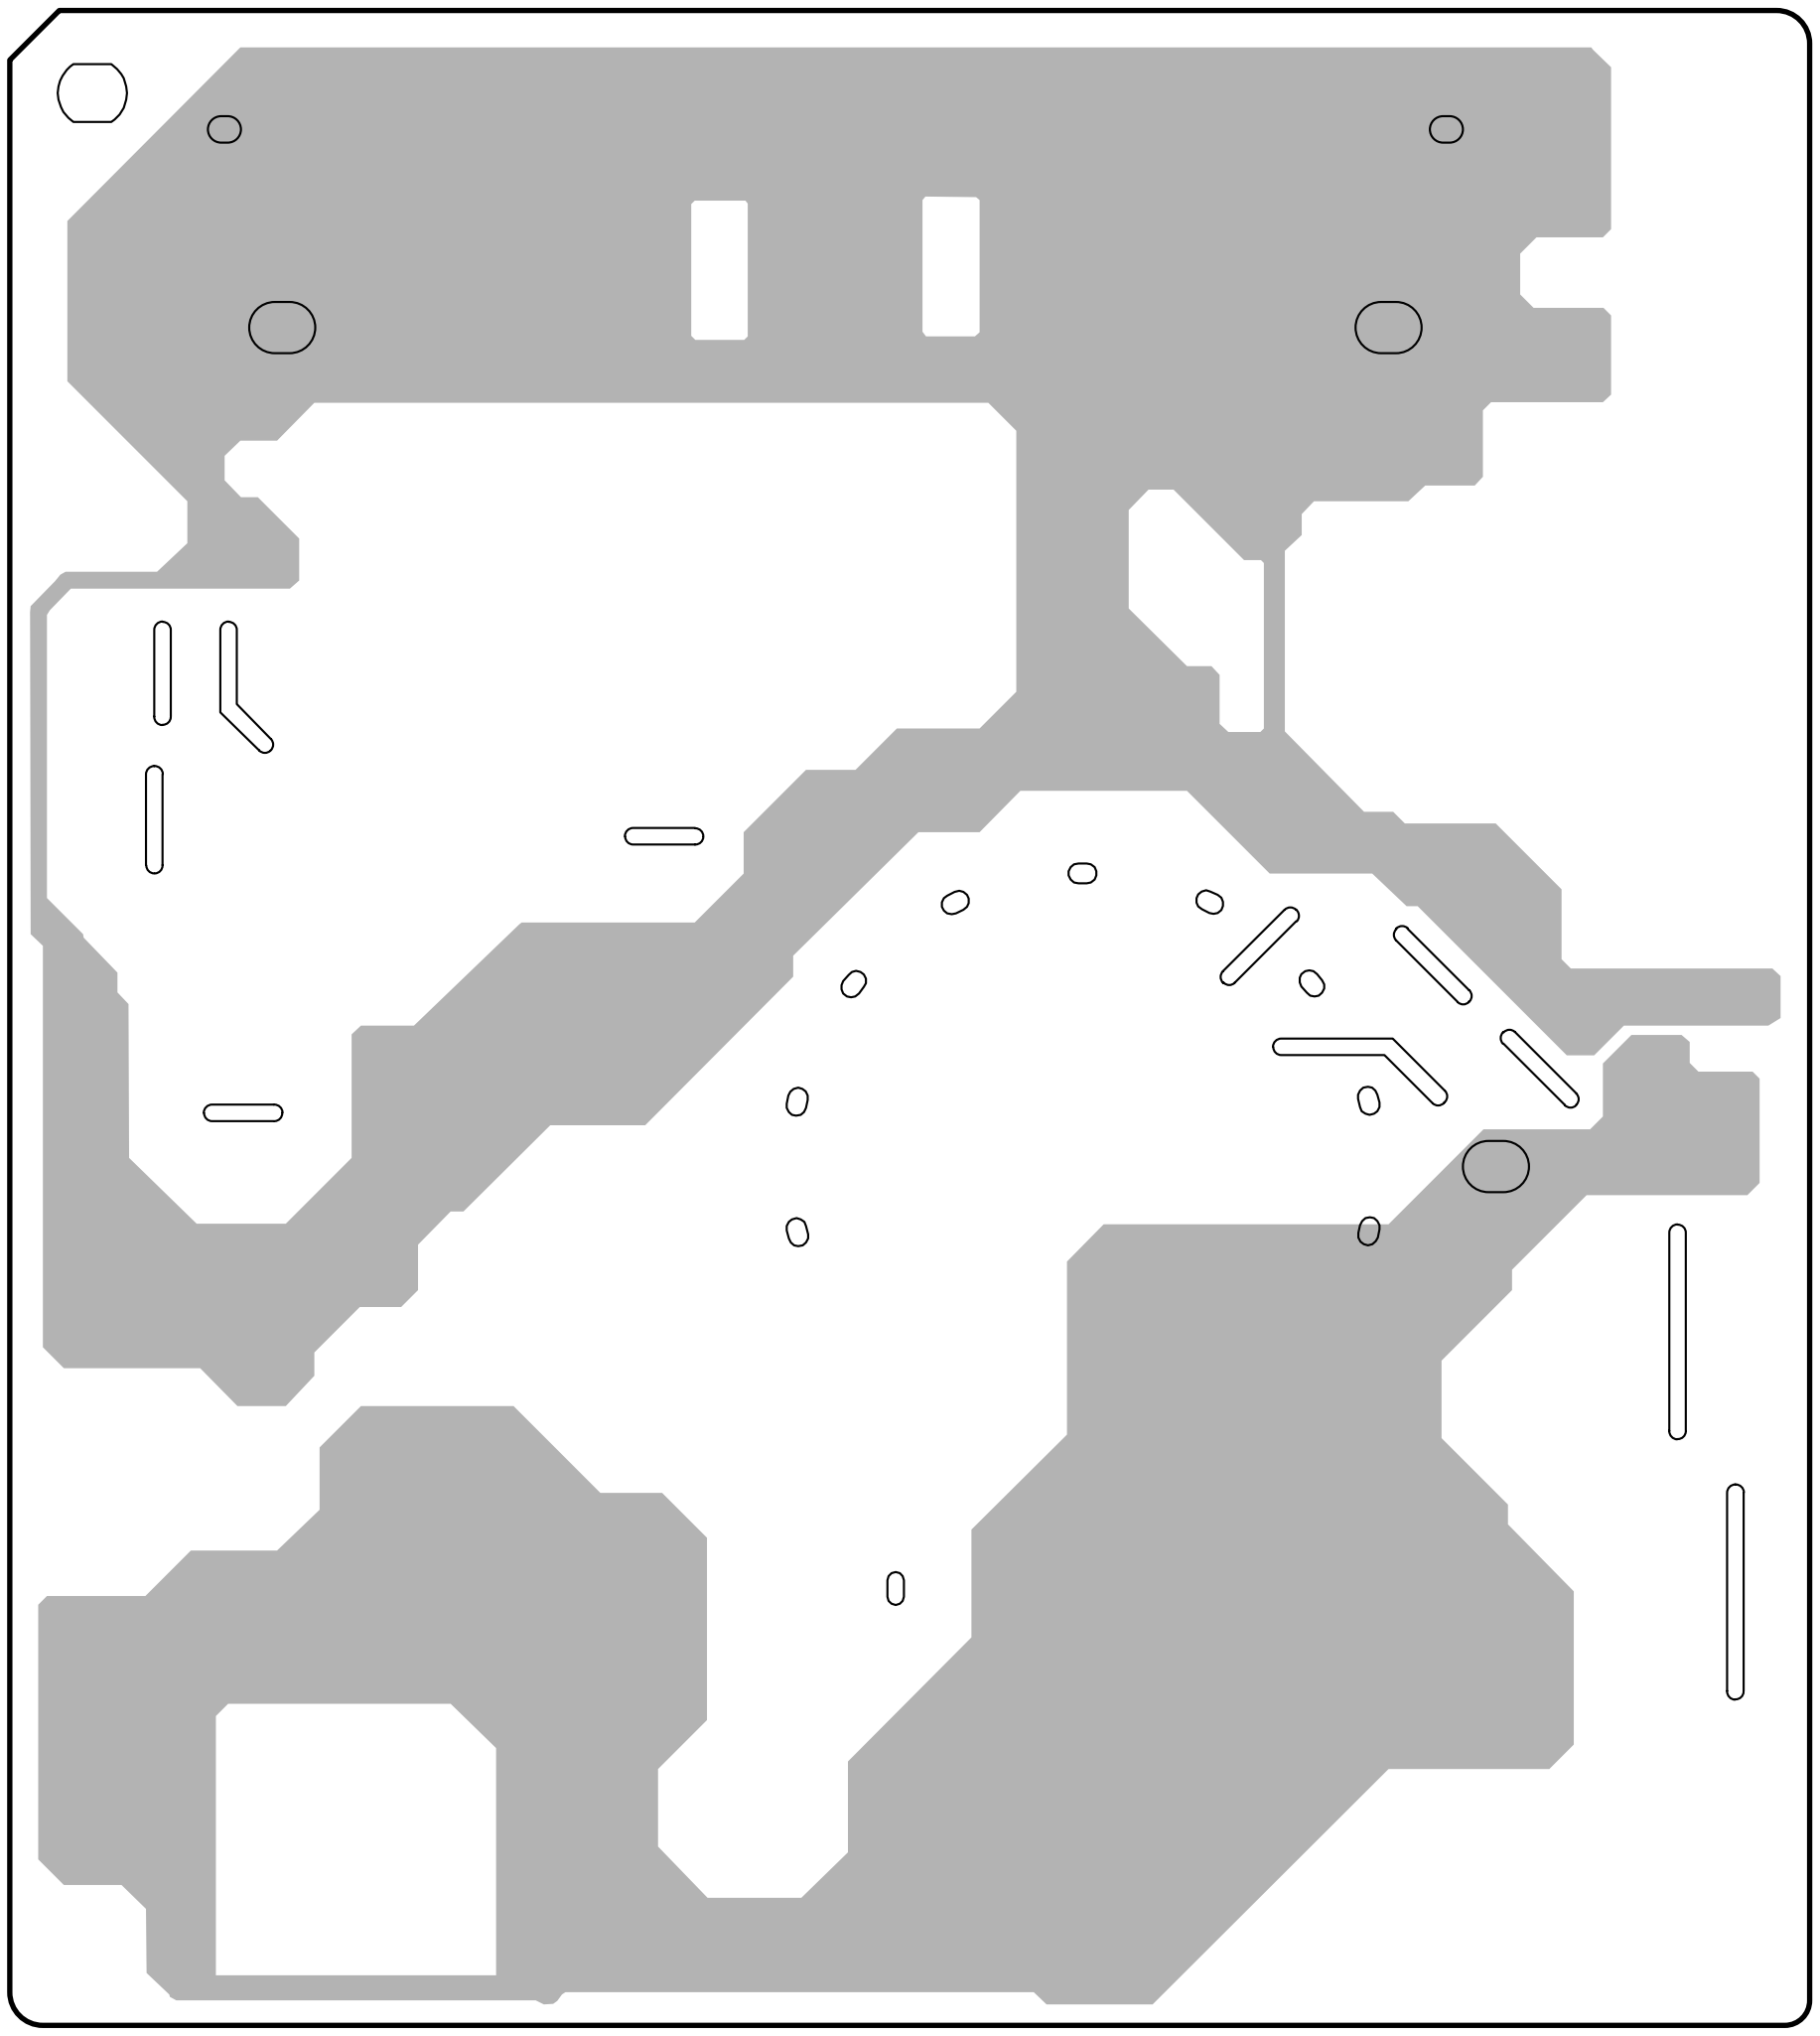

(ANP1944–E)

SIDE B

4.9 G CRT DRIVE ASSY

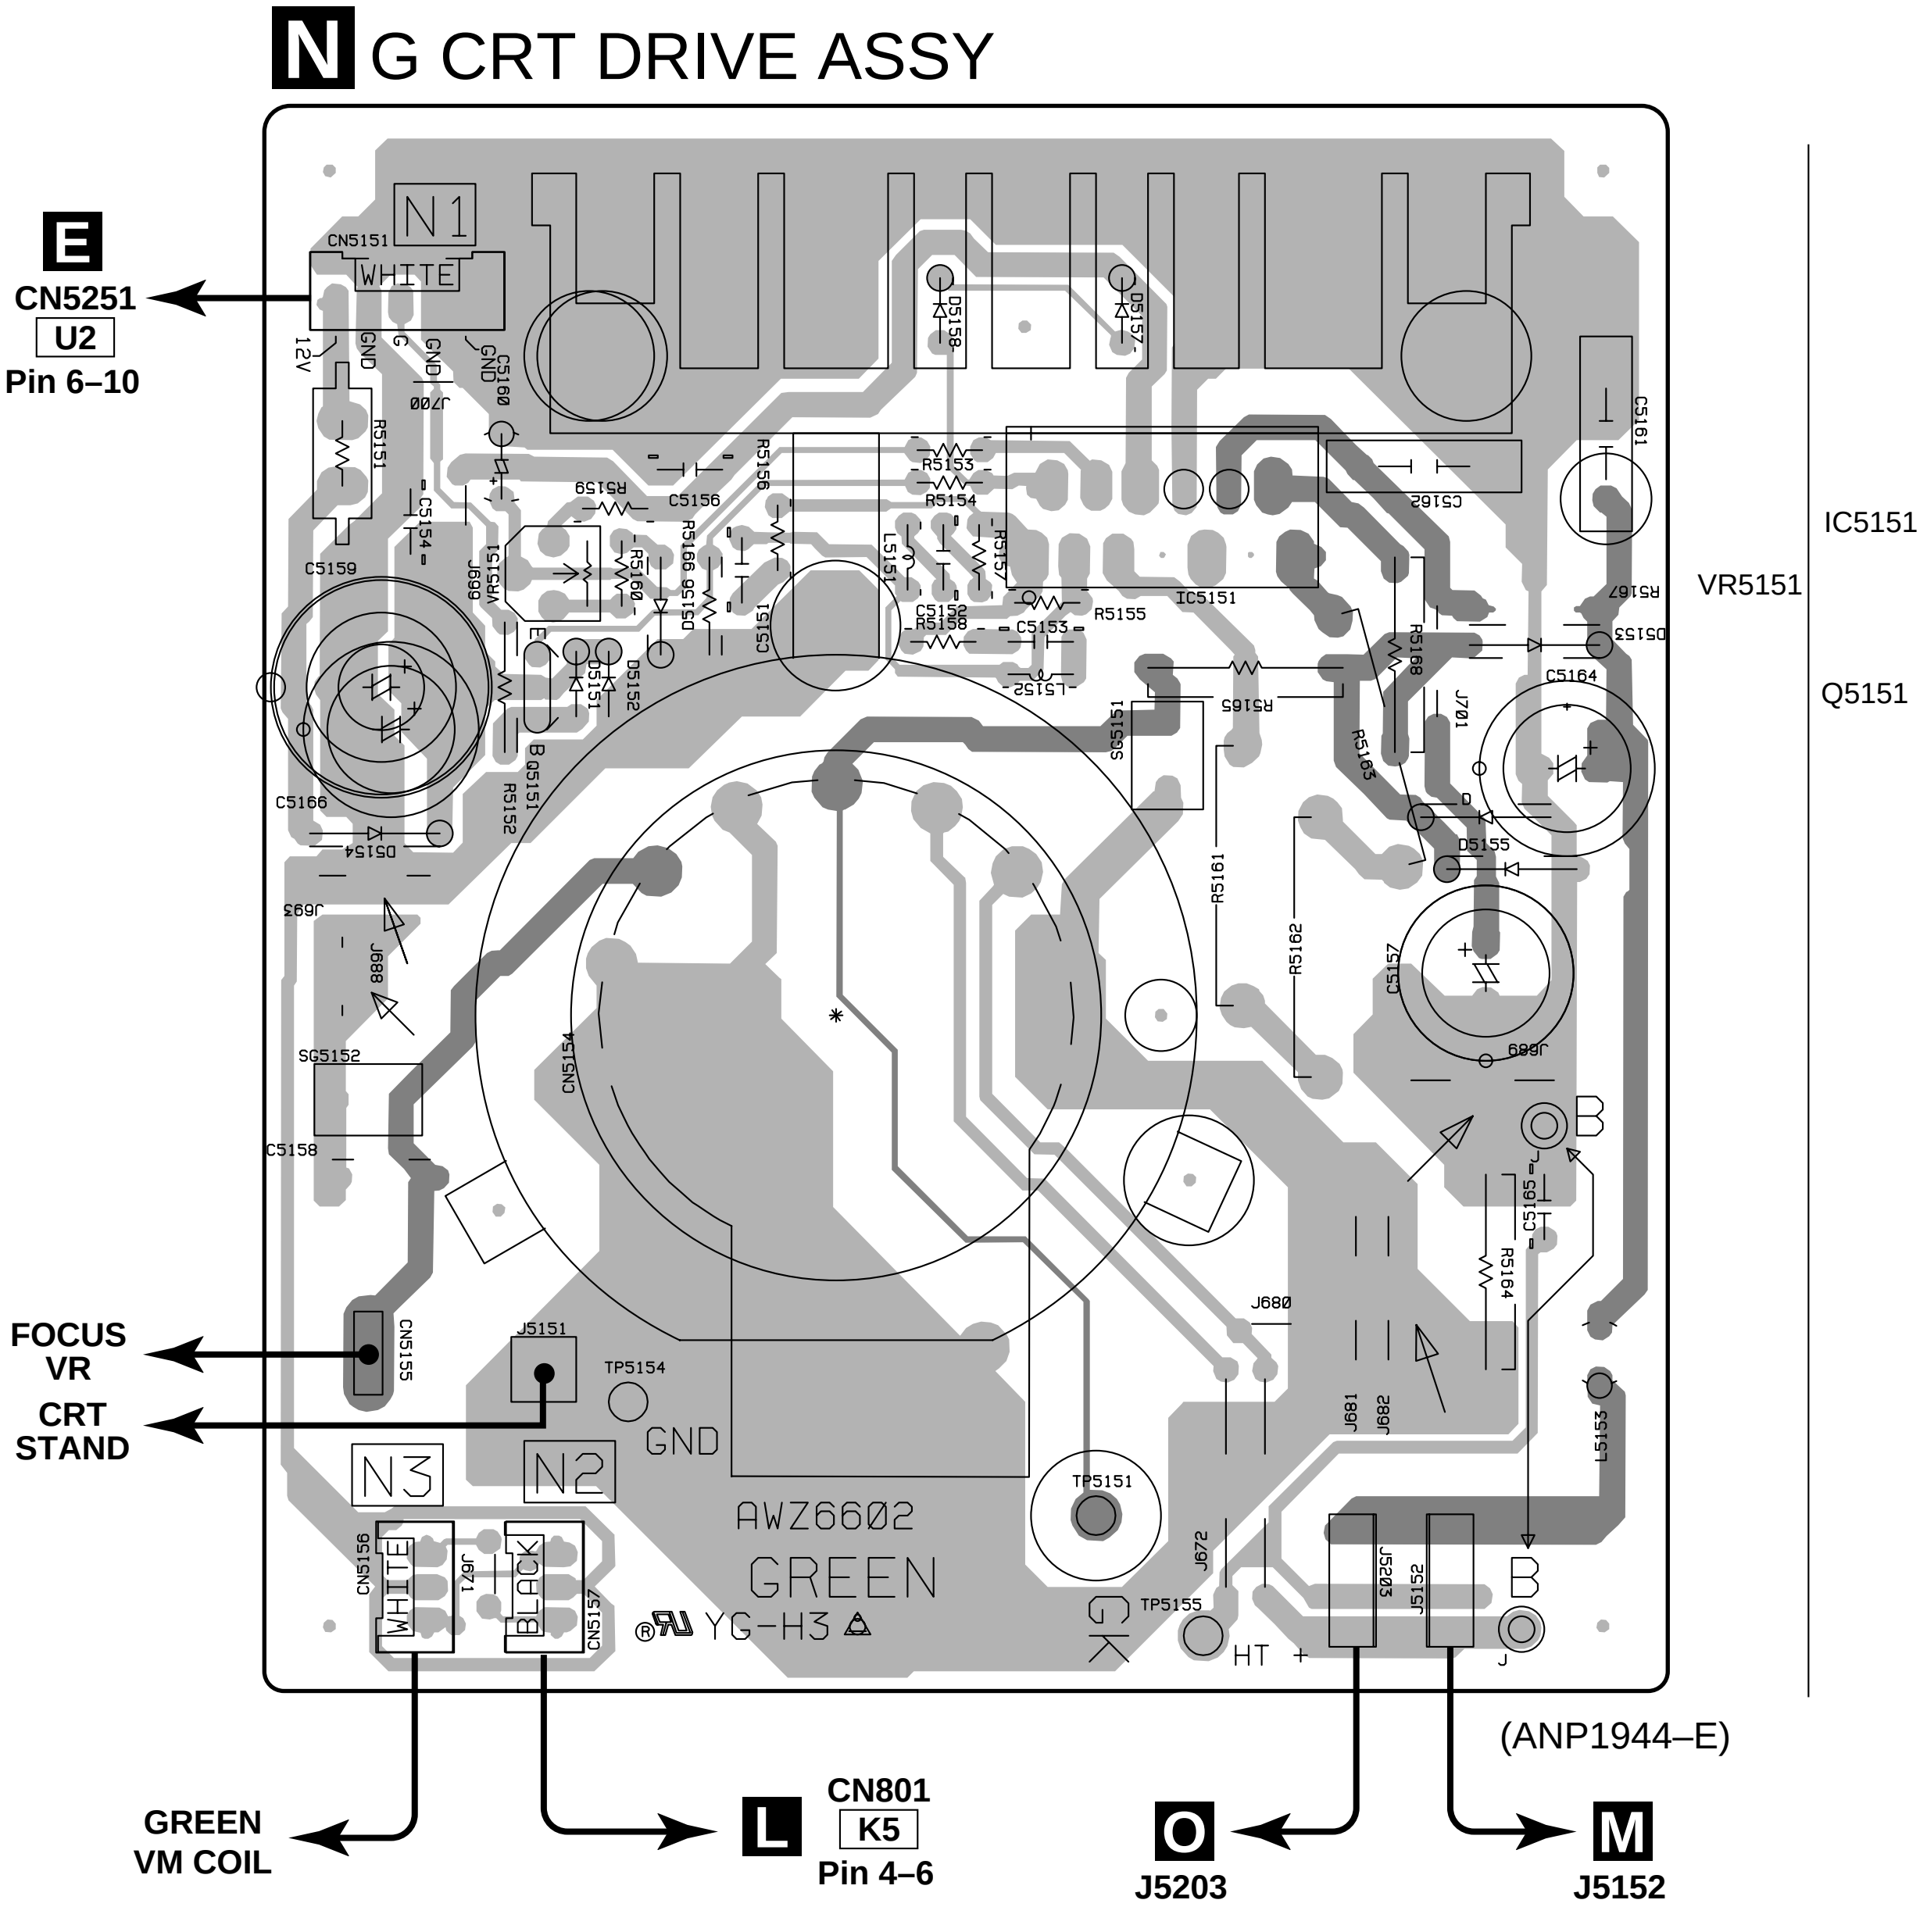
N
G CRT DRIVE ASSY
E
CN5251
U2
Pin 6–10
FOCUS VR
CRT STAND
GREEN VM COIL
L
CN801
K5
Pin 4–6
O
J5203
M
J5152
IC5151
VR5151
Q5151
(ANP1944–E)
N1
N2
N3
CN5151
WHITE
BLACK
GND
AWZ6602
GREEN
YG-H3
TP5151
TP5154
TP5155
J5151
CN5154
CN5155
CN5156
CN5157
SG5152
C5158
C5159
C5166
D5154
D5155
D5157
D5158
C5161
C5162
C5164
C5157
HT

▨ : mark shows a high voltage generation point.

SIDE A

N G CRT DRIVE ASSY

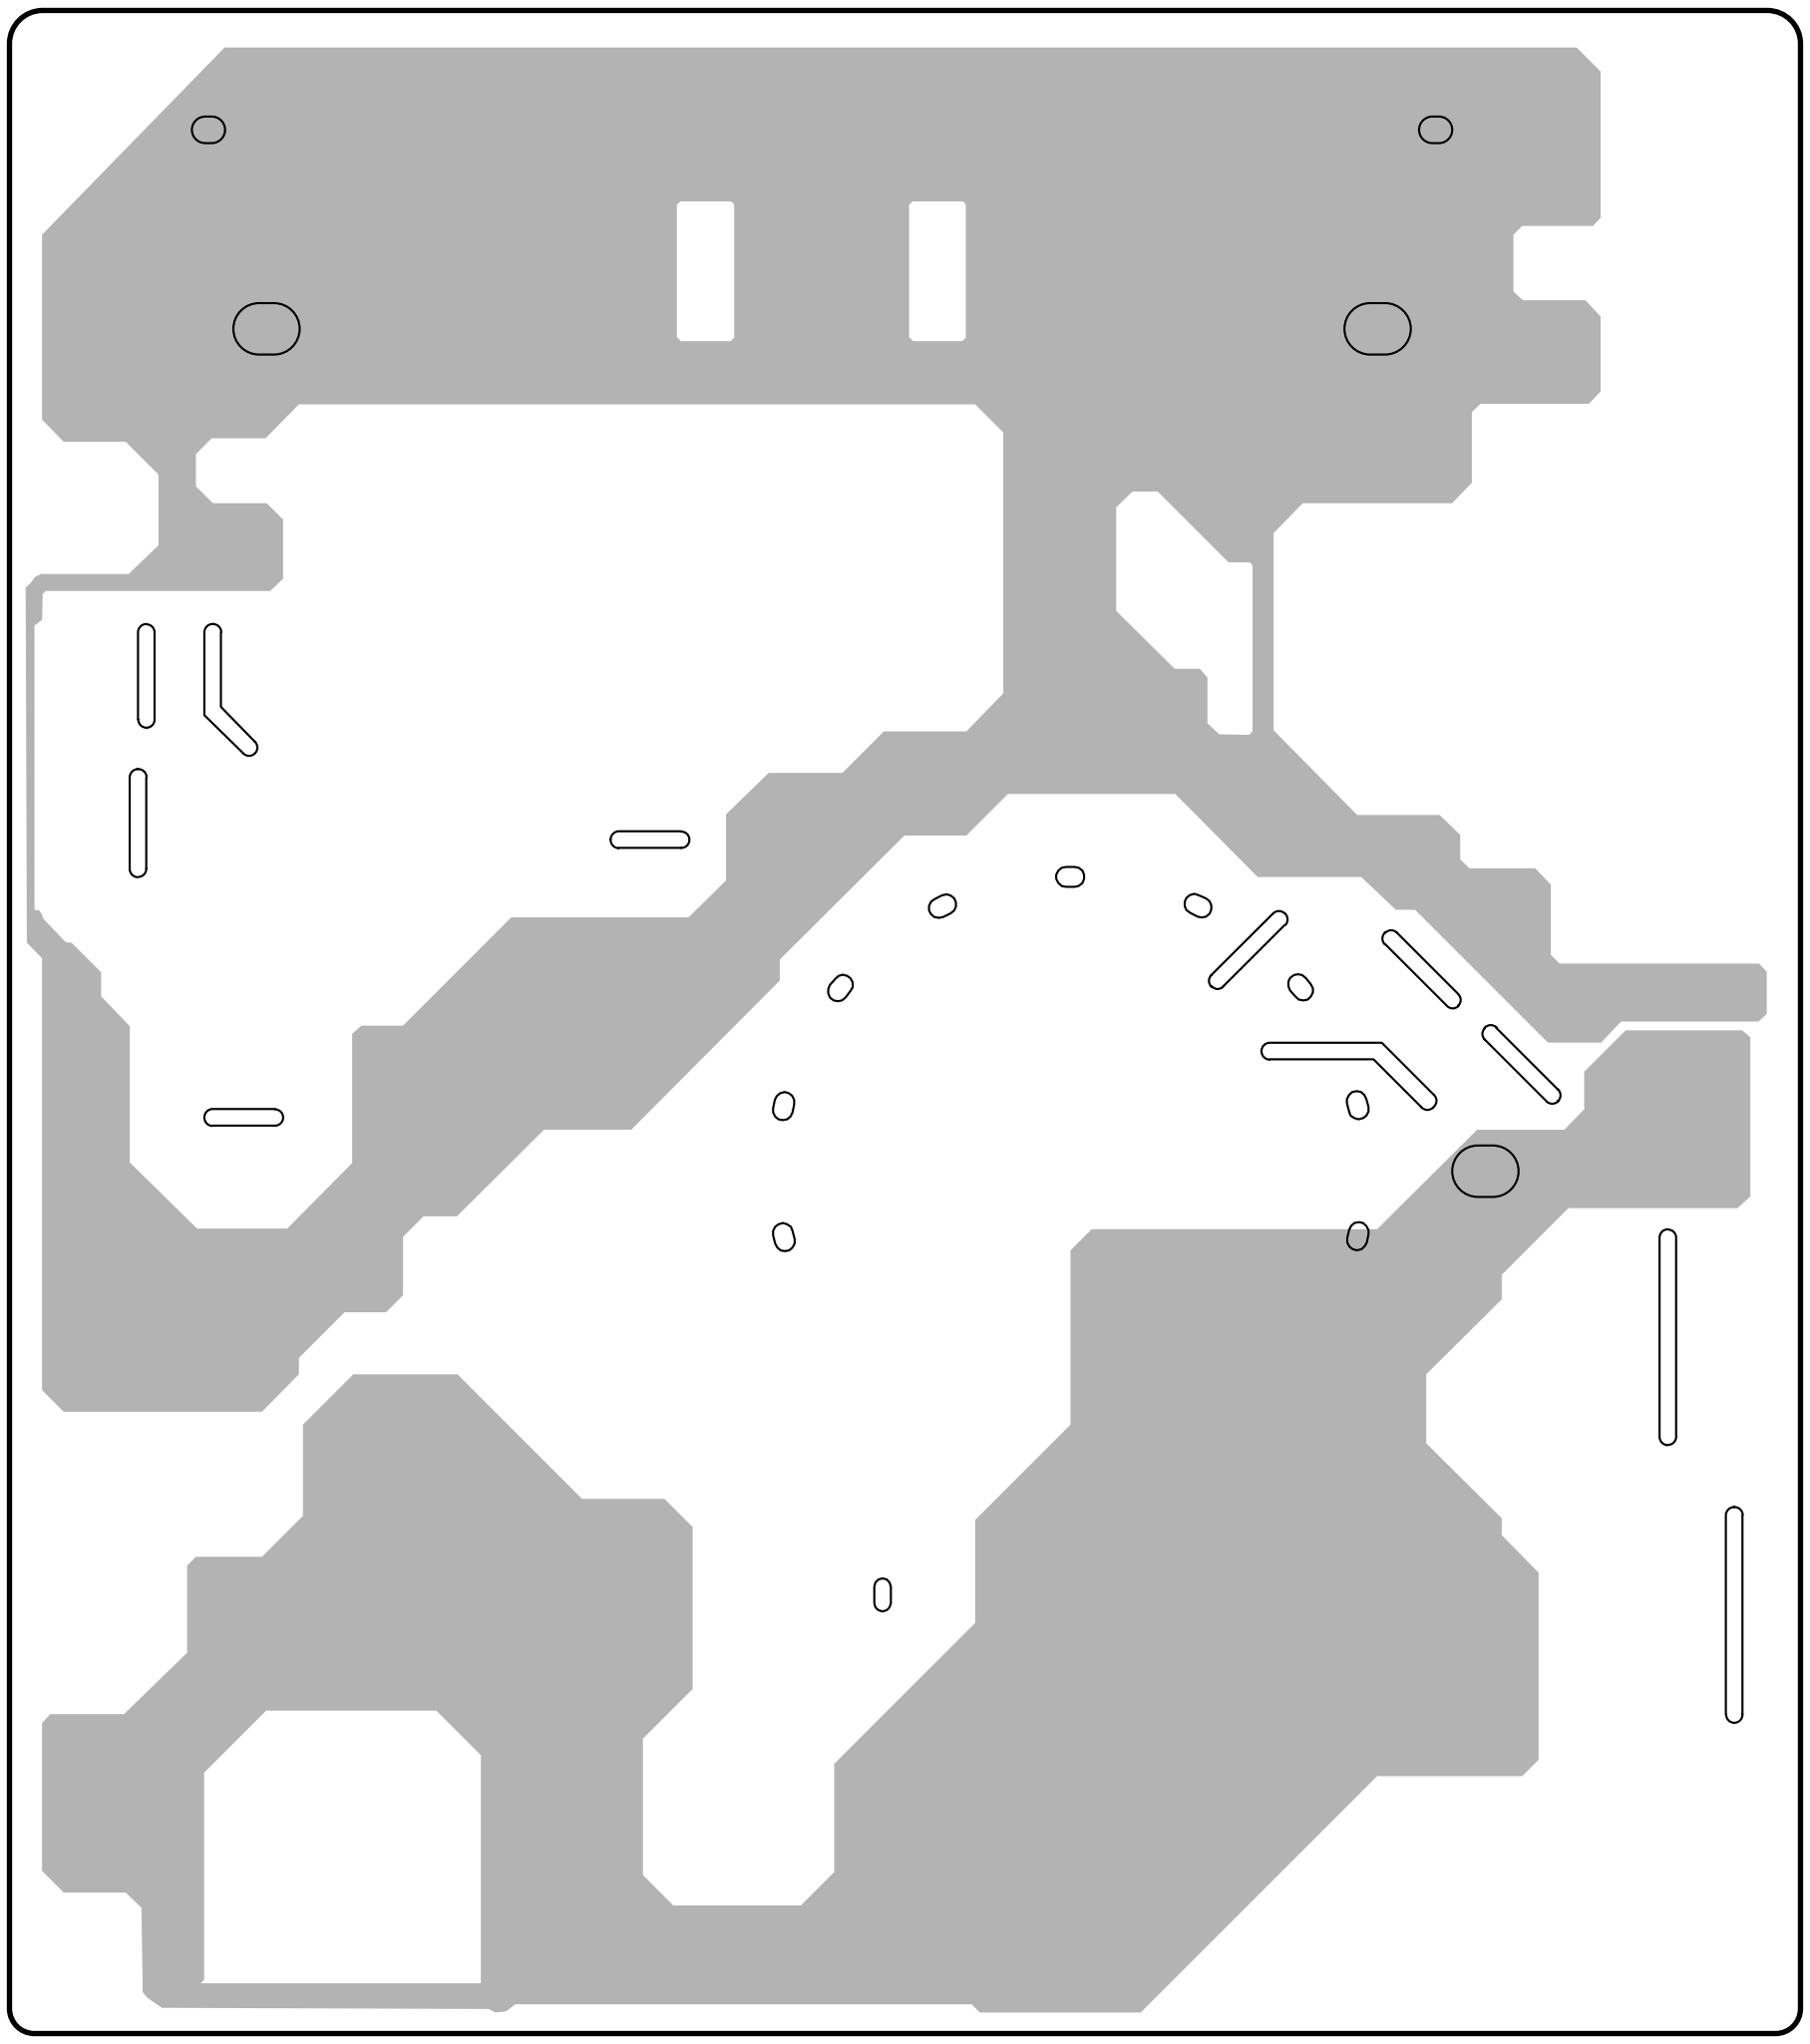

(ANP1944–E)

SIDE B

4.10 B CRT DRIVE ASSY

O B CRT DRIVE ASSY

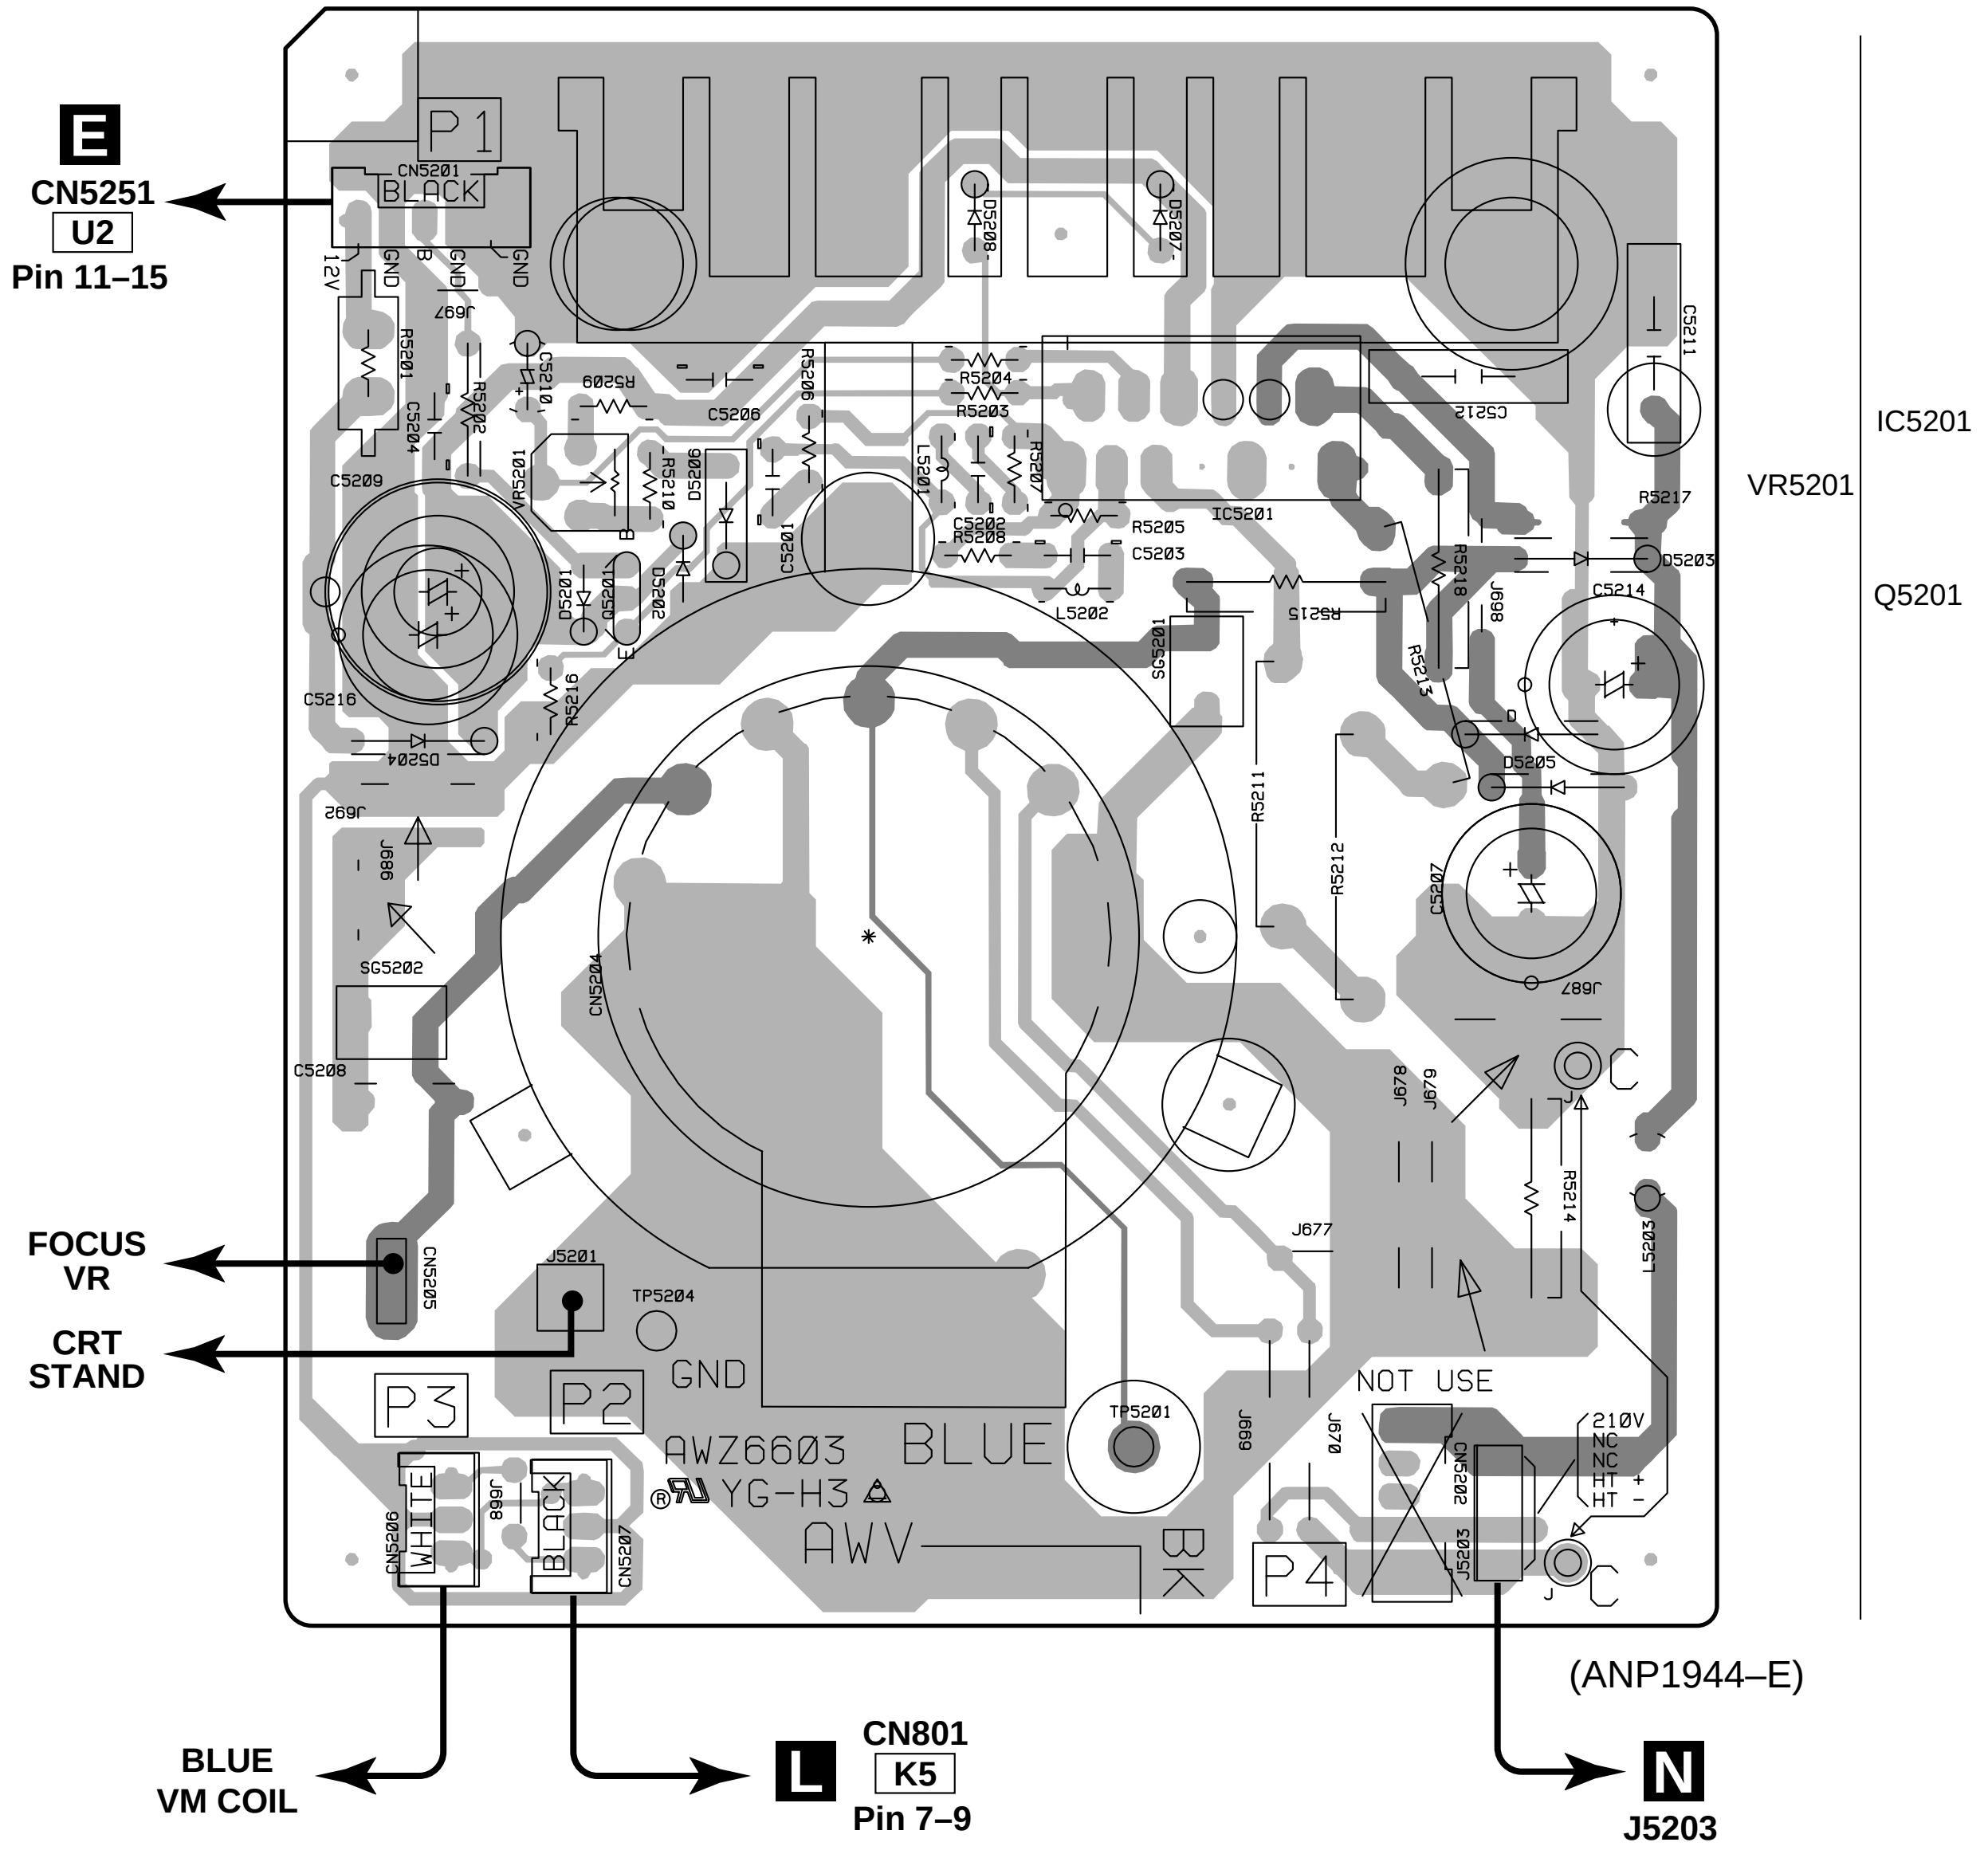
E
CN5251
U2
Pin 11–15
P1
CN5201
BLACK
12V
GND
B
GND
GND
J697
R5201
R5202
C5204
C5210
R5209
C5206
R5206
D5208
D5207
R5204
R5203
L5201
R5207
C5212
C5211
C5209
VR5201
R5210
D5206
C5201
C5202
R5208
R5205
C5203
IC5201
L5202
R5215
R5217
D5203
C5214
D5201
Q5201
D5202
R5216
SG5201
R5218
J698
R5213
C5216
D5204
J692
J686
SG5202
C5208
R5211
R5212
D5205
C5207
J687
CN5204
J678
J679
R5214
L5203
J677
CN5205
J5201
TP5204
GND
P3
P2
AWZ6603
BLUE
YG-H3
TP5201
J669
J670
NOT USE
CN5202
210V
NC
NC
HT +
HT -
CN5206
WHITE
J668
BLACK
CN5207
AWV
BK
P4
J5203
IC5201
VR5201
Q5201
FOCUS
VR
CRT
STAND
(ANP1944–E)
BLUE
VM COIL
L
CN801
K5
Pin 7–9
N
J5203

▨ : mark shows a high voltage generation point.

SIDE A

O B CRT DRIVE ASSY

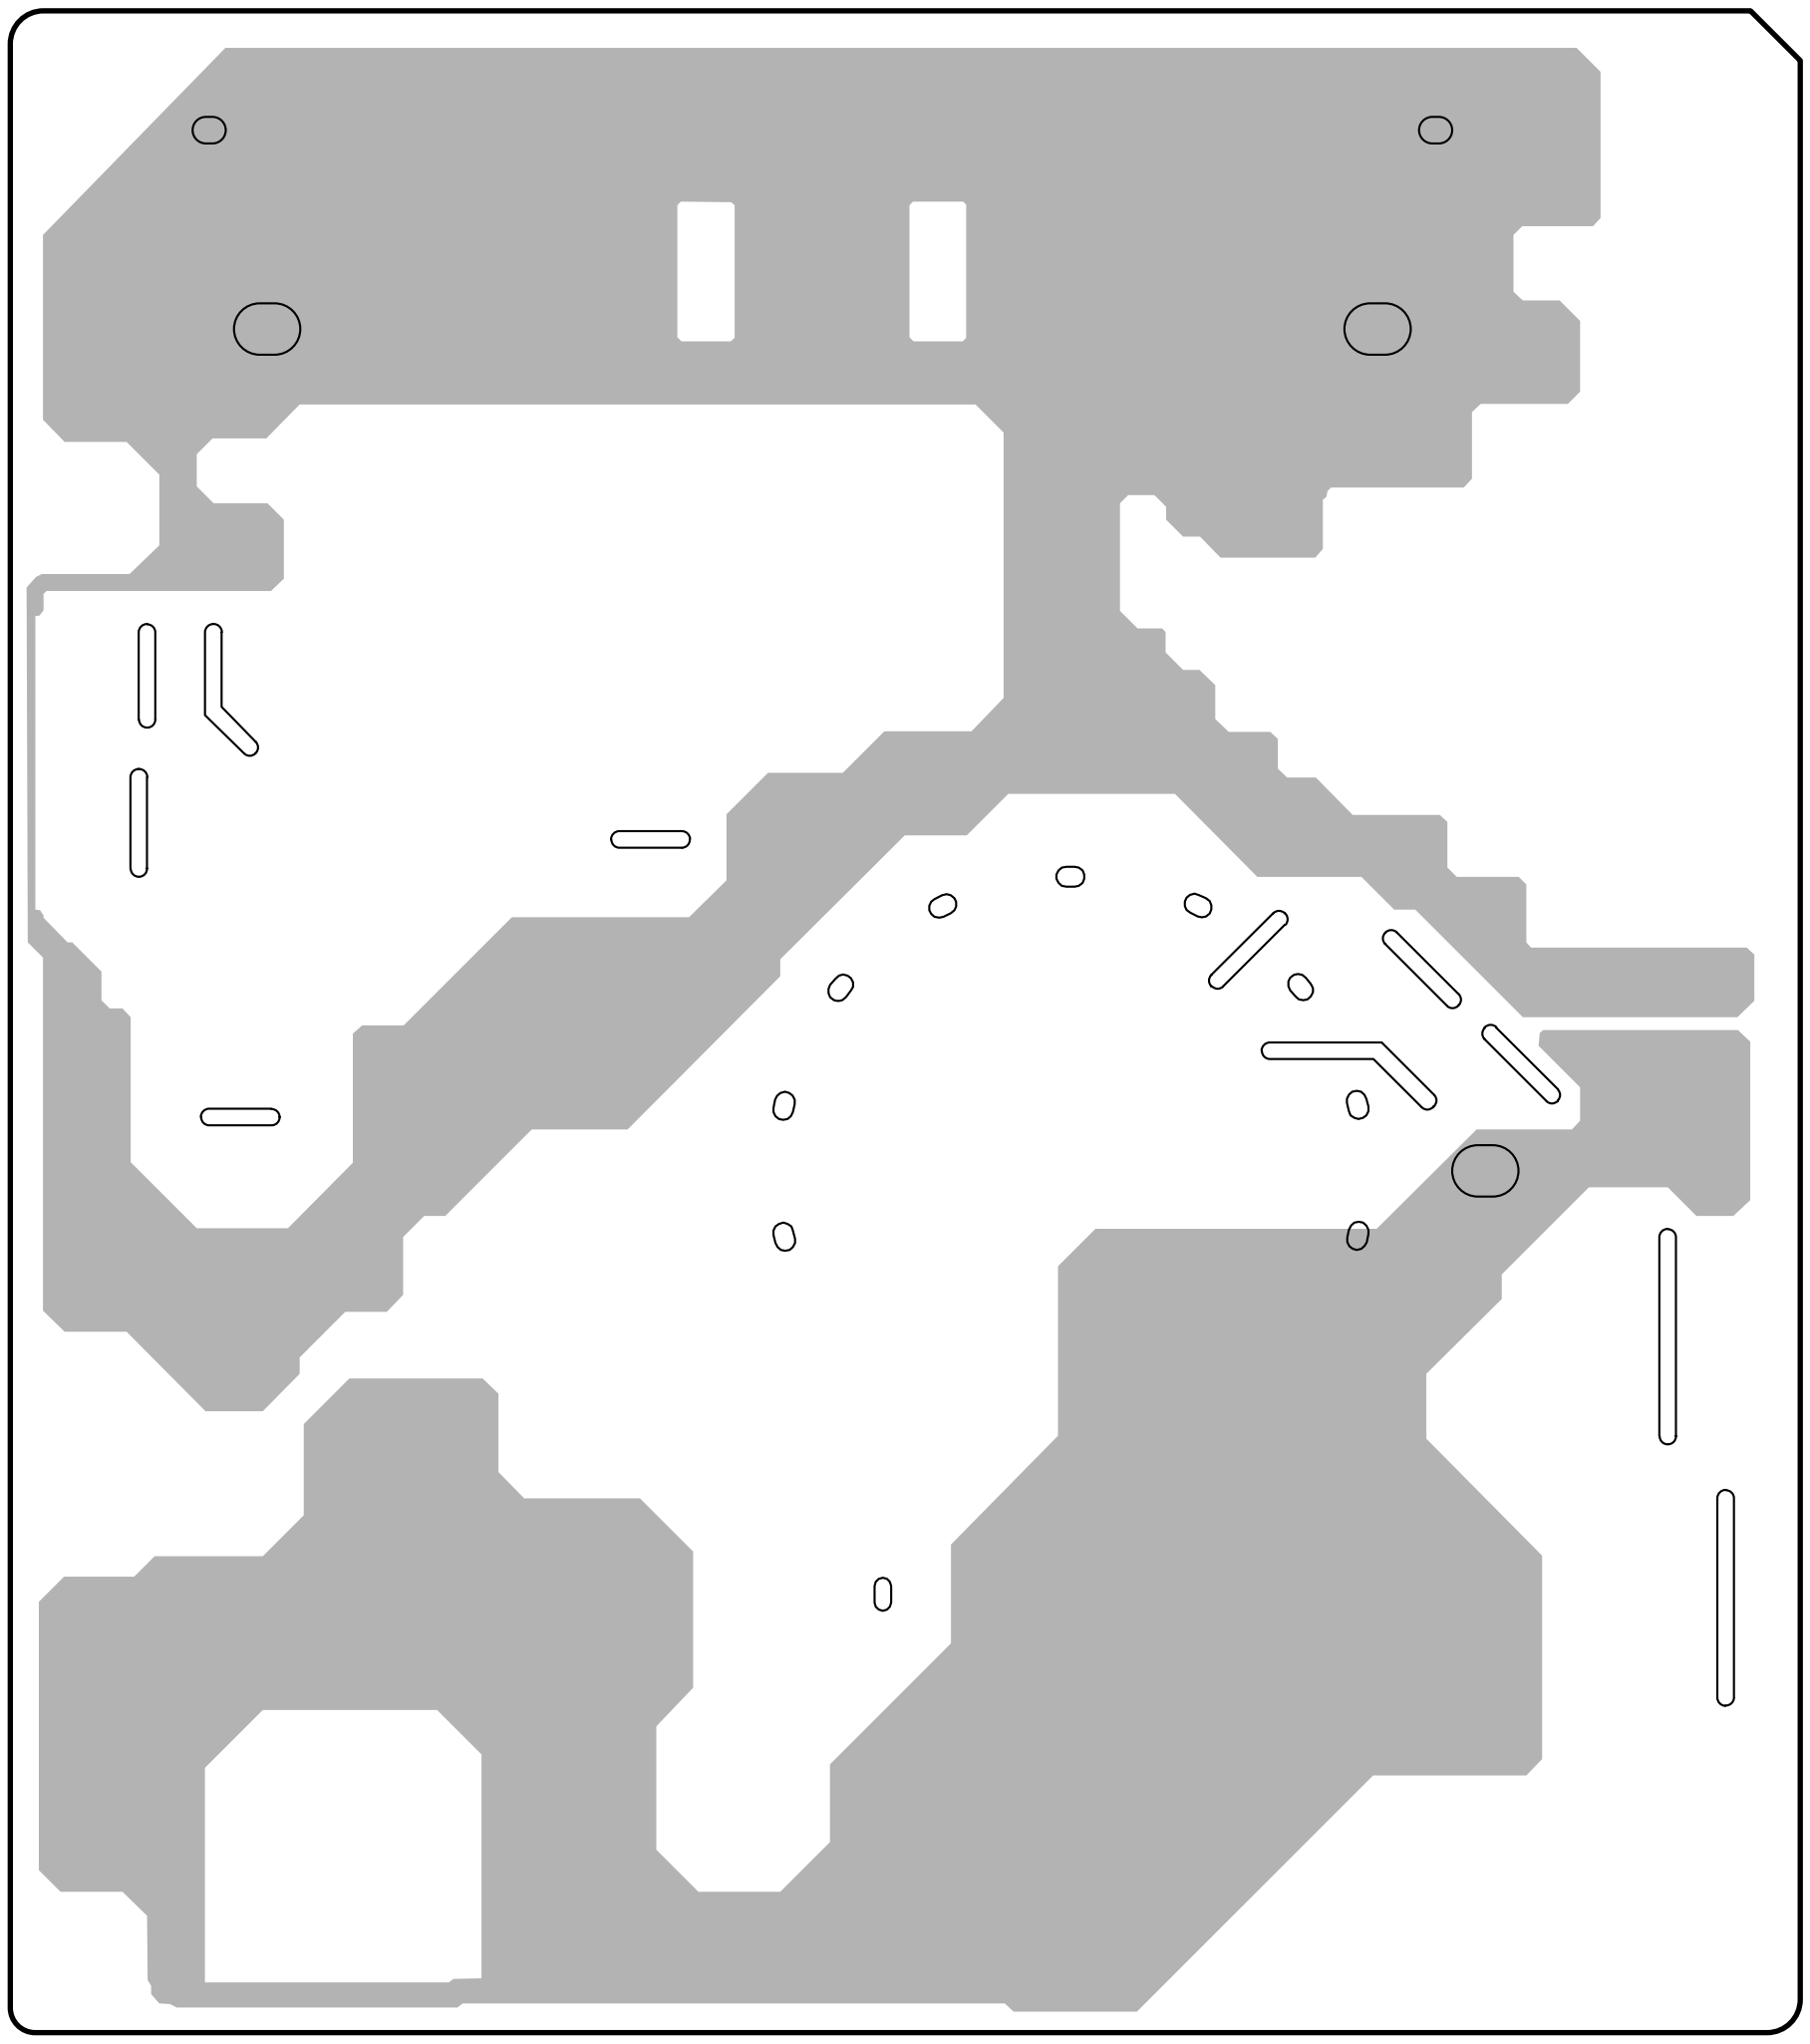

(ANP1944–E)

SIDE B

4.11 RGB SW, AUDIO, FRONT CONTROL and LED DPO ASSYS

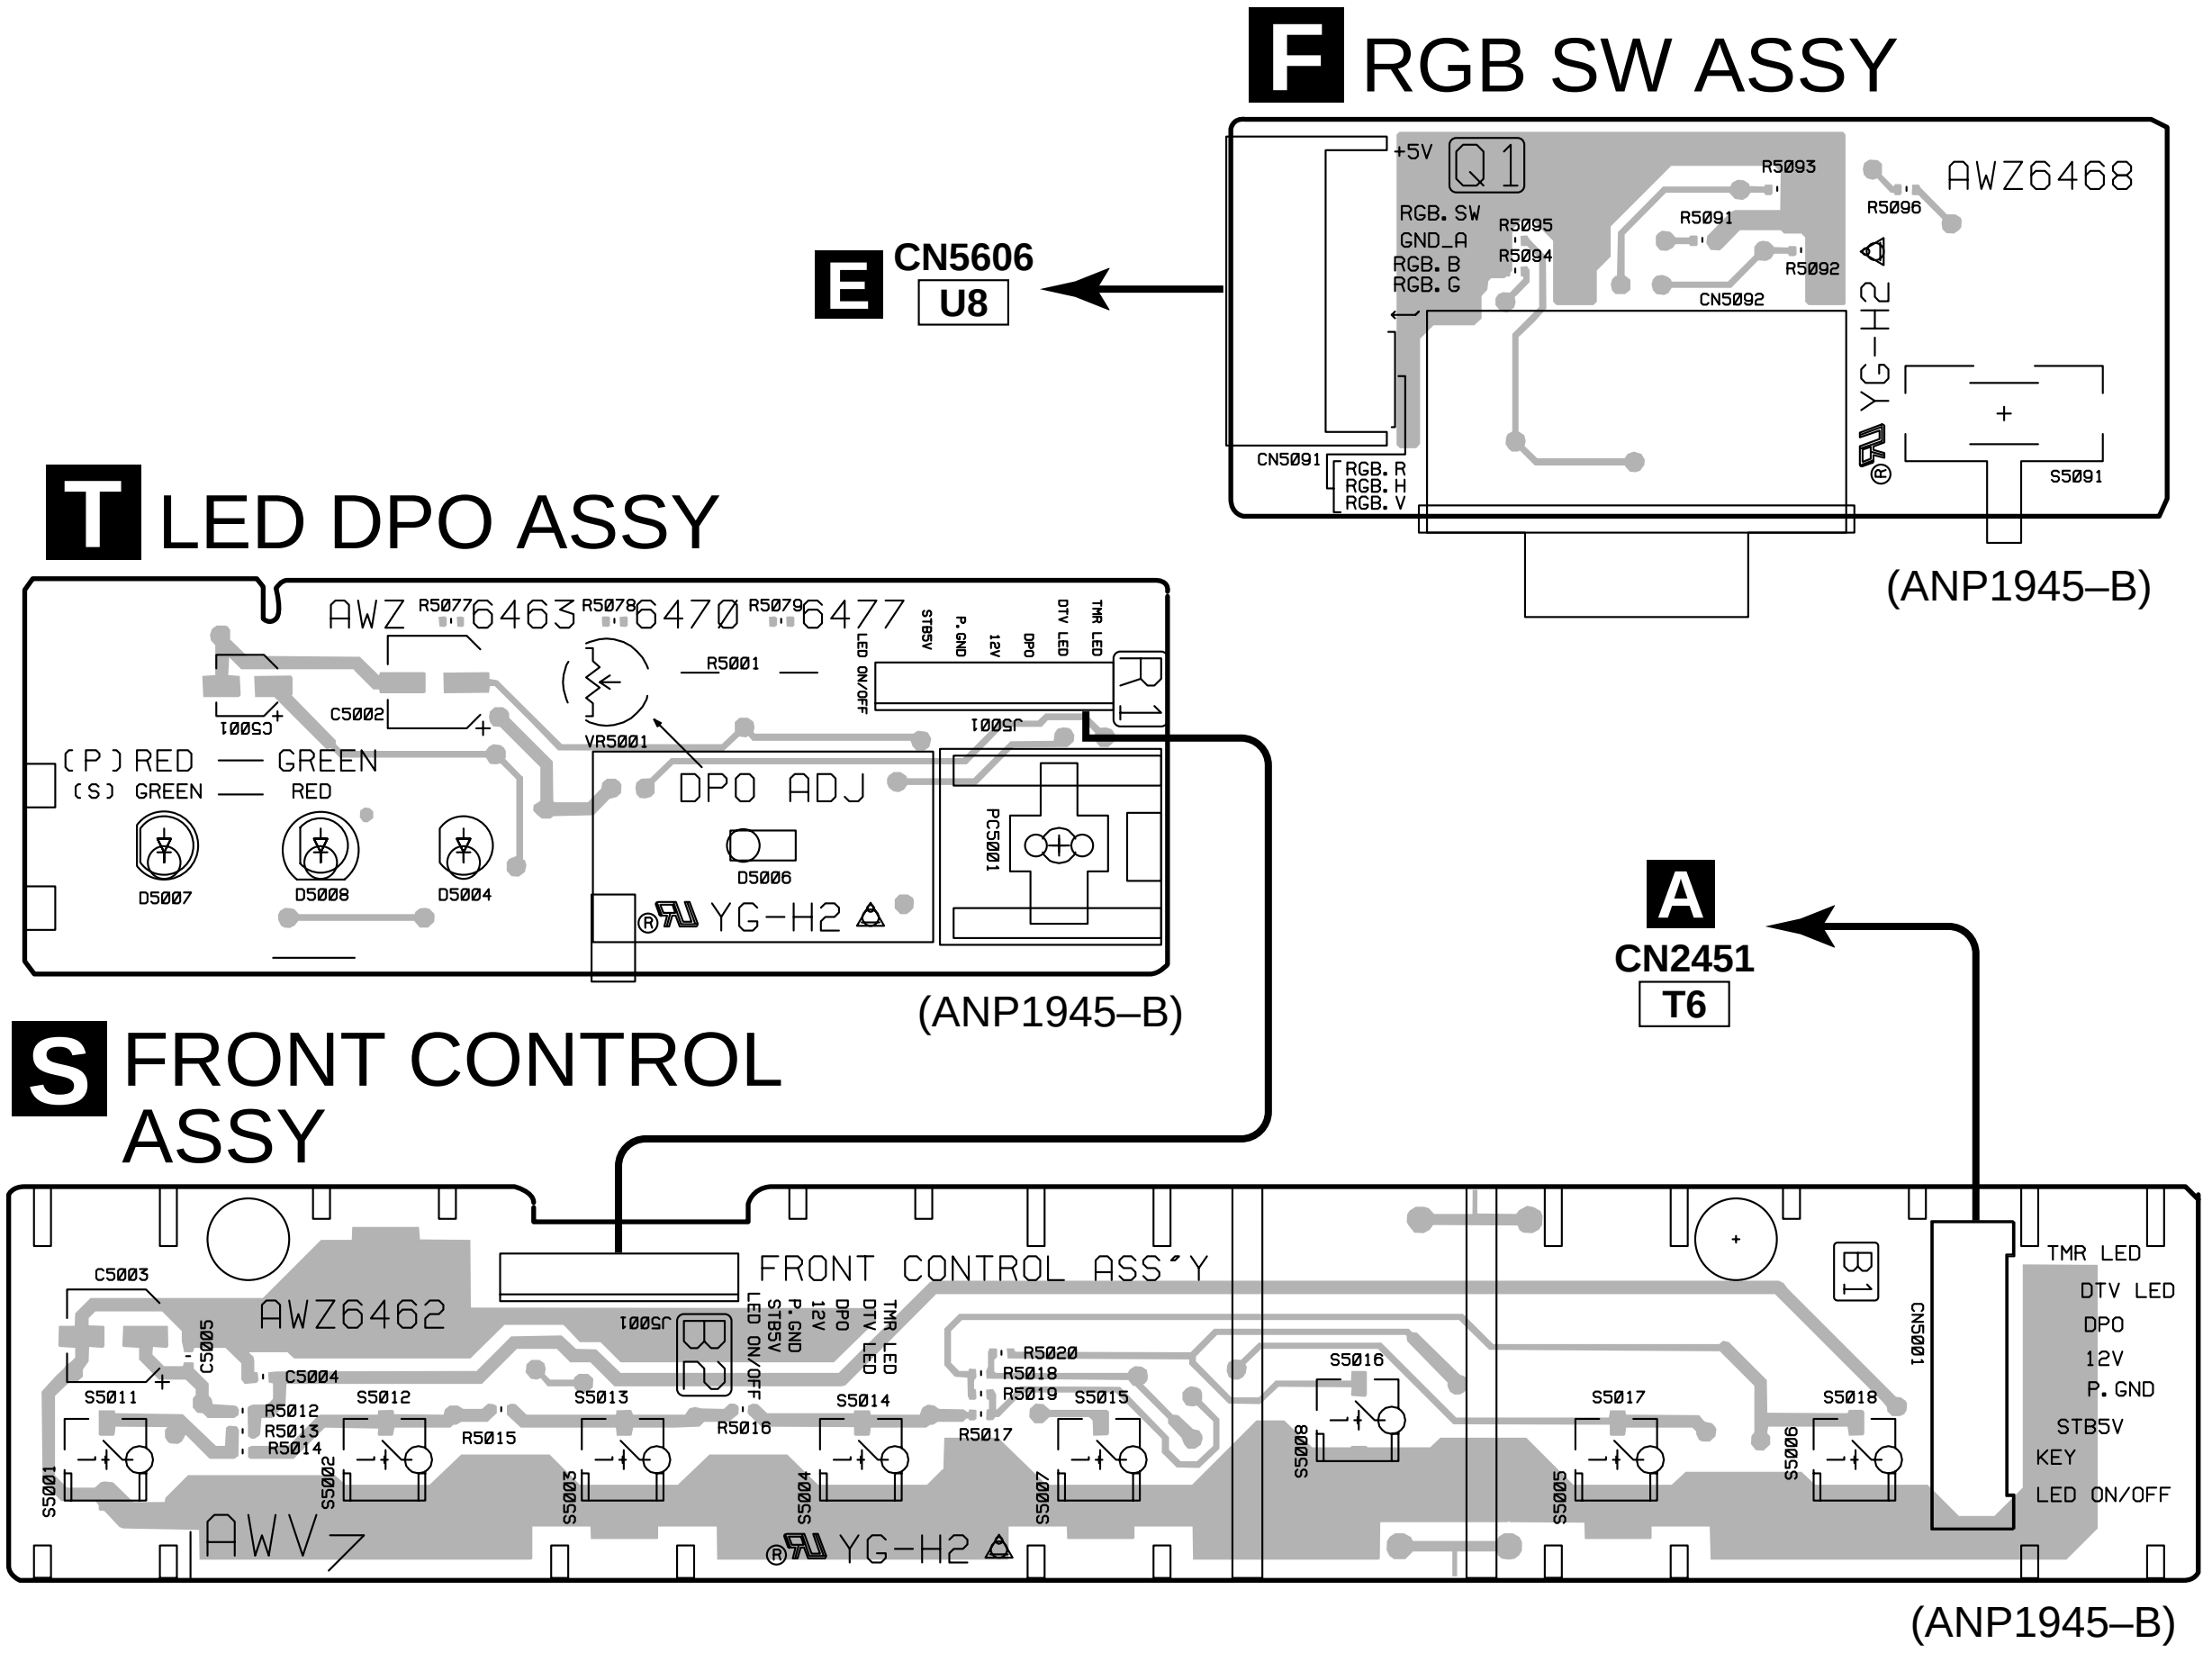

F RGB SW ASSY

T LED DPO ASSY

S FRONT CONTROL ASSY

A
B
E
CN5606
U8
+5V
Q1
RGB. SW
GND_A
RGB. B
RGB. G
R5093
R5095
R5094
R5091
R5092
R5096
AWZ6468
CN5092
YG-H2
CN5091
RGB. R
RGB. H
RGB. V
S5091
(ANP1945–B)
AWZ 6463 6470 6477
R5077
R5078
R5079
R5001
STB5V
P.GND
12V
DPO
DTV LED
TMR LED
LED ON/OFF
R1
J5001
C5001
C5002
VR5001
(P) RED — GREEN
(S) GREEN — RED
DPO ADJ
D5006
D5007
D5008
D5004
PC5001
YG-H2
(ANP1945–B)
A
CN2451
T6
C5003
AWZ6462
C5005
C5004
J5001
B2
FRONT CONTROL ASS'Y
R5012
R5013
R5014
R5015
R5016
R5017
R5018
R5019
R5020
S5011
S5012
S5013
S5014
S5015
S5016
S5017
S5018
S5001
S5002
S5003
S5004
S5007
S5008
S5005
S5006
AWV
YG-H2
B1
CN5001
TMR LED
DTV LED
DPO
12V
P.GND
STB5V
KEY
LED ON/OFF
(ANP1945–B)

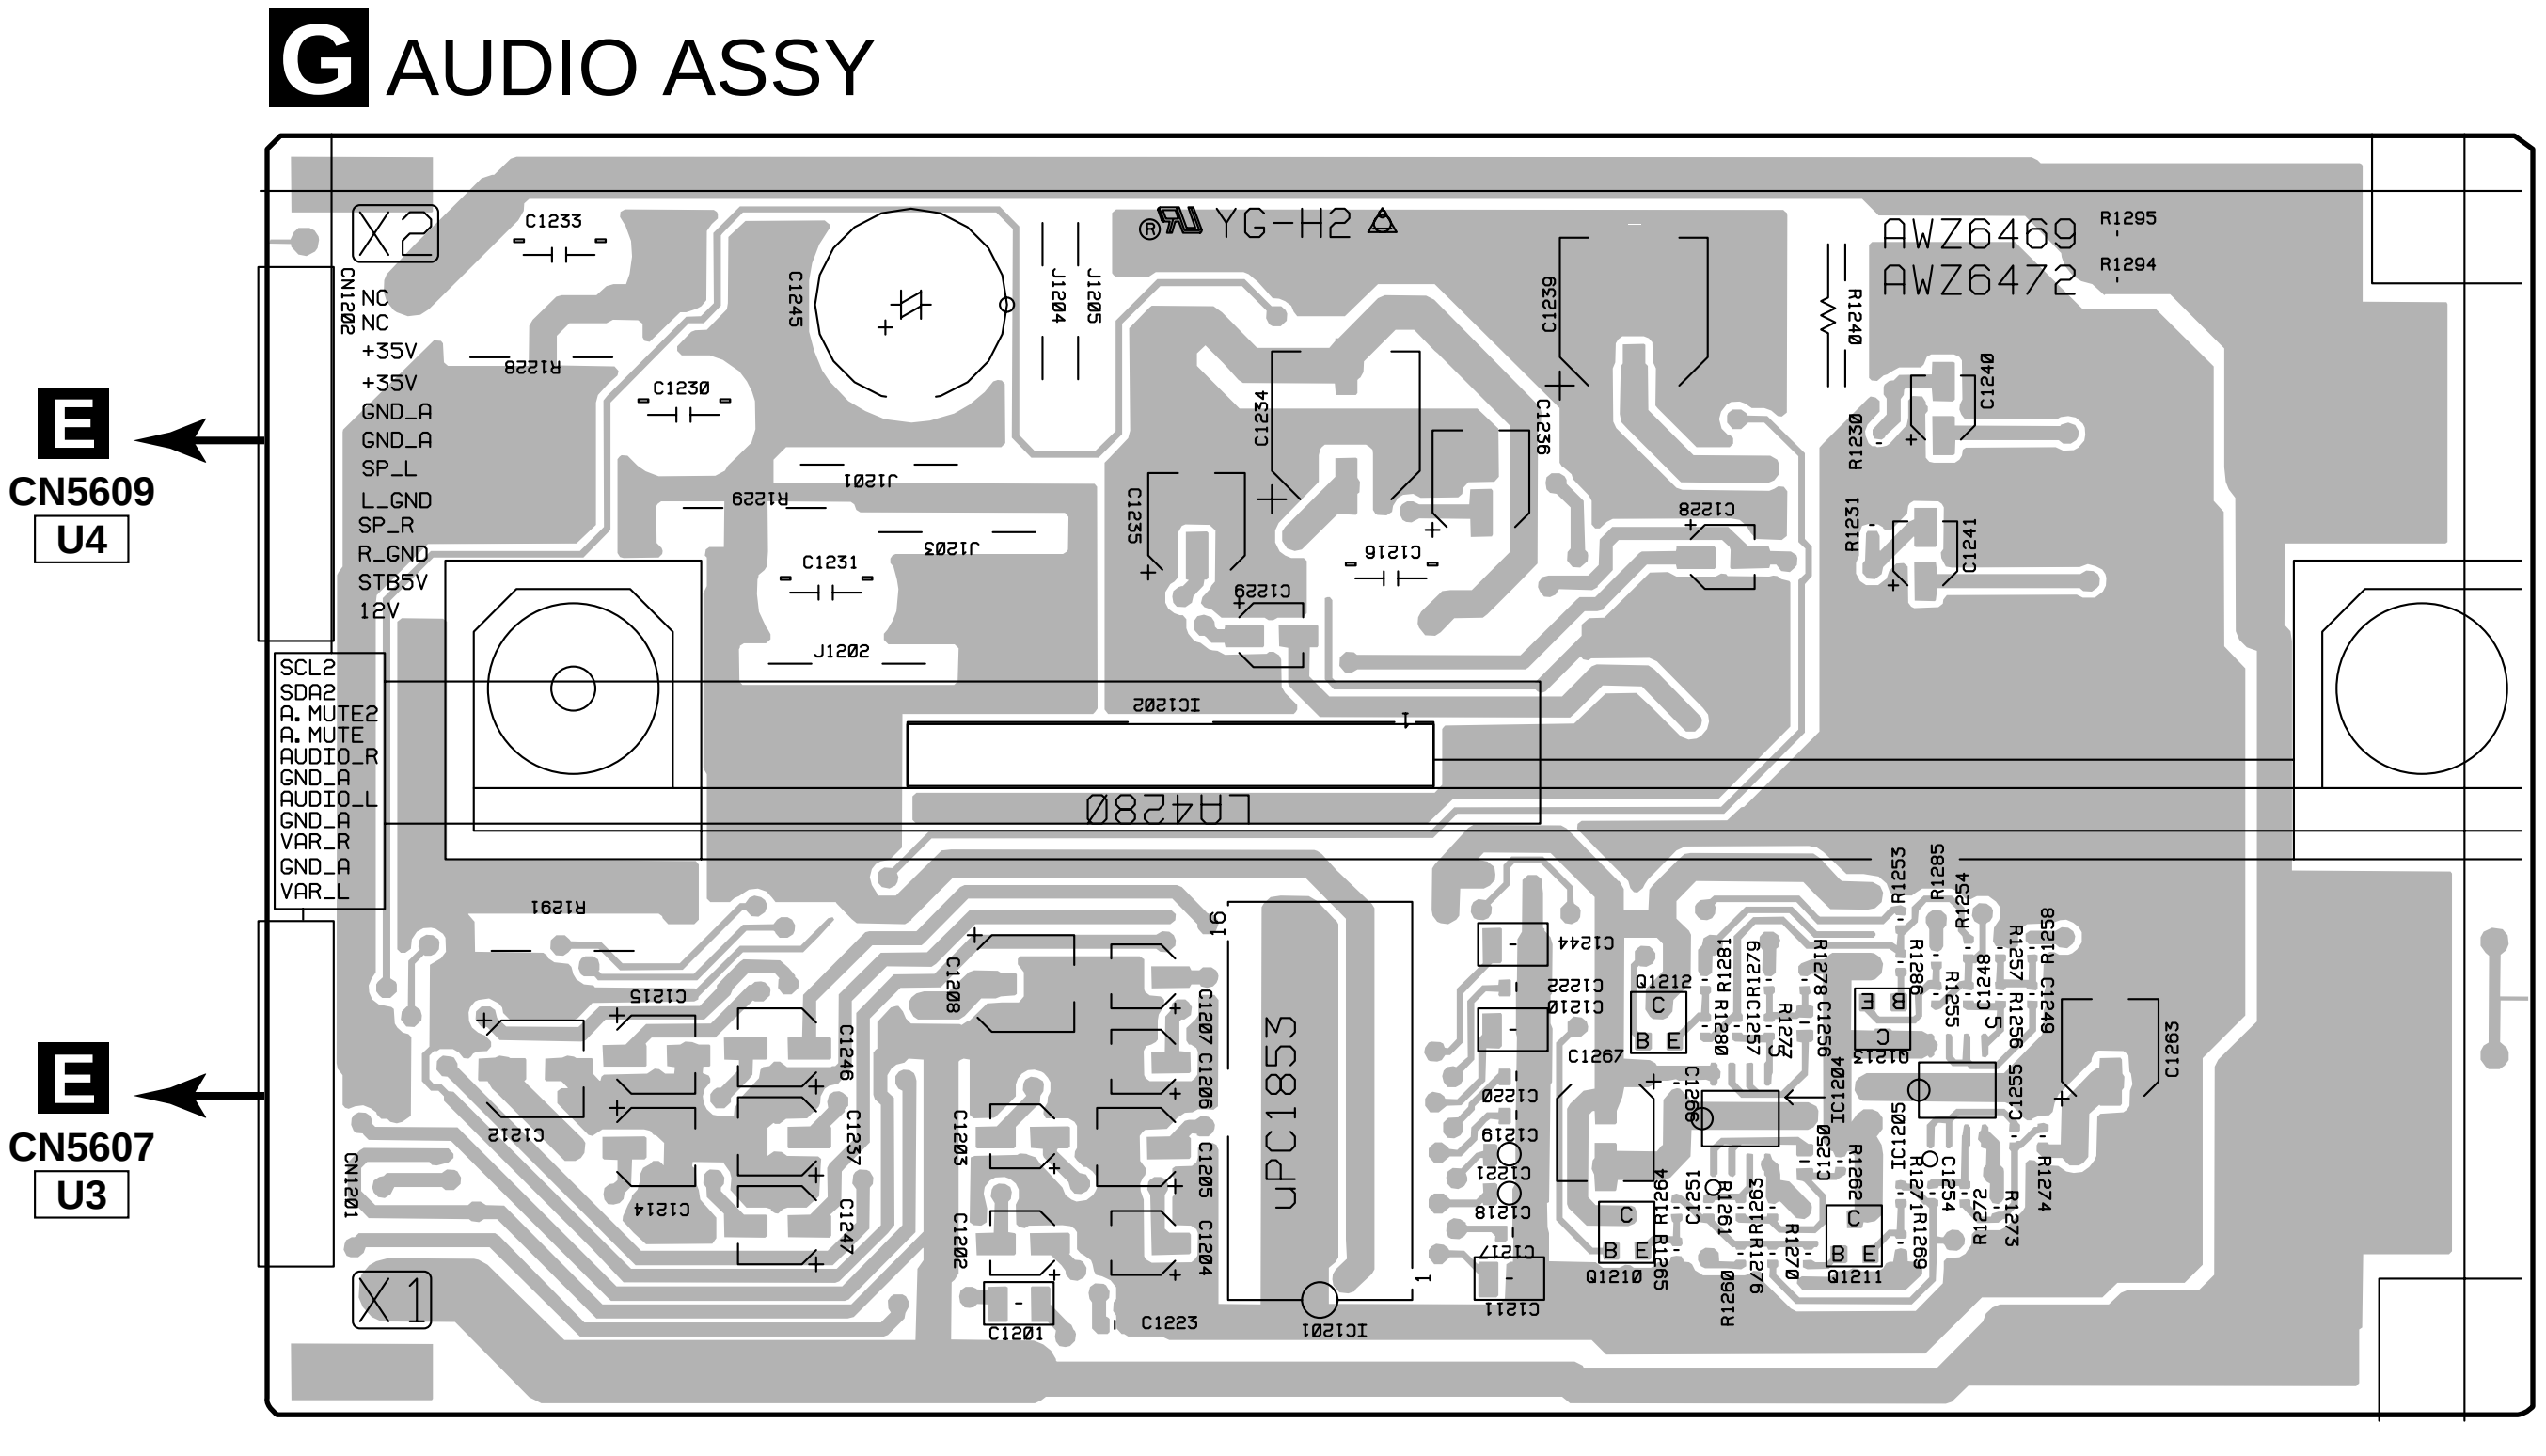

G AUDIO ASSY

X2
C1233
YG-H2
AWZ6469
AWZ6472
R1295
R1294
CN1202
NC
NC
+35V
+35V
GND_A
GND_A
SP_L
L_GND
SP_R
R_GND
STB5V
12V
E
CN5609
U4
C1245
J1204
J1205
C1239
R1240
R1228
C1230
C1234
C1236
C1240
R1230
R1229
J1201
C1235
C1238
R1231
C1241
C1231
J1203
C1216
C1229
J1202
IC1202
LA4280
SCL2
SDA2
A. MUTE2
A. MUTE
AUDIO_R
GND_A
AUDIO_L
GND_A
VAR_R
GND_A
VAR_L
R1291
C1215
C1208
C1244
C1222
C1210
C1246
C1212
C1237
C1214
C1247
C1207
C1206
C1205
C1204
C1203
C1202
C1201
C1223
µPC1853
IC1201
C1220
C1219
C1221
C1218
C1211
Q1212
Q1213
Q1210
Q1211
C1267
R1253
R1285
R1254
R1258
C1263
C1255
R1274
R1273
R1272
R1264
R1265
R1260
R1270
R1276
R1261
R1262
R1263
R1269
C1251
C1250
C1256
IC1204
IC1205
CN1201
E
CN5607
U3
X1

IC1202 IC1201 Q1212 Q1213 IC1204 IC1205 Q1210 Q1211

(ANP1945–B)

SIDE A

F RGB SW ASSY

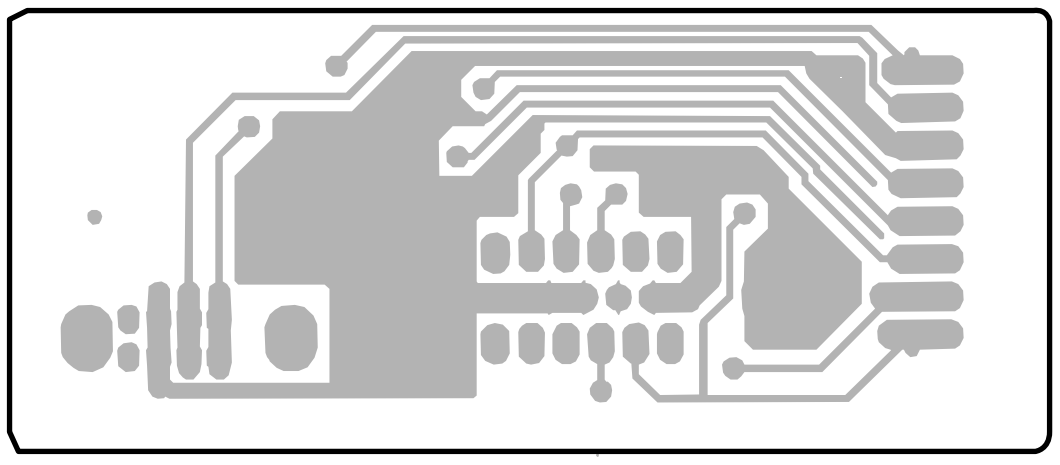

(ANP1945–B)

T LED DPO ASSY

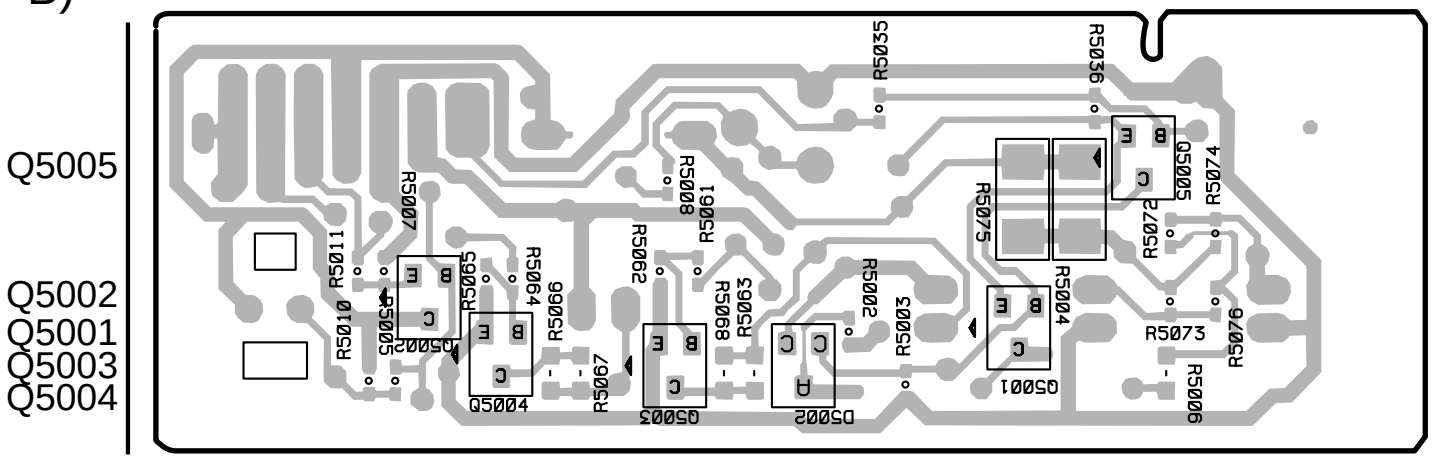
Q5005
Q5002
Q5001
Q5003
Q5004
R5035
R5036
R5074
R5075
R5072
R5073
R5076
R5004
R5002
R5003
R5008
R5061
R5062
R5063
R5068
R5067
R5064
R5066
R5007
R5011
R5010
R5065
R5006
Q5001
Q5002
Q5003
Q5004
Q5005

(ANP1945–B)

S FRONT CONTROL ASSY

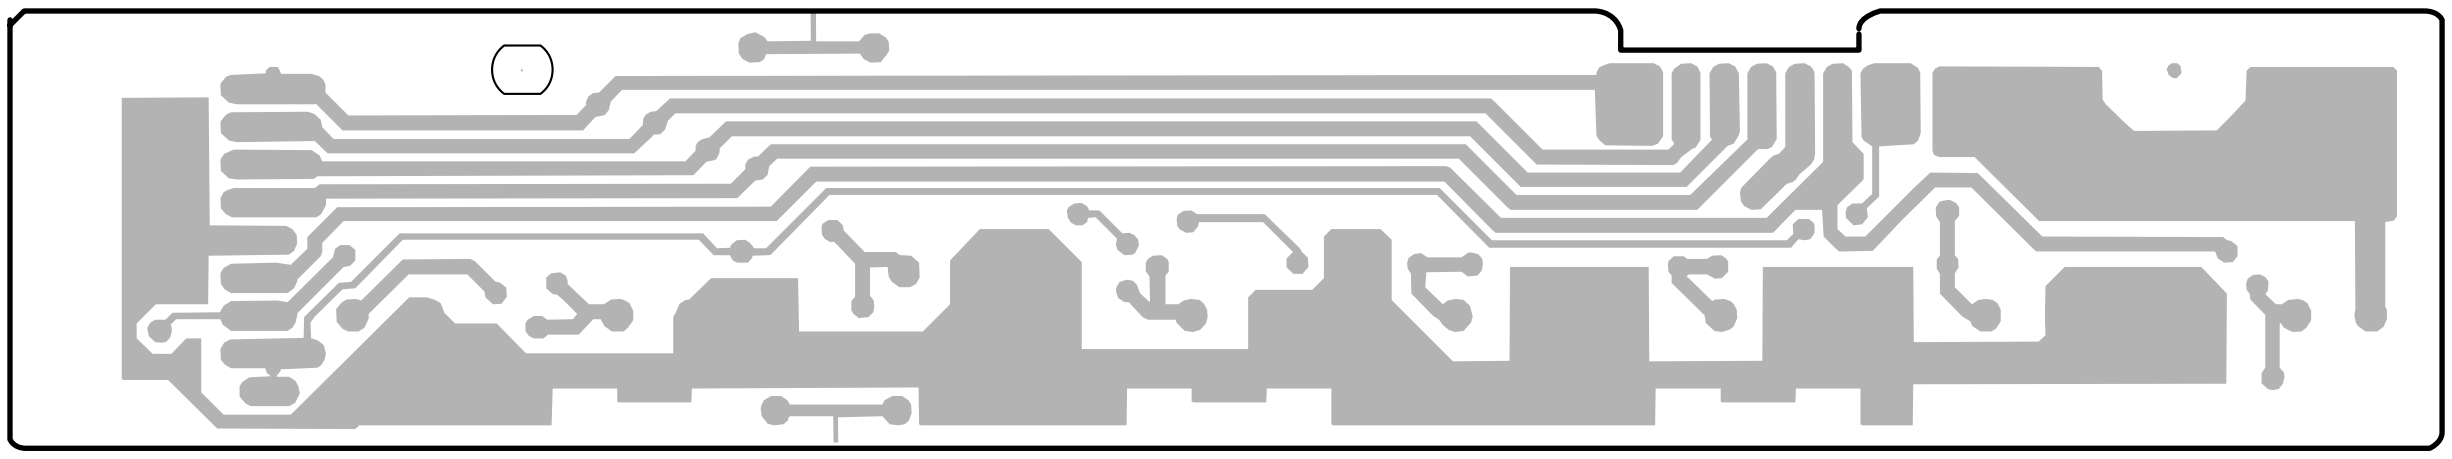

(ANP1945–B)

G AUDIO ASSY

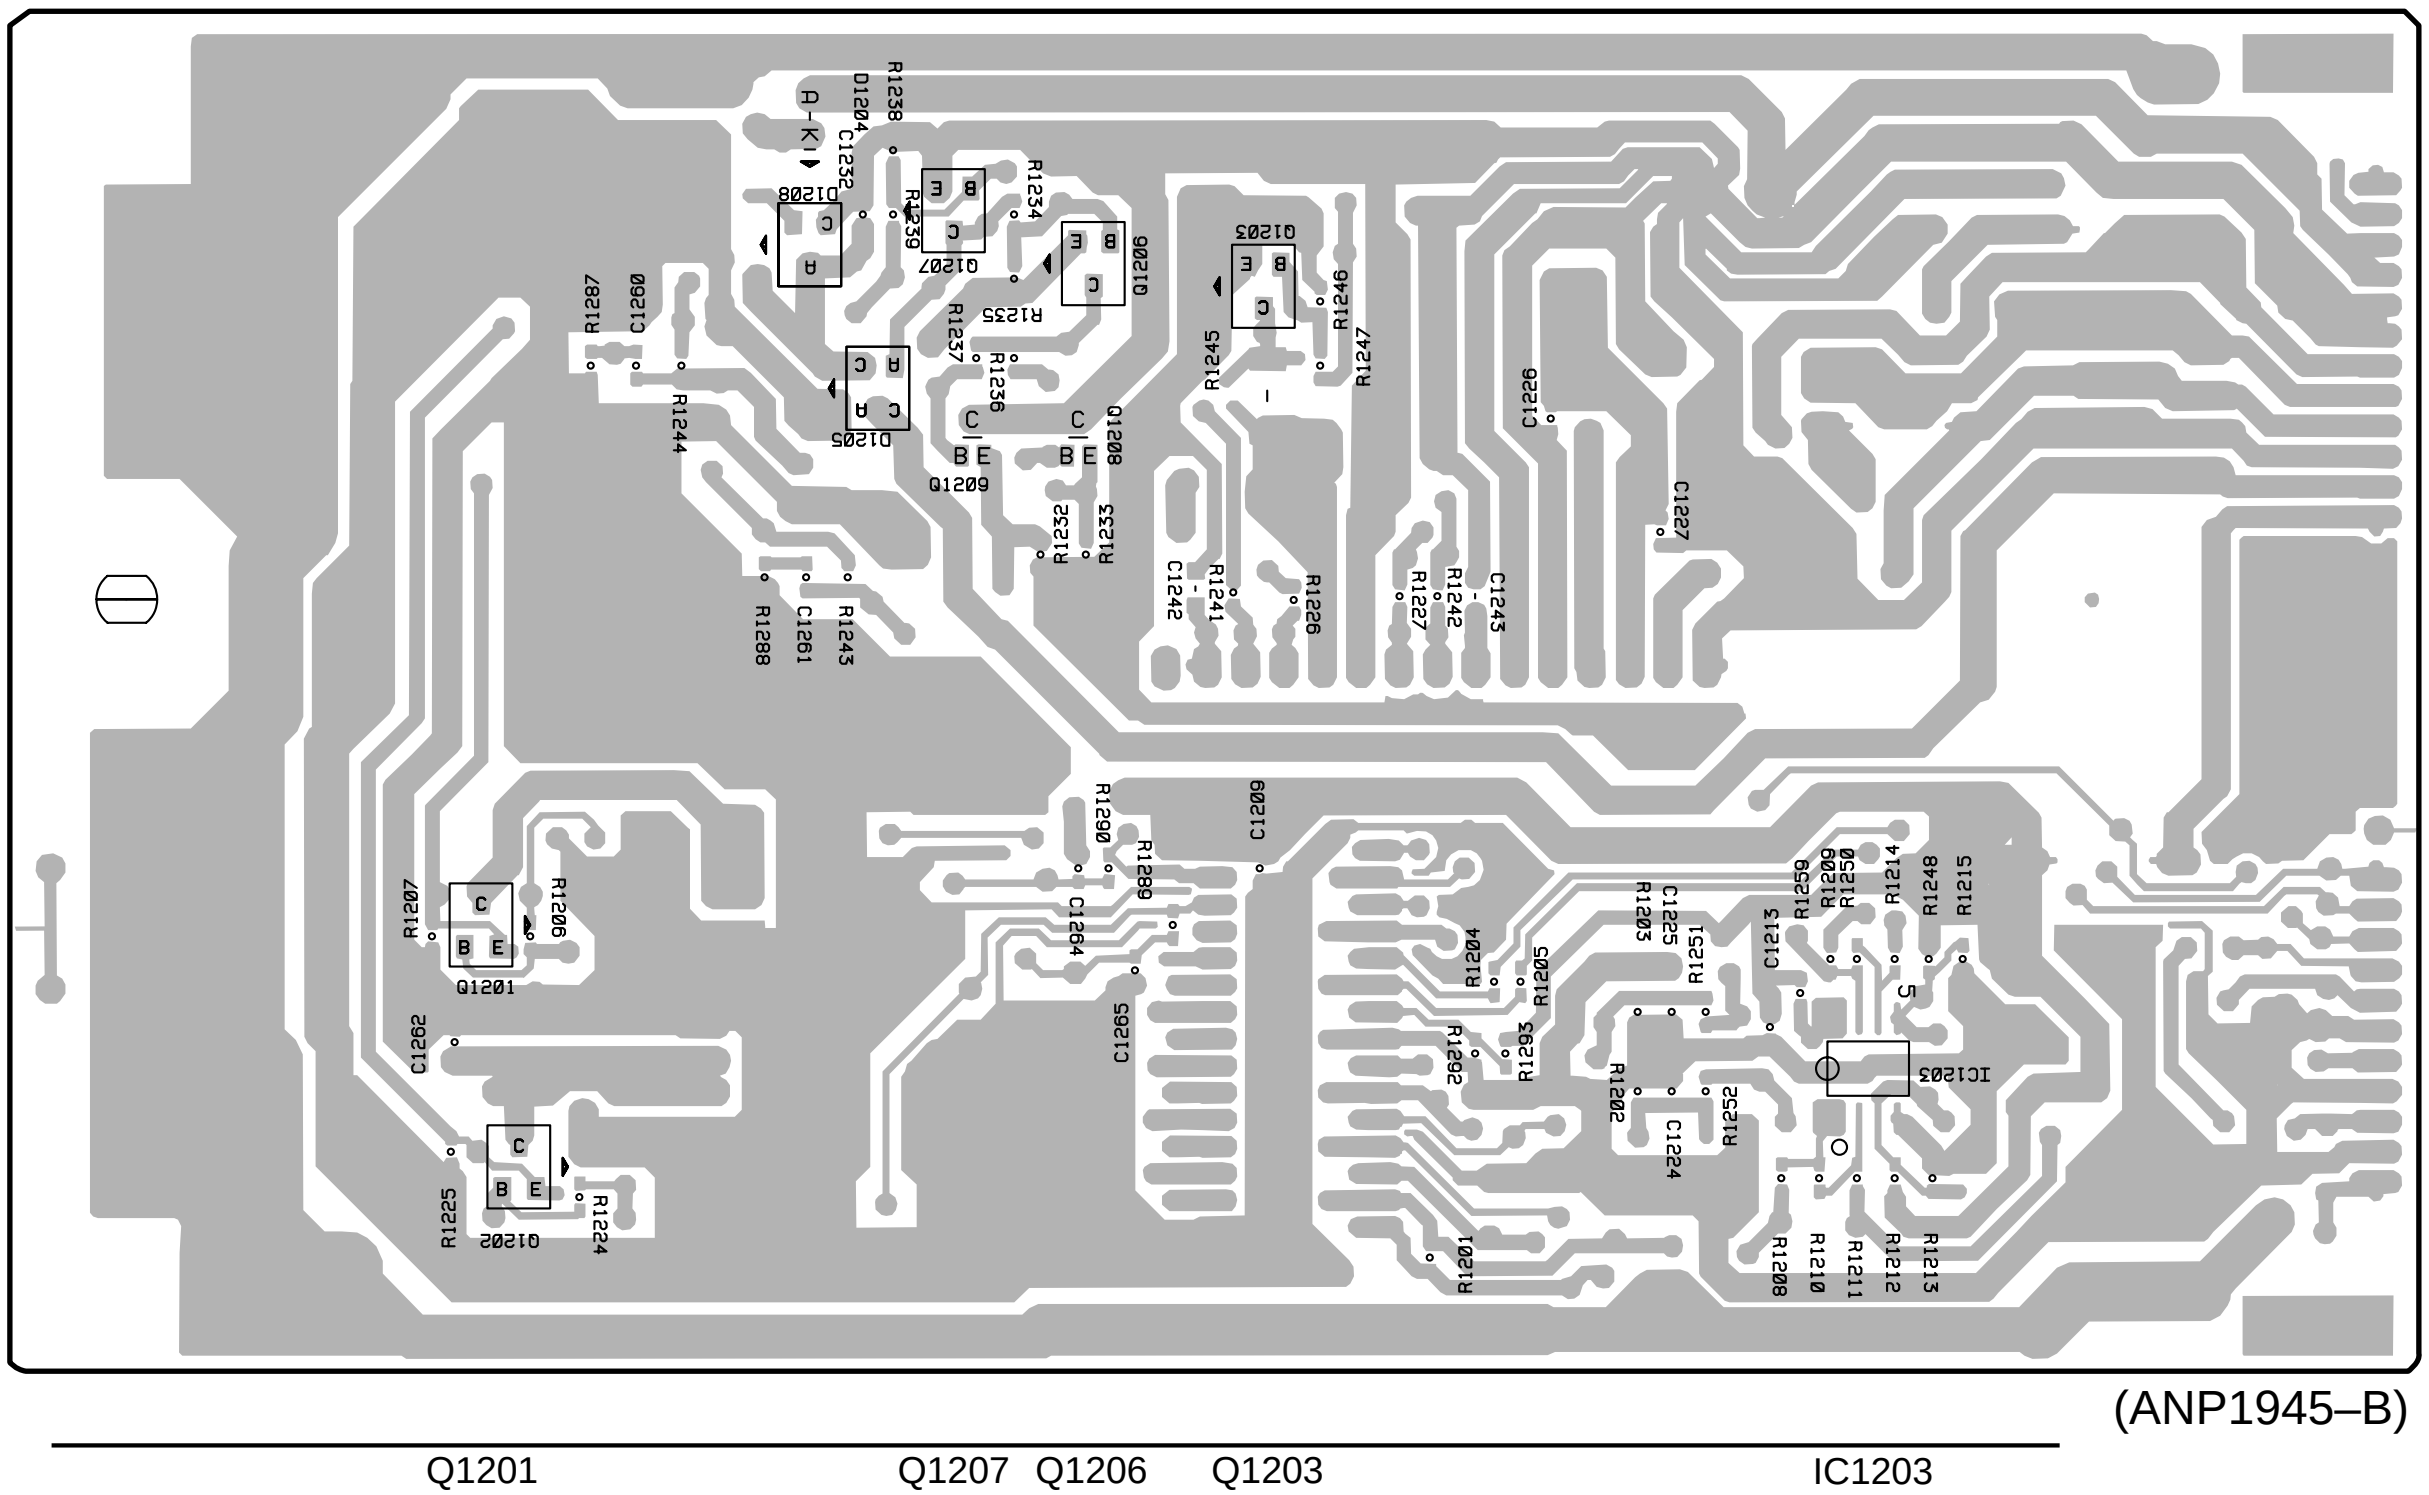
Q1201
Q1202
Q1207 Q1206
Q1209 Q1208
Q1203
IC1203
IC1203
R1238
D1204
C1232
D1208
R1239
R1234
Q1207
Q1210
Q1203
R1246
R1247
R1245
R1235
R1237
R1236
Q1205
Q1209
Q1208
R1287
C1200
R1244
R1288
C1261
R1243
R1232
R1233
C1242
R1241
R1226
R1227
R1242
C1243
C1226
C1227
R1290
R1289
C1209
C1264
C1265
R1207
R1206
Q1201
C1262
R1225
R1224
Q1202
R1204
R1205
R1203
C1225
R1251
C1213
R1250
R1209
R1214
R1248
R1215
R1292
R1293
R1202
C1224
R1252
R1201
R1208
R1210
R1211
R1212
R1213

(ANP1945–B)

SIDE B

4.12 POWER SUPPLY and POWER SW ASSYS

P-a

P POWER SUPPLY ASSY

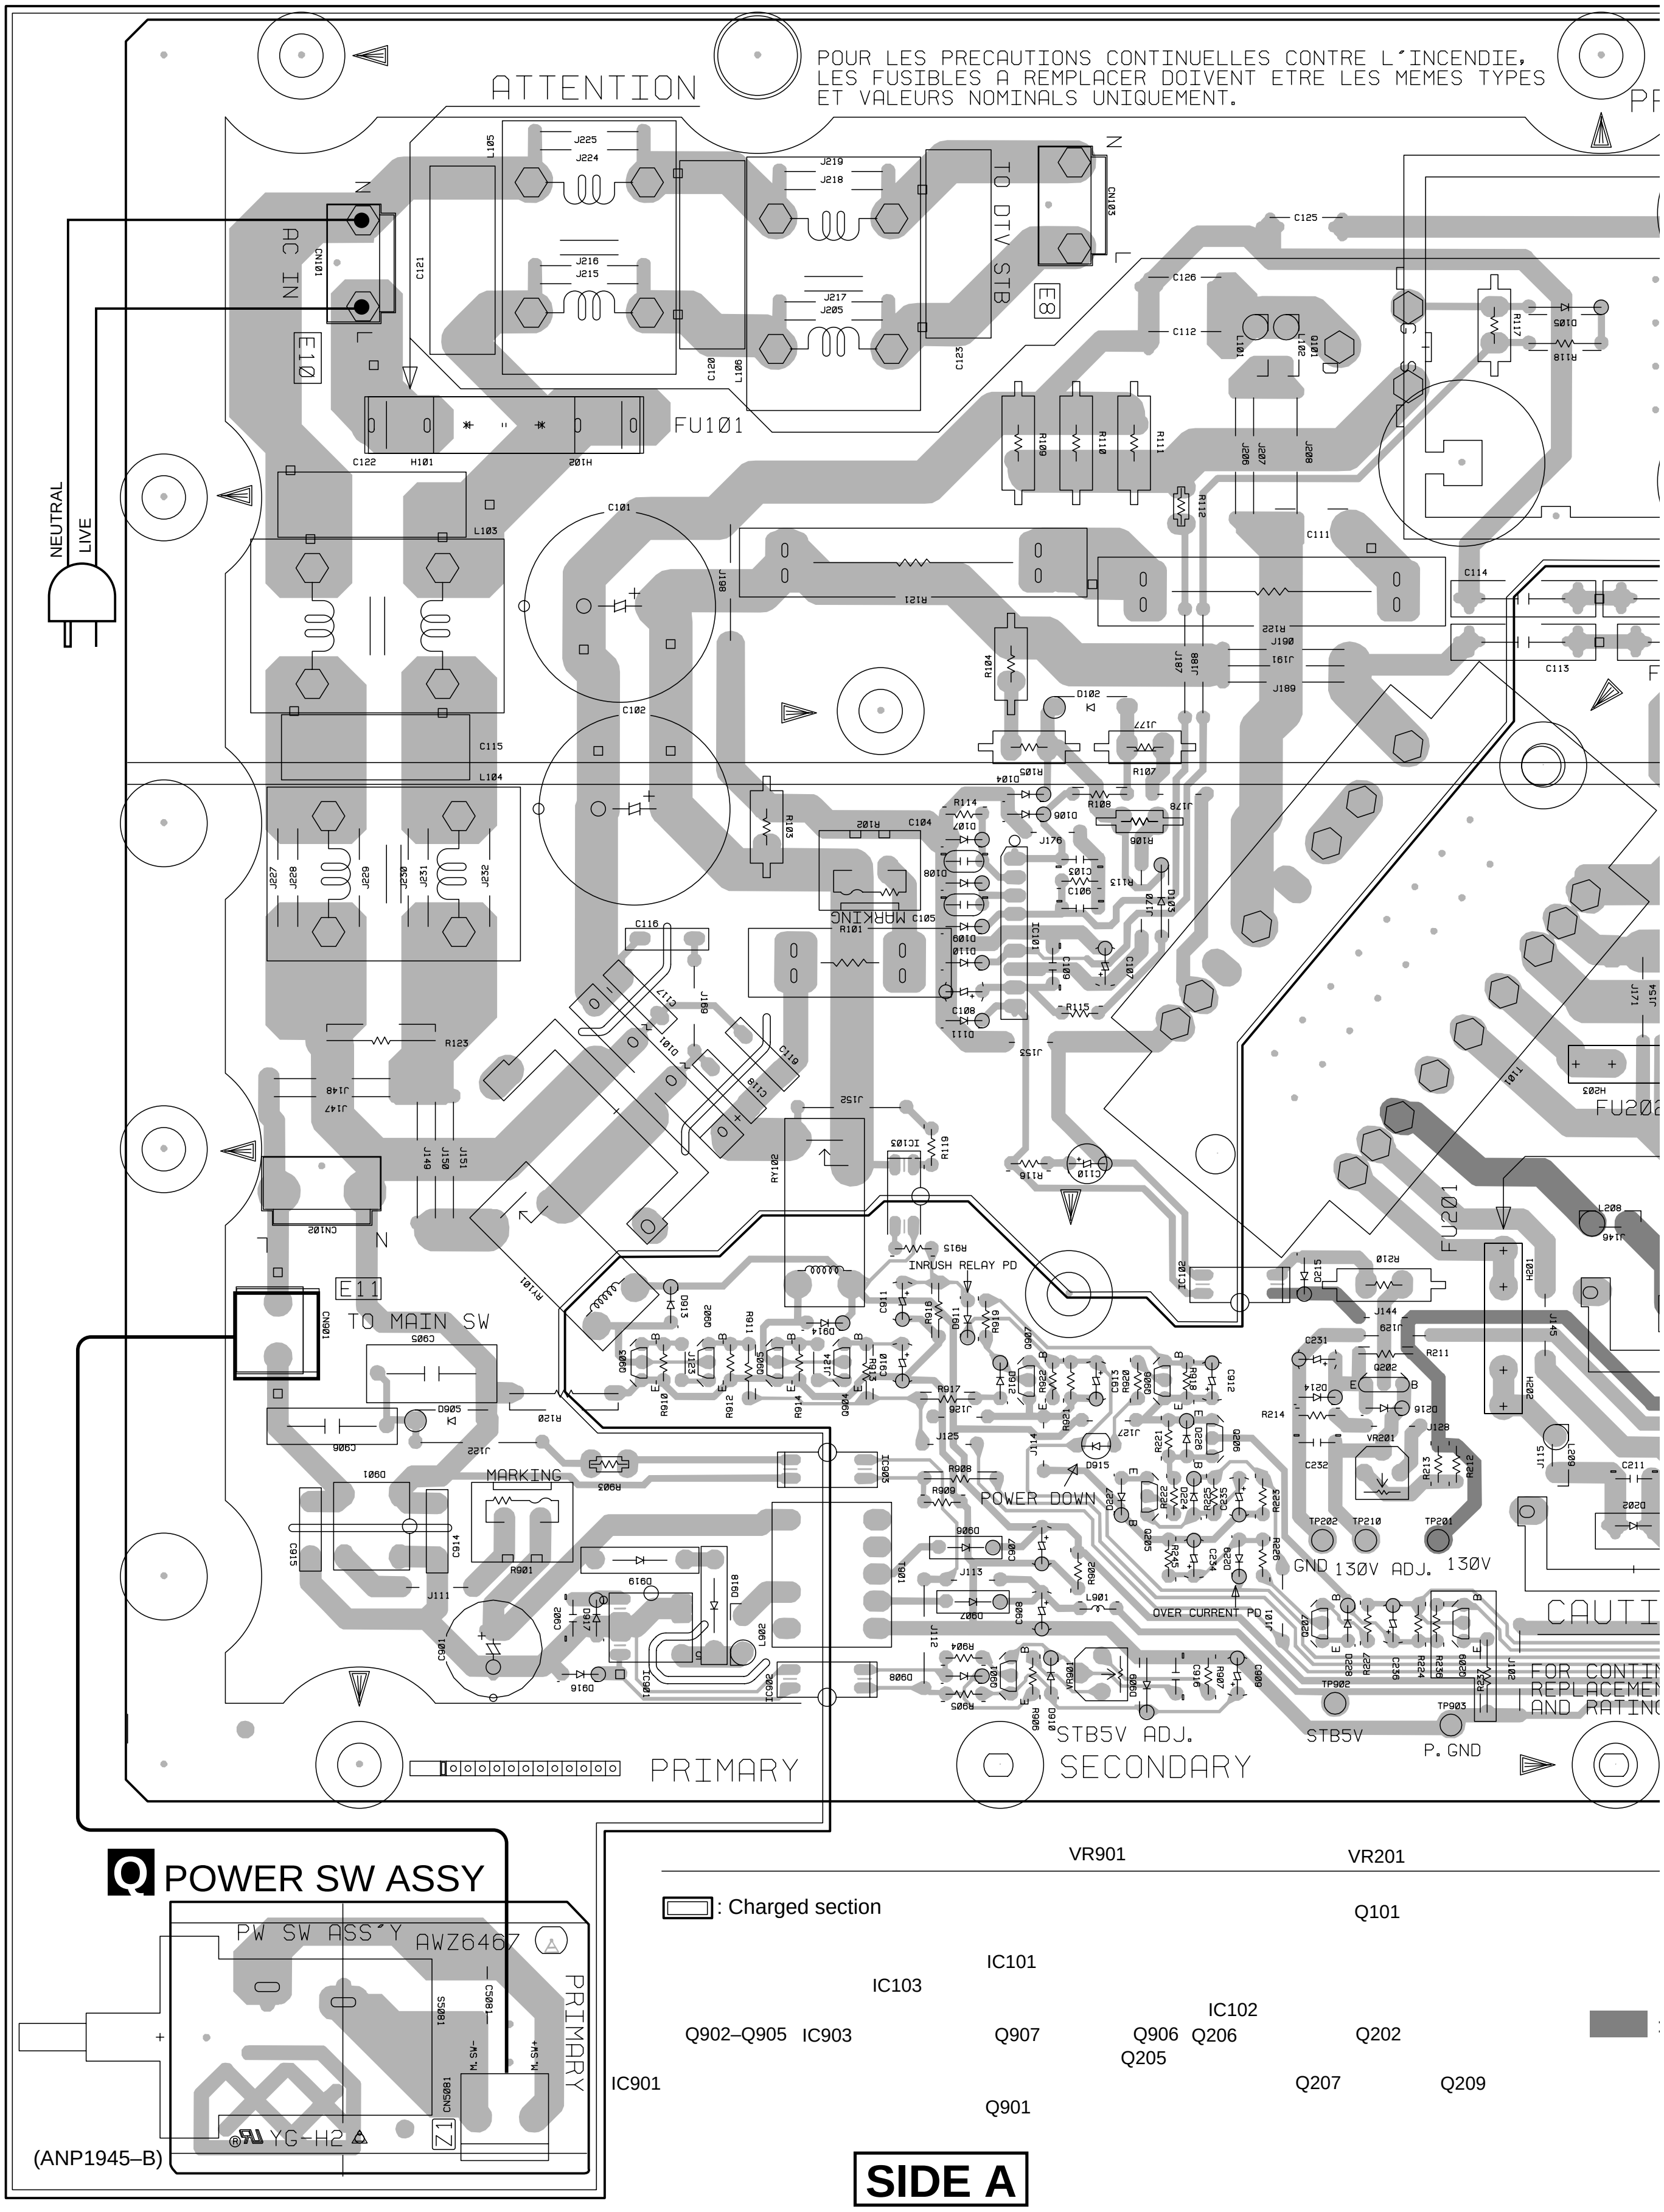
POUR LES PRECAUTIONS CONTINUELLES CONTRE L'INCENDIE,
LES FUSIBLES A REMPLACER DOIVENT ETRE LES MEMES TYPES
ET VALEURS NOMINALS UNIQUEMENT.
ATTENTION
AC IN
CN101
TO DTV STB
CN103
E8
E10
FU101
NEUTRAL
LIVE
C101
C102
L103
L104
C115
C116
R101
R121
R122
R123
IC101
RY101
RY102
INRUSH RELAY PD
E11
TO MAIN SW
CN102
CN901
MARKING
POWER DOWN
OVER CURRENT PD
GND
130V ADJ.
130V
STB5V ADJ.
STB5V
P. GND
PRIMARY
SECONDARY
FU201
FU202
CAUTI
FOR CONTIN
REPLACEMEN
AND RATING
TP202
TP210
TP201
TP902
TP903
Q POWER SW ASSY
PW SW ASS'Y AWZ6467
PRIMARY
CN5081
YG-H2
(ANP1945–B)
VR901
VR201
: Charged section
Q101
IC101
IC103
IC102
Q902–Q905
IC903
Q907
Q906
Q206
Q202
Q205
IC901
Q207
Q209
Q901

SIDE A

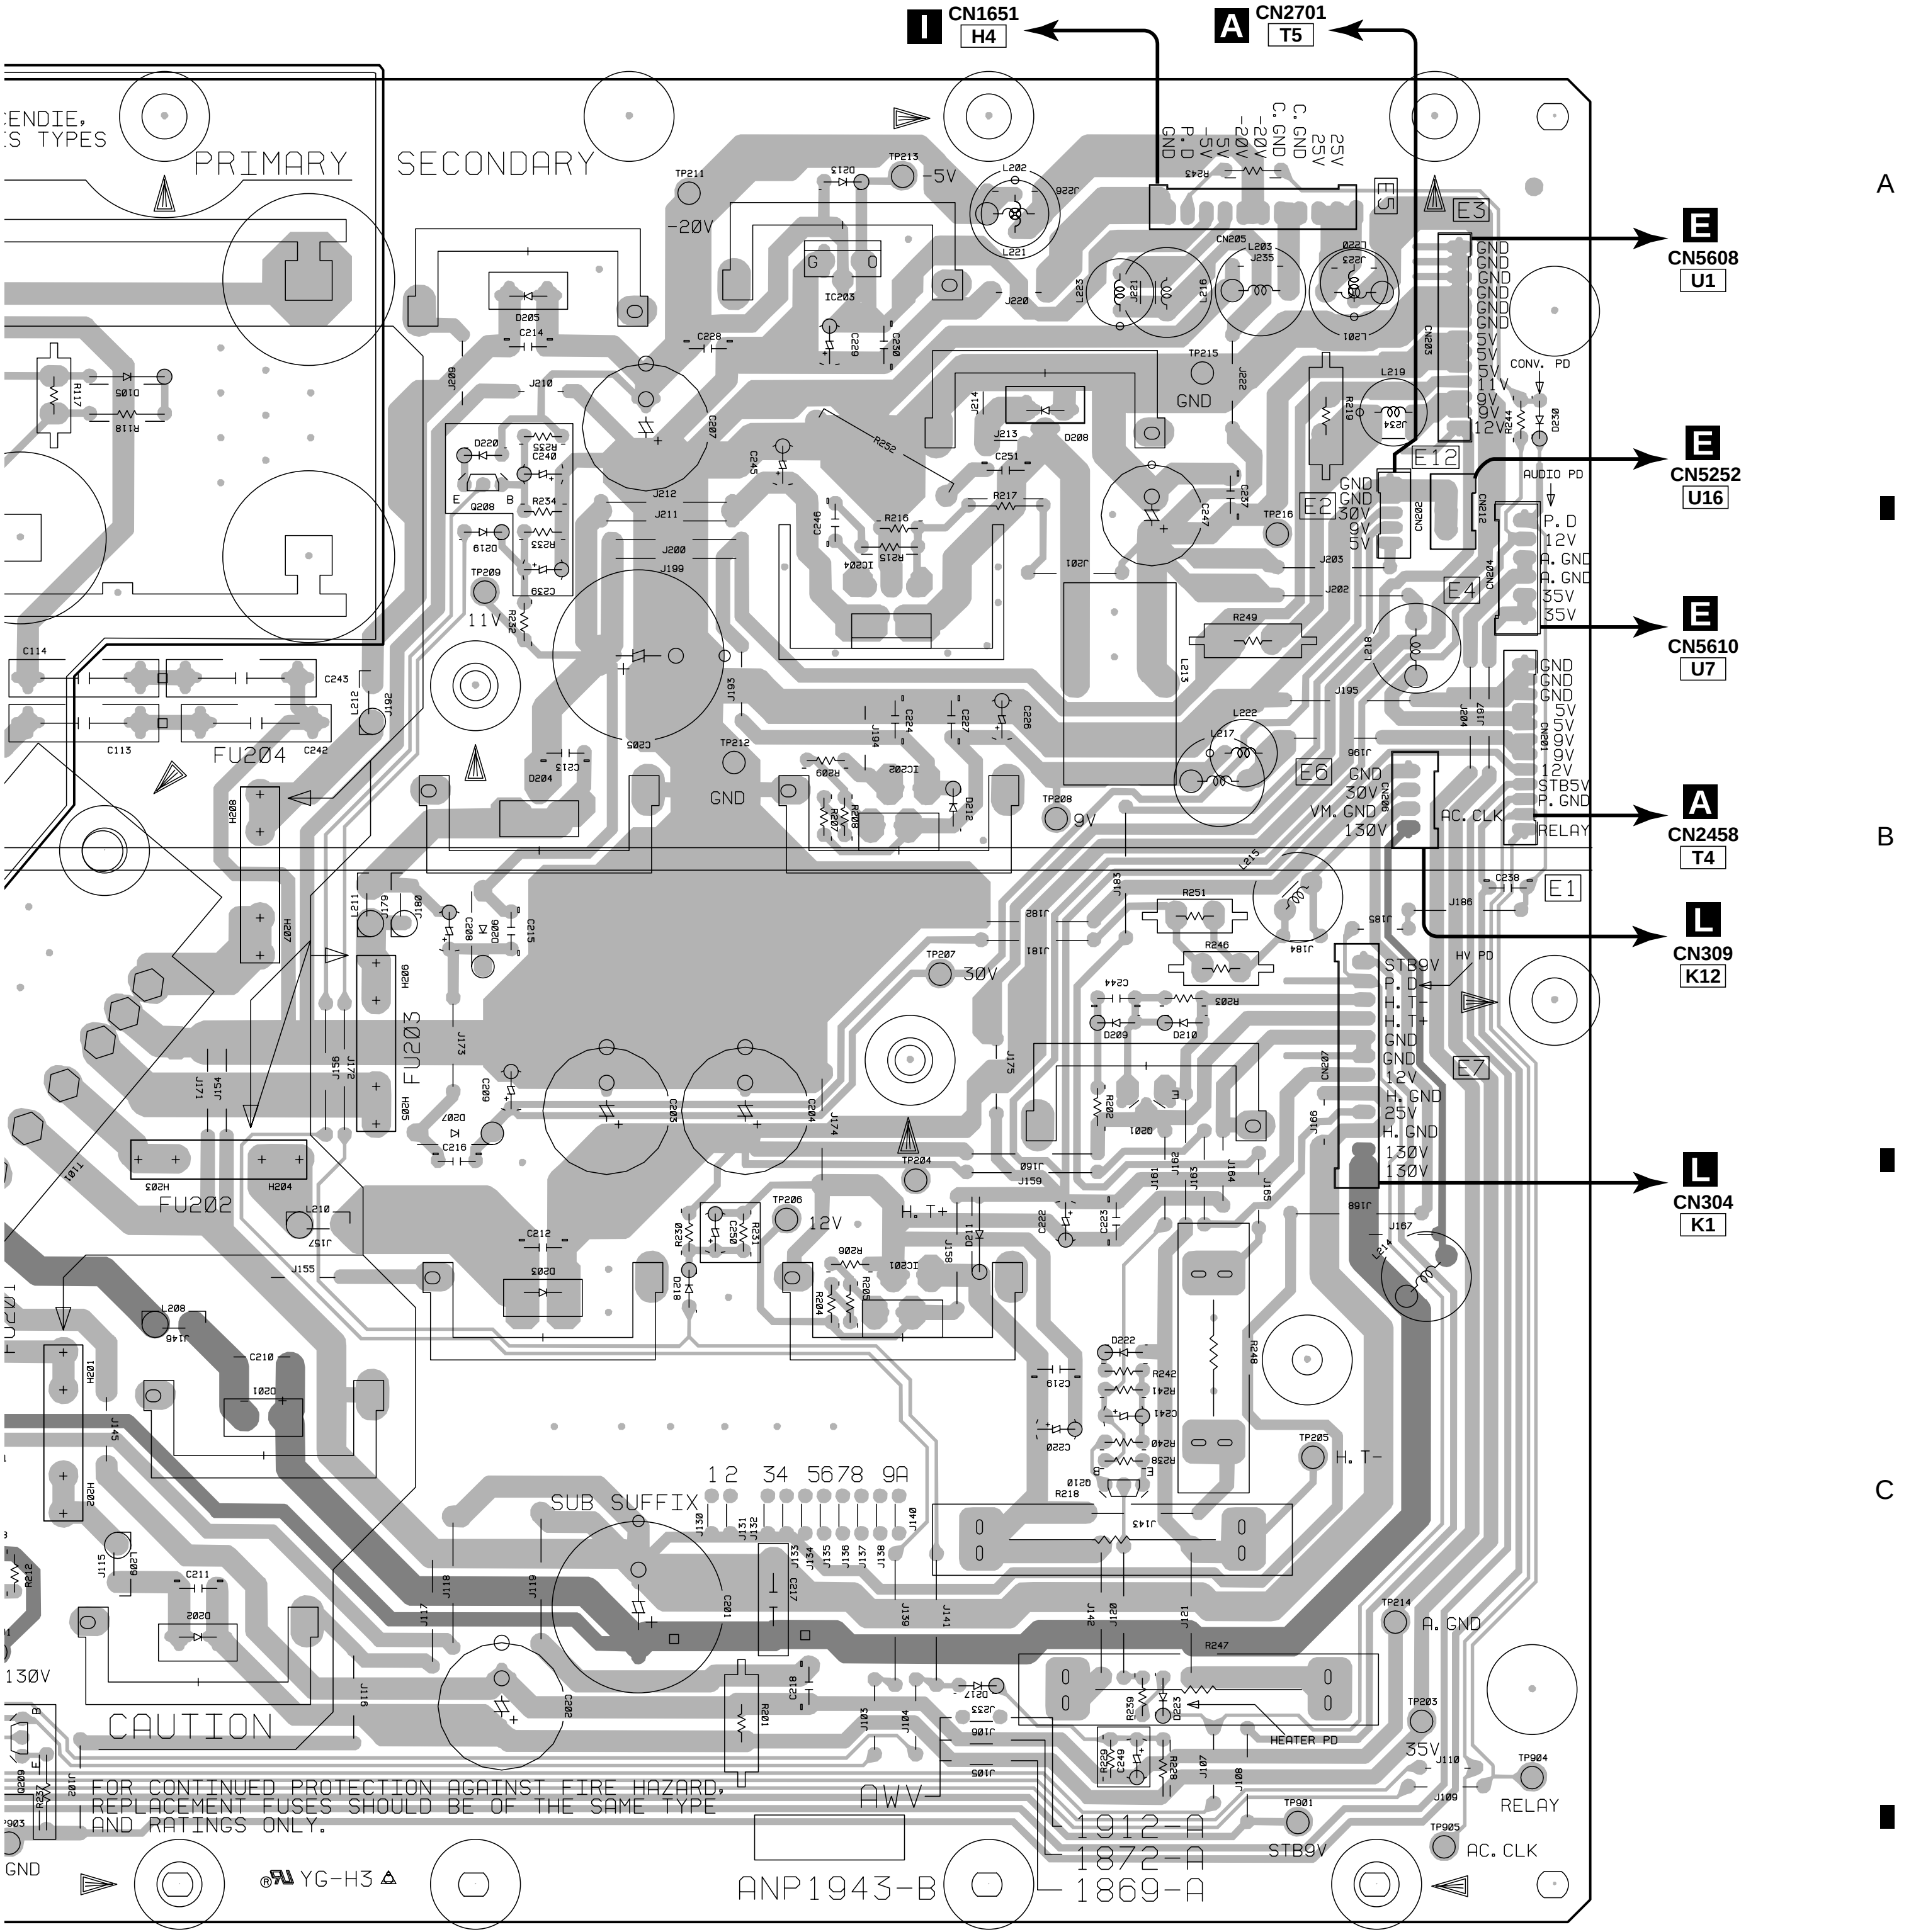
I CN1651 H4
A CN2701 T5
E CN5608 U1
E CN5252 U16
E CN5610 U7
A CN2458 T4
L CN309 K12
L CN304 K1
PRIMARY
SECONDARY
FU204
FU203
FU202
CAUTION
FOR CONTINUED PROTECTION AGAINST FIRE HAZARD, REPLACEMENT FUSES SHOULD BE OF THE SAME TYPE AND RATINGS ONLY.
SUB SUFFIX
12 34 5678 9A
AWV
ANP1943-B
1912-A
1872-A
1869-A
YG-H3
GND
25V
25V
C.GND
C.GND
-20V
-20V
-5V
-5V
P.D
GND
5V
5V
5V
5V
11V
9V
12V
CONV. PD
AUDIO PD
P.D
12V
A.GND
A.GND
35V
35V
GND
GND
GND
5V
5V
9V
9V
12V
STB5V
P.GND
RELAY
AC.CLK
GND
30V
VM.GND
130V
STB9V
P.D
H.T-
H.T+
GND
GND
12V
H.GND
25V
H.GND
130V
130V
HV PD
HEATER PD
A.GND
35V
RELAY
AC.CLK
STB9V
11V
9V
30V
12V
H.T+
H.T-
-5V
-20V
E1
E2
E3
E4
E5
E6
E7
E12
IC201
IC202
IC203
IC204
Q201
Q208
Q209
Q210
A
B
C
D

(ANP1943–B)

IC203

Q208

IC204

IC202

IC201

Q201

▨ : mark shows a high voltage generation point (excepting the Charged section).

Q210

Q209

A

B

C

D

P-a P-b

P POWER SUPPLY ASSY

SIDE A

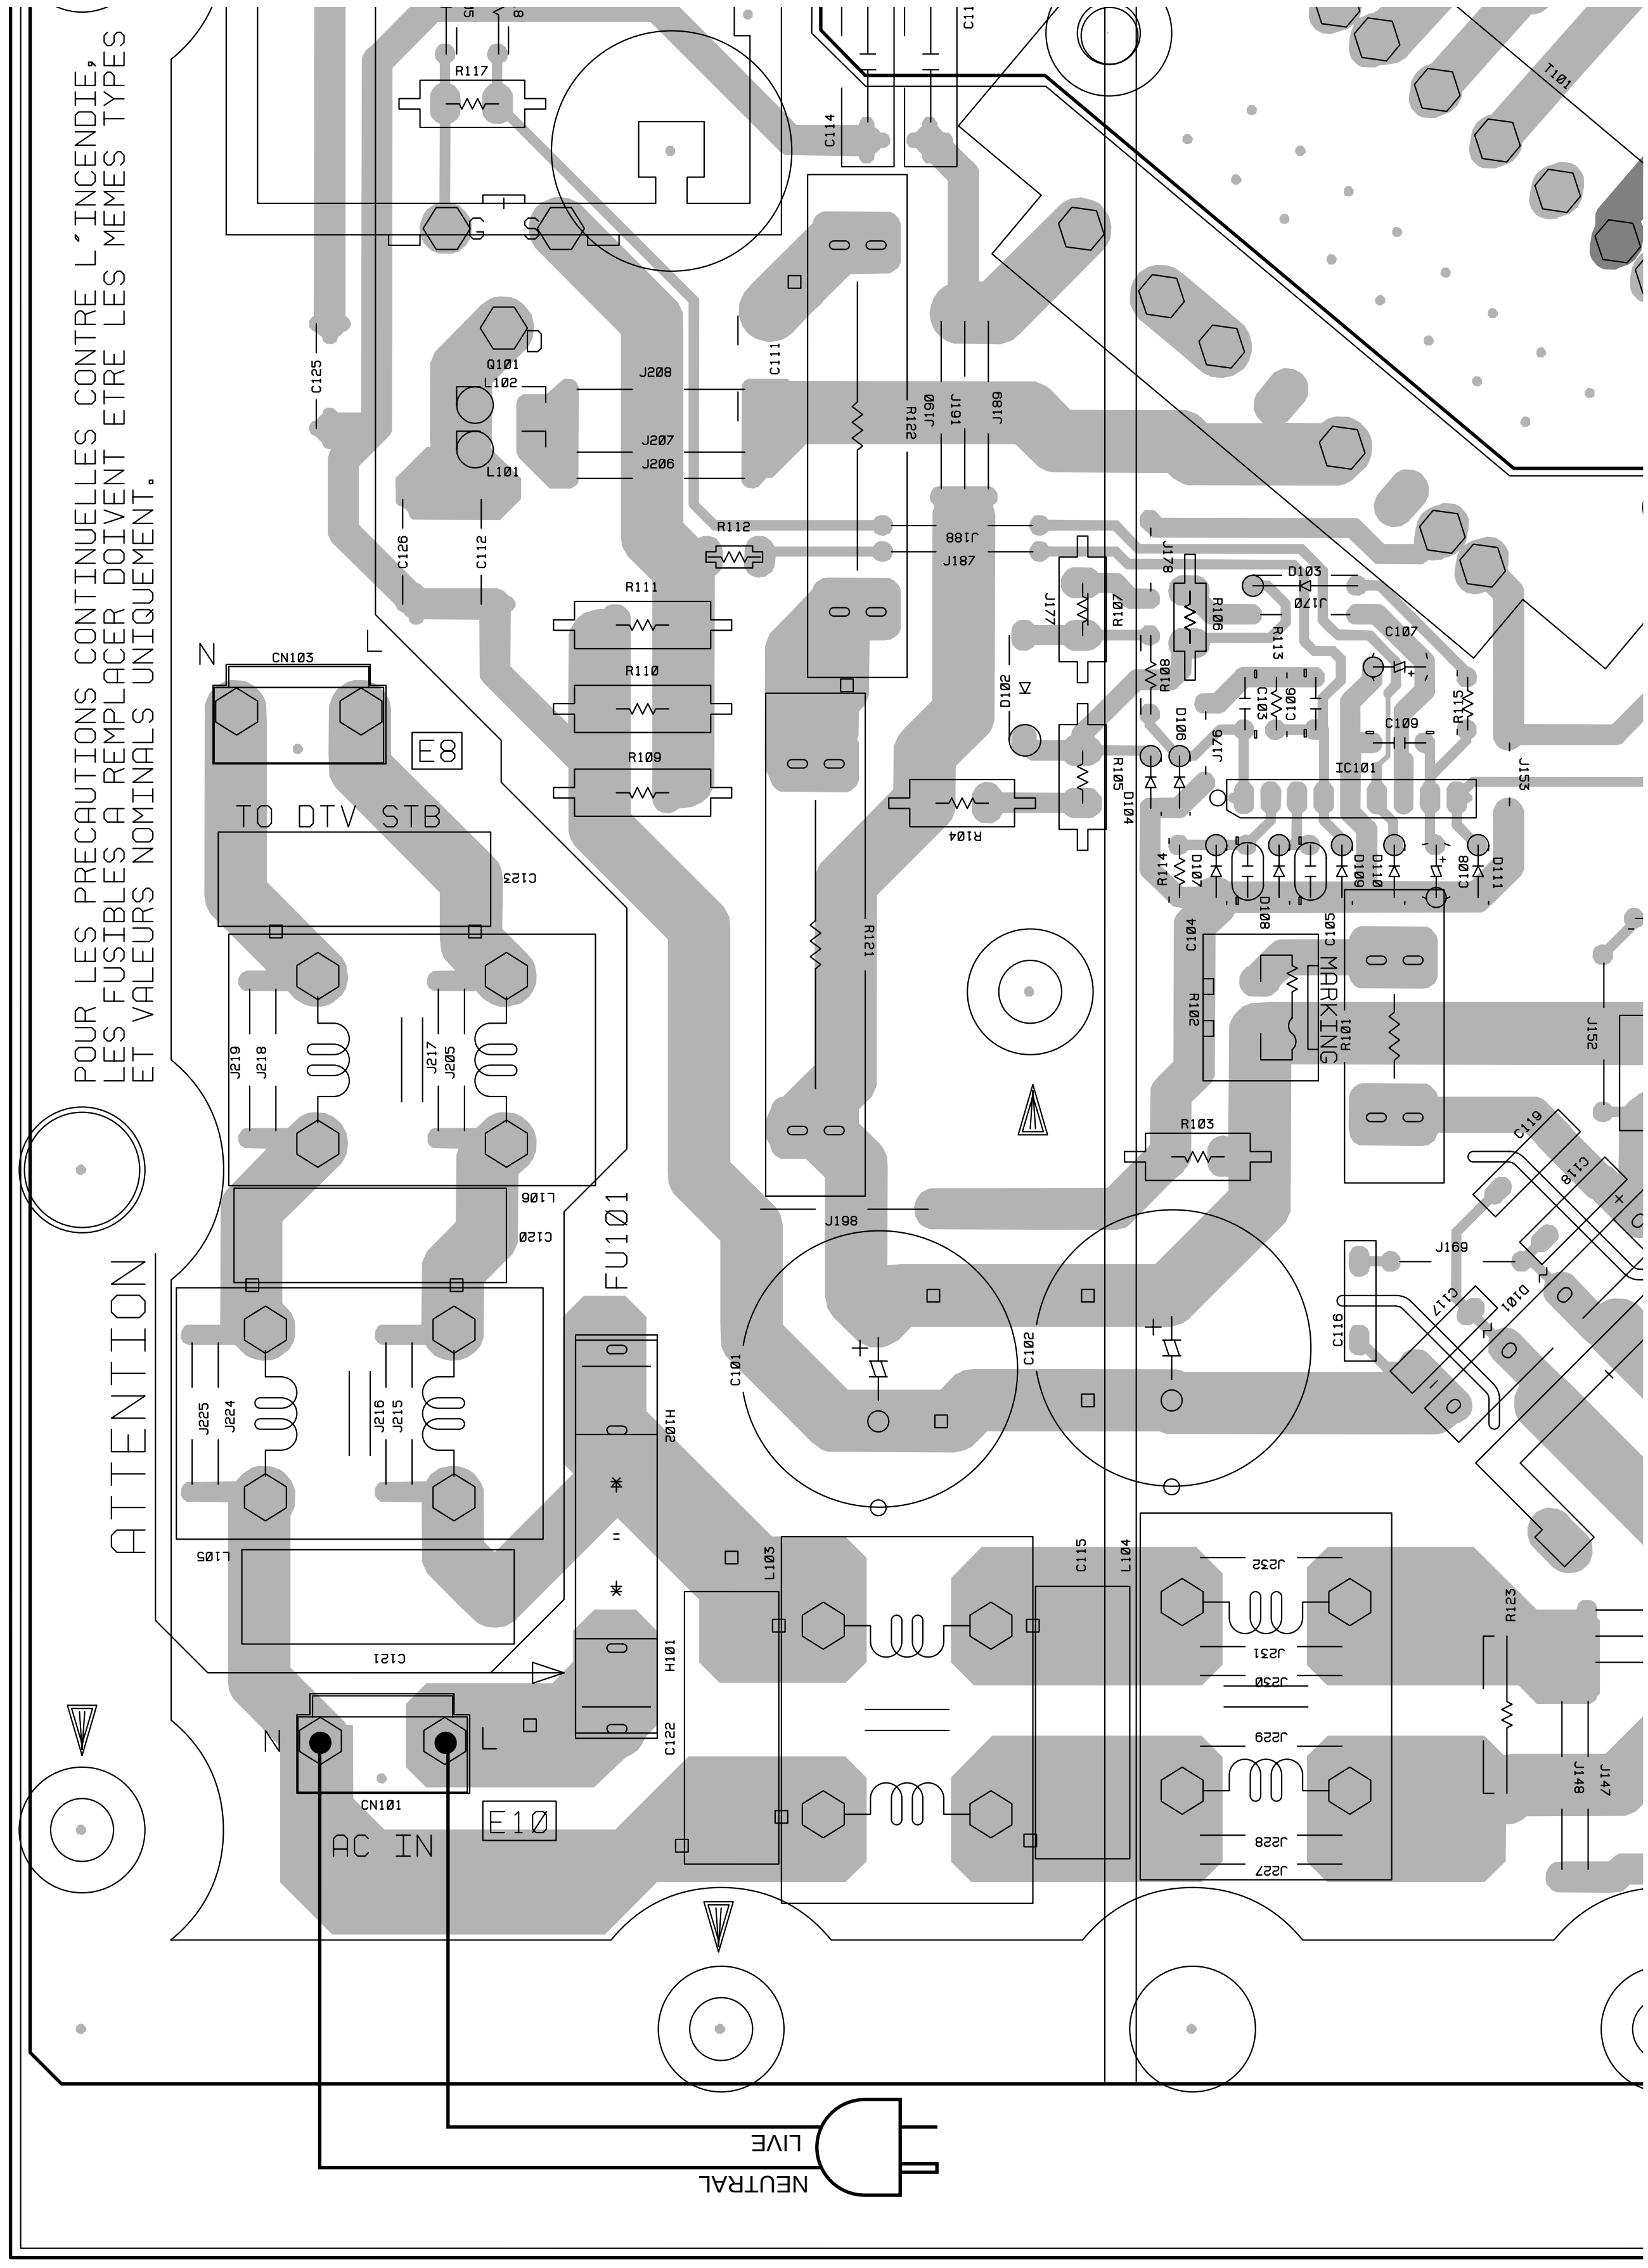
POUR LES PRECAUTIONS CONTINUELLES CONTRE L'INCENDIE,
LES FUSIBLES A REMPLACER DOIVENT ETRE LES MEMES TYPES
ET VALEURS NOMINALS UNIQUEMENT.
ATTENTION
TO DTV STB
AC IN
E8
E10
CN101
CN103
N
L
FU101
H101
H102
L101
L102
L103
L104
L105
L106
Q101
IC101
T101
C101
C102
C104
C105
C107
C108
C109
C111
C112
C114
C115
C116
C117
C118
C119
C120
C121
C122
C123
C125
C126
R101
R102
R103
R104
R105
R106
R107
R108
R109
R110
R111
R112
R113
R114
R115
R117
R121
R122
R123
D101
D102
D103
D104
D106
D107
D108
D109
D110
D111
J147
J148
J152
J153
J169
J170
J176
J177
J178
J187
J188
J189
J190
J191
J198
J205
J206
J207
J208
J215
J216
J217
J218
J219
J224
J225
J227
J228
J229
J230
J231
J232
MARKING
G
S
D
LIVE
NEUTRAL

1 2 3 4

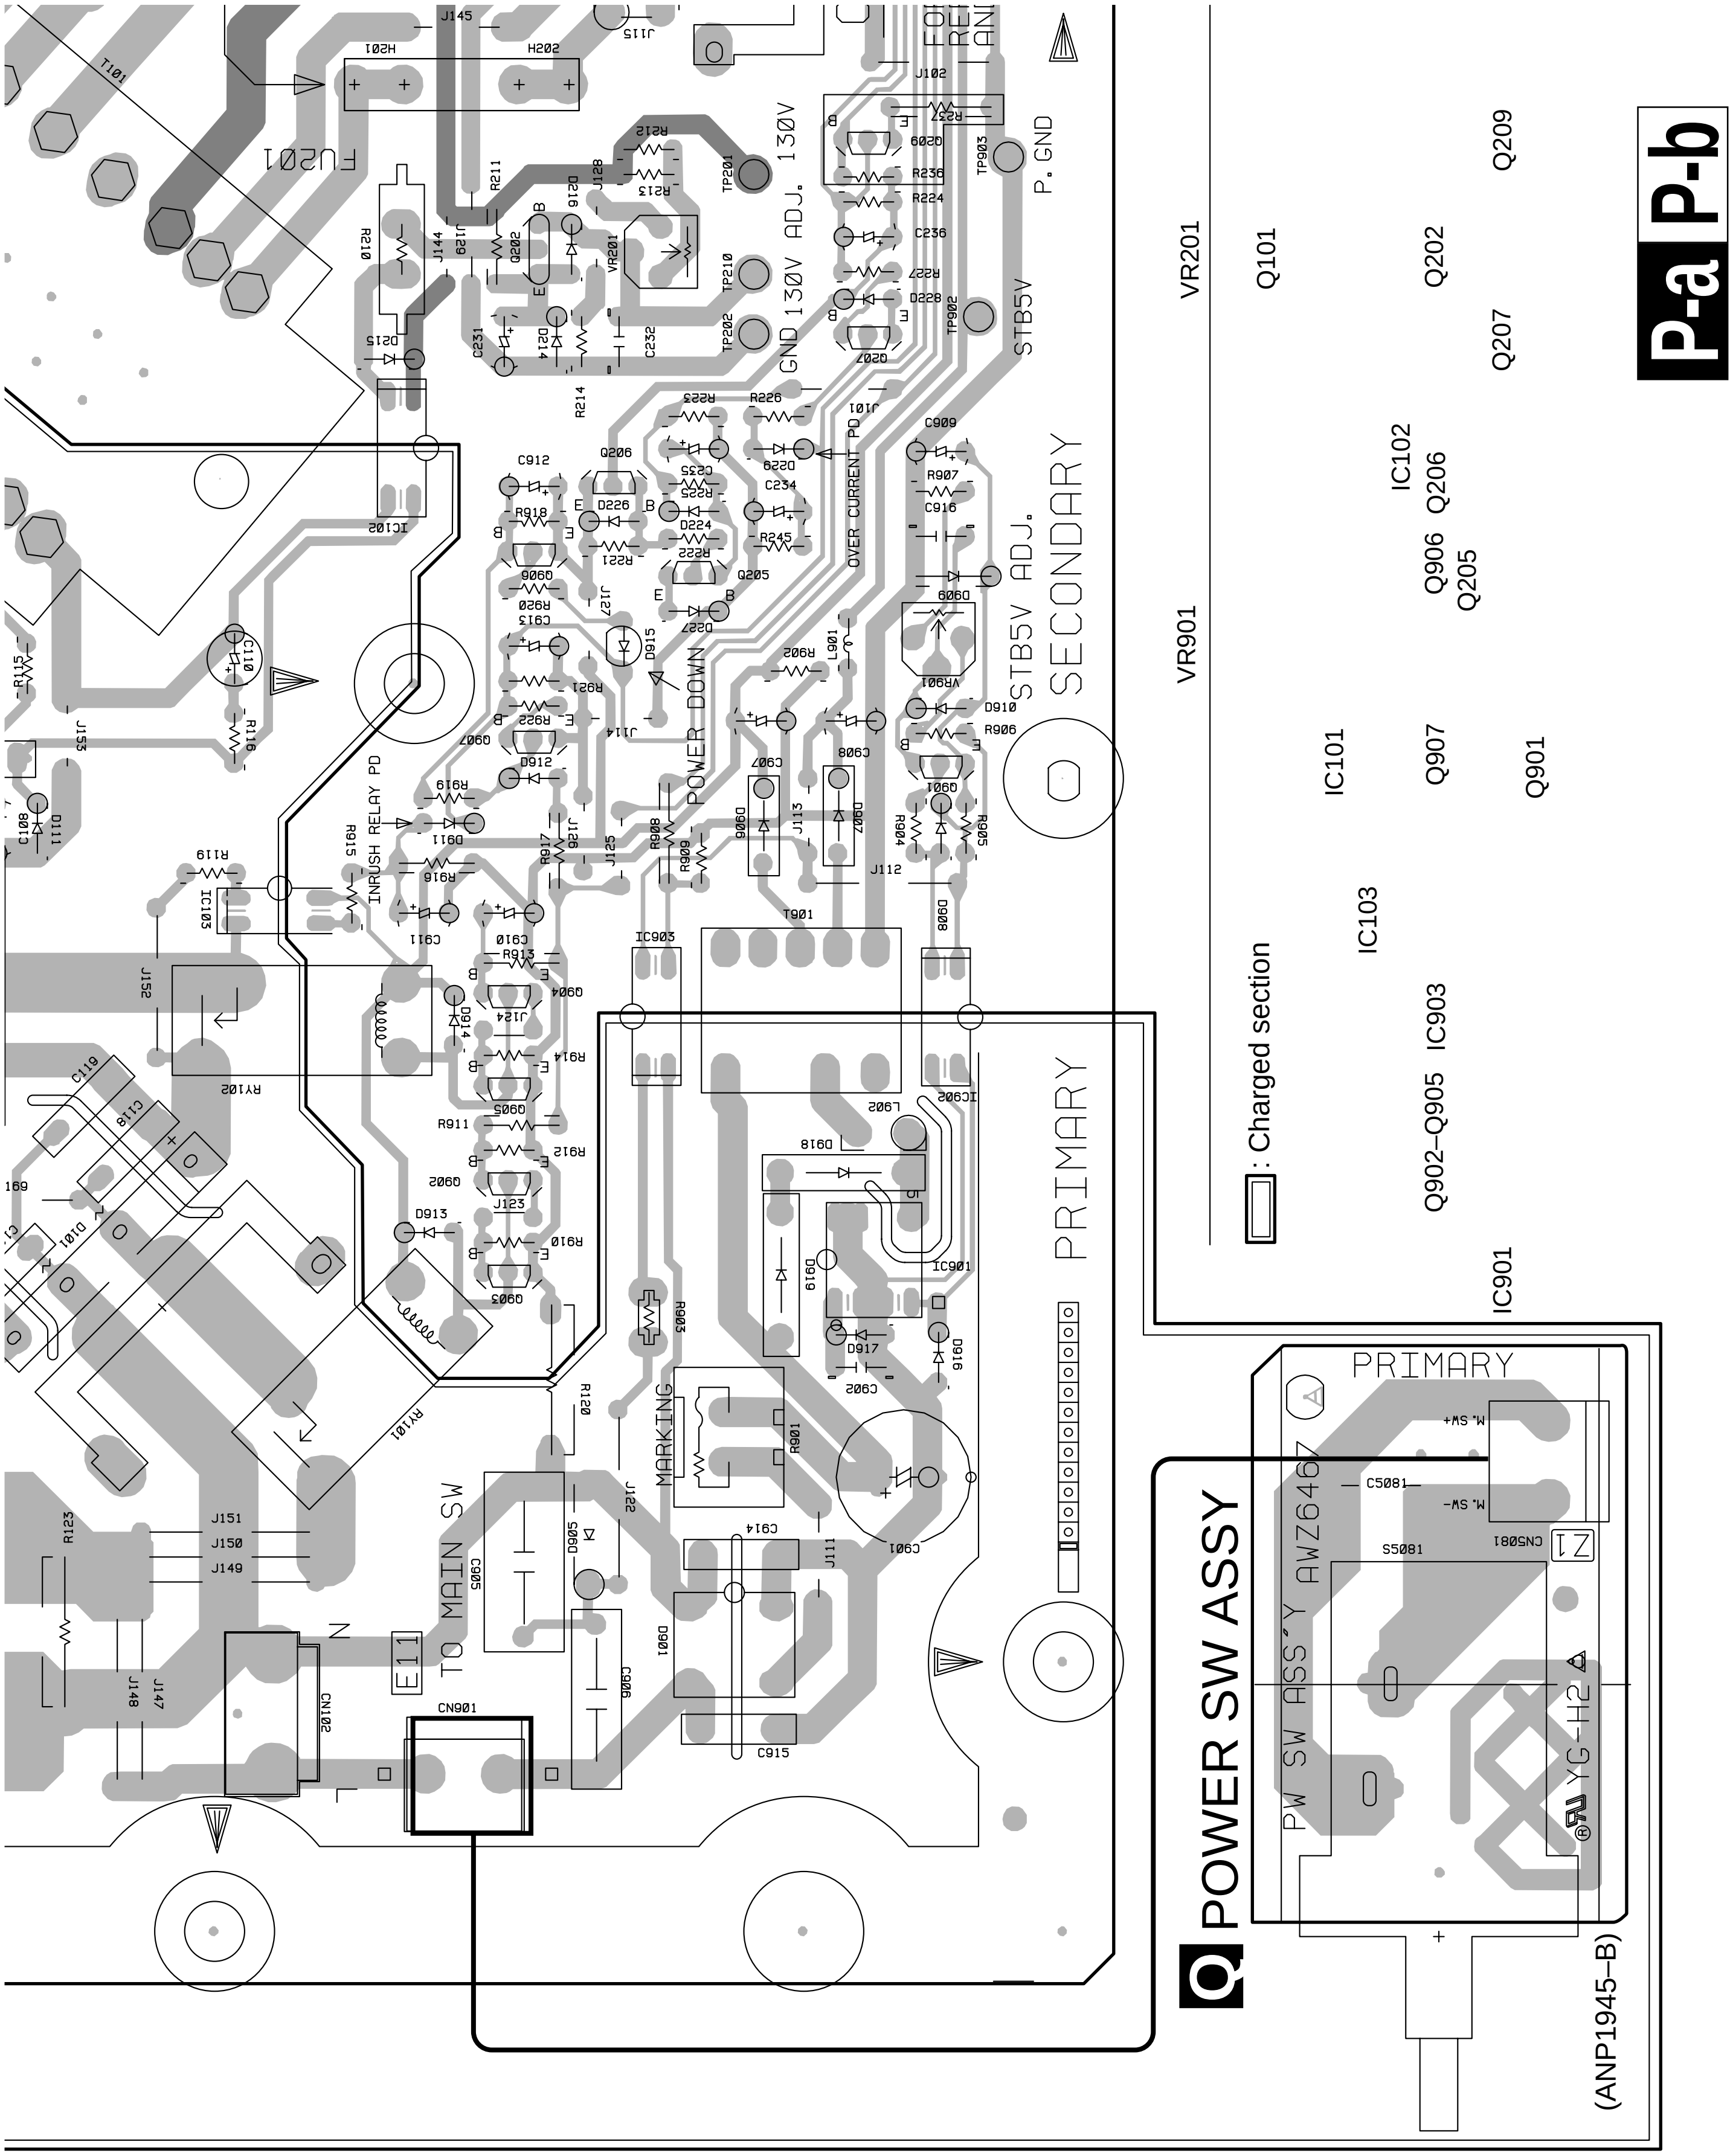
P-a P-b
Q POWER SW ASSY
: Charged section
(ANP1945–B)
VR201
Q101
Q202
Q209
Q207
IC102
Q206
Q906
Q205
VR901
IC101
Q907
Q901
IC103
Q903
Q902–Q905
IC903
IC901
FU201
IC102
IC103
RY101
RY102
T901
CN901
CN102
INRUSH RELAY PD
POWER DOWN
OVER CURRENT PD
GND 130V ADJ. 130V
STB5V ADJ.
STB5V
P. GND
SECONDARY
PRIMARY
TO MAIN SW
MARKING
E11
PW SW ASS'Y AWZ6467
YG-H2
M.SW+
M.SW-
CN5081
S5081
C5081
Z1
A
B
C
D

P-a P-b

SIDE A

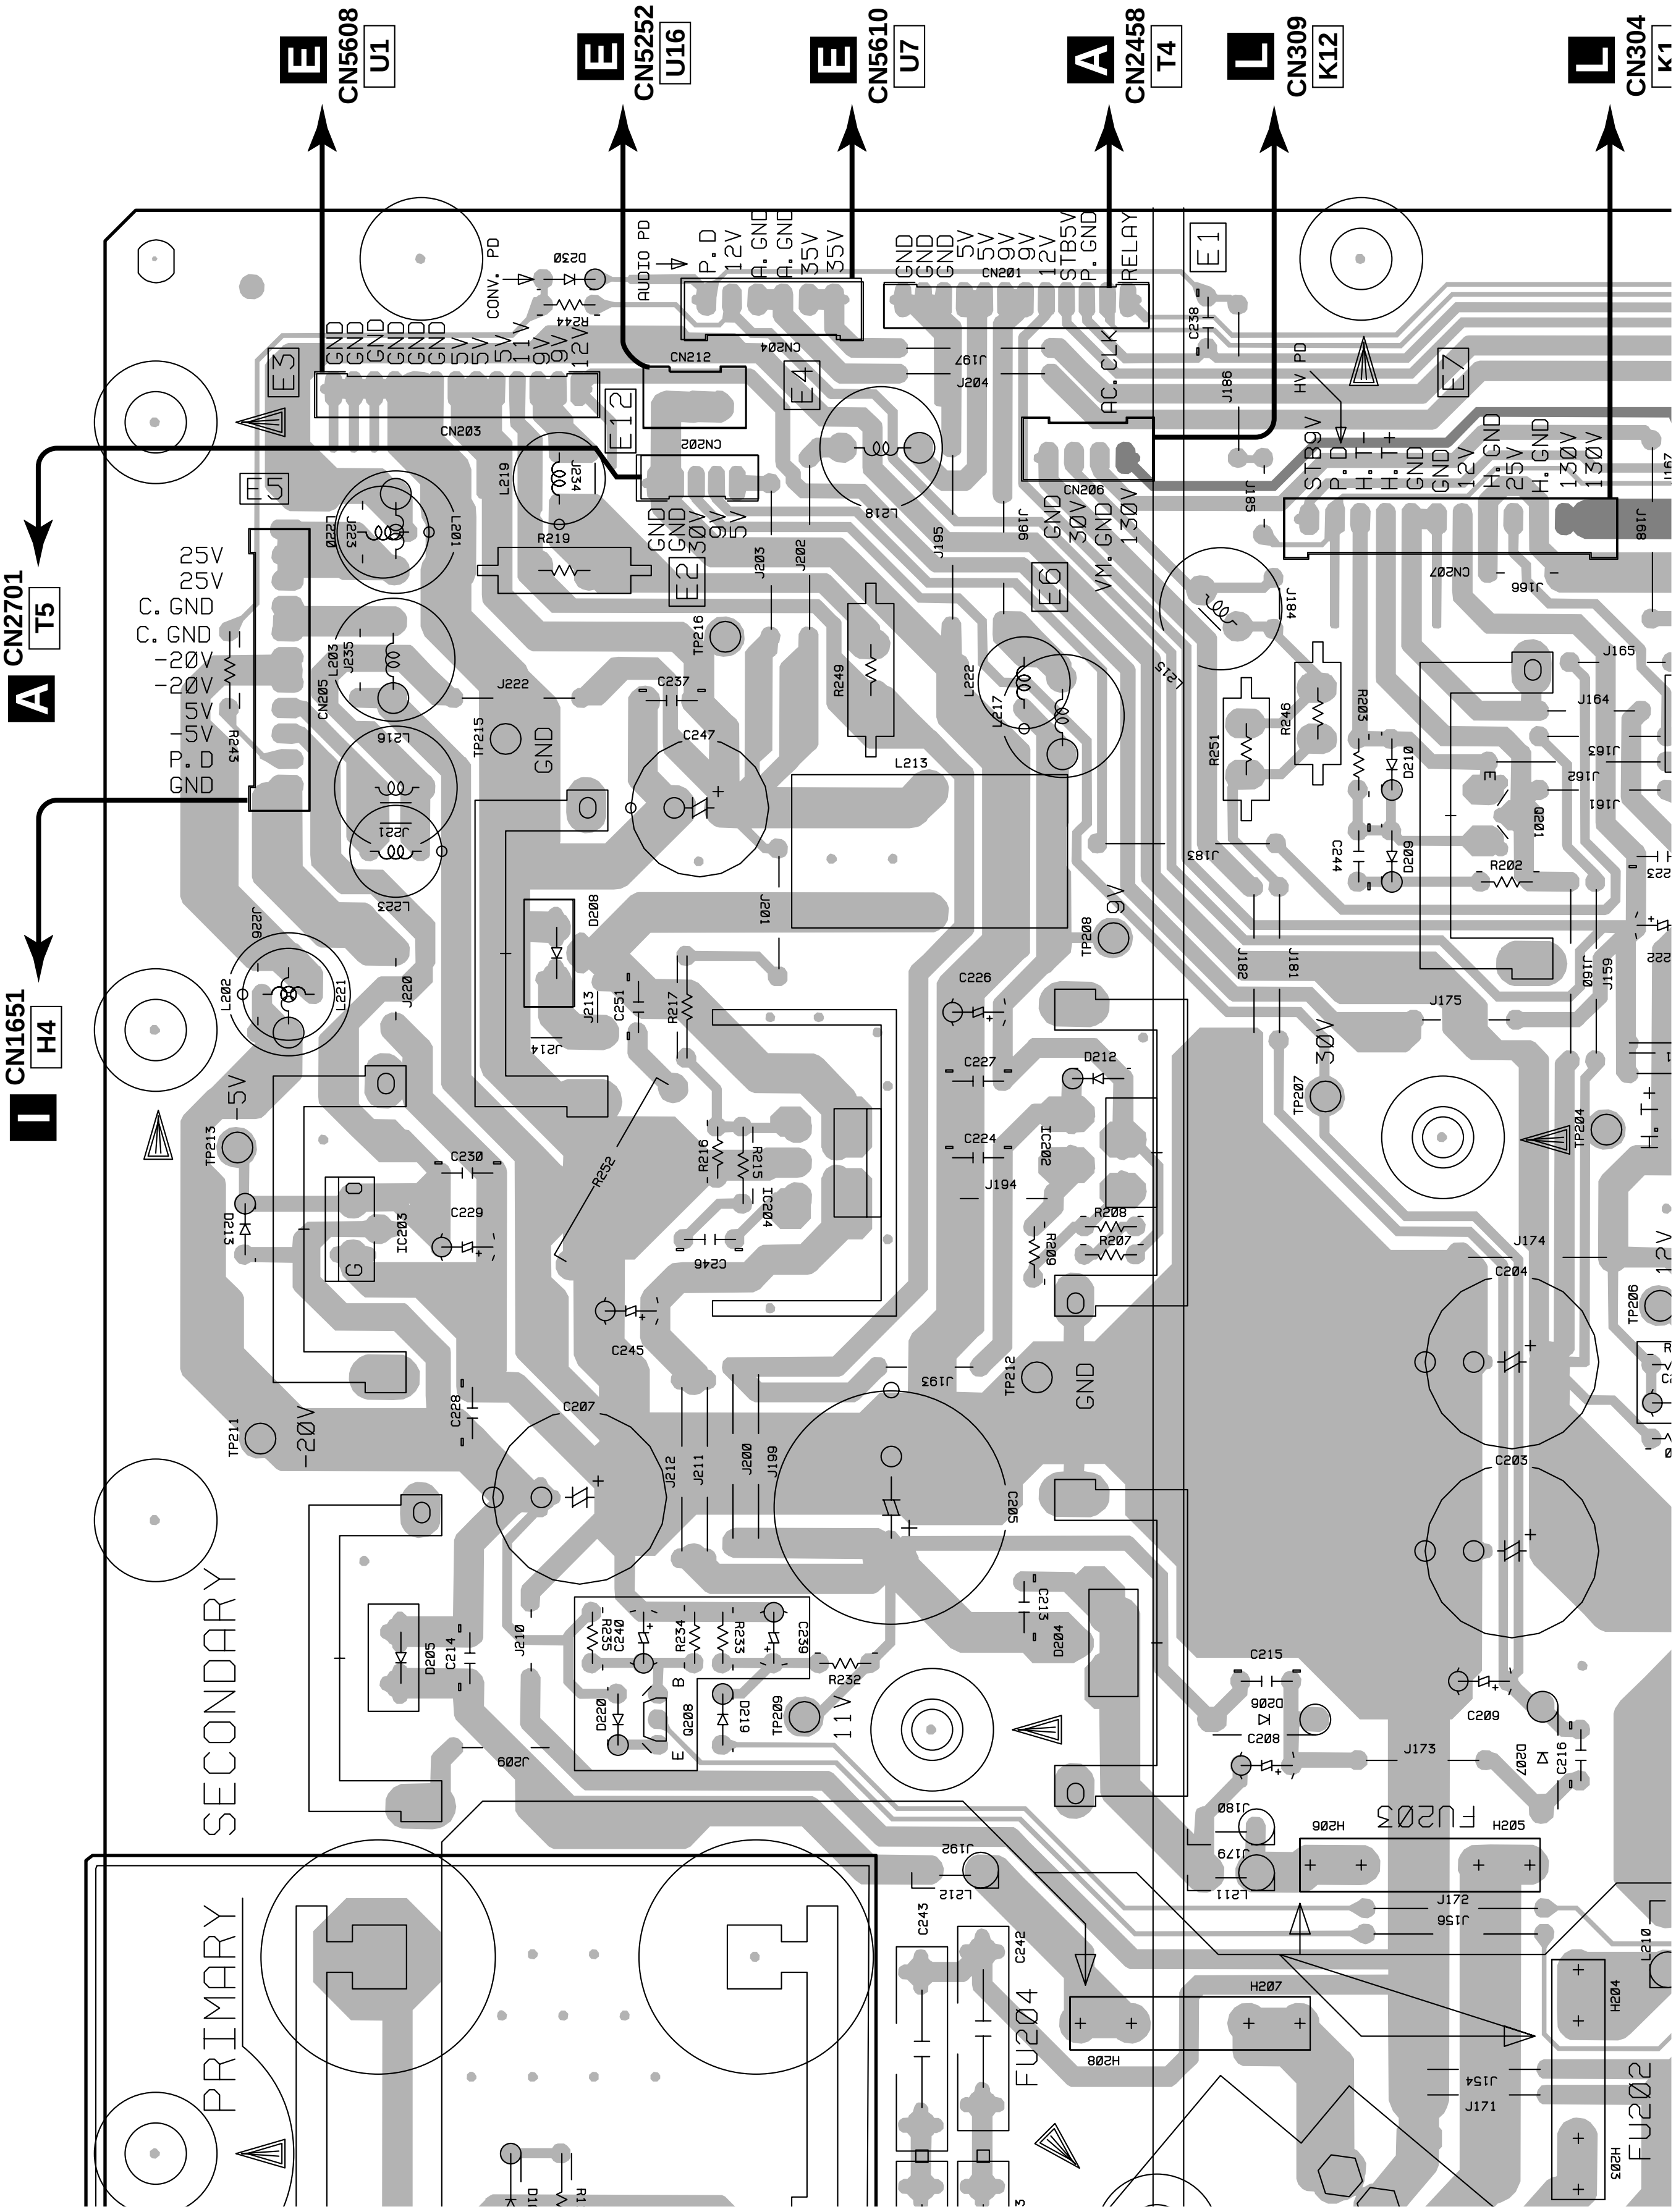
E CN5608 U1
E CN5252 U16
E CN5610 U7
A CN2458 T4
L CN309 K12
L CN304 K1
A CN2701 T5
I CN1651 H4
GND GND GND GND GND GND 5V 5V 5V 11V 9V 9V 12V
CN203
CONV. PD
D250
R244
AUDIO PD
CN212
P. D 12V A. GND A. GND 35V 35V
CN204
GND GND GND 5V 5V 9V 9V 12V STB5V P. GND RELAY
CN201
AC. CLK
CN206
GND 30V VM. GND 130V
CN202
GND GND 30V 9V 5V
STB9V P. D H. T H. T+ GND GND 12V H. GND 25V H. GND 130V 130V
CN207
25V 25V C. GND C. GND -20V -20V 5V -5V P. D GND
CN205
E1 E2 E3 E4 E5 E6 E7 E12
TP216 TP215 GND
TP208 9V
TP207 30V
TP204 H. T+
TP206 12V
TP213 -5V
TP211 -20V
TP212 GND
TP209 11V
IC203 IC204 IC202
C207 C205 C204 C203 C247
SECONDARY
PRIMARY
FU203 FU204 FU202
H204 H205 H206 H207 H208

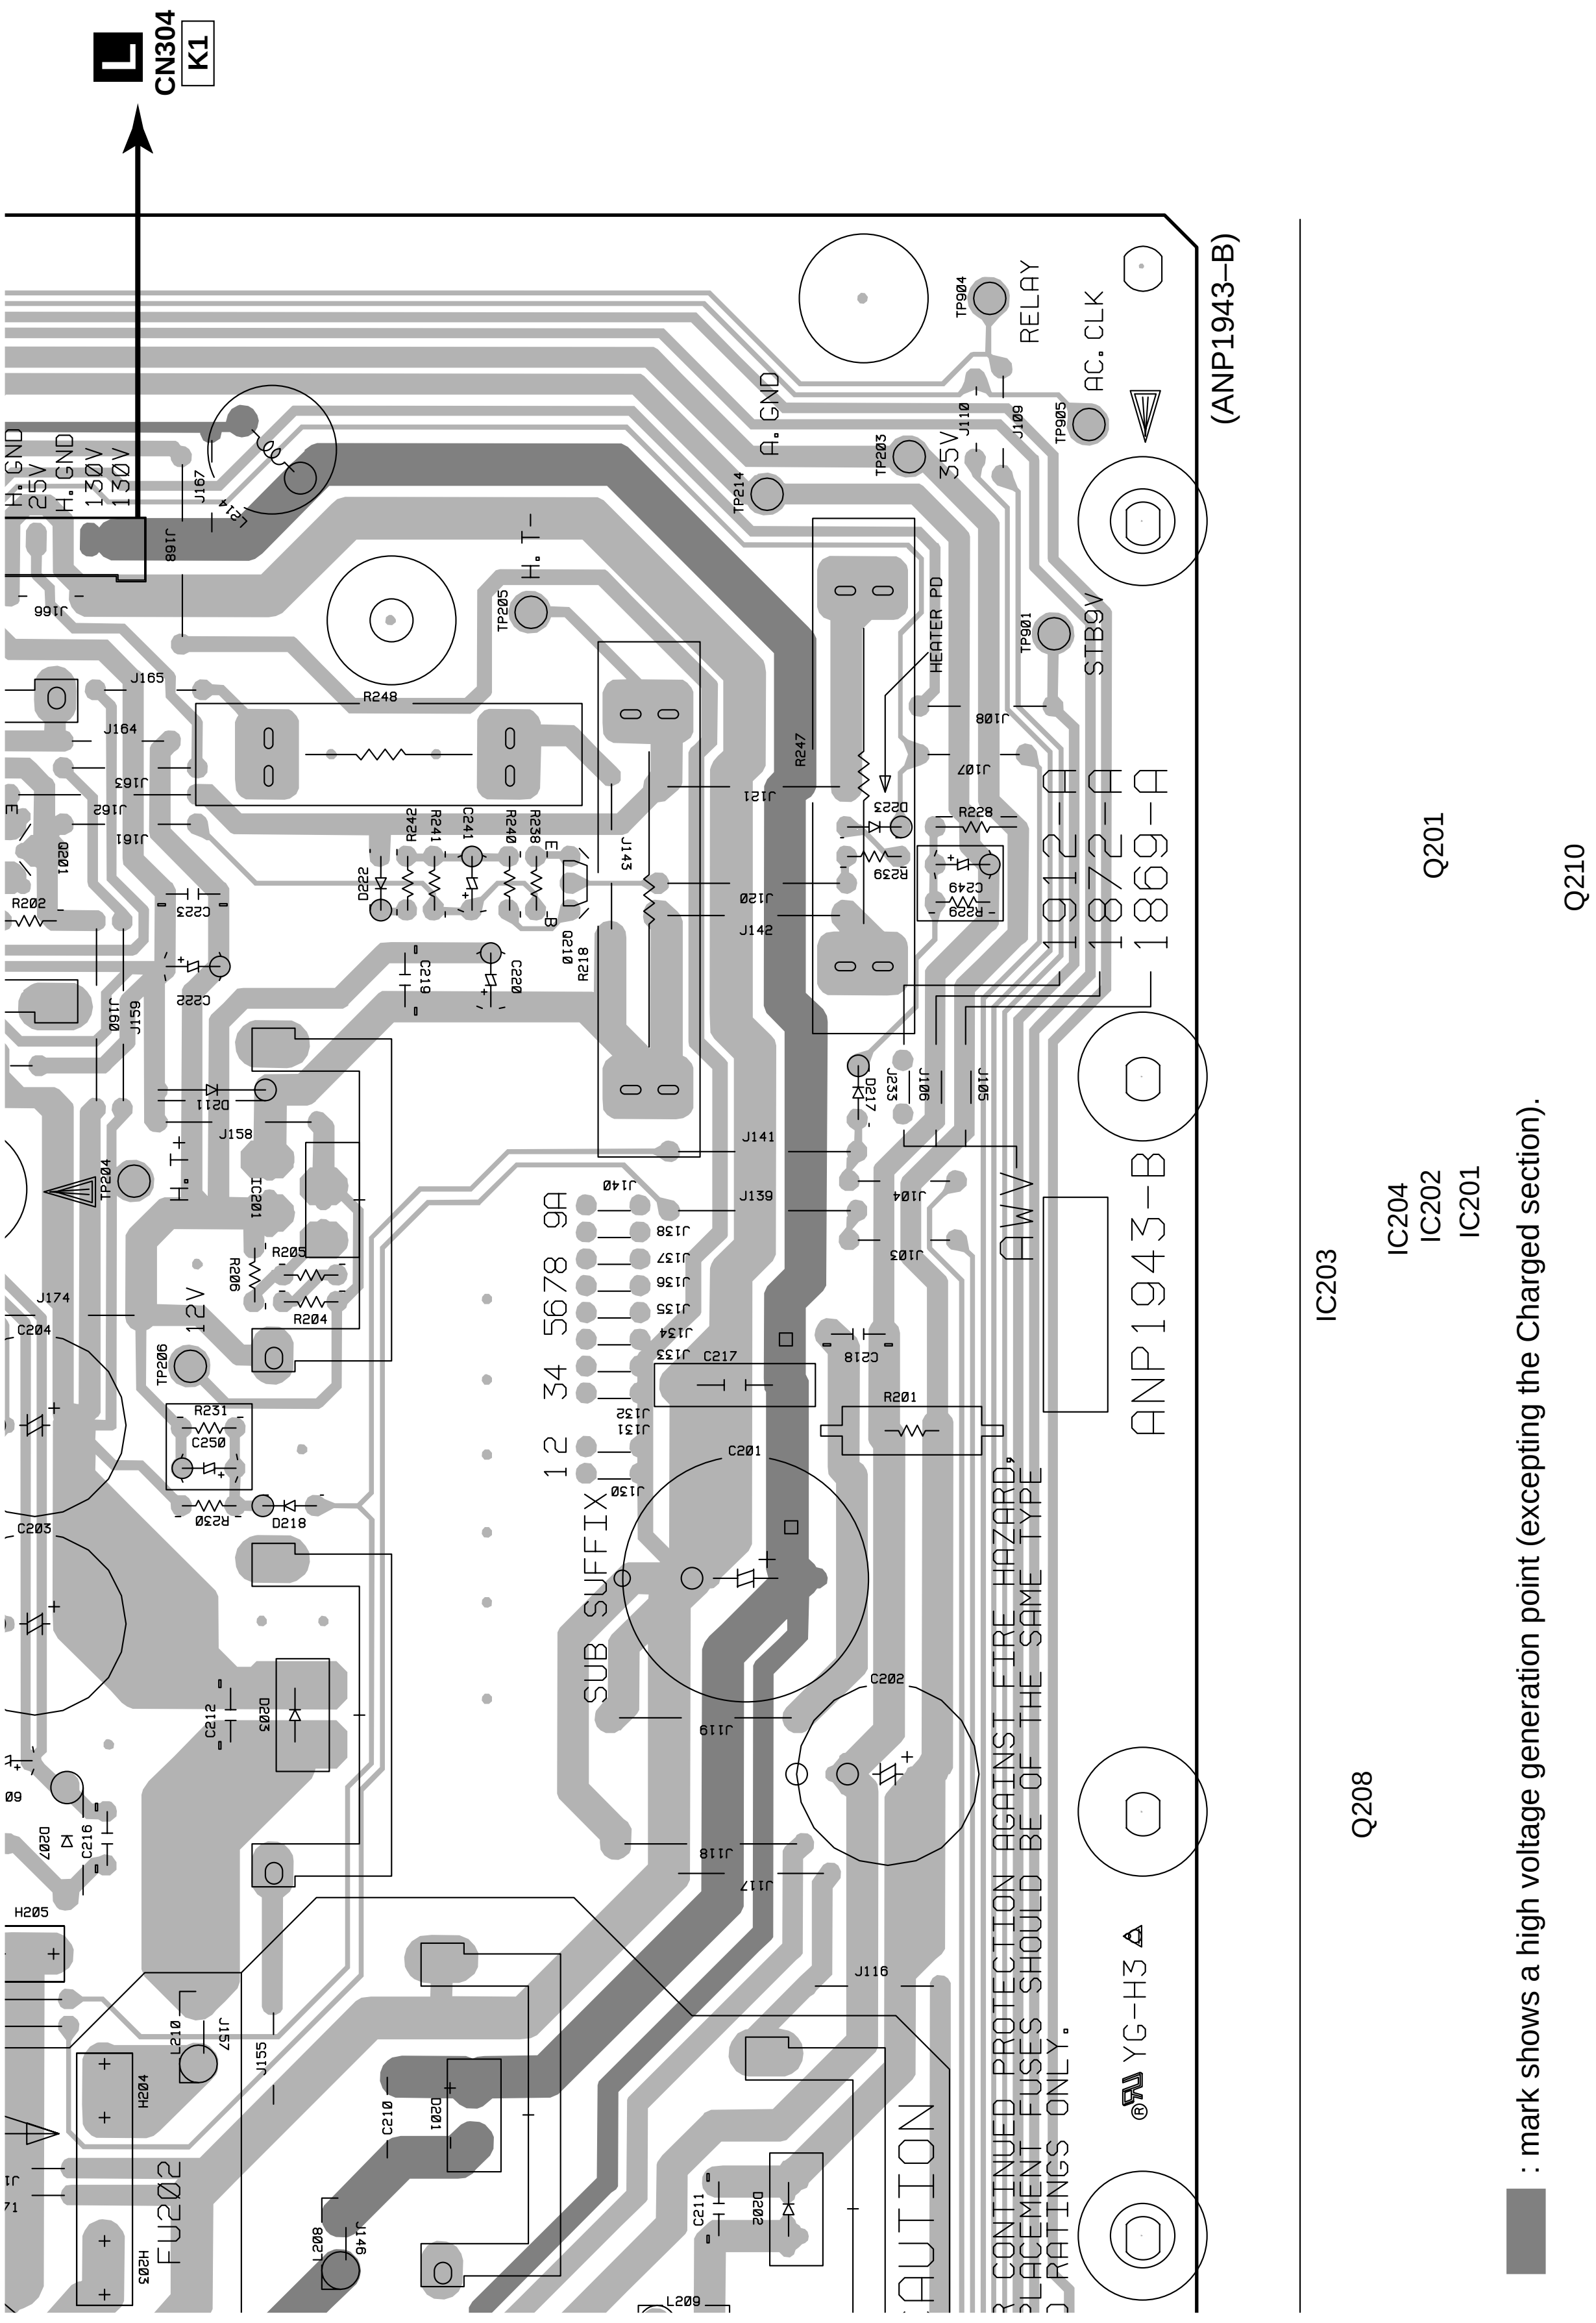
L
CN304
K1
(ANP1943–B)
RELAY
TP904
AC. CLK
TP905
J109
J110
35V
TP203
A. GND
TP214
H. T−
TP205
H. GND
25V
H. GND
130V
130V
J167
L214
J168
J166
J165
J164
J163
J162
J161
R248
HEATER PD
STB9V
TP901
J108
J107
R247
J121
D223
R228
R239
C249
R229
1912-A
1872-A
1869-A
D222
R242
R241
C241
R240
R238
J143
J120
J142
Q210
R218
C219
C220
Q201
R202
C223
C222
J160
J159
D211
J158
TP204
H. T+
IC201
R205
R206
R204
12V
TP206
R231
C250
R230
D218
J174
C204
C203
J233
D217
J106
J105
J141
J140
J139
J104
J103
J138
J137
J136
J135
J134
J133
J132
J131
J130
9A
5678
34
12
1
SUB SUFFIX
C217
C218
R201
ANP1943-B
AWV
C201
C202
C212
D203
C216
D207
H205
J119
J118
J117
J116
L210
J157
J155
H204
C210
D201
FU202
H203
L208
J146
C211
D202
L209
CAUTION
R CONTINUED PROTECTION AGAINST FIRE HAZARD,
PLACEMENT FUSES SHOULD BE OF THE SAME TYPE
D RATINGS ONLY.
YG-H3
Q201
Q210
IC203
IC204
IC202
IC201
Q208

: mark shows a high voltage generation point (excepting the Charged section).

5. PCB PARTS LIST

NOTES: ●*Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.*
●*The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
●*When ordering resistors, first convert resistance values into code form as shown in the following examples.*
Ex.1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47k ohm (tolerance is shown by J=5%, and K=10%).
560 Ω → 56×10^1 → 561 .... RD1/4PU $\boxed{5}\,\boxed{6}\,\boxed{1}$ J
47k Ω → 47×10^3 → 473 .... RD1/4PU $\boxed{4}\,\boxed{7}\,\boxed{3}$ J
0.5 Ω → R50 .... RN2H $\boxed{R}\,\boxed{5}\,\boxed{0}$ K
1 Ω → 1R0 .... RS1P $\boxed{1}\,\boxed{R}\,\boxed{0}$ K
Ex.2 When there are 3 effective digits (such as in high precision metal film resistors).
5.62k Ω → 562×10^1 → 5621 .... RN1/4PC $\boxed{5}\,\boxed{6}\,\boxed{2}\,\boxed{1}$ F
●*Parts marked by ☆ are important parts which relate in X-rays radiation. If any of these parts need to be replaced, always replace with specified parts.*
●*Parts marked by × are important parts which relate in X-rays radiation. If a failure occurs in any of these parts, replace the printed circuit board assembly where the relevant part has already been adjusted as a working component. Do not replace the actual part itself. If any part marked by × is replaced, there is danger of being exposed to X-rays.*

LIST OF ASSEMBLIES

Mark	No.	Description	Part No.
		AV I/O ASSY	AWV1919
		BNC ASSY	AWV1920
		VIDEO ASSY	AWV1916
		SUB VIDEO SERVICE ASSY	AWV1922
		DEFLECTION SERVICE ASSY	AWV1921
		POWER SUPPLY ASSY	AWV1912
		SIGNAL ASSY	AWV1917
		├ RF SWITCH	AXF1088
		├ TV FRONT END SYSTEM UNIT	AXF1102
		└ TV FRONT END SYSTEM UNIT	AXF1103
		AMP ASSY	AWV1914
		├ CONV. AMP ASSY	AWZ6649
		├ R CRT DRIVE ASSY	AWZ6601
		├ G CRT DRIVE ASSY	AWZ6602
		└ B CRT DRIVE ASSY	AWZ6603
		DIGITAL CONV. ASSY	AWV1915
		├ DIGITAL CONV. ASSY	AWZ6460
		├ CONNECTOR ASSY	AWZ6461
		├ AUDIO ASSY	AWZ6472
		├ FRONT CONTROL ASSY	AWZ6462
		├ LED DPO ASSY	AWZ6470
		├ SR ASSY	AWZ6465
		├ FRONT INPUT ASSY	AWZ6466
		├ POWER SW ASSY	AWZ6467
		└ RGB SW ASSY	AWZ6468

A SIGNAL ASSY

• TUNER 1 BLOCK

SEMICONDUCTORS

Mark	No.	Description	Part No.
	IC2701		PQ05DZ51
	IC2702		PQ09DZ11
	Q2701,Q2710,Q2720		2SA1162
	Q2702-Q2705,Q2707,Q2711,Q2716		2SC2712
	Q2719		2SC2712
	D2701-D2703,D2706,D2707,D2710		1SS226
	D2705		1SS352
	D2704		UDZ30B

COILS

Mark	No.	Description	Part No.
	L2707-L2710		QTL1013

CAPACITORS

Mark	No.	Description	Part No.
	C2701,C2722		CCSRCH470J50
	C2703,C2709,C2713,C2716,C2724		CEAT100M50
	C2729,C2741		CEAT100M50
	C2744		CEAT101M10
	C2710,C2720,C2730,C2739		CEAT471M10
	C2708,C2721,C2728		CEAT471M6R3
	C2702,C2704,C2723,C2725		CKSRYB102K50
	C2706,C2707,C2711,C2712		CKSRYB103K50
	C2717-C2719,C2727,C2731,C2732		CKSRYB103K50
	C2737,C2742		CKSRYB103K50

RESISTORS

Mark	No.	Description	Part No.
	R2728		RD1/2MMF271J
	Other Resistors		RS1/16S☐☐☐J

OTHERS

Mark	No.	Description	Part No.
	2704,2705	PLUG CORD	ADE1171
	J2703	10P HOUSING WIRE	ADX2496
	J2701	3P HOUSING WIRE	ADX2567
	CN2701	CONNECTOR 5-P	S5B-PH-SM3

• TUNER 2 BLOCK

SEMICONDUCTORS

Mark	No.	Description	Part No.
	IC2801		CXA2094Q
	IC2802		MC14066BF
	Q2804		2SA1162
	Q2801-Q2803		2SC2712
	D2801,D2802		1SS226

CAPACITORS

Mark	No.	Description	Part No.
	C2812 (33µF/50V)		ACH1128
	C2814 (10µF/50V)		ACH1129
	C2819,C2820		CCSRCH101J50
	C2818		CEAT101M10
	C2801,C2803,C2808,C2809,C2813		CEAT4R7M50

Mark	No. Description	Part No.
	C2824,C2825	CEAT4R7M50
	C2804	CEHAQ100M50
	C2802,C2815	CEHAQ1R0M50
	C2806,C2807	CEHAQ4R7M50
	C2810	CFHSQ272J50
	C2811	CKSQYB473K50
	C2805,C2821-C2823	CKSRYB103K50
	C2816	CKSRYB123K50
	C2817	CKSRYB562K50

RESISTORS

	R2806	RS1/16S6202F
	Other Resistors	RS1/16S☐☐☐J

• MAIN UCOM BLOCK

SEMICONDUCTORS

	IC2454	24LC32A(I)P
	IC2451	MC14066BF
	IC2452	PD5717A
	IC2453	PST9146N
	Q2452,Q2454	2SA1162
	Q2453,Q2455-Q2457,Q2459-Q2461	2SC2712
	Q2463,Q2464	2SC2712
	Q2451	2SC4213
	Q2458	2SJ461
	D2454,D2455,D2490	1SS184
	D2456,D2457,D2460-D2469	1SS226
	D2475,D2476,D2479-D2484,D2486	1SS226
	D2488	1SS226
	D2451-D2453,D2458,D2459,D2485	1SS352
	D2489	1SS352

COILS AND FILTERS

	L2457	ATF-163
	L2451,L2452	ATX1035

CAPACITORS

	C2454,C2462,C2467,C2473	CEHAT101M10
	C2476	CEHAT220M50
	C2478	CEHAT222M10
	C2453,C2455	CEHAT470M16
	C2481	CEHAT472M25
	C2451,C2452	CEHAT4R7M50
	C2459,C2464	CKSRYB102K50
	C2457,C2458,C2460,C2463,C2465	CKSRYB103K50
	C2468-C2472,C2474	CKSRYB103K50
	C2456	CKSRYB104K16
	C2461,C2480	CKSRYF104Z16

RESISTORS

	R2570,R2584 (22kΩ)	ACN7073
	R2475,R2476,R2481-R2487 (100Ω)	DCN1092
	R2496,R2498,R2499 (100Ω)	DCN1092
	R2502,R2510,R2525 (100Ω)	DCN1092
	R2524,R2554,R2567 (10kΩ)	DCN1094
	Other Resistors	RS1/16S☐☐☐J

OTHERS

	X2451 CERAMIC RESONATOR	ASS1015
	J24513P HOUSING WIRE	ADX2499
	CN2457 L-PLUG (8P)	KM250MA8L
	CN2454 PLUG 50-P	AKM1126

Mark	No. Description	Part No.
	CN2451 L-PLUG (8P)	KM250MA8LR
	CN2458 PH CONNECTOR (12P)	S12B-PH-SM3
	CN2455 CONNECTOR (3P)	S3B-PH-SM3
	CN2453 CONNECTOR (3P)	S8B-PH-SM3

• 3D Y/C BLOCK

SEMICONDUCTORS

	IC7002	IS41C16256-35K
	IC7004	PQ3DZ13
	IC7001	UPD64082GF-3BA
	Q7002,Q7003,Q7009	2SA1162
	Q7001,Q7004-Q7008	2SC2712
	Q7010-Q7015	2SC2712

COILS

	L7017 (5.6µH)	ATH1107
	L7015,L7018,L7019	LCTA220J2520
	L7021	LCTA470J2520
	L7014	LCTA8R2J2520
	L7008,L7011	LFEA100J
	L7009,L7012	LFEA150J
	L7010	LFEA220J
	L7001	LFEA4R7J

CAPACITORS

	C7014	CCSQCH102J50
	C7051,C7062	CCSQCH121J50
	C7008	CCSQSL391J50
	C7057,C7063	CCSRCH100D50
	C7047,C7050	CCSRCH220J50
	C7002	CCSRCH270J50
	C7003,C7059	CCSRCH330J50
	C7058,C7064	CCSRCH560J50
	C7025,C7033,C7038,C7039,C7049	CEHAT101M10
	C7034,C7036	CEHAT102M6R3
	C7019,C7055	CEHAT1R0M50
	C7045	CEHAT470M16
	C7001,C7004-C7007,C7009-C7013	CKSRYB103K50
	C7015-C7018,C7020-C7022,C7032	CKSRYB103K50
	C7035,C7037,C7041-C7044,C7046	CKSRYB103K50
	C7048,C7056	CKSRYB103K50

RESISTORS

	Other Resistors	RS1/16S☐☐☐J

OTHERS

	X7001 (20MHz)	ASS1140

• MAIN COLOR DECODER BLOCK

SEMICONDUCTORS

	IC7103	NJM2233BM
	IC7101	TA1270BF
	IC7102	TK15420M
	Q7123	2SA1162
	Q7104,Q7105,Q7111-Q7113	2SC2712
	Q7115,Q7116	2SC2712

COILS

	L7105	LCTA5R6J2520
	L7107	LFA5R6J

CAPACITORS

Mark	No. Description	Part No.
	C7140	CCSQCH120J50
	C7102	CCSQSL222J50
	C7125,C7126	CEAT100M50
	C7105	CEAT102M6R3
	C7135	CEAT220M50
	C7103,C7104	CEAT2R2M50
	C7128,C7130	CEAT470M16
	C7115	CEATR22M50
	C7143	CEHAT470M16
	C7107	CFHS223J16
	C7114	CKSQYB474K16
	C7117,C7120,C7127,C7129,C7144	CKSRYB103K50
	C7148	CKSRYB103K50
	C7106,C7108-C7113	CKSRYB104K16

RESISTORS

Mark	No. Description	Part No.
	Other Resistors	RS1/16S☐☐☐J

OTHERS

Mark	No. Description	Part No.
	X7102 CERAMIC RESONATOR	ASS1019
	X7101 (3.58MHz)	ASS1138

• SUB COLOR DECODER BLOCK

SEMICONDUCTORS

Mark	No. Description	Part No.
	IC7303	NJM2233BM
	IC7300	TA1270BF
	IC7308	TA78M05F
	IC7307	TC90A45F
	IC7302,IC7304	TK15420M
	Q7316,Q7318,Q7319	2SA1162
	Q7303,Q7304,Q7309,Q7314,Q7315	2SC2712
	Q7317,Q7320,Q7326	2SC2712
	Q7307,Q7308,Q7310	2SC4213

COILS

Mark	No. Description	Part No.
	L7306,L7307	LFA120J
	L7302	LFEA101J
	L7303	LFEA220J

CAPACITORS

Mark	No. Description	Part No.
	C7340	CCSQCH120J50
	C7355,C7357	CCSQCH181J50
	C7301	CCSQSL222J50
	C7356,C7372	CCSRCH330J50
	C7329,C7330	CEAT100M50
	C7308,C7309	CEAT101M10
	C7358	CEAT1R0M50
	C7337-C7339	CEAT220M50
	C7302,C7303	CEAT2R2M50
	C7304,C7349,C7351	CEAT470M10
	C7332,C7335,C7342	CEAT470M16
	C7300	CEATR22M50
	C7307	CFHS223J16
	C7317	CKSQYB474K16
	C7305,C7310,C7319,C7323,C7327	CKSRYB103K50
	C7331,C7333,C7348,C7350	CKSRYB103K50
	C7352-C7354,C7366-C7369,C7371	CKSRYB103K50
	C7306,C7311-C7316	CKSRYB104K16

RESISTORS

Mark	No. Description	Part No.
	All Resistors	RS1/16S☐☐☐J

OTHERS

Mark	No. Description	Part No.
	X7301 CERAMIC RESONATOR	ASS1019
	X7300 (3.58MHz)	ASS1138

• TWIN-P BLOCK

SEMICONDUCTORS

Mark	No. Description	Part No.
	IC7703	CM0010AF
	IC7704	KIA431F
	IC7702	LC32V4265JL-25S
	IC7503	MC14053BF
	IC7701	PQ3DZ13
	IC7502	TK15420M
	Q7501,Q7504,Q7506	2SA1162
	Q7507-Q7525,Q7531	2SC2712

COILS AND FILTERS

Mark	No. Description	Part No.
	F7701,F7703	ATF1189
	L7707,L7708	LCTA8R2J2520
	L7506	LFA5R6J
	L7504	LFEA100J
	L7505	LFEA220J
	L7705,L7706	QTL1013

CAPACITORS

Mark	No. Description	Part No.
	C7520,C7521,C7523,C7524	CCSRCH101J50
	C7526,C7527	CCSRCH101J50
	C7550	CCSRCH180J50
	C7532,C7535,C7551,C7552	CCSRCH330J50
	C7512	CCSRCH680J50
	C7522,C7725-C7730,C7760	CEAT100M50
	C7515,C7706,C7755	CEAT101M10
	C7511,C7704,C7705	CEAT221M10
	C7505,C7506,C7548,C7716,C7734	CEAT470M10
	C7525	CEHAT100M50
	C7529	CEHAT470M16
	C7745-C7753,C7761-C7763,C7769	CKSQYF105Z16
	C7772	CKSQYF105Z16
	C7754,C7765	CKSQYF224Z25
	C7502,C7503,C7507,C7514,C7528	CKSRYB103K50
	C7701-C7703,C7707-C7715	CKSRYB103K50
	C7717-C7722,C7731,C7733	CKSRYB103K50
	C7735-C7744,C7766	CKSRYB103K50
	C7724,C7767,C7768,C7770,C7771	CKSRYB104K16
	C7756,C7758	CKSRYB152K50
	C7764	CKSRYF473Z50

RESISTORS

Mark	No. Description	Part No.
	R7710-R7713 (22kΩ)	ACN7073
	R7714-R7720,R7753 (100Ω)	DCN1092
	R7730	RS1/16S1002F
	R7729	RS1/16S1502F
	Other Resistors	RS1/16S☐☐☐J

OTHERS

Mark	No. Description	Part No.
	CN7501 PLUG 44-P	AKM1155

• COMPONENT BLOCK

SEMICONDUCTORS

Mark	No.	Description	Part No.
	IC6305		CXA1315M
	IC6302-IC6304		TC74HC4053AF
	Q6301,Q6303,Q6304		2SA1162
	Q6306,Q6308,Q6310		2SA1162
	Q6316-Q6318,Q6322,Q6324		2SA1162
	Q6325,Q6361,Q6363		2SA1162
	Q6328-Q6360,Q6362		2SC2712
	D6301-D6306,D6316-D6320		1SS226
	D6310,D6313		1SS352

COIL

	L6302		LFEA220J

CAPACITORS

	C6373,C6374		CCSQCH470J50
	C6325,C6348		CEAT100M50
	C6301-C6306,C6368-C6370		CEAT220M50
	C6332,C6339,C6355,C6357		CEAT470M16
	C6363-C6365		CEAT470M16
	C6326,C6349		CEAT4R7M50
	C6307,C6311,C6321,C6328		CKSRYB103K50
	C6330,C6331,C6333,C6335-C6338		CKSRYB103K50
	C6340,C6342-C6345,C6351,C6356		CKSRYB103K50
	C6358-C6362,C6366,C6367		CKSRYB103K50

RESISTORS

	Other Resistors		RS1/16S□□□J

B AV I/O ASSY

SEMICONDUCTORS

	IC6001		CXA2069Q
	IC6201,IC6202		MC14066BF
	Q6004,Q6012,Q6014,Q6015,Q6019		2SA1162
	Q6022,Q6024,Q6025,Q6034		2SA1162
	Q6036-Q6038,Q6201,Q6206,Q6212		2SA1162
	Q6214,Q6216-Q6218		2SA1162
	Q6001-Q6003,Q6005-Q6011,Q6013		2SC2712
	Q6016-Q6018,Q6020,Q6021,Q6023		2SC2712
	Q6027-Q6033,Q6035,Q6039-Q6048		2SC2712
	Q6202-Q6204		2SC2712
	Q6205,Q6207-Q6211,Q6213,Q6215		2SC2712
	D6040,D6041,D6207		1SS184
	D6001-D6022,D6024,D6027-D6029		1SS226
	D6032,D6034,D6036,D6208-D6212		1SS226
	D6023,D6030,D6031,D6037-D6039		1SS352
	D6201-D6203,D6213		1SS352
	D6214		UDZS6.2B
	D6204		RD6.8MB

CAPACITORS

Mark	No.	Description	Part No.
	C6006,C6049,C6052,C6068,C6081		CEV100M16
	C6086		CEV100M16
	C6047		CEV101M6R3
	C6073,C6074		CEV102M6R3
	C6013,C6014,C6026,C6027		CEV1R0M50
	C6031,C6032,C6036,C6037		CEV1R0M50
	C6041-C6043,C6065,C6078,C6209		CEV1R0M50
	C6015-C6017,C6024,C6028,C6029		CEV220M16
	C6033,C6034,C6051,C6064,C6070		CEV220M16
	C6072,C6083,C6088		CEV220M16
	C6204		CEV470M6R3
	C6001,C6004,C6018,C6020,C6045		CEV470M16
	C6059-C6061,C6085,C6208,C6210		CEV470M16
	C6214,C6216		CEV470M16
	C6007,C6050,C6053,C6069,C6082		CEV4R7M35
	C6087		CEV4R7M35
	C6046		CEVNP470M6R3
	C6077		CEVNPR47M50
	C6067		CEVR47M50
	C6002,C6003,C6009-C6012		CKSQYF105Z16
	C6090,C6091,C6212,C6213		CKSQYF105Z16
	C6075,C6076		CKSRYB332K50
	C6005,C6008,C6021-C6023		CKSRYF103Z50
	C6038-C6040,C6044,C6048		CKSRYF103Z50
	C6201,C6203		CKSRYF103Z50
	C6054-C6058,C6062,C6063,C6071		CKSRYF103Z50
	C6084,C6089,C6205-C6207,C6215		CKSRYF103Z50
	C6019,C6025,C6030,C6035		CKSRYF104Z16
	C6202		CKSQYF472Z50

RESISTORS

	R6183		RD1/2LMF1R0J
	R6182		RD1/4LMF3R9J
	R6003,R6042,R6168,R6169		RS1/10S151J
	R6090,R6107		RS1/10S182J
	R6007,R6008,R6046,R6047		RS1/10S361J
	R6195-R6198,R6238,R6239		RS1/10S361J
	R6294,R6295		RS1/10S361J
	Other Resistors		RS1/16S□□□J

OTHERS

	CN6001	PIN JACK (6P) WITH SIN	AKB1271
	CN6002	PIN JACK (6P) WITH SIN	AKB1272
	CN6003	PIN JACK (6P)	AKB1273
	CN6203	PIN JACK (6P)	AKB1274
	CN6205	PLUG 50-P	AKM1126
	JA6201,JA6206	JACK	AKN1071
	CN6006	L-PLUG (10P)	KM250MA10L
	CN6005	L-PLUG (11P)	KM250MA11L
	CN6007	PLUG 3-P	KM250MA3L
	CN6202	PLUG 3-P	KM250MA3LB
	CN6204	PLUG 3-P	KM250MA3LR

C BNC ASSY

OTHERS

	8001	BNC SOCKET	AKX1046
	CN8002	PLUG 8-P	KM250MA8

D SR ASSY

CAPACITORS

	C5072		CCSQCH121J50
	C5071		CEV101M6R3

RESISTORS

	Other Resistors		RS1/16S□□□J

OTHERS

Mark	No.	Description	Part No.
	CN5071		KM250MA3B
	X5071	REMOTE RECEIVER UNIT	GP1U28X

E VIDEO ASSY

• VIDEO BLOCK

SEMICONDUCTORS

Mark	No.	Description	Part No.
	IC5254		CXA1315P
	IC5251		TA1276AN
	IC5256		TC74HC4053AP
	IC5252		TC74HC4538AP
	Q5251-Q5255,Q5260-Q5264,Q5266		2SA933S
	Q5268,Q5270,Q5276,Q5277		2SA933S
	Q5285-Q5287,Q5290,Q5301		2SA933S
	Q5305,Q5306,Q5318,Q5323		2SA933S
	Q5331-Q5333,Q5341		2SA933S
	Q5257,Q5259,Q5265,Q5272-Q5275		2SC1740S
	Q5278-Q5281,Q5288,Q5289,Q5302		2SC1740S
	Q5307-Q5310,Q5312,Q5319,Q5320		2SC1740S
	Q5328-Q5330,Q5340,Q5342		2SC1740S
	Q5267,Q5269,Q5271		2SC2235
	D5251-D5283,D5293-D5297		1SS133
	D5308-D5310,D5314-D5319		1SS133
	D5329-D5338,D5340-D5347		1SS133
	D5349-D5362,D5364		1SS133
	D5298-D5306,D5320-D5328		MTZJ11
	D5284-D5292		S5688G

COILS

Mark	No.	Description	Part No.
	L5251		LAU100J
	L5253		LAU1R0J
	L5252		LAU4R7J

CAPACITORS

Mark	No.	Description	Part No.
	C5259		CCCCH271J50
	C5298,C5299		CCCCH7R0D50
	C5332		CCCSL150J50
	C5296		CCCSL151J50
	C5322,C5334		CCCSL180J50
	C5288		CCCSL220J50
	C5295		CCCSL2R0C50
	C5287		CCCSL560J50
	C5269,C5281,C5282,C5297,C5321		CEAT100M50
	C5336		CEAT100M50
	C5251,C5255,C5312,C5324,C5340		CEAT101M10
	C5309		CEAT101M16
	C5274,C5284		CEAT1R0M50
	C5301,C5331		CEAT220M50
	C5270		CEAT221M10
	C5319		CEAT221M16
	C5272,C5283		CEAT2R2M50
	C5292		CEAT470M16
	C5261		CEAT471M6R3
	C5285		CEAT4R7M50
	C5257,C5258,C5271,C5273		CEATR10M50
	C5286		CEATR47M50
	C5252-C5254,C5256,C5262,C5278		CKCYF103Z50
	C5293,C5294,C5310,C5311		CKCYF103Z50
	C5316-C5318,C5325,C5339,C5341		CKCYF103Z50
	C5263-C5268,C5275-C5277		CQMA104J50
	C5323		CQPA103J2A
	C5300		CQPA223J2A
	C5260		CQPA271J2A

RESISTORS

Mark	No.	Description	Part No.
	R5326,R5331,R5336		RD1/2PM100J
	R5285-R5287		RD1/2PM101J
	R5323,R5328,R5333		RD1/2PM821J
	R5317,R5319,R5321		RD1/2PM8R2J
	R5309		RN1/4PC1002F
	R5475		RN1/4PC1003F
	R5310		RN1/4PC1102F
	R5346,R5587		RN1/4PC1201F
	R5297		RN1/4PC1202F
	R5586		RN1/4PC1300F
	R5303		RN1/4PC1501F
	R5353		RN1/4PC1502F
	R5345		RN1/4PC1602F
	R5298		RN1/4PC2201F
	R5354		RN1/4PC2402F
	R5307		RN1/4PC2700F
	R5344		RN1/4PC2701F
	R5295,R5304,R5347,R5469,R5470		RN1/4PC3301F
	R5349		RN1/4PC3302F
	R5296		RN1/4PC3601F
	R5311,R5484		RN1/4PC4702F
	R5343		RN1/4PC5101F
	R5306,R5308		RN1/4PC5601F
	R5476		RN1/4PC6802F
	R5302,R5305		RN1/4PC7500F
	R5294,R5300		RN1/4PC8200F
	R5348		RN1/4PC9102F
	VR5251,VR5252		ACP1072
	Other Resistors		RD1/4PU□□□J

OTHERS

Mark	No.	Description	Part No.
	CN5255	PLUG 11-P	KM250MA11
	CN5251	PLUG 15-P	KM250MA15
	CN5252	PLUG 3-P	KM250MA3

• VIDEO CONNECTOR BLOCK

SEMICONDUCTORS

Mark	No.	Description	Part No.
	IC5602		PQ30RV11(A)
	IC5601		PQ3RF23
	Q5601,Q5602,Q5606-Q5608,Q5611		2SA933S
	Q5621,Q5622		2SA933S
	Q5603-Q5605,Q5609,Q5613-Q5620		2SC1740S
	D5601,D5603-D5605,D5608-D5620		1SS133

COILS

Mark	No.	Description	Part No.
	L5601-L5603,L5605		ATH-059

CAPACITORS

Mark	No.	Description	Part No.
	C5629-C5631		CCCSL150J50
	C5605		CCCSL330J50
	C5619		CEAT100M50
	C5601,C5602,C5622		CEAT101M10
	C5604		CEAT101M16
	C5610,C5612		CEAT102M16
	C5616,C5617		CEAT102M25
	C5607,C5608,C5623		CEAT222M10

Mark	No.	Description	Part No.
	C5613		CEAT471M16
	C5603,C5624-C5628		CKCYF103Z50

RESISTORS

Mark	No.	Description	Part No.
	R5656,R5657		RD1/2PM152J
	R5661		RN1/4PC1001F
	R5644		RN1/4PC1502F
	R5711		RN1/4PC1801F
	R5643		RN1/4PC2701F
	R5702		RN1/4PC3001F
	R5629		RN1/4PC3301F
	R5627		RN1/4PC3601F
	R5645,R5646		RS2MMF1R0J
	R5663,R5712		RS3LMFR22J
	Other Resistors		RD1/4PU□□□J

OTHERS

Mark	No.	Description	Part No.
	KN5601-KN5604	GROUND PLATE	ANK-142
	CN5601,CN5603,CN5604	SOCKET 50-P	AKP1161
	CN5602,CN5605	SOCKET 44-P	AKP1186
	CN5607	11P PLUG	KM200IA11
	CN5609	12P PLUG	KM200IA12
	CN5611	PLUG 4-P	KM250MA4
	CN5610	PLUG 6-P	KM250MA6
	CN5606	8P SOCKET	KP250NA8
	SCREW		PMZ30P100FZK

F RGB SW ASSY

SWITCH

Mark	No.	Description	Part No.
	S5091		ASH1029

RESISTORS

Mark	No.	Description	Part No.
	All Resistors		RS1/16S□□□J

OTHERS

Mark	No.	Description	Part No.
	CN5092	15PD-SUB SOCKET	AKP1195
	CN5091	8P PLUG	KM250NA8L

G AUDIO ASSY

SEMICONDUCTORS

Mark	No.	Description	Part No.
	IC1202		LA4280-P
	IC1203-IC1205		NJM4558MD
	IC1201		UPC1853CT-01
	Q1206		2SA1162
	Q1201-Q1203,Q1207,Q1210-Q1213		2SC2712
	Q1208,Q1209		2SC4213
	D1205		1SS226

CAPACITORS

Mark	No.	Description	Part No.
	C1239	(470µF/10V)	ACH1334
	C1242,C1243		CCSQCH151J50
	C1245		CEHAT102M50
	C1228,C1229		CEHV2R2M50
	C1204		CEV1R0M50
	C1205,C1214,C1215,C1237		CEV220M16
	C1246,C1247		CEV220M16
	C1234		CEV221M35
	C1202,C1203		CEV2R2M50
	C1235,C1236		CEV330M25
	C1206,C1207		CEV3R3M50
	C1208,C1212,C1263,C1267		CEV470M16
	C1240,C1241		CEVR47M50
	C1218,C1221		CFHS223J16
	C1210,C1211,C1244		CFHSP104J16
	C1201		CFHSP823J16
	C1219		CFHSQ102J50
	C1217		CFHSQ222J50
	C1223		CFHSQ681J50
	C1220,C1222		CFHSQ682J16
	C1216,C1230,C1231,C1233		CFTYA104J50
	C1250,C1256		CKSQYB183K50
	C1264,C1265		CKSRYB102K50
	C1248,C1254		CKSRYB152K50
	C1251,C1257		CKSRYB332K50
	C1249,C1255		CKSRYB682K50
	C1209,C1213,C1226,C1227,C1232		CKSRYF103Z50
	C1262,C1266		CKSRYF103Z50

RESISTORS

Mark	No.	Description	Part No.
	R1228,R1229		RD1/4LMF2R2J
	R1291		RD1/4LMF3R9J
	R1245		RS1/2S561J
	Other Resistors		RS1/16S□□□J

OTHERS

Mark	No.	Description	Part No.
	1201	ISOLATION SHEET	AEB1359
	1202	PLATE SPRING	ANG1569
	1201	SCREW	BBZ30P080FCU
	CN1201	11P SOCKET	KP200IA11L
	CN1202	12P SOCKET	KP200IA12L

H SUB VIDEO SERVICE ASSY

• FLESH TONE BLOCK

SEMICONDUCTORS

Mark	No.	Description	Part No.
	IC3001		AN5344FBP
	IC3002		TK15420M
	Q3002,Q3003,Q3018		2SA1162
	Q3001,Q3008-Q3013,Q3015		2SC2712
	Q3019-Q3027,Q3029-Q3040		2SC2712
	D3001		1SS184

COILS AND FILTERS

Mark	No.	Description	Part No.
	L3016		ATH1108
	DL3002		ATN1040
	L3009,L3012,L3014		LFA1R2J
	L3001,L3003,L3005,L3007,L3010		LFA5R6J
	L3008,L3011,L3013		LFEA2R2J
	L3002,L3004,L3006		LFEA4R7J

CAPACITORS

Mark	No.	Description	Part No.
	C3049,C3050		CCSRCH100D50
	C3019,C3042,C3052,C3057,C3062		CCSRCH101J50
	C3048		CCSRCH180J50
	C3053,C3058,C3063		CCSRCH220J50
	C3034,C3039,C3043,C3046		CCSRCH330J50
	C3033,C3038,C3045		CCSRCH331J50
	C3032,C3037,C3044		CCSRCH470J50
	C3051,C3056,C3061		CCSRCH560J50

Mark	No. Description	Part No.
	C3024	CEANP2R2M50
	C3007,C3008	CEANPR33M50
	C3020	CEAT101M16
	C3014	CEAT1R0M50
	C3009,C3017	CEAT2R2M50
	C3005,C3006,C3028,C3040,C3054	CEAT470M16
	C3059	CEAT470M16
	C3001,C3002	CEATR33M50
	C3015	CEATR47M50
	C3010,C3011	CKSQYF105Z16
	C3022	CKSRYB102K50
	C3013,C3016	CKSRYF103Z50
	C3003,C3004,C3021,C3025,C3027	CKSRYF104Z16
	C3035,C3036,C3041,C3047,C3055	CKSRYF104Z16
	C3060,C3066	CKSRYF104Z16
	C3012	CQMBA103J50

RESISTORS

	R3150	RS1/16S1001F
	R3052	RS1/16S1002F
	R3118	RS1/16S1200F
	R3083,R3160,R3172	RS1/16S1201F
	R3117	RS1/16S1500F
	R3068,R3119,R3120,R3125,R3131	RS1/16S1501F
	R3142,R3159,R3171	RS1/16S1501F
	R3057	RS1/16S1802F
	R3161,R3173	RS1/16S2000F
	R3143	RS1/16S3300F
	R3063	RS1/16S3600F
	R3132	RS1/16S5100F
	R3121	RS1/16S6800F
	VR3003 (1kΩ)	ACP1089
	VR3004 (4.7kΩ)	ACP1091
	Other Resistors	RS1/16S☐☐☐J

OTHERS

	CN3002 PLUG 50-P	AKM1126
	CN3001 PLUG 44-P	AKM1155

• I/P BLOCK

SEMICONDUCTORS

	IC3201	CXA3106Q
	IC3203	CXD2303AQ
	IC3801	HD64F3067RF20
	IC3601,IC3604	MS82V16520-8GA
	IC3401	PE5066A
	IC3501	PE5067A
	IC3602	SDA9280
	IC3206	TA78M05F
	IC3205	TC74HC126AF
	IC3202	TC74HC4053AF
	IC3208	TC74HC4538AF
	IC3207	TC74HCT04AF
	IC3204	TC74LCX541FT
	IC3802	TC7SET08FU
	Q3204-Q3209,Q3601-Q3603,Q3607	2SA1162
	Q3609,Q3615	2SA1162
	Q3201-Q3203,Q3213,Q3604-Q3606	2SC2712
	Q3608,Q3610-Q3614	2SC2712
	D3201	1SS352

Mark	No. Description	Part No.

COILS AND FILTERS

	F3202,F3203,F3401,F3801	ATF1194
	L3201-L3207	LCTA8R2J2520
	L3601,L3603,L3606	LFA1R2J
	L3602,L3604,L3607	LFEA2R2J
	L3208	QTL1013

CAPACITORS

	C3205,C3207 (0.47μF/16V)	ACE1130
	C3653	CCSRCH100D50
	C3204,C3254,C3256-C3258,C3624	CCSRCH101J50
	C3650,C3660	CCSRCH101J50
	C3252,C3260	CCSRCH102J50
	C3654,C3656	CCSRCH180J50
	C3236,C3237,C3253,C3416,C3520	CCSRCH220J50
	C3623,C3649,C3659,C3817	CCSRCH220J50
	C3642,C3651,C3661	CCSRCH560J50
	C3814,C3815	CCSRCH7R0D50
	C3662,C3663	CEAT220M50
	C3224,C3233,C3247,C3402,C3417	CEAT221M6R3
	C3518,C3601,C3617,C3801	CEAT221M6R3
	C3219,C3220,C3239,C3648,C3664	CEAT470M16
	C3646	CKSRYB152K50
	C3202	CKSRYB222K50
	C3201,C3210-C3218,C3221-C3223	CKSRYF104Z16
	C3225-C3232,C3234,C3238,C3240	CKSRYF104Z16
	C3242,C3243,C3246,C3248-C3251	CKSRYF104Z16
	C3255,C3259,C3262,C3276	CKSRYF104Z16
	C3403-C3415,C3502-C3505	CKSRYF104Z16
	C3507-C3517,C3600,C3602-C3614	CKSRYF104Z16
	C3616,C3618-C3622,C3625-C3636	CKSRYF104Z16
	C3638-C3641,C3643-C3645,C3647	CKSRYF104Z16
	C3655,C3658,C3803-C3805,C3816	CKSRYF104Z16
	C3818	CKSRYF104Z16
	C3206,C3261	CKSRYF223Z50

RESISTORS

	R3521,R3522,R3801,R3808 (47Ω)	DCN1090
	R3821,R3826,R3831 (47Ω)	DCN1090
	R3809,R3810 (4.7kΩ)	DCN1100
	R3291	RS1/16S1001F
	R3607	RS1/16S1002F
	R3633	RS1/16S1302F
	R3606,R3635,R3637,R3638	RS1/16S1500F
	R3659,R3673,R3679,R3685,R3692	RS1/16S1501F
	R3697	RS1/16S1501F
	R3207,R3290	RS1/16S1601F
	R3281	RS1/16S2401F
	R3206	RS1/16S3301F
	R3644	RS1/16S6801F
	R3691	RS1/16S8200F
	R3280	RS1/16S8201F
	R3672,R3684	RS1/16S9100F
	Other Resistors	RS1/16S☐☐☐J

OTHERS

	X3801 CERAMIC RESONATOR (20.0MHz)	ASS1147
	CN3802 PLUG 7-P	KM250MA7

• CLAMP BLOCK

SEMICONDUCTORS

Mark	No.	Description	Part No.
	IC4052		M52036SP
	IC4051		TC74HC4053AF
	IC4053,IC4055		TC74HC4066AF
	IC4054,IC4056		TC74HC4538AF
	Q4057,Q4058,Q4062-Q4064		2SA1162
	Q4071-Q4072,Q4078,Q4081,Q4087		2SA1162
	Q4089-Q4091,Q4096		2SA1162
	Q4051-Q4056,Q4059-Q4061		2SC2712
	Q4065-Q4070,Q4075-Q4077		2SC2712
	Q4079,Q4080,Q4083-Q4086,Q4088		2SC2712
	Q4092-Q4095,Q4097,Q4098		2SC2712
	Q4102,Q4103		2SC2712
	Q4082		2SK209
	D4056,D4057,D4059,D4060		1SS226
	D4052-D4054,D4058		1SS352

CAPACITORS

Mark	No.	Description	Part No.
	C4062,C4064,C4098		CCSQCH561J50
	C4082		CCSRCH101J50
	C4067		CEAT100M50
	C4099		CEAT1R0M50
	C4054,C4056,C4057,C4059,C4065		CEAT470M16
	C4068,C4075,C4078,C4080,C4089		CEAT470M16
	C4092,C4093		CEAT470M16
	C4081,C4094-C4097		CEAT4R7M50
	C4063		CEATR10M50
	C4104		CFHSQ331J50
	C4103		CFHSQ332J16
	C4087,C4102		CFHSQ821J50
	C4060,C4086		CKSRYB472K50
	C4058,C4061,C4066,C4069,C4074		CKSRYF104Z16
	C4077,C4079,C4083,C4084,C4088		CKSRYF104Z16
	C4091		CKSRYF104Z16

RESISTORS

Mark	No.	Description	Part No.
	R4193		RS1/16S1001F
	R4159		RS1/16S1002F
	R4147		RS1/16S1801F
	R4219		RS1/16S2001F
	R4161		RS1/16S2402F
	R4148,R4167		RS1/16S3902F
	R4162		RS1/16S4702F
	R4175		RS1/16S6802F
	R4166		RS1/16S6200F
	VR4051	(2.2kΩ)	ACP1090
	VR4052	(47kΩ)	ACP1094
		Other Resistors	RS1/16S□□□J

• SYNC BLOCK

SEMICONDUCTORS

Mark	No.	Description	Part No.
	IC4801		HG62G010R29FB
	IC4802		TC74HC14AF
	IC4803		TC74HC4040AF
	IC4804		TLC2932IPW
	Q4801		2SC2712
	D4801,D4802		1SS352

COILS

Mark	No.	Description	Part No.
	L4801,L4802		QTL1013

CAPACITORS

Mark	No.	Description	Part No.
	C4814		CCSRCH221J50
	C4804,C4808		CEAT101M16
	C4807,C4813		CKSRYB102K50
	C4801-C4803,C4805,C4806		CKSRYF104Z16
	C4809-C4812,C4815		CKSRYF104Z16

RESISTORS

Mark	No.	Description	Part No.
		Other Resistors	RS1/16S□□□J

• SHARPNESS BLOCK

SEMICONDUCTORS

Mark	No.	Description	Part No.
	IC4301		AN5395FBP
	IC4304		CXA1315M
	Q4301,Q4302,Q4306,Q4307,Q4319		2SA1162
	Q4328,Q4330		2SA1162
	Q4303-Q4305,Q4308-Q4311,Q4321		2SC2712
	Q4323,Q4325-Q4327,Q4331,Q4332		2SC2712

COILS AND FILTERS

Mark	No.	Description	Part No.
	F4302		ATF1194
	DL4303		ATN1055
	L4310,L4312		LFA1R5J
	L4302,L4311		LFA5R6J
	L4301		LFA820J

CAPACITORS

Mark	No.	Description	Part No.
	C4365-C4367		CCSRCH101J50
	C4369		CCSRCH270J50
	C4310		CCSRCH470J50
	C4302,C4347		CCSRCH560J50
	C4315		CEAT100M50
	C4348-C4350		CEAT101M16
	C4377		CEAT1R0M50
	C4345		CEAT470M16
	C4355-C4358		CKSQYB224K16
	C4323,C4324		CKSRYB102K50
	C4304-C4309,C4312,C4314,C4316		CKSRYF103Z50
	C4320,C4322,C4343,C4370		CKSRYF103Z50
	C4317,C4321,C4340,C4344,C4346		CKSRYF104Z16
	C4303,C4311,C4319,C4359		CQMBA103J50

RESISTORS

Mark	No.	Description	Part No.
	R4444		DCN1092
	R4303		RS1/16S2001F
	R4322,R4514		RS1/16S3301F
	R4307		RS1/16S6800F
		Other Resistors	RS1/16S□□□J

• SUB UCOM BLOCK

SEMICONDUCTORS

Mark	No.	Description	Part No.
	IC2204		PD0264AM
	IC2201		PD5718A
	IC2203		PST9146N
	IC2205		TC74HC157AF
	Q2202,Q2204,Q2205,Q2207,Q2208		2SA1162
	Q2201,Q2203,Q2206,Q2209,Q2210		2SC2712
	D2203,D2206,D2210,D2212		1SS226

Mark	No.	Description	Part No.
	D2215-D2234		1SS226
	D2204,D2205		RD6.8MB

COILS AND FILTERS

Mark	No.	Description	Part No.
	F2201		ATF1194
	L2201		LFA5R6J

CAPACITORS

Mark	No.	Description	Part No.
	C2206		CCSQCH561J50
	C2211		CCSRCH120J50
	C2205,C2241		CCSRCH221J50
	C2210		CCSRCH390J50
	C2207,C2208		CCSRCH5R0C50
	C2222,C2226,C2237,C2239		CEAT101M16
	C2234		CEAT1R0M50
	C2238		CEATR47M50
	C2224,C2228		CKSRYB102K50
	C2223		CKSRYF103Z50
	C2209,C2220,C2221,C2225,C2227		CKSRYF104Z16
	C2236		CKSRYF104Z16

RESISTORS

Mark	No.	Description	Part No.
	R2385	(22kΩ)	ACN7073
	R2229,R2230,R2242,R2269,R2275	(100Ω)	DCN1092
	Other Resistors		RS1/16S□□□J

OTHERS

Mark	No.	Description	Part No.
	CN2202	PLUG 6-P	KM250MA6L
	CN2204	52P IC SOCKET	AKH1023
	X2202	CERALOCK	ASS1156
	X2203	CERAMIC RESONATOR (26MHz)	ASS1157

• EQ BLOCK

SEMICONDUCTORS

Mark	No.	Description	Part No.
	IC4001		AD8057ART
	Q4003,Q4005		2SA1162
	Q4001,Q4007		2SA1669
	Q4002,Q4004,Q4006,Q4008		2SC2712

CAPACITORS

Mark	No.	Description	Part No.
	C4002-C4005		CEAT470M16
	C4001		CKSRYF104Z16

RESISTORS

Mark	No.	Description	Part No.
	R4001,R4022		RS1/16S1001F
	R4003		RS1/16S1201F
	R4008,R4012		RS1/16S1202F
	R4004,R4010		RS1/16S2001F
	R4021		RS1/16S2002F
	R4002		RS1/16S2202F
	R4009		RS1/16S4701F
	Other Resistors		RS1/16S□□□J

I DIGITAL CONV. ASSY

• DIGITAL CONVER BLOCK

SEMICONDUCTORS

Mark	No.	Description	Part No.
	IC1410		24LC128(I)P
	IC1401		CM0006CF
	IC1420		M51952BML
	IC1411,IC1419		NJM4558MD
	IC1409		TC74HC14AF
	IC1421		TC74HC4053AF
	IC1402		TLC2932IPW
	IC1412-IC1418		UPC4570G2
	IC1403-IC1408		UPD6376GS
	Q1401		2SC2712
	Q1403		2SJ461
	D1409		1SS181
	D1401-D1407		1SS226

COILS AND FILTERS

Mark	No.	Description	Part No.
	F1401-F1403		ATF1189
	L1402		ATH1046
	L1401,L1403,L1405,L1407,L1409		ATH1097
	L1411,L1413		ATH1097
	L1415-L1420,L1424,L1425		QTL1013
	L1428,L1429,L1432,L1433		QTL1013
	L1436,L1437		QTL1013

CAPACITORS

Mark	No.	Description	Part No.
	C1401,C1405,C1421,C1425,C1426		CCSQCH100D50
	C1430,C1431,C1435,C1436		CCSQCH100D50
	C1440,C1441,C1445,C1446,C1450		CCSQCH100D50
	C1540,C1542,C1544,C1546		CCSQCH101J50
	C1434		CCSQCH181J50
	C1451		CCSQCH471J50
	C1539		CCSQSL220J50
	C1551		CEAT102M6R3
	C1415		CEV2R2M50
	C1406,C1408,C1411,C1413,C1429		CEV470M6R3
	C1458,C1461,C1467,C1470,C1473		CEV470M6R3
	C1475,C1483,C1485,C1497,C1498		CEV470M6R3
	C1500,C1505,C1506,C1508		CEV470M6R3
	C1510,C1511,C1515,C1516,C1518		CEV470M6R3
	C1520,C1521,C1525,C1526,C1530		CEV470M6R3
	C1532,C1535,C1536,C1538,C1541		CEV470M6R3
	C1543,C1545,C1548		CEV470M6R3
	C1453		CEVNP4R7M16
	C1456		CEVR22M50
	C1454		CFHSQ103J16
	C1402,C1422,C1427,C1432,C1437		CFHSQ471J50
	C1442,C1447		CFHSQ471J50
	C1403,C1423,C1428,C1433,C1438		CFHSQ472J16
	C1443,C1448		CFHSQ472J16
	C1452		CFHSQ821J50
	C1404,C1407,C1409,C1410,C1412		CKSRYF103Z50
	C1414,C1416-C1418,C1420,C1424		CKSRYF103Z50
	C1455,C1457,C1459,C1460,C1463		CKSRYF103Z50
	C1465,C1466,C1468,C1469		CKSRYF103Z50
	C1471,C1472,C1474,C1476		CKSRYF103Z50
	C1478,C1479,C1481,C1482,C1484		CKSRYF103Z50
	C1486,C1488,C1489,C1491,C1492		CKSRYF103Z50
	C1494,C1496,C1499,C1501,C1502		CKSRYF103Z50

Mark	No.	Description	Part No.
	C1504,C1507,C1509,C1512,C1514		CKSRYF103Z50
	C1517,C1519,C1522,C1524		CKSRYF103Z50
	C1527,C1528,C1534,C1537		CKSRYF103Z50
	C1549,C1550		CKSRYF103Z50

RESISTORS

	R1404,R1412,R1416,R1419,R1424		RS1/16S1002F
	R1428,R1431,R1436,R1440		RS1/16S1002F
	R1454-R1456,R1519,R1521,R1523		RS1/16S1002F
	R1525,R1527,R1529		RS1/16S1002F
	R1520,R1522,R1524,R1526,R1528		RS1/16S2402F
	R1530		RS1/16S2402F
	R1401,R1514-R1518		RS1/16S4302F
	Other Resistors		RS1/16S□□□J

• U-CON BLOCK

SEMICONDUCTORS

	IC1652		PD5564
	IC1656		24LC08B(I)P
	IC1655		MC14066BF
	IC1653		PST9146N
	IC1654		TC74HC157AF
	IC1651		TC74HC4538AF
	Q1651		2SC2712
	Q1652		2SJ461
	D1677		1SS184
	D1651,D1654-D1657,D1661-D1665		1SS226
	D1667-D1670,D1673-D1676		1SS226
	D1652,D1666		RD6.8MB

COIL

	L1651		ATC1037

CAPACITORS

	C1659,C1660		CCSQCH150J50
	C1671		CCSQCH221J50
	C1655		CEV101M6R3
	C1672		CEV1R0M50
	C1652,C1661,C1665,C1669		CEV470M6R3
	C1654,C1673		CFHSQ561J50
	C1658,C1663,C1664		CKSRYB102K50
	C1667		CKSRYB561K50
	C1651,C1653,C1656,C1657,C1662		CKSRYF103Z50
	C1666,C1670,C1680		CKSRYF103Z50
	C1668		CKSRYF104Z16

RESISTORS

	R1731		RD1/4LMF2R7J
	R1737		RD1/4PU472J
	R1655		RS1/16S3901F
	Other Resistors		RS1/16S□□□J

OTHERS

	X1651	CERAMIC RESONATOR	ASS1015
	202,203	CABLE HOLDER (13P)	51063-1305
	CN1655	CONNECTOR 12-P	B12B-PH-SM3
	CN1654	CONNECTOR 8-P	B8B-PH-SM3
	CN1651	PLUG 10-P	KM250MA10
	CN1652	PLUG 6-P	KM250MA6
	CN1653	PLUG 7-P	KM250MA7

Mark	No.	Description	Part No.

J CONNECTOR ASSY

OTHERS

	1801,1802	CABLE HOLDER	51063-1305
	J1801,J1802	JUMPER WIRE	D15A13-100-2651
	CN1803	10P SOCKET	KP200IA10L
	CN1804	16P SOCKET	KP200IA16L

K CONV.AMP ASSY

SEMICONDUCTORS

	IC1002		CA0007AD
	IC1004,IC1005		M5220P
	IC1003		PA0053B
	IC901,IC903		STK392-110
	IC1001		TC4052BP
	Q902,Q905,Q908,Q909,Q917		2SA933S
	Q914		2SB950A
	Q901,Q903,Q906,Q907		2SC1740S
	Q910-Q912,Q915,Q916		2SC1740S
	Q904,Q918		2SC2878
	Q913		2SD1276A
	D1014,D1015,D907-D911		1SS133
	D921,D922,D924		1SS133
	D923		BR3371XJ30A
	D1001-D1013		RD12ESB
	D901-D906,D915-D920		S5688G

COILS

	L901,L902		ATH1108
	L903,L904		ATX1008
	L1001		LAU220J
	L1002		LAU5R6J

CAPACITORS

	C1001,C1022,C1023,C1025,C1041		CCCSL101J50
	C909,C911,C912		CCCSL151J50
	C917-C919,C934-C936		CCCSL220J50
	C905		CEANP101M25
	C953		CEAT100M50
	C1013-C1017,C1019,C1029,C1030		CEAT101M10
	C1035		CEAT101M10
	C906		CEAT101M25
	C1039		CEAT220M50
	C1036,C1037		CEAT330M16
	C1038		CEAT470M10
	C1004,C945		CEAT470M25
	C921,C922,C938,C939		CEHAT102M25
	C920,C923,C937		CEHAT102M35
	C952		CEHAT221M25
	C908		CEHAT221M35
	C949		CEHAT332M25
	C948		CEHAT332M35
	C940		CEHAT471M35
	C1040		CFTYA184J50
	C1028,C1034		CFTYA224J50
	C910,C913,C950		CKCYB102K50
	C924-C926,C941-C943		CKCYB331K50
	C914-C916,C931-C933		CKCYB681K50
	C1002,C1003,C1005-C1012,C1018		CKCYF103Z50

Mark	No.	Description	Part No.
	C1020,C1021,C1026,C1027		CKCYF103Z50
	C1031-C1033,C901-C904,C907		CKCYF103Z50
	C927-C930,C944,C946,C947		CKCYF103Z50
	C951,C954-C957		CKCYF103Z50

RESISTORS

Mark	No.	Description	Part No.
	R933,R955		RD1/2MMF470J
	R934,R940-R942,R956		RS1MMF470J
	R922		RS1MMF562J
	R935,R936,R957,R958		RS1MMFR47J
	R927-R929,R978-R980		RS2MMF121J
	R985		RS2MMF1R2J
	R960,R961		RS2MMF1R5J
	R930,R931,R981-R983		RS2MMF221J
	R976,R977		RS2MMF2R2J
	R914,R988		RS2MMFR47J
	R937,R938,R959		RS3LMF1R5J
	R932		RS3LMF221J
	R998		RS3LMFR68J
	R939		RS3LMFR82J
	Other Resistors		RD1/4PU□□□J

OTHERS

Mark	No.	Description	Part No.
	CN905	PLUG 10-P	KM200IA10
	CN904	PLUG 16-P	KM200IA16
	CN901	PLUG 6-P	KM250MA6
	CN903	PLUG 6-P	KM250MA6B
	CN902	PLUG 6-P	KM250MA6R
	903	SCREW	BBZ30P080FCU
	901	SCREW	PMB30P160FZK
	902	SCREW	PMZ30P100FZK

L DEFLECTION SERVICE ASSY

• H. DEF BLOCK

SEMICONDUCTORS

Mark	No.	Description	Part No.
	IC303		NJM4558DXP
⚠	IC301		TA8638N
	Q315,Q316		2SA1145
	Q302,Q306,Q311,Q313,Q319		2SA933S
	Q321,Q322,Q326		2SA933S
	Q301,Q304,Q305,Q307,Q310		2SC1740S
	Q312,Q318,Q320,Q327		2SC1740S
	Q314,Q317		2SC2705
	Q308		2SC3332
⚠	Q309		2SC5043
	Q324		2SC5197
	D302,D304,D345		10DF2
	D305-D312,D314,D322		1SS133
	D321		BR3371XJ30A
	D328,D329,D343		ERA22-02
	D303		ERB93-02L3
⚠	D316,D317		ERD07-15
	D315,D327		RD12ESB
	D344		RD5.1ESB1
	D313		S5688G

COILS AND TRANSFORMERS

Mark	No.	Description	Part No.
	L307,L308		ATH-059
⚠	T302		ATK1144
⚠	T301		ATK1145
	L303-L306,L309		ATX1008
	L310		LTA152J

CAPACITORS

Mark	No.	Description	Part No.
⚠	C325	(100pF/2kV)	ACG-032
⚠	C324	(1µF/160V)	ACH-372
	C331,C335,C358		CCCSL101J50
	C336		CCCSL101K2H
	C326,C342		CCCSL470J50
	C304		CEANP2R2M50
	C334		CEHAQ1R0M2C
	C353		CEHAT100M2D
	C308,C337,C349,C355		CEHAT101M25
	C330		CEHAT101M50
	C359		CEHAT102M35
	C357		CEHAT1R0M50
	C328		CEHAT221M25
	C332		CEHAT330M35
	C313		CEHAT331M16
	C351,C352,C360,C361		CEHAT471M16
	C309,C341,C343		CEHAT4R7M50
⚠	C320		CFPAB332H3C
⚠	C321		CFPAB472H3C
⚠	C319,C322		CFPMAB334J2G
	C323		CFTLA105J50
	C312		CFTLA224J50
	C329		CFTLA683J50
	C311		CKCYB102K50
	C303		CKCYB103K50
	C327		CKCYB561K50
	C315-C318,C333,C338-C340		CKCYF103Z50
	C350,C356		CKCYF103Z50
	C307		CQMA471J50
	C302		CQMA561J50
	C305		CQMA682J50
	C301		CQPA102J2A
	C314		CQPA333J2A
	C306		CQPA821J2A

RESISTORS

Mark	No.	Description	Part No.
	R365		RD1/2PM153J
	R366		RD1/2PM223J
⚠	R395		RD1/4LMF100J
	R328		RN1/4PC1002F
	R419		RN1/4PC1202F
	R318		RN1/4PC1203F
	R302		RN1/4PC1303F
	R372		RN1/4PC1503F
	R327		RN1/4PC2702F
	R373,R421		RN1/4PC6801F
	R301		RN1/4PC8201F
	R338		RS1MMF100J
	R398		RS1MMF1R5J
	R336,R337,R339		RS2MMF1R0J
	R333		RS2MMF222J
	R358,R359		RS2MMF2R2J
	R355		RS2MMF390J
⚠	R392		RT5PZ561K
	VR301		VRTHS6VS222
	VR302		VRTHS6VS473
	Other Resistors		RD1/4PU□□□J

OTHERS

Mark	No.	Description	Part No.
⚠	CN301-CN303	PLUG3-P	AKM1055
	CN304	PLUG 12-P	KM250MA12

Mark	No.	Description	Part No.
	CN305	PLUG 13-P	KM250MA13
	CN309	PLUG 4-P	KM250MA4
	CN307	PLUG 5-P	KM250MA5
	CN308	PLUG 6-P	KM250MA6
	CN306	PLUG 6-P	KM250MA6R
	301	ISOLATION SHEET	AEB1358
	305	SCREW	BBZ30P080FCU
	304	SCREW	PMB30P160FZK

• HV BLOCK

SEMICONDUCTORS

Mark	No.	Description	Part No.
	IC601		NJM4558DXP
	Q604,Q605		2SA1145
	Q607,Q608		2SA933S
×	Q751		2SA933S
	Q602,Q614,Q752		2SC1740S
	Q603,Q606		2SC2705
	Q601		2SC3332
	Q609		2SC3468
⚠	Q612		2SC5143
	Q613		2SC5197
	Q610		2SD1276A
⚠	Q753,Q754		2SC4686A
	D601		10DF2
	D603,D608,D609,D611		1SS133
	D614,D615,D621,D625		1SS133
⚠	D622,D623		2NU41
	D610		ERA22-02
	D613		ERB06-15
	D602		ERB93-02L3
	D604-D607		RD12ESB
	D624		RD5.1ESB1
	D612		RD7.5ESB2
	D627		RD9.1ESB1
	D751-D757		1SS133

COILS AND FILTERS

Mark	No.	Description	Part No.
⚠×	T601		ATK1136
⚠	T602		ATK1144
	L601-L603		ATX1008
	L605		LTA152J
	SG751		AEX1024

CAPACITORS

Mark	No.	Description	Part No.
	C636 (1µF/160V)		ACH-372
⚠	C604 (10µF/160V)		ACH1117
	C606		CCCSL101J50
	C612		CCCSL101K2H
	C616		CEHAT100M2D
	C619,C621		CEHAT100M50
	C608		CEHAT101M25
	C605		CEHAT101M50
	C633		CEHAT1R0M50
	C620		CEHAT220M2D
	C635		CEHAT220M50
	C618		CEHAT220M63
	C624,C625		CEHAT221M25
	C613		CEHAT330M35
	C623		CEHAT470M25
	C634		CEHAT4R7M2E
⚠	C601,C602		CFPAB182H3C
	C603		CFTLA105J50

Mark	No.	Description	Part No.
	C607		CKCYB222K50
	C628		CKCYB332K2H
	C611		CKCYB561K50
	C627		CKCYB682K50
	C637		CKCYE103P2H
	C615		CKCYE222P2H
	C609,C610,C614,C617,C622		CKCYF103Z50
	C626,C629		CKCYF103Z50
	C754,C755 (4700pF/2kV)		ACG1028
	C752		CEHAT100M50
	C751		CEHAT470M25
	C753		CKCYF103Z50

RESISTORS

Mark	No.	Description	Part No.
	R661 (27Ω)		ACN1136
	R631		RD1/2PM122J
	R648		RD1/2PM154J
	R618,R649		RD1/2PM223J
	R628		RD1/2PM333J
	R617		RD1/2PM563J
⚠	R634		RD1/4LMF100J
	R635		RD1/4MUF100J
⚠	R629,R630		RN1/2PC3902F
	R646,R650		RN1/4PC1003F
×	R645		RN1/4PC1003F
×	R639		RN1/4PC1202F
×	R640		RN1/4PC6801F
×	R644		RN1/4PC7502F
	R647		RN1/4PC8201F
	R604		RS1MMF100
	R658,R659		RS2MMF101J
	R602,R603		RS2MMF1R0J
	R621,R622		RS2MMF1R8J
	R601		RS2MMF222J
	R660		RS2MMFR56J
×	VR601		VRTHS6VS102
	VR603		VRTHS6VS223
×	VR602		VRTHS6VS473
	R769		ACN1011
	R770,R772-R776		RD1/2PM114J
	R771,R777-R781		RD1/2PM184J
	R757-R768		RD1/2PM224J
	R753		RN1/4PC2202F
	R752		RN1/4PC3302F
	R783		RN1/4PC3601F
	R755		RN1/4PC4701F
	R754		RN1/4PC56R0F
	R782		RN1/4PC7501F
×	R637,R638		RD1/4PU102J
×	R642		RD1/4PU821J
×	R643		RD1/4PU822J
	Other Resistors		RD1/4PU□□□J

OTHERS

Mark	No.	Description	Part No.
	J602	H.V. RETURN WIRE	ADX2486
	J601	1P LEAD WIRE	ADX2492
	J603	HV CABLE (400)	ADY1043
	CN751	PLUG 3-P	AKM1055
	601	ISOLATION SHEET	AEB1358
	602	NYLON BINDER	AEC-093
	607	SCREW	BBZ30P080FCU
	605	SCREW	PMB30P160FZK

Mark	No.	Description	Part No.
	604,606	SCREW	PMZ30P100FZK
	608	SCREW	VPZ40P120FMC
	752	SCREW	PMZ30P100FZK

• VM BLOCK

SEMICONDUCTORS

Mark	No.	Description	Part No.
	Q804,Q806		2SA1145
	Q808		2SA1837
	Q801		2SA933S
	Q802		2SC1740S
	Q803,Q805,Q807		2SC2705
	Q809		2SC4793
	D801,D802		MTZJ39
	D803-D806		S5688G

CAPACITORS

Mark	No.	Description	Part No.
	C802		CCCSL101J50
	C815		CCCSL221J50
	C806,C807		CEAT101M25
	C817		CEAT470M50
	C809,C818		CEHAT220M2D
	C810		CEHAT3R3M2C
	C814,C819		CKCYE103P2H
	C801,C803,C808		CKCYF103Z50
	C804,C805,C816		CKCYF473Z50
	C813		CQMA104K2E
	C811,C812		CQMA472K2E

RESISTORS

Mark	No.	Description	Part No.
	R826		RD1/2MMF100J
	R815		RD1/2MMF332J
	R813,R814		RD1/2PM270J
	R801		RD1/2PM272J
	R823,R824		RD1/2PM2R2J
	R827,R828		RD1/4MUF560J
	R809,R810		RS1MMF472J
	R819-R821		RS2MMF271J
	R822,R825,R831		RS3LMF471J
	Other Resistors		RD1/4PU□□□J

OTHERS

Mark	No.	Description	Part No.
	802	SCREW	PMZ30P100FZK
	CN801	PLUG 9-P	KM250MA9

M R CRT DRIVE ASSY

SEMICONDUCTORS

Mark	No.	Description	Part No.
	IC5101		TDA6120QN2
	Q5101		2SC1740S
	D5108		MTZJ3.9B
	D5107		MTZJ5.6A
	D5101-D5106		S5688G

COILS AND FILTERS

Mark	No.	Description	Part No.
	SG5101,SG5102		AEX1024
	L5102		LAU2R2J
	L5101		LAU3R3J
	L5103		LTA562J

CAPACITORS

Mark	No.	Description	Part No.
	C5108	(1000pF)	ACG1001
	C5107,C5114	(47µF/250V)	ACH1343
	C5103		CCCSL120J50
	C5101		CCCSL390J50
	C5102		CCCSL7R0D50
	C5110		CEAT101M25
	C5109		CEAT472M16
	C5111,C5113		CKCYE103P2H
	C5104,C5106		CKCYF103Z50

RESISTORS

Mark	No.	Description	Part No.
	R5115	(47Ω)	ACN1129
	R5116	(220Ω)	ACN1131
	R5118	(470Ω)	ACN1133
	R5117		RD1/2LMF100J
	R5101		RS1MMF6R8J
	R5112-R5114		RS3LMF822J
	VR5101		VRTHS6VS222
	Other Resistors		RD1/4PU□□□J

OTHERS

Mark	No.	Description	Part No.
	CN5104	CRT SOCKET	AKG1006
	5107,5108	SCREW	BBZ30P080FCU
	5103-5106	SCREW	BPZ30P100FZK
	CN5105	PLUG 3-P	KM250MA3
	CN5106	PLUG 3-P	KM250MA3R
	CN5102	PLUG 5-P	KM250MA5B
	CN5101	PLUG 5-P	KM250MA5R
	5101,5102	SCREW	PMB30P160FZK

N G CRT DRIVE ASSY

SEMICONDUCTORS

Mark	No.	Description	Part No.
	IC5151		TDA6120QN2
	Q5151		2SC1740S
	D5158		MTZJ3.9B
	D5157		MTZJ5.6A
	D5151-D5156		S5688G

COILS AND FILTERS

Mark	No.	Description	Part No.
	SG5151,SG5152		AEX1024
	L5152		LAU2R2J
	L5151		LAU3R3J
	L5153		LTA562J

CAPACITORS

Mark	No.	Description	Part No.
	C5158	(1000pF)	ACG1001
	C5157,C5164	(47µF/250V)	ACH1343
	C5153		CCCSL120J50
	C5151		CCCSL560J50
	C5152		CCCSL7R0D50
	C5160		CEAT101M25
	C5159		CEAT472M16
	C5161,C5163		CKCYE103P2H
	C5154,C5156,C5165		CKCYF103Z50

RESISTORS

Mark	No.	Description	Part No.
	R5164	(47Ω)	ACN1129
	R5165	(220Ω)	ACN1131
	R5168	(470Ω)	ACN1133
	R5167		RD1/2LMF100J
	R5151		RS1MMF6R8J

Mark	No.	Description	Part No.
	R5161-R5163		RS3LMF822J
	VR5151		VRTHS6VS222
	Other Resistors		RD1/4PU☐☐☐J

OTHERS

	J5152	LEAD WITH HOUSING	ADX2493
	CN5154	CRT SOCKET	AKG1006
	5157,5158	SCREW	BBZ30P080FCU
	5153-5156	SCREW	BPZ30P100FZK
	CN5156	PLUG 3-P	KM250MA3
	CN5157	PLUG 3-P	KM250MA3B
	CN5151	PLUG 5-P	KM250MA5
	5151,5152	SCREW	PMB30P160FZK

O B CRT DRIVE ASSY

SEMICONDUCTORS

	IC5201		TDA6120QN2
	Q5201		2SC1740S
	D5208		MTZJ3.9B
	D5207		MTZJ5.6A
	D5201-D5206		S5688G

COILS AND FILTERS

	SG5201,SG5202		AEX1024
	L5202		LAU1R0J
	L5201		LAU4R7J
	L5203		LTA562J

CAPACITORS

	C5208 (1000pF)		ACG1001
	C5207,C5214 (47µF/250V)		ACH1343
	C5201-C5203		CCCSL220J50
	C5210		CEAT101M25
	C5209		CEAT472M16
	C5211,C5213		CKCYE103P2H
	C5204,C5206		CKCYF103Z50

RESISTORS

	R5214 (47Ω)		ACN1129
	R5215 (220Ω)		ACN1131
	R5218 (470Ω)		ACN1133
	R5217		RD1/2LMF100J
	R5201		RS1MMF6R8J
	R5211-R5213		RS3LMF822J
	VR5201		VRTHS6VS222
	Other Resistors		RD1/4PU☐☐☐J

OTHERS

	J5203	LEAD WITH HOUSING	ADX2493
	CN5204	CRT SOCKET	AKG1006
	5207,5208	SCREW	BBZ30P080FCU
	5203-5206	SCREW	BPZ30P100FZK
	CN5206	PLUG 3-P	KM250MA3
	CN5207	PLUG 3-P	KM250MA3B
	CN5201	PLUG 5-P	KM250MA5B
	5201,5202	SCREW	PMB30P160FZK

Mark	No.	Description	Part No.

P POWER SUPPLY ASSY

SEMICONDUCTORS

⚠	IC101		AN8029
	IC102		ON3171
	IC103		PC817CD
	IC204		MC33167TV
	IC203		NJM79M05FA
	IC201,IC202		PQ30RV11(A)
	IC901		MIP0253SP
	IC902,IC903		ON3171
⚠	Q101		2SK1544
	Q206,Q207,Q210		2SA933S
	Q205,Q901-Q905,Q907		2SC1740S
	Q202		2SC2705
	Q201		2SD1276A
	Q906		2SA933S
	D102		10DF2
	D101		D15XB60H
	D105,D110		MA723
	D103		MTZJ24
	D104		MTZJ27B
	D111		RD12ESB
	D106-D109		RD5.1ESB
	D206,D207		10DF2
	D210-D213,D215-D219		1SS133
	D223,D224,D226,D227		1SS133
	D229,D230		1SS133
	D908,D910-D914		1SS133
	D201		D3L60
	D228		HZS4BLL
	D209		HZS6A1L
	D222		HZS6B1L
	D214		HZS6C2L
	D208		SF5SC3L
	D204		YG802C06R
	D202,D203,D205		YG911S2R
	D915		BR3371XJ30A
	D906,D907		D1NS4
	D905		ERB06-15
	D909		HZS2BLL
	D901		S1WB(A)60B

RELAYS

	RY101,RY102		ASR1049

COILS AND TRANSFORMERS

⚠	L103		ATF1183
	L101,L102		ATX1021
	L902		ATX1008
	L901		LAU2R2J
	L218		ATH-059
	L215,L216		ATH1046
	L213		ATH1102
	L219-L222		ATH1108
⚠	T101		ATK1135
⚠	T901		ATK1133

CAPACITORS

	C113,C114 (4700pF/250V)		ACE1105
⚠	C115,C121 (0.22µF/250V)		ACE1125
	C116,C117 (0.01µF/250V)		ACG-501

Mark	No.	Description	Part No.
	C125	(3300pF/2kV))	ACG1008
	C111,C112,C126	(4700pF/2kV)	ACG1028
	C101,C102	(820µF/200V)	ACH1148
	C107,C222,C229		CEHAT101M25
	C108		CEHAT1R0M50
	C110		CEHAT220M50
	C103		CKCYB561K50
	C109		CKCYF103Z50
	C104		CQMA182J50
	C106		CQMA473J50
	C105		CQMA822J50
	C242,C243	(4700pF/250V)	ACE1105
	C210	(100pF/2kV)	ACG-032
	C201	(560µF/160V)	ACH1146
	C205	(8200µF/25V)	ACH1304
	C215,C216		CCCSL101K2H
	C211-C214		CCCSL221K2H
	C209		CEHAT100M2A
	C208,C220,C234,C236,C241		CEHAT100M50
	C226		CEHAT102M16
	C231		CEHAT1R0M50
	C202		CEHAT222M50
	C245		CEHAT331M16
	C203,C204,C207		CEHAT332M35
	C235		CEHAT470M25
	C247		CEHAT472M10
	C218,C246		CFTLA104J50
	C251		CFTLA563J50
	C217		CKCYE103P2H
	C219,C223,C224,C227		CKCYF103Z50
	C228,C230,C237,C238		CKCYF103Z50
	C244		CKCYF473Z50
	C232		CQMA104J50
	C906	(0.01µF/250V)	ACE1138
	C905	(0.1µF/250V)	ACE1144
	C914,C915	(0.01µF/250V)	ACG-501
	C912		CEHAT100M50
	C909		CEHAT1R0M50
	C908		CEHAT331M10
	C907		CEHAT331M16
	C910,C911,C913		CEHAT470M25
	C901		CEHAT470M2D
	C902		CFTLA104J50
	C916		CQMA104J50

RESISTORS

Mark	No.	Description	Part No.
	R102,R901	(2.2Ω)	ACN1128
	R120,R123	(2.2MΩ,1/2W)	RCN1080
	R106		RD1/2MMF100J
	R112		RD1/4MUF681J
	R117		RS1MMF151J
	R104,R105		RS1MMF333J
	R103		RS1MMF473J
	R109-R111		RS2MMFR22J
	R121,R122		RT10PZ120K
	R101		RT5PZ1R8K
	R207		RN1/4PC1502F
	R216		RN1/4PC1503F
	R212,R213		RN1/4PC1603F
	R208		RN1/4PC1801F
	R209		RN1/4PC2701F
	R204		RN1/4PC2702F
	R205,R206		RN1/4PC3301F
	R214		RN1/4PC3901F
	R217		RN1/4PC6801F
	R210		RS2MMF223J
	R219,R249		RS2MMF2R2J
	R201		RS2MMF472J
	R246,R251		RS2MMF821J
	R252		RS3LMF4R7J
	R218,R247		RT10PZ100K
	R248		RT7PZ8R2K
	VR201		VRTHS6VS102
	R903		RD1/4MUF103J
	R906		RN1/4PC1501F
	R907		RN1/4PC1801F
	VR901		VRTHS6VS102
	Other Resistors		RD1/4PU□□□J

OTHERS

Mark	No.	Description	Part No.
⚠	FU101	FUSE (10A)	AEK1069
⚠	FU201	FUSE (4A)	REK1082
⚠	FU204	FUSE (5A)	REK1083
⚠	FU202,FU203	FUSE (6.3A)	REK1085
	8001	SPACER	AEB1243
	H101,H102	FUSE HOLDER	AKR1007
	H201-H208	FUSE HOLDER	AKR1003
	CN212	PLUG 3-P	KM250MA3
	CN901	PLUG 2-P	AKM1127
	CN101	PLUG 2-P	AKM1156
	CN205	PLUG 10-P	KM250MA10
	CN207	PLUG 12-P	KM250MA12
	CN206	PLUG 4-P	KM250MA4
	CN204	PLUG 6-P	KM250MA6
	8004	SCREW	BBZ30P080FCU
	8009	SCREW	BBZ30P080FZK
	8008	SCREW	ABZ30P100FMC
	8000	SCREW	PBZ30P100FMC
	8010	SCREW	PMB30P100FMC
	8003	SCREW	PMZ30P100FZK

Q POWER SW ASSY

SWITCH

Mark	No.	Description	Part No.
	S5081		ASG1084

OTHERS

Mark	No.	Description	Part No.
	CN5081	PLUG 2-P	AKM1127

R FRONT INPUT ASSY

SEMICONDUCTORS

Mark	No.	Description	Part No.
	Q5041,Q5042		2SC2712
	D5041,D5042		RD15MB

CAPACITORS

Mark	No.	Description	Part No.
	C5043,C5044		CEV1R0M50
	C5041		CEV470M16
	C5042,C5045		CKSRYF103Z50

Mark	No.	Description	Part No.
RESISTORS			
	R5043		RD1/4LMF101J
	R5052,R5053		RS1/10S221J
	Other Resistors		RS1/16S□□□J
OTHERS			
	CN5042	PIN JACK (3P)	AKB1261
	CN5041	PLUG 13-P	KM250MA13

S FRONT CONTROL ASSY

SWITCHES

	S5001-S5008		ASG1034

CAPACITORS

	C5003		CEV101M6R3
	C5004,C5005		CKSRYF103Z50

RESISTORS

	All Resistors		RS1/16S□□□J

OTHERS

	J5001	7P HOUSING WIRE	ADX2500
	CN5001	PLUG 8-P	KM250MA8

T LED DPO ASSY

SEMICONDUCTORS

	Q5001,Q5005		2SA1162
	Q5002		2SC2712
	D5002		1SS181
	D5007		AEL1177
	D5008		SLR-56PC(LMN)
	PC5001		P1241-09

CAPACITORS

	C5001		CEV100M16
	C5002		CEV330M25

RESISTORS

	R5001		RD1/2LMF820J
	R5006		RS1/10S332J
	R5004		RS1/2S821J
	VR5001		VRTS6VS473
	Other Resistors		RS1/16S□□□J

OTHERS

	5001	DPO HOLDER	AMR2294